

Frame

Table of Contents

Exploded View 14-2
Fairings 14-4
Lower Fairing Removal 14-4
Lower Fairing Installation Note 14-4
Upper Fairing Removal 14-4
Fender 14-4
Rear Fender Rear Section Removal 14-4
Rear Fender Front Section Removal 14-4
Seat Cover 14-5
Seat Cover Installation 14-5

Exploded View

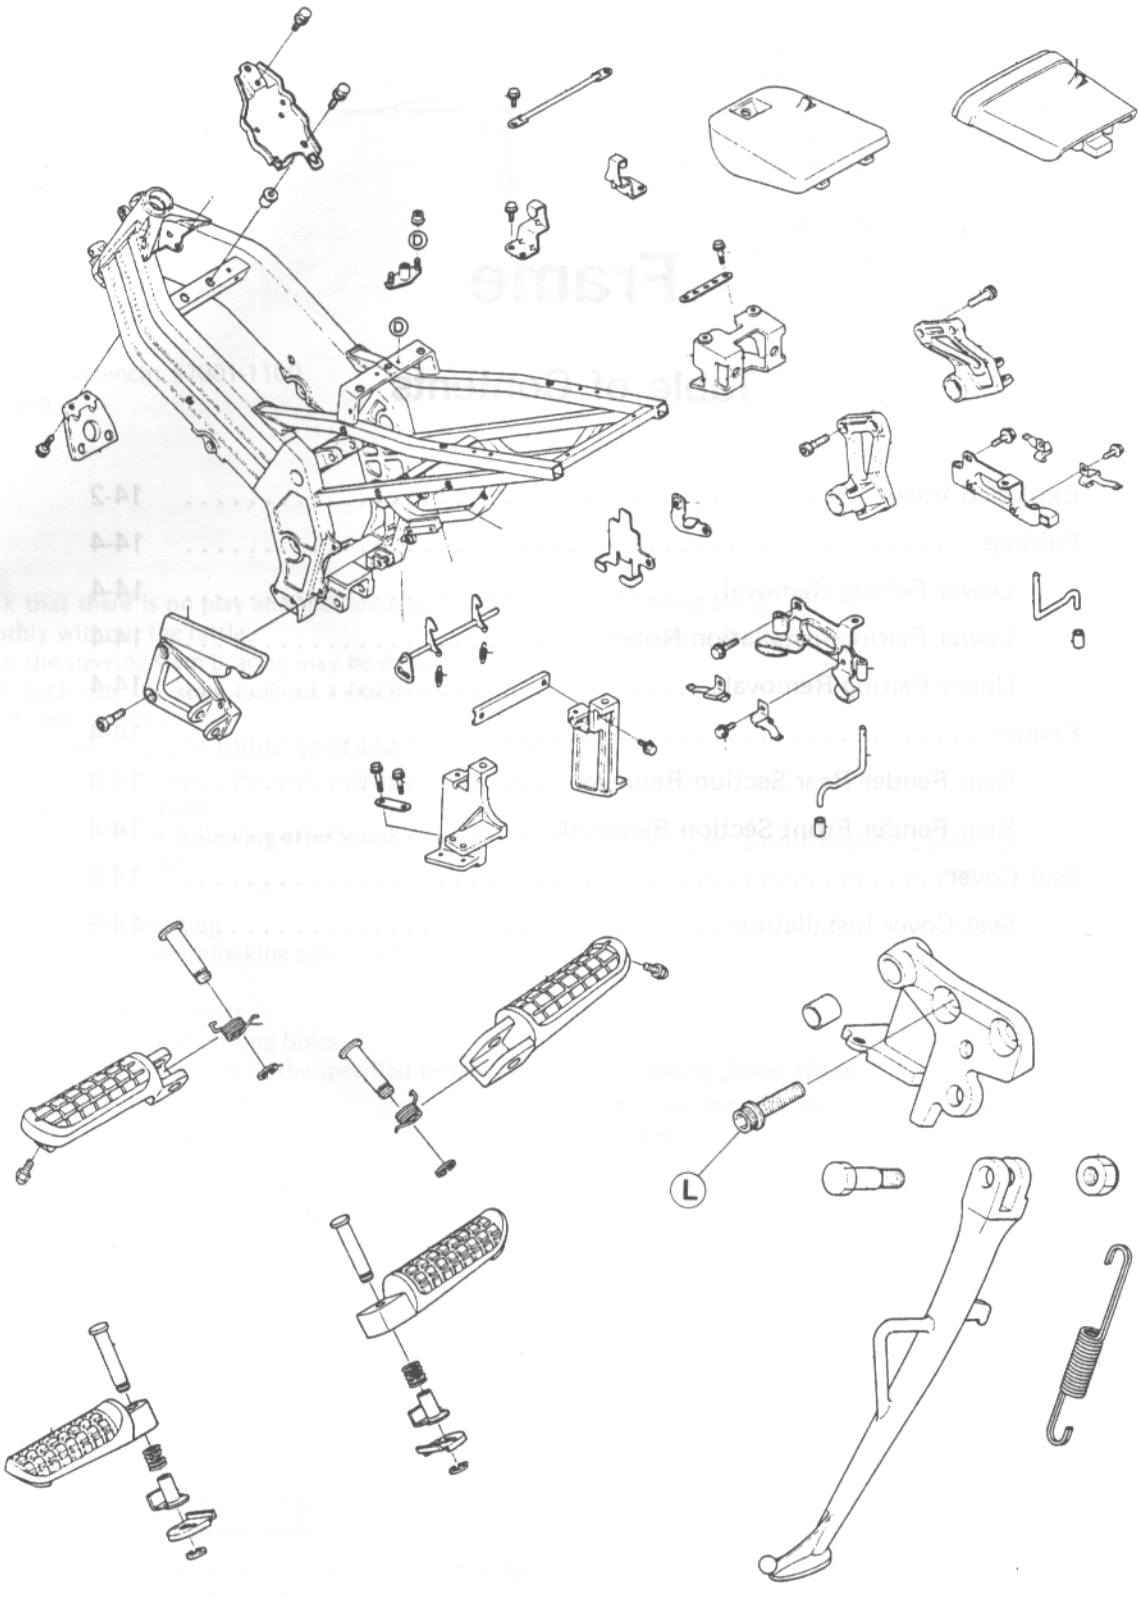

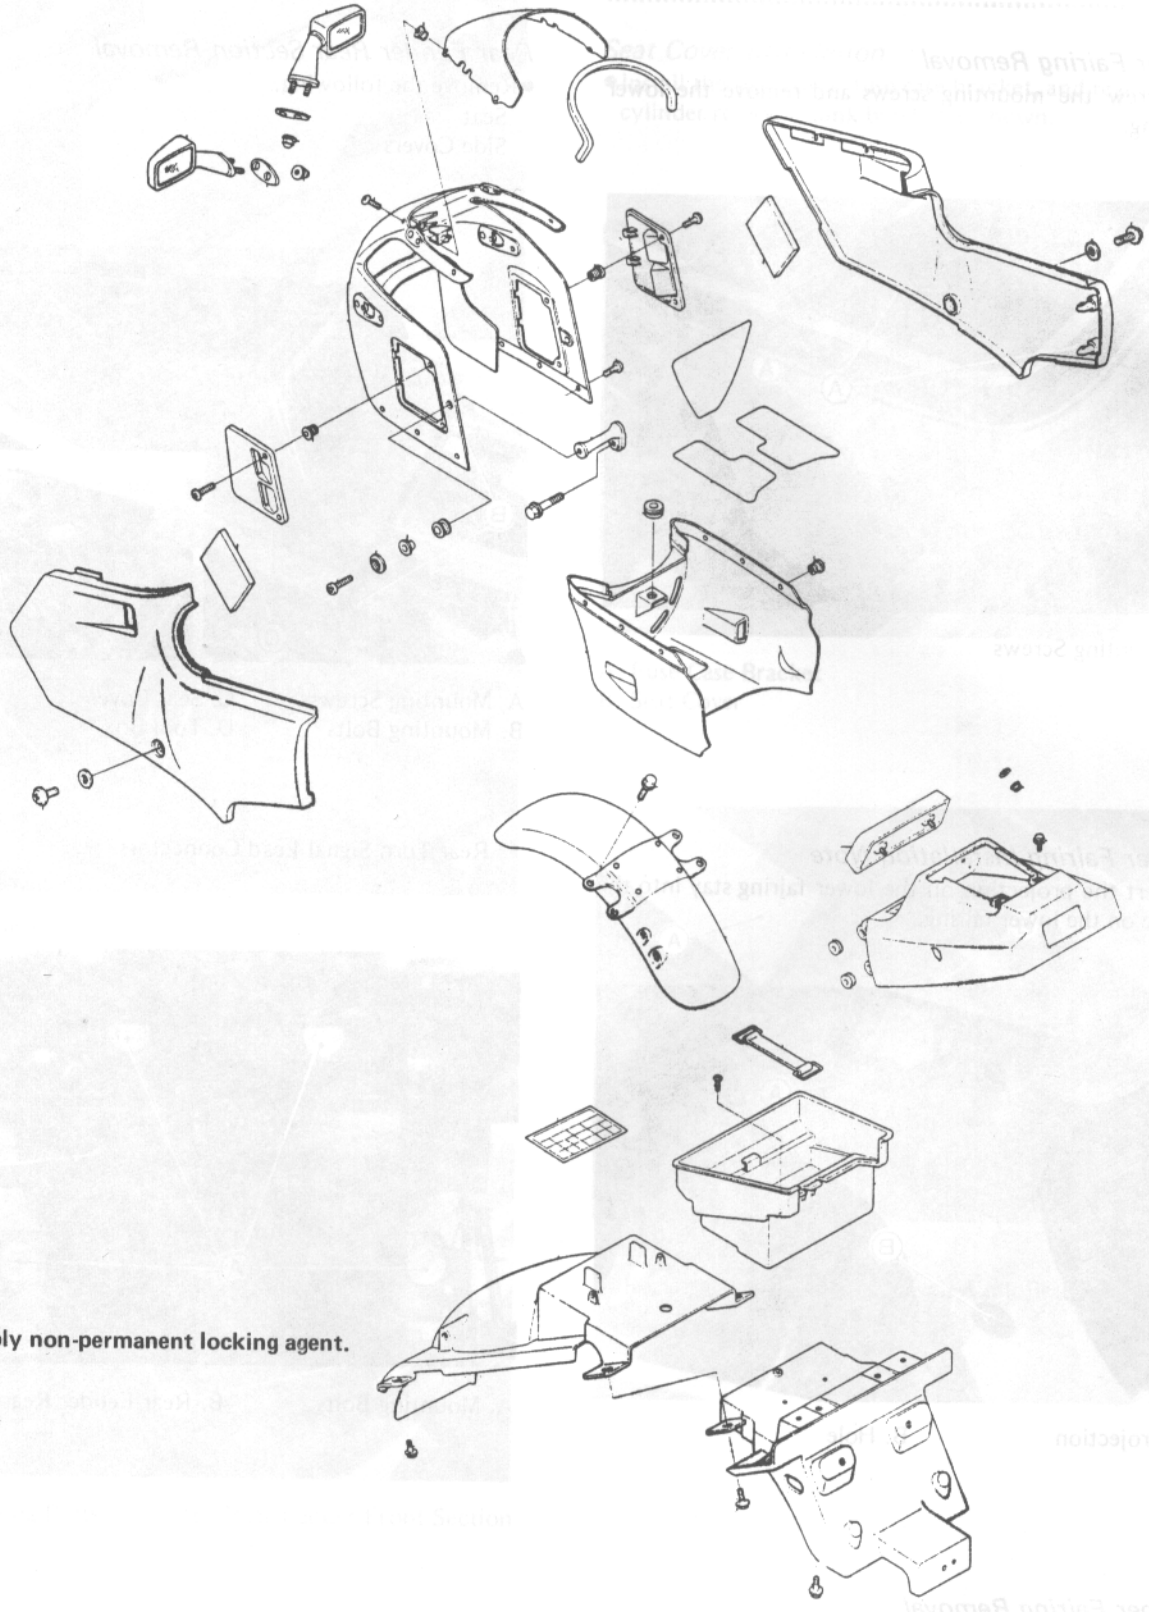


L : Apply non-permanent locking agent.

Fairings

Lower Fairing Removal


- Unscrew the mounting screws and remove the lower fairing.

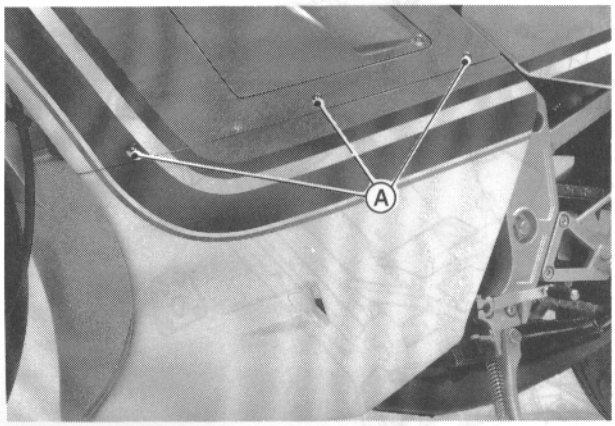

A. Mounting Screws

Lower Fairing Installation Note

- Insert the projection on the lower fairing stay into the hole on the lower fairing.

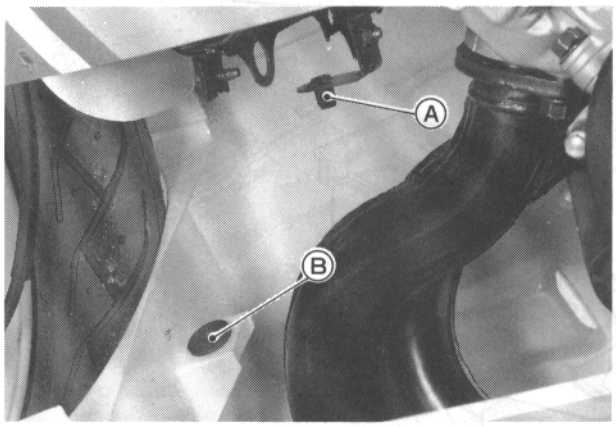

A. Projection B. Hole


Upper Fairing Removal

- Remove the following.
  - Lower Fairing
  - Rear View Mirrors
- Unscrew the mounting bolts and screws, and remove the upper fairing.

Fender


Rear Fender Rear Section Removal

- Remove the following.
  - Seat
  - Side Covers

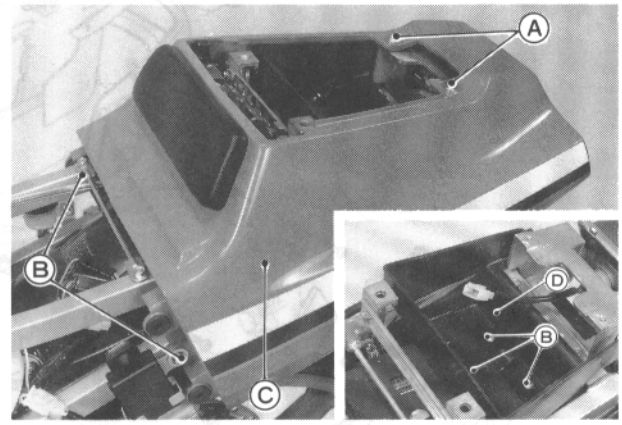

A. Mounting Screws C. Seat Cover
B. Mounting Bolts D. Tool Box


Rear Turn Signal Lead Connectors

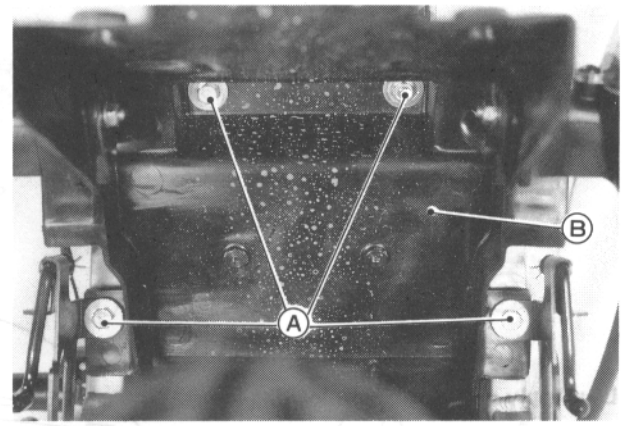


A. Mounting Bolts B. Rear Fender Rear Section

Rear Fender Front Section Removal


- Remove the rear fender rear section.
- Remove the following.

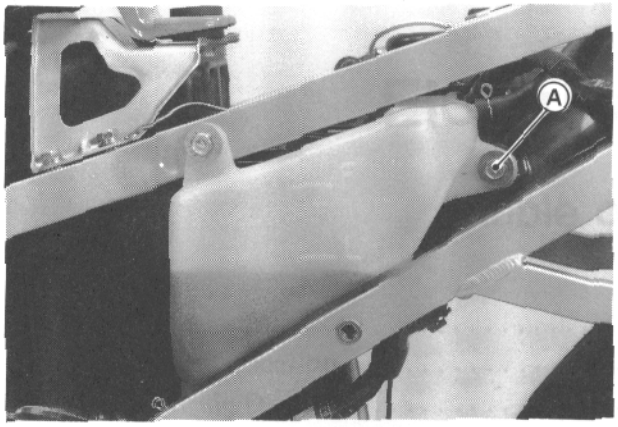

A. Coolant Reservoir Tank Mounting Bolt (Rear)

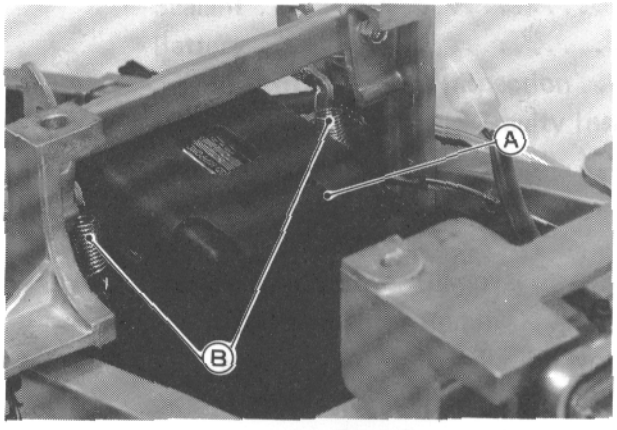

A. CDI Unit
B. Seat Lock Return Spring

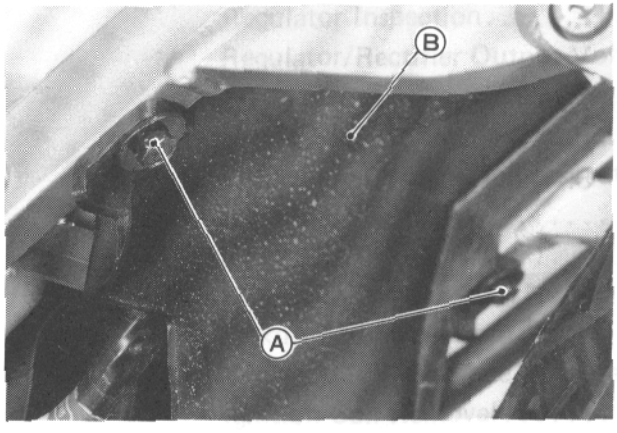


A. Mounting Bolts B. Rear Fender Front Section


Seat Cover

Seat Cover Installation

- Install the seat cover, fuse case bracket, and rear master cylinder reservoir tank bracket as shown.

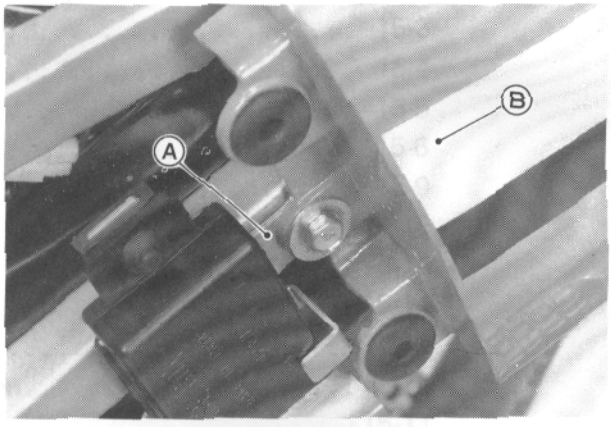

A. Fuse Case Bracket
B. Seat Cover

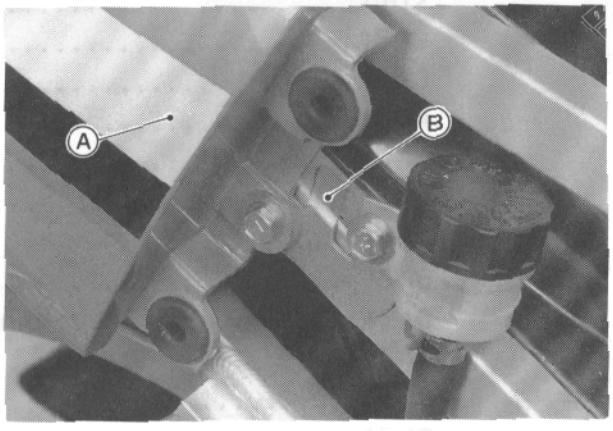

A. Seat Cover
B. Rear Master Cylinder Reservoir Tank Bracket