
Frame


Table of Contents


Exploded View	14-2
Seats	14-5
Front Seat Removal	14-5
Front Seat Installation	14-5
Rear Seat Removal	14-5
Rear Seat Installation	14-5
Side Covers	14-6
Side Cover Removal	14-6
Fairings	14-6
Upper Fairing Removal	14-6
Lower Fairing Removal	14-6

Exploded View

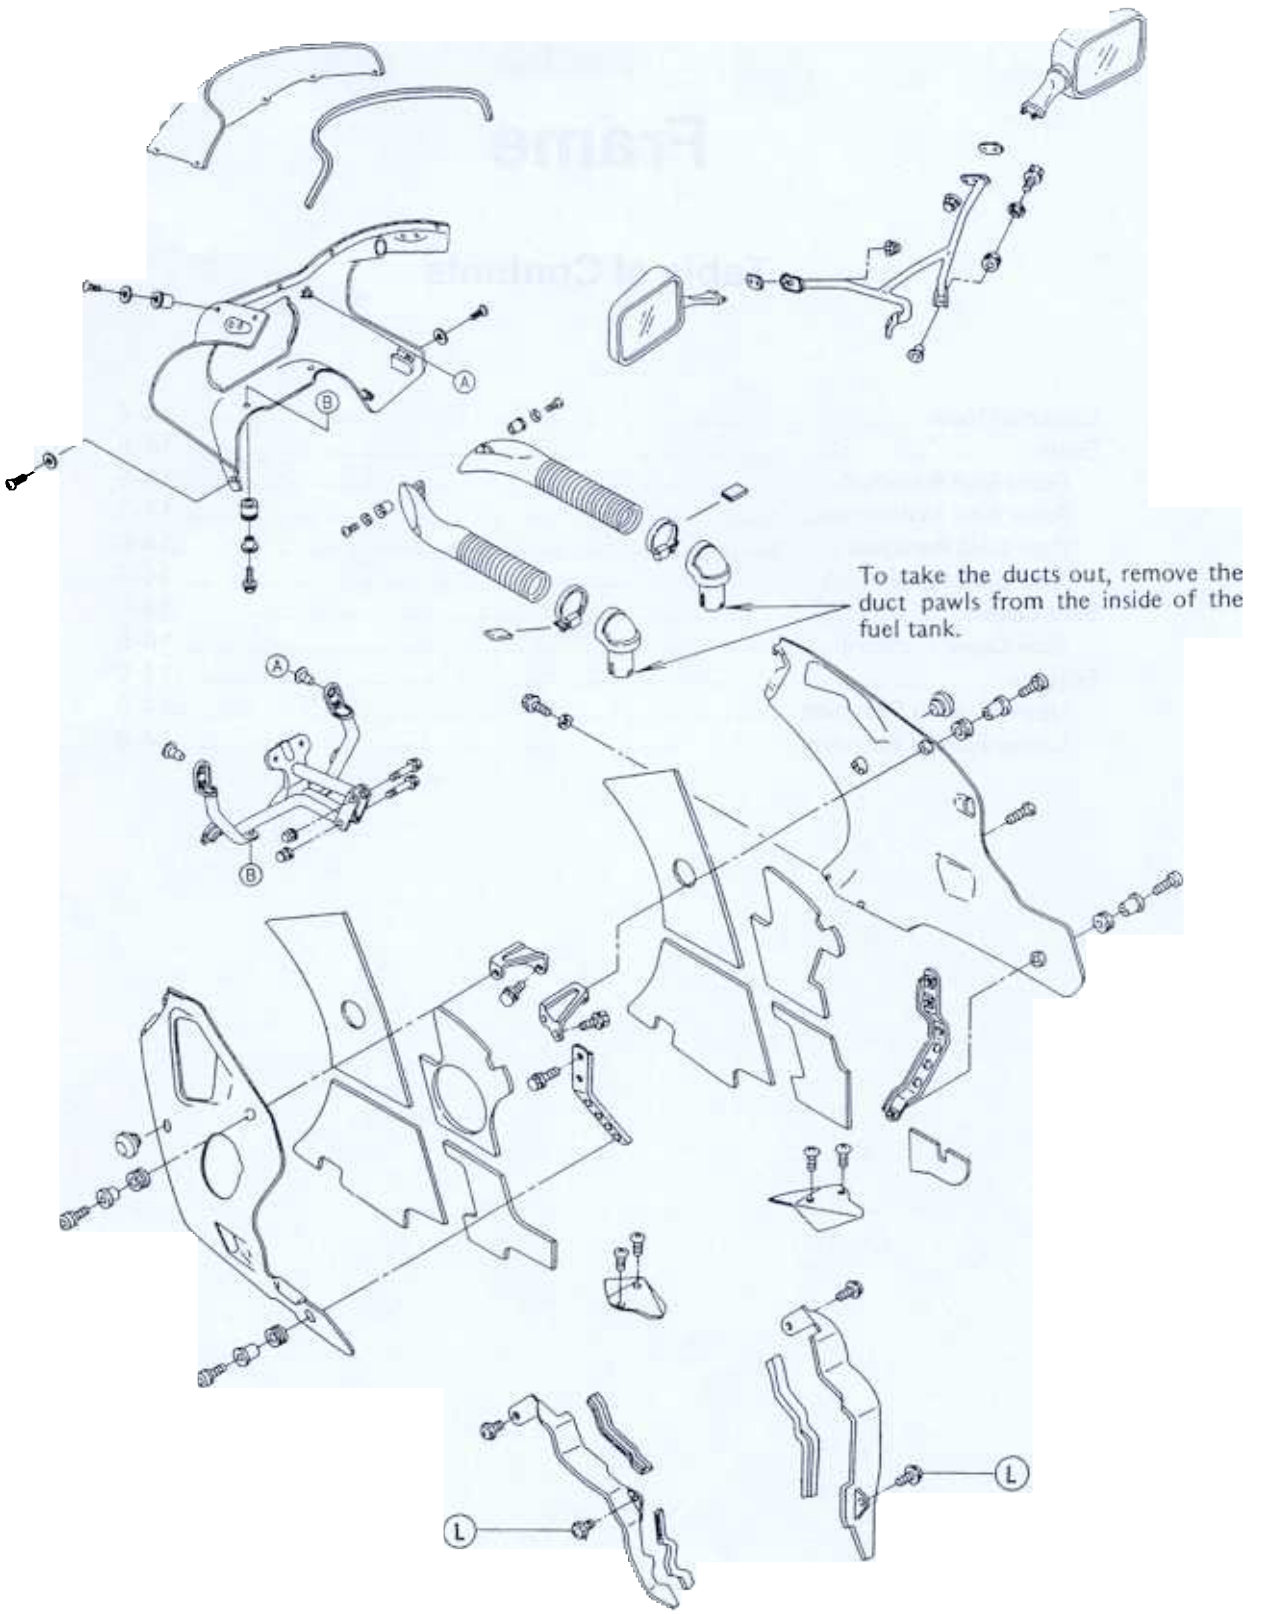

L Apply a non-permanent locking agent to the threads.

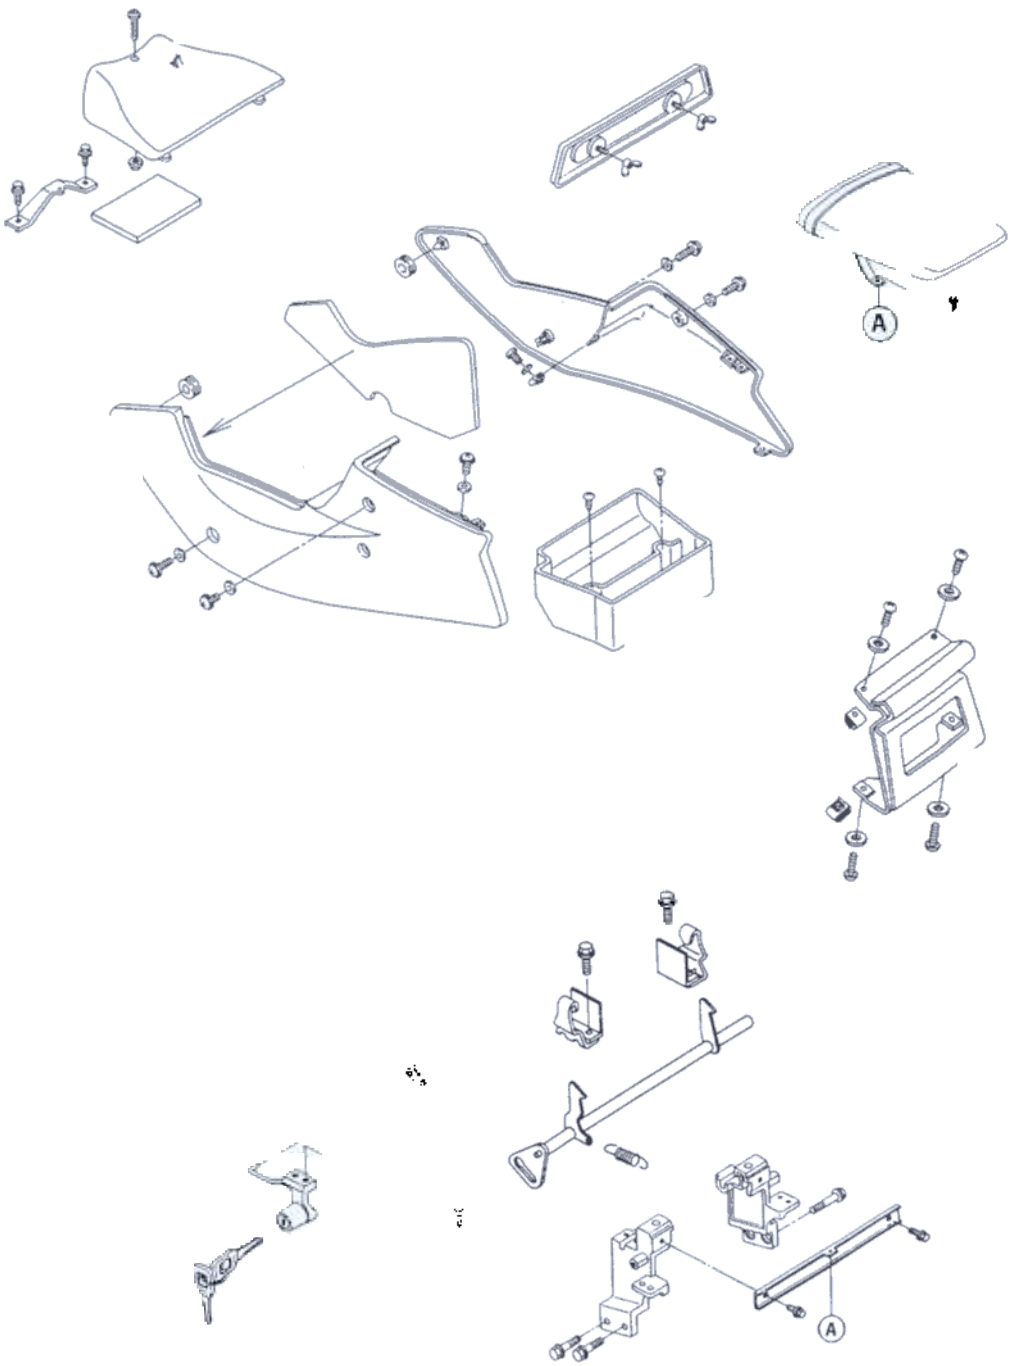
A
A

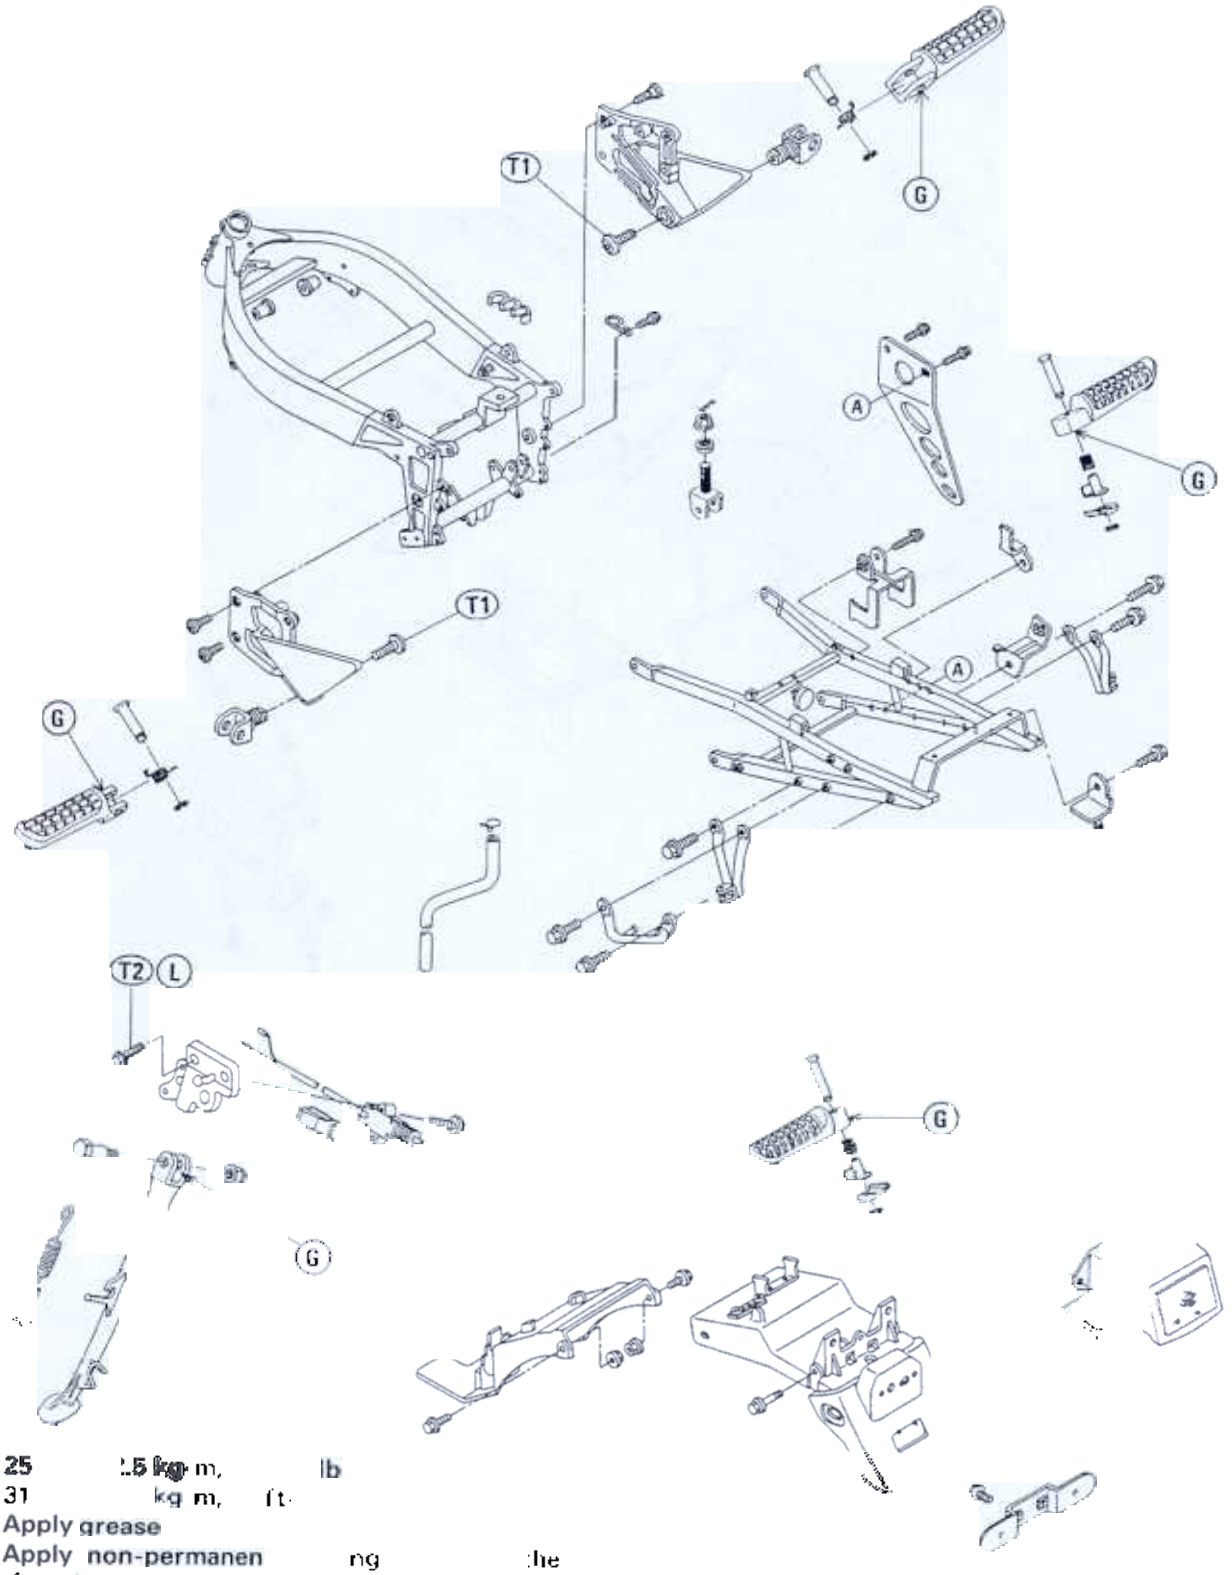


T1 25 2.5 kg m, lb
T2: 31 kg m, ft
Apply grease
Apply non-permanen ng the threads

Seats

Front Seat Removal


● Remove the front seat mounting bolt, move it upward and slide it forward.

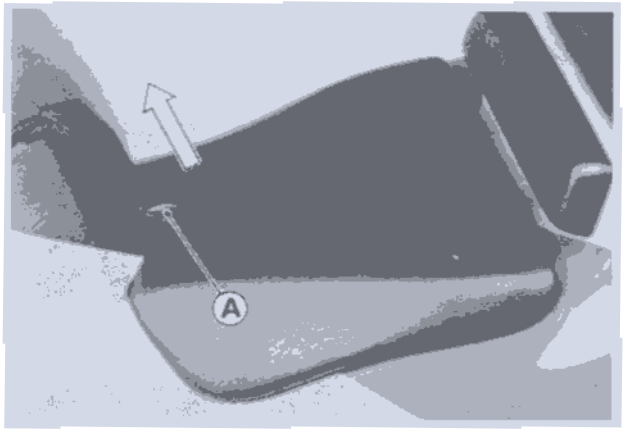

A. Mounting Bolt

Front Seat Installation


● Slip the hooks of the front seat under the brace on the frame.

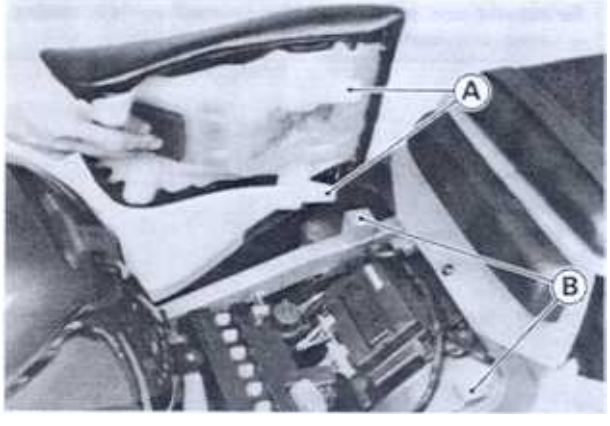

A. Fooks B. Brace

Rear Seat Removal


● Insert the ignition switch key into the seat lock.
● Turn the key to the right, and pull up on the front of the seat and pull it forward.

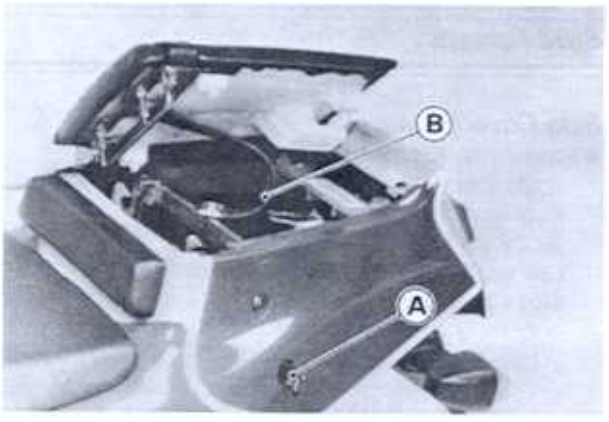

A. Seat Lock B. Seat Mounting Belt

Rear Seat Installation

● Install the seat mounting belt.
● Slip the hooks of the rear seat under the brace on the frame and put the stoppers of the seat into the holes in the frames.

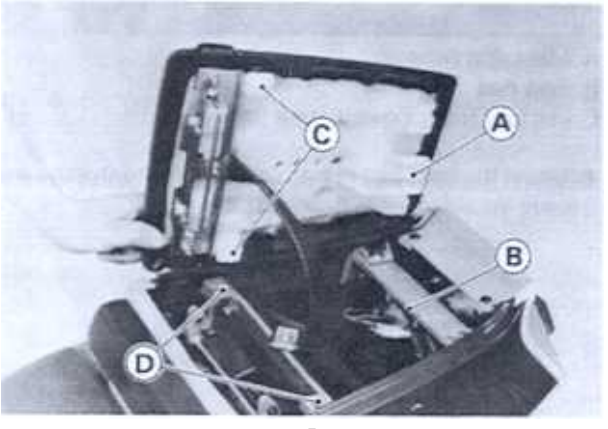


A. Hook C. Stoppers
B. Brace D. Holes

● Push down the front part of the seat until the lock clicks.

Side Covers

Side Cover Removal

● Remove the following.
Front Seat
Rear Seat
Seat Pad
Left and Right Cover Clamp Screws
Side Cover Mounting Screws

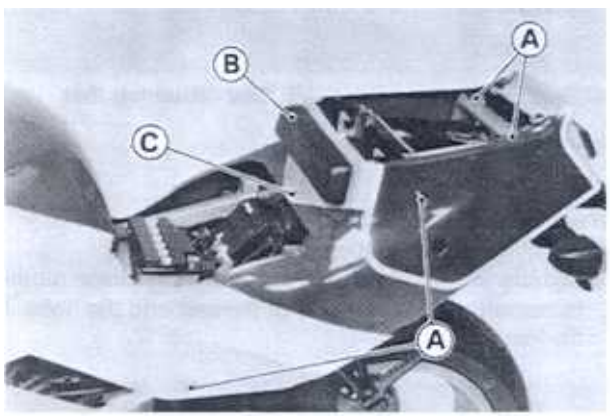


A. Mounting Screws
B. Seat Pad
C. Left and Right Cover Clamp Screws

● Spread the front part of side covers of the both sides and move the side covers backward.

Fairings

Upper Fairing Removal

● Remove the following in the order listed.
Rear View Mirror Nuts
Upper Fairing Mounting Bolts and Screws
Air Duct Clamps (Loosen)
Turn Signal Connectors

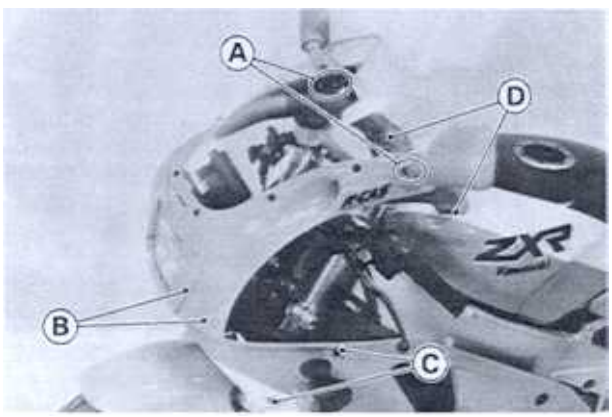


A. Rear View Mirror Nuts
B. Fairing Mounting Bolts
C. Fairing Mounting Screws
D. Air Duct Clamps

CAUTION

Be careful not to scratch the painted surface during removal or installation.

Lower Fairing Removal

● Remove the following.
Lower Fairing Mounting Bolts
Upper Fairing Mounting Screws

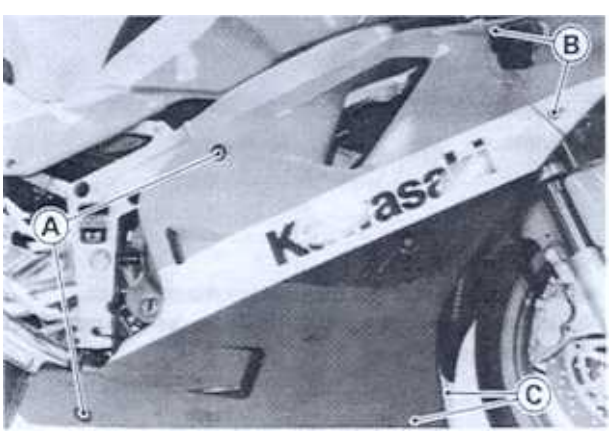

A. Mounting Bolts
B. Mounting Screws
C. Clamp Bolts (Do not remove.)

NOTE

○ *Remove the lower fairings as assembly.*