UNITED UM MOTORS
Move On.

PARTS CATALOGUE

MAGNETIC 125 C.C.

2005



INDEX










ENGINE



SECTION	FIG #
CYLINDER HEAD COVER	E01
CYLINDER	E02
RIGHT CRANKCASE COVER	E03
CRANKCASE	E04
LEFT CRANKCASE COVER	E05
CRANKSHAFT / PISTON / OIL PUMP	E06
VALVE	E07
CLUTCH	E08
GEAR SHIFT	E09
STARTER MOTOR ASSY	E10
ENGINE / CARBURETOR ASSY	E11

FRAME









SECTION	FIG #
FRAME BODY	A01
FRONT SHOCK ABSORBER	A02
STEERING STEM	A03
STEERING HANDLE BAR	A04
HEAD LIGHT	A05
COWLING ASSY	A06
METER ASSY	A07
FRONT LIGHT / FOG LIGHT	A08
SWITCH HANDLE BAR	A09
FRONT FENDER	A10
FRONT WHEEL / DISK BRAKE	A11
REAR BRAKE	A12
REAR WHEEL	A13
FUEL TANK	A14
CENTER & SIDE STAND	A15
PEDAL / REAR SHOCK ABSORBER	A16
REAR FORK / CHAIN CASE	A17
KICK STARTER / GEAR SHIFT	A18
ELECTRICAL	A19
BATTERY / AIR CLEANER	A20
SIDE COVER / MUFFLER	A21
REAR FENDER / LUGGAGE	A22
TAIL LIGHT	A23
SEAT / TAIL COVER	A24
PROTECTOR BAR / TOOL SET	A25










CONTENTS ENGINE GROUP

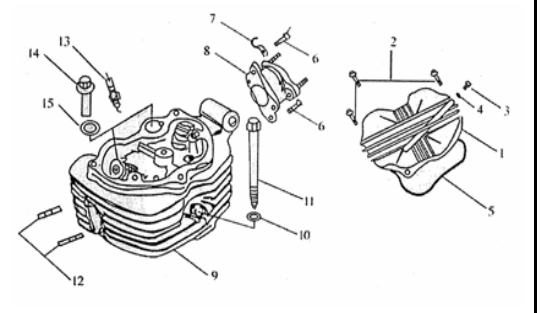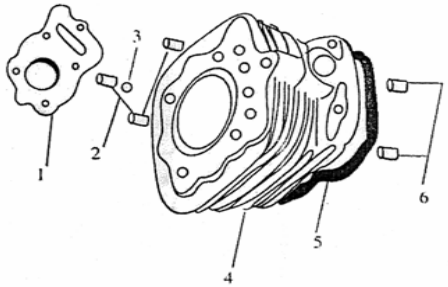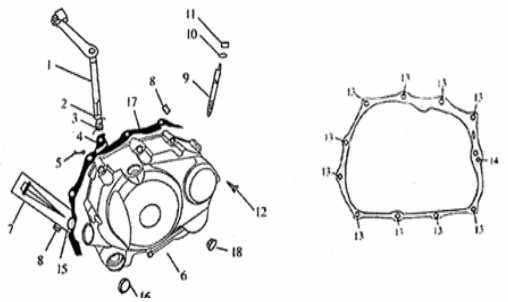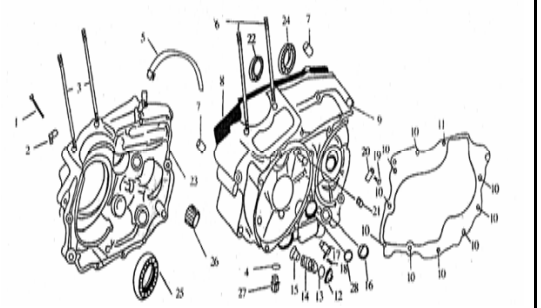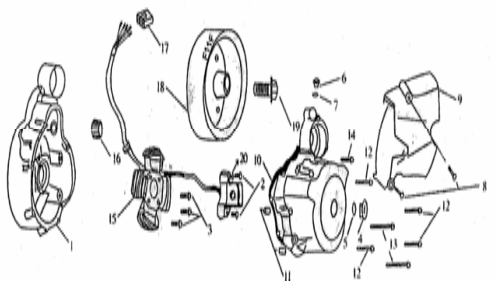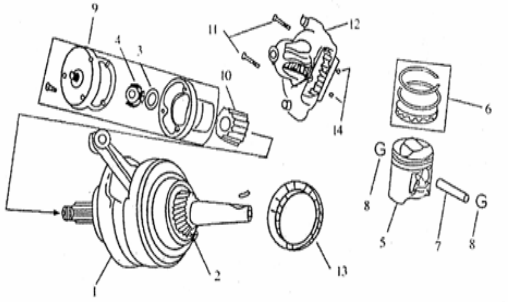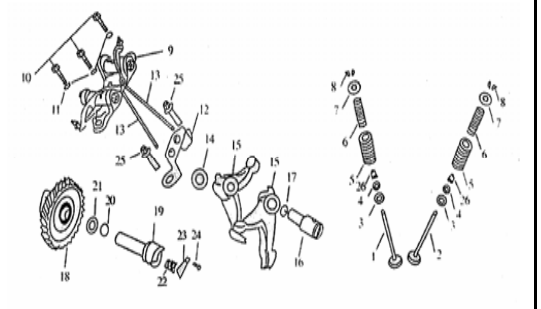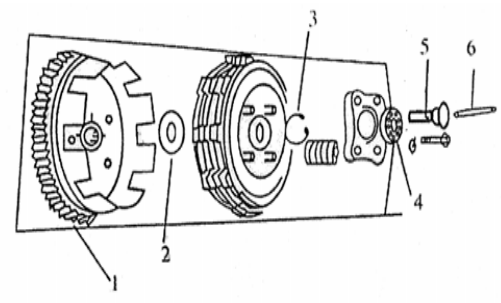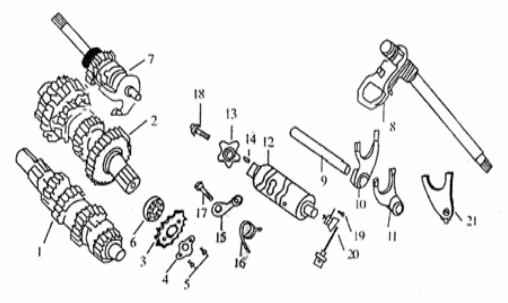E01 CYLINDER HEAD COVER	E02 CYLINDER	E03 RIGHT CRANKCASE COVER
		
E04 CRANKCASE	**E05 LEFT CRANKCASE COVER**	**E06 CRANKSHAFT / PISTON / OIL PUMP**
		
E07 VALVE	**E08 CLUTCH**	**E09 GEAR SHIFT**
		

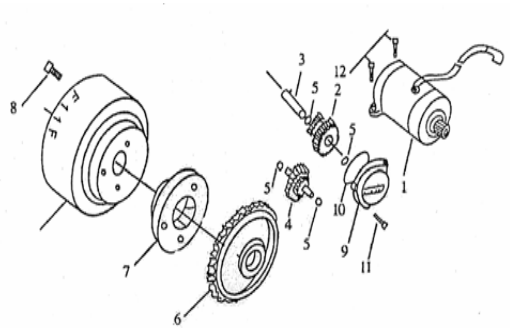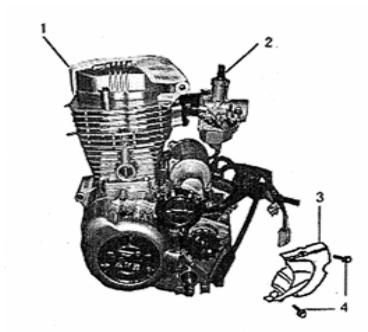
E10 STARTOR MOTOR ASSY	E11 ENGINE / CARBURETOR ASSY
	

CONTENTS FRAME GROUP

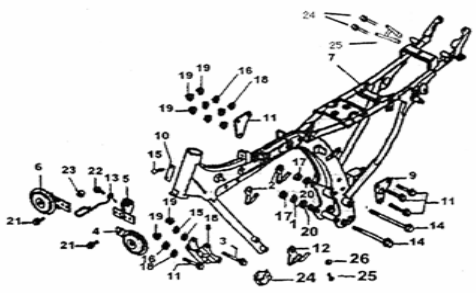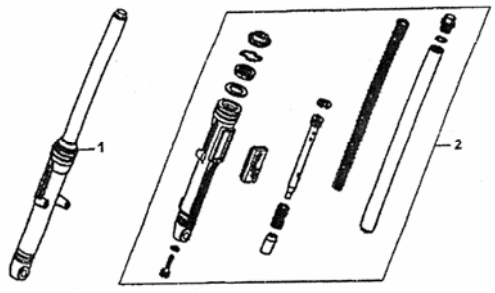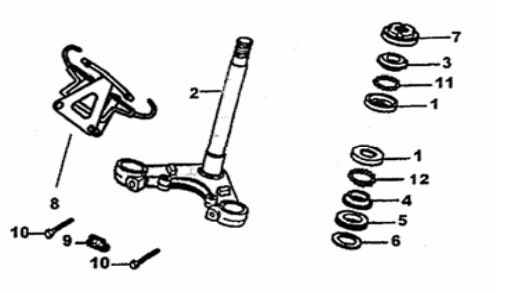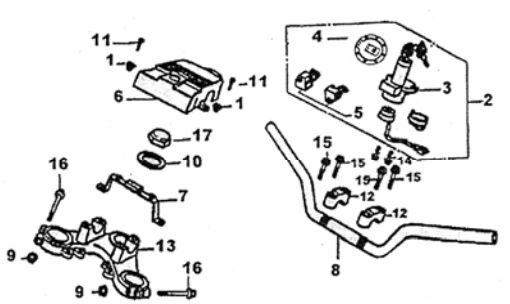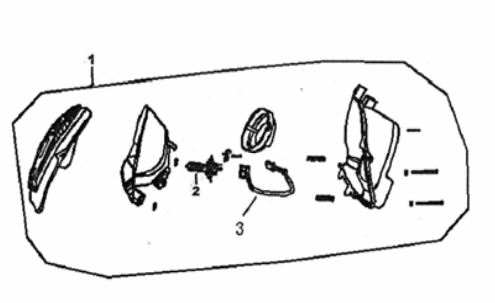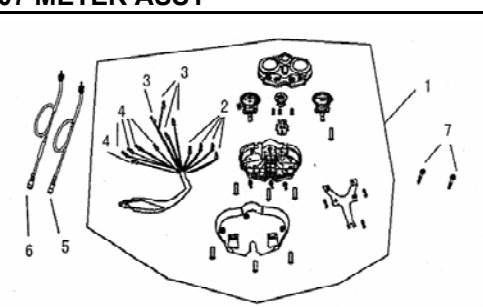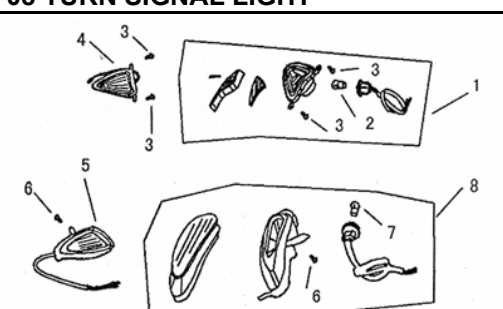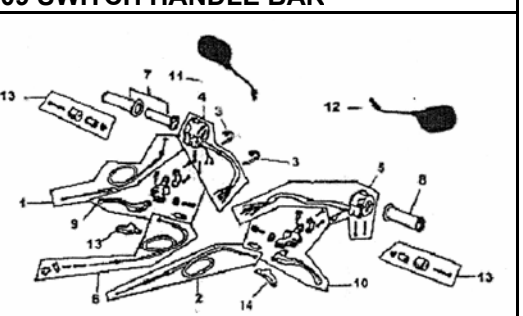
F01 FRAME BODY	F02 FRONT SHOCK ABSORBER	F03 STEERING STEM
		
F04 STEERING HANDLE BAR	**F05 HEAD LIGHT**	**F06 COWLING ASSY**
		
F07 METER ASSY	**F08 TURN SIGNAL LIGHT**	**F09 SWITCH HANDLE BAR**
		

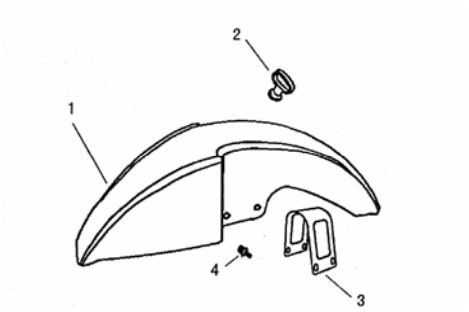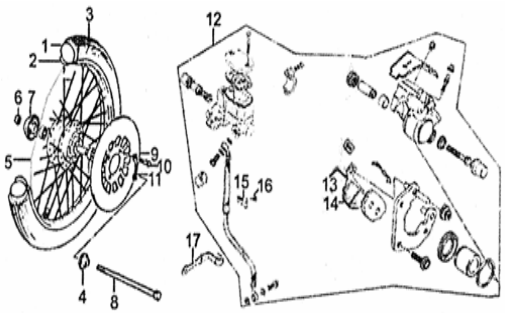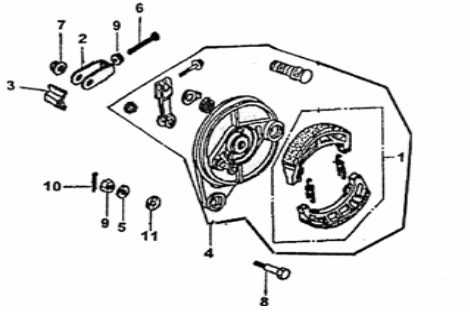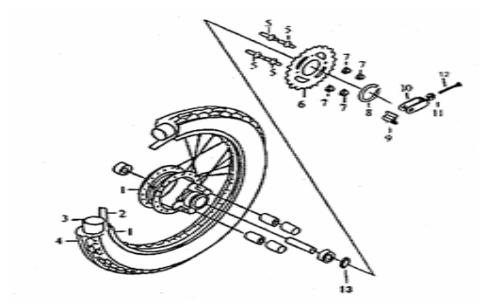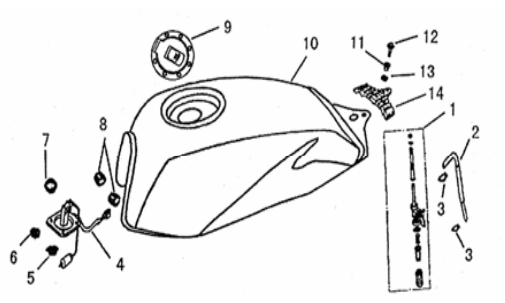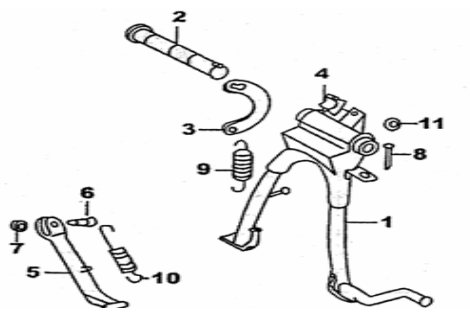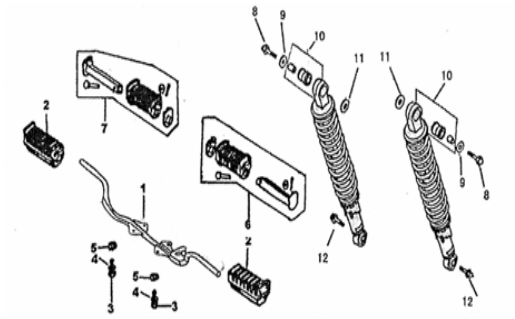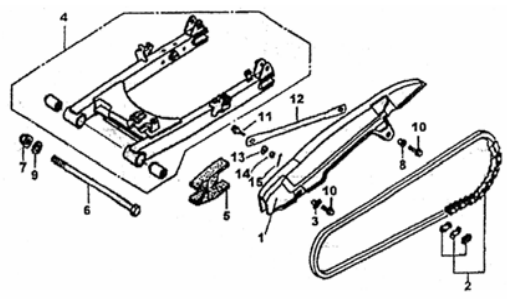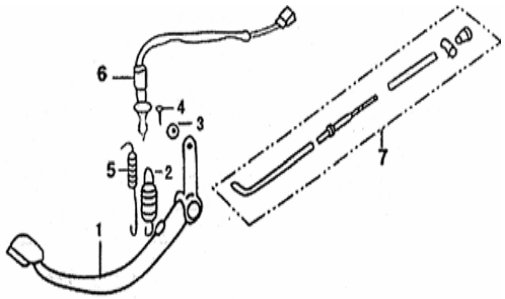F10 FRONT FENDER	F11 FR. WHEEL	F12 RR. WHEEL
		
F13 REAR WHEEL	**F14 FUEL TANK**	**F15 CENTER & SIDE STAND**
		
F16 PEDAL / REAR SHOCK ABSORBER	**F17 REAR FORK / CHAIN CASE**	**F18 KICK STARTER / GEAR SHIFT**
		


F19 ELECTRICAL

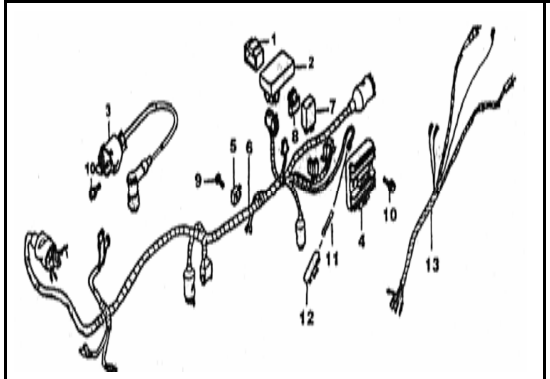


F20 BATTERY / AIR CLEANER

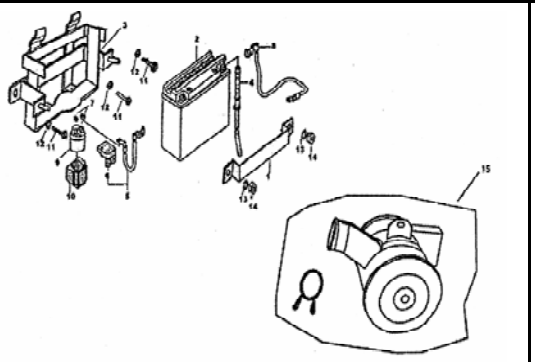


F21 SIDE COVER / MUFFLER

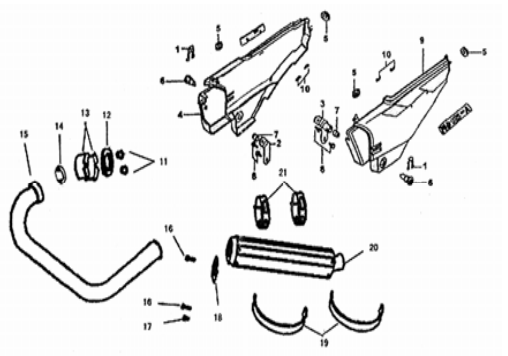


F22 REAR FENDER / LUGGAGE

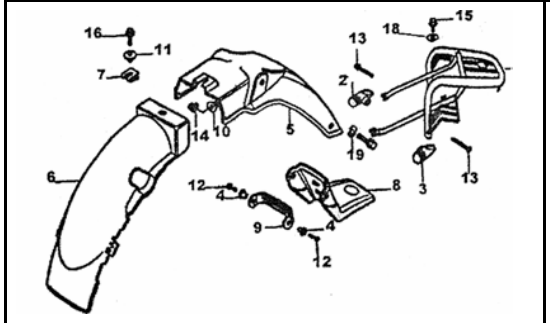


F23 TAIL LIGHT

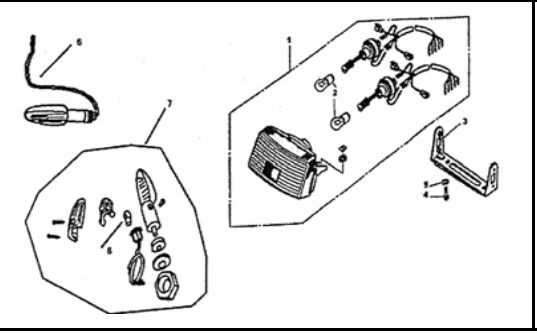

F24 SEAT / TAIL COVER

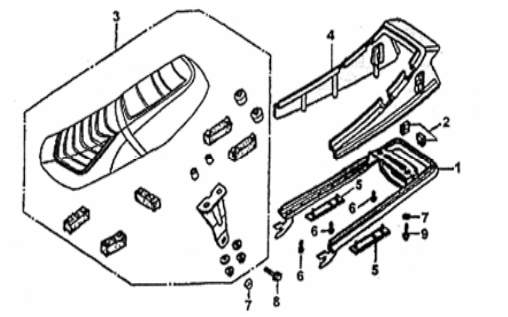


F25 PROTECTOR BAR / TOOL SET

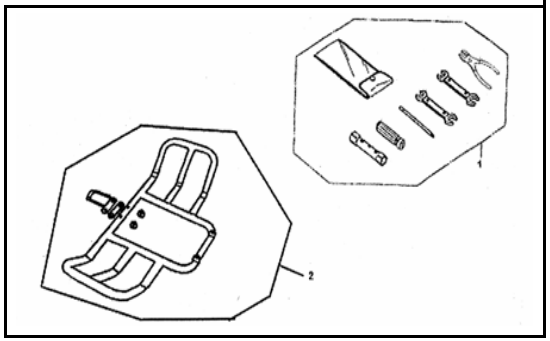


E01 CYLINDER HEAD COVER

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	A0101	Cylinder head cover	1	
2	A0102	Bolt M6x28 (H10)	3	
3	A0103	M6x12, Bolt (H10)	1	
4	A0104	Gasket 6mm (Chrome)	1	
5	A0105	Gasket, cylinder head cover	1	
6	A0107	Bolt m6x20 (H8)	2	
7	A0440	Clip	1	
8	A0108	Inlet tube	1	
9	A0113	Cylinder head assy	1	
10	A0112	Gasket 8mm (cooper)	1	
11	A0111	Bolt M8x78	1	
12	A0110	Bolt M6x35	2	
13	A0115	Spark ping D8EA	1	
14	A0407	Nut M8x32 (H12)	2	
15	A0406	Gasket 12 mm	2	

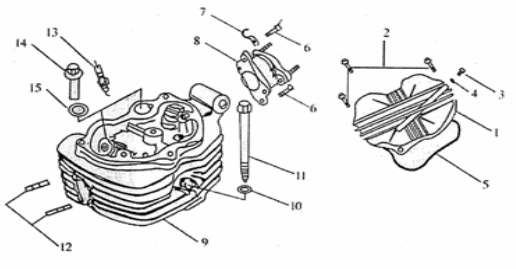


Enlarged figure next page

E01 CYLINDER HEAD COVER

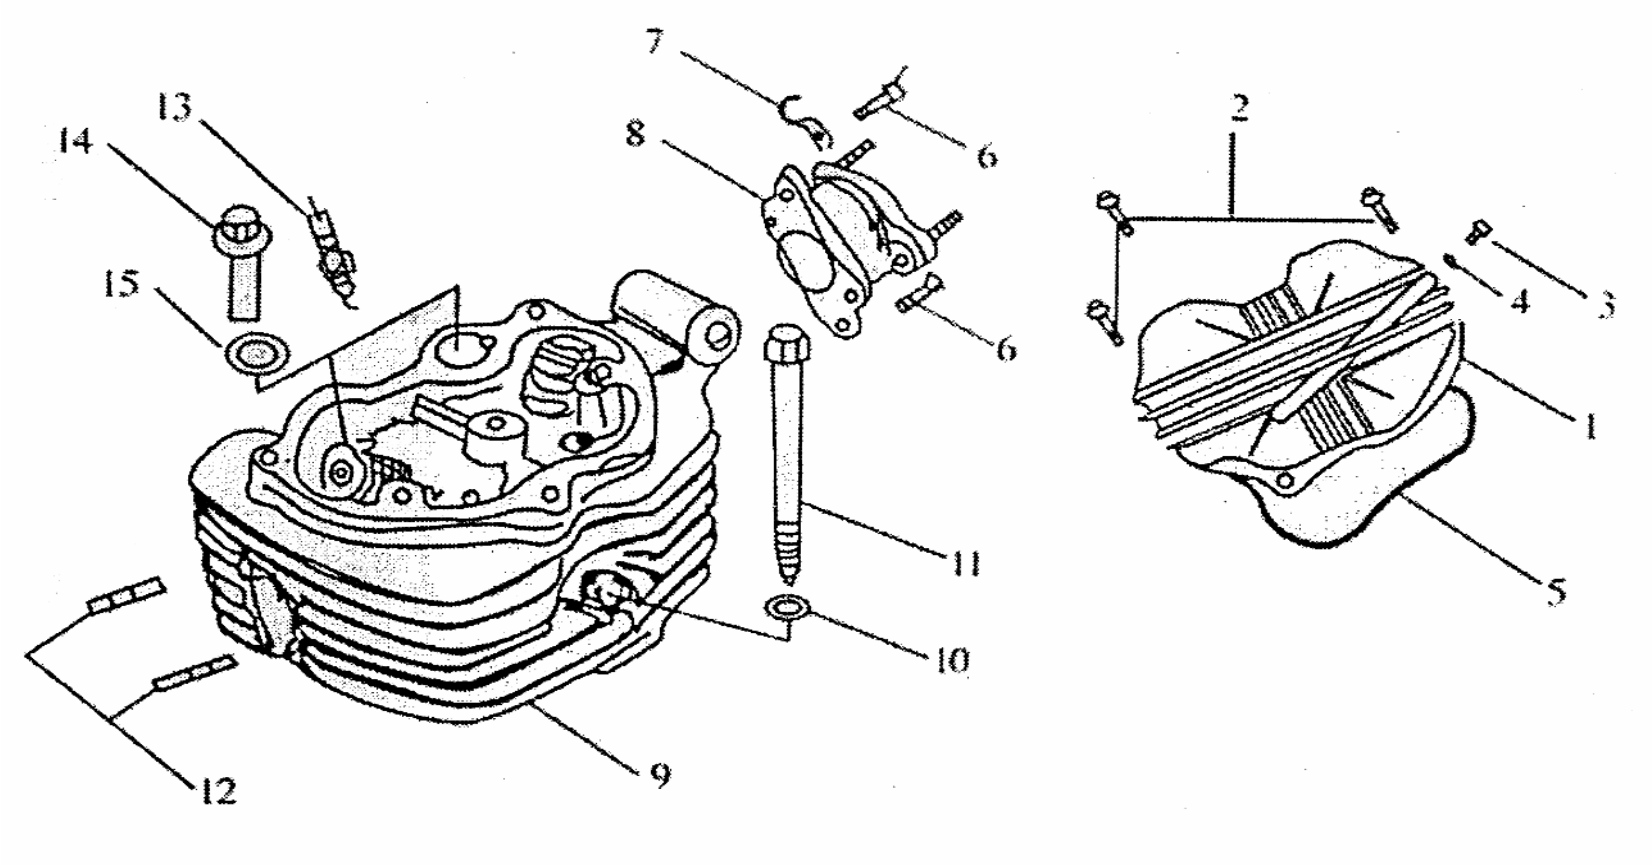


E02 CYLINDER

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	A0201	Gasket cylinder head	1	
2	A0202	Pin	3	
3	A0203	O Ring 10x1.6	1	
4	A0205	Cylinder block	1	
5	A0206	Gasket, cylinder block	1	
6	A0411	Pin 10x14	2	

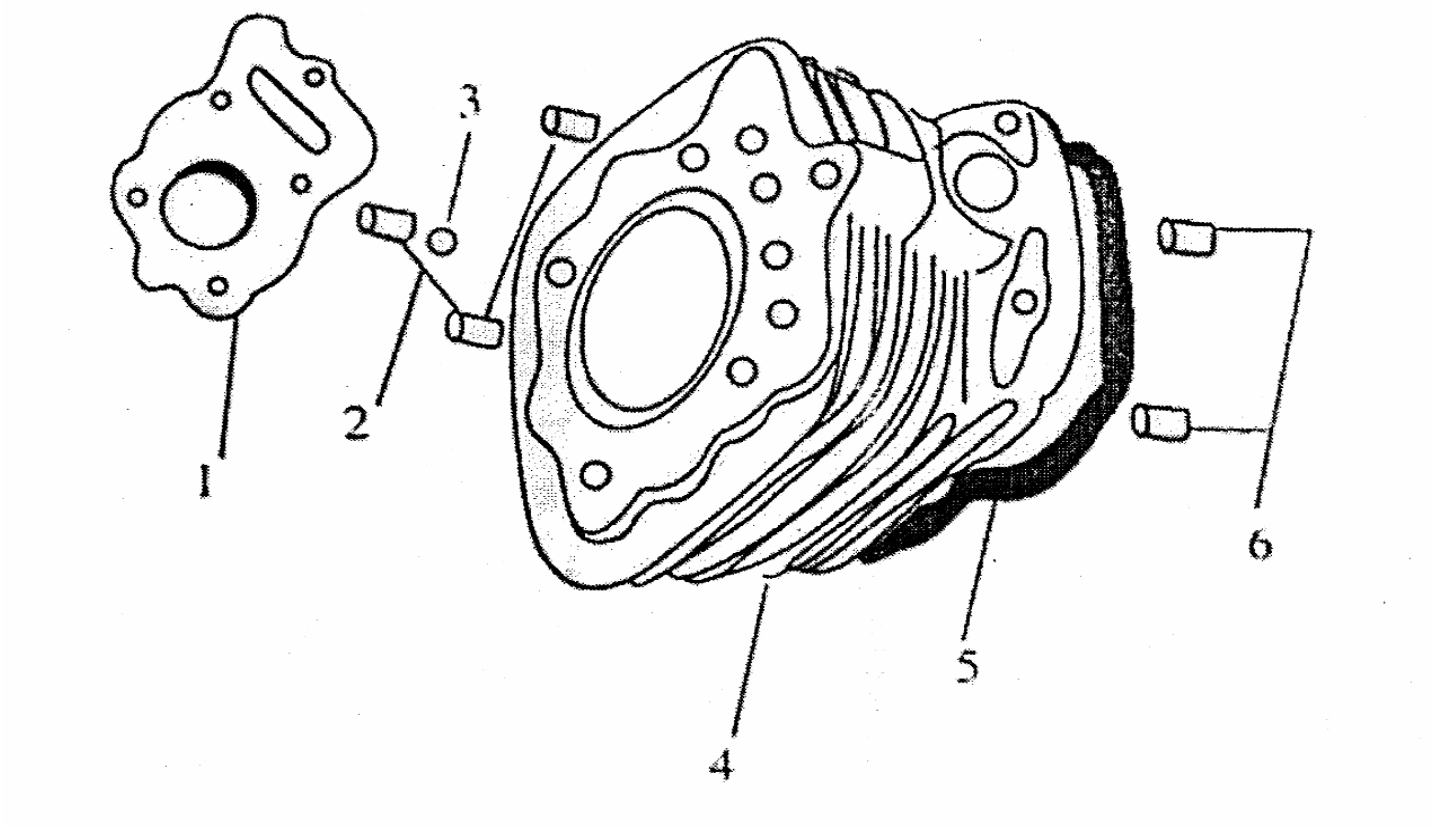


E03 RIGHT CRANKCASE COVER

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	A0301	Rod, clutch lifter	1	
2	A0302	O Ring 6.8x19	1	
3	A0303	Spring, clutch lifter	1	
4	A0304	Cam, clutch	1	
5	A0305	Pin 2x16	1	
6	A0308	Right cover	1	
7	A0311	Oil dipstick	1	
8	A0312	Pin 8x14	2	
9	A0315	Gear tachometer	1	
10	A0316	Washer thrust 6.8mm (black)	1	
11	A0317	Oil seal 6.5x14.5x7	1	
12	A0318	Bolt M5x25	1	
13	A0321	Bolt M6x40 (H8)	10	
14	A0320	Bolt M6x50 (H8)	1	
15	A0327	O Ring 18x3	1	
16	A0319	Oil seal 16x28x7	1	
17	A0322	Gasket, Right cover	1	
18	A0323	Bolt, engine oil	1	

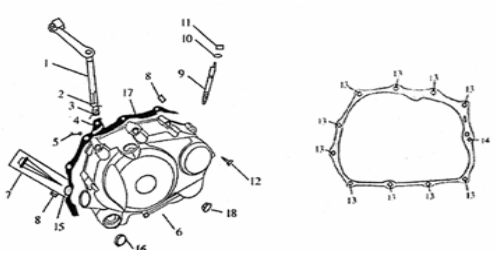


Enlarged figure next page

E03 RIGHT CRANKCASE COVER

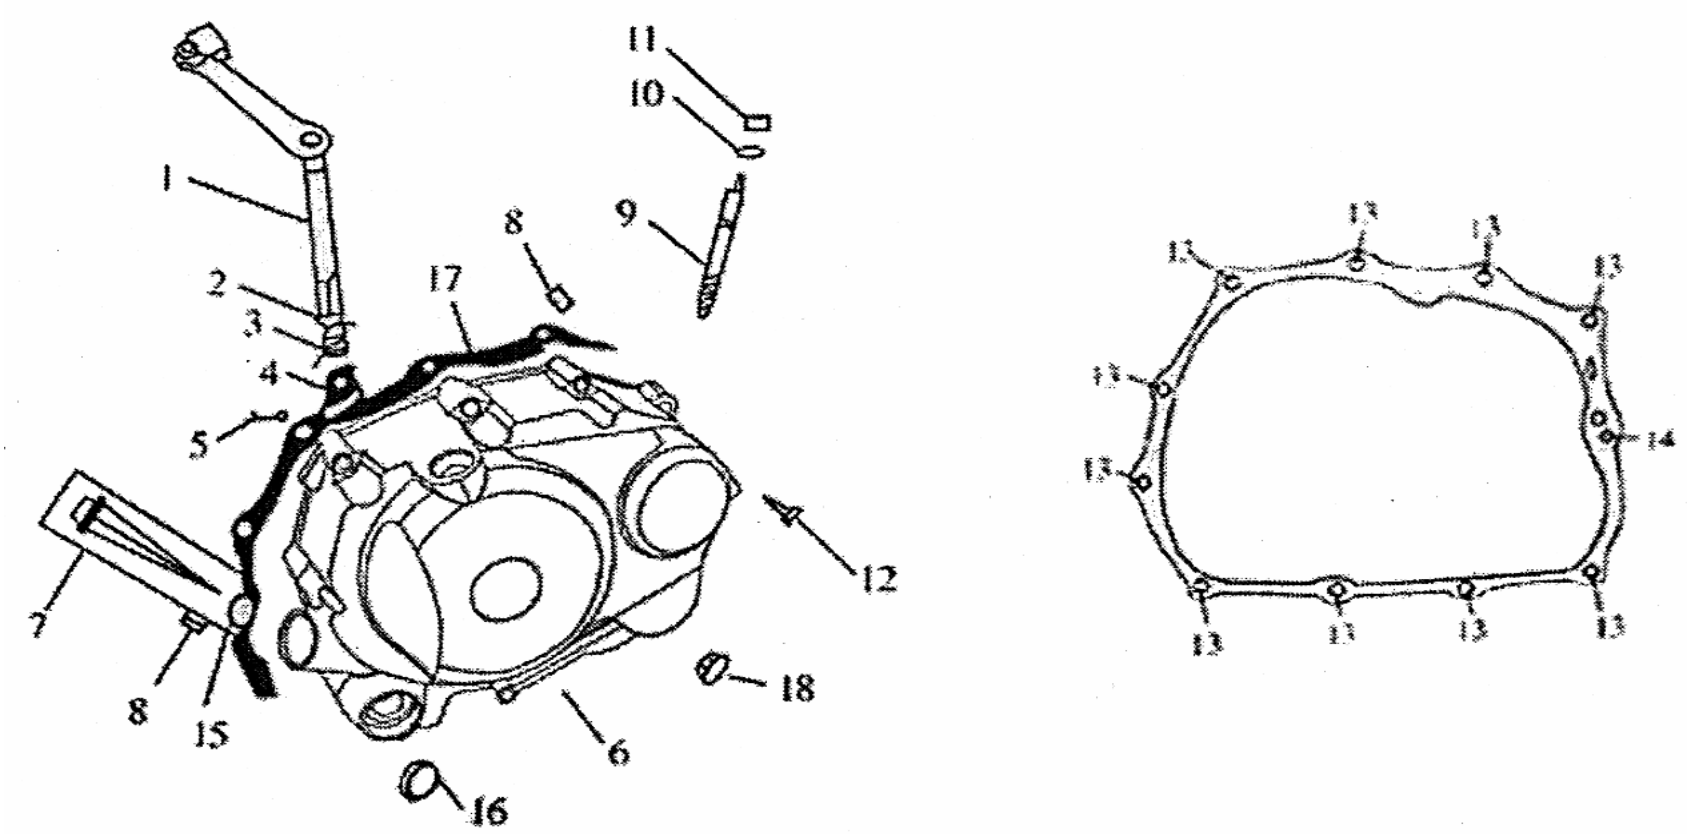


E04 CRANKCASE

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	A0403	Bolt M6x55 (H10)	1	
2	A0404	Fixing plate, clutch	1	
3	A0405	Bolt M8x12	2	
4	A0406	Washer 12mm (aluminium)	1	
5	A0409	Air breather tube	1	
6	A0410	Bolt M8x130	2	
7	A0411	Pin 10x14	2	
8	A0412	Gasket, crankcase	1	
9	A0413	Left crankcase	1	
10	A0415	Bolt M6x50	9	
11	A0416	Bolt M6x95	1	
12	A0417	Cap, oil filter rotor	1	
13	A0418	O Ring 35x3	1	
14	A0419	Spring, oil filter	1	
15	A0420	Oil filter rotor	1	
16	A0421	Oil seal 14x28x7	1	
17	A0422	Fixing plate, clutch	1	
18	A0423	Bolt M6x25 (H10)	1	
19	A0425	Bolt M6x12 (H8)	1	
20	A0434	Clip	1	
21	A0428	Bearing Hk 1010	1	
22	A0429	Bearing 6202	1	
23	A0430	Right Crankcase	1	
24	A0431	Bearing 6204	1	
25	A0432	Bearing 6206	1	
26	A0433	Bearing Hk 1512	1	
27	A0439	Bolt M12x15 (H17)	1	
28	A0437	Oil seal 14x22x5	1	

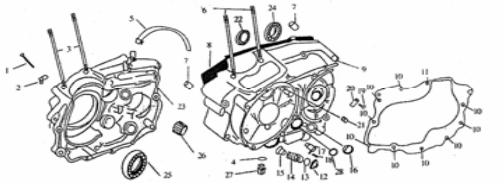


Enlarged figure next page

E04 CRANKCASE

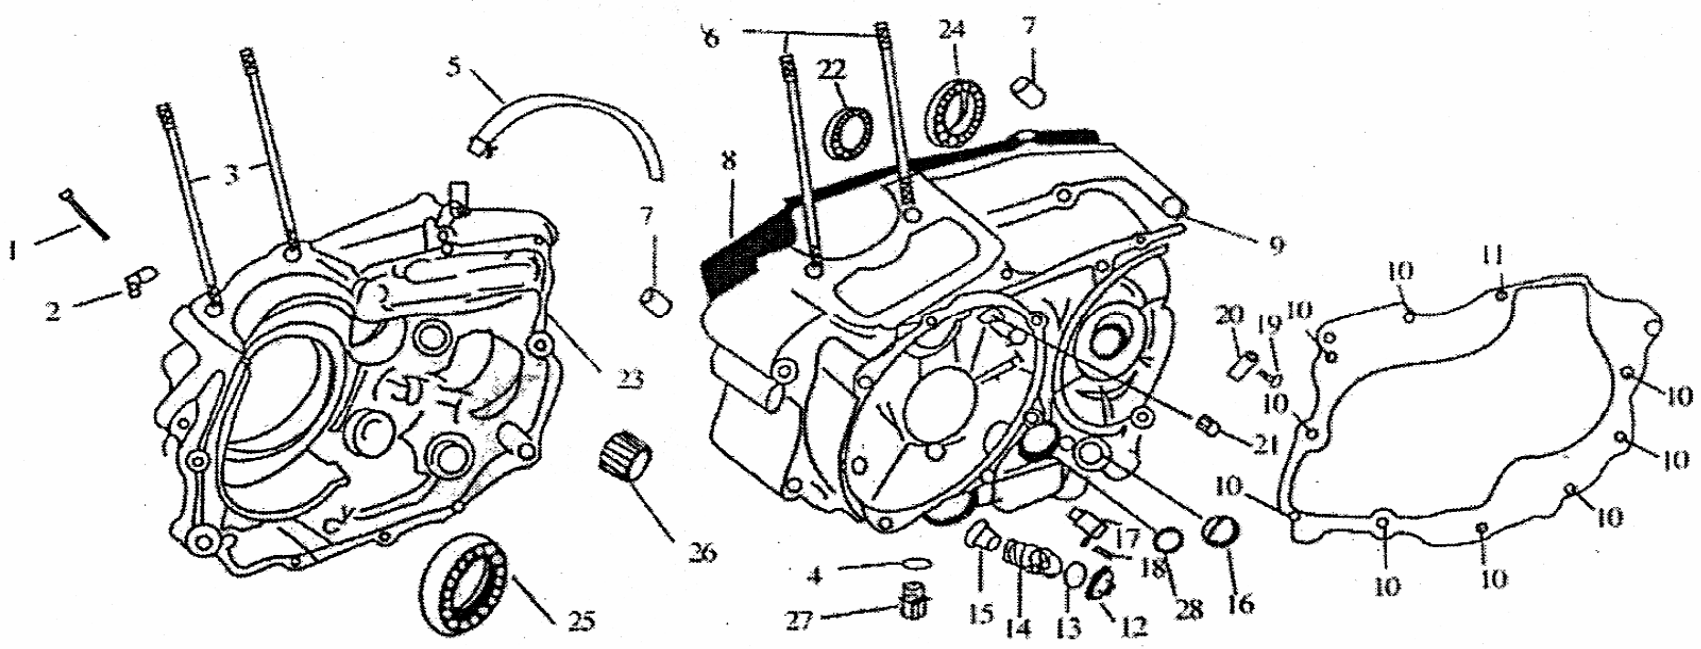


E05 LEFT CRANKCASE COVER

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	A0501	Left crankcase cover	1	
2	A0507	Bolt M5x16 (include spring gasket)	2	
3	A0508	Bolt M5x25 (H8)	3	
4	A0509	Cap 30mm	1	
5	A0510	O Ring 27.5x3	1	
6	A0511	Cap 14mm	1	
7	A0512	O Ring 13.8x25	1	
8	A0514	Bolt M6x28	2	
9	A0515	Chain cover	1	
10	A0517	Gasket, L. crankcase cover	1	
11	A0411	Pin 10x14	2	
12	A0321	Bolt M6x40 (H8)	4	
13	A0320	Bolt M6x50 (H8)	2	
14	A0118	Bolt M6x25 (H8)	1	
15	A1202	Stator	1	
16	A0428	Bearing	1	
17	A1203	Fixing stator	1	
18	A1201	Rotator	1	
19	A0604	Bolt M10x35 (H14)	1	

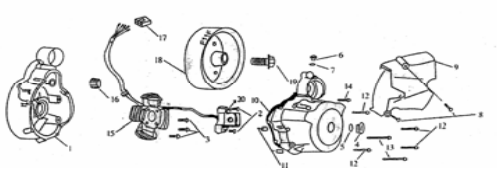


Enlarged figure next page

E05 LEFT CRANKCASE COVER

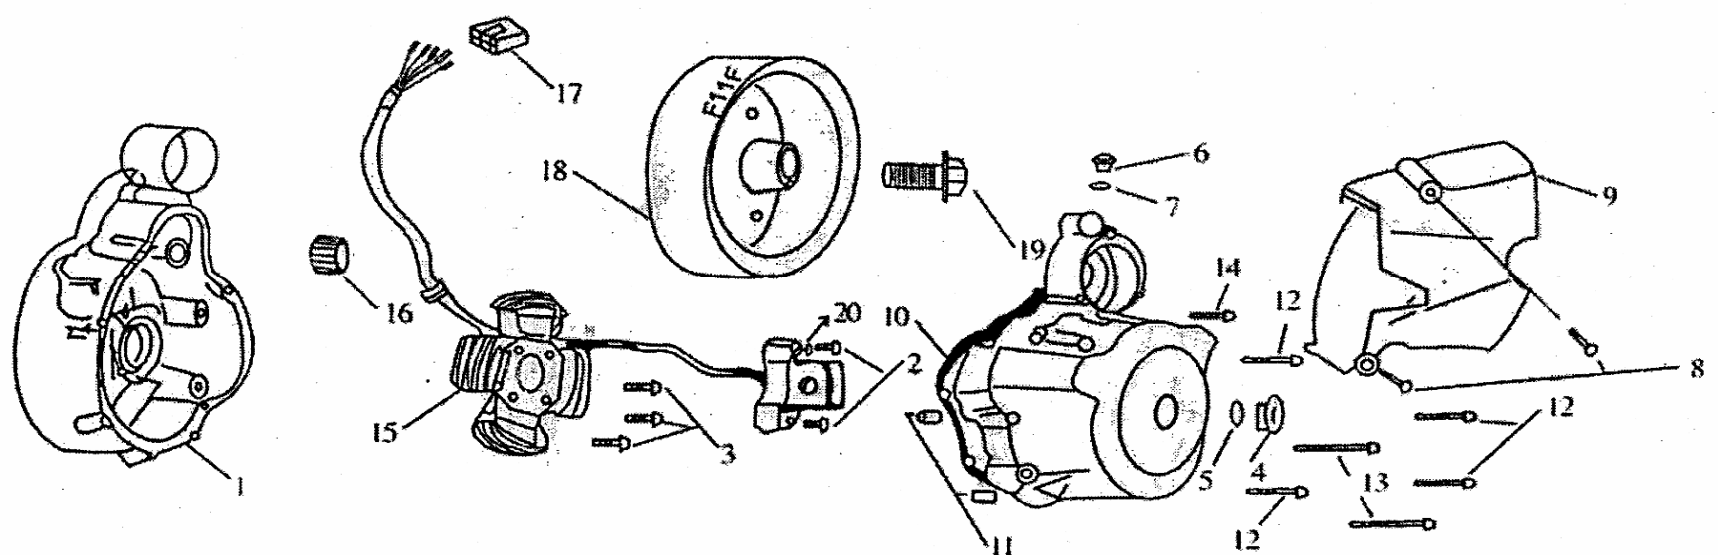


E06 CRANKSHAFT / PISTON / OIL PUMP

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	A0601	Crankshaft assy	1	
2	A0602	Gear, timing drive	1	
3	A0605	Gasket 16mm (Black)	1	
4	A0606	Nut M16 (Black)	1	
5	A0607	Piston	1	
6	A0608	Ring piston (set)	1	
7	A0611	Pin piston	1	
8	A0612	Ring	2	
9	A0901	Oil Filter rotor	1	
10	A0904	Gear initial drive	1	
11	A0402	Bolt M6x30	2	
12	A0905	Oil pump	1	
13	A0426	Oil seal 34x50x7	1	
14	A0401	O Ring 9.4x2.4	2	

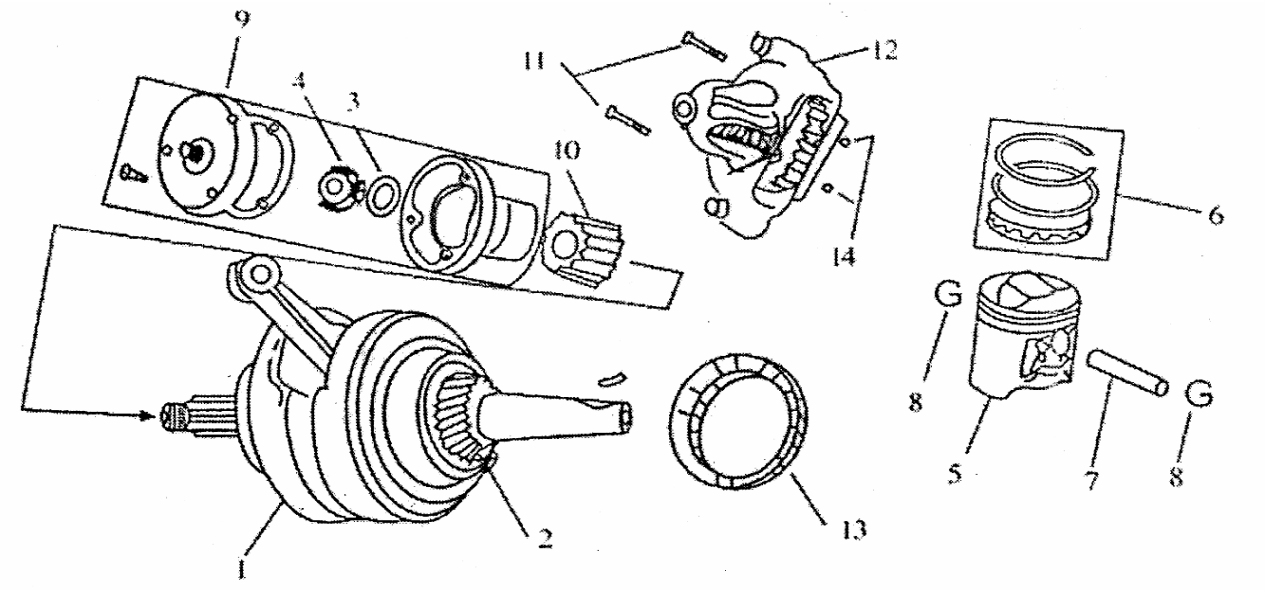


E07 VALVE

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	A0701	In. Valve	1	
2	A0702	Wx. Valve	1	
3	A0703	Outer spring seat, valve	2	
4	A0704	iInner spring seat, valve	2	
5	A0705	Outer spring, valve	2	
6	A0706	Inner spring, valve	2	
7	A0707	Retainer valve spring	2	
8	A0708	Lock, valve	4	
9	A0709	Seat, cam upper	1	
10	A0710	Bolt M8x28 (H12)	3	
11	A0711	Washer 8mm (caprum)	3	
12	A0712	Plate push rod	1	
13	A0713	Push rod	2	
14	A0714	Wave washer (Black)	1	
15	A0715	Cam follower	2	
16	A0716	Shaft, cam follower	1	
17	A0717	O Ring 17x2.5	1	
18	A0718	Cam	1	
19	A0719	Camshaft	1	
20	A0720	O Ring 20.25	1	
21	A0721	Washer thrudt 14mm	1	
22	A0722	Plate spring, camshaft	1	
23	A0427	Plate, camshaft	1	
24	A0425	Bolt M6x12 (H8)	1	
25	A0407	Nut M8x32 (12)	2	
26	A0411	Oil seal	2	

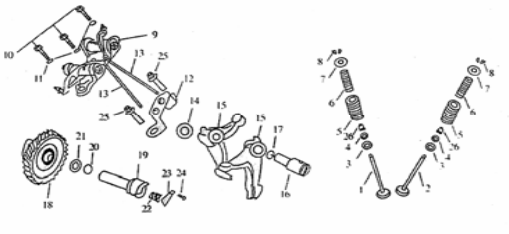


Enlarged figure next page

E07 VALVE

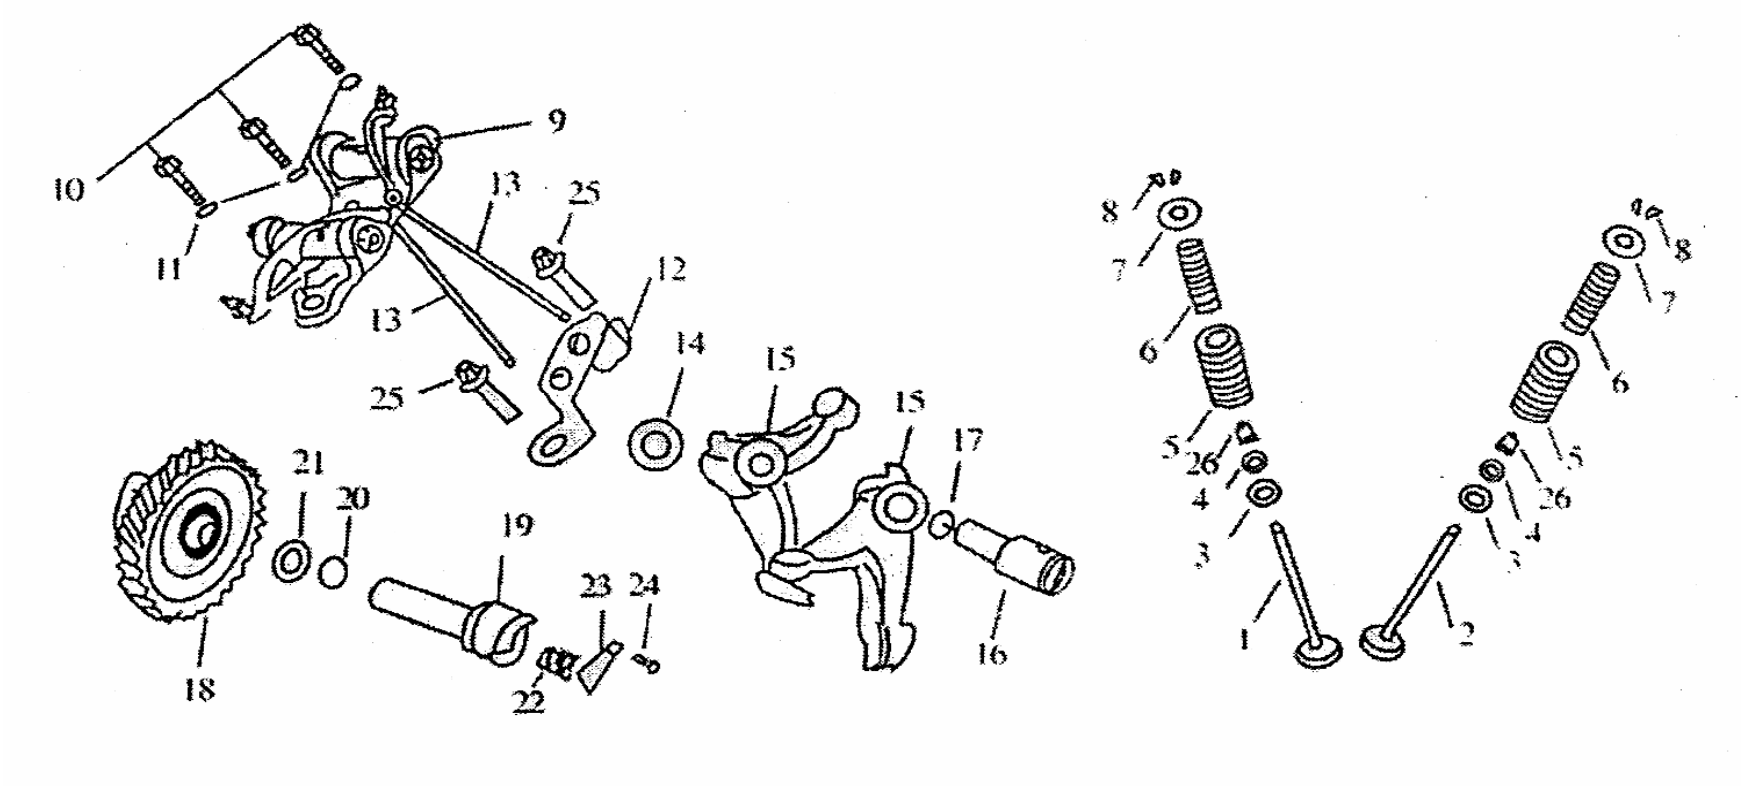
10
9
11
13
25
13
12
25
14
15
15
17
16
21
20
19
23
24
18
22
8
7
6
5
26
4
3
1
2
8
7
6
5
26
4
3


E08 CLUTCH

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	A1001	Clutch assy	1	
2	A1002	Washer	1	
3	A1003	Ring 20mm	1	
4	A1004	Bearing 6001	1	
5	A1005	Pin, clutch lifter guide	1	
6	A1006	Rod, clutch lifter	1	

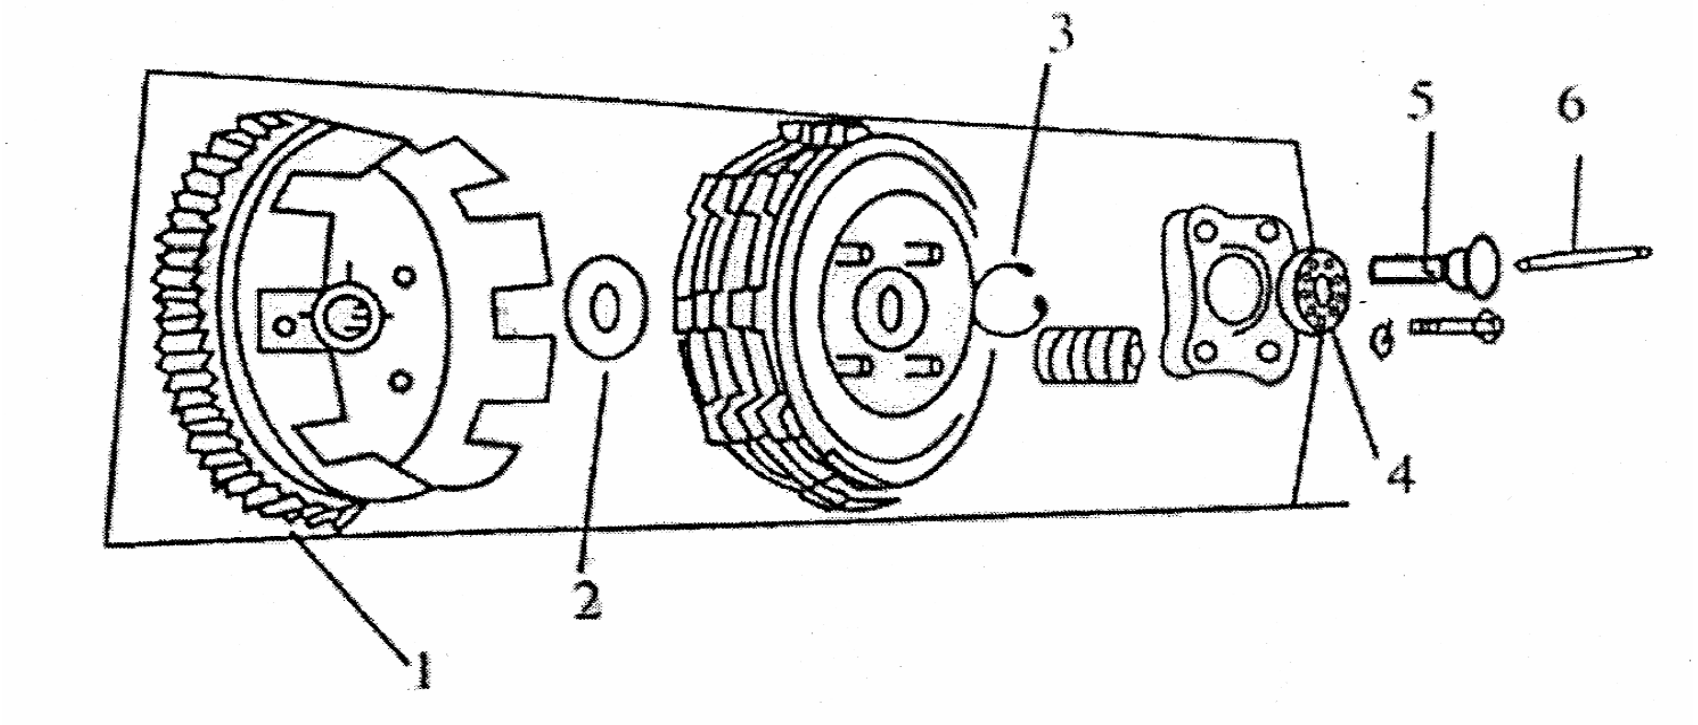


E09 GEAR SHIFT

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	A1101	Main shaft	1	
2	A1102	Counter shaft	1	
3	A1103	Drive sprocket	1	
4	A1104	Fixing plate, drive sprocket	1	
5	A1105	Bolt M6x10 (H10)	2	
6	A0438	Oil seal 20x34x7	1	
7	A1106	Startin shaft	1	
8	A1110	Transmission shaft	1	
9	A1113	Shaft, gearshift fork	1	
10	A1115	Fork, center gearshift	1	
11	A1116	Right shaft, gearshift fork	1	
12	A1117	Transmission shaft	1	
13	A1118	Cam	1	
14	A1120	Pin 4x8	1	
15	A1121	Cam, Gearshift	1	
16	A1122	Stopper spring	1	
17	A0103	Bolt M6x20 (H10)	1	
18	A0423	Bolt M6x25 (H10)	1	
19	A0425	Bolt m&x12 (H8)	1	
20	A0436	Gearshift indicating	1	
21	A1114	Left gearshift fork	1	

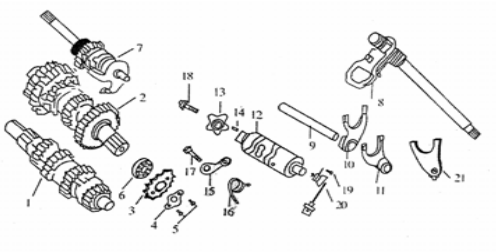


Enlarged figure next page

E09 GEAR SHIFT

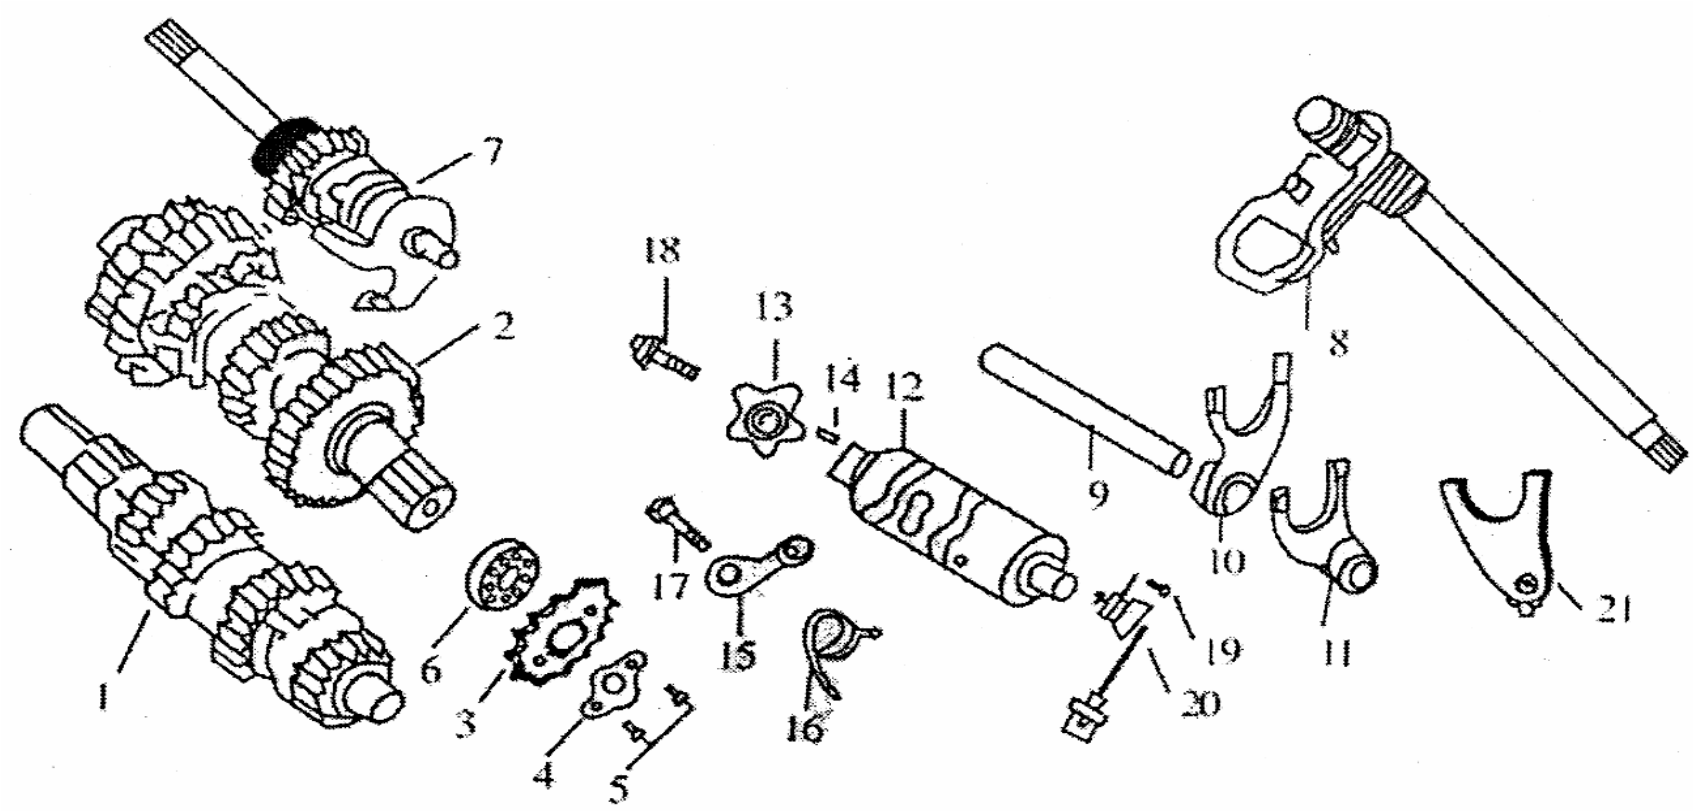


E10 STARTER MOTOR ASSY

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	A1301	Motor starter	1	
2	A1302	Speed control gear	1	
3	A1303	Gear shaft speed control	1	
4	A1304	Gear shaft, kick starter	1	
5	A1305	Washer 10.5mm	4	
6	A1306	Gear, kick starter	1	
7	A1307	Center assy, clutch	1	
8	A1308	Bolt M8x18	3	
9	A0504	Cap, speed control gear	1	
10	A0506	O Ring 63x3	1	
11	A0503	Bolt M6x20 (H10)	3	
12	A0118	Bolt M6x25 (H10)	2	

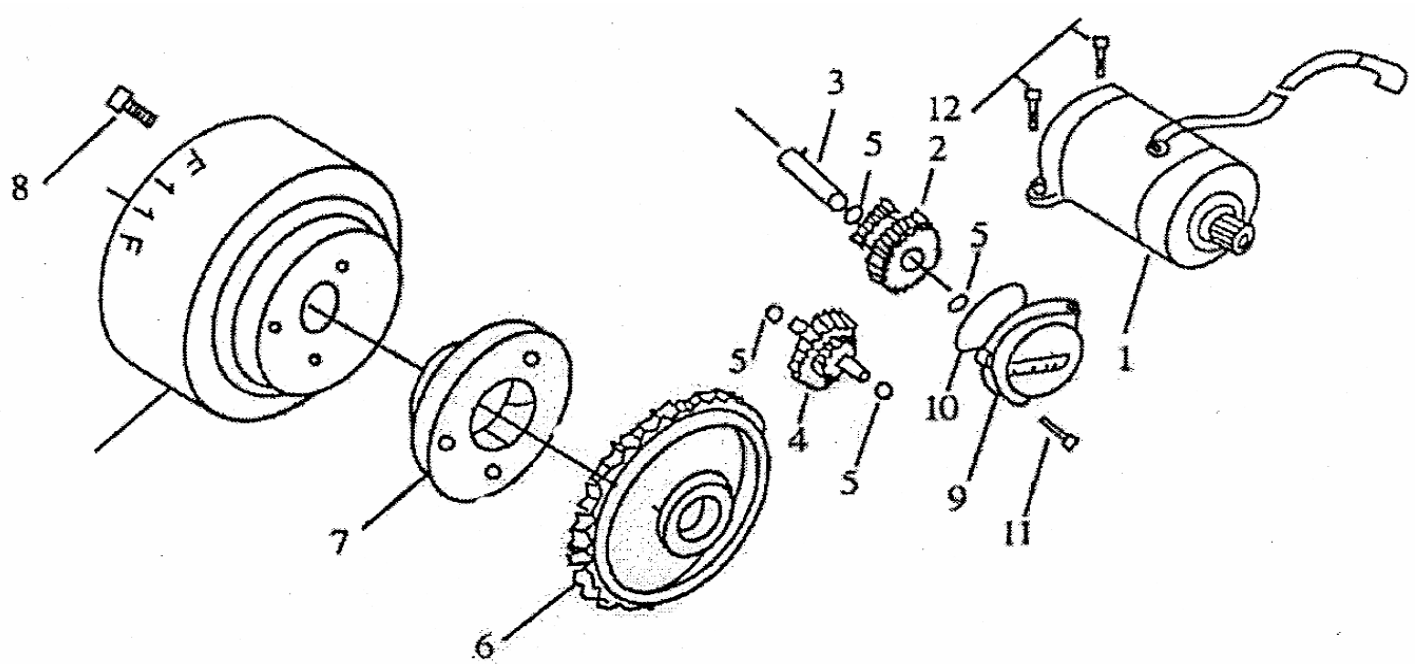


E11 ENGINE & CARBURETOR ASSY

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	7.YA.60000000	Engine assy	1	
2	5.YA.71010000	Carburetor	1	
3	5.YA.60060002	Chain cover	1	
4	6.YA.21620608-B	Bolt	2	

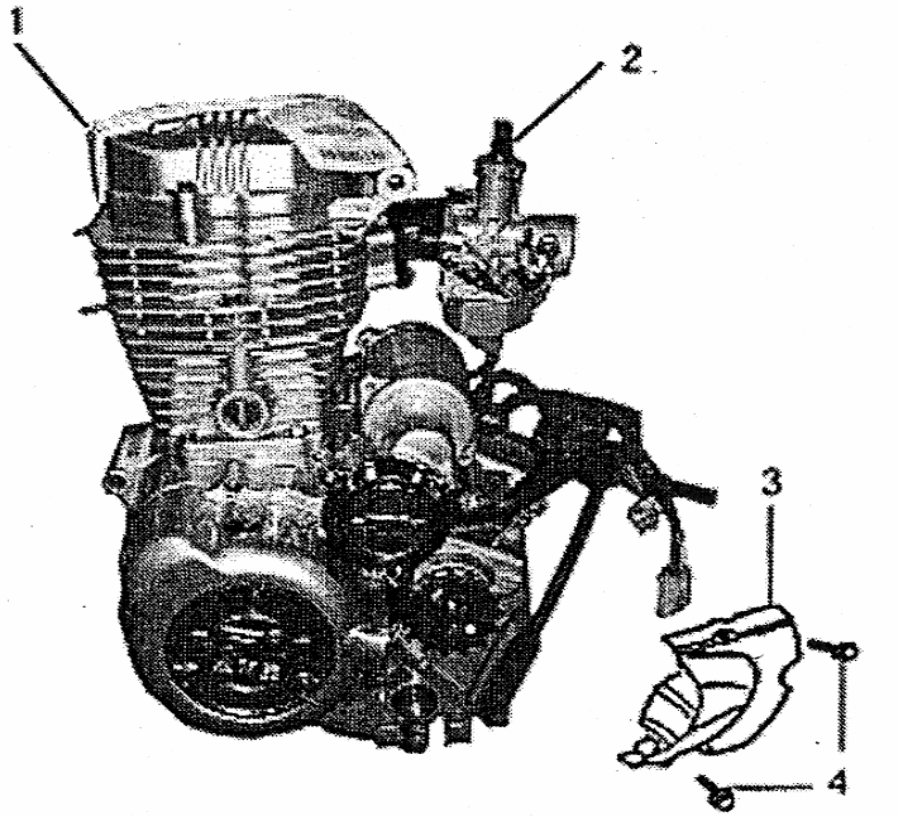


F01 FRAME BODY

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	GB93-87	Spring washer 10	2	
2	B2-18000005	Wire clip	2	
3	GB/T16674-96	Bolt, Hex M8x90	2	
4	B2-18231000	High DB horn assy	1	
5	B2-18000005	Horn bracket	1	
6	B2-18232000	Low DB horn assy	1	
7	B2-09010000	Frame body assy	1	
8	B2-09000002	Engine upper plate	1	
9	B2-09000001	Engine down plate	2	
10	B2-09000003	Name plate of frame	1	
11	GB/T16674-96	Bolt, Hex M8x70	5	
12	B2-18000001	Main wire hook	1	
13	B2-11000001	Glip, clutch cable	1	
14	GB/T16674-96	Bolt, Hex M8x115	2	
15	GB12618-90	Nail 3x10	2	
16	GB93-87	Spring washer 8	7	
17	GB/T6170-2000	Nut, Hex M10	2	
18	GB/T97.1-2002	Washer 8	7	
19	GB/T6170-2000	Nut, Hex M8	7	
20	GB/T97.1-2002	Washer 10	2	
21	GB/T5783-2000	Bolt, Hex M6x10	2	
22	GB/T5783-2000	Bolt, Hex M6x20	1	
23	GB/T97.1-2002	Washer 6	1	
24	GB/T70.1-2000	Nut M8x25	2	
25	B2-79010700	Exhaust bracket	1	

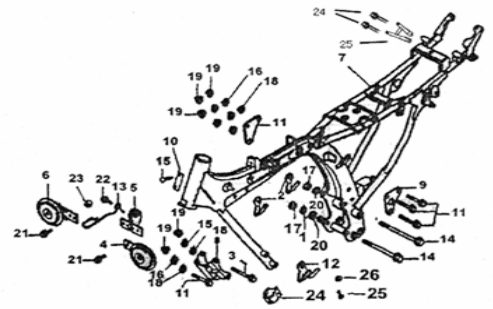


Enlarged figure next page

F01 FRAME BODY

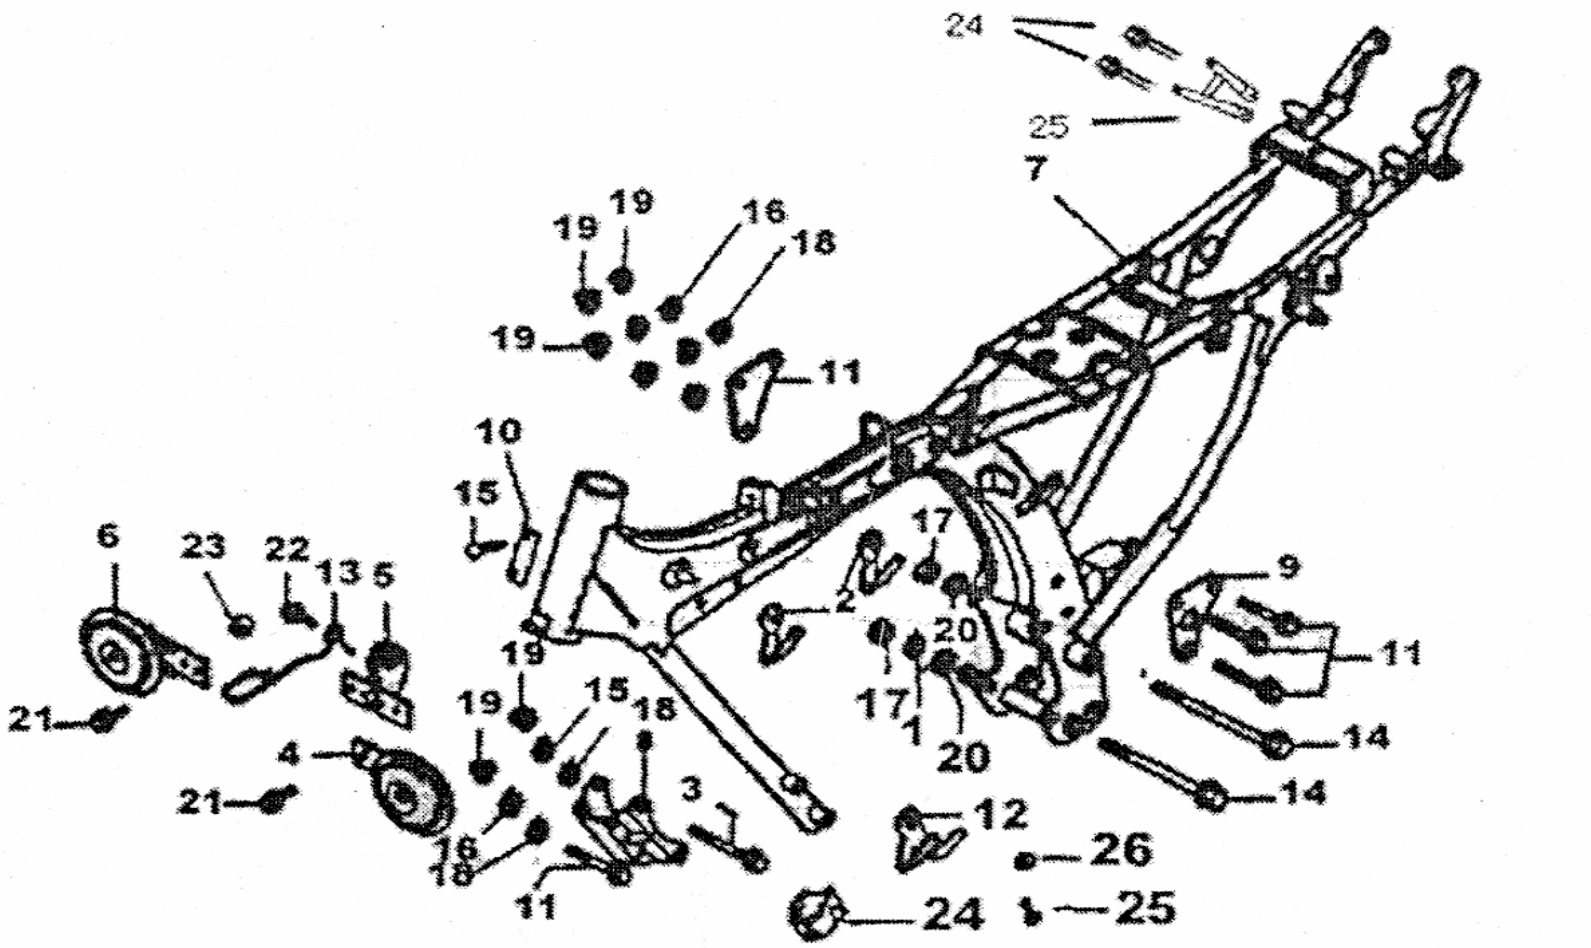


F02 FRONT SHOCK ABSORBERS

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-08010000	L.Front shock absorber	1	
2	B2-08020000	R.Front shock absorber	1	

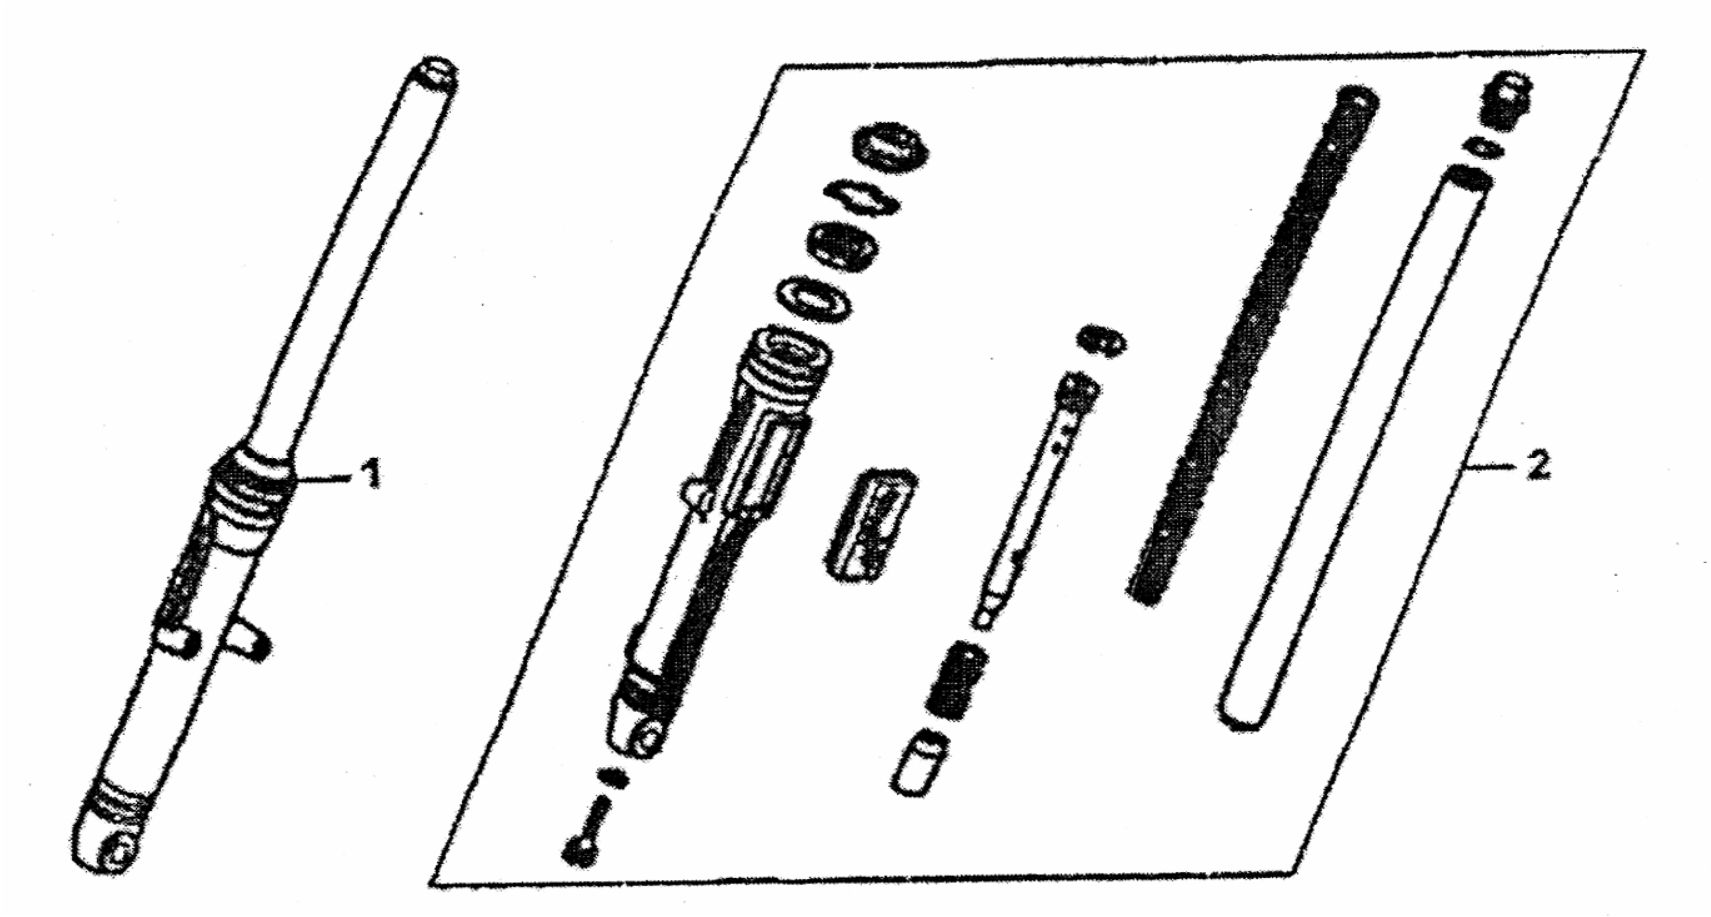


F03 STEERING STEM

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-11020004	Frame bowl	2	
2	B2-11020100	Steering sterm assy	1	
3	B3-11020003	Bowl (Upper)	1	
4	B2-11020005	Bowl (Down)	1	
5	B2-11020006	Gasket, down Bowl	1	
6	B2-11020007	Lower washer, steering stem	1	
7	B2-11020300	Compressed nut	1	
8	SO3-18001000A	Headlight, bracket	1	
9	B2-41000051	Headlight, fixed gasket	1	
10	GB/T16674-96	Bolt, Hex M8x40	2	
11	B1-11020500	Upper rib bracket	1	
12	B1-11020600	Down rib bracket	1	

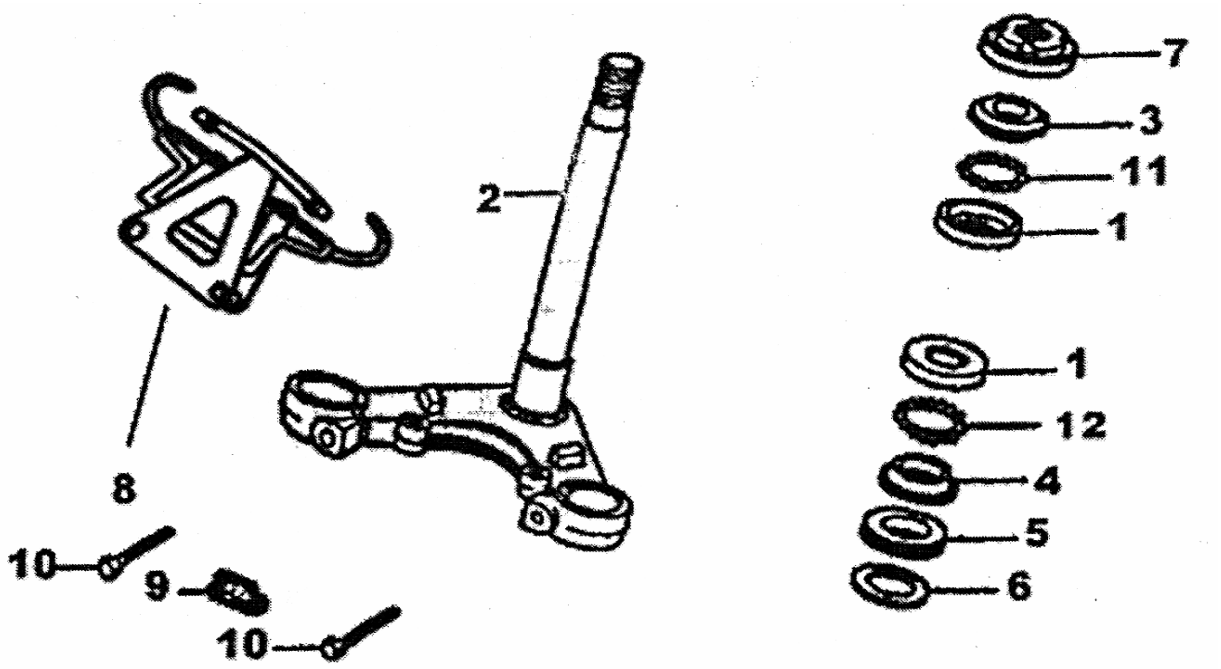


F04 STEERING HANDLE BAR

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-22010005	Bush, switch box	2	
2	B2-16000000	Lock assy	1	
3	B2-16010000	Ignition switch lock	1	
4	SO3-16030000A	Fuel tank lock	1	
5	B2-16080000	Side cover lock	2	
6	B2-22010004	Switch box	1	
7	B2-11000005	Switch box fixing bracket	1	
8	B2-11010401	Steering handle bar	1	
9	GB/T6187.1-2000	Nut M8	2	
10	B2-11020008	Steering sterm gasket	1	
11	GB/T818-2000	Bolt M4x10	2	
12	B2-11020002	Upper plate	2	
13	B2-11020001	Upper connecting plate	1	
14	GB/T16674-96	Bolt, Hex M8x8	2	
15	GB/T16674-96	Bolt, Hex M6x30	4	
16	gb/t16674-96	Bolt, Hex M8x55	2	

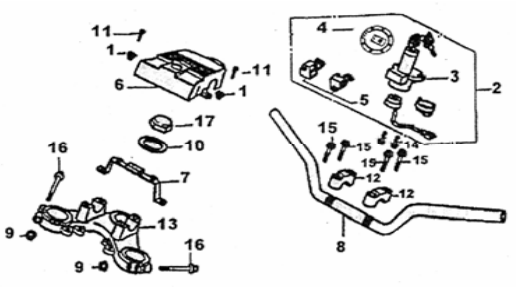


Enlarged figure next page

F04 STEERING HANDLE BAR

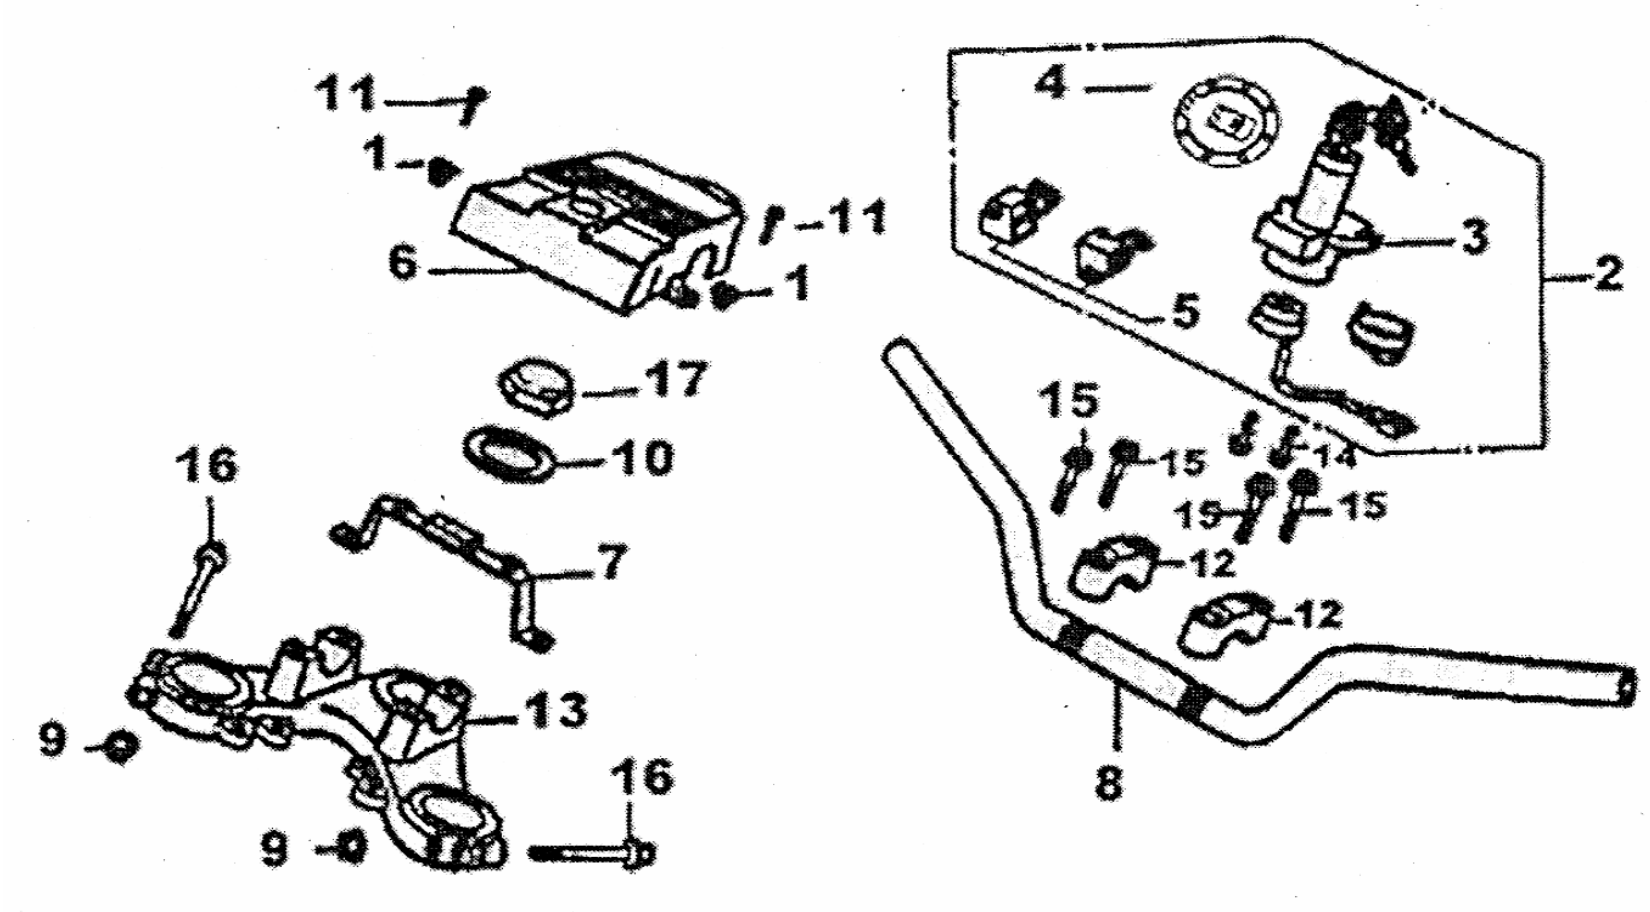


F05 HEAD LIGHT

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	SO3-18110000A	Headlight assy	1	
2	SO3-18110100A	Headlight bulb	1	
3	SO3-18110300A	Headlight bracket	1	

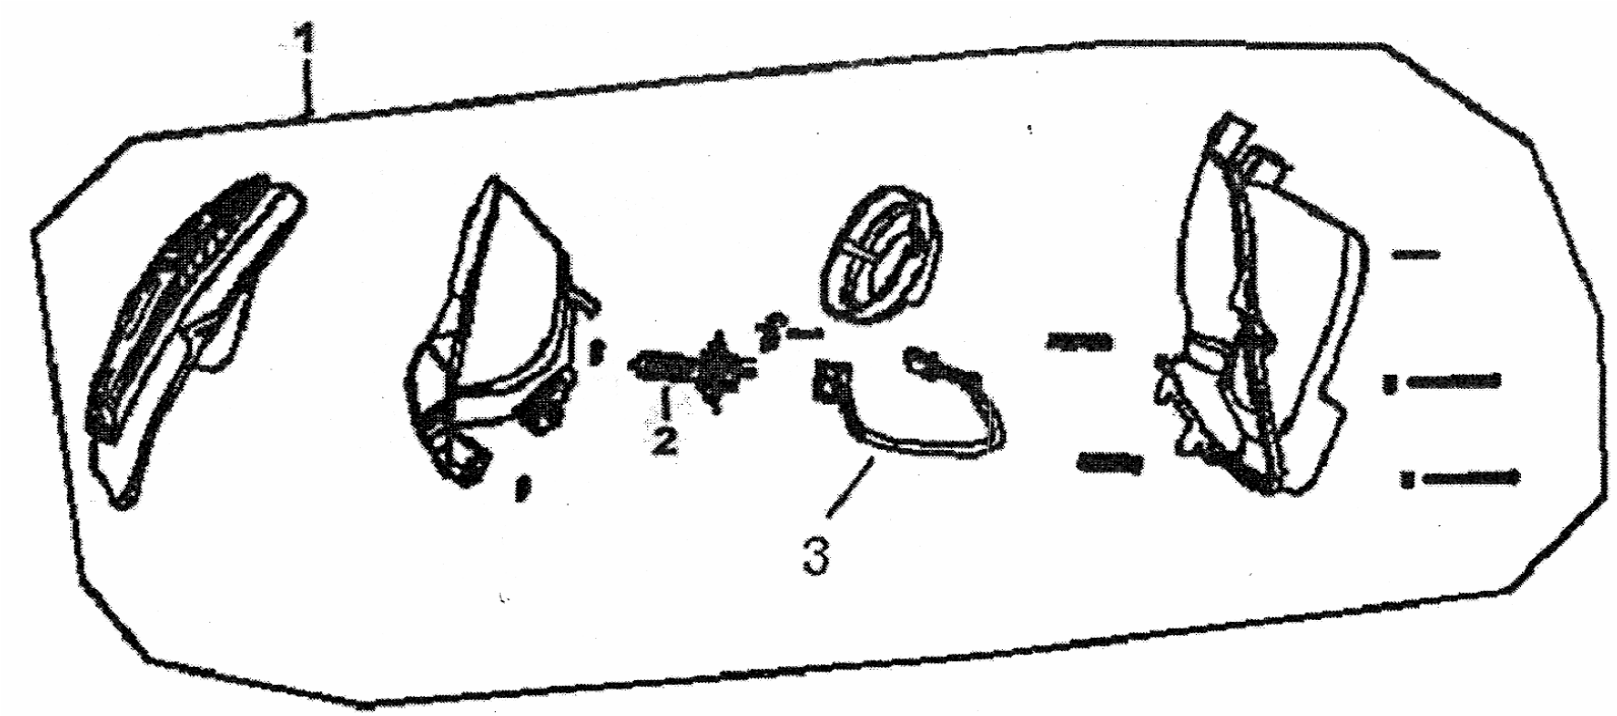


F06 COWLING ASSY

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	SO3-22010300A	Cowling assy	1	
2	GB845-1985	Bolt st4.2x13	4	
3	SO3-22010352A	Right cover cowling	1	
4	GB/T6170-2000	Nut, Hex M5	6	
5	GB/T96-2002	Washer 5	6	
6	B5-22010202	Windshield glue circle	6	
7	LD1-21050508	Bolt	6	
8	SO3-22010201A	Windshield	1	
9	SO3-22010203A	Protect gasket, windshield	1	
10	SO3-22010351A	Left cover, cowling	1	
11	SO3-22010301A	Cowling	1	
12	SO3-22010342A	Gasket cowling	2	

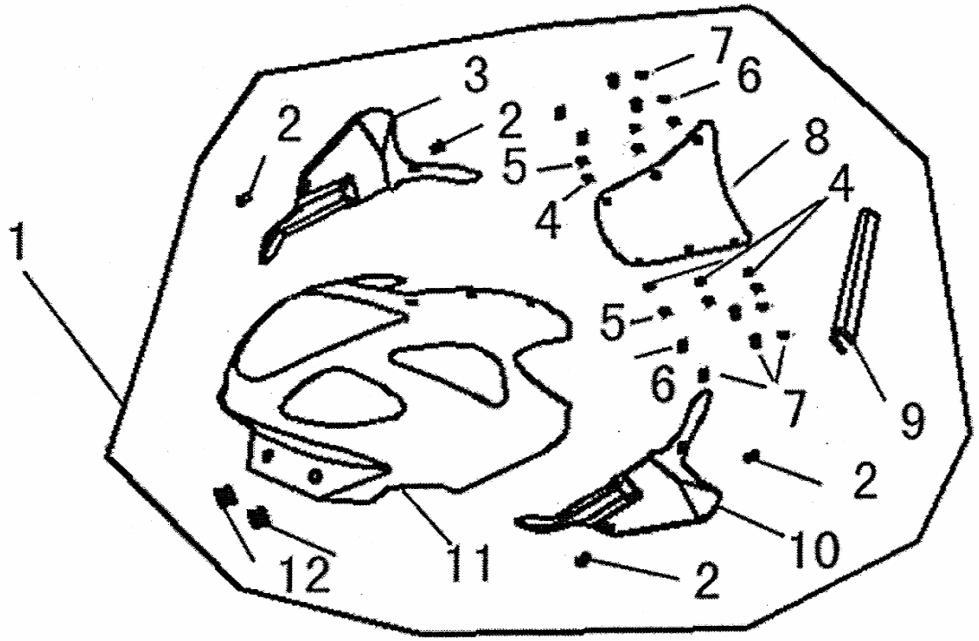


F07 METER ASSY

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	SO3-18210000A	Meter assy	1	
2	SO3-18210100A	Meter bulb	4	
3	SO3-18210110A	Bulb, indicate light	4	
4	SO3-18000110A	Diode	5	
5	SO3-11030200A	Tachometer cable	1	
6	SO3-11030100A	Speedometer cable	1	
7	GB-T16674-96	Bolt, Hex M6x16	2	

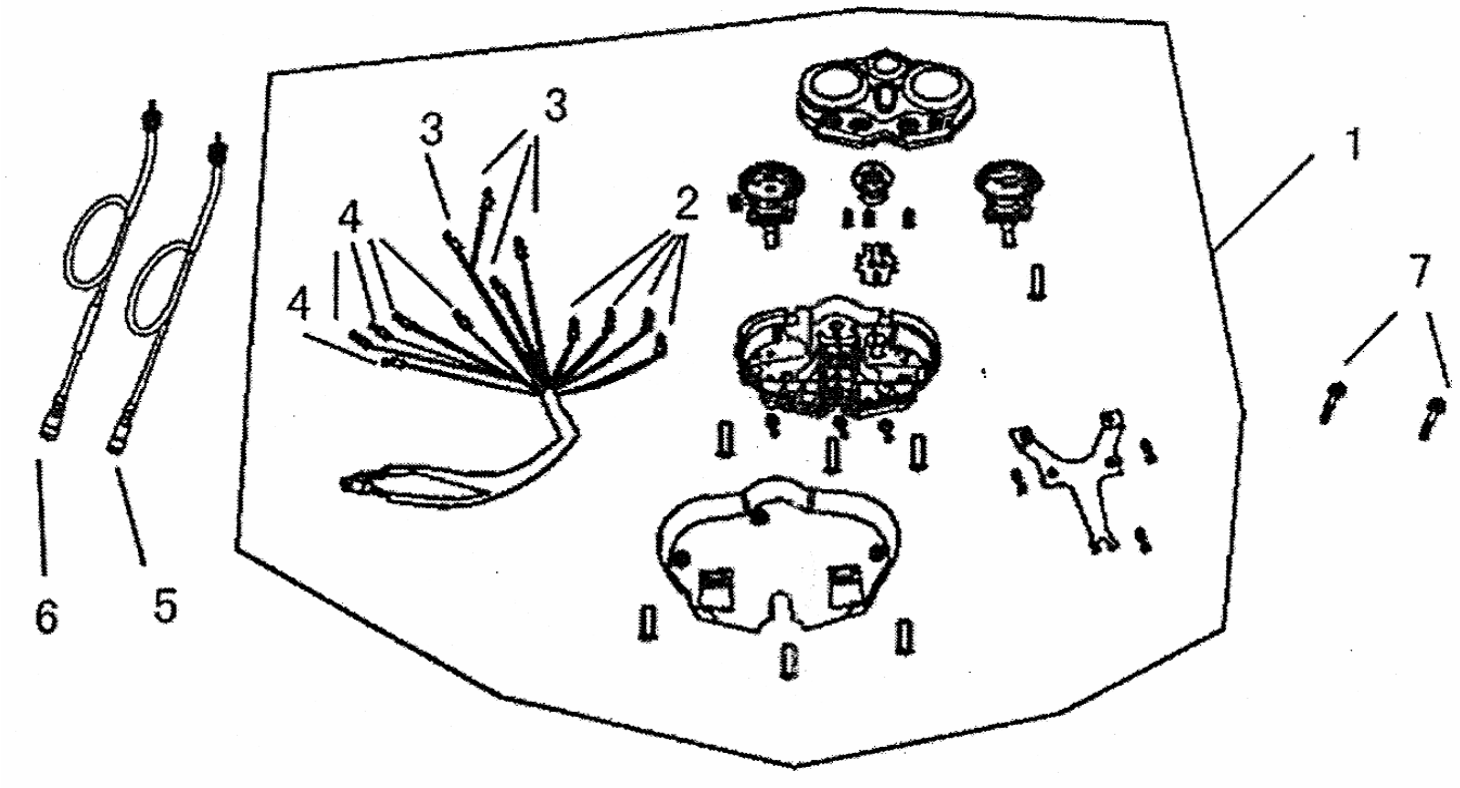


F08 FRONT LIGHT / FOG LIGHT

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	SO3-18130100A	Front left turning light	1	
2	SO3-18130110A	Bulb, Turning light	2	
3	GB845-85	Bolt, ST4.2x13	4	
4	SO3-18130200A	Front R. Turning Foglight	1	
5	SO3-18141500A	Front R. Foglight	1	
6	GB845-85	Bolt, ST4.2x19	4	
7	SO3-18140100A	Bulb, foglight	2	
8	SO3-18141400A	Front left foglight	1	

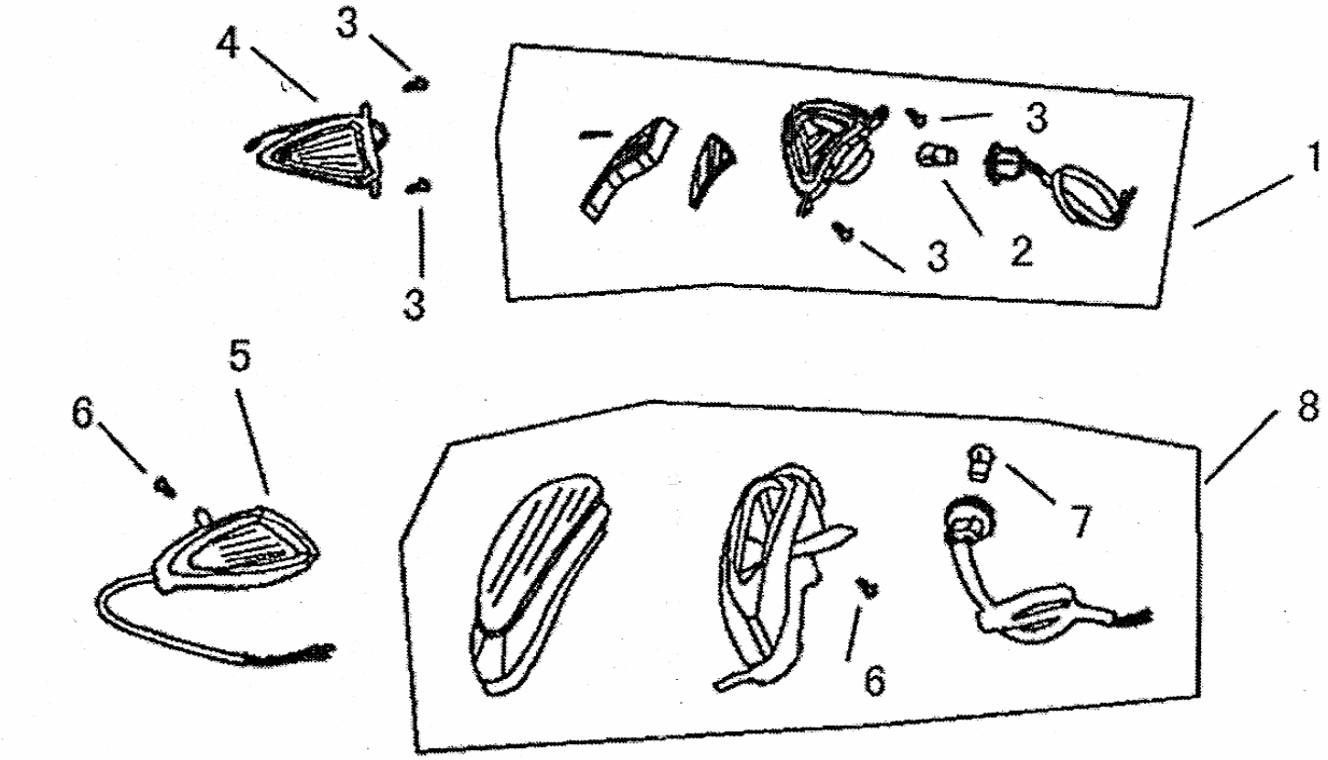


F09 SWITCH HANDLE BAR

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-11030500	Throttle cable	1	
2	B2-11030400	Clutch cable	1	
3	B2-41000500	Belt L=150	4	
4	B2-18250000	R. Backward mirror	1	
5	B2-18240000	L. Backward mirror	1	
6	B2-41000100	Throttle control bar	1	
7	B2-41000001	Left-hand rubber	1	
8	B2-11010100	Right handlebar assy	1	
9	B2-41000003	Dust free rubber	2	
10	B2-11010300	Balance plate assy	2	

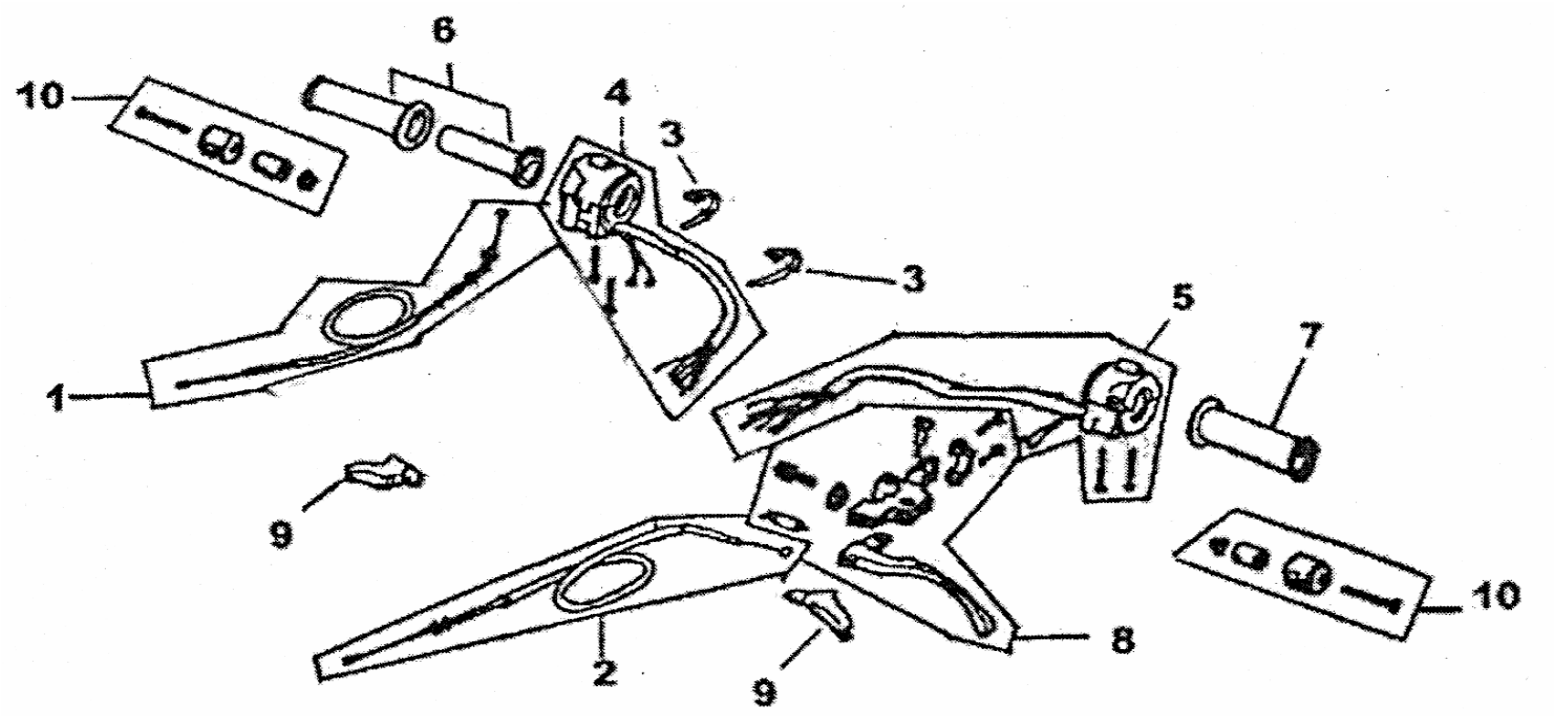


F10 FRONT FENDER

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-15010301A	Front fender	1	
2	SO3-15020003A	Gasket	1	
3	SO3-15010400A	Front fender bracket	1	
4	GB/T9074.1-2002	Bolt M8x16	4	

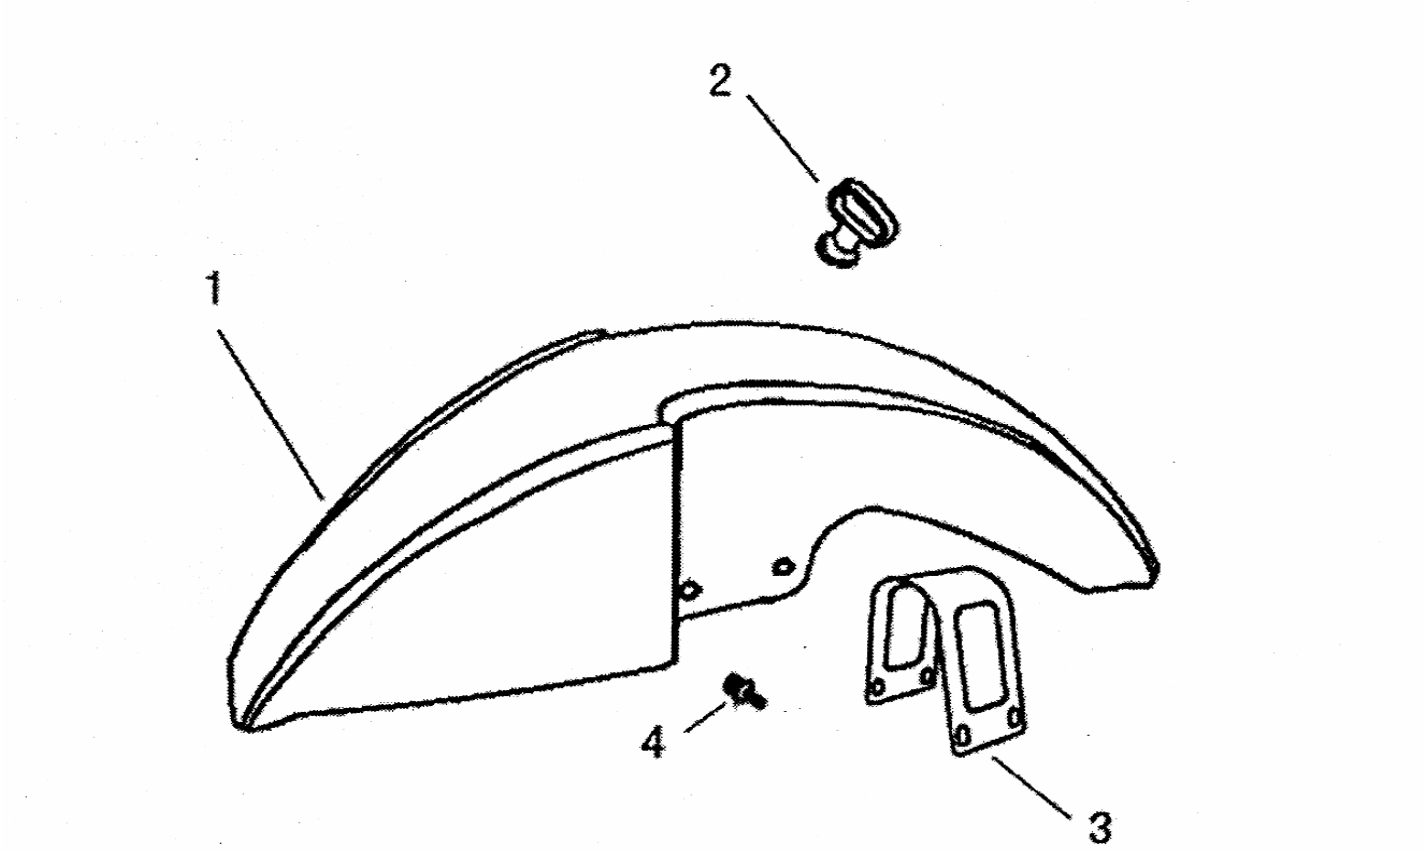


F11 FRONT WHEEL / DISK BRAKE

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-06000200	Tube, fr.wheel	1	
2	B2-06000001	Tyre flap, Fr.wheel	1	
3	B2-06000100	Tyre, Fr. Wheel	1	
4	B2-06000302	Collar, Fr. Wheel	1	
5	B2-06010100	Spoke assy	1	
6	GB/T6187.1-2000	Nut M12x1.25	1	
7	B2-14020400	Sensor, speeder	1	
8	B2-06000301	Axe, front wheel	1	
9	B2-14010001	Disc broke plate	1	
10	GB/T5783-2000	Bolt	4	
11	B2-14010003	Locking plate, Disc brake plate	2	
12	B2-14010000	Front brake assy	1	
13	B2-14013310	Inner brake plate	1	
14	B2-14013320	Oter brakeplate	1	
15	B2-14012214	Clip A brake tube	1	
16	GB5789-86	Bolt M6x12	1	

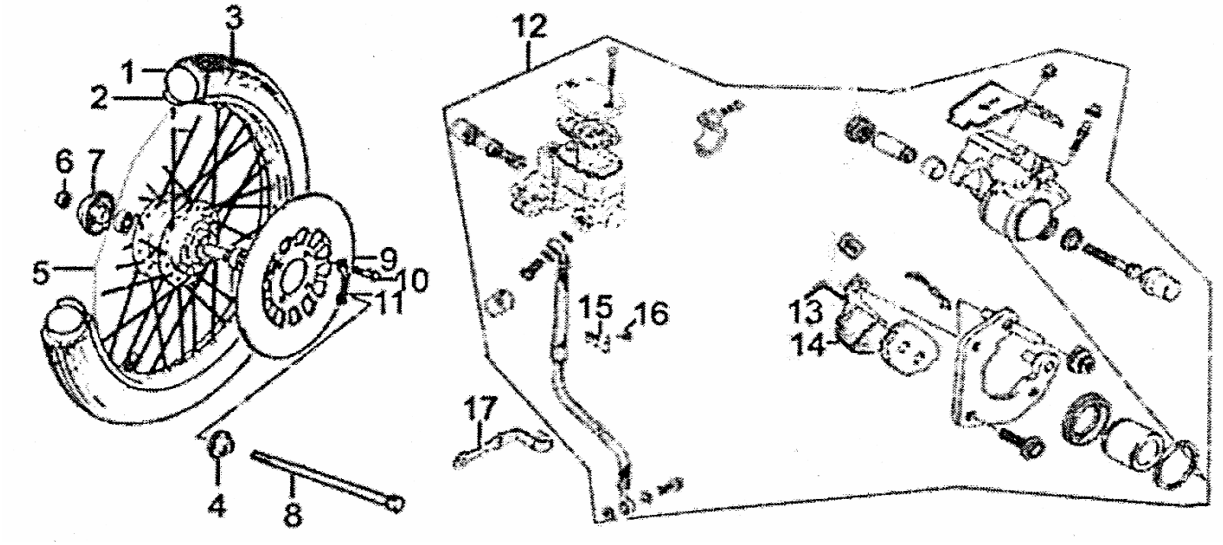


F12 REAR BRAKE

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-34010200	Shoe, Rr.brake	2	
2	B2-36000301	Chain adjuster	1	
3	B2-36000302	Protect plate chain adjuster	1	
4	B2-34010000	Cover assy, Rr brake	1	
5	GB/T96.2-2002	Gasket 8	1	
6	GB/T5783-2000	Bolt M8x16	1	
7	GB/T6187.1-2000	Nut M10x15	1	
8	C3-21010015	Bolt M8x30	1	
9	GB/T6170-2000	Nut M8	2	
10	GB/T91-2000	Pin 2x16	1	
11	B2-41000017	Gasket stopping pole	1	

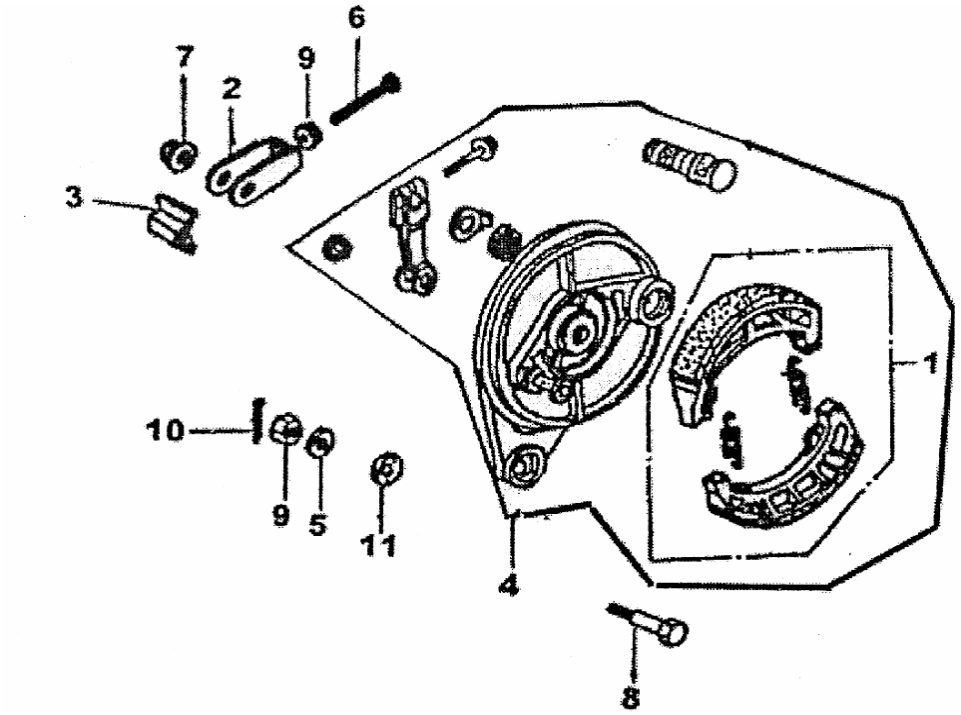


F13 REAR WHEEL

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-36010000	Rr. Wheel assy	1	
2	B2-36000007	Tyre flap Rr. Wheel	1	
3	B2-36000200	Tube, Rr. Wheel	1	
4	B2-36000100	Tyre, Rr. Wheel	1	
5	B1-21010003	Bolt M10x1.25x35	4	
6	B2-36000001	Sprocket	1	
7	GB/T6177.1-2000	Bolt M10x1.25	4	
8	GB894.1-86	Circlip 52	1	
9	B2-36000302	Left collar, Rr. Wheel	1	
10	B2-36000301	Guard, Chain adjuster	1	
11	GB/T6170-2000	Chain adjuster	1	
12	GB/T5783-2000	Nut M8	1	
13	B2-36000502	Bolt M8x60	1	

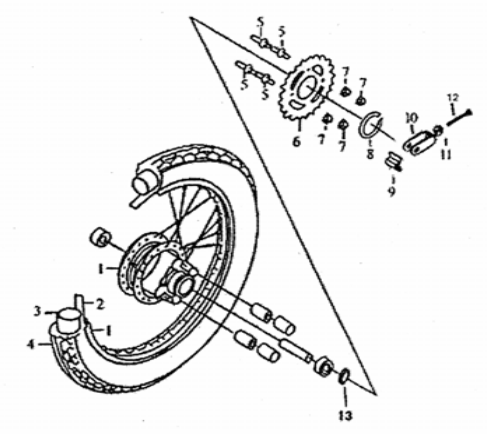


Enlarged figure next page

F13 REAR WHEEL

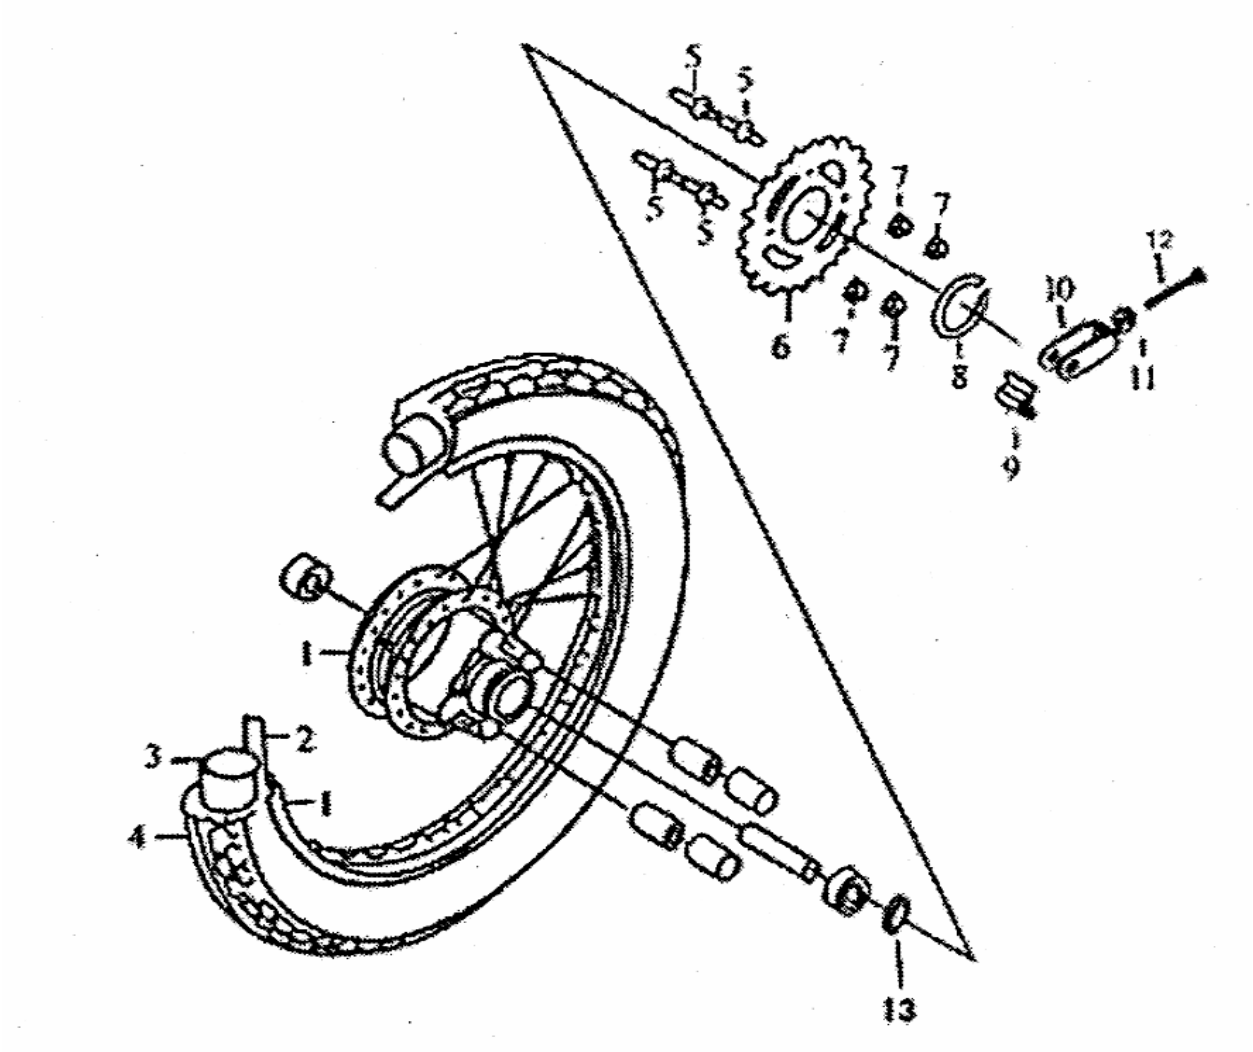


F14 FUEL TANK

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-10020000	Switch, fuel	1	
2	B2-41000200	Oil Tube	1	
3	B2-41000201	Clip oil tube	2	
4	B2-18260000	Sensor, fuel meter	1	
5	GB/T6170-2000	Nut M6	1	
6	GB/T97.1-2002	Gasket 6	4	
7	B2-18260003	Rubber	1	
8	B2-41000006	Collar, front fuel tank	2	
9	B2-16030000	Lock, fuel tank	1	
10	B2-10040000	Fuel tank assy	1	
11	B2-10000001	Collar, Rr tank	1	
12	GB/T5783-2000	Bolt M8x30	1	
13	B2-41000023	Rubber, Rr. Tank	1	
14	B2-41000007	Gasket, Rr. Tank	1	

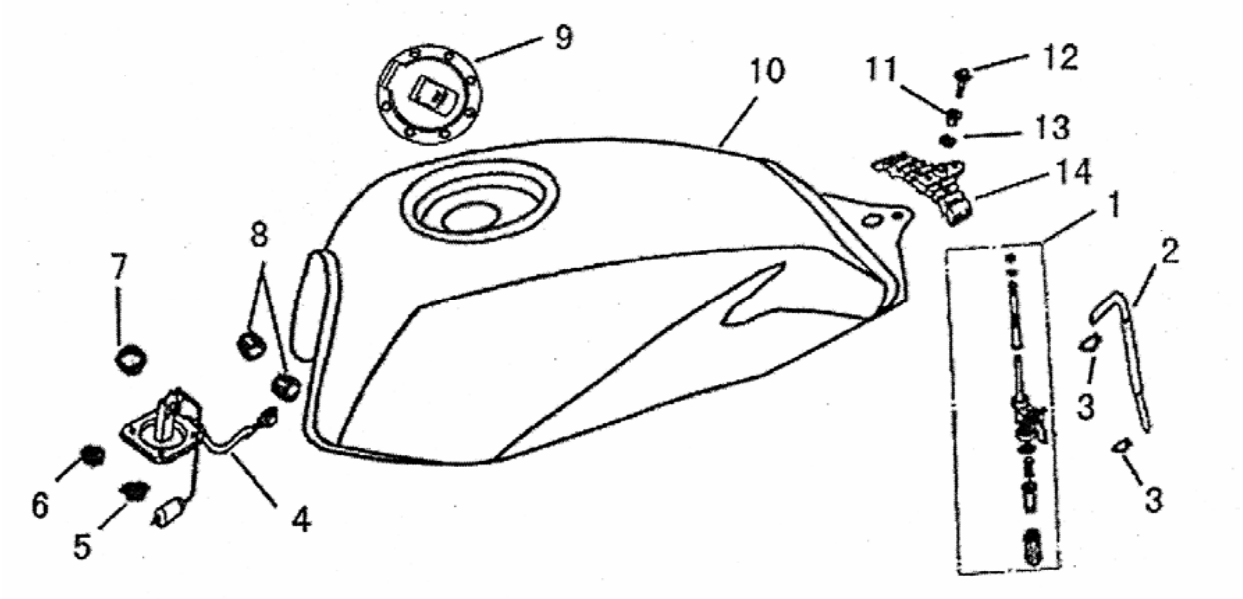


F15 CENTER & SIDE STAND

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	HS-09020000	Center stand assy	1	
2	HS-09000011	Axle, center stand	1	
3	HS-09000012	Hook, center stand	1	
4	HS-41000019	Cushion, center stand	1	
5	HS-09040000	Side stand	1	
6	B1-21010001	Bolt M10x1.5x35	1	
7	GB/T6170-2000	Nut M10x15	1	
8	GB/T91-2000	Pin 2.5x26	1	
9	HS-40000001	Spring, center stand	1	
10	HS-40000002	Spring, side stand	1	
11	B2-21030002	Washer 17	1	

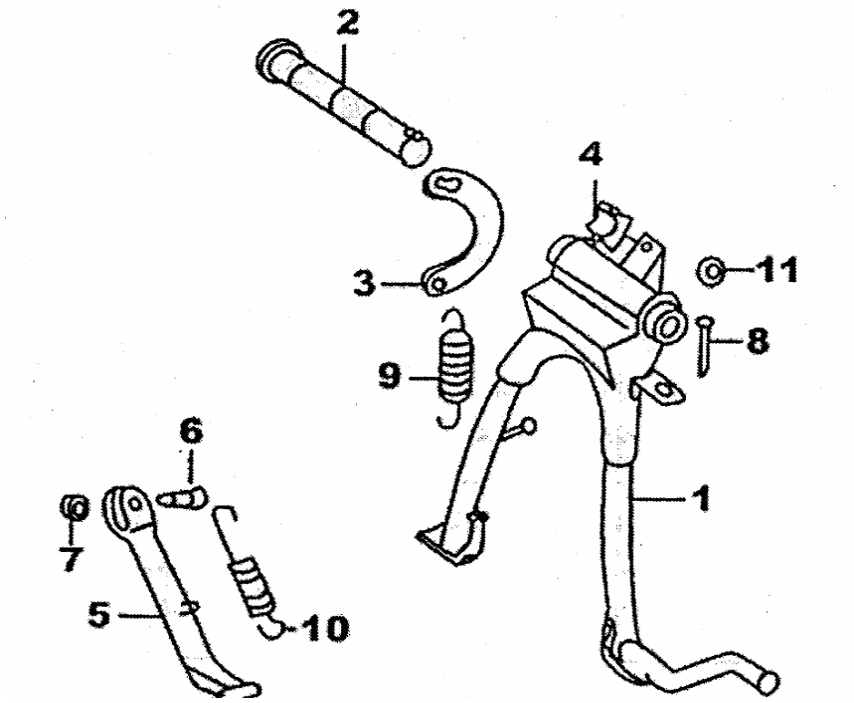


F16 PEDAL / REAR SHOCK ABSORBER

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-09030100	Front Pedal assy	1	
2	B2-41000002	Rubber, front pedal	2	
3	GB/T9074.1-88	Bolt M8x20	4	
4	B2-38010000	Left Rear pedal assy	2	
5	B2-21010017	Right Rear pedal assy	2	
6	GB/T16674-96	Rear shock absorber	2	
7	GB/T96-2002	Bolt M8x20	2	
8	GB/T97.1-2002	Washer 8	2	
9	GB/T97.1-2002	Washer 10	2	
10	GB/61674-1996	Bolt M10x1.25x35	2	

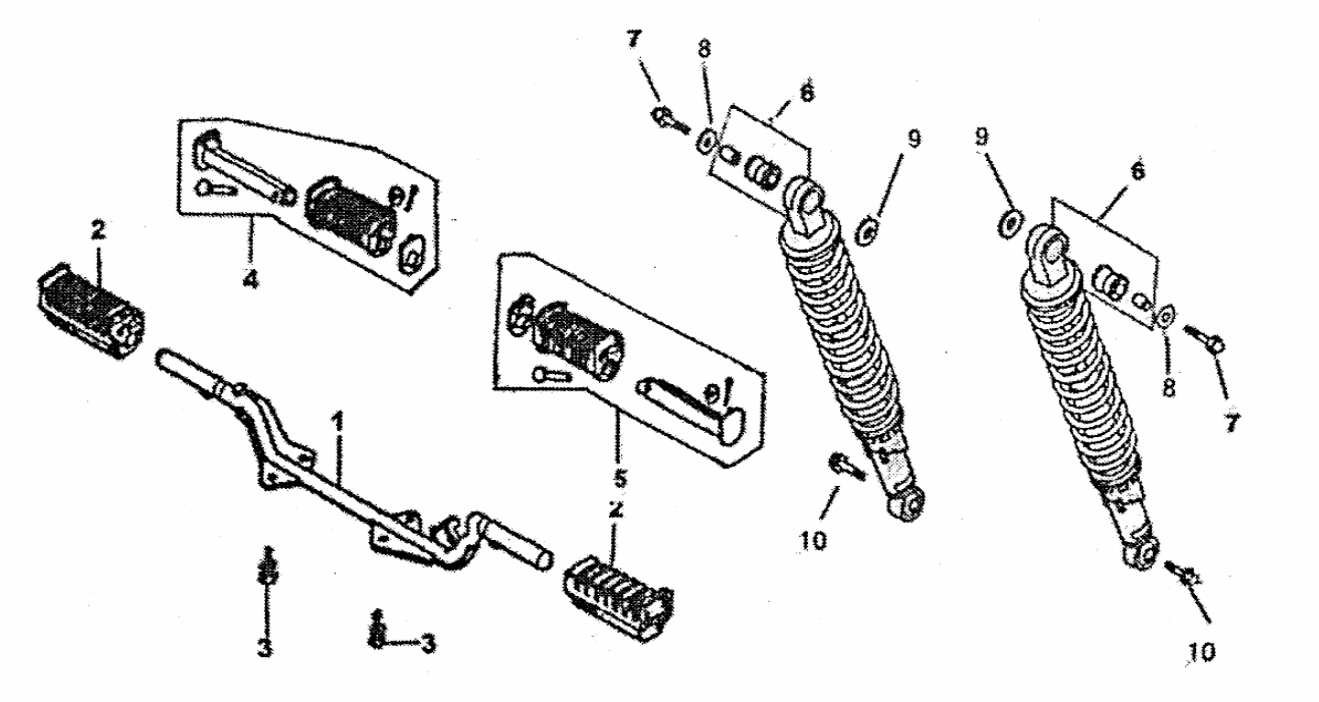


F17 REAR FORK / CHAIN CASE

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-36020100	Chain case	1	
2	B2-36000400	Chain (428Hx106)	1	
3	B2-36000003	Front collar chain case	1	
4	B2-39010000	Rear Fork	1	
5	B2-41000027	Rubber chain	1	
6	B2-39010401	Axle, Rear fork	1	
7	GB/T6187.1-2000	Bolt M12x1.25	1	
8	B2-36000004	Rear collar, chain case	1	
9	GB/T97.1-2002	Washer 12	1	
10	GB/T5783-2000	Bolt M6x12	1	
11	B1-21010002	Bolt M8x25	1	
12	B2-34020200	Stopper, Rear brake	1	
13	GB/T97.1-2002	Washer 8	1	
14	GB/T6170-2000	Nut M8	1	
15	GB/T91-2000	Pin 2x16	1	

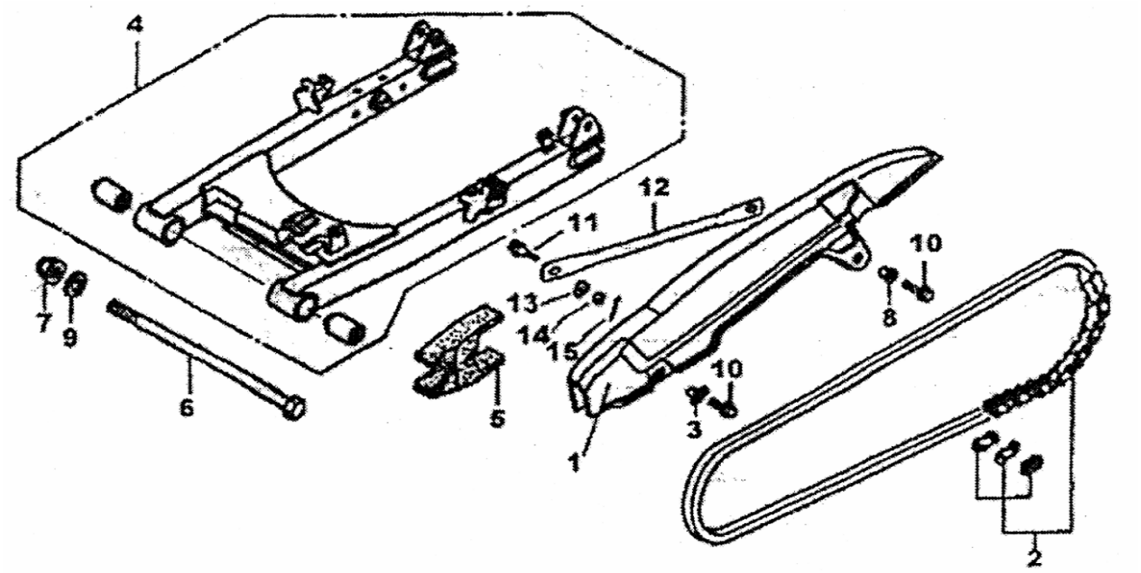


F18 KICK STARTER / GEAR SHIFT

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	YA-60000100	Gearshift assy	1	
2	YA-60000200	Arm assy, Kick starter	1	
3	B2-18320300	Aswitch, rear brake	1	
4	B2-40000004	Swith spring, rear brake	1	
5	B2-34000100	Rod assy, rear brake	1	
6	B2-34020100	Pedal, rear brake	1	
7	B2-40000003	Spring, rear break	1	
8	GB/T5783-2000	Bolt M6x20	1	
9	GB/T5783-2000	BoltM8x40	1	
10	GB/T97.1-2002	Washer	1	
11	GB/T91-2000	Pin 2x16	1	

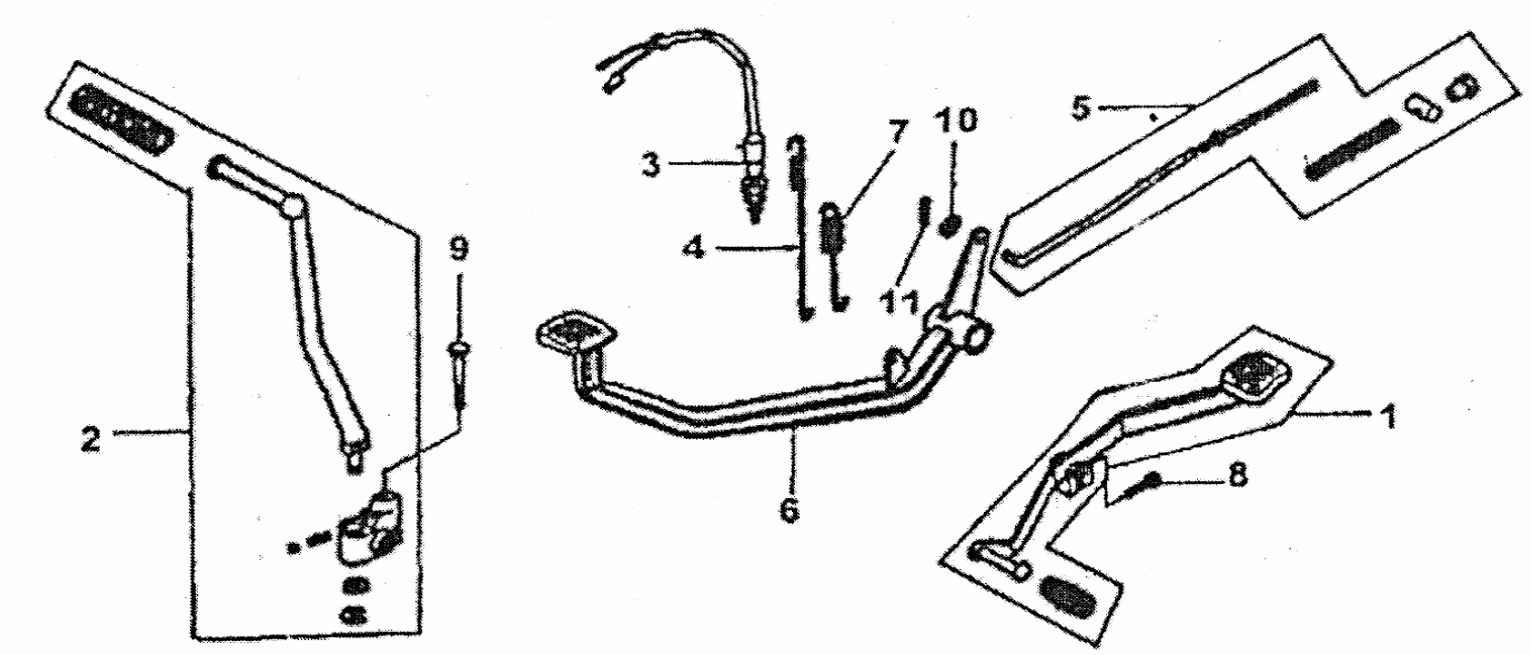


F19 ELECTRICAL

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	YF-60310101	Rubber, CDI	1	
2	YF-60310100	CDI	1	
3	YF-60310200	Coil Ignition	1	
4	YF-60310300	Rectifier	1	
5	B2-18000100	Diode	1	
6	B2-18310000	Wire harness assy	1	
7	B2-18000200	Winker	1	
8	B2-18000201	Rubber, winker	1	
9	GB/T818-2000	Bolt M5x20	1	
10	GB/T818-2000	Bolt M6x16	2	
11	B2-18310100	Fuse 15A	1	
12	B2-18310200	Fuse box	1	
13	B2-18330000	Subsidiary wire	1	

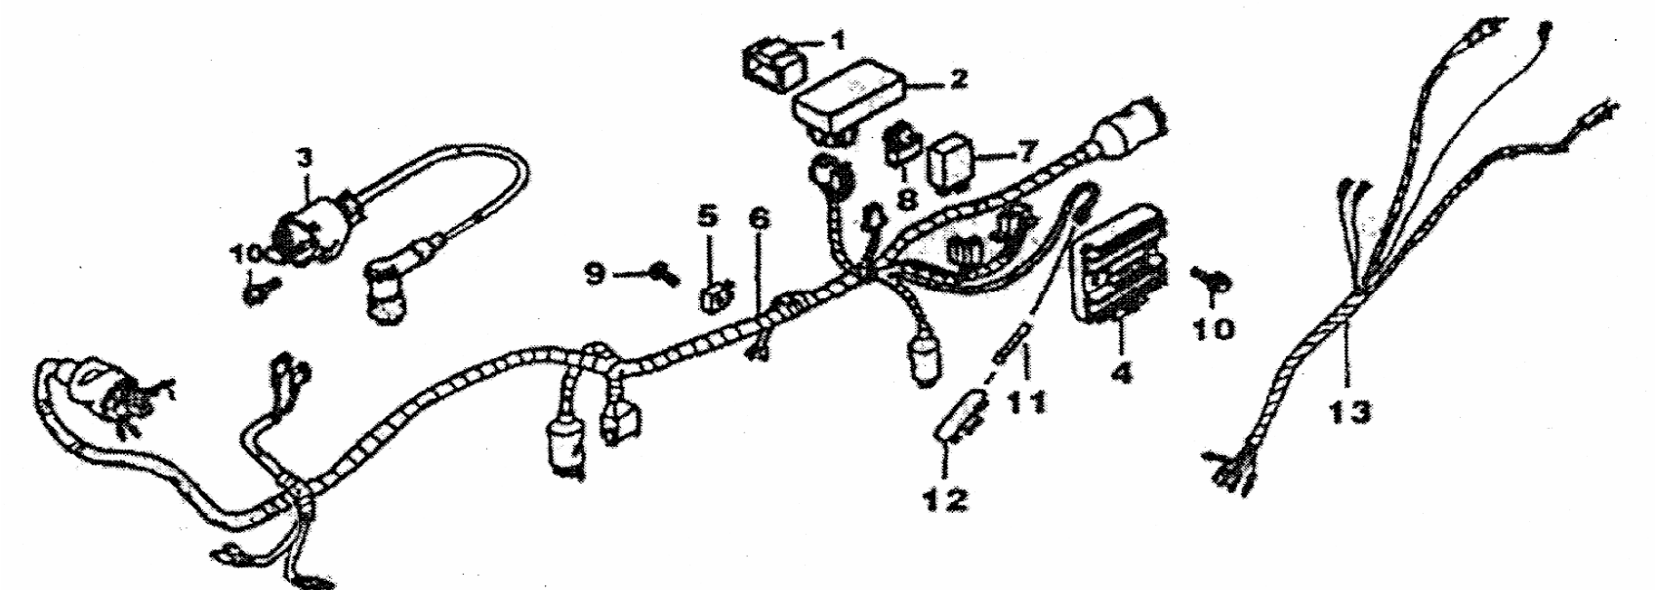


F20 BATTERY / AIR CLEANER

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-18001701	Battety band	1	
2	B2-18220000	Battery (12V 7Ah)	1	
3	B2-18001700	Battery bracket	1	
4	B2-18220001	Air Tube battery	1	
5	B2-18320100	Wire +	1	
6	YF-60310401	Upper rubber, start relay	1	
7	GB/T6170-2000	Nut M6	2	
8	B2-18320000	Ground wire	1	
9	YF-60310400	Start relay	1	
10	YF-60310402	Lower rubber, start relay	1	
11	GB/T818-2000	Bolt M6x16	3	
12	GB/T97.1-2002	Washer 6	3	
13	GB/T96.2-2002	Gasket 6	2	
14	GB/T6170-2000	Nut 6	2	
15	B2-78010000	Air cleaner assy	1	

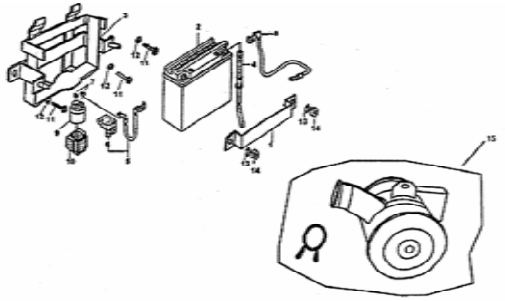


Enlarged figure next page

F20 BATTERY / AIR CLEANER

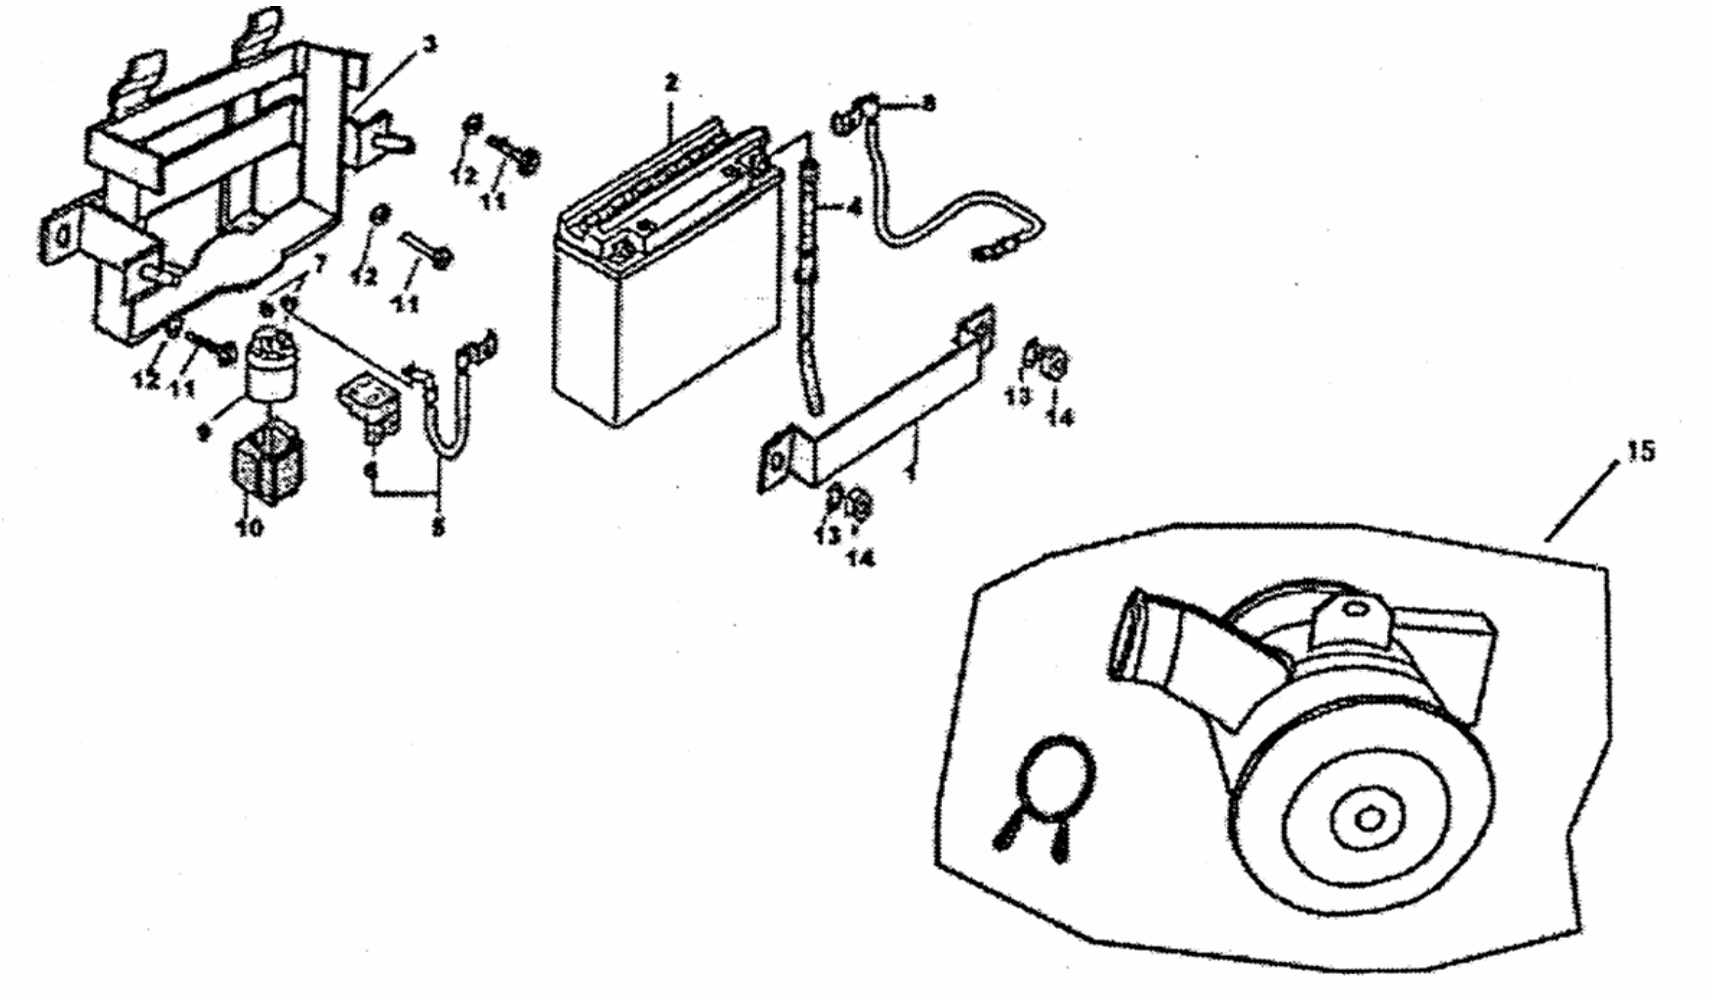


F21 SIDE COVER / MUFFLER

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-16080003	Clip, Side cover lock	2	
2	B2-16080002	Lock seat, R.side cover	1	
3	B2-16080001	Lock seat, L.side cover	1	
4	B2-22000200	Right side cover	1	
5	B2-41000009	Upper gasket, side cover	4	
6	B2-16080000	Lock, side cover	2	
7	B2-41000054	Gasket, side cover lock	2	
8	GB/T818-2000	Bolt M5x16	4	
9	B2-22000100	Left side cover	1	
10	B2-22040001	Clip, Side cover	4	
11	GB/T6177.1-2000	Nut M6	2	
12	B2-79000200	Gasket, muffler	1	
13	B2-79000001	Clip, muffler	2	
14	B2-79000002	Flange muffler	1	
15	B2-79000006	Syphon muffler	1	
16	GB/T70.1-2000	Bolt M8x25	2	
17	GB/T70.1-2000	Bolt M8x10	1	
18	B2-79010021	Gasket exhaust pipe	1	
19	B2-41000022	Rubber, muffler	2	
20	B2-79000500	Muffler	1	
21	B2-79001300	Clip, exhoaust pipe	2	

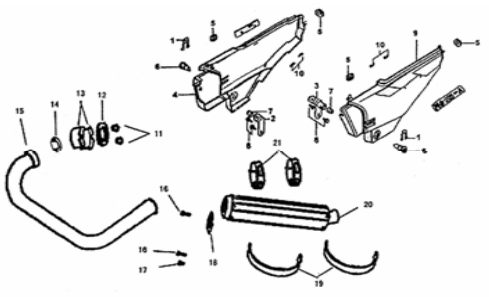


Enlarged figure next page

F21 SIDE COVER / MUFFLER

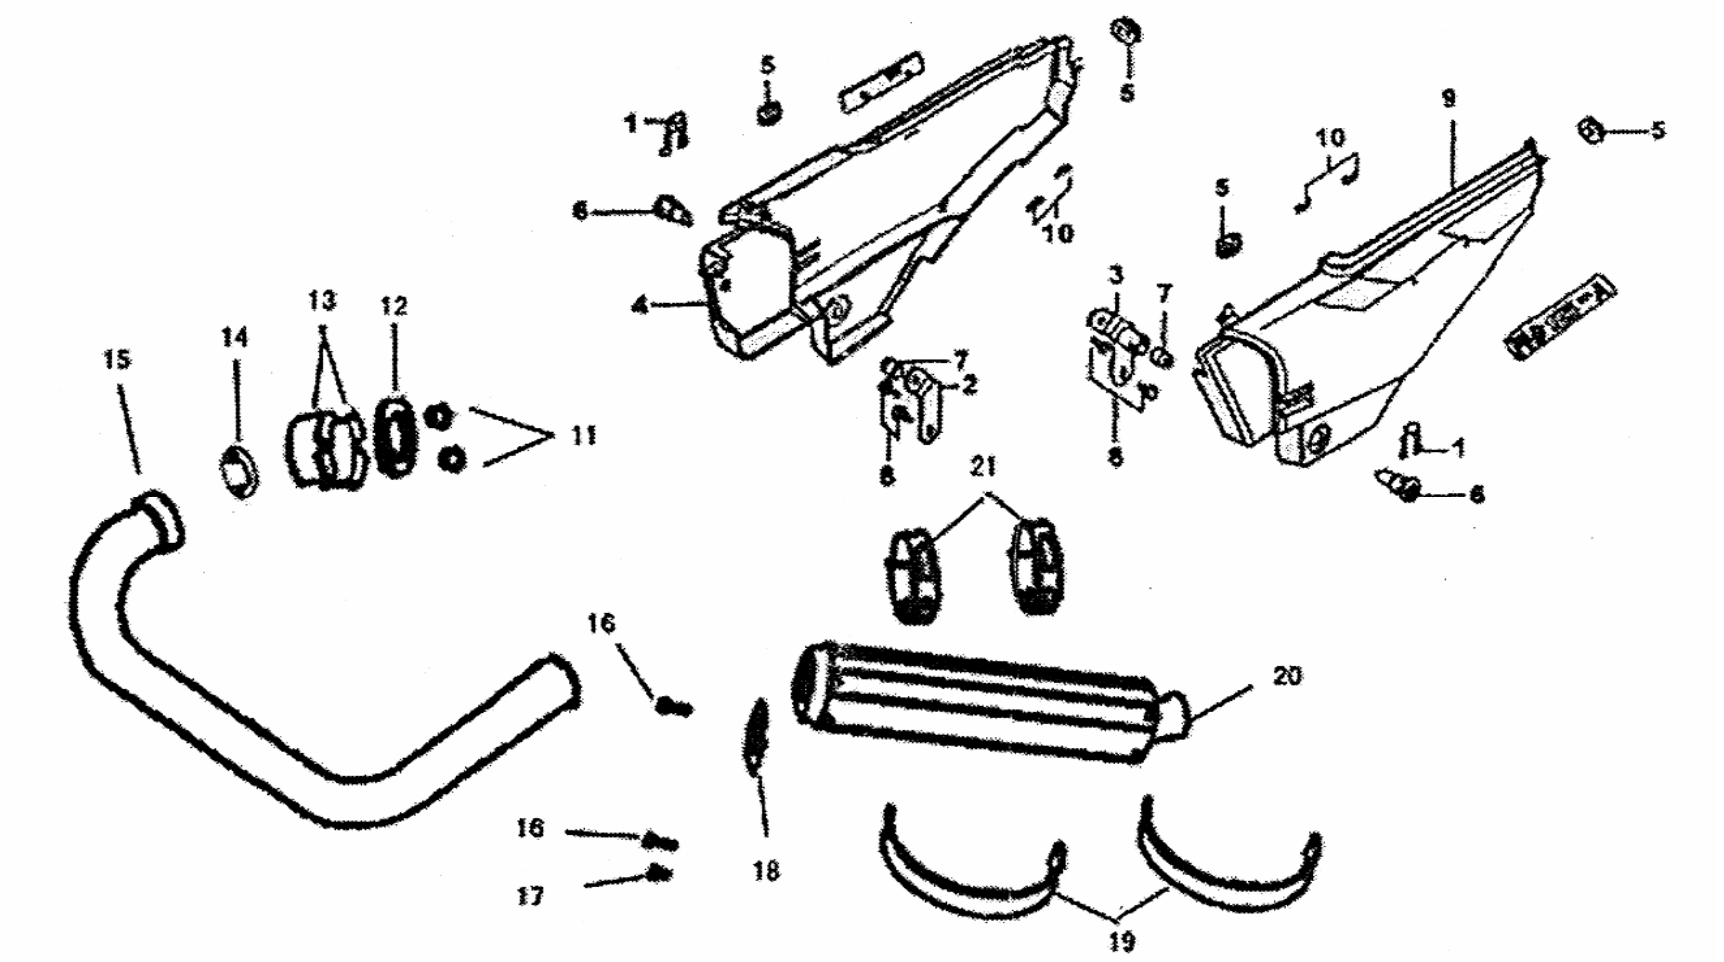


F22 REAR FENDER / LUGGAGE

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-0905000	Luggage assy	1	
2	B2-4102013	R.Rubber, luggage bracket	1	
3	B2-41020013	L.Rubber, luggage bracket	1	
4	B2-35000006	Collar, Rear fender	2	
5	B2-35000100	Rear part, Rr.fender	1	
6	B2-35000200	Front Part, Rr.Fender	1	
7	B2-35000005	Clip, Rr.fender	1	
8	B2-35000002	Rr. Fender	1	
9	B2-35000008	Fixing plater, Rr.fender	1	
10	B2-35000004	Side collar. Rr.fender	2	
11	B2-35000003	Upper collar, Rr.fender	1	
12	GB/T818-2000	Bolt M5x12	2	
13	GB/T818-2000	Bolt M6x40	2	
14	GB/T6170-2000	Nut M8	2	
15	GB/T5783-2000	Bolt M6x16	4	
16	GB/T5783-2000	Bolt M6x20	1	
17	GB/T5783-2000	Bolt M6x28	2	
18	GB/T97.1-2002	Washer 6	3	
19	GB/T97.1-2002	Washer 8	2	

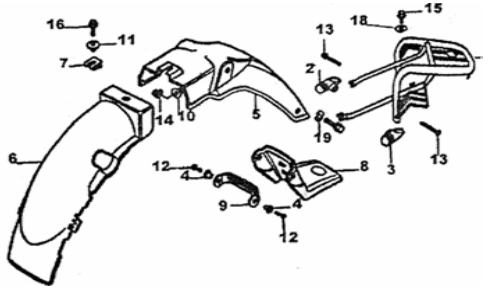


Enlarged figure next page

F22 REAR FENDER / LUGGAGE

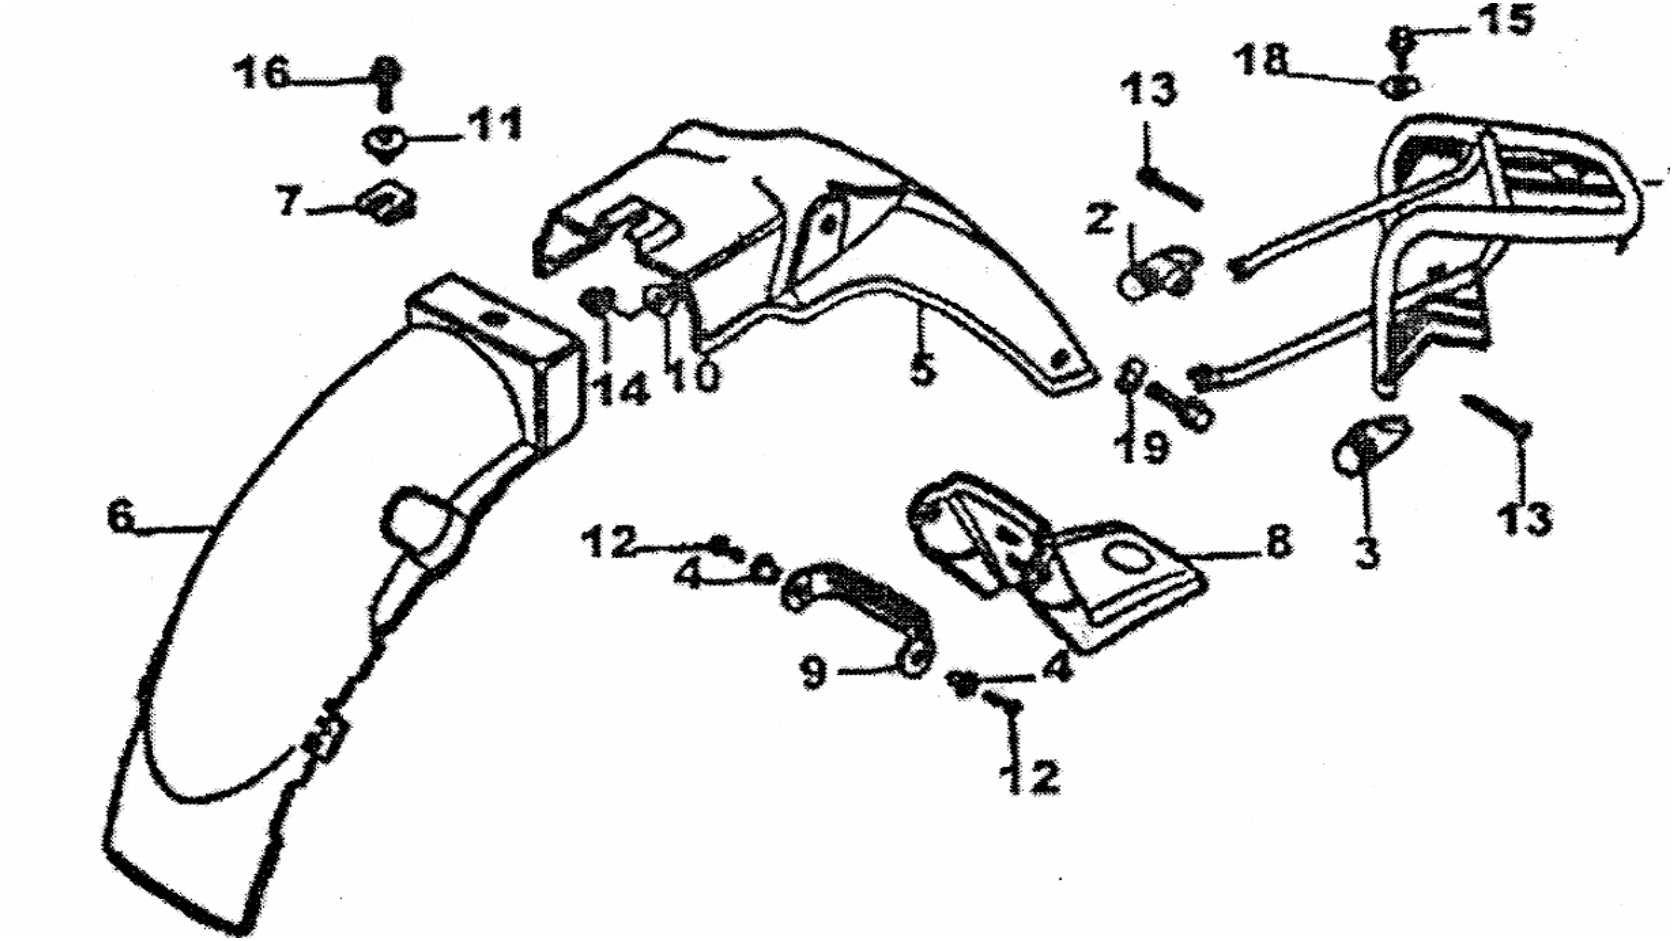


F23 TAIL LIGHT / REAR TURN SIGNAL

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-18120000	Tail light assy	1	
2	B2-18120100	Bulb tail light (12V 8/21w)	2	
3	B2-18120410	Bracket, tail light	1	
4	GB/T5783-2000	Bolt M6x16	2	
5	GB/T96.2-2002	Washer 6	2	
6	B2-18130400	Rear R.turning light	1	
7	B2-18130300	Rear L. turning light	1	
8	B2-18130110	Bulb, turning light	2	

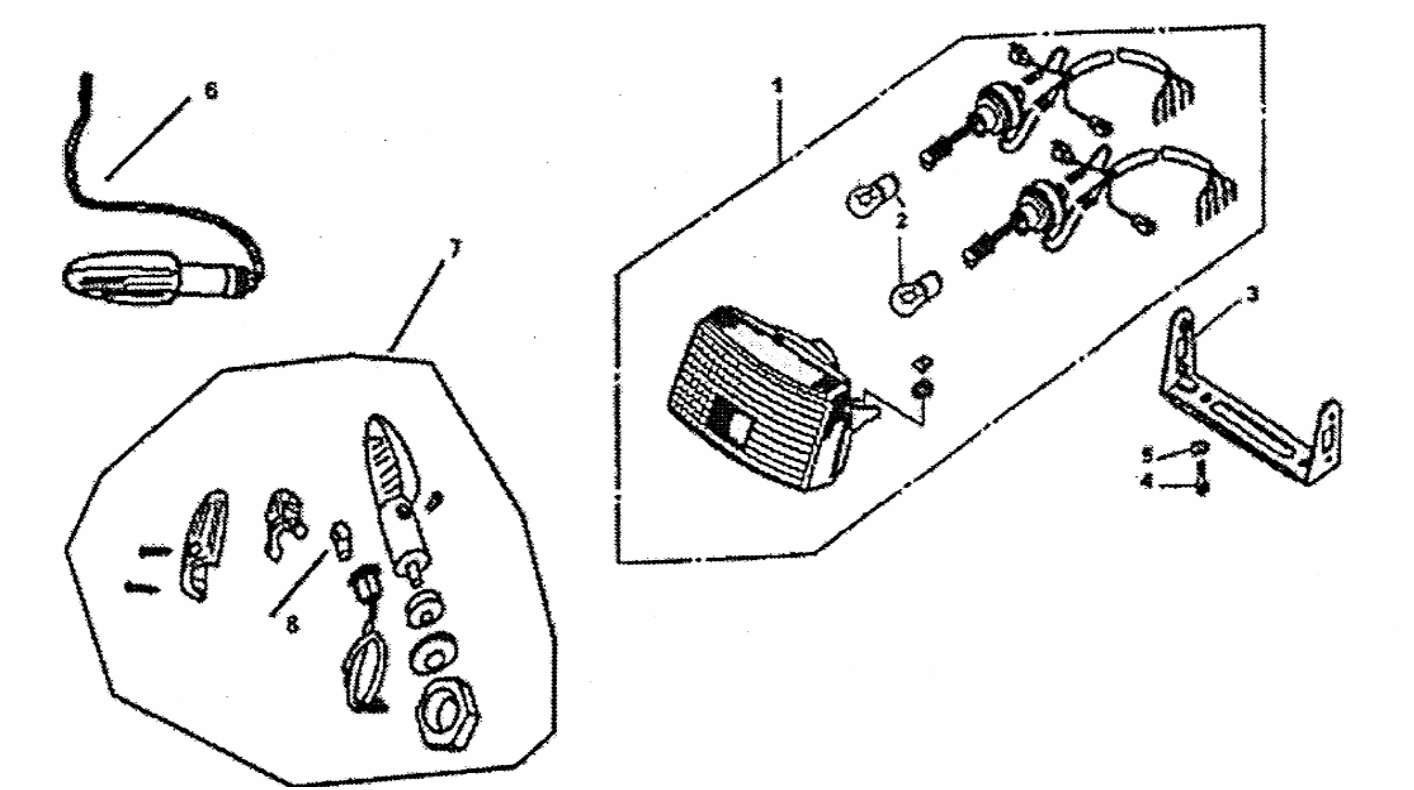


F24 SEAT / TAIL COVER

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B2-22010600	Aluminium strip	1	
2	B2-41000052	Clip, Rr. Strip	2	
3	B2-13010000	Seat assy	1	
4	B2-22010401	Tail cover	1	
5	B2-41000053	Plate, Rr. Strip	2	
6	GB845-85	Bolt ST4.2x19	6	
7	GB/T97.1-2002	Washer 8	4	
8	GB/T5783-2000	Bolt M8x16	2	
9	GB/T5783-2000	Bolt M8x16	2	

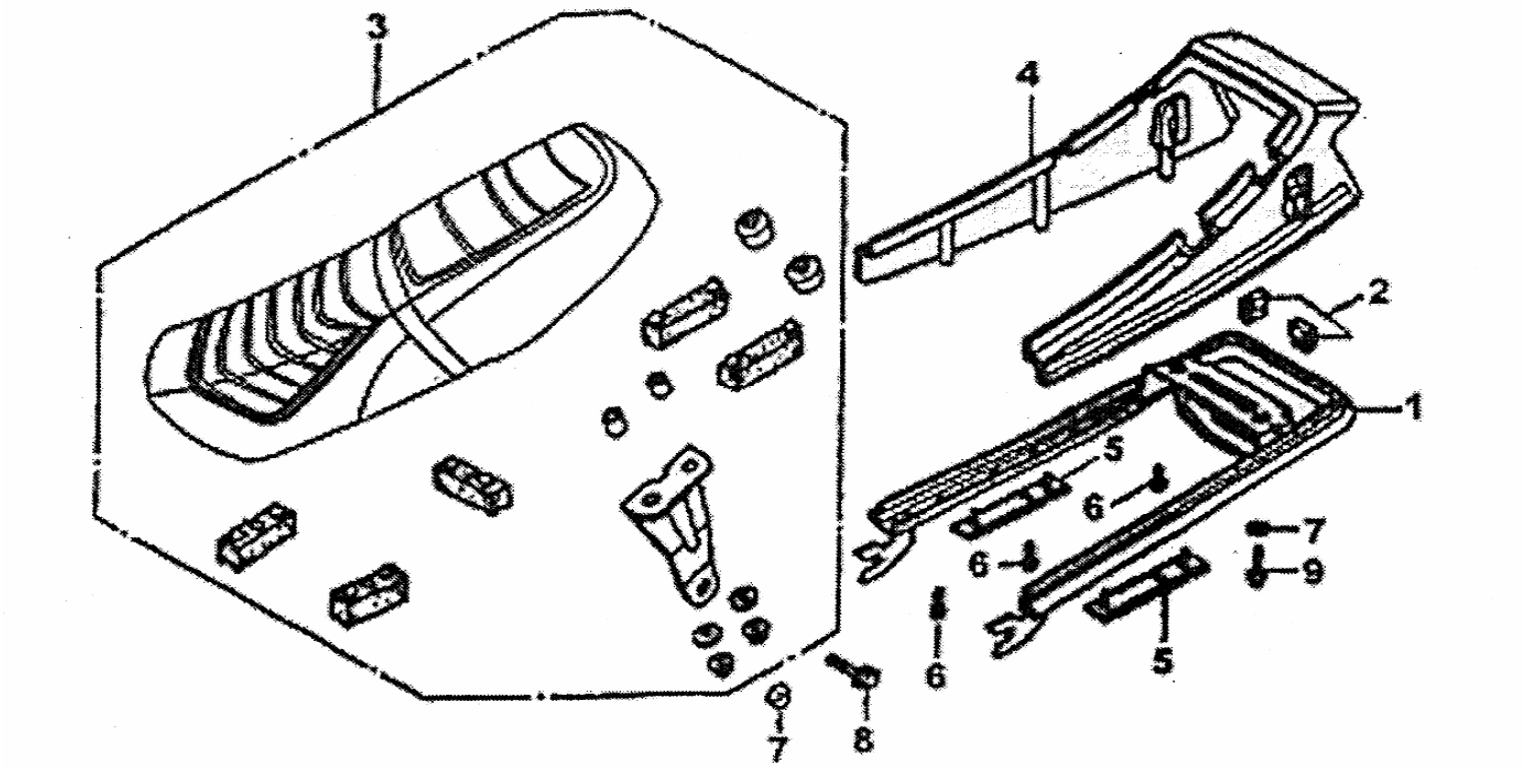

F25 PROTECTOR BAR / TOOL SET

REF	PART NUMBER	DESCRIPTION	QTY	2005
1	B1-51010000	Tool set	1	
2	B2-31010000	Front protect bar	1	

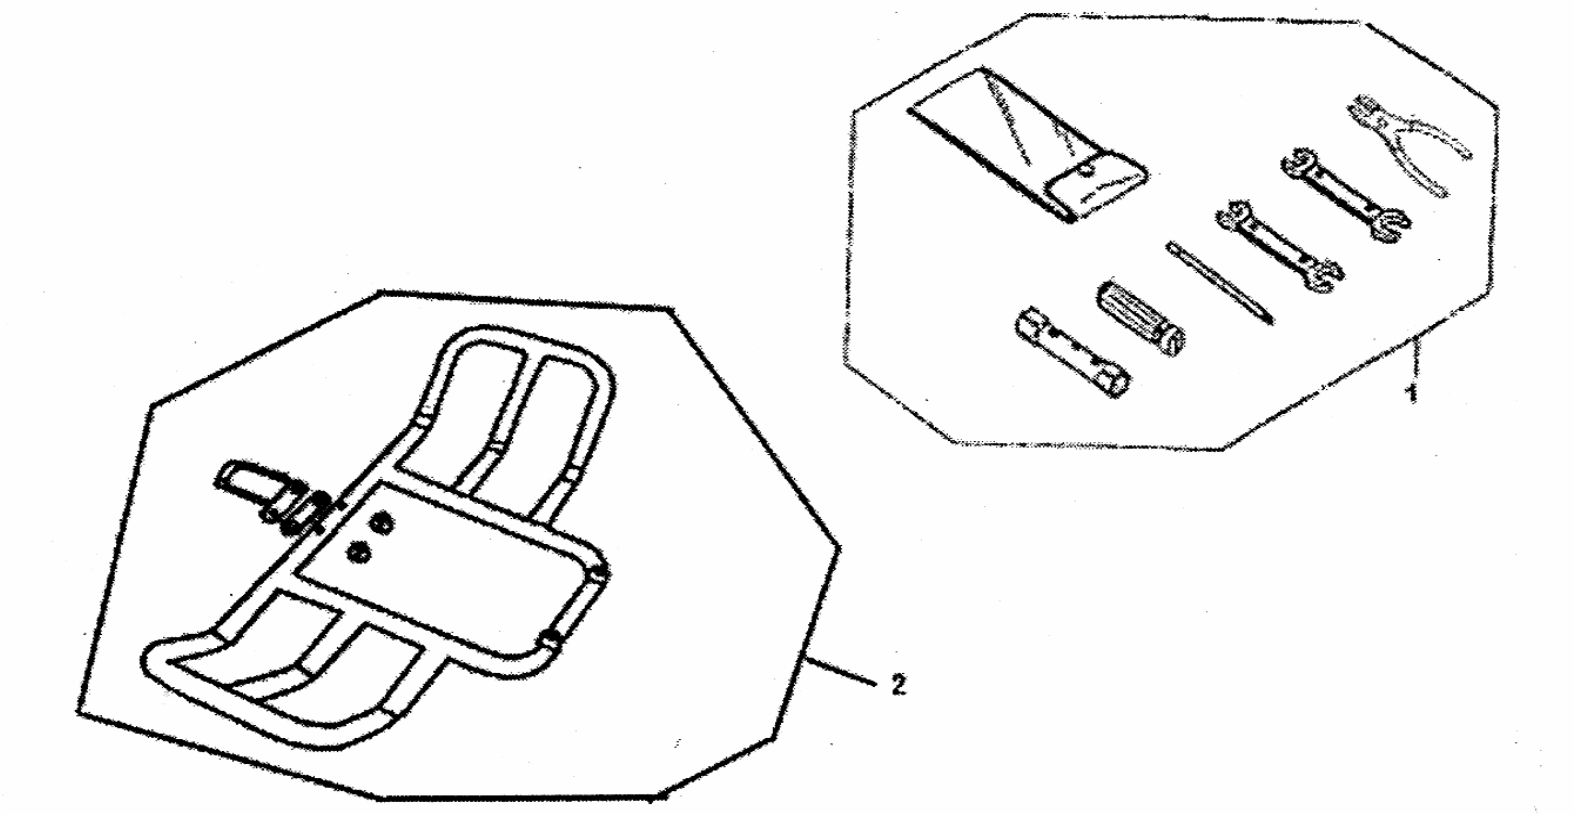



www.umamerica.com

© 2004 UNITED MOTORS OF AMERICA, INC.