2019 HARLEY-DAVIDSON® PARTS CATALOG: TOURING MODELS

Alphabetical List
Parts
Hardware List
New Parts List
Numerical Index
Component Types and Introduction Dates
Common Service Parts

READER'S COMMENTS

The Harley-Davidson Service Communications Department maintains a continuous effort to improve the quality and usefulness of its publications. To do this effectively, we need user feedback - your critical evaluation of this manual.

Please comment on the completeness, accuracy, organization, usability, and readability of this manual.

Please list the page, item, and part number(s) of any errors you find in this manual.

Please tell us how we can improve this manual.

Name	Document

		94000689
Occupation		Dealership
Street		Department
City	State	Zip

2019 HARLEY-DAVIDSON® PARTS CATALOG: TOURING MODELS - Publication Template Name

- Return this form to:
  Harley-Davidson Motor Company
  Department 625 Service Communications
  P.O. Box 653
  Milwaukee WI 53201 USA

PLEASE ADD ANY OTHER COMMENTS HERE

GENERAL INFORMATION

THIS IS NOT AN ASSEMBLY MANUAL AND SHOULD NOT BE USED AS SUCH.

About this Manual

This Parts Catalog has been prepared to make it easier for you to order parts for your motorcycles. The numbers shown in the illustrations correspond to the numbers in the "INDEX NO." column in the parts lists. Consult the illustrations when ordering parts to make sure that you receive all the required parts. The number in parentheses following the part description is the quantity needed for complete assembly. If there is no number in parentheses, only one is used. Prices of parts in this catalog are published separately.

When ordering parts, the following instructions should be followed carefully.

- Make sure to specify the correct part number for each item. The part numbers appear under the "PART NO." column in the parts lists.
- Orders may be placed via your computer for all parts. Review your system documentation on placing orders electronically. All non-warranty replacement crankcase orders require return of the complete left crankcase half with vehicle identification number (VIN). All non-warranty replacement frame orders require return of the steering neck with vehicle identification number (VIN). Non-compliance will result in a fine. See non-warranty frame and crankcase policy or contact Dealer Services.
- The sale or use of these parts or accessories does not grant the purchaser a license or other right under any Harley-Davidson patent.
- For all 2008 and later painted parts, refer to the Service Section of h-dnet.com which features a listing of painted part numbers, except CVO (Custom Vehicle Operations) models

which are located in their own respective catalogs.

- All parts that were added for the new model year will have the entire line shaded on the parts list page. This can be used to identify any new parts that are unique to a specific model, and help distinguish new and previous model year parts.
- Parts marked **"RESTRICTED SALE PART"** are limited edition items and can only be ordered as direct replacements.
- Orientation symbols are used when the illustration is not in the standard "Right-Front" orientation. The symbol is a motorcycle with an arrow in the front indicating the direction of view. The symbol is at the bottom left or right side of the illustration page.
- To request a missing or loose part, simply submit a Return Material Authorization (RMA) claim on h-dnet.com with code "T-part not included with vehicle" for all vehicle missing parts claims. Then place an order for the missing item on your next Parts and Accessories order. Upon filing the RMA claim, your dealership will be credited for the dealer net cost of the part. The Vehicle Identification Number must be included on the RMA claim in order for you to receive credit. This process is to be used for vehicles manufactured at all plants.

To the best knowledge of Harley-Davidson Motor Company, the material contained herein is accurate as of the date this publication was approved for printing. Harley-Davidson Motor Company reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

©2018 H-D.

GENERAL INFORMATION

LOOSE PARTS

The Loose Parts section is located at the back of this parts catalog. This section lists the parts which are shipped unfastened with the vehicles covered in this catalog.

HARDWARE LIST

The Hardware List is located at the back of this parts catalog. This section contains the information for each piece of hardware found in each parts list.

NEW PARTS LIST

The New Parts List is located at the back of this parts catalog. This list serves as a summary of new parts.

NUMERICAL INDEX

The Numerical Index is located at the back of this parts catalog. This index includes all part numbers used in this catalog and the page numbers of where they can be found.

COMPONENT TYPES AND INTRODUCTION DATES

The Component Types and Introduction Dates section is located at the back of this parts catalog. This section contains a list of component part numbers and year of introduction.

COMMON SERVICE PARTS

The Common Service Parts section is located at the back of this parts catalog. This section contains the most commonly ordered parts for service on vehicles covered in this catalog. These parts are ordered through the normal ordering process.

SIP (SERVICE INFORMATION PORTAL)

For the latest updates to these manuals, see the Service Information Portal.

VEHICLE IDENTIFICATION NUMBER

See Figure 1. A unique 17-digit serial, or vehicle identification number (VIN), is assigned to each motorcycle. For a description of each digit in the vehicle identification number (VIN), refer to Table 1.

For all models except V-Rod the full 17-digit serial, or vehicle identification number (VIN), is stamped on the right side of the frame backbone at the rear of the steering head. The vehicle identification number (VIN) is also printed on a label on the right front downtube. An abbreviated vehicle identification number (VIN) is stamped on the left side crankcase between the front and rear cylinders.

For V-Rod models only the full 17-digit serial, or vehicle identification number (VIN), is stamped on the right side of the steering head. The vehicle identification number (VIN) is also printed on a label on the left frame tube above the front engine cylinder. An abbreviated vehicle identification number (VIN) is stamped on the left side crankcase below the rear cylinder head.

Always give the full 17-digit vehicle identification number (VIN) when ordering parts or making any inquiry about your motorcycle.

2019 TOURING MODELS

VIN Model Codes

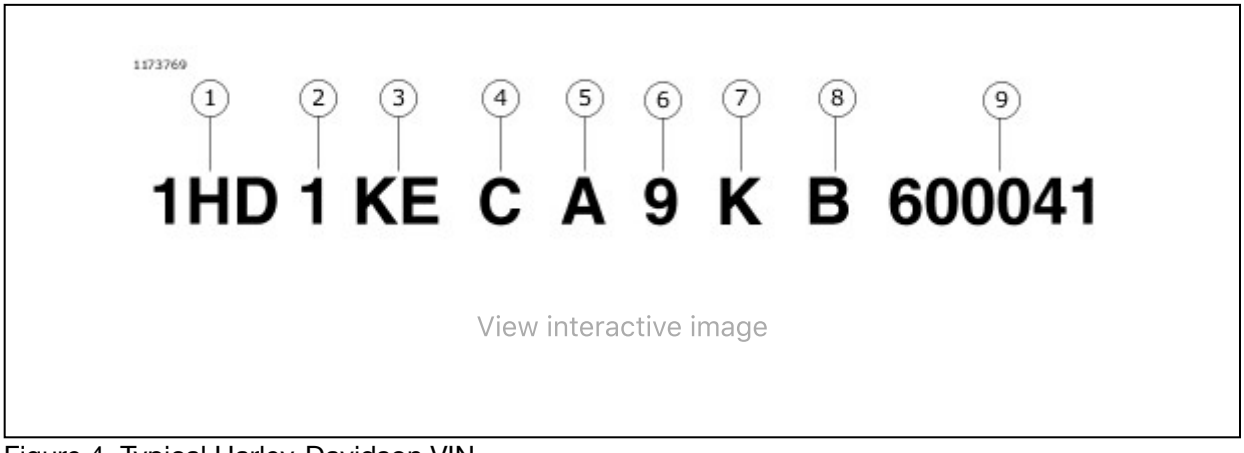


Figure 4. Typical Harley-Davidson VIN

Table 1. Harley-Davidson VIN Breakdown: 2019 Touring Models

POSITION	DESCRIPTION	POSSIBLE VALUES

POSITION	DESCRIPTION	POSSIBLE VALUES	
1	World manufacturer identifier	1HD=Originally manufactured in the United States 5HD=Originally manufactured in the United States for sale outside of the United States 932=Originally manufactured in Brazil MEG=Originally manufactured in India MLY=Originally manufactured in Thailand	
2	Motorcycle type	1=Heavyweight motorcycle (901 cm^3 or larger)	
3	Model	See VIN model table	
4	Engine type	C=Milwaukee-Eight™ 107 Engine, 1745 cm^3 F=Twin-Cooled™ Milwaukee-Eight™ 114 Engine, 1868 cm^3 P=Milwaukee-Eight™ 114 Engine, 1868 cm^3	
5	Calibration/configuration, introduction	**Normal Introduction** 1=Domestic (DOM) 3=California (CAL) A=Canada (CAN) C=HDI E=Japan (JPN) G=Australia (AUS) J=Brazil (BRZ) L=Asia Pacific (APC) N=India (IND) R=ASEAN (AZN) T=China (CHN)	**Mid-year or Special Introduction** 2, 4=Domestic (DOM) 5, 6=California (CAL) B=Canada (CAN) D=HDI F=Japan (JPN) H=Australia (AUS) K=Brazil (BRZ) M=Asia Pacific (APC) P=India (IND) S=ASEAN (AZN) U=China (CHN)
6	VIN check digit	Can be 0-9 or X	
7	Model year	K=2019	
8	Assembly plant	B=York, PA U.S.A. D=H-D Brazil-Manaus, Brazil (CKD) N=Haryana India (Bawal District Rewari) S=Tasit, Pluagdang, Rayong, Thailand	
9	Sequential number	Varies	

Table 2. VIN Model Codes: 2019 Touring Models

CODE	MODEL	CODE	MODEL
FB	FLHR Road King®	KH	FLTRX Road Glide®
FC	FLHTCU Electra Glide® Ultra Classic®	KK	FLHTKL Ultra Limited Low
FR	FLHRC Road King® Classic	KN	FLHTK Ultra Limited Shrine
FV	FLHT Electra Glide® Standard	KR	FLHXS Street Glide® Special

CODE	MODEL	CODE	MODEL
KB	FLHX Street Glide®	KT	FLTRXS Road Glide® Special
KE	FLHTK Ultra Limited	KV	FLHRXS Road King® Special
KG	FLTRU Road Glide® Ultra		

NOTES

ABS MODULE
AIR CLEANER
AIR DEFLECTORS
AIR FILTER, ENGINE
ALTERNATOR AND REGULATOR
ANTENNA, GPS - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
ANTENNA, GPS - FLTRU, FLTRX AND FLTRXS
ANTENNAS
AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)
AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)
AXLE, FRONT, CAST
AXLE, FRONT, LACED
AXLE, REAR
BALANCER ASSEMBLY - Milwaukee-eight™ 107
BALANCER ASSEMBLY - Milwaukee-eight™ 114
BATTERY
BATTERY CABLES
BEARING HOUSING, TRANSMISSION
BELT GUARD
BELT, CHAIN AND SPROCKETS
BODY CONTROL MODULE (BCM)
BRAKE CALIPER, FRONT
BRAKE CALIPER, REAR
BRAKE CONTROL, FRONT
BRAKE CONTROL, REAR
BRAKE DISC, FRONT, CAST
BRAKE DISC, FRONT, LACED
BRAKE DISC, REAR
BRAKE LEVER, FRONT
BRAKE LEVER, REAR
BRAKE LINE, REAR
BRAKE LINES AND MODULE, REAR - ABS
BRAKE LINES, FRONT - ABS
BRAKE LINES, FRONT - NON-ABS

BRAKE MASTER CYLINDER, FRONT
BRAKE MASTER CYLINDER, REAR
BRAKE MODULE, ABS
BULB, FRONT TURN SIGNALS - FLHR AND FLHRC
BULB, FRONT TURN SIGNALS - FLHTCU, FLHTK AND FLHTKL
BULB, FRONT TURN SIGNALS - FLHX AND FLHXS
BULB, FRONT TURN SIGNALS - FLTRU, FLTRX AND FLTRXS
BULB, HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
BULB, REAR TURN SIGNALS - FLHR, FLHRC
BULB, REAR TURN SIGNALS - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
BULB, REAR TURN SIGNALS - FLHT
BULB, REAR TURN SIGNALS - FLHTK, FLHTKL, FLTRU (HDI)
CALIPER, FRONT BRAKE
CALIPER, REAR BRAKE
CAMSHAFT COVER
CAMSHAFT SUPPORT PLATE
CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
CARBON CANISTER
CHAIN, PRIMARY
CHECK VALVE, OIL PRESSURE
CLUTCH
CLUTCH CABLE
CLUTCH CONTROL
CLUTCH CONTROL HAND LEVER
CLUTCH LINE
CONNECTING ROD - Milwaukee-eight™ 107
CONNECTING ROD - Milwaukee-eight™ 114
CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3)
CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3)
CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)
COOLANT DISTRIBUTION - AIR-COOLED
COOLANT DISTRIBUTION - TWIN-COOLED™
COOLANT HOSES, RADIATOR
COOLANT PUMP, TWIN-COOLED™
COOLING SYSTEM, ENGINE, AIR-COOLED
COOLING SYSTEM, ENGINE, TWIN-COOLED™
COVER, PUSHRODS
COVERS AND AIR DEFLECTORS
CRANKCASE
CRANKCASE BEARINGS
CRANKSHAFT - Milwaukee-eight™ 107
CRANKSHAFT - Milwaukee-eight™ 114
CYLINDER HEADS
CYLINDERS, HEADS AND VALVES
DEBRIS DEFLECTOR

DIPSTICK, OIL TANK
ELECTRONIC CONTROL MODULE (ECM) AND COIL
ENGINE ASSEMBLY - Milwaukee-eight™ 107
ENGINE ASSEMBLY - Milwaukee-eight™ 114
ENGINE MOUNTS AND STABILIZER LINK
ENGINE SENSORS AND SWITCHES
EVAPORATIVE EMISSIONS COMPONENTS
EXHAUST SYSTEM (1 OF 2)
EXHAUST SYSTEM (2 OF 2)
FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
FAIRING, LOWERS, AIR COOLED - FLHTCU
FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
FAIRING, OUTER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
FAIRING, OUTER - FLTRU, FLTRX AND FLTRXS
FAN ASSEMBLY, RADIATOR
FENDERS, FRONT
FENDERS, REAR (1 OF 2)
FENDERS, REAR (2 OF 2)
FILTER, AIR
FILTER, FUEL - FLHR, FLHRC AND FLHRXS
FILTER, FUEL - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS
FILTER, OIL
FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107
FLYWHEEL ASSEMBLY - Milwaukee-eight™ 114
FOG LAMPS - FLHR AND FLHRC
FOG LAMPS - FLHTCU, FLHTK AND FLHTKL
FOOTBOARDS AND FOOTPEGS, PASSENGER
FOOTBOARDS, OPERATOR
FOOTPEGS, PASSENGER
FORK BRACKETS, FRONT
FORK LOCK
FORK, FRONT - LOW
FORK, FRONT - STANDARD (1 OF 2)
FORK, FRONT - STANDARD (2 OF 2)
FORK, REAR
FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
FRAME AND JIFFY STAND (1 OF 2)
FRAME AND JIFFY STAND (2 OF 2)
FRAME, MAIN
FRAME, REAR
FRONT FORK - LOW
FRONT FORK - STANDARD
FUEL CAP - FLHR, FLHRC AND FLHRXS
FUEL CAP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS

FUEL FILTER - FLHR, FLHRC AND FLHRXS
FUEL FILTER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS
FUEL GAUGE - FLHR, FLHRC AND FLHRXS
FUEL GAUGE - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
FUEL GAUGE - FLTRU, FLTRX AND FLTRXS
FUEL INJECTOR
FUEL LEVEL SENDER - FLHR, FLHRC AND FLHRXS
FUEL LEVEL SENDER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS
FUEL PUMP - FLHR, FLHRC AND FLHRXS
FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2)
FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2)
FUEL TANK - FLHR, FLHRC AND FLHRXS
FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS
FUEL TANK TRIM (1 OF 2)
FUEL TANK TRIM (2 OF 2)
FUSES, ABS - FLHR, FLHRC AND FLHRXS
FUSES, ABS - FLHT, FLHX AND FLHXS
FUSES, ABS - FLHTCU
FUSES, ABS - FLHTK AND FLHTKL
FUSES, ABS - FLTRU
FUSES, ABS - FLTRX AND FLTRXS
FUSES, NON-ABS - FLHR
FUSES, NON-ABS - FLHX
FUSES, NON-ABS - FLTRX
GAUGE, FUEL - FLHR, FLHRC AND FLHRXS
GAUGE, FUEL - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
GAUGE, FUEL - FLTRU, FLTRX AND FLTRXS
GAUGE, VOLTMETER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
GEAR SHIFTER
GLOVE BOX - FLHTCU
GLOVE BOX - FLHTK, FLHTKL AND FLTRU
GRIPS, HANDLEBAR
GUARD, ENGINE
GUARDS, SADDLEBAG
HANDLEBAR
HEADLAMP - FLHR, FLHRC AND FLHRXS
HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
HEADLAMP - FLTRU, FLTRX AND FLTRXS
HEADS, CYLINDER
HEADSET, SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
HEADSET, SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS
HORN
HOUSING, SPEEDOMETER - FLTRU, FLTRX AND FLTRXS
IGNITION COIL
INDICATOR LAMPS - FLHR, FLHRC AND FLHRXS
INDUCTION MODULE, FUEL

INNER FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
INNER FAIRING - FLTRU, FLTRX AND FLTRXS
INNER TUBE, FRONT
INNER TUBE, REAR
INSTRUMENT CLUSTER - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
INSTRUMENT CLUSTER - FLTRU, FLTRX AND FLTRXS
INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS
INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
INTERCOM CONTROL POD
ISOLATOR, REAR WHEEL
JET, PISTON COOLING
JIFFY STAND
KEY FOB
LABELS
LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
LED, AUXILIARY/FOG LAMPS - FLHTCU, FLHTK AND FLHTKL
LED, HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
LICENSE PLATE BRACKETS
LIFTER, HYDRAULIC
LIGHT, FRONT FENDER
LIGHT, REAR FENDER
LINER, REMOVABLE, SADDLEBAG
LINER, REMOVABLE, TOUR-PAK
LOCK, SADDLEBAG
LOCK, SADDLEBAG
LOCKSET
LOOSE PARTS (1 OF 3)
LOOSE PARTS (2 OF 3)
LOOSE PARTS (3 OF 3)
LOWER FAIRINGS - FLHTCU
LOWER FAIRINGS - FLHTK, FLHTKL AND FLTRU
LUGGAGE RACK, TOUR-PAK
MAIN FUSE
MASTER CYLINDER, BRAKE, FRONT
MASTER CYLINDER, BRAKE, REAR
MIRRORS
MODULE, SECURITY SYSTEM
MODULE, TURN SIGNAL CANCELLER
MUFFLERS
NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2)
OIL COOLER, AIR-COOLED
OIL FILTER, ENGINE
OIL PAN, TRANSMISSION
OIL PUMP
PADS, FRONT BRAKE

PADS, REAR BRAKE
PISTON COOLING, JET
PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107
PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 114
PRIMARY COVER
PRIMARY HOUSING
PUMP, COOLANT, TWIN-COOLED™
PUSHRODS
RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
RADIO - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
RADIO - FLTRU, FLTRX AND FLTRXS
RADIO CONTROL, PASSENGER
REAR FORK
REFLECTOR, FRONT FORK - LOW
REFLECTOR, FRONT FORK - STANDARD
REFLECTOR, LICENSE PLATE BRACKET
REFLECTOR, SADDLEBAG
REGULATOR, VOLTAGE
REMOTE CONTROL FOB
RESERVOIR, RADIATOR
RIM STRIP, FRONT
RIM STRIP, REAR
ROCKER ARM ASSEMBLY AND PUSHRODS
ROTOR, ENGINE
SADDLEBAG GUARDS
SADDLEBAG SUPPORTS
SADDLEBAG, TRAVEL PAK
SADDLEBAGS - EXCEPT FLHRC (1 OF 4)
SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
SADDLEBAGS - FLHRC
SEATS
SECURITY SYSTEM, ANTENNA MODULE
SENSOR, AMBIENT TEMPERATURE
SENSOR, COOLANT TEMPERATURE
SENSOR, CRANKSHAFT POSITION
SENSOR, ENGINE TEMP
SENSOR, KNOCK
SENSOR, SPEED
SENSOR, TEMPERATURE MANIFOLD ABSOLUTE PRESSURE (TMAP)
SENSOR, WHEEL SPEED, FRONT, CAST
SENSOR, WHEEL SPEED, FRONT, LACED
SENSOR, WHEEL SPEED, REAR
SENSORS AND SWITCHES, ENGINE
SHIFTER CAMSHAFT
SHIFTER FORK
SHIFTER LEVER
SHIFTER, GEAR


SHOCK ABSORBERS, REAR
SIDE COVER
SIREN
SOLENOID, AUTO COMPRESSION RELEASE (ACR)
SOLENOID, PURGE
SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
SPARK PLUGS
SPEAKER, FRONT - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
SPEAKER, FRONT - FLTRU, FLTRX AND FLTRXS
SPEAKER, REAR
SPEEDOMETER - FLHR, FLHRC AND FLHRXS
SPEEDOMETER - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
SPEEDOMETER - FLTRU, FLTRX AND FLTRXS
SPEEDOMETER - FLTRU, FLTRX AND FLTRXS
SPEEDOMETER HOUSING - FLTRU, FLTRX AND FLTRXS
SPROCKET, BELT
SPROCKET, TRANSMISSON
STABILIZER LINK, ENGINE
STARTER MOTOR
STATOR
SWINGARM
SWITCH, IGNITION - FLHR, FLHRC AND FLHRXS
SWITCH, IGNITION
SWITCH, NEUTRAL INDICATOR
SWITCH, OIL PRESSURE
SWITCH, SPOT AND ACCESSORY - FLHR, FLHRC AND FLHRXS
SWITCH, STOP LAMP
SWITCHES (1 OF 2)
SWITCHES (2 OF 2)
SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS
SWITCHES, HANDLEBAR, LEFT - FLHRXS
SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2)
SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2)
SWITCHES, HANDLEBAR, RIGHT - FLHRXS
TACHOMETER - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
TACHOMETER - FLTRU, FLTRX AND FLTRXS
TAIL LAMP (1 OF 2)
TAIL LAMP (2 OF 2)
TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC
TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
TAIL LAMP AND TURN SIGNALS, REAR - FLHT
TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)
TETHER, TOUR-PAK
THROTTLE CONTROL
TIRE, FRONT, CAST
TIRE, FRONT, LACED

TIRE, REAR
TOUR-PAK (BOTTOM) (1 OF 2)
TOUR-PAK (BOTTOM) (2 OF 2)
TOUR-PAK (COVER)
TOUR-PAK SUPPORT
TOUR-PAK, TRAVEL PAK
TRANSMISSION BEARINGS AND COVERS
TRANSMISSION GEARS
TRANSMISSION HOUSING, COVER AND OIL PAN
TRIPLE CLAMP
TURN SIGNALS, FRONT - FLHR AND FLHRC
TURN SIGNALS, FRONT - FLHRXS
TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS
TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL
TURN SIGNALS, FRONT - FLTRU, FLTRX AND FLTRXS
TURN SIGNALS, REAR - FLHR, FLHRC
TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)
TURN SIGNALS, REAR - FLHT
VALVES
VOLTAGE REGULATOR BRACKET, AIR-COOLED
VOLTAGE REGULATOR BRACKET, TWIN-COOLED™
VOLTAGE REGULATOR
VOLTMETER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
VOLTMETER - FLTRU, FLTRX AND FLTRXS
WHEELS, FRONT, CAST (1 OF 2)
WHEELS, FRONT, CAST (2 OF 2)
WHEELS, FRONT, LACED
WHEELS, REAR
WINDSHIELD - FLHR AND FLHRC
WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
WIRE TROUGH TRAY
WIRING HARNESS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
WIRING HARNESS - FLTRU, FLTRX AND FLTRXS
WIRING HARNESS, AUDIO CONSOLE
WIRING HARNESS, BATTERY
WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
WIRING HARNESS, FUEL TANK CONSOLE - FLHR, FLHRC AND FLHRXS
WIRING HARNESS, FUEL TANK CONSOLE - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS
WIRING HARNESS, LEFT HANDLEBAR SWITCHES - EXCEPT FLHRXS

WIRING HARNESS, LEFT HANDLEBAR SWITCHES - FLHRXS
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10)
WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8)

WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (5 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (5 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8)
WIRING HARNESS, ON BOARD DIAGNOSTICS (OBD) JUMPER (CHINA ONLY)
WIRING HARNESS, RADIATOR
WIRING HARNESS, REAR TURN SIGNAL JUMPER - FLHR, FLHRC
WIRING HARNESS, REAR TURN SIGNAL JUMPER - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
WIRING HARNESS, REAR TURN SIGNAL JUMPER - FLHT
WIRING HARNESS, REAR TURN SIGNAL JUMPER - FLHTK, FLHTKL, FLTRU (HDI)
WIRING HARNESS, RIGHT HANDLEBAR SWITCHES - EXCEPT FLHRXS
WIRING HARNESS, RIGHT HANDLEBAR SWITCHES - FLHRXS
WIRING HARNESS, SPEAKER - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
WIRING HARNESS, TAIL LAMP
WIRING HARNESS, THROTTLE CONTROL
WIRING HARNESS, TOUR-PAK
WIRING HARNESS, TRIPLE CLAMP
WIRING HARNESS, UNIVERSAL SERIAL BUS (USB) - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
WIRING HARNESS, UNIVERSAL SERIAL BUS (USB) - FLTRU, FLTRX AND FLTRXS
Parts

ENGINE ASSEMBLY - Milwaukee-eight™ 107

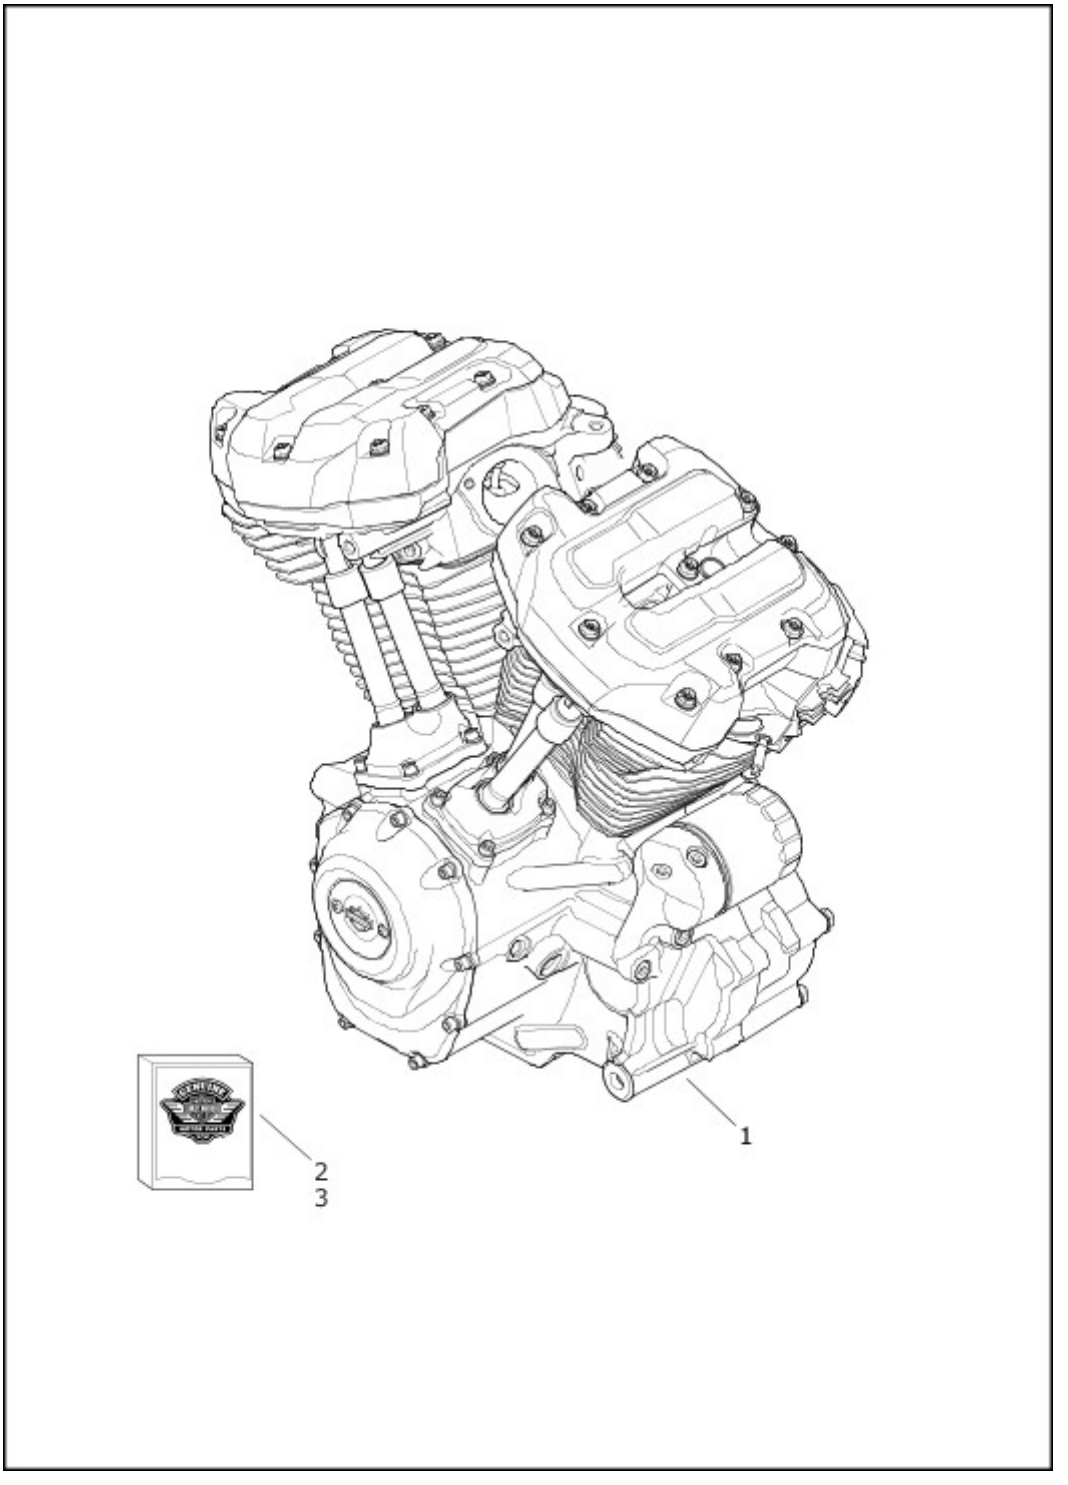

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	16200362	ENGINE ASSEMBLY, complete (Air-Cooled) (Milwaukee-eight™ 107) (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
2	16200265	ENGINE ASSEMBLY, shortblock, with 91800064, crankcase, flywheel assembly, camshaft support plate assembly, balancer and cylinder studs (See Note)	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
3	91800064	KIT, shortblock installation, with 25700729 top end gasket kit, 25700746 inner primary gasket kit, camshaft sprocket, camshaft drive chain and camshaft tensioner	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX

Note: Cylinders, cylinder heads, camshaft, rocker arms, pushrods, pushrod covers, piston assemblies, tappets, oil pump, oil filter adapter, oil filter and cosmetic covers are not included with the shortblock assembly. These parts must be removed from the original engine and installed on the replacement shortblock assembly.

ENGINE ASSEMBLY - Milwaukee-eight™ 114

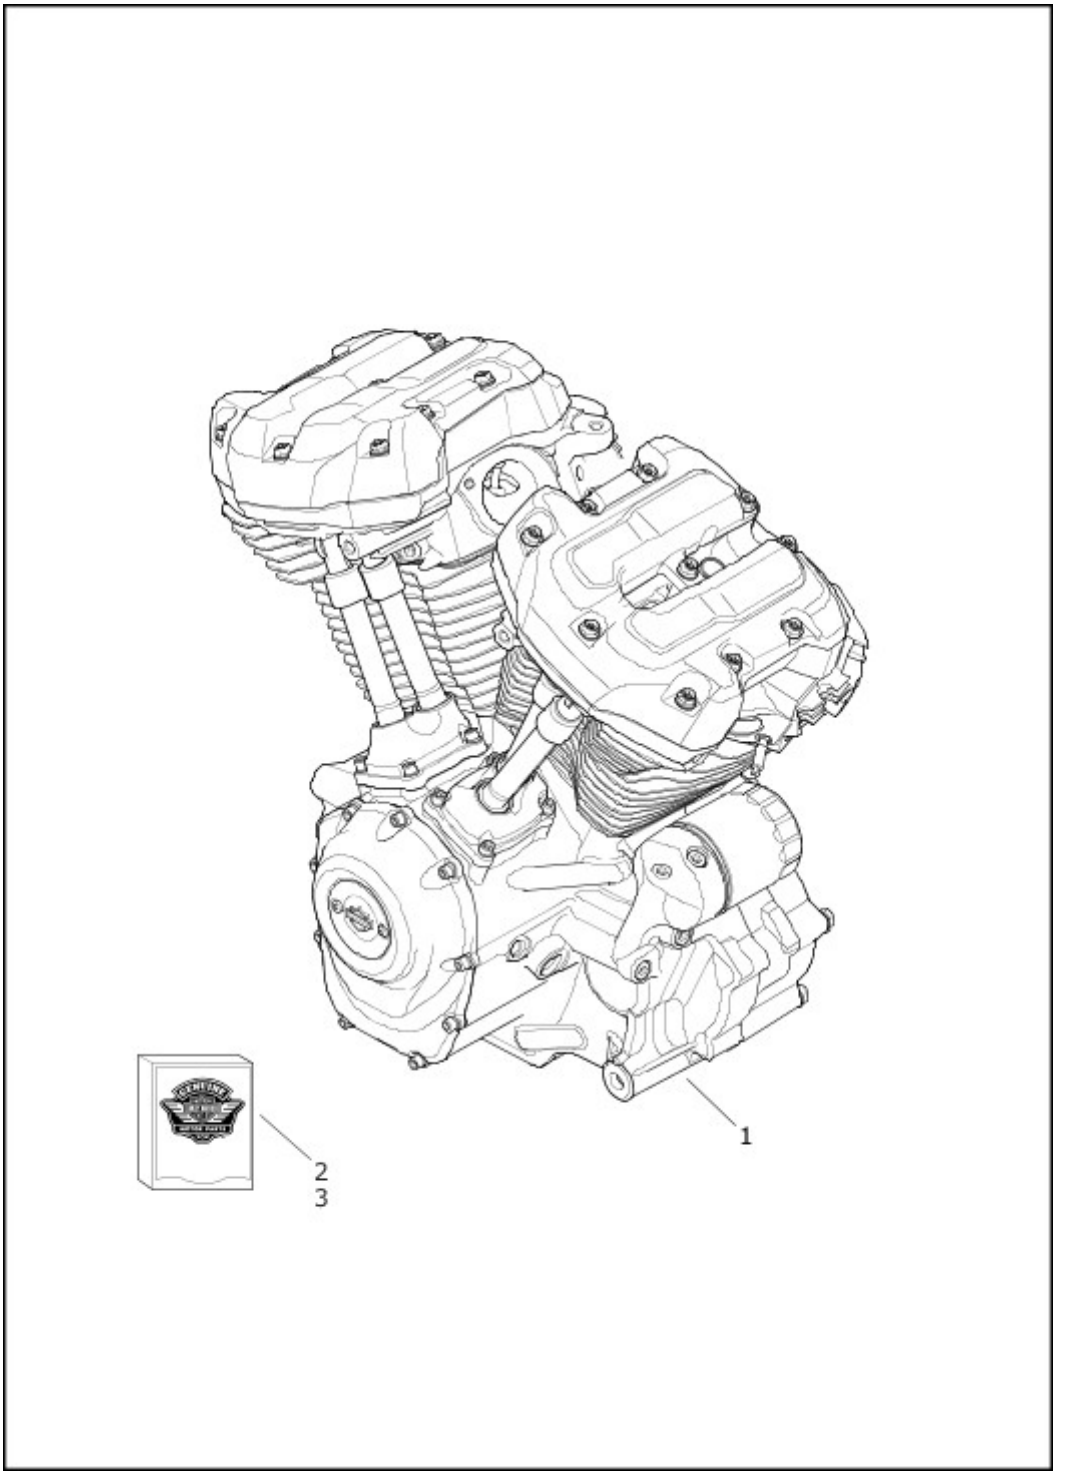

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	16200364	ENGINE ASSEMBLY, complete (Twin-Cooled) (Milwaukee-eight™ 114) (chrome)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
1	16200365	ENGINE ASSEMBLY, complete (Air-Cooled) (Milwaukee-eight™ 114) (black)	FLHRXS, FLHXS, FLTRXS
2	16200582	ENGINE ASSEMBLY, shortblock, with 91800064, crankcase, flywheel assembly, camshaft support plate assembly, balancer and cylinder studs (See Note)	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
3	91800064	KIT, shortblock installation, with 25700729 top end gasket kit, 25700746 inner primary gasket kit, camshaft sprocket, camshaft drive chain and camshaft tensioner	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS

Note: Cylinders, cylinder heads, camshaft, rocker arms, pushrods, pushrod covers, piston assemblies, tappets, oil pump, oil filter adapter, oil filter and cosmetic covers are not included with the shortblock assembly. These parts must be removed from the original engine and installed on the replacement shortblock assembly.

CYLINDERS, HEADS AND VALVES

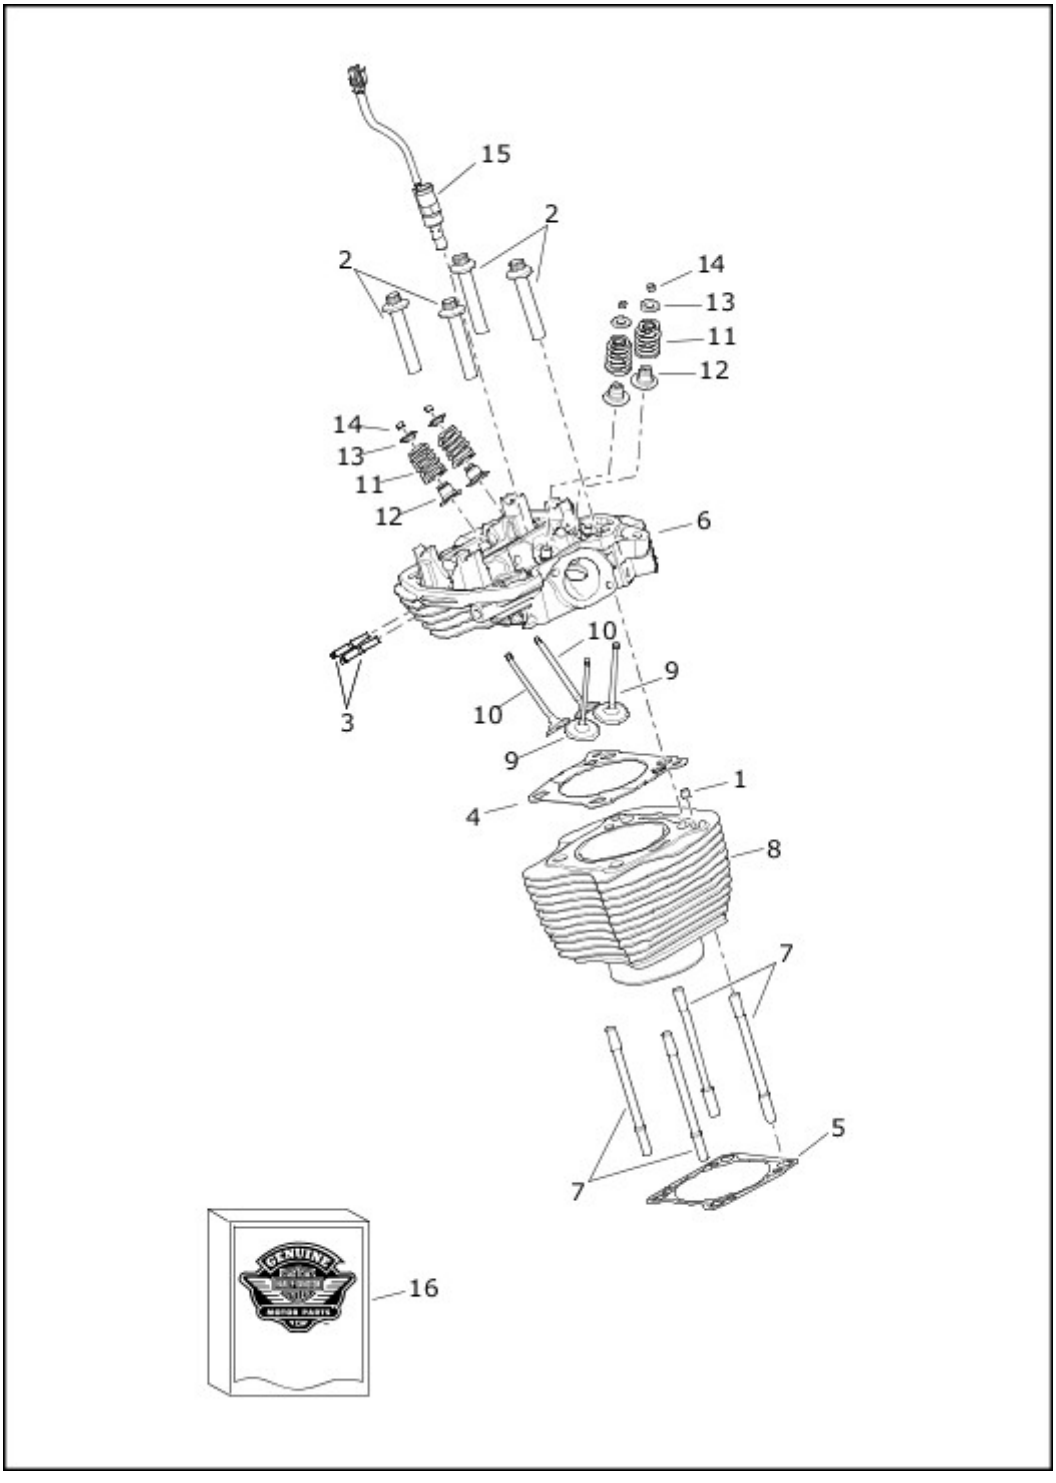

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	16589-99A	DOWEL PIN *(4)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	10200303	FLANGE NUT (dull silver) *(8)*	ALL
3	10900015A	STUD, exhaust port *(4)*	ALL
4	16500305	GASKET, cylinder head (4.016 in) *(2)*	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
4	16500326	GASKET, cylinder head (3.937 in) *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
5	16500332	GASKET, cylinder base *(2)*	ALL
6	16500388	CYLINDER HEAD, rear, with 3, 9, 10, 11, 12, 13, 14, 15 & 65324-83B (Air-Cooled) (black)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
6	16500498	CYLINDER HEAD, rear, with 3, 9, 10, 11, 12, 13, 14, 15 & 65324-83B (Twin-Cooled) (black)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	16500393	CYLINDER HEAD, front, with 3, 9, 10, 11, 12, 13, 14, 15 & 65324-83B (Air-Cooled) (black)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
6	16500508	CYLINDER HEAD, front, with 3, 9, 10, 11, 12, 13, 14, 15 & 65324-83B (Twin-Cooled) (black)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	16800063	STUD, cylinder *(8)*	ALL
8	16800075	CYLINDER, front, with 16589-99A (4.016 in) (black)	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
8	16800080	CYLINDER, rear, with 16589-99A (4.016 in) (black)	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
8	16800095	CYLINDER, front, with 16589-99A (3.937 in) (black)	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
8	16800100	CYLINDER, rear, with 16589-99A (3.937 in) (black)	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
9	18000016	INTAKE VALVE *(4)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	18000034	EXHAUST VALVE *(4)*	ALL
11	18100043	VALVE SPRING *(8)*	ALL
12	18100044	SEAL, valve *(8)*	ALL
13	18100045	COLLAR, valve spring *(8)*	ALL
14	18100060	KEEPER, valve *(16)*	ALL
15	18400073B	SOLENOID, auto compression release (ACR) *(2)*	ALL
16	25700729	GASKET KIT, top end	ALL
16	25700730	GASKET KIT, engine overhaul	ALL

ROCKER ARM ASSEMBLY AND PUSHRODS

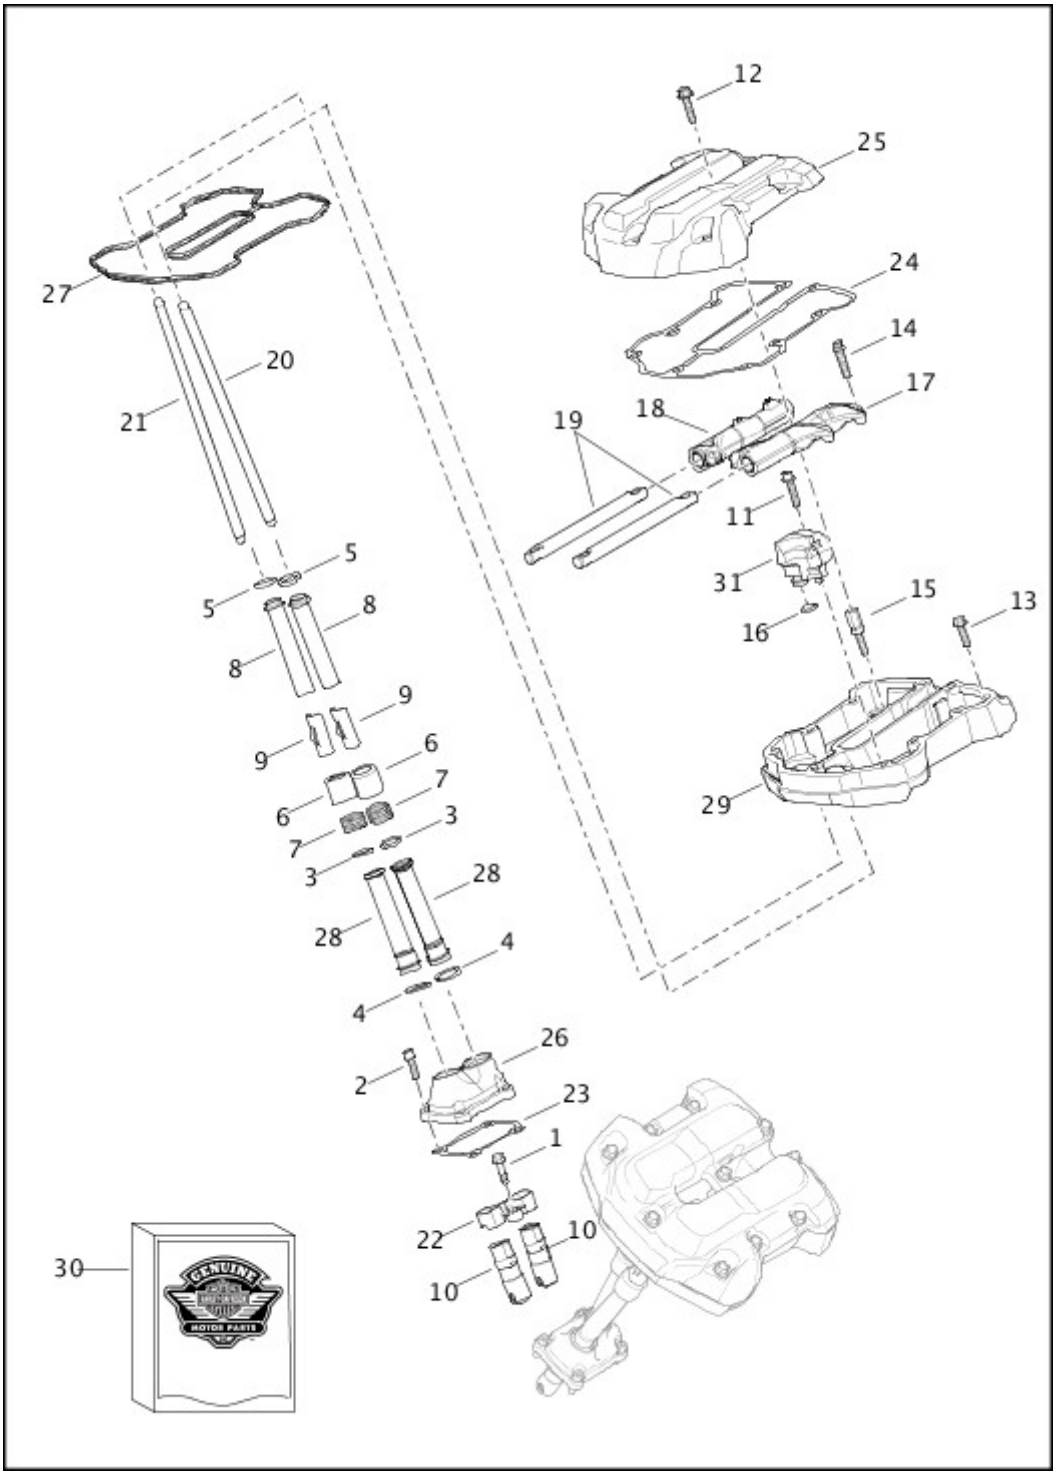

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3976	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	4741A	SCREW *(8)*	ALL
3	11132A	O-RING, pushrod cover *(4)*	ALL
4	11145A	O-RING, pushrod cover *(4)*	ALL
5	11293	O-RING *(4)*	ALL
6	17945-36B	CAP, cover spring *(4)*	ALL
7	17947-36	SPRING, pushrod cover *(4)*	ALL
8	17948-99A	COVER, pushrod (upper) *(4)*	ALL
9	17968-99	RETAINER, spring cap *(4)*	ALL
10	18538-99C	HYDRAULIC LIFTER *(4)*	ALL
11	10200258	SCREW *(2)*	ALL
12	10200308	SCREW *(20)*	ALL
13	10200446	SCREW *(8)*	ALL
14	10200503	SCREW *(8)*	ALL
15	10500069	SPACER, rocker cover *(2)*	ALL
16	11900116	O-RING *(2)*	ALL
17	17300053	ROCKER ARM, rear intake, front exhaust *(2)*	ALL
18	17300055	ROCKER ARM, front intake, rear exhaust *(2)*	ALL
19	17300059A	SHAFT, rocker arm *(4)*	ALL
20	17900030	PUSHROD, intake, 10.301 in long (light blue stripes) *(2)*	ALL
21	17900031	PUSHROD, exhaust, 10.531 in long (yellow stripes) *(2)*	ALL
22	17900034	ANTI-ROTATION DEVICE, rear cylinder	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	17900035	ANTI-ROTATION DEVICE, front cylinder	ALL
23	25700362	GASKET, lifter cover *(2)*	ALL
24	25700372B	GASKET, rocker arm cover *(2)*	ALL
25	25700409	ROCKER COVER (chrome) *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
25	25700520	ROCKER COVER (black) *(2)*	FLHRXS, FLHXS, FLTRXS
25	25700693	ROCKER COVER (polished) *(2)*	FLHT
26	25700410	LIFTER COVER, front (chrome)	ALL
26	25700411	LIFTER COVER, rear (chrome)	ALL
27	25700425	GASKET, rocker housing, lower *(2)*	ALL
28	25701000	COVER, pushrod (lower) *(4)*	ALL
29	25700637	ROCKER COVER, lower, with 25700425 (chrome) *(2)*	FLHR, FLHRC, FLHRXS, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
29	25700691	ROCKER COVER, lower (polished) *(2)*	FLHT
30	25700731	GASKET KIT, camshaft service	ALL
31	29400183	BREATHER ASSEMBLY, rear, with 11900116	ALL
31	29400210	BREATHER ASSEMBLY, front, with 11900116	ALL

COOLING SYSTEM, ENGINE, TWIN-COOLED™

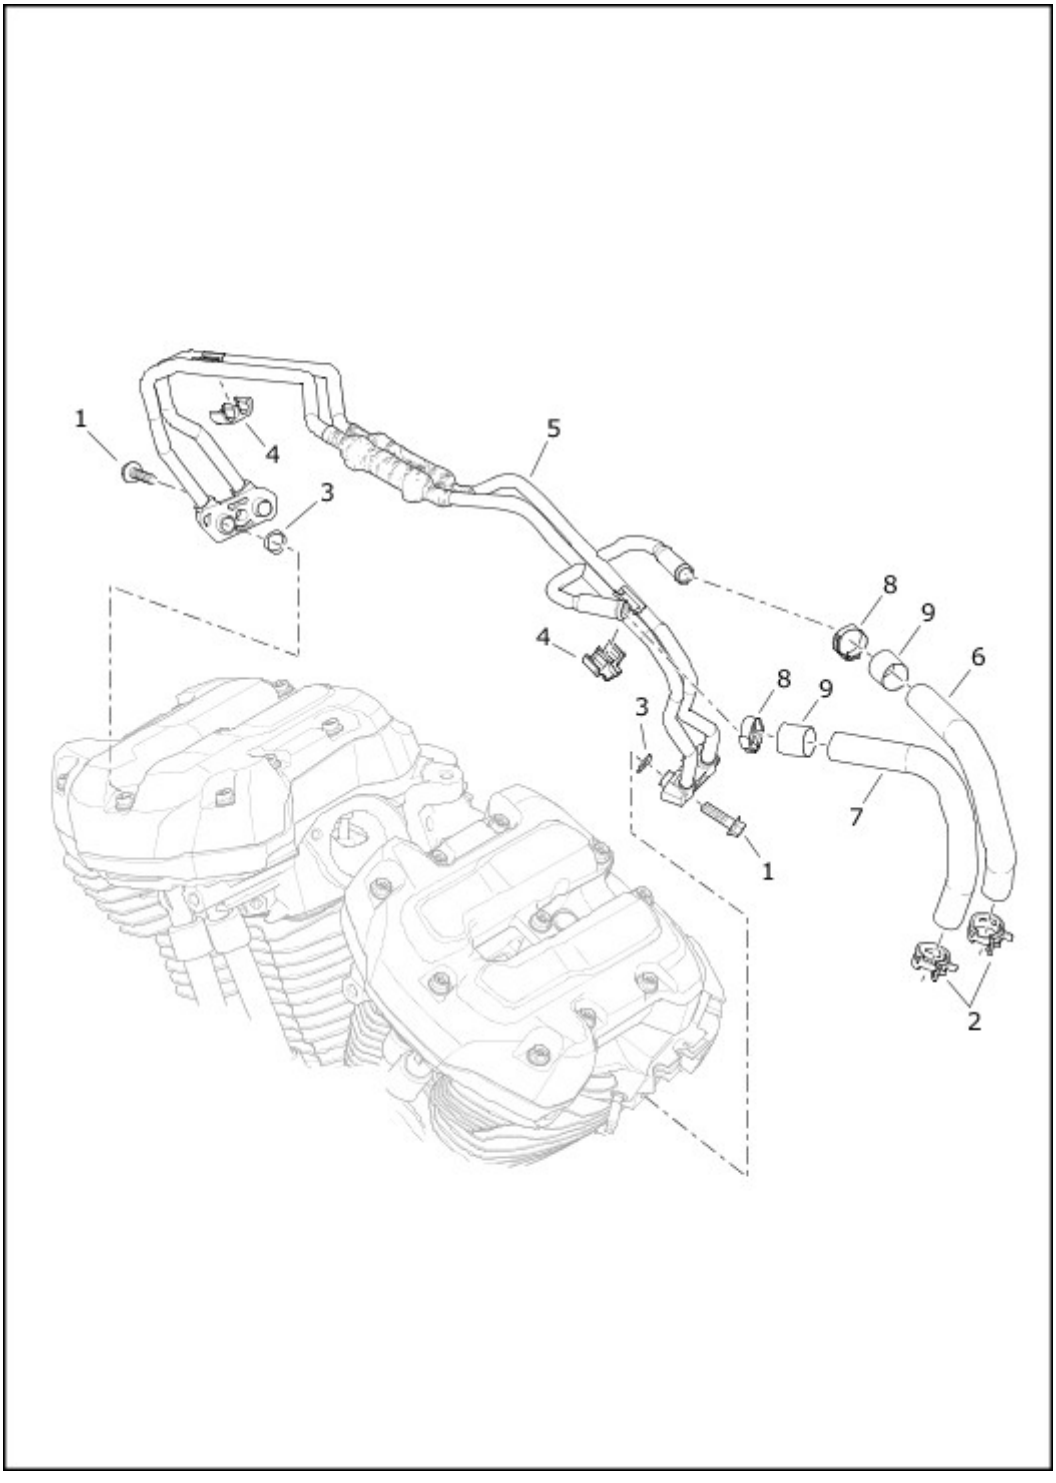


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	10200446	SCREW *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	10800052	CLAMP *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
3	11900090	O-RING, coolant manifold *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
4	26900117	BRACKET, coolant tube *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
5	26900133	COOLANT LINE ASSEMBLY, water, with 3, 4, 6, 7, 8 and 9	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	26900144	HOSE	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	26900145	HOSE	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	10800109	CLAMP *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	10800111	SLEEVE *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

COOLING SYSTEM, ENGINE, AIR-COOLED

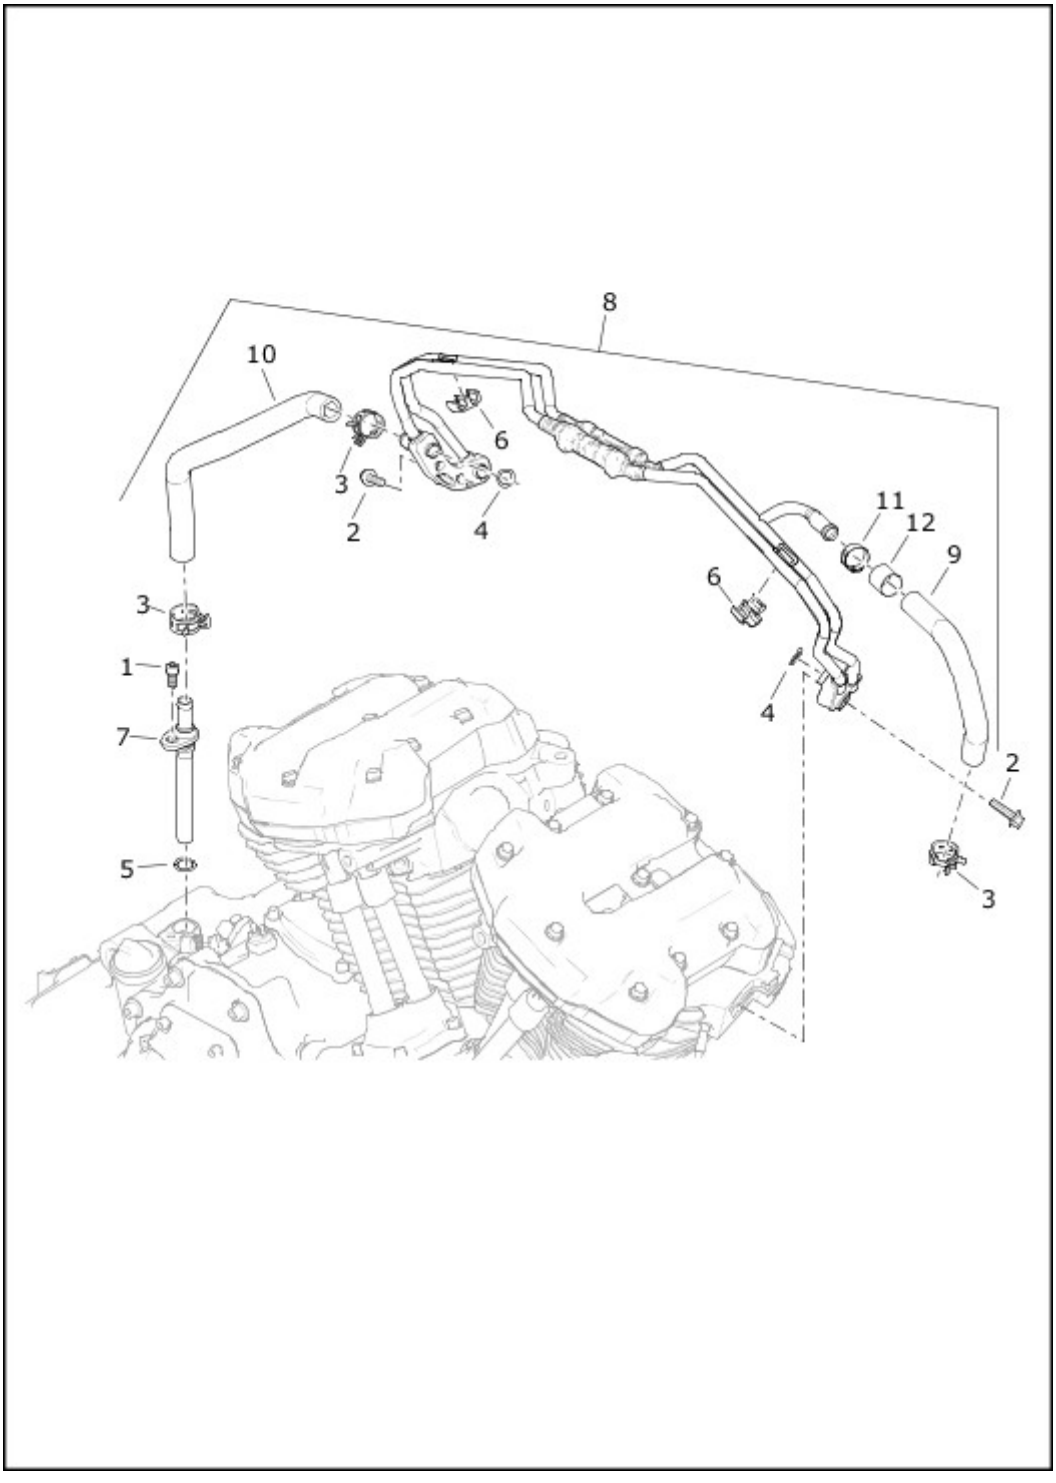


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4705	SCREW	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
2	10200446	SCREW *(4)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
3	10800052	CLAMP *(3)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
4	11900090	O-RING, coolant manifold *(4)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
5	11900092	O-RING, transmission oil return	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
6	26900117	BRACKET, coolant tube *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
7	62700146	FITTING ASSEMBLY, transmission oil return, with 11900092	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
8	62800028	COOLANT LINE ASSEMBLY, oil, with 3, 4, 6, 9, 10, 11, 12	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
9	26900144	HOSE	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
10	62700161	HOSE	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
11	10800109	CLAMP	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
12	10800111	SLEEVE	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS

COOLANT DISTRIBUTION - TWIN-COOLED™

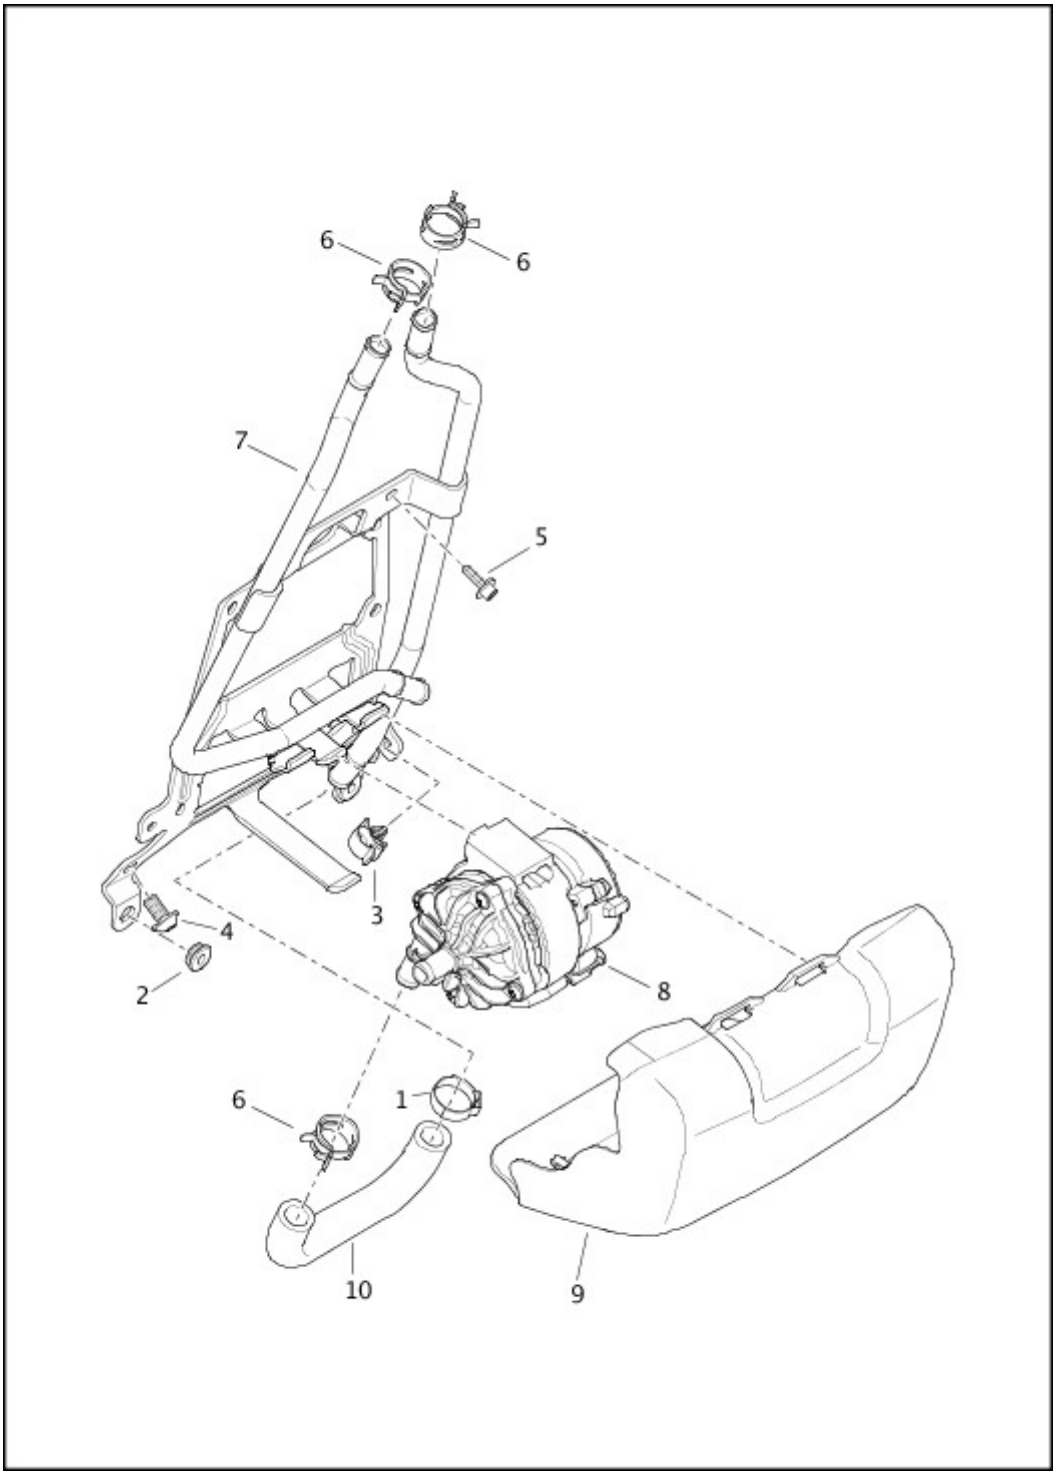


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	10344	CLAMP	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	11692	GROMMET *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
3	70681-09	CLIP, wire retention	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
4	10200414	SCREW *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
5	882	SCREW *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	10800052	CLAMP *(3)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	12700091	BRACKET, voltage regulator	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	26600048	PUMP, coolant	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	26800077	COVER, coolant pump	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
10	26900088	HOSE, outlet, water pump	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

COOLANT DISTRIBUTION - AIR-COOLED

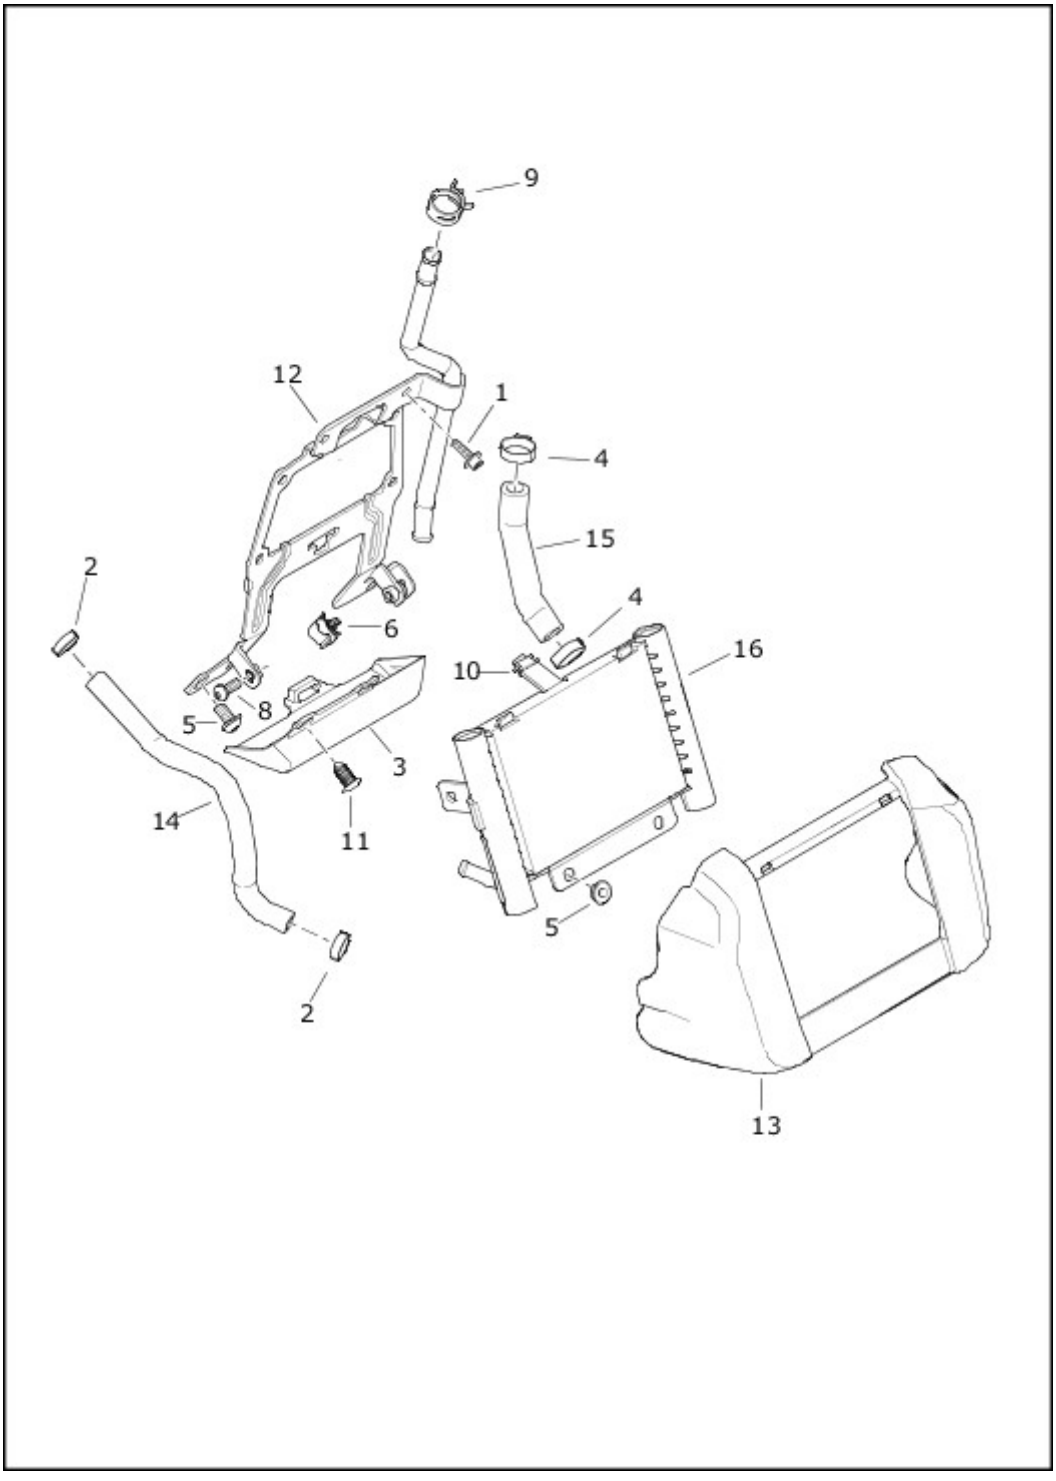

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	882	SCREW *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
2	10080	CLAMP (zinc) *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
3	69201286A	COVER, electrical connector, with 12600016	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
4	10344	CLAMP (black) *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
5	11692	GROMMET *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
6	70681-09	CLIP, wire retention	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
7	10200414	SCREW *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
8	10200422	SCREW *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
9	10800052	CLAMP	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
10	12100113	GROMMET	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
11	12600016	CLIP, push-in *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
12	12700090	BRACKET, voltage regulator	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
13	26800092	COVER, oil cooler	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	62700143	HOSE, inlet, oil cooler	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
15	62700144	HOSE, outlet, oil cooler	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
16	62700196	OIL COOLER, with 12100113	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS

RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™

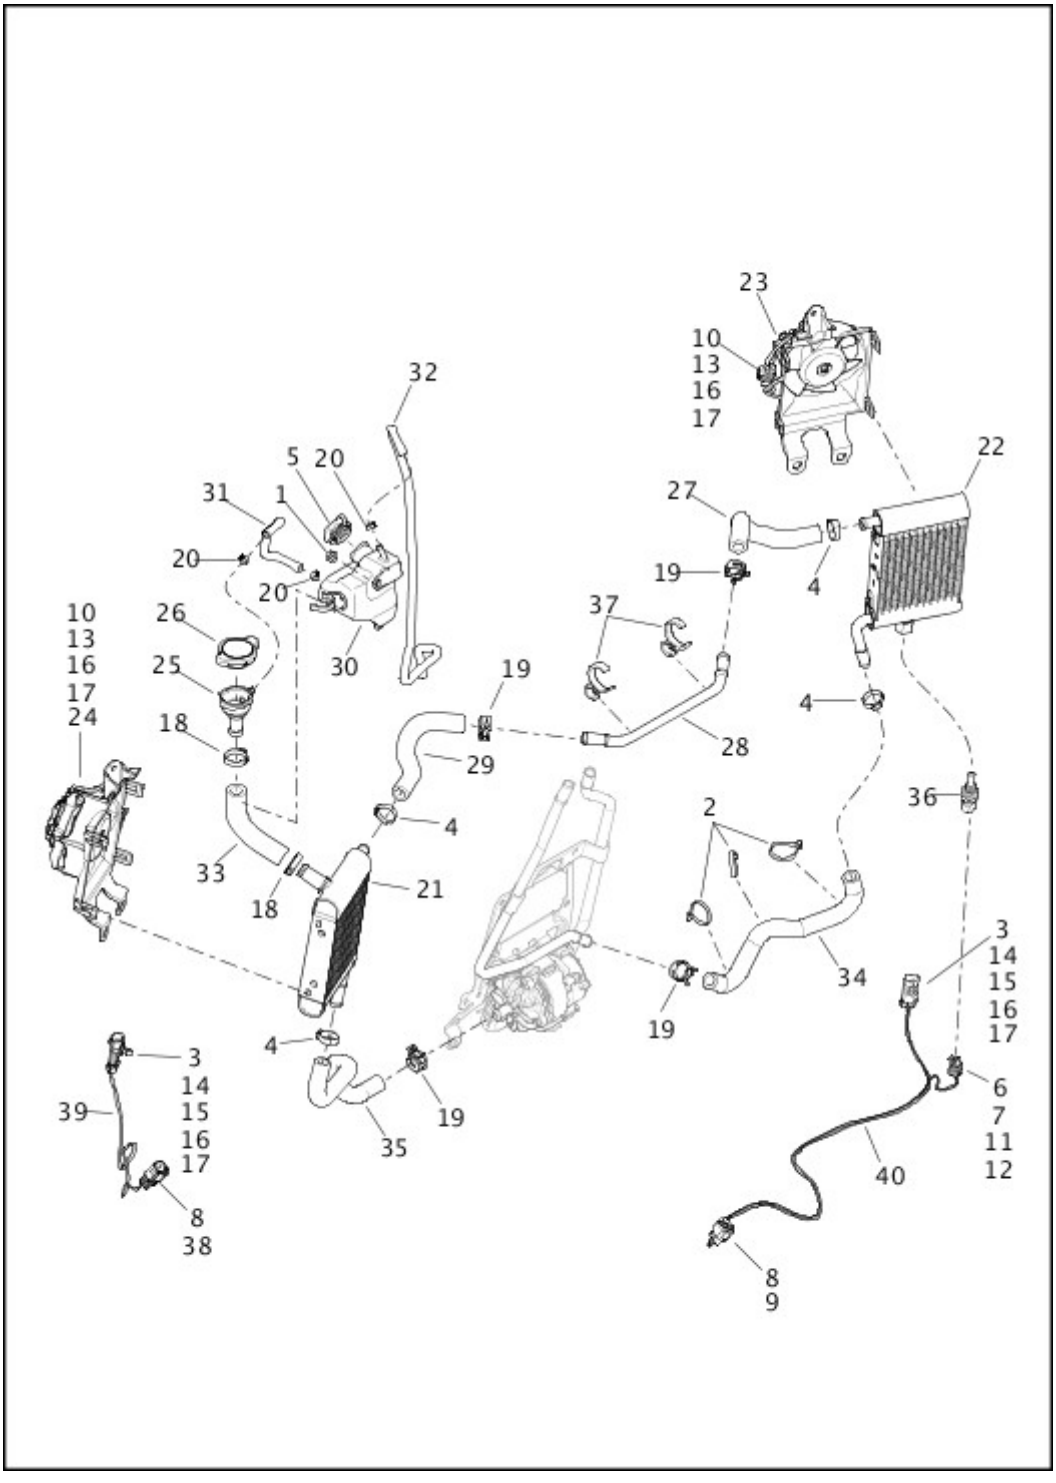

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	7716	LOCKNUT	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	10006	CABLE STRAP *(6)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
3	10147	CLIP, connector *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
4	10344	CLAMP *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
5	26780-05A	CAP ASSEMBLY, coolant bottle	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	72063-06	HOUSING, two-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	72111-06	SECONDARY LOCK, two-way socket	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	72168-07	TERMINAL, socket, 18-20 AWG *(6)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	72177-07BK	HOUSING, four-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
10	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
11	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
12	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
13	72606-08	HOUSING, two-way socket (black) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
14	72607-08	HOUSING, two-way pin (black) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
15	72608-08	TERMINAL, pin, 16-20 AWG *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
16	72609-08	SECONDARY LOCK, two-way *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
17	72610-08	WIRE SEAL, 18-20 AWG (white) *(8)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
18	10800023	CLAMP *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	10800052	CLAMP *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
20	10800078	CLAMP *(3)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
21	26800005	CORE, radiator (right)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
22	26800006	CORE, radiator (left)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
23	26800007A	FAN ASSEMBLY, with 72213-94, 72606-08, 72609-08 and 72610-08 (left)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
24	26800019A	FAN ASSEMBLY, with 72213-94, 72606-08, 72609-08 and 72610-08 (right)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
25	26800020A	FILL NECK, coolant	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
26	26800021	CAP, pressure	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
27	26900008	HOSE, coolant, left cross tube	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
28	26900009	LINE, coolant, right to left	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
29	26900010	HOSE, coolant, right cross tube	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
30	26900014	BOTTLE ASSEMBLY, coolant, with 26780-05A	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
31	26900016	HOSE, coolant vent	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
32	26900017	HOSE, coolant overflow	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
33	26900018	HOSE, coolant fill	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
34	26900114	HOSE, radiator to engine outlet	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
35	26900115	HOSE, radiator to pump inlet	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
36	32700066	SENSOR, coolant temperature	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
37	62800004	CLIP, coolant line to frame *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
38	69200271	HOUSING, two-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
39	69200311	WIRE HARNESS, twin cooling jumper, with 10147, 72168-07, 72607-08, 72608-08, 72609-08, 72610-08 and 69200271 (right)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
40	69201548	WIRE HARNESS, twin cooling jumper, with 10147, 72063-06, 72111-06, 72168-07, 72177-07BK, 72484-08, 72486-08, 72607-08, 72608-08, 72609-08 and 72610-08 (left)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107

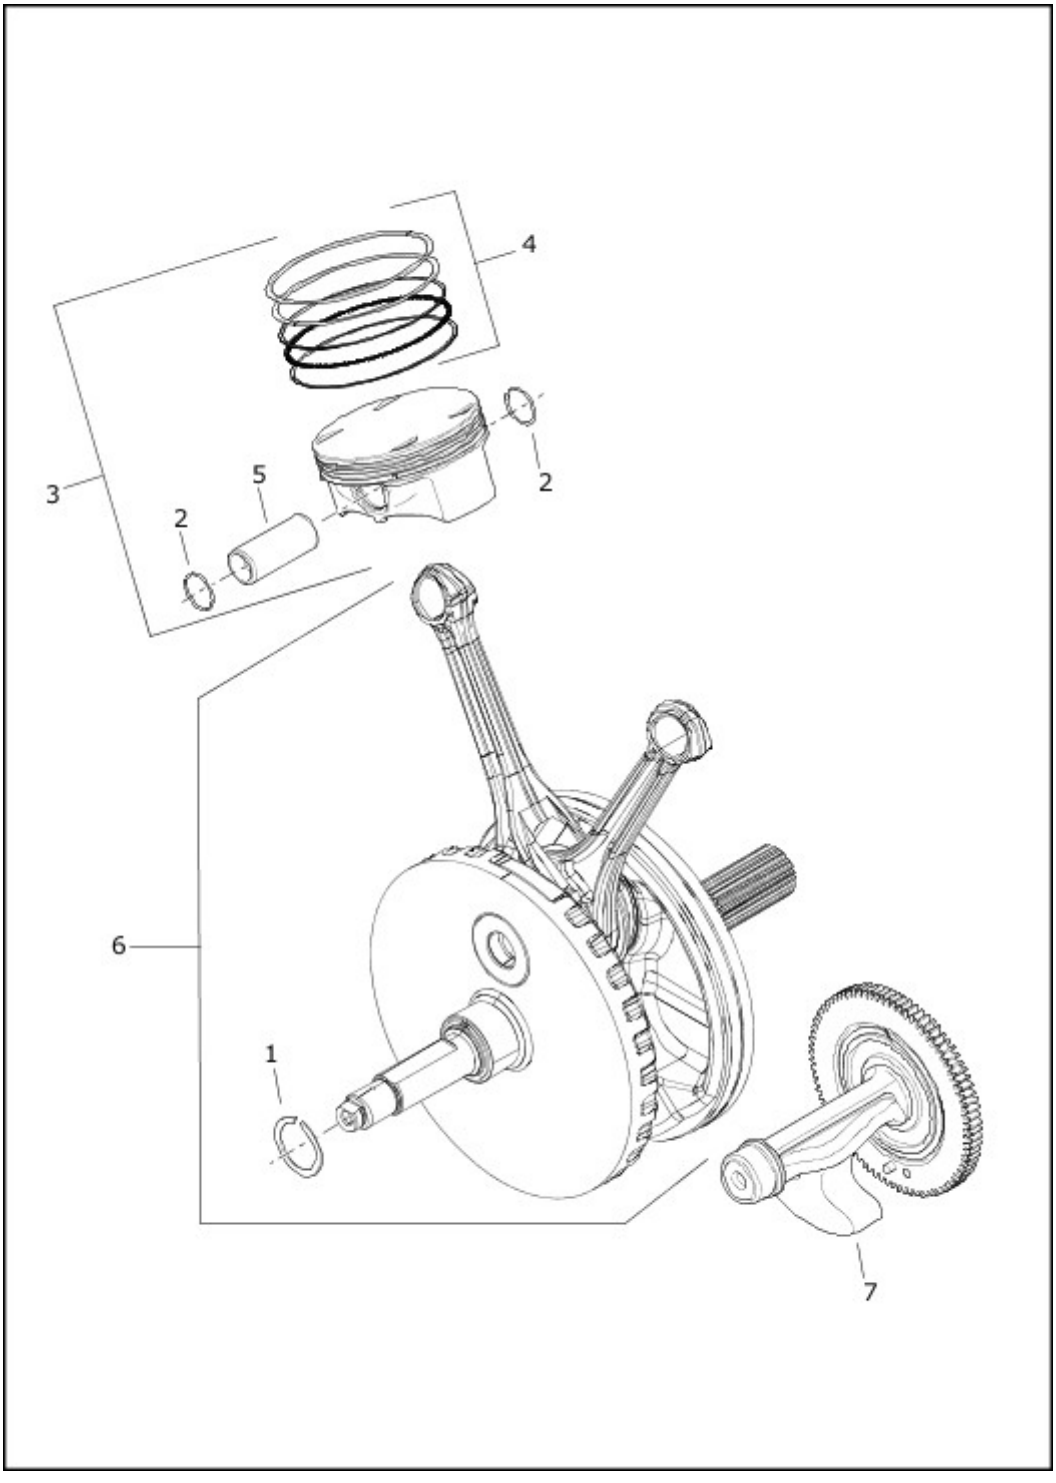


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	11177A	RETAINING RING	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
2	22097-99	LOCK RING, piston pin *(4)*	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
3	21900049	PISTON AND RINGS ASSEMBLY, with 22097-99, 22000060 and 22100006 (3.937 in) *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
4	22000060	PISTON RING SET (3.937 in) *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
5	22100006	PISTON PIN *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
6	24100057A	FLYWHEEL ASSEMBLY KIT, with 11177A	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
7	35200057	BALANCER ASSEMBLY	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX

PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 114

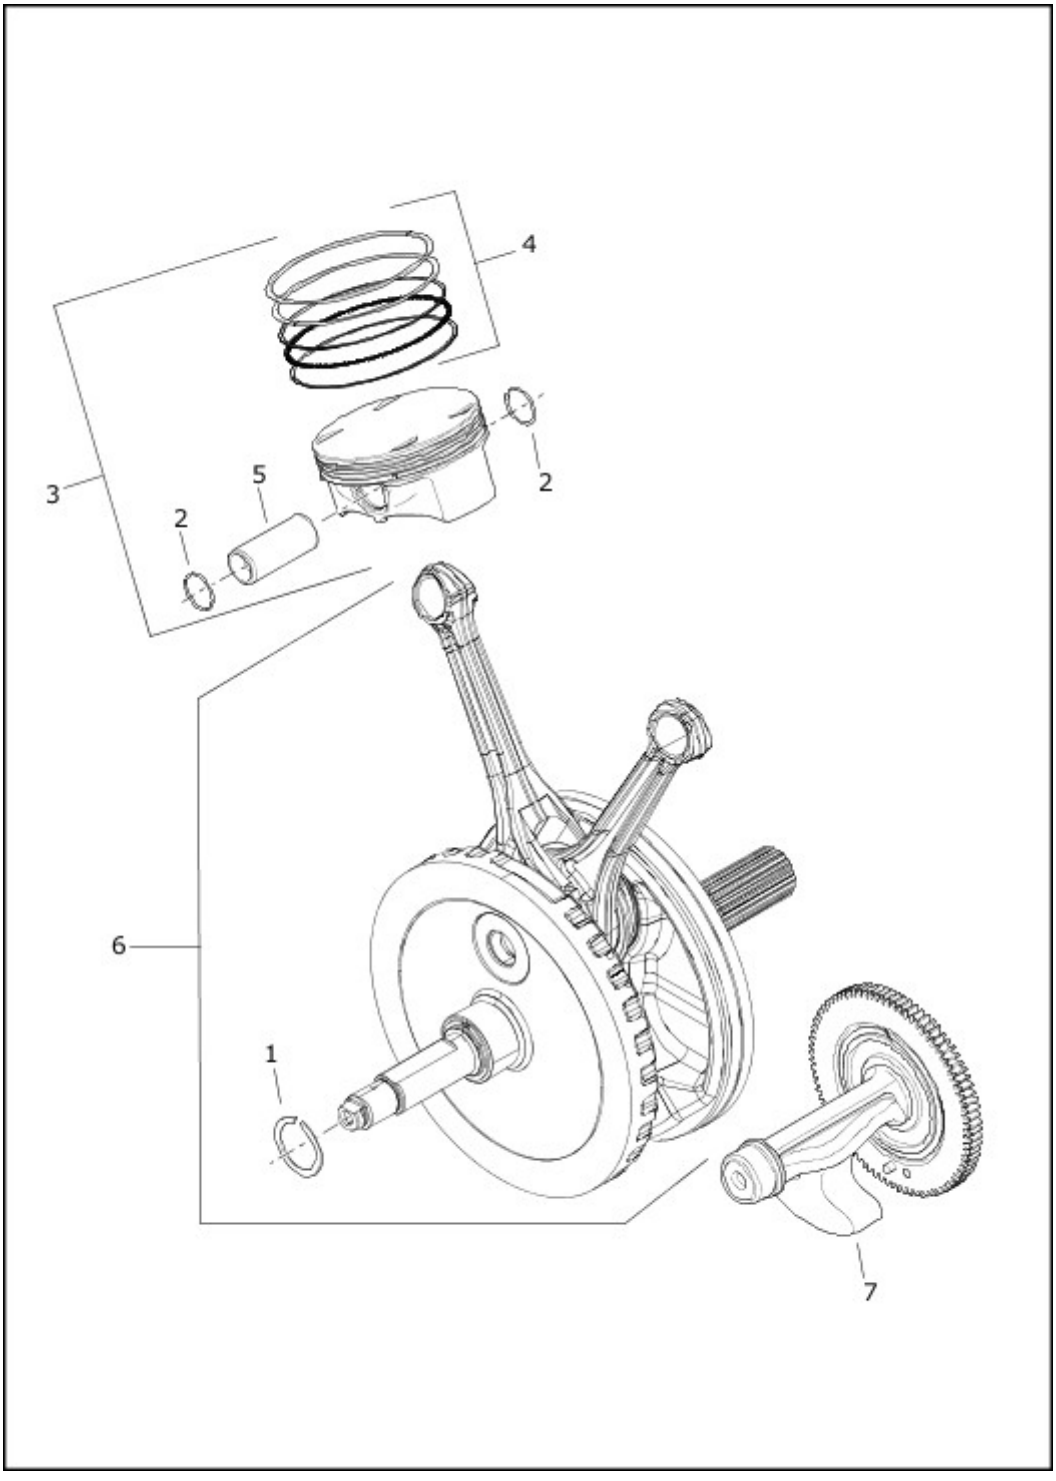


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	11177A	RETAINING RING	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
2	22097-99	LOCK RING, piston pin *(4)*	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
3	21900048	PISTON AND RINGS ASSEMBLY, with 22097-99, 22000061 and 22100006 (4.016 in) *(2)*	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
4	22000061	PISTON RING SET (4.016 in) *(2)*	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
5	22100006	PISTON PIN *(2)*	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
6	24100045A	FLYWHEEL ASSEMBLY KIT, with 11177A	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
7	35200057	BALANCER ASSEMBLY	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS

CRANKCASE

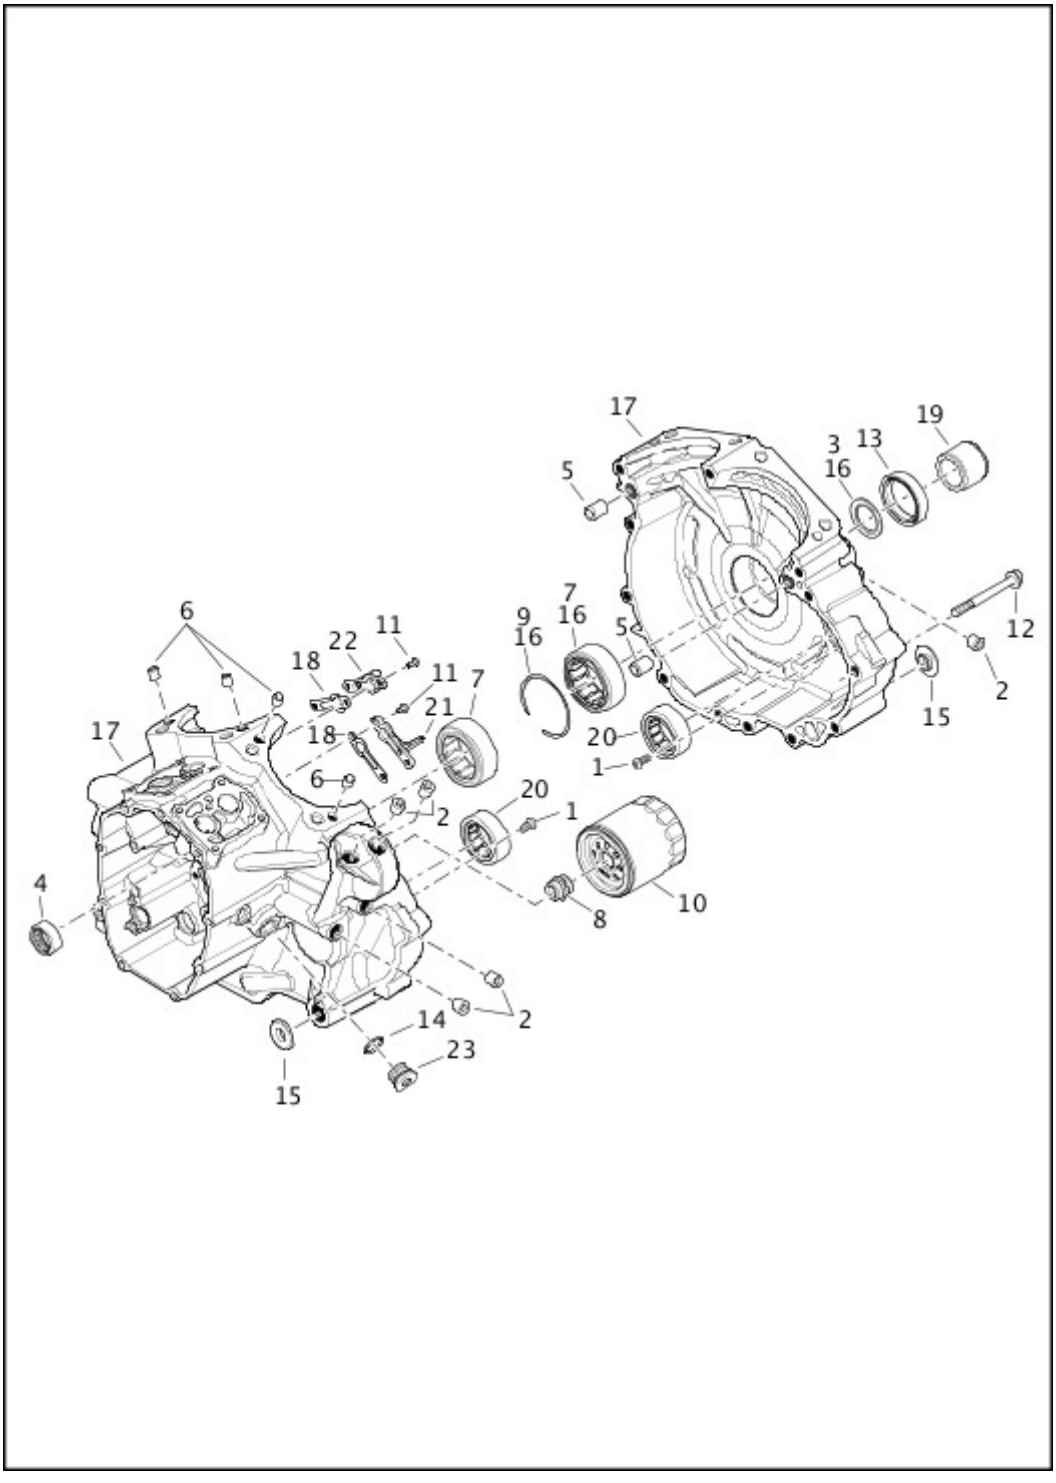


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	703B	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	765	PLUG *(5)*	ALL
3	8972	WASHER	ALL
4	9215	NEEDLE BEARING, left side, camshaft	ALL
5	16574-99A	DOWEL PIN *(2)*	ALL
6	16589-99A	DOWEL PIN *(4)*	ALL
7	24605-07	BEARING, main *(2)*	ALL
8	26352-95A	ADAPTER	ALL
9	35114-02	RING, retaining, internal	ALL
10	63731-99A	OIL FILTER (black)	ALL
11	68042-99	SCREW *(4)*	ALL
12	10200343	SCREW *(12)*	ALL
13	11000134	SEAL, oil	ALL
14	11900010	O-RING (Twin-Cooled)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
15	12400099	SPACER, front mount *(2)*	ALL
16	24100080	BEARING KIT, with 8972, 24605-07, 35114-02 and inner race	ALL
17	24400120	CRANKCASE SET, with 2, 5, 6, 7, 9, 11, 12, 15, 18, 20, 21 and 22 (black)	ALL
18	25700433	GASKET, piston jet *(2)*	ALL
19	29900041	SPACER, sprocket shaft	ALL
20	35200021	BEARING, balancer *(2)*	ALL
21	62700089	PISTON JET ASSEMBLY, front, with 25700433	ALL
22	62700117	PISTON JET ASSEMBLY, rear, with 25700433	ALL
23	62800013	PLUG, with 11900010 (Twin-Cooled)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)

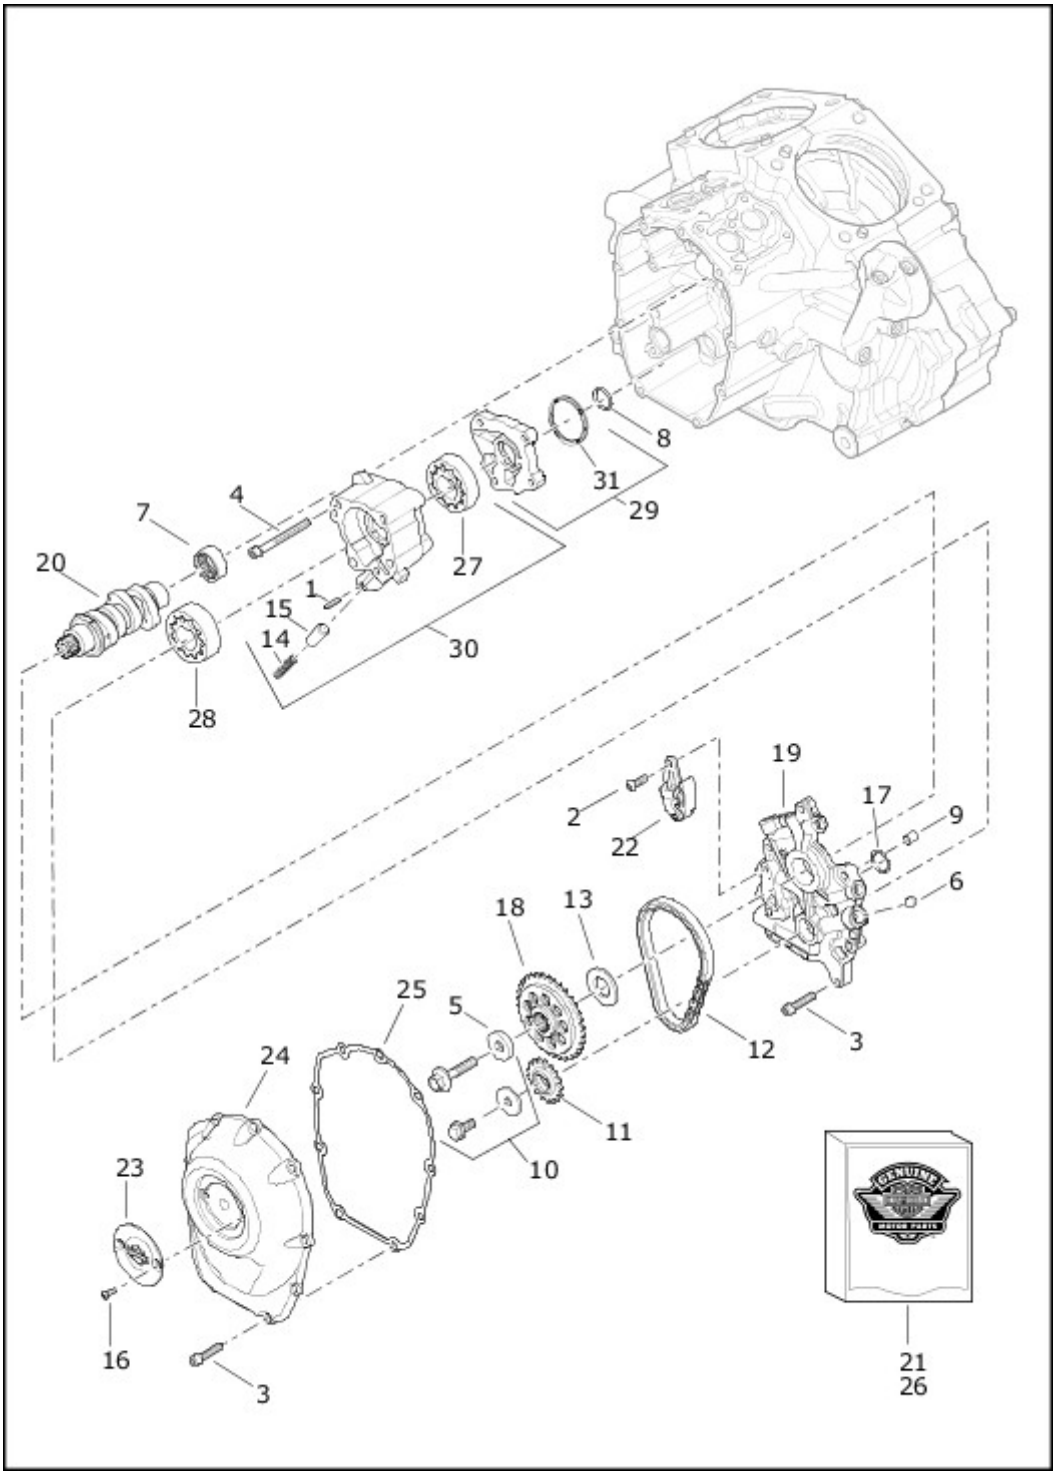

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	601	ROLL PIN	ALL
2	942	SCREW *(2)*	ALL
3	4740A	SCREW *(15)*	ALL
4	4822A	SCREW *(4)*	ALL
5	6294	WASHER	ALL
6	8873	BALL *(7)*	ALL
7	9215	NEEDLE BEARING, camshaft	ALL
8	11293	O-RING	ALL
9	16589-99A	DOWEL PIN	ALL
10	25566-06	CAMSHAFT DRIVE SPROCKET RETENTION KIT, with 6294, screws and washer	ALL
11	25673-06	SPROCKET, camshaft drive on crankshaft, 17 T	ALL
12	25675-06	CHAIN, primary camshaft drive	ALL
13	25729-06	SPACER, camshaft drive sprocket alignment 0.100 in thick (use as required)	ALL
13	25731-06	SPACER, camshaft drive sprocket alignment 0.110 in thick (use as required)	ALL
13	25734-06	SPACER, camshaft drive sprocket alignment 0.120 in thick (use as required)	ALL
13	25736-06	SPACER, camshaft drive sprocket alignment 0.130 in thick (use as required)	ALL
13	25737-06	SPACER, camshaft drive sprocket alignment 0.140 in thick (use as required)	ALL
13	25738-06	SPACER, camshaft drive sprocket alignment 0.150 in thick (use as required)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	26210-99	SPRING, relief valve	ALL
15	26400-82B	RELIEF VALVE, oil pump bypass	ALL
16	68120-00	SCREW *(2)*	ALL
17	11900103	O-RING	ALL
18	25400103	SPROCKET, camshaft drive, 34 teeth	ALL
19	25400133	CAMSHAFT SUPPORT PLATE, with 8873 and 16589-99A	ALL
20	25400190	CAMSHAFT	ALL
21	25400257	CAMSHAFT CHAIN AND FASTENER KIT, with 25566-06, 25673-06, 25675-06 and 25400103	ALL
22	25500013	CHAIN TENSIONER, camshaft drive chain	ALL

CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)

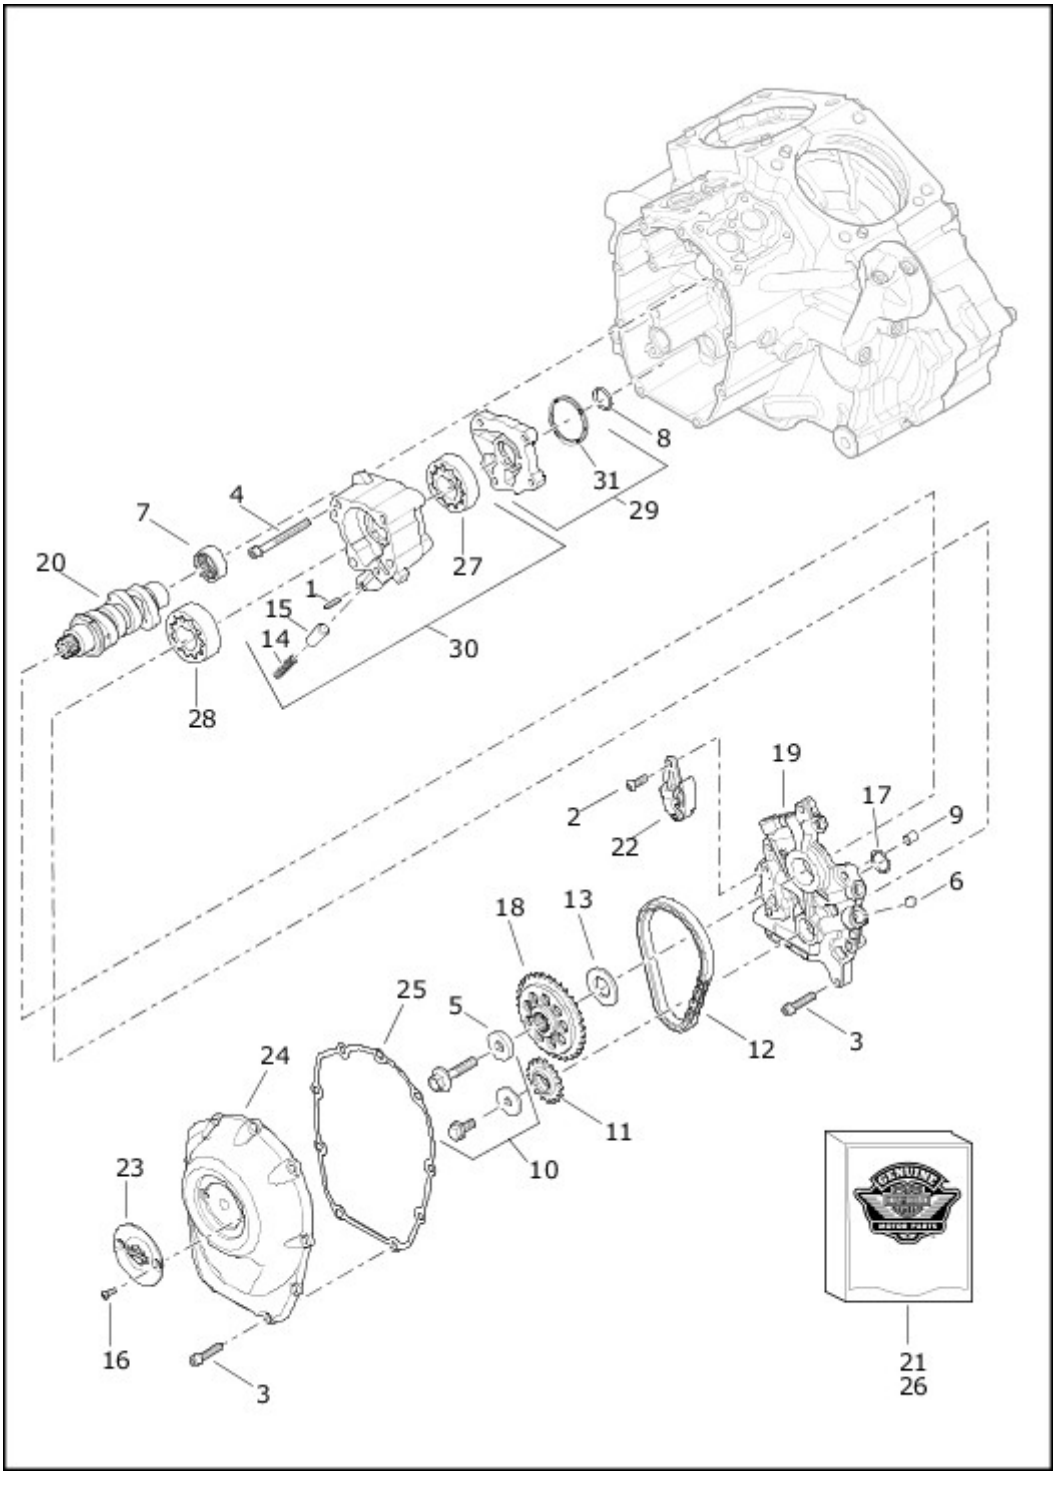


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	25600078	COVER, timer cover (black)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
23	25600110	COVER, timer cover	FLHTK, FLHTK SHRINE, FLHTKL
24	25700367	CAMSHAFT COVER (chrome)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
24	25700467	CAMSHAFT COVER (gloss black)	FLHRXS, FLHXS, FLTRXS
24	25700698	CAMSHAFT COVER (polished)	FLHT
25	25700370	GASKET, camshaft cover	ALL
26	25700731	GASKET KIT, camshaft service	ALL
27	62400052	GEROTOR ASSEMBLY	ALL
28	62400055	GEROTOR ASSEMBLY, feed (Twin-Cooled)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
28	62400126	GEROTOR ASSEMBLY, feed (Air-Cooled)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
29	62400206	COVER, oil pump assembly, with 62400205	ALL
30	62400178	OIL PUMP ASSEMBLY, with 601, 8873, 26210-99, 26400-82B, 62400052 and body (Air-Cooled) Also order 62400126	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
30	62400182	OIL PUMP ASSEMBLY, with 601, 8873, 26210-99, 26400-82B, 62400052 and body (Twin-Cooled) Also order 62400055	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
31	62400205	OIL SEAL	ALL

ENGINE MOUNTS AND STABILIZER LINK

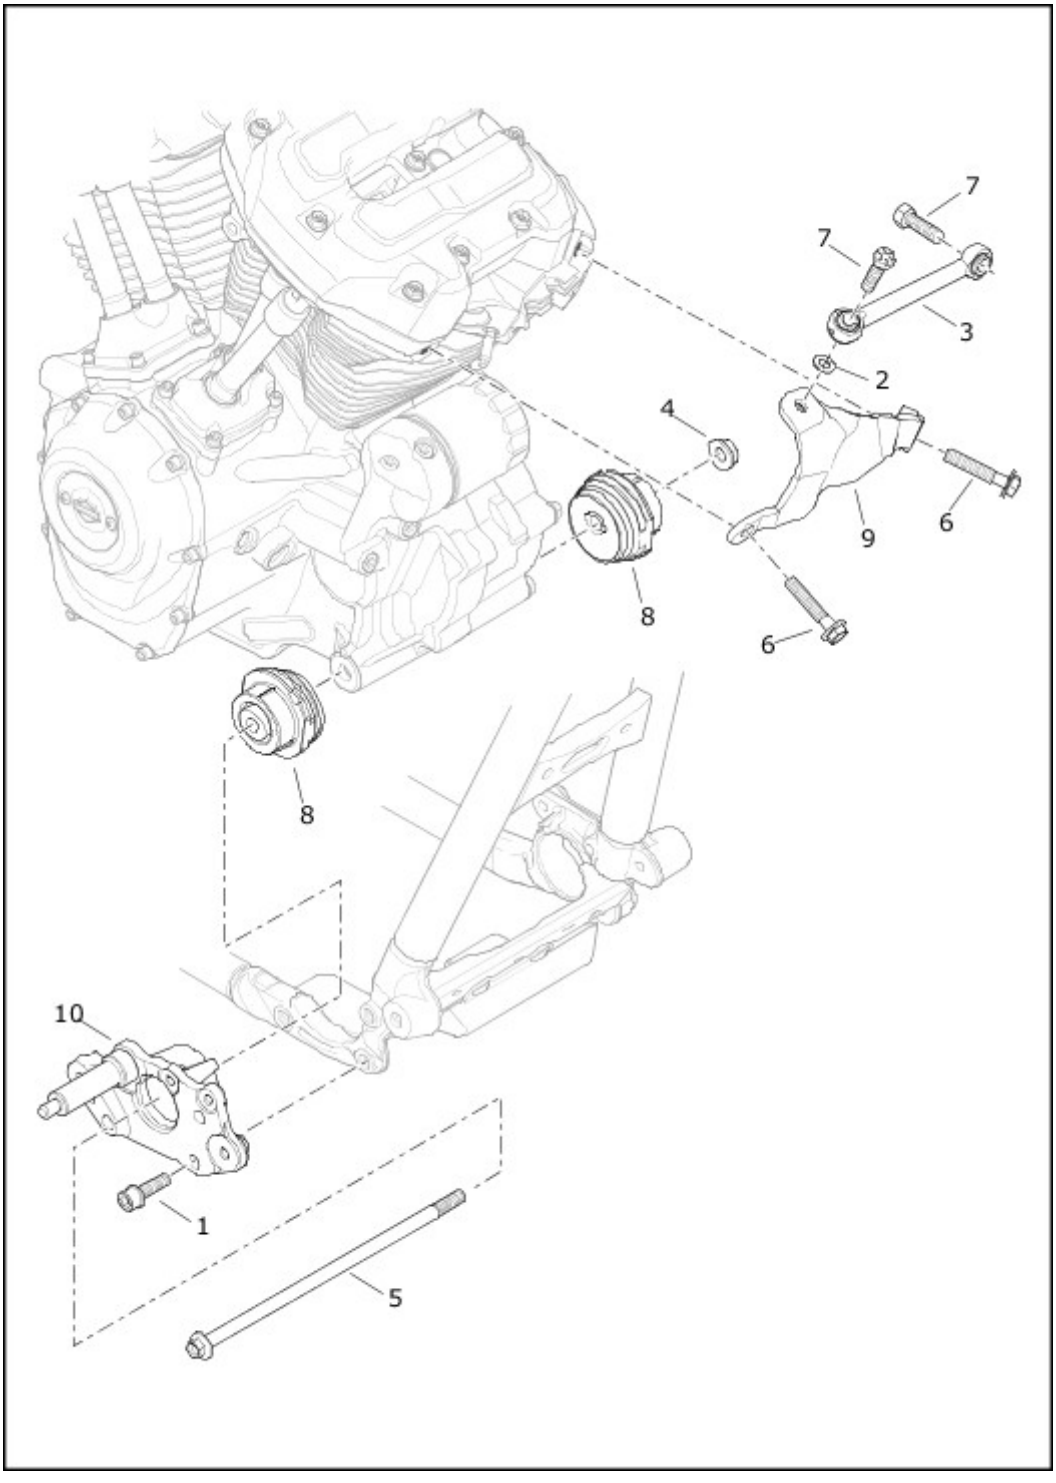


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4688	SCREW *(3)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	6127	WASHER	ALL
3	16219-09	STABLIZER LINK	ALL
4	10100062	LOCKNUT	ALL
5	10200393	SCREW	ALL
6	10200408A	SCREW *(2)*	ALL
7	10200463	SCREW *(2)*	ALL
8	16300005	ENGINE MOUNT, front *(2)*	ALL
9	16400041	BRACKET, tie link	ALL
10	16400042	END CAP, front mount	ALL

INDUCTION MODULE, FUEL

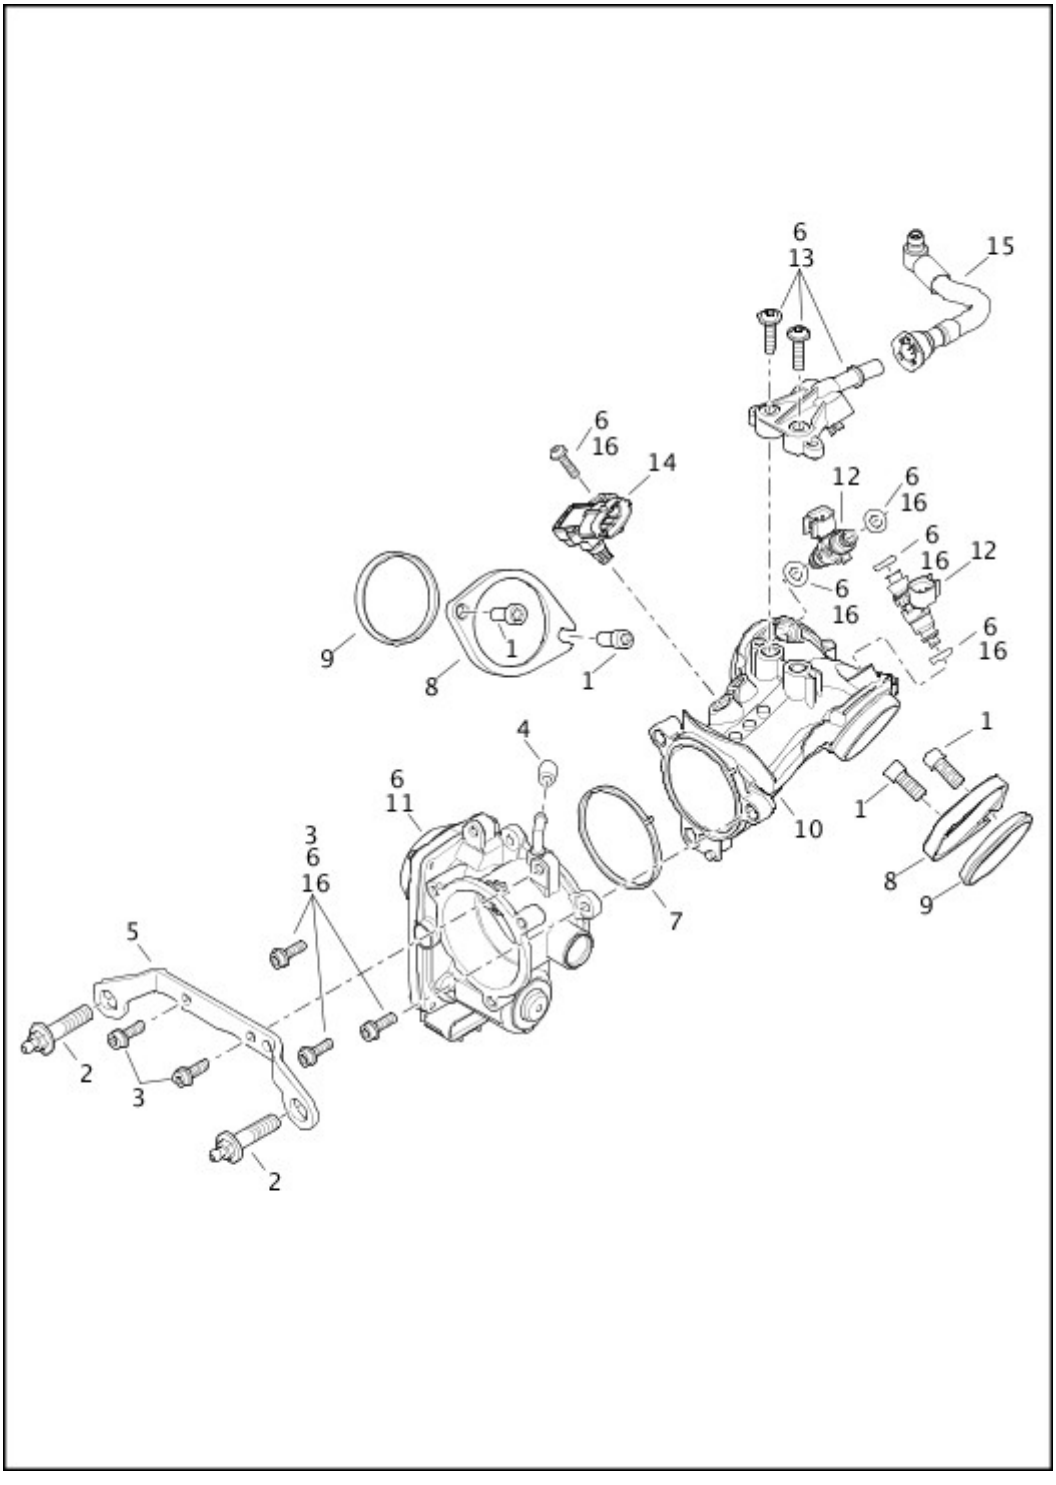


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3275	SCREW *(4)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	29465-08B	BREATHER BOLT *(2)*	ALL
3	10200373	SCREW *(5)*	ALL
4	12100069	PLUG, purge tube cap	ALL
5	16400049	BRACKET, induction module	ALL
6	27200025	MANIFOLD THROTTLE BODY INTAKE KIT, with 27300122, 27400019 and 91800058	ALL
7	27300082	GASKET, throttle body to manifold	ALL
8	27300086	FLANGE, intake *(2)*	ALL
9	27300087	SEAL, intake *(2)*	ALL
10	27300121	INTAKE MANIFOLD ASSEMBLY, with 27300082	ALL
11	27300122	THROTTLE BODY ASSEMBLY, with 12100069	ALL
12	27400015	FUEL INJECTOR ASSEMBLY, with O-rings *(2)*	ALL
13	27400019	FUEL RAIL KIT	ALL
14	32700065	SENSOR, temperature manifold absolute pressure (TMAP), with O-ring	ALL
15	61200022	FUEL LINE	ALL
16	91800058	HARDWARE KIT, induction module	ALL

AIR CLEANER

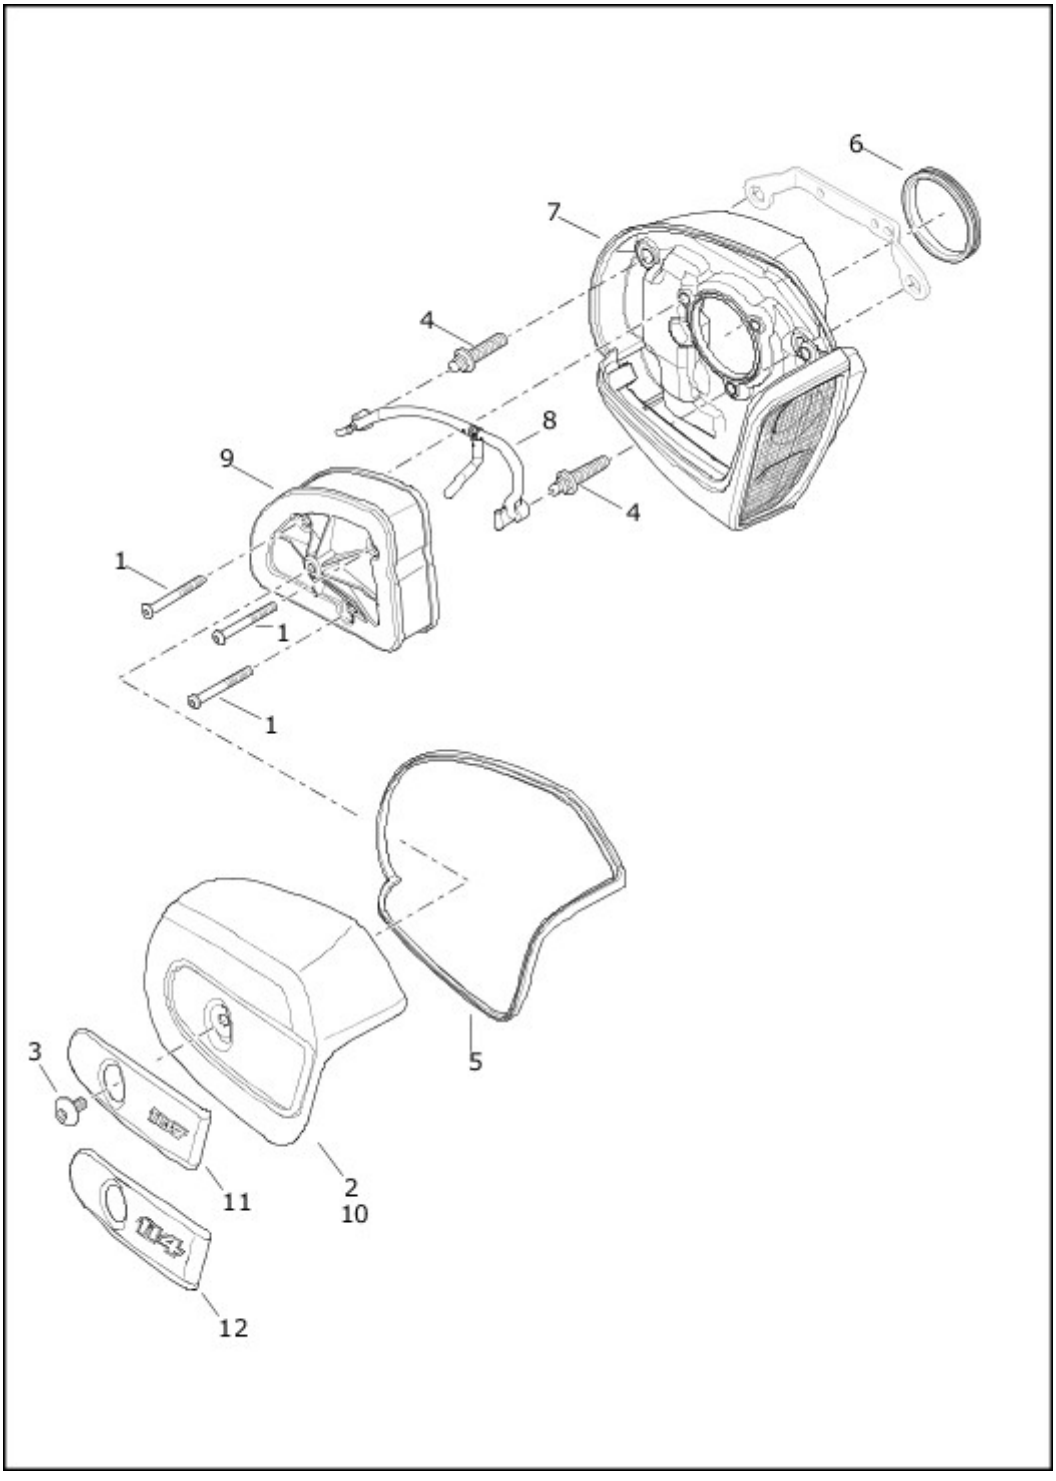

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	946	SCREW *(3)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	29108-08	LABEL, air cleaner warning (Domestic, California)	ALL
2	14001799	LABEL, air cleaner warning (China)	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	29269-83A	SCREW	ALL
4	29465-08B	BREATHER BOLT *(2)*	ALL
5	29000106	SEAL, air cleaner cover	ALL
6	29000108	GASKET, induction module to backplate	ALL
7	29000120	BACKPLATE ASSEMBLY (Domestic)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	29000121	BACKPLATE ASSEMBLY (HDI)	FLHR, FLHRC, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
8	29400211	BREATHER HOSE	ALL
9	29400212	FILTER ELEMENT	ALL
10	29000216	COVER KIT, with 29108-08 (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
10	61300922	COVER KIT, with 29108-08 (gloss black)	FLHRXS, FLHXS, FLTRXS
10	29000301	COVER KIT, with 14001799 (chrome) (China)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
10	29000302	COVER KIT, with 14001799 (gloss black) (China)	FLHRXS, FLHXS, FLTRXS
11	61300467	INSERT, cover	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
12	61300934	INSERT, cover	FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	61300935	INSERT, cover	FLHTK, FLHTK SHRINE, FLHTKL
12	61300936	INSERT, cover	FLHRXS, FLHXS, FLTRXS

ALTERNATOR AND REGULATOR

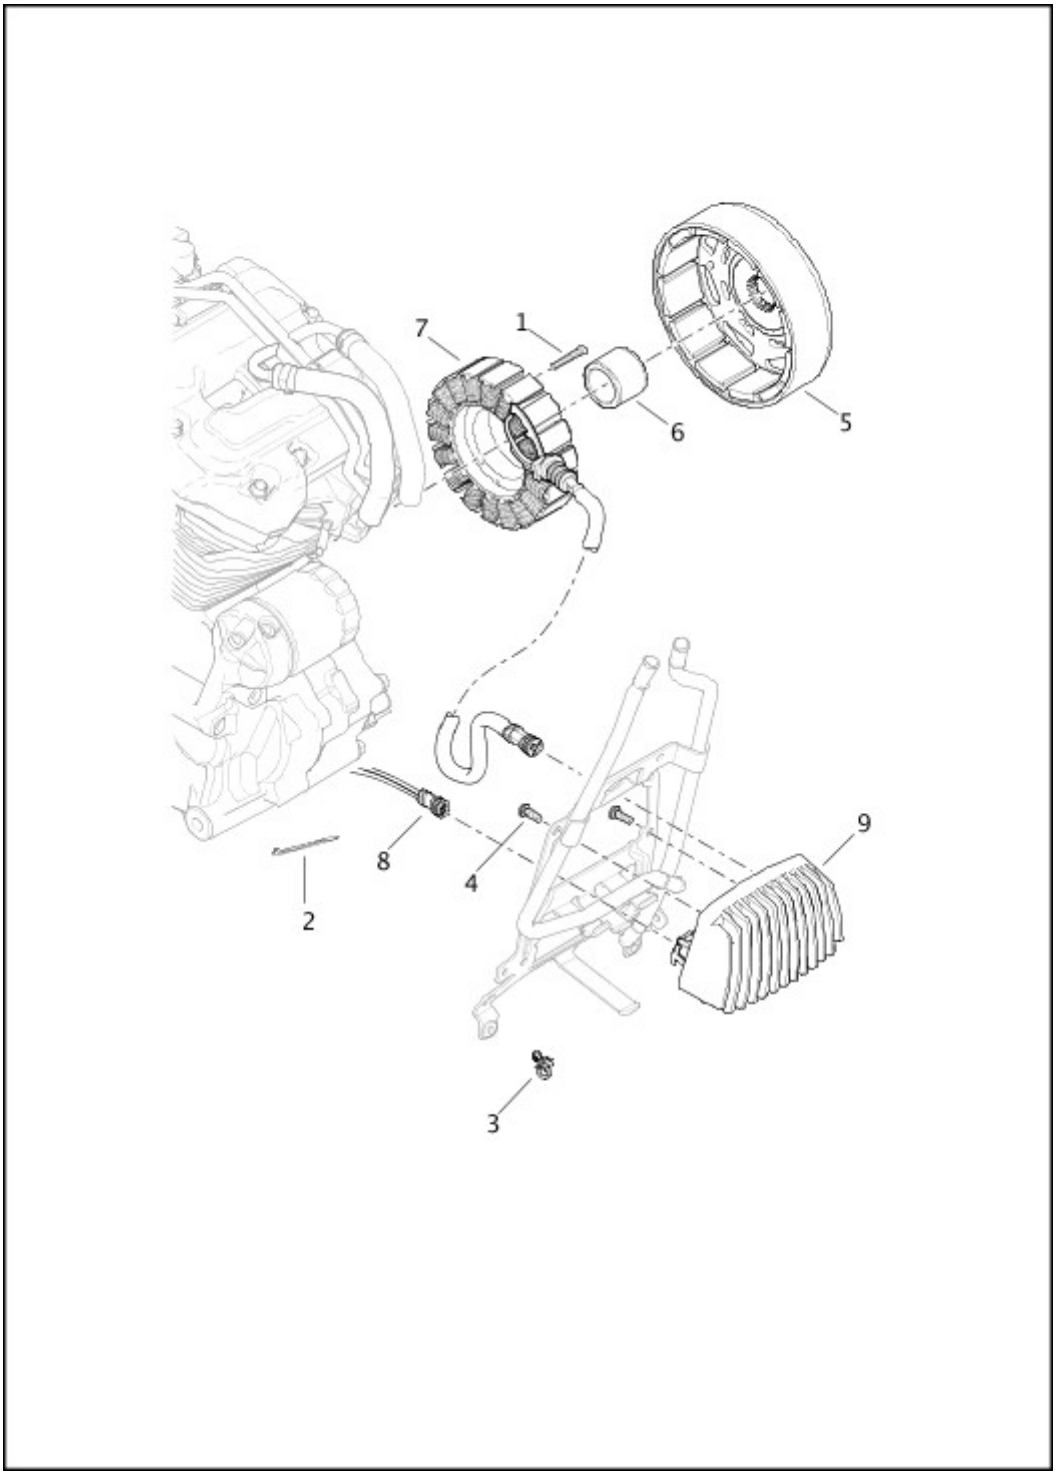


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3050	SCREW *(3)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	10039	CABLE STRAP *(3)*	ALL
3	10177	CABLE STRAP, anchored	ALL
4	10200422	SCREW *(4)*	ALL
5	29900038	ROTOR ASSEMBLY	ALL
6	29900041	SPACER, sprocket shaft	ALL
7	29900042A	STATOR ASSEMBLY, 3-phase, 48 A	ALL
8	69201423	DC LEAD ASSEMBLY, voltage regulator (from main wiring harness)	ALL
9	74700025	VOLTAGE REGULATOR ASSEMBLY	ALL

ELECTRONIC CONTROL MODULE (ECM) AND COIL

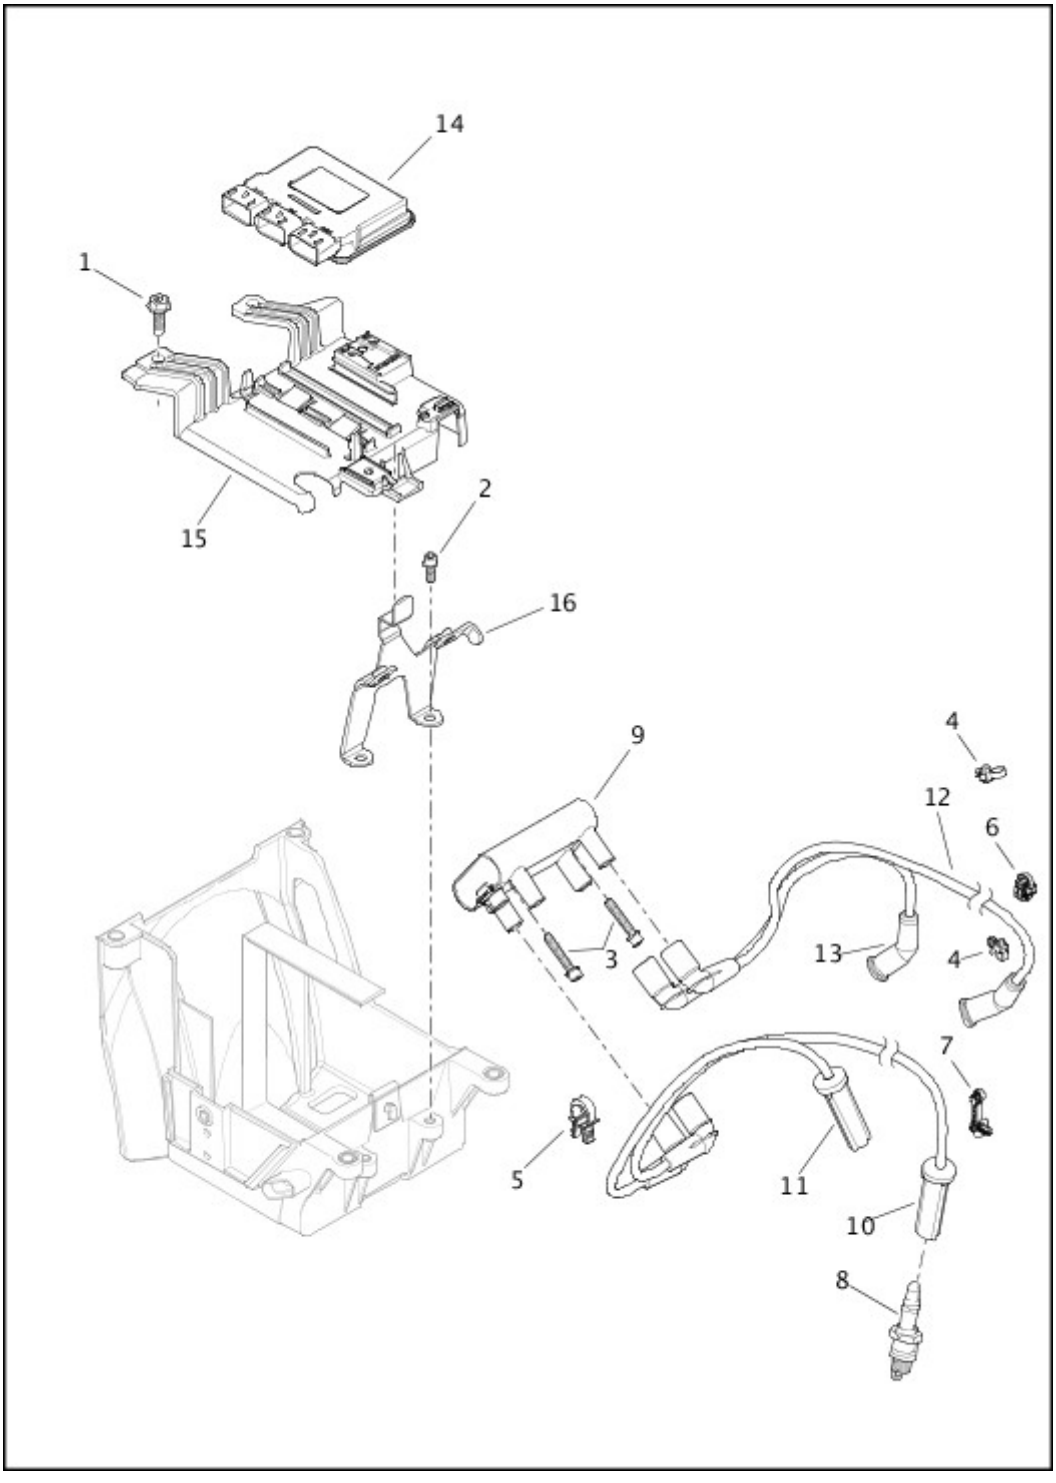


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3634	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	4705	SCREW *(2)*	ALL
3	4813A	SCREW *(2)*	ALL
4	10177	CABLE STRAP, anchored *(6)*	ALL
5	70681-09	RETAINER, wire harness	ALL
6	12200170	CLIP, retaining, anchored	ALL
7	12200172	CABLE STRAP, anchored	ALL
8	31600012	SPARK PLUG, M10 *(4)*	ALL
9	31600017	IGNITION COIL	ALL
10	31600018B	SPARK PLUG CABLE, right front cylinder, with 10177 and 12200172	ALL
11	31600023A	SPARK PLUG CABLE, right rear cylinder, with 10177	ALL
12	31600078A	SPARK PLUG CABLE, left front cylinder, with 10177 and 12200170	ALL
13	31600079	SPARK PLUG CABLE, left rear cylinder, with 10177	ALL
14	41000599	ELECTRONIC CONTROL MODULE (ECM), Requires Digital Technician II programming.	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
14	41000668	ELECTRONIC CONTROL MODULE (ECM), Requires Digital Technician II programming.	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX
15	69200174	CADDY, electronic control module (ECM)	ALL
16	69201178	BRACKET, battery hold down	ALL

SENSORS AND SWITCHES, ENGINE

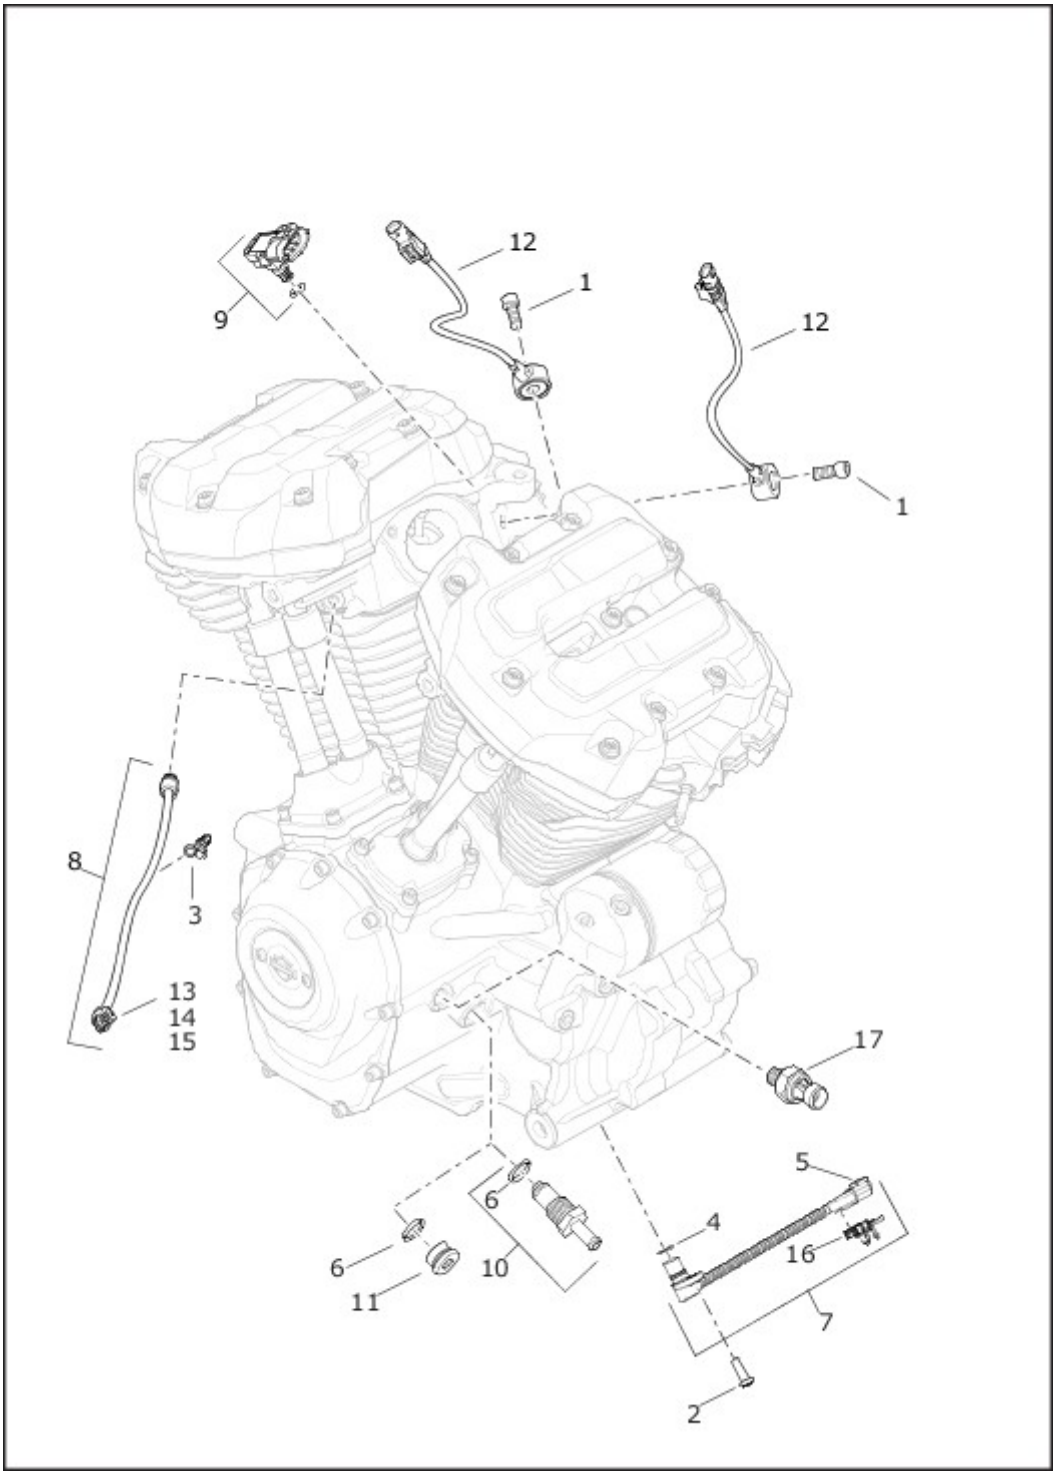


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3275	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	942	SCREW	ALL
3	10177	CABLE STRAP, anchored	ALL
4	11289A	O-RING, crankshaft position sensor	ALL
5	74194-98	TERMINAL, pin, 20-24 AWG *(2)*	ALL
6	11900010	O-RING	ALL
7	32700048	SENSOR, crankshaft position, with 11289A, 74194-98 and 69201302	ALL
8	32700054	SENSOR, engine temperature, with 10177, 69201299, 69201300 and 69201301	ALL
9	32700065	SENSOR, temperature manifold absolute pressure (TMAP), with O-ring	ALL
10	62700141	CHECK VALVE, oil pressure, with 11900010 (Air-Cooled)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
11	62800013	PLUG ASSEMBLY, with 11900010 (Twin-Cooled)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
12	69200840	SENSOR, knock *(2)*	ALL
13	69201299	HOUSING, two-way socket	ALL
14	69201300	TERMINAL, socket, 20 AWG *(2)*	ALL
15	69201301	WIRE SEAL, 20-22 AWG (green) *(2)*	ALL
16	69201302	CONNECTOR ANCHOR	ALL
17	71400112	OIL PRESSURE SWITCH	ALL

STARTER MOTOR

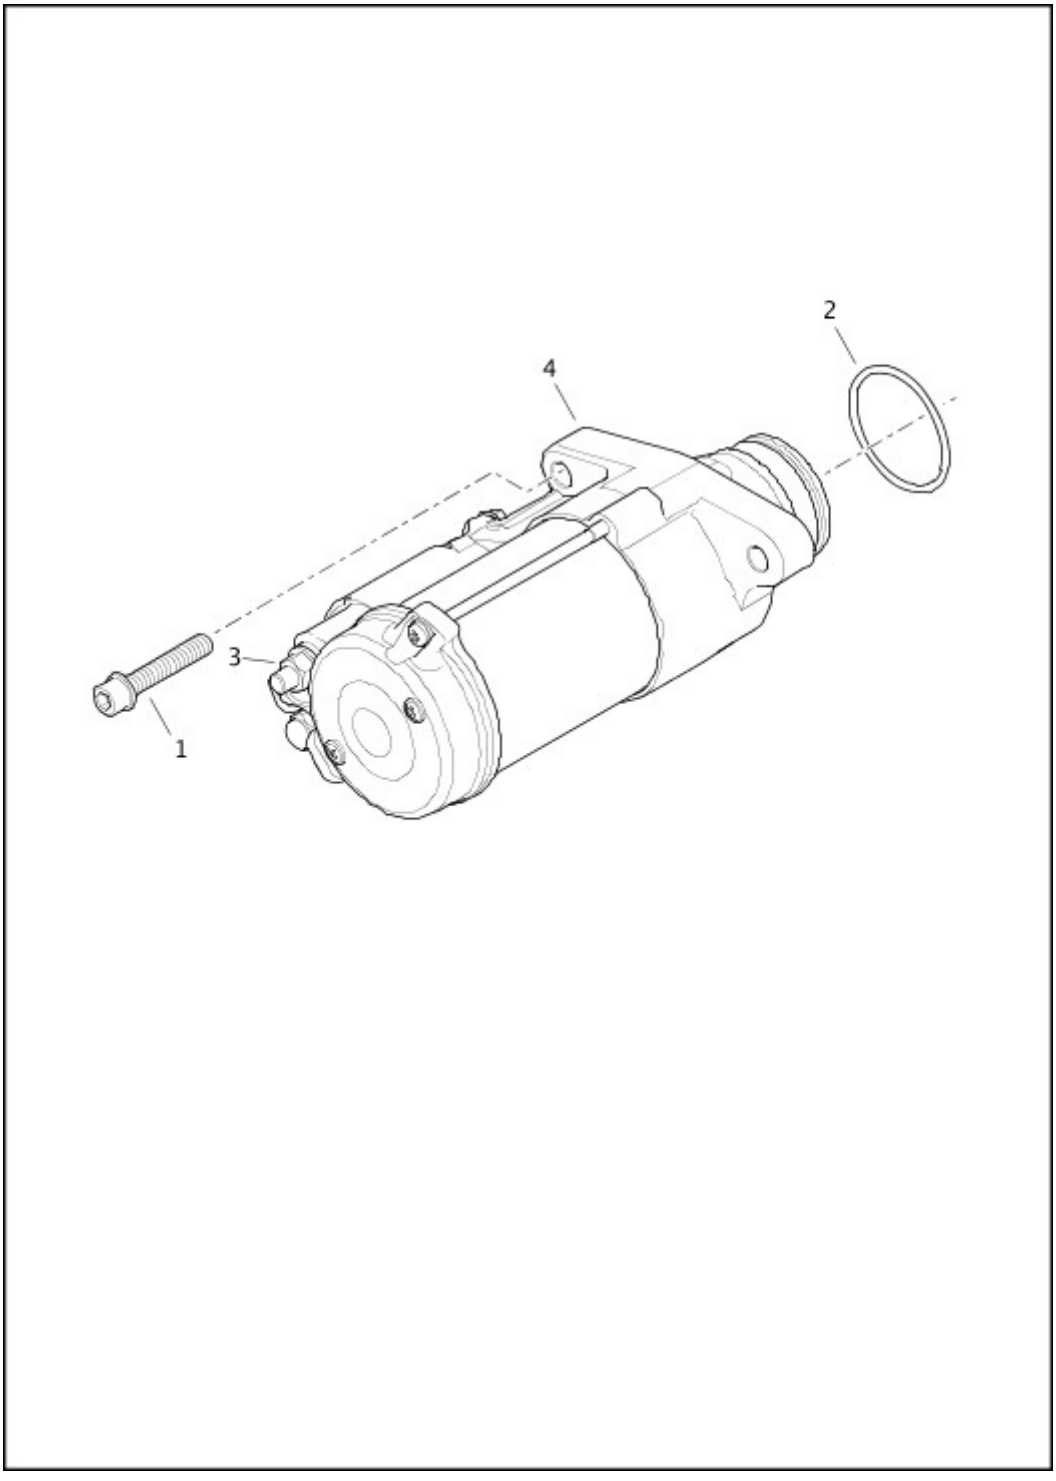


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4419	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	27444-00Y	O-RING, starter-to-case	ALL
3	31694-90	NUT	ALL
4	31400053	STARTER ASSEMBLY COMPLETE (black)	ALL

SHIFTER, GEAR

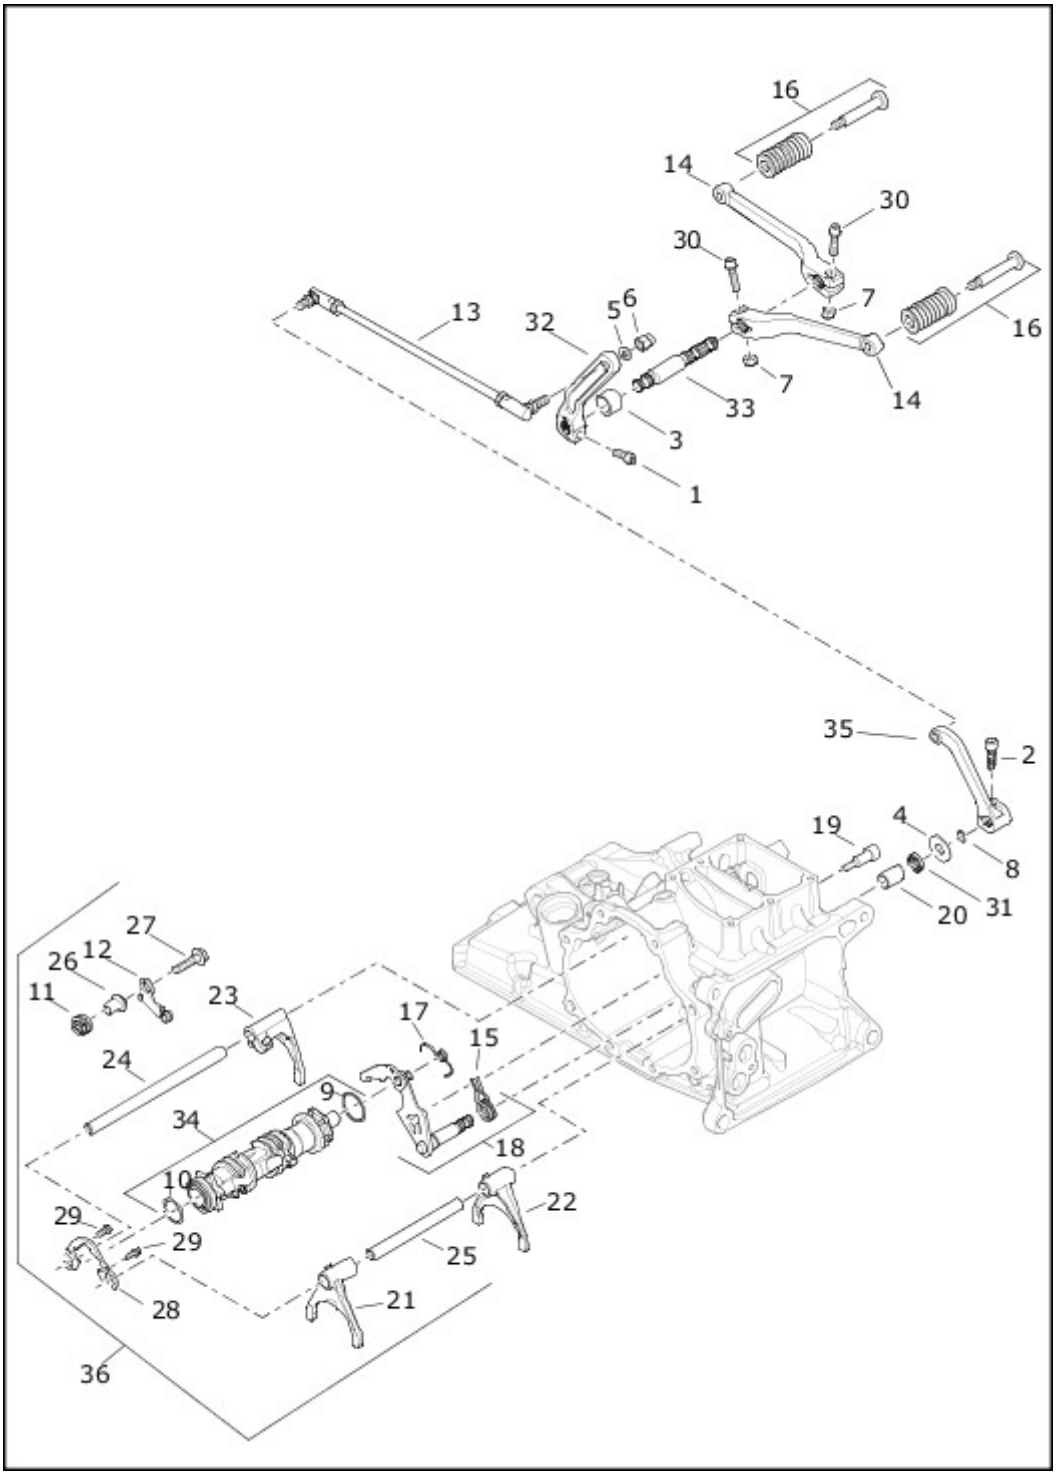

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	780	SCREW	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	856A	SCREW	ALL
3	5817	SPACER	FLHR, FLHRC, FLHRXS, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	33600304	SPACER	FLHT
4	6497HW	WASHER	ALL
5	6702	WASHER	ALL
6	7330	ACORN NUT	ALL
7	7686	LOCKNUT	ALL
8	11150	RETAINING RING	ALL
9	11389	RING, shift camshaft retaining	ALL
10	11575	RING, shift camshaft retaining	ALL
11	33389-07	SPRING, detent	ALL
12	33409-06B	DETENT ARM ASSEMBLY, with 33389-07	ALL
13	33719-79B	SHIFTER ROD	ALL
14	33895-82E	SHIFT LEVER KIT, with 7686, 10200350 and shifter lever (chrome) *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
14	33600243	SHIFT LEVER KIT, with 7686, 10200350 and shifter lever (gloss black) *(2)*	FLHRXS, FLHXS, FLTRXS
15	34064-00C	SPRING, shift lever centering	ALL
16	34611-65A	TOE SHIFTER PEG KIT *(2)*	ALL
17	34987-06	SPRING, ratchet lever	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	35081-06	SHIFT MECHANISM, with 34064-00C and 34987-06	ALL
19	35082-07	CENTERING SCREW, shift lever	ALL
20	35186-06	SLEEVE	ALL
21	35187-06	FORK, shift 1 - 2	ALL
22	35210-06	FORK, shift 3 - 4	ALL
23	35217-06	FORK, shift 5 - 6	ALL
24	35222-06	SHAFT, 5 - 6 shift fork	ALL
25	35223-06	SHAFT, 1 - 2 and 3 - 4 shift fork	ALL
26	35243-06	SLEEVE	ALL
27	35244-06	SCREW	ALL
28	35249-06A	LOCK PLATE, shift camshaft	ALL
29	35259-06	SCREW *(2)*	ALL
30	10200350	SCREW *(2)*	ALL
31	11000101	OIL SEAL	ALL
32	33600088	LEVER, gear shifter (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
32	33600188	LEVER, gear shifter (gloss black)	FLHRXS, FLHXS, FLTRXS
33	33600091	SHAFT	ALL
34	33900172	SHIFTER CAMSHAFT ASSEMBLY, with 11389, 11575 and bearing	ALL
35	33900175	LEVER, shifter rod	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
36	35000198A	GEAR PACK, FORKS AND DRUM SUBASSEMBLY, with 9, 10, 11, 12, 21, 22, 23, 24, 25, 26, 27, 28, 29, 34, 7340, 35260-06B, input shaft, countershaft and gears (black)	ALL

TRANSMISSION BEARINGS AND COVERS

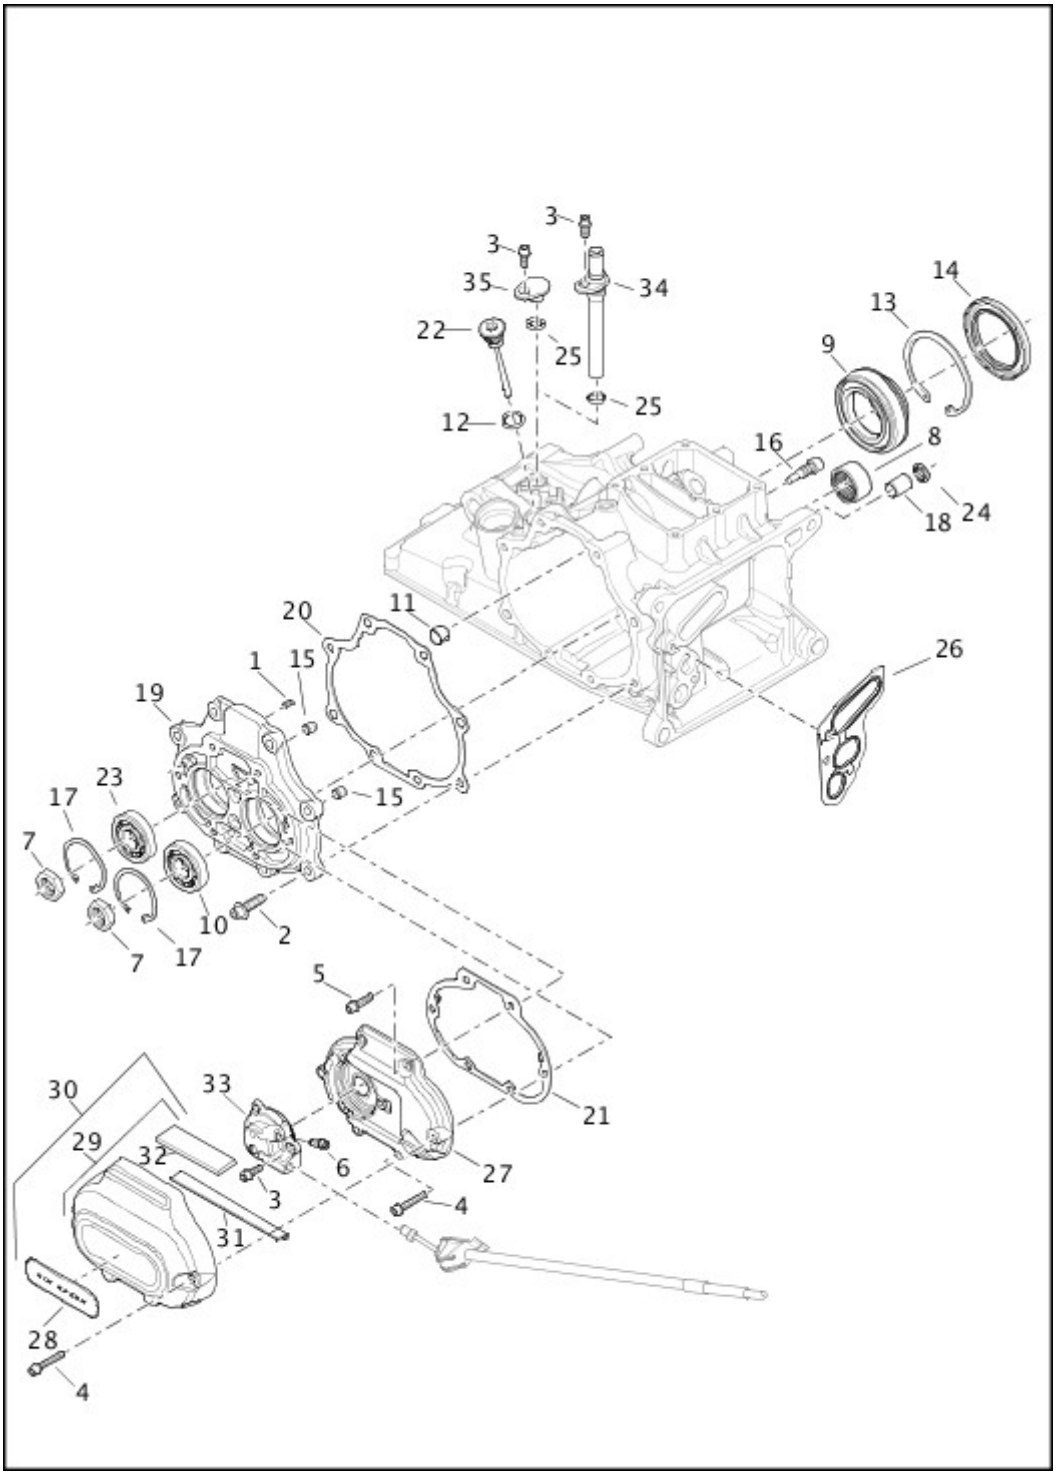

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	221	PIN *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3249	SCREW *(8)*	ALL
3	4705	SCREW *(4)*	ALL
4	4718A	SCREW *(4)*	ALL
5	4741A	SCREW *(2)*	ALL
6	4890	BLEEDER SCREW	ALL
7	7340	NUT, mainshaft and countershaft *(2)*	ALL
8	8963	BEARING, needle	ALL
9	8967A	BEARING	ALL
10	8970A	BEARING	ALL
11	9701A	BUSHING	ALL
12	11132A	O-RING, dipstick	ALL
13	11161	RETAINING RING	ALL
14	12074	SEAL	ALL
15	16583-00A	BUSHING, dowel *(2)*	ALL
16	35082-07	CENTERING SCREW, shift lever	ALL
17	35087-99A	RETAINING RING *(2)*	ALL
18	35186-06	SLEEVE	ALL
19	35260-06B	BEARING HOUSING ASSEMBLY, with 221, 8970A, 16583-00A, 35087-99A and 11000010 (black)	ALL
20	35654-06	GASKET, bearing housing	ALL
21	36805-06	GASKET, cover	ALL
22	37065-06A	DIPSTICK (chrome)	ALL
23	11000010	BEARING	ALL
24	11000101	OIL SEAL	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
25	11900092	O-RING	ALL
26	24400215	GASKET	ALL
27	25700178	INNER SIDE COVER, transmission	ALL
28	25800048	INSERT, side cover, six speed	FLHTK, FLHTK SHRINE, FLHTKL
28	25800049	INSERT, side cover, six speed	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
29	25800054	SIDE COVER, transmission, with 25800109 and 25800110 (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
29	25800055	SIDE COVER, transmission, with 25800109 and 25800110 (gloss black)	FLHRXS, FLHXS, FLTRXS
30	25800056	SIDE COVER ASSEMBLY, transmission, with 25800048 and 25800054 (chrome)	FLHTK, FLHTK SHRINE, FLHTKL
30	25800057	SIDE COVER ASSEMBLY, transmission, with 25800049 and 25800054 (chrome)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLTRU, FLTRX
31	25800109	TRIM, rubber	ALL
32	25800110	TAPE, foam	ALL
33	37200131B	SECONDARY CLUTCH ACTUATOR, with 4890	ALL
34	62700146	FITTING ASSEMBLY, transmission oil return, with 11900092 (Air-Cooled)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
35	62700150	PLUG, transmission, with 11900092 (Twin-Cooled)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

TRANSMISSION HOUSING, COVER AND OIL PAN

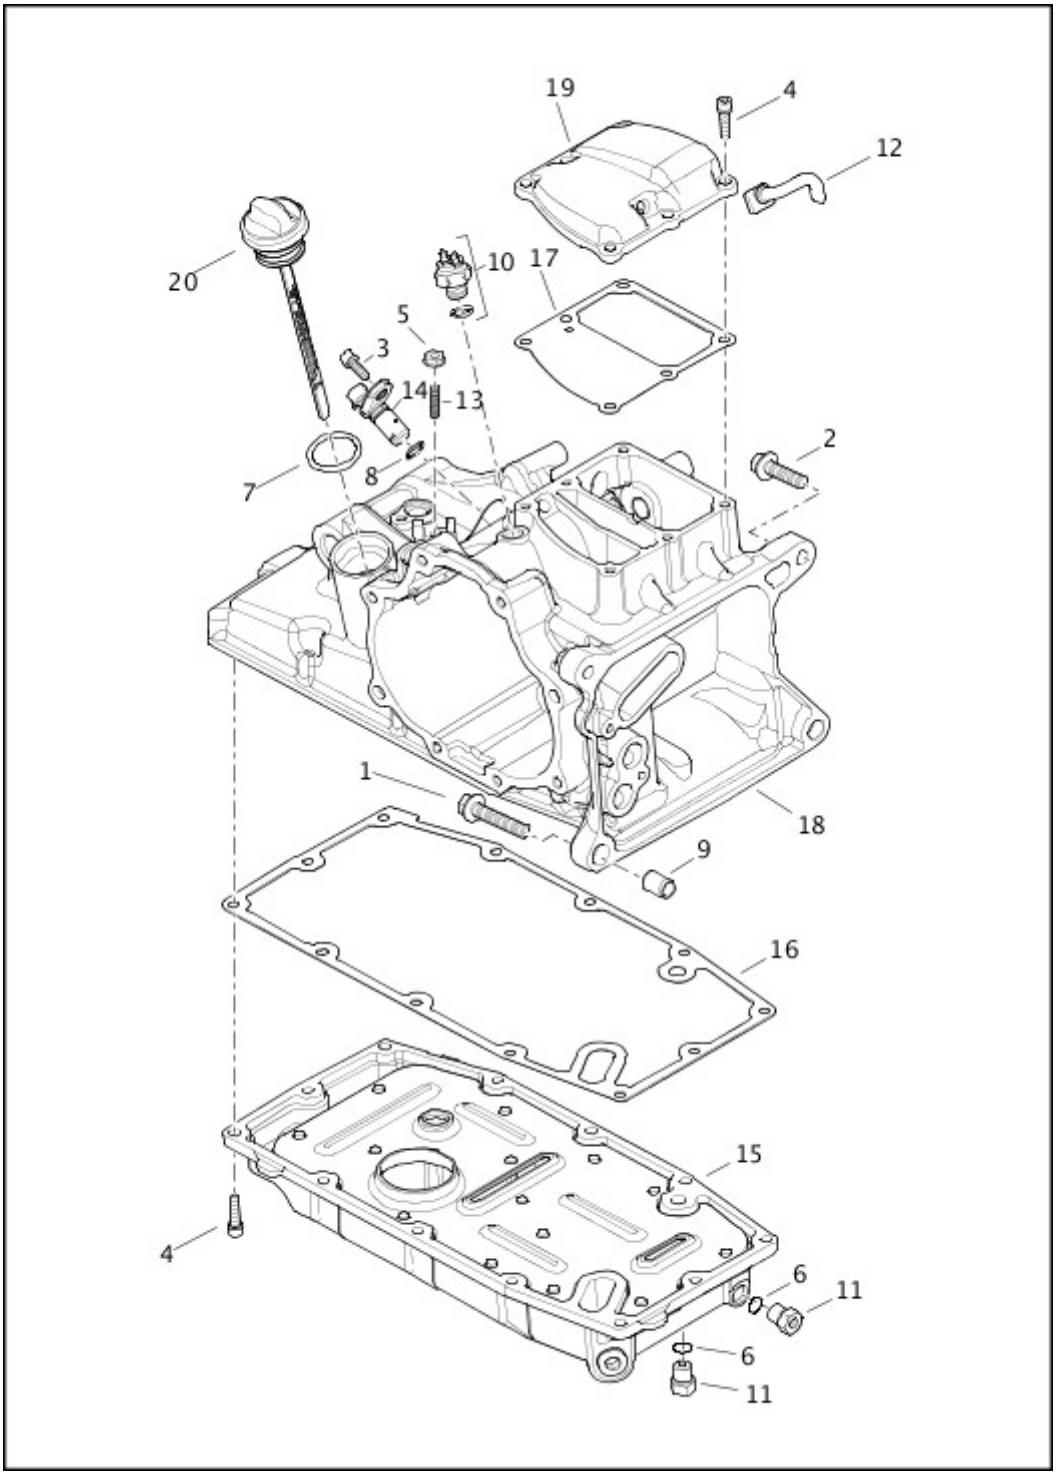

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3699D	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3983	SCREW *(2)*	ALL
3	4705	SCREW	ALL
4	4741A	SCREW *(18)*	ALL
5	7792	NUT	ALL
6	11105	O-RING *(2)*	ALL
7	11120	O-RING	ALL
8	11289A	O-RING	ALL
9	16574-99A	DOWEL PIN *(2)*	ALL
10	33926-06B	SWITCH, neutral indicator, with O-ring	ALL
11	60328-98B	PLUG, magnetic, with 11105 *(2)*	ALL
12	62372-09	VENT HOSE, transmission	ALL
13	66290-06	STUD, ground	ALL
14	74402-05B	SPEED SENSOR, with 11289A	ALL
15	24400180	OIL PAN ASSEMBLY, with 60328-98B (black)	ALL
16	25700452	GASKET, oil pan	ALL
17	25700453	GASKET, upper cover	ALL
18	34700084	TRANSMISSION CASE SUBASSEMBLY, with 3594, 8963, 8967A, 9701A, 11161, 12074, 16574-99A, 35082-07, 35122-06, 35186-06, 35241-06, 35242-06, 66290-06, 11000101 and 35000152 (black)	ALL
19	34800025	TRANSMISSION COVER, top, with 62372-09 (chrome)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	34800031	TRANSMISSION COVER, top, with 62372-09 (gloss black)	FLHRXS, FLHXS, FLTRXS
19	34800038	TRANSMISSION COVER, top, with 62372-09 (black)	FLHT, FLHX, FLTRX
20	62700136	DIPSTICK ASSEMBLY, with 11120 (black cap)	ALL

TRANSMISSION GEARS

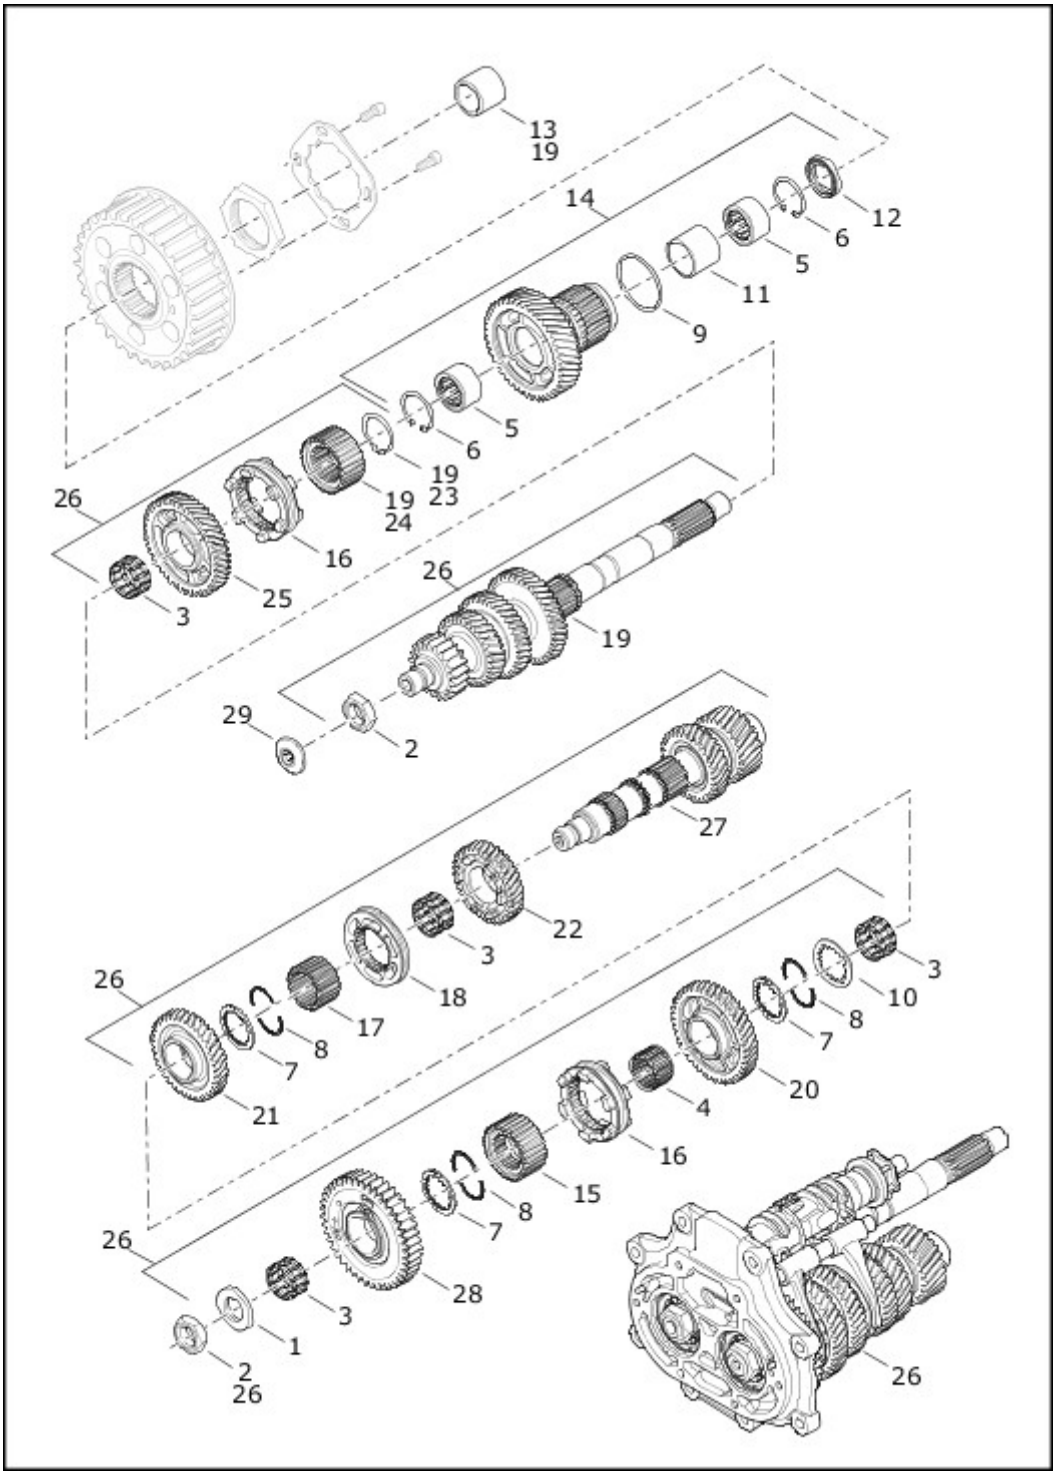

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	5837A	SPACER	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	7340	NUT *(2)*	ALL
3	8026K	BEARING, needle *(4)*	ALL
4	8041	BEARING, needle	ALL
5	8042A	BEARING, needle *(2)*	ALL
6	10991A	RETAINING RING *(2)*	ALL
7	11081A	RING, lock *(3)*	ALL
8	11082A	SECURING SEGMENT *(6)*	ALL
9	11201	O-RING	ALL
10	11207A	WASHER, internal spline	ALL
11	11599A	SPACER, bearing	ALL
12	12077	OIL SEAL	ALL
13	34091-08	BEARING, inner race	ALL
14	35122-06A	GEAR ASSEMBLY, driven output, with 8042, 10991A, 11201, 11599A and 12077	ALL
15	35124-06	GUIDE HUB, dog ring	ALL
16	35126-06	DOG RING, lugged *(2)*	ALL
17	35202-06	GUIDE HUB, dog ring	ALL
18	35204-06	DOG RING, pocketed	ALL
19	35467-06C	INPUT SHAFT KIT, with 34091-08, 12200144 and 35000178	ALL
20	35807-06	GEAR, countershaft-second	ALL
21	35811-06	GEAR, countershaft-third	ALL
22	35814-06	GEAR, countershaft-fourth	ALL
23	12200144	RETAINING RING	ALL
24	35000178	GUIDE HUB, dog ring	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
25	35000179	GEAR, fifth input	ALL
26	35000198A	GEAR PACK, FORKS AND DRUM SUBASSEMBLY, with 1, 2, 3, 4, 7, 8, 10, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 27, 28, 35260-06B, shifter camshaft and forks (black)	ALL
27	35600094	COUNTERSHAFT ASSEMBLY	ALL
28	35600103	GEAR ASSEMBLY, countershaft-first	ALL
29	36300026	OIL DEFLECTOR	ALL

CLUTCH

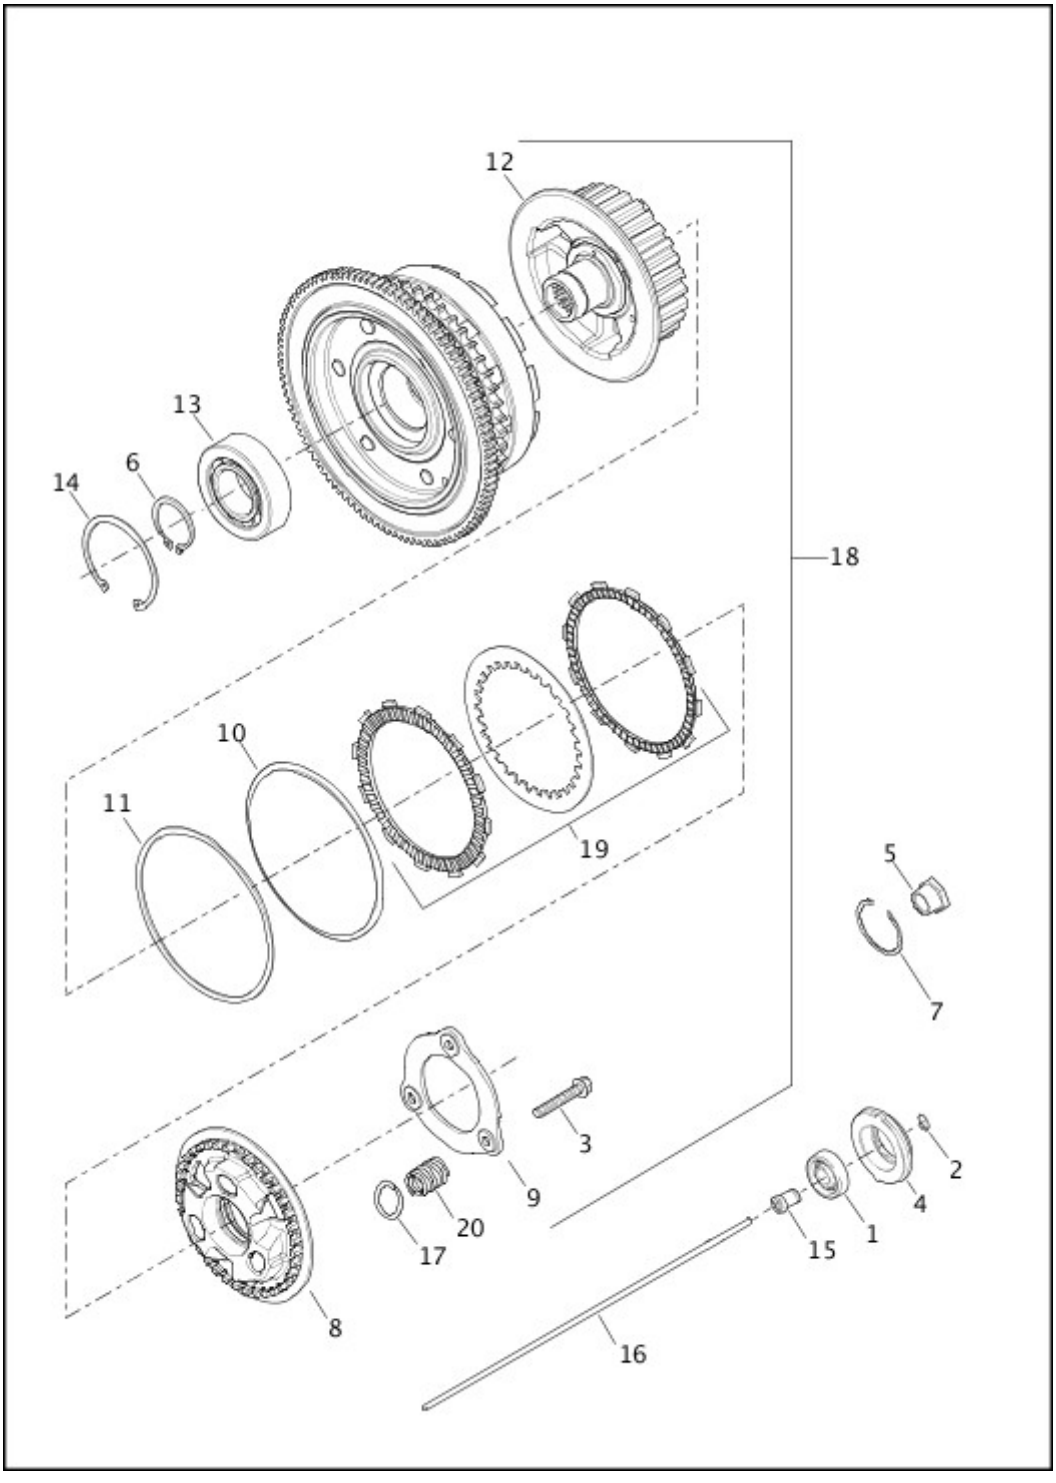


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	8885	BEARING	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	11143	RETAINING RING, external	ALL
3	36706-01K	BOLT *(3)*	ALL
4	36731-91	PLATE, release, with 8885	ALL
5	37496-90A	NUT, mainshaft	ALL
6	37904-90	RETAINING RING, external	ALL
7	37909-90	RING, retaining, internal	ALL
8	37000032A	PRESSURE PLATE, clutch	ALL
9	37000033	STOPPER PLATE	ALL
10	37000034	SPRING, damper	ALL
11	37000295	SEAT, damper-spring	ALL
12	37000083	HUB ASSEMBLY	ALL
13	37000168	BEARING, ball, double-row	ALL
14	37000169	RETAINING RING, internal	ALL
15	37000217	RELEASE ROD, clutch	ALL
16	37000218	PUSHROD, clutch release	ALL
17	37000219	SEAT *(3)*	ALL
18	37000254A	CLUTCH ASSEMBLY, complete, with 3, 6, 8, 9, 10, 11, 12, 13, 14, 17, 19 and 20	ALL
19	37000258	CLUTCH DISKS KIT	ALL
20	37000270A	COIL SPRING *(3)*	ALL

PRIMARY HOUSING

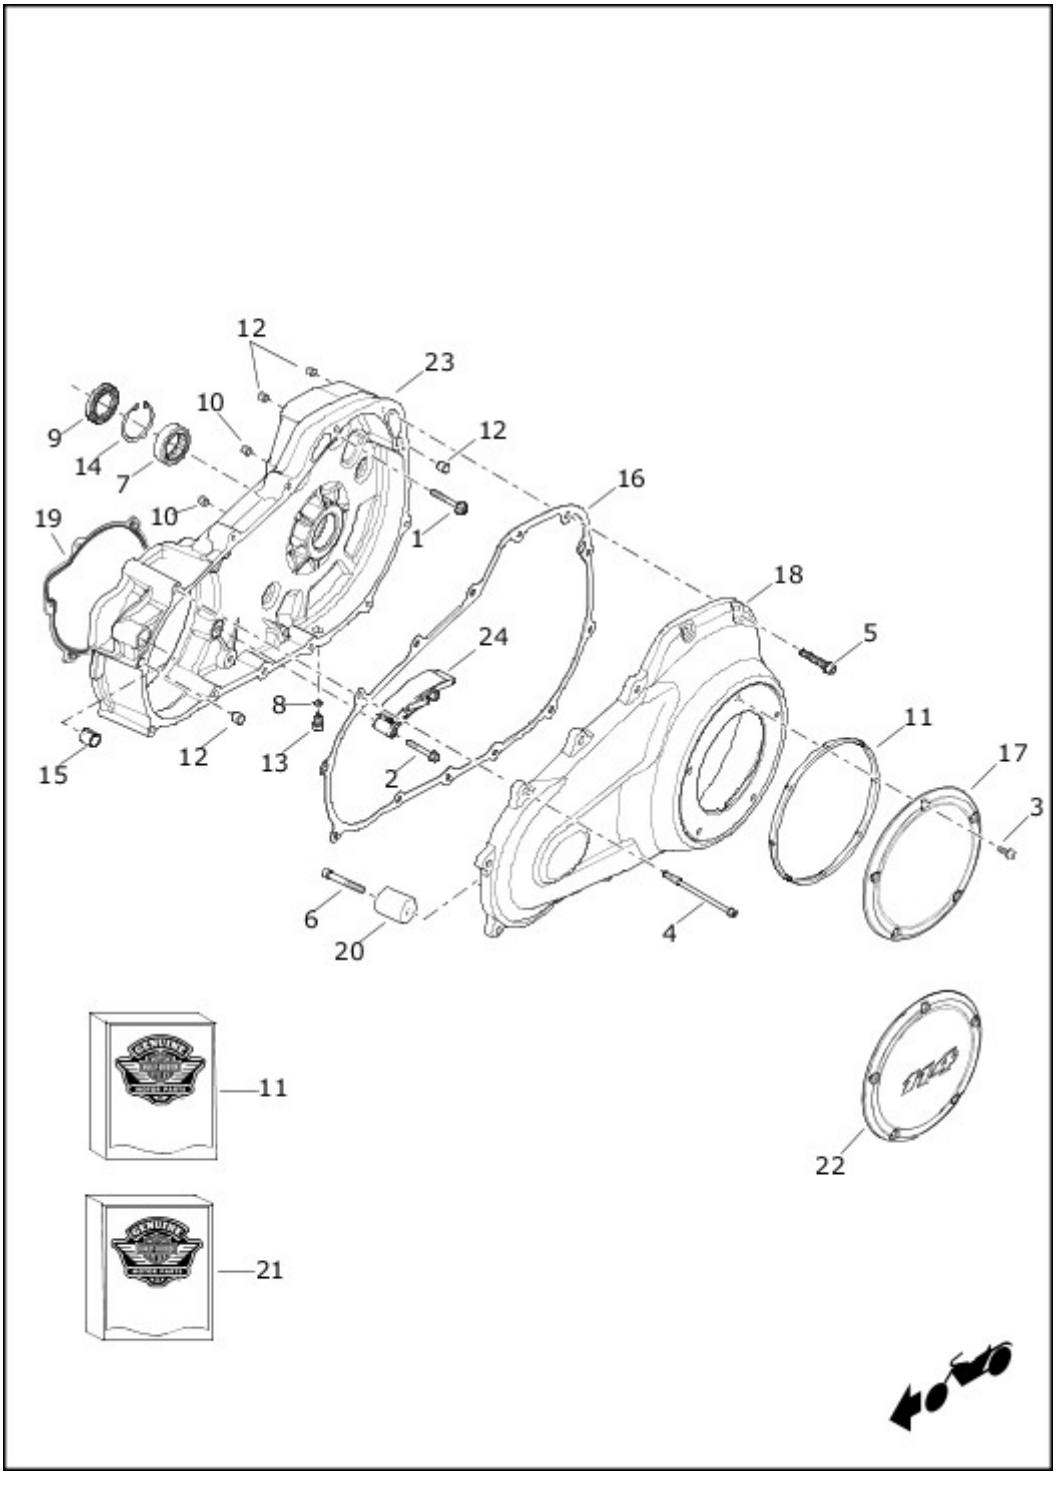

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	786A	BOLT *(5)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	791A	SCREW *(2)*	ALL
3	1062	SCREW *(5)*	ALL
4	1775	SCREW *(4)*	ALL
5	4813A	SCREW *(9)*	ALL
6	4820A	SCREW	ALL
7	9231	BEARING	ALL
8	11105	O-RING	ALL
9	12052A	SEAL	ALL
10	16583-00A	BUSHING, dowel *(2)*	ALL
11	17369-06	GASKET SERVICE KIT, 1000 mi (1600 km), 5000 mi (8000 km), 10,000 mi (16,000 km), with 11105 and clutch cover seal	ALL
12	24754-75A	DOWEL BUSHING *(4)*	ALL
13	60328-98B	PLUG, magnetic drain, with 11105	ALL
14	60678-85	RETAINING RING	ALL
15	11000139	BUSHING	ALL
16	25700378	GASKET, primary cover	ALL
17	25700388	COVER, clutch (chrome)	FLHR, FLHRC, FLHTCU, FLHX, FLTRX
17	25701145	COVER, clutch (polished)	FLHT
18	25700418	COVER, primary (chrome)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
18	25700491	COVER, primary (gloss black)	FLHRXS, FLHXS, FLTRXS
18	25701144	COVER, primary (polished)	FLHT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	25700455	GASKET, primary housing to case	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
19	25700679	GASKET, primary housing to case (black)	FLHRXS, FLHXS, FLTRXS
20	25700650	SLEEVE, damper	ALL
21	25700746	GASKET KIT, inner primary, with 1, 8, 9, 11, 16 and 19	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
21	25700830	GASKET KIT, inner primary, with 1, 8, 9, 11, 16 and 19	FLHRXS, FLHXS, FLTRXS
22	25700902	COVER, clutch (chrome)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
22	25700904	COVER, clutch (gloss black)	FLHRXS, FLHXS, FLTRXS
23	36500052	INNER PRIMARY HOUSING, with 9231, 12052A, 16583-00A, 60328-98B, 60678-85 and 11000139 (black)	ALL
24	36500075	CHAIN TENSIONER ASSEMBLY	ALL

BELT, CHAIN AND SPROCKETS

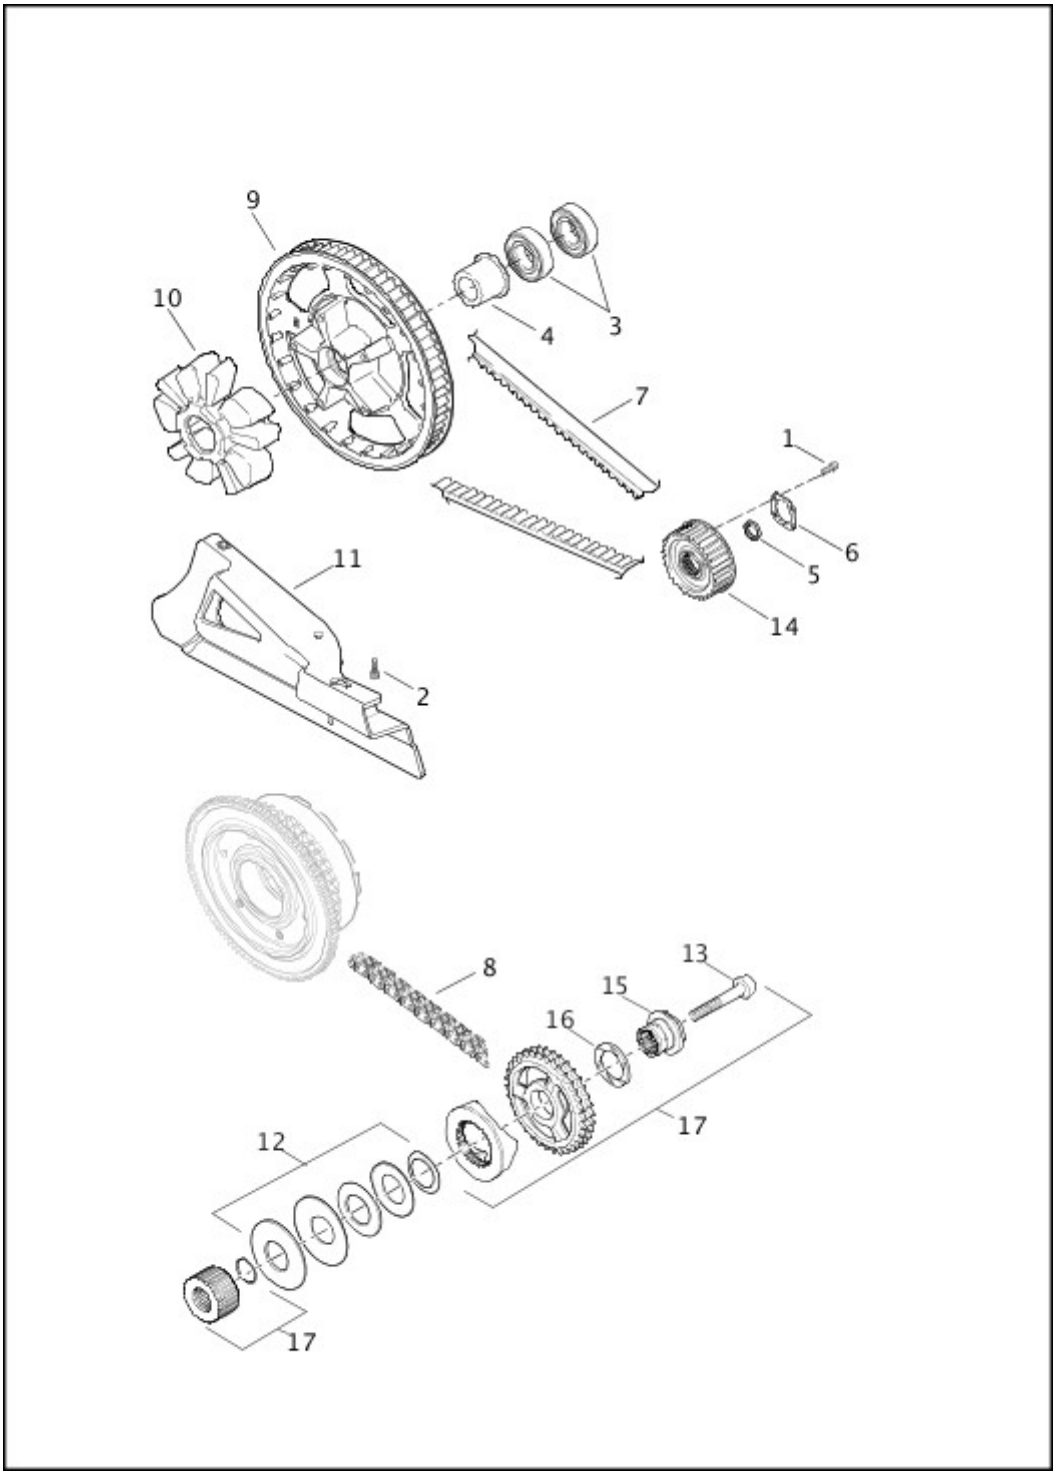


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3594	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3892	SCREW *(3)*	ALL
3	9276B	BALL BEARING *(2)*	ALL
4	11843	SPACER, compensator	ALL
5	35241-06	NUT	ALL
6	35242-06	LOCKPLATE	ALL
7	40024-09A	REAR BELT, 140 teeth, 24 mm	ALL
8	40037-07	PRIMARY CHAIN	ALL
9	40217-09	SPROCKET AND BEARING ASSEMBLY, rear, 68 teeth, with 9276A and 11843 (black)	ALL
10	40278-09	ISOLATOR, rubber	ALL
11	60386-09	DEBRIS DEFLECTOR	ALL
12	83936-09A	SPRING PACK	ALL
13	10500031	SCREW, compensator	ALL
14	35000152	SPROCKET, transmission, 32 teeth	ALL
15	40100041	RETAINER, sprocket	ALL
16	40100064	THRUST WASHER	ALL
17	40100076	ENGINE SPROCKET KIT, compensator assembly	ALL

CLUTCH CONTROL

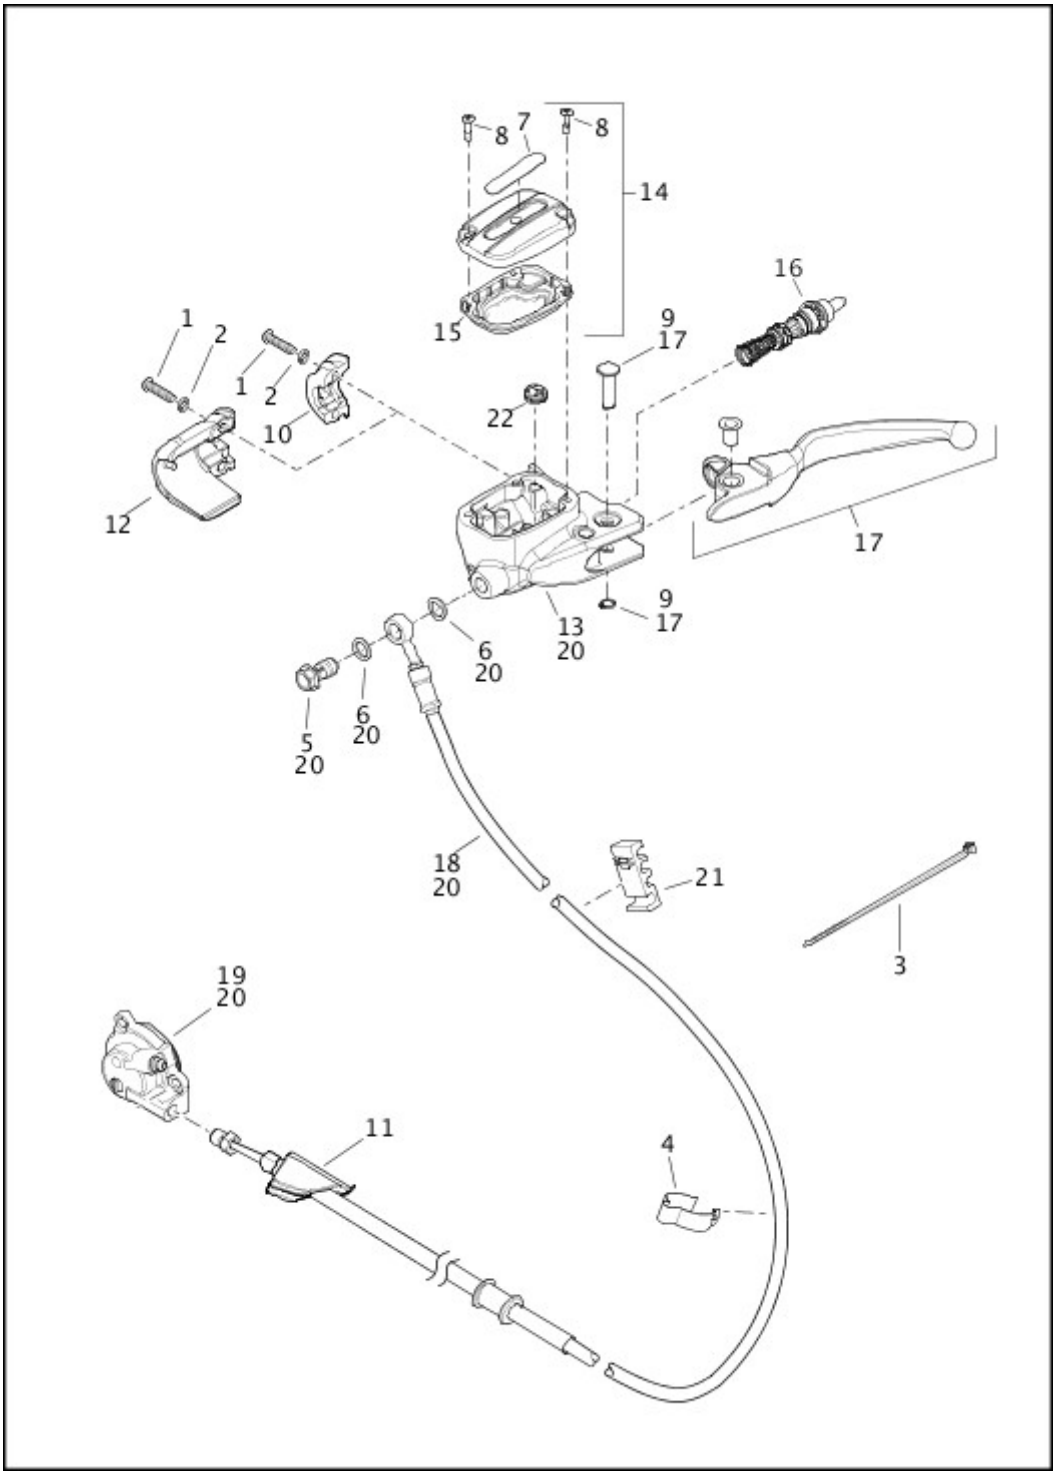

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4132	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	6101	WASHER *(2)*	ALL
3	10039	CABLE STRAP *(3)*	ALL
4	10264	CLIP, clutch line *(2)*	ALL
5	41750-06B	BOLT, BANJO	ALL
6	41751-06A	GASKET, banjo-bolt *(2)*	ALL
7	42856-06	DECAL, reservoir cover	ALL
8	42858-06A	SCREW KIT (set of 2)	ALL
9	42860-06B	PIVOT PIN KIT, with retaining ring	ALL
10	45138-08A	CLAMP, master cylinder and clutch (black)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
11	12100077	GROMMET	ALL
12	36700113	CLAMP, master cylinder and clutch (black)	FLTRU, FLTRX, FLTRXS
13	36700128A	MASTER CYLINDER ASSEMBLY, clutch, with 36700130, 36700132, 36700133 and 41700367 (black)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
13	36700169A	MASTER CYLINDER ASSEMBLY, clutch, with 36700130, 36700132, 36700171 and 41700367 (black)	FLHRXS, FLHXS, FLTRXS
14	36700130	MASTER CYLINDER COVER KIT, with 42856-06, 42858-06A and 36700131	ALL
15	36700131	GASKET, cover, master cylinder	ALL
16	36700132	REBUILD KIT, master cylinder	ALL
17	36700133A	LEVER ASSEMBLY, hand, with 42860-06B and bushing (polished)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	36700171A	LEVER ASSEMBLY, hand, with 42860-06B and bushing (black)	FLHRXS, FLHXS, FLTRXS
18	37200128	LINE ASSEMBLY, hydraulic clutch, with 12100077	FLTRX, FLTRXS
18	37200129	LINE ASSEMBLY, hydraulic clutch, with 12100077	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
18	37200146	LINE ASSEMBLY, hydraulic clutch, with 12100077	FLTRU
19	37200131B	SECONDARY CLUTCH ACTUATOR	ALL
20	37200347B	CLUTCH ACTUATION KIT, with 5, 6, 13, 18 and 19	FLTRX, FLTRXS
20	37200348B	CLUTCH ACTUATION KIT, with 5, 6, 13, 18 and 19	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX
20	37200349B	CLUTCH ACTUATION KIT, with 5, 6, 13, 18 and 19	FLTRU
20	37200352B	CLUTCH ACTUATION KIT, with 5, 6, 13, 18 and 19	FLHRXS, FLHXS
21	41600031	BRACKET, brake line	ALL
22	41700367	BUTTON, anti-bubble	ALL

BRAKE CONTROL, FRONT

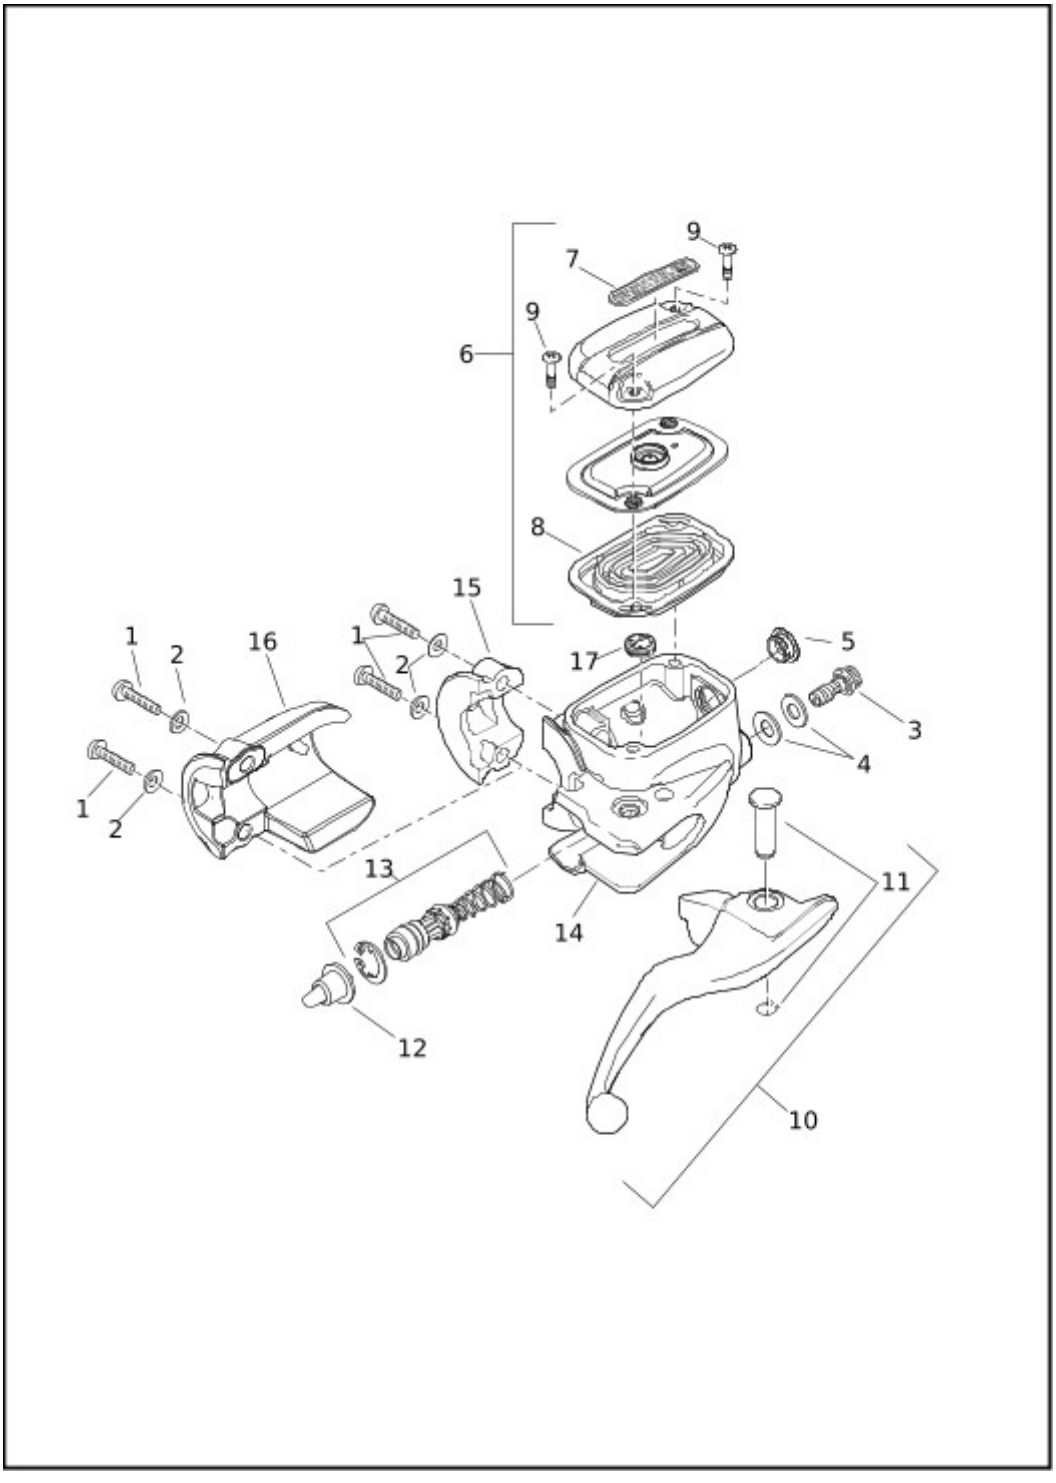

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4132	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	6101	WASHER *(2)*	ALL
3	41750-06B	BOLT, BANJO, brake line	ALL
4	41751-06A	GASKET *(2)*	ALL
5	42854-06	KIT, SIGHT GLASS, reservoir	ALL
6	42855-06D	COVER KIT, master cylinder, with 42856-06, 42857-06B and 42858-06A (black)	ALL
7	42856-06	DECAL, reservoir cover	ALL
8	42857-06B	GASKET, reservoir cover	ALL
9	42858-06A	SCREW KIT, cover (set of 2)	ALL
10	42859-06B	BRAKE LEVER ASSEMBLY, front, with 42860-06B (polished)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
10	42276-06A	BRAKE LEVER ASSEMBLY, front, with 42860-06B (black)	FLHRXS
11	42860-06B	PIVOT PIN KIT, with retaining ring	ALL
12	42861-06B	PUSHROD, master cylinder	ALL
13	42862-06B	PISTON SERVICE KIT, master cylinder	ALL
14	44551-08F	MASTER CYLINDER ASSEMBLY, front, with 5, 6, 7, 8, 9, 10, 11, 12, 13 and 17 (black)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
14	44985-10D	MASTER CYLINDER ASSEMBLY, front, with 5, 6, 7, 8, 9, 10, 11, 12, 13 and 17 (black)	FLHRXS, FLHXS, FLTRXS
15	45138-08A	CLAMP, master cylinder and clutch (black)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	41700321	CLAMP, master cylinder, front brake (black)	FLTRU, FLTRX, FLTRXS
17	41700367	BUTTON, anti-bubble	ALL

MIRRORS

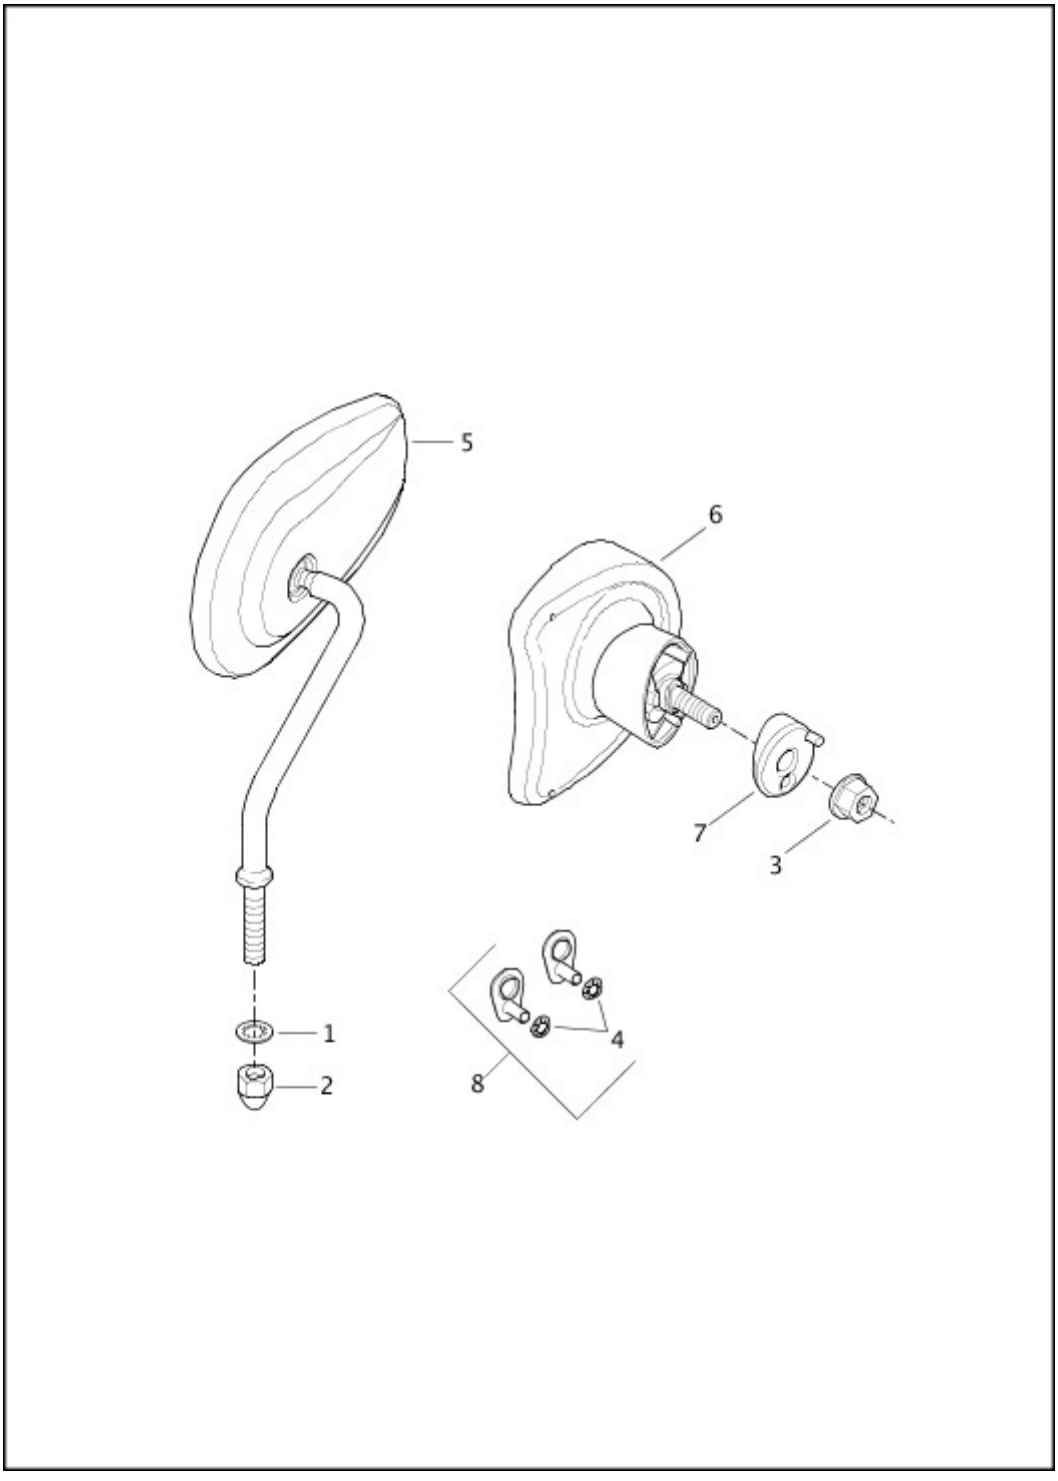

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

Note: For FLHX and FLHXS models order fairing plug kit 57300063 to install in the inner fairing when converting to handlebar mounted mirrors

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	7155	LOCKWASHER *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU, FLTRX, FLTRXS
2	7331	ACORN NUT *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU, FLTRX
2	7352	ACORN NUT (black) *(2)*	FLHRXS, FLTRXS
3	7687	NUT *(2)*	FLHX, FLHXS
4	8135B	PUSHNUT *(2)*	FLHX, FLHXS
5	91840-03B	MIRROR KIT, short, convex, with 7155 and 7331 (right) (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU, FLTRX
5	92614-10	MIRROR KIT, short, convex, with 7155 and 7352 (right) (black)	FLHRXS, FLTRXS
5	91845-03B	MIRROR KIT, short, convex, with 7155 and 7331 (left) (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU, FLTRX
5	92615-10	MIRROR KIT, short, convex, with 7155 and 7352 (left) (black)	FLHRXS, FLTRXS
6	56000011	MIRROR ASSEMBLY, fairing-mounted (left) (black)	FLHX, FLHXS
6	56000012	MIRROR ASSEMBLY, fairing-mounted (right) (black)	FLHX, FLHXS
7	56000015	BACKING PLATE, mirror, fairing-mounted (left)	FLHX, FLHXS
7	56000016	BACKING PLATE, mirror, fairing-mounted (right)	FLHX, FLHXS
8	57300063	FAIRING PLUG KIT, with 8135B	FLHX, FLHXS

Note: For FLHX and FLHXS models order fairing plug kit 57300063 to install in the inner fairing when converting to handlebar mounted mirrors

BRAKE LINES, FRONT - NON-ABS

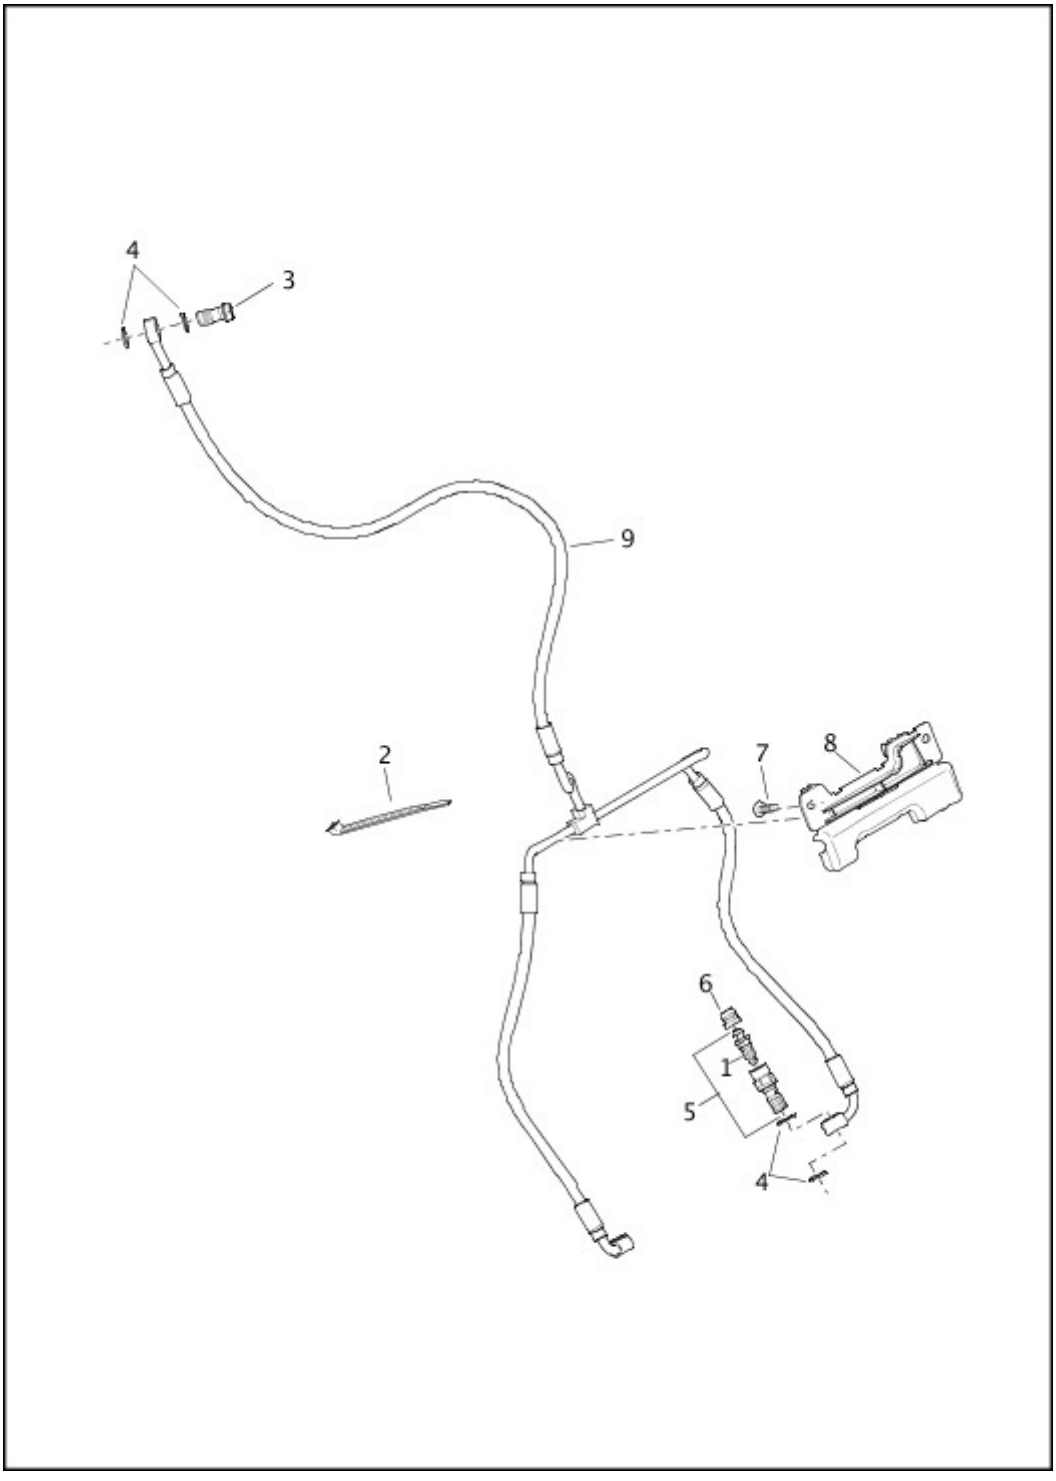


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4890	BLEEDER SCREW *(2)*	FLHR, FLHT, FLHX, FLTRX
2	10006	CABLE STRAP *(2)*	FLHR, FLHT, FLHX, FLTRX
3	41750-06B	BOLT, BANJO, brake line	FLHR, FLHT, FLHX, FLTRX
4	41751-06A	GASKET *(6)*	FLHR, FLHT, FLHX, FLTRX
5	41783-08	BOLT, BANJO, bleeder assembly, with 4890 *(2)*	FLHR, FLHT, FLHX, FLTRX
6	42853-06	CAP, bleeder screw *(2)*	FLHR, FLHT, FLHX, FLTRX
7	10200223	SCREW *(2)*	FLHR, FLHT, FLHX, FLTRX
8	41600029A	BRACKET, brakeline, front	FLHR, FLHT, FLHX, FLTRX
9	41800174	BRAKE LINE, front (NON-ABS)	FLHR, FLHT, FLHX
9	41800340	BRAKE LINE, front (NON-ABS)	FLTRX

BRAKE LINES, FRONT - ABS

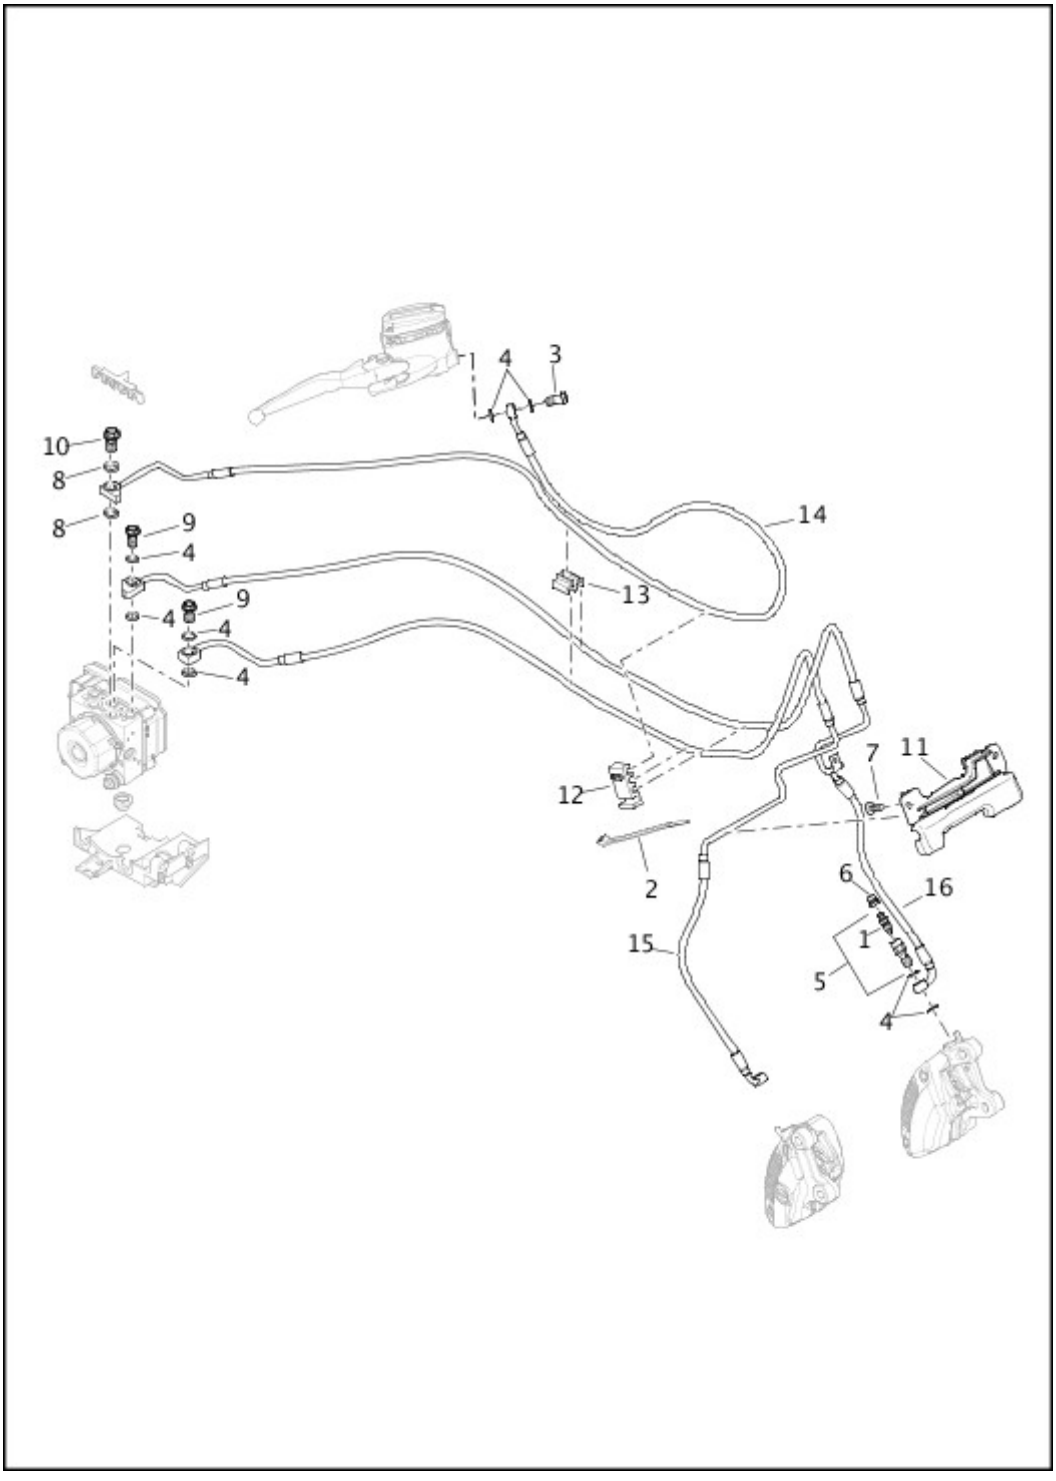

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4890	BLEEDER SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	10006	CABLE STRAP *(2)*	ALL
3	41750-06B	BOLT, BANJO, brake line	ALL
4	41751-06A	GASKET *(10)*	ALL
5	41783-08	BOLT, BANJO, bleeder assembly, with 4890 *(2)*	ALL
6	42853-06	CAP, bleeder screw *(2)*	ALL
7	10200223	SCREW *(2)*	ALL
8	10600007	GASKET *(2)*	ALL
9	11600001	BOLT, BANJO, brake line *(2)*	ALL
10	11600009	BOLT, BANJO, brake line	ALL
11	41600029A	BRACKET, brakeline, front	ALL
12	41600031	BRACKET, brake line	ALL
13	41600032	BRACKET, brake line	ALL
14	41800011	BRAKE LINE, front, (ABS) (upper)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
14	41800314	BRAKE LINE, front, (ABS) (upper)	FLTRX, FLTRXS
14	41800510	BRAKE LINE, front, (ABS) (upper)	FLTRU
15	41800542	BRAKE LINE, front, (ABS) (right)	FLTRU, FLTRX, FLTRXS
15	41800543	BRAKE LINE, front, (ABS) (right)	FLHR, FLHRC, FLHRXS
15	41800544	BRAKE LINE, front, (ABS) (right)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
16	41800545	BRAKE LINE, front, (ABS) (left)	FLTRU, FLTRX, FLTRXS
16	41800546	BRAKE LINE, front, (ABS) (left)	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	41800547	BRAKE LINE, front, (ABS) (left)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

BRAKE CONTROL, REAR

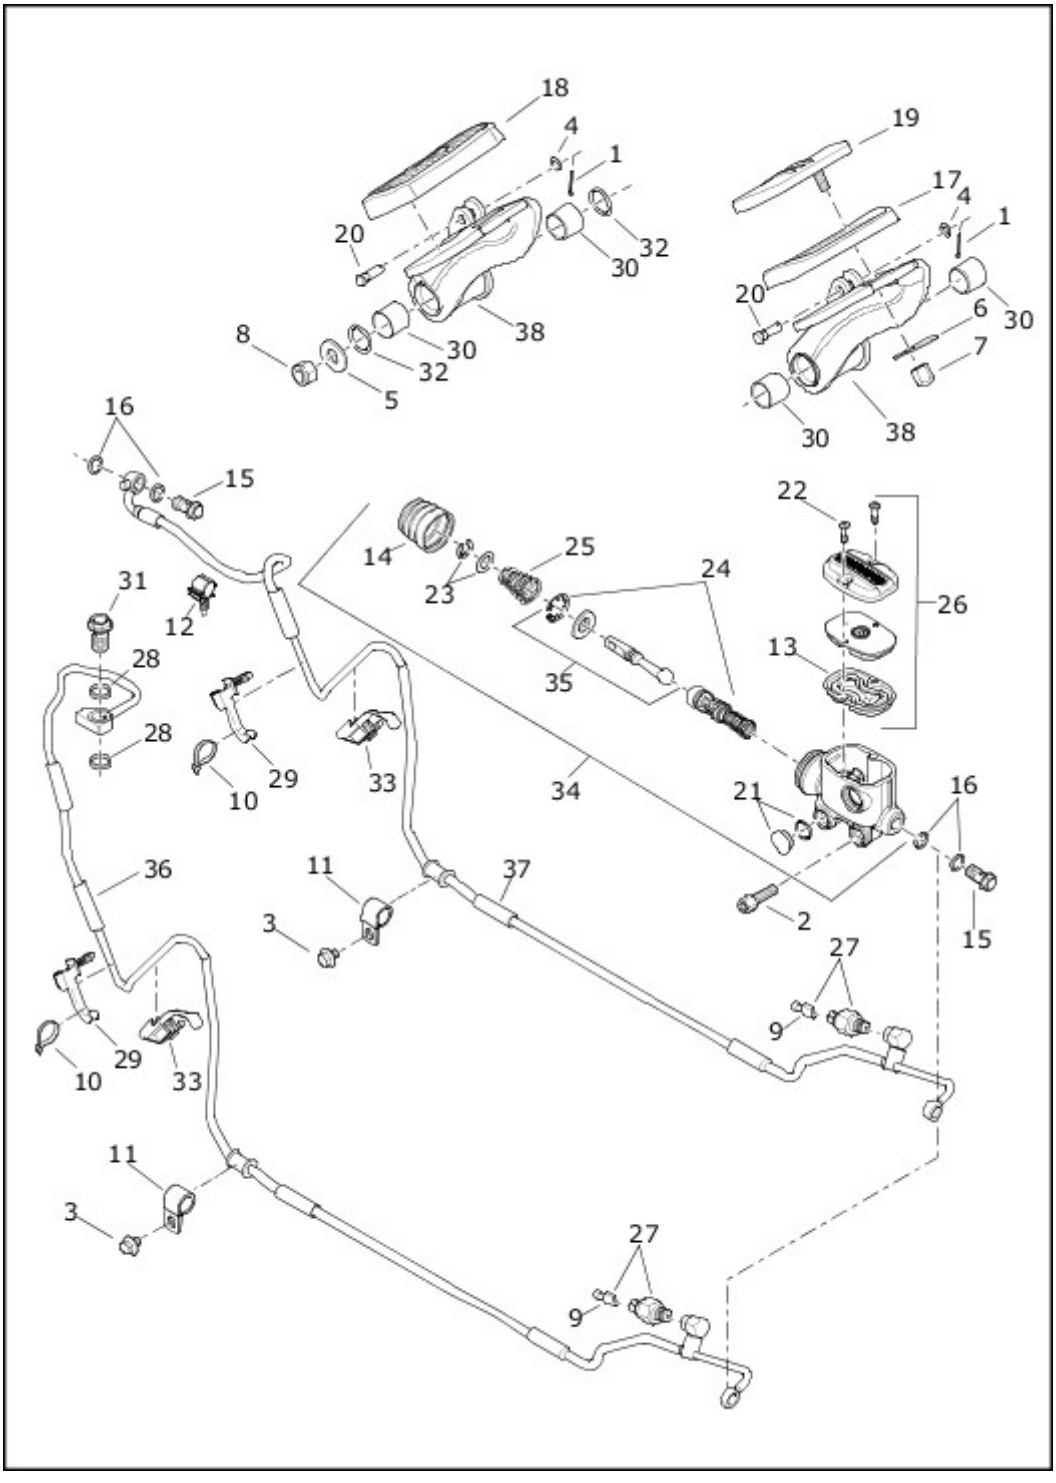

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	515	COTTER PIN	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	2479	SCREW *(2)*	ALL
3	3563	SCREW	ALL
4	6220W	WASHER	ALL
5	6416	WASHER	ALL
6	6421	WASHER	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
7	7549A	ACORN NUT	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
8	7825	LOCKNUT	ALL
9	9907	WIRE TERMINAL *(2)*	ALL
10	10065	CABLE STRAP	ALL
11	10076	CLAMP	ALL
12	10340B	CLAMP, brake hose (NON-ABS)	FLHR, FLHT, FLHX, FLTRX
13	11902	GASKET, master cylinder reservoir cover	ALL
14	12102	DUST BOOT	ALL
15	41750-06B	BOLT, BANJO, brake line (NON-ABS) *(2)*	FLHR, FLHT, FLHX, FLTRX
15	41750-06B	BOLT, BANJO, brake line (ABS)	ALL
16	41751-06A	GASKET (NON-ABS) *(4)*	FLHR, FLHT, FLHX, FLTRX
16	41751-06A	GASKET (ABS) *(2)*	ALL
17	42410-04	COVER, brake pedal (chrome)	FLHX, FLTRX
17	50600245	COVER, brake pedal (black)	FLHRXS, FLHXS, FLTRXS
18	42416-06	PAD, brake pedal	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
19	42444-04	PAD, brake pedal	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	42460-80B	CLEVIS PIN	ALL
21	42854-06	KIT, SIGHT GLASS	ALL
22	42858-06A	SCREW KIT, cover (set of 2)	ALL
23	42889-06	SPRING RETENTION KIT, master cylinder pushrod	ALL
24	42932-08A	REBUILD KIT, master cylinder	ALL
25	42934-08	SPRING, pedal return	ALL
26	42937-08C	MASTER CYLINDER COVER KIT, rear, with 11902 and 42858-06A	ALL
27	72023-51E	KIT SWITCH, rear stop lamp, with 9907	ALL
28	10600007	GASKET (ABS) *(2)*	ALL
29	10800028	TUBE CLIP (lower)	ALL
30	11000050	BUSHING, brake lever *(2)*	ALL
31	11600009	BOLT, BANJO, brake line (ABS)	ALL
32	11900021	O-RING *(2)*	ALL
33	41600091	TUBE CLIP (upper)	ALL
34	41700028A	MASTER CYLINDER ASSEMBLY, with 13, 14, 21, 22, 23, 24, 25, 26 and 35	ALL
35	41700195	PUSHROD KIT, master cylinder	ALL
36	41800012	BRAKE LINE, right-rear, master cylinder to ABS UNIT, with 10065, 10076, 10800028 and 41600091 (ABS)	ALL
37	41800175	BRAKE LINE, right-rear, master cylinder to rear caliper, with 10065, 10076, 10800028 and 41600091 (NON-ABS)	FLHR, FLHT, FLHX, FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
38	50600067	LEVER ASSEMBLY, foot-brake, with 11000050 (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
38	50600244	LEVER ASSEMBLY, foot-brake, with 11000050 (black)	FLHRXS, FLHXS, FLTRXS

BRAKE LINES AND MODULE, REAR - ABS

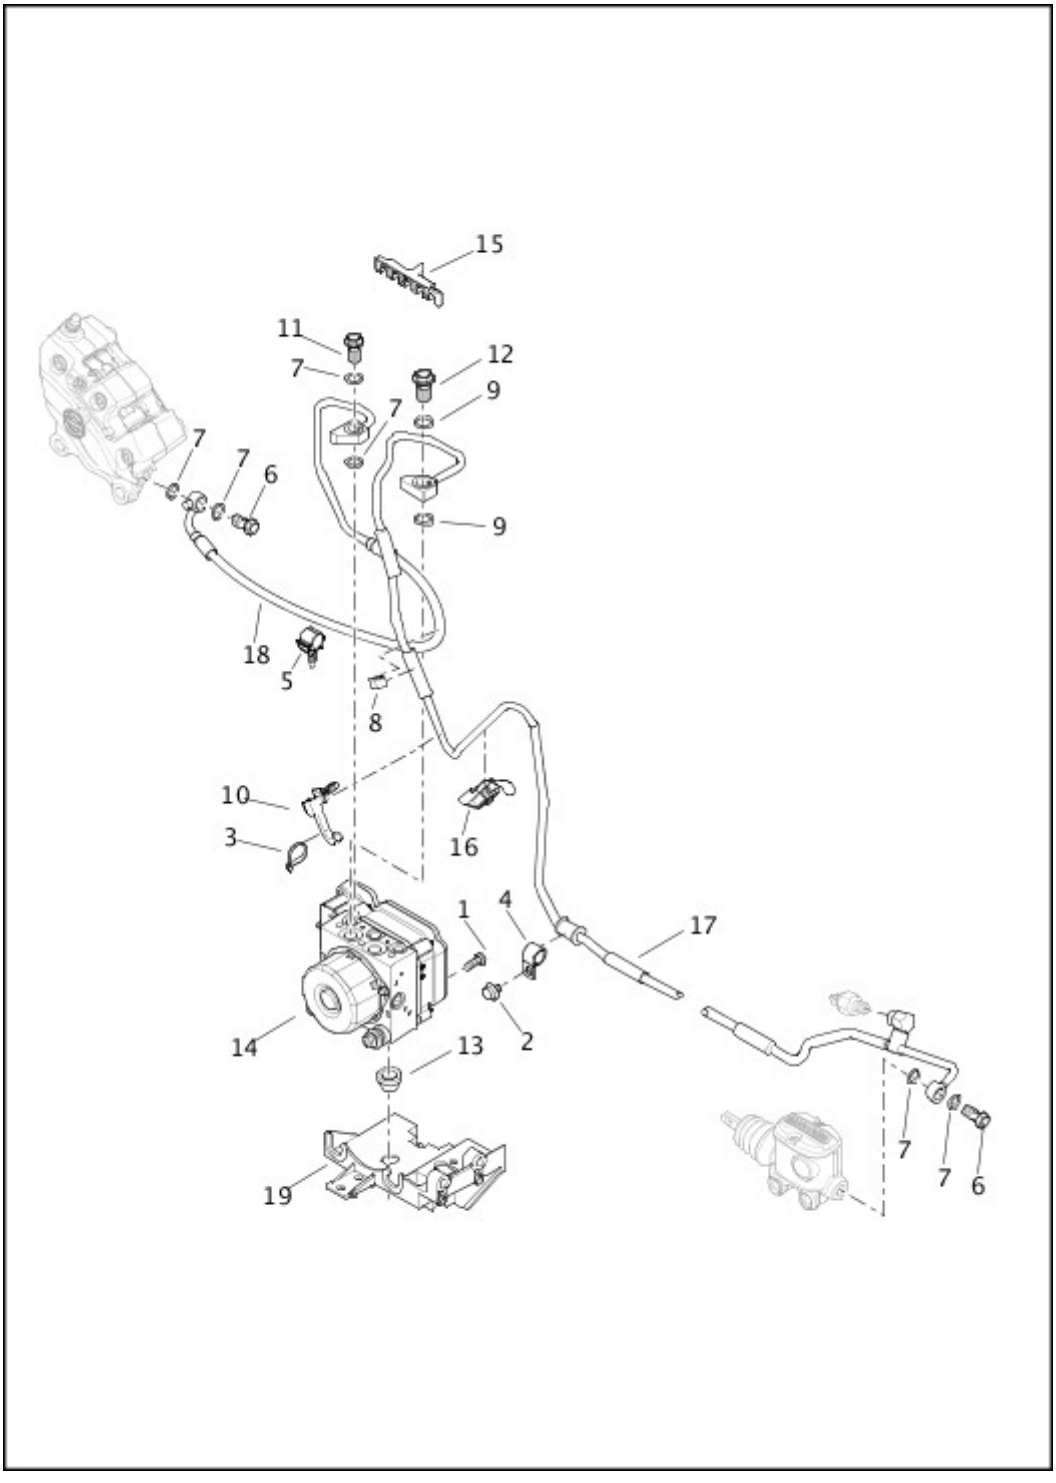


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1062	SCREW	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3563	SCREW	ALL
3	10065	CABLE STRAP	ALL
4	10076	CLAMP	ALL
5	10340B	CLAMP, brake hose *(2)*	ALL
6	41750-06B	BOLT, BANJO, brake line (ABS) *(2)*	ALL
7	41751-06A	GASKET *(6)*	ALL
8	70631-08	CLIP, conduit	ALL
9	10600007	GASKET *(2)*	ALL
10	10800028	TUBE CLIP (lower)	ALL
11	11600001	BOLT, BANJO, brake line	ALL
12	11600009	BOLT, BANJO, brake line	ALL
13	12100007	GROMMET, mounting (ABS)	ALL
14	41100061B	ABS MODULE (EHCU)	ALL
15	41600078	BRACKET, ABS brake line alignment	ALL
16	41600091	TUBE CLIP (upper)	ALL
17	41800012	BRAKE LINE, ABS module to master cylinder, with 10065, 10076, 10800028 and 41600091	ALL
18	41800541	BRAKE LINE, ABS module to caliper	ALL
19	69201417	CADDY, ABS module	ALL

BRAKE CALIPER, FRONT

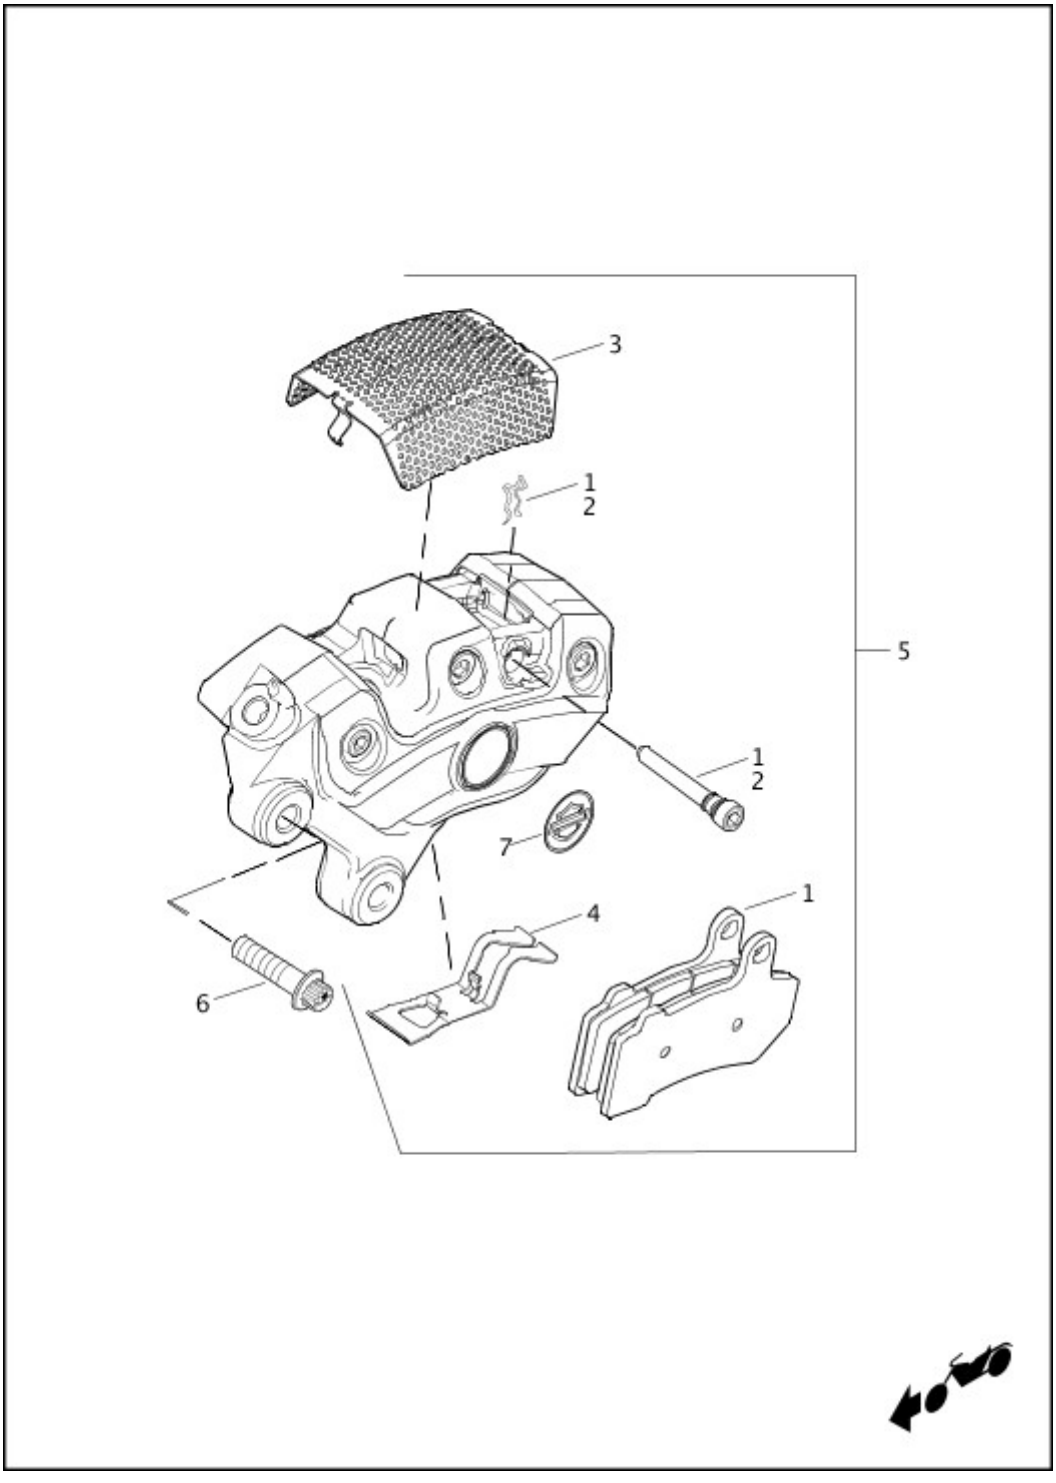


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	41854-08	PAD AND PIN KIT, with 42849-08 *(2)*	ALL
2	42849-08	PAD PIN KIT *(2)*	ALL
3	42851-06	COVER, caliper *(2)*	ALL
4	42852-06A	PAD SPRING, anti-rattle *(2)*	ALL
5	43027-08	CALIPER ASSEMBLY (left) (black)	ALL
5	44023-08	CALIPER ASSEMBLY (right) (black)	ALL
6	44160-00	BOLT, caliper mounting (lower) *(4)*	ALL
7	44341-08	MEDALLION, brake caliper *(2)*	ALL

BRAKE CALIPER, REAR

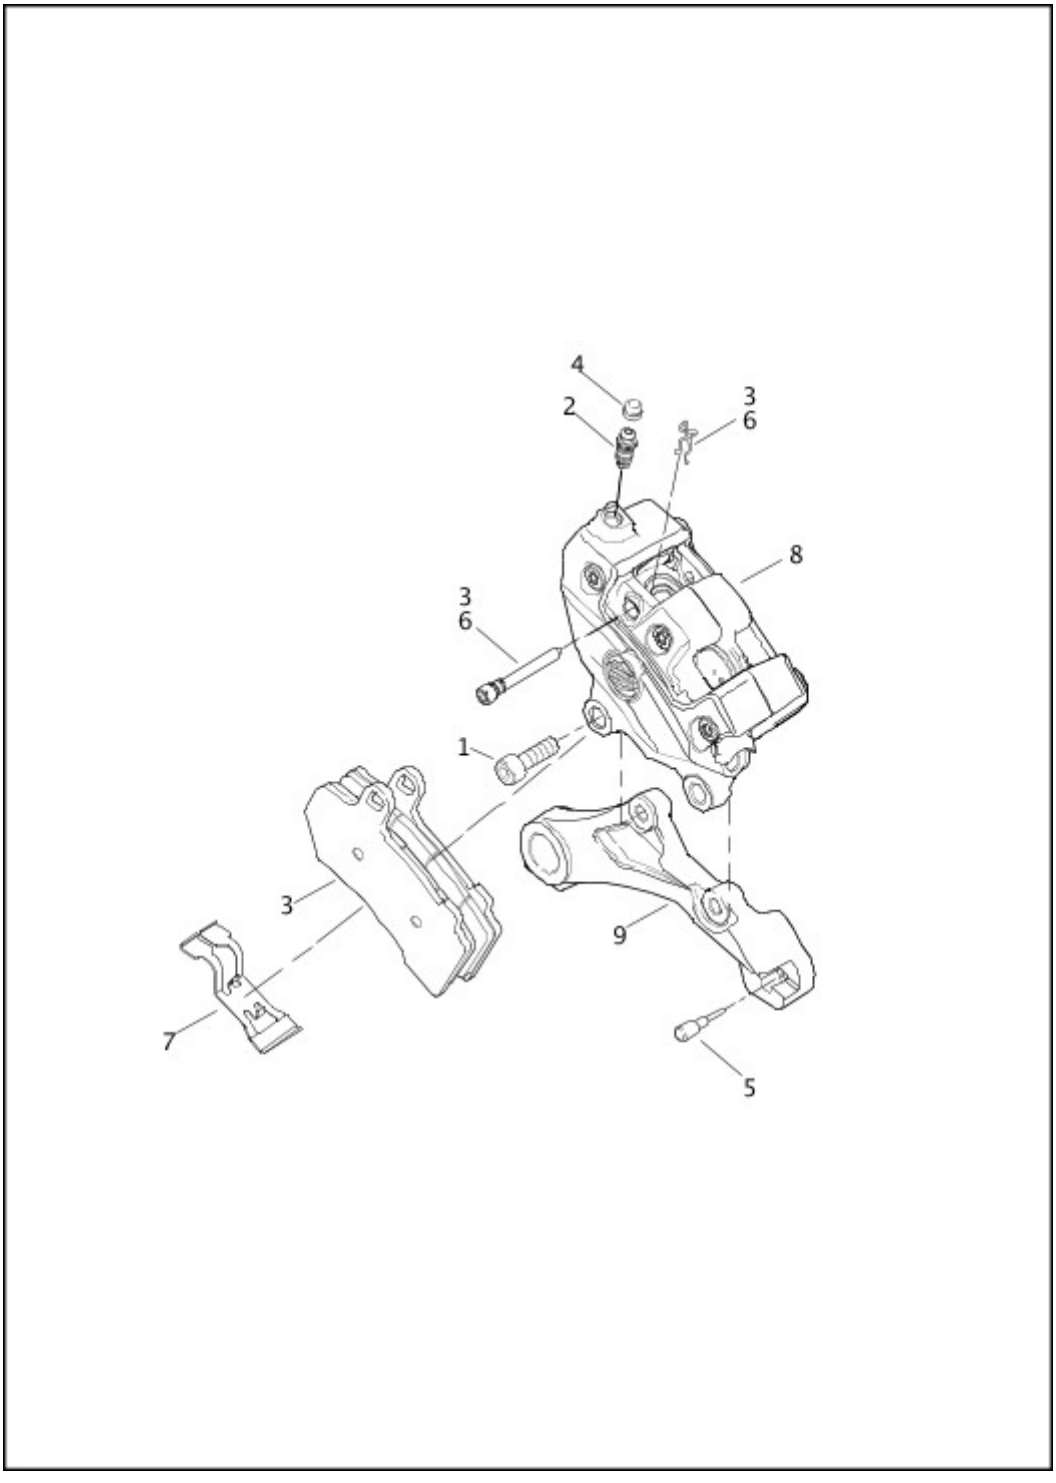


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4597M	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	4890	BLEEDER SCREW	ALL
3	41852-08B	PAD AND PIN KIT	ALL
4	42853-06	CAP, bleeder screw	ALL
5	42863-06	BUMPER	ALL
6	42865-06B	PAD PIN KIT	ALL
7	42867-06A	SPRING KIT, anti-rattle	ALL
8	44080-08C	CALIPER ASSEMBLY, rear, with 4890, 41852-08B, 42853-06, 42865-06B and 42867-06A (black)	ALL
9	44089-08	BRACKET, reaction, rear brake, with 42863-06	ALL

WHEELS, FRONT, CAST (1 OF 2)

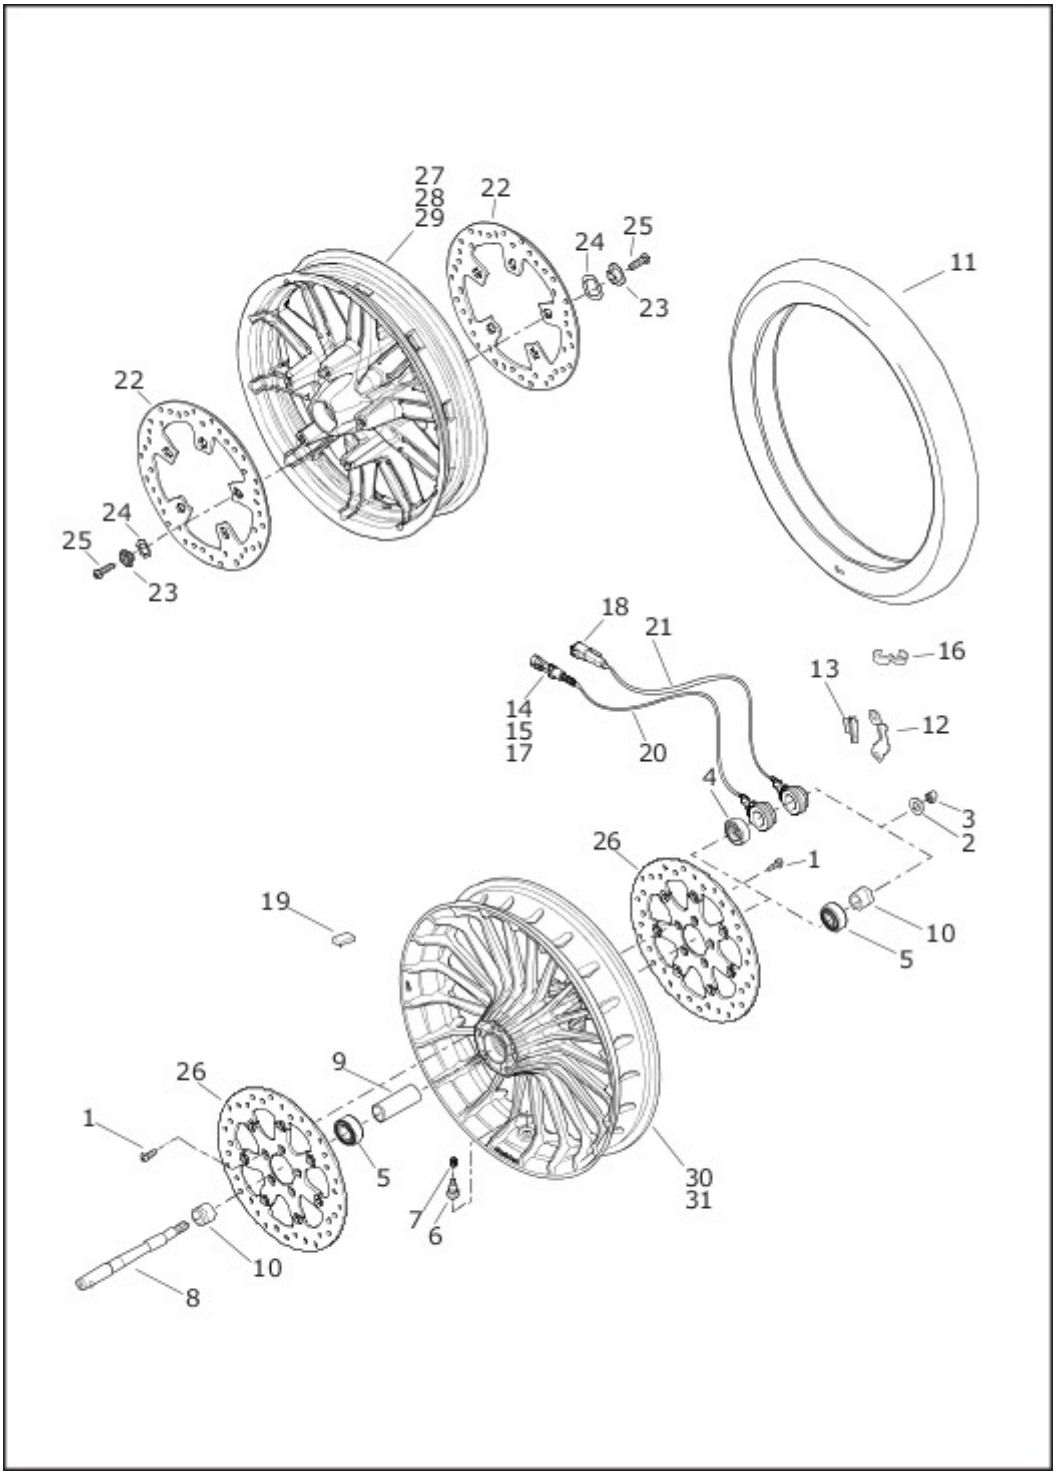

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3655A	SCREW *(10)*	FLHRXS, FLHXS, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	6594	WASHER	ALL
3	7813A	NUT	ALL
4	9252A	BALL BEARING, with encoder (ABS)	ALL
5	9276B	BALL BEARING (NON-ABS) *(2)*	FLHR, FLHT, FLHX, FLTRX
5	9276B	BALL BEARING (ABS)	ALL
6	40999-87	VALVE STEM, for cast wheels	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	41123-79	VALVE CAP	ALL
8	41547-07A	AXLE	ALL
9	41900-08	SLEEVE, bearing spacer	ALL
10	41901-08	SPACER (NON-ABS) (right and left) *(2)*	FLHR, FLHT, FLHX, FLTRX
10	41901-08	SPACER (ABS) (right only)	ALL
11	43109-09A	TIRE, black wall, 17 in	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
11	43100013	TIRE, black wall, 19 in	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
12	70493-08	BRACKET, wheel speed sensor (ABS)	ALL
13	70494-08	CLIP, wheel speed sensor (ABS)	ALL
14	72607-08	HOUSING, two-way pin (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
15	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
16	70631-08	CLIP, conduit (ABS) *(3)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	72639-10	SECONDARY LOCK, two-way socket	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
18	74190-98	TERMINAL, pin, 16-20 AWG *(2)*	FLHR, FLHRXS
19	95594-84C	WEIGHT, 5 g (black) *(10)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
19	42300001	WEIGHT, 1/2 oz (black) *(6)*	FLHRXS
20	32700015	SENSOR, wheel speed, with 72607-08, 72608-08 and 72639-10 (ABS)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
21	32700017	SENSOR, wheel speed, with 74190-08 (ABS)	FLHR, FLHRXS

WHEELS, FRONT, CAST (2 OF 2)

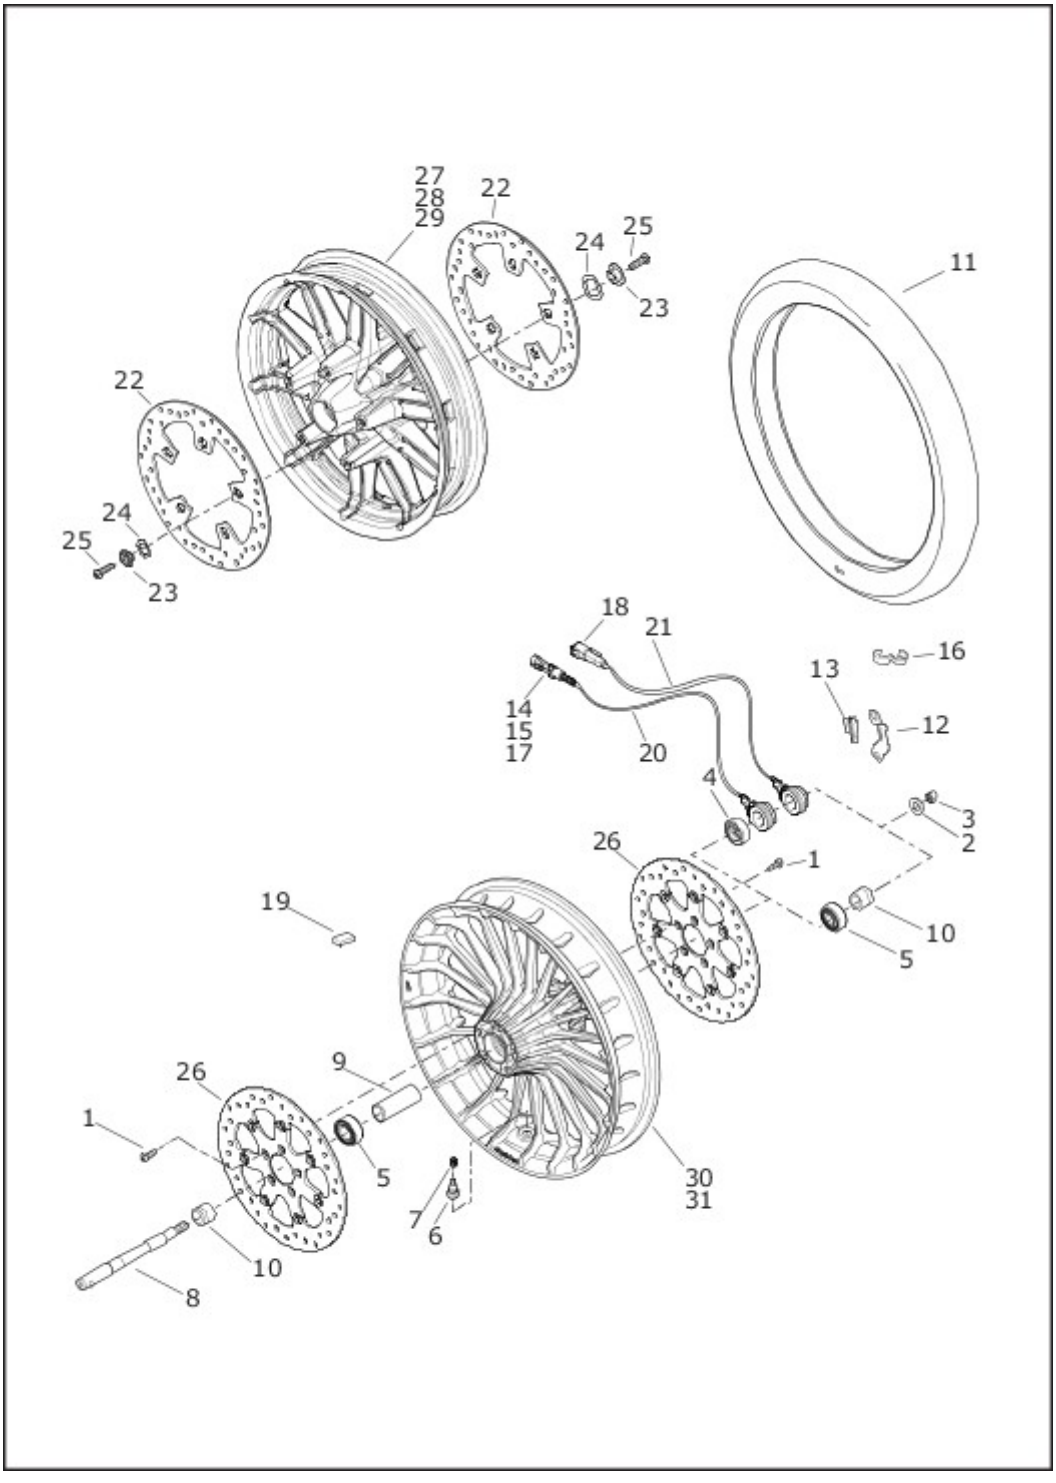


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	41500017	BRAKE ROTOR, front *(2)*	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
23	41500018	BUSHING, front rotor *(10)*	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
24	41500019	SPRING, front rotor *(10)*	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
25	41500020	SCREW *(10)*	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
26	41500146	BRAKE ROTOR, front (black) *(2)*	FLHRXS, FLHXS, FLTRXS
27	43300019	WHEEL, cast, without bearings and sleeve, 10 spoke, 17 in (black)	FLHR, FLHT, FLHTCU, FLTRU
28	43300027	WHEEL, cast, without bearings and sleeve, 5 spoke, 19 in (black)	FLHX, FLTRX
29	43300386	WHEEL, cast, without bearings and sleeve, 10 spoke, 17 in (contrast chrome)	FLHTK, FLHTK SHRINE, FLHTKL
30	43300484	WHEEL, cast, without bearings and sleeve, 21 spoke, 19 in (black) ****RESTRICTED SALES PART****	FLHRXS
31	43300508	WHEEL, cast, without bearings and sleeve, 15 spoke, 19 in (black)	FLHXS, FLTRXS

WHEELS, FRONT, LACED

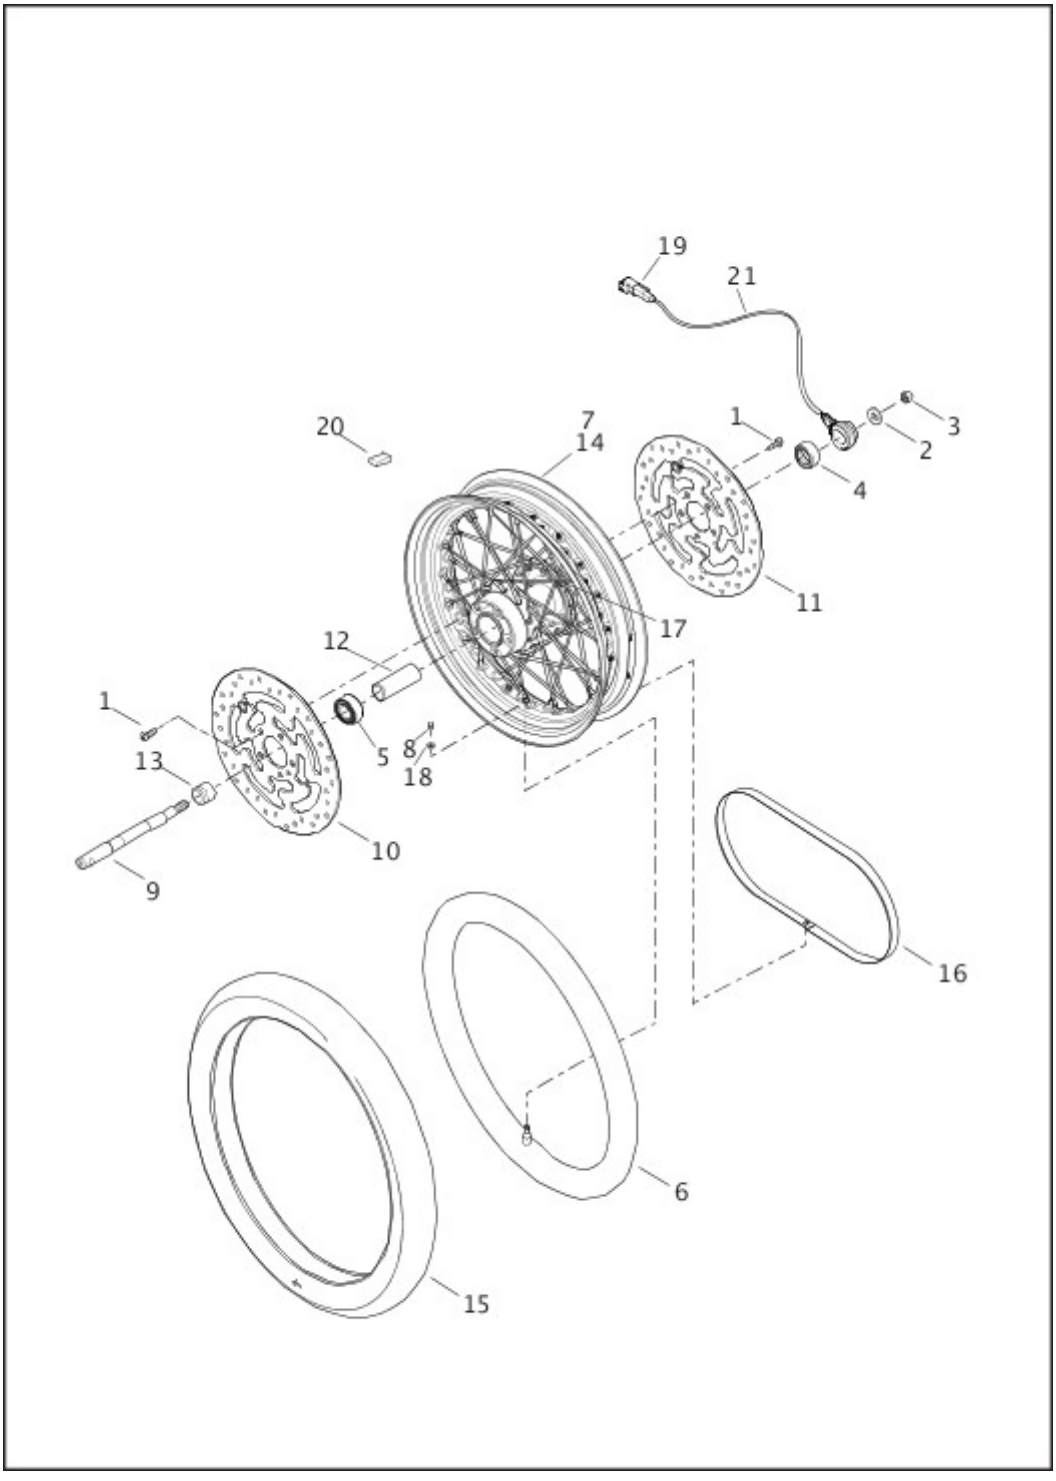


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3655A	SCREW *(10)*	FLHRC

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	6594	WASHER	FLHRC
3	7813A	NUT	FLHRC
4	9252A	BALL BEARING, with encoder (ABS)	FLHRC
5	9276B	BALL BEARING (ABS)	FLHRC
6	40558-82	INNER TUBE, 16 in, side valve, with 54321-85	FLHRC
7	40960-09	WHEEL ASSEMBLY, 16 in laced, without bearings and sleeve, with 43085-97 and 43241-05	FLHRC
8	41123-79	VALVE CAP	FLHRC
9	41547-07A	AXLE	FLHRC
10	41808-08A	BRAKE DISC (right)	FLHRC
11	41809-08A	BRAKE DISC (left)	FLHRC
12	41900-08	SLEEVE, bearing spacer	FLHRC
13	41901-08	SPACER (ABS) (right only)	FLHRC
14	43085-97	RIM, 16 in (chrome)	FLHRC
15	43118-92A	TIRE, wide white wall, 16 in	FLHRC
16	43147-40	RIM STRIP, 16 in, side valve	FLHRC
17	43241-05	SPOKE AND NIPPLE KIT, 16 in, set of 40	FLHRC
18	54321-85	NUT *(2)*	FLHRC
19	74190-98	TERMINAL, pin, 16-20 AWG *(2)*	FLHRC
20	95595-84C	WEIGHT, 5 g (silver) *(6)*	FLHRC
21	32700017	SENSOR, wheel speed, with 74190-08 (ABS)	FLHRC

WHEELS, REAR

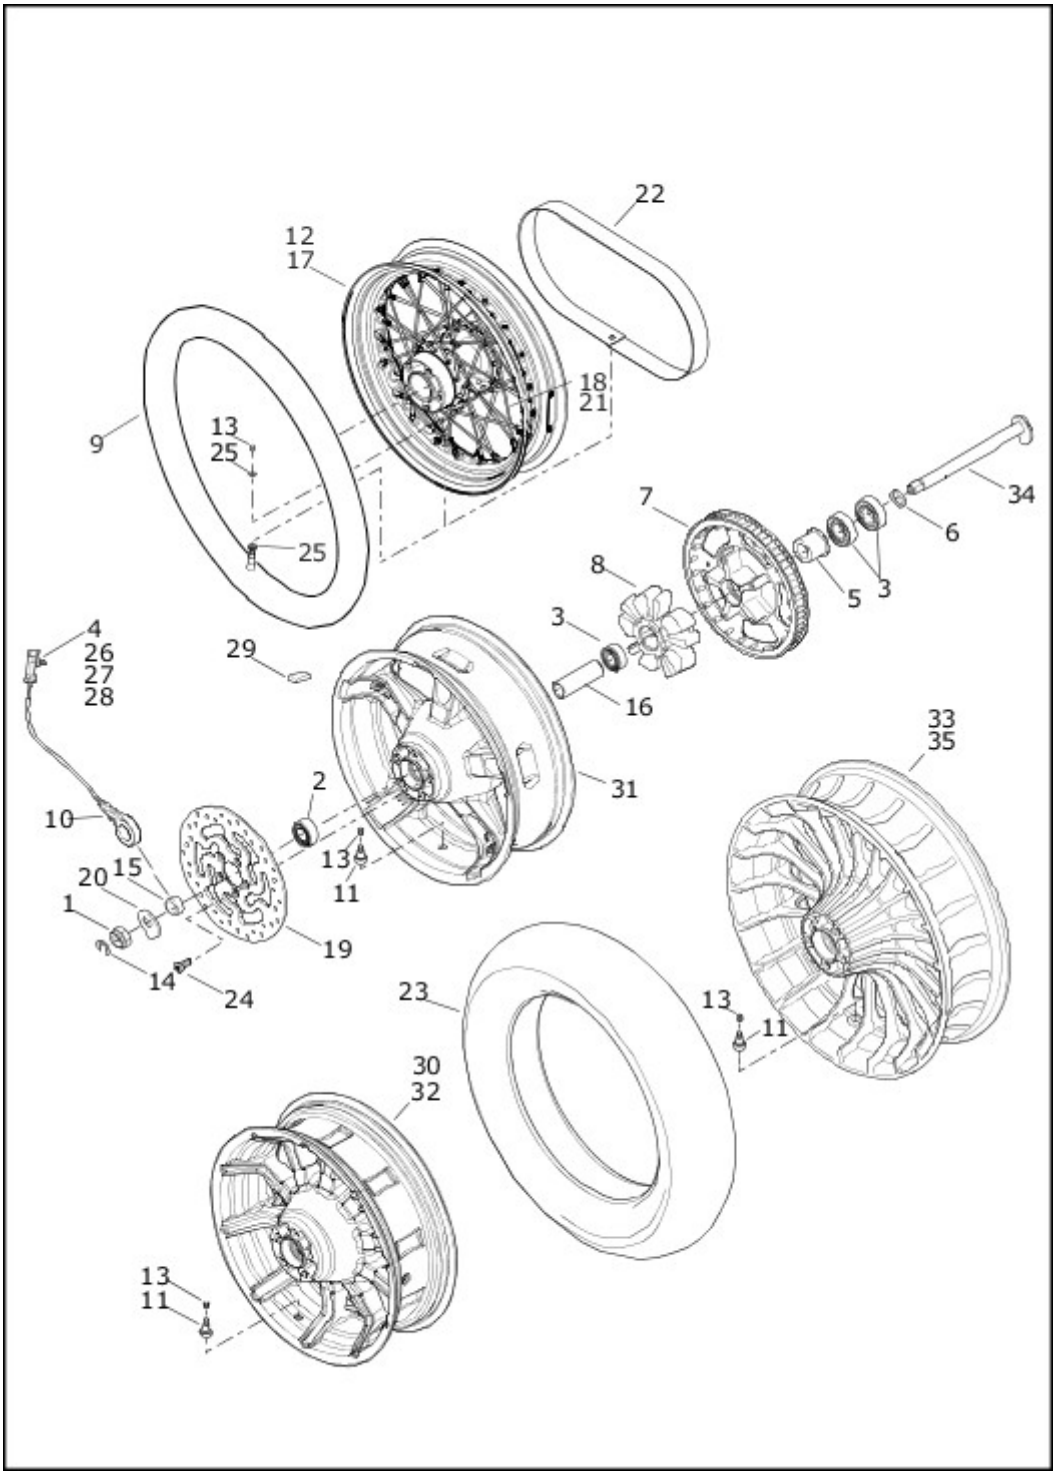

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	8020	NUT, slotted	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	9252A	BALL BEARING, with encoder (ABS)	ALL
2	9276B	BALL BEARING (NON-ABS)	FLHR, FLHT, FLHX, FLTRX
3	9276B	BALL BEARING *(3)*	ALL
4	10147	CLIP, connector	ALL
5	11843	SPACER, compensator	ALL
6	11848	SPACER	ALL
7	40217-09	SPROCKET AND BEARING ASSEMBLY, rear, 68 teeth, with 9276B and 11843 (black)	ALL
8	40278-09	ISOLATOR, rubber	ALL
9	40592-09	INNER TUBE, 16 in, with 54321-85	FLHRC
10	40615-08	SENSOR, wheel speed, with 10147, 72607-08, 72608-08 and 72639-10 (ABS)	ALL
11	40999-87	VALVE STEM, cast wheels	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
12	41052-09	WHEEL ASSEMBLY, 16 in laced, without bearings and sleeve, with 41445-09, 41746-09 and 42018-09	FLHRC
13	41123-79	VALVE CAP	ALL
14	41229-08	E-CLIP	ALL
15	41242-08	SPACER, wheel bearing (NON-ABS)	FLHR, FLHT, FLHX, FLTRX
16	41349-07	SLEEVE, bearing spacer	ALL
17	41445-09	RIM, 16 in (chrome)	FLHRC
18	41746-09	SPOKE AND NIPPLE KIT, 16 in, set of 20, short-head	FLHRC

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	41810-08B	BRAKE DISC	ALL
20	41819-02	AXLE CAM	ALL
21	42018-09	SPOKE AND NIPPLE KIT, 16 in, set of 20, long-head	FLHRC
22	43099-09	RIM STRIP, center valve	FLHRC
23	43230-09	TIRE, 16 in wide white wall	FLHRC
23	44006-09	TIRE, 18 in black wall	FLHRXS, FLHXS, FLTRXS
23	43200027	TIRE, 16 in black wall	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLTRU, FLTRX
24	43567-92	SCREW *(5)*	ALL
25	54321-85	NUT *(2)*	FLHRC
26	72607-08	HOUSING, two-way pin (black)	ALL
27	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	ALL
28	72639-10	SECONDARY LOCK, two-way socket	ALL
29	95594-84C	WEIGHT, 5 g (black) *(10)*	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
29	95594-84C	WEIGHT, 5 g (black) *(6)*	FLHRXS, FLHXS, FLTRXS
29	95595-84C	WEIGHT, 5 g (silver) *(6)*	FLHRC
30	40900026	WHEEL, 16 in cast, without bearings and sleeve, 10 spoke (black)	FLHR, FLHT, FLHTCU, FLTRU
31	40900033	WHEEL ASSEMBLY, 16 in cast, without bearings and sleeve, 5 spoke (black)	FLHX, FLTRX
32	40900391	WHEEL, 16 in cast, without bearings and sleeve, 10 spoke (contrast chrome)	FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	40900484A	WHEEL, 18 in cast, without bearings and sleeve, 21 spoke (black)	FLHRXS
34	43000002	REAR AXLE	ALL
35	40900503	WHEEL, 18 in cast, without bearings and sleeve, 15 spoke (black)	FLHXS, FLTRXS

FORK BRACKETS, FRONT

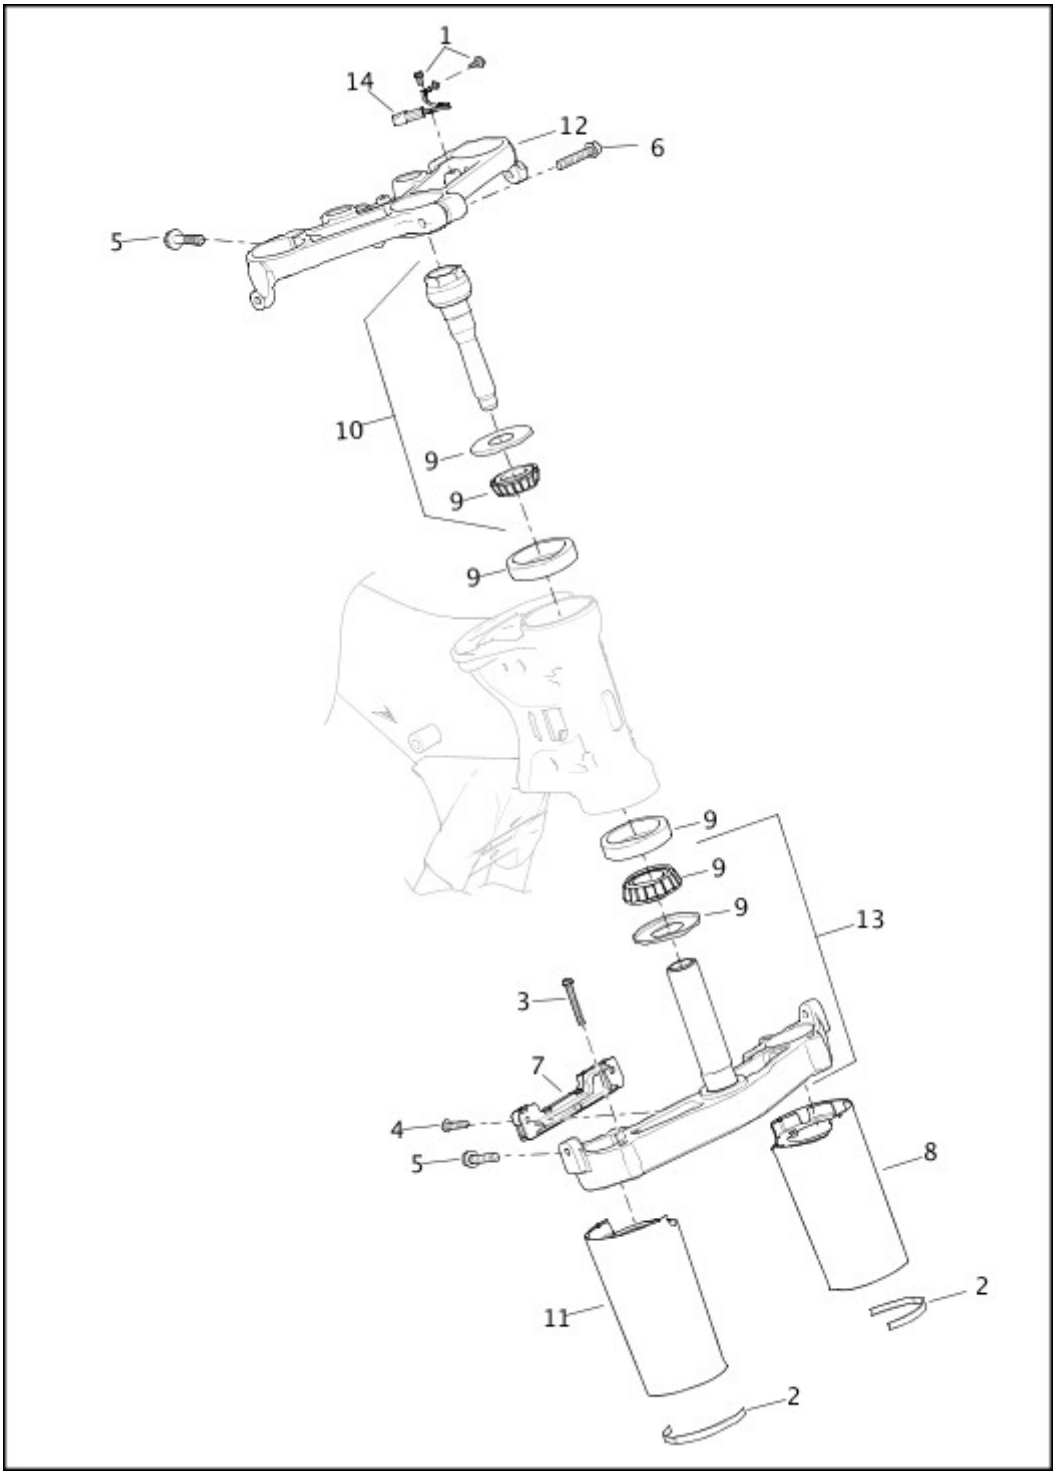


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4240	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	44854-05	RUBBER PAD (HDI) *(2)*	FLHRXS, FLHXS, FLTRXS
3	10200042	SCREW *(4)*	ALL
4	10200223	SCREW *(2)*	ALL
5	10500022	SCREW *(6)*	ALL
6	10500036	SCREW	ALL
7	41600029A	BRACKET, brakeline, front	ALL
8	45600003	COVER ASSEMBLY, fork tube (left)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
8	45600054	COVER ASSEMBLY, fork tube (left) (black)	FLHRXS, FLHXS, FLTRXS
9	45700009	BEARING KIT, steering head, with bearing cups, bearing cones and dirt guards	ALL
10	45700020A	STEM ASSEMBLY, upper steering, with bearing cone and dirt guard	ALL
11	45800023	COVER ASSEMBLY, fork tube (right)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
11	45600055	COVER ASSEMBLY, fork tube (right) (black)	FLHRXS, FLHXS, FLTRXS
12	45900024	BRACKET, upper fork stem	ALL
13	45900091A	BRACKET ASSEMBLY, lower fork, with bearing cone and dirt guard	ALL
14	69200224	WIRE HARNESS, triple clamp, ground jumper	ALL

FORK, FRONT - STANDARD (1 OF 2)

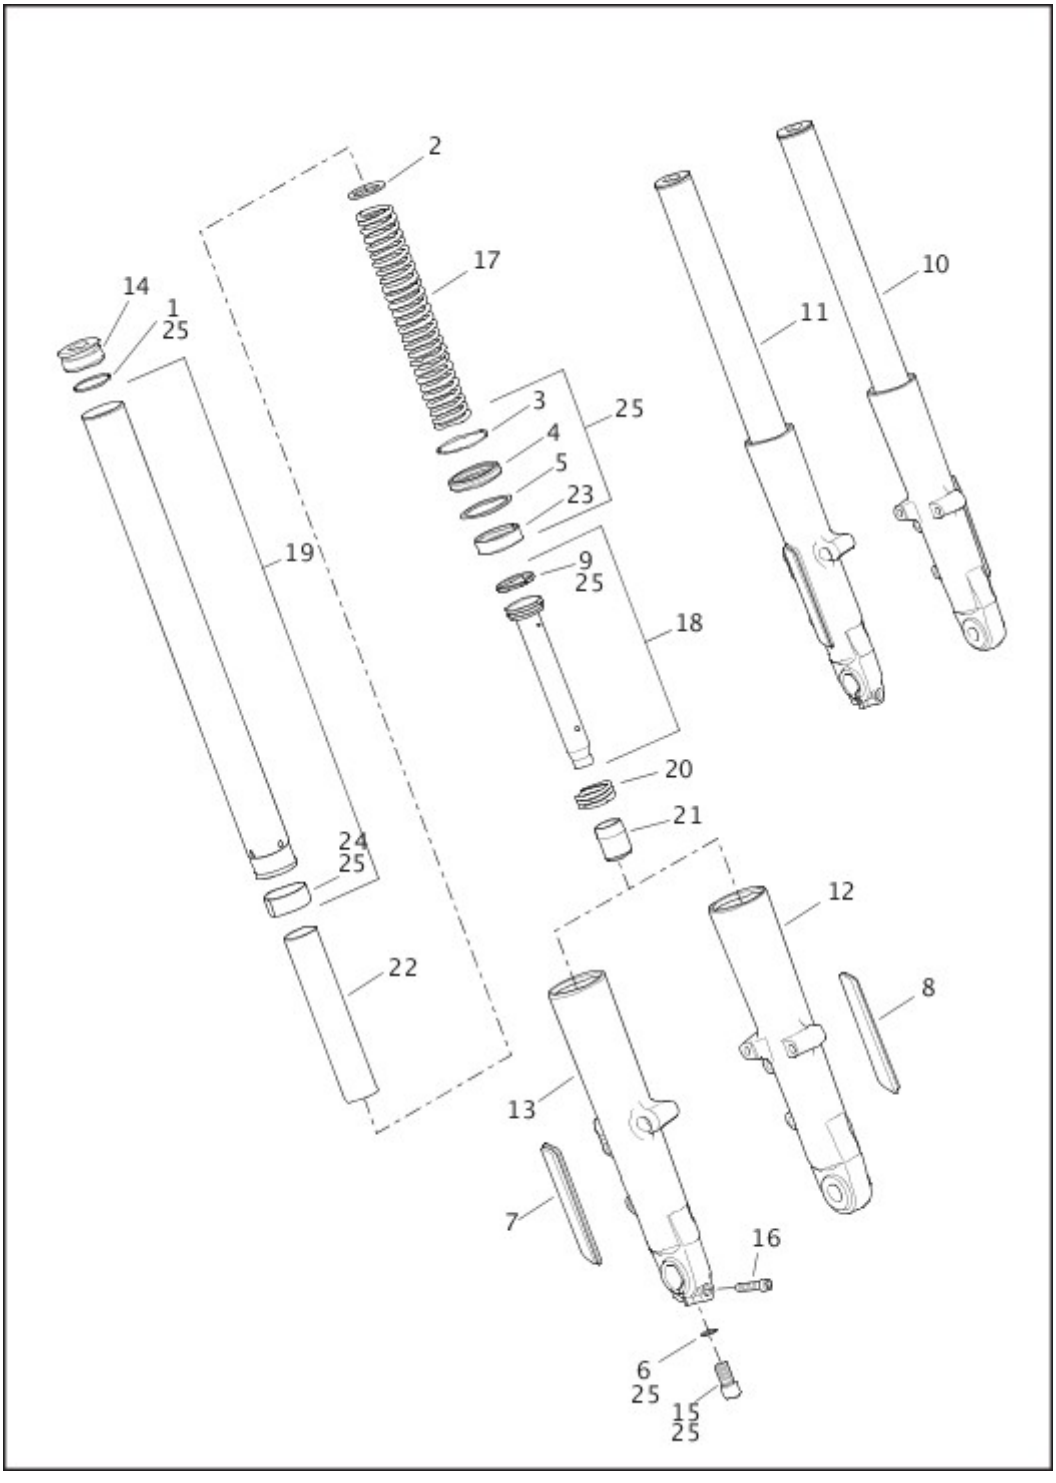

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	46508-01	O-RING *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
2	46509-01	WASHER *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	46513-01	RING, stopper *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
4	46514-01A	OIL SEAL *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
5	46515-01	SPACER, seal *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	46615-06	PACKING SEAL *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	59481-00	REFLECTOR (right) (amber)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLTRU, FLTRX
7	69861-07	REFLECTOR, with black base (right) (amber)	FLHRXS, FLHXS, FLTRXS
8	59482-00	REFLECTOR (left) (amber)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLTRU, FLTRX
8	69862-07	REFLECTOR, with black base (left) (amber)	FLHRXS, FLHXS, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	22000031	PISTON RING *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
10	45400102	FORK ASSEMBLY, complete (left)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLTRU, FLTRX
10	45400181	FORK ASSEMBLY, complete (left)	FLHR, FLHRC
10	45400195	FORK ASSEMBLY, complete (left)	FLHXS, FLTRXS
10	45400197	FORK ASSEMBLY, complete (left) (black)	FLHRXS
11	45400103	FORK ASSEMBLY, complete (right)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLTRU, FLTRX
11	45400182	FORK ASSEMBLY, complete (right)	FLHR, FLHRC
11	45400196	FORK ASSEMBLY, complete (right)	FLHXS, FLTRXS
11	45400198	FORK ASSEMBLY, complete (right) (black)	FLHRXS
12	45500109	SLIDER, fork (left)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLTRU, FLTRX
12	45500176B	SLIDER, fork (left) (black)	FLHRXS, FLHXS, FLTRXS
13	45500111	SLIDER, fork (right)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLTRU, FLTRX
13	45500175B	SLIDER, fork (right) (black)	FLHRXS, FLHXS, FLTRXS

FORK, FRONT - STANDARD (2 OF 2)

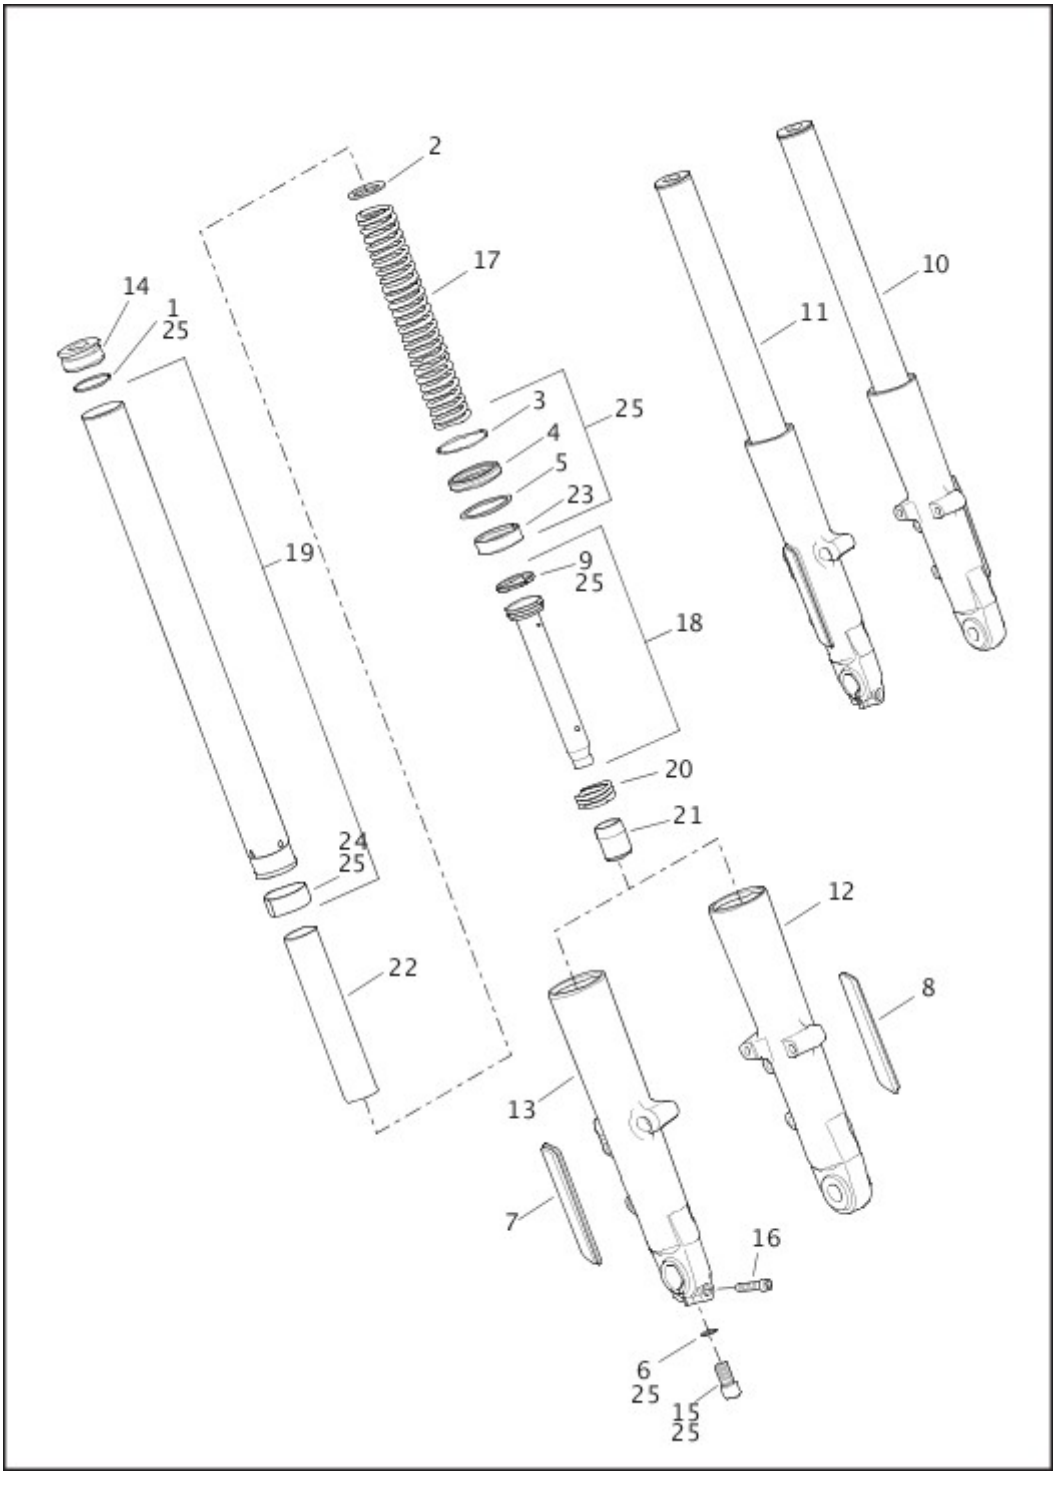

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	45500117	BOLT, fork *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
15	45500118	SCREW *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
16	45500132	SCREW (right)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
17	45500337	SPRING, fork *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
17	45500456	SPRING, fork *(2)*	FLHR, FLHRC, FLHRXS
18	45500339	DAMPER TUBE, with 22000031 *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
19	45500341	FORK PIPE ASSEMBLY, with 45500424 *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
20	45500396	SPRING, rebound *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
21	45500397	OIL LOCK PIECE *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
22	45500398	COLLAR, spring *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	45500421	BUSHING GUIDE *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
24	45500424	BUSHING, slider *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
25	91700025A	FORK REBUILD KIT, with 1, 3, 4, 5, 6, 9, 15, 23 and 24 *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

FORK, FRONT - LOW

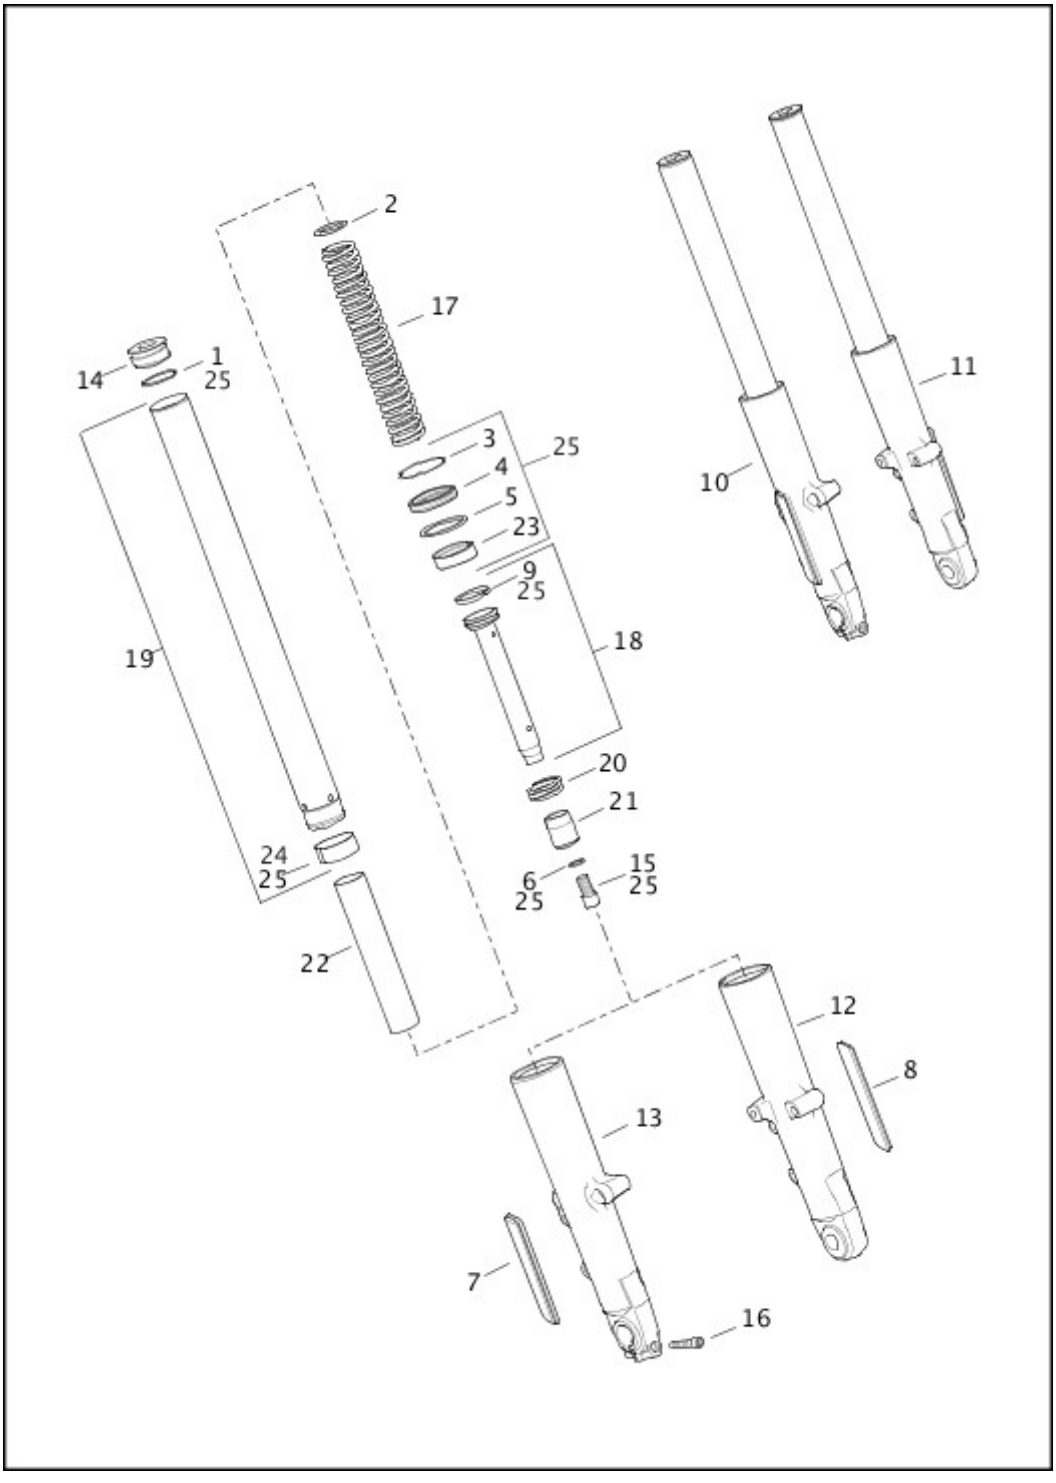

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	46508-01	O-RING *(2)*	FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	46509-01	WASHER (right)	FLHTKL
3	46513-01	RING, stopper *(2)*	FLHTKL
4	46514-01A	OIL SEAL *(2)*	FLHTKL
5	46515-01	SPACER, seal *(2)*	FLHTKL
6	46615-06	PACKING SEAL *(2)*	FLHTKL
7	59481-00	REFLECTOR (right) (amber)	FLHTKL
8	59482-00	REFLECTOR (left) (amber)	FLHTKL
9	22000031	PISTON RING *(2)*	FLHTKL
10	45400104	FORK ASSEMBLY, complete (right)	FLHTKL
11	45400105	FORK ASSEMBLY, complete (left)	FLHTKL
12	45500109	SLIDER, fork (left)	FLHTKL
13	45500111	SLIDER, fork (right)	FLHTKL
14	45500117	BOLT, fork *(2)*	FLHTKL
15	45500118	SCREW *(2)*	FLHTKL
16	45500132	SCREW (right)	FLHTKL
17	45500338	SPRING, fork *(2)*	FLHTKL
18	45500340	DAMPER TUBE, with 22000031 *(2)*	FLHTKL
19	45500341	FORK PIPE ASSEMBLY, with 45500424 *(2)*	FLHTKL
20	45500396	SPRING, rebound *(2)*	FLHTKL
21	45500397	OIL LOCK PIECE *(2)*	FLHTKL
22	45500398	COLLAR, spring *(2)*	FLHTKL
23	45500421	BUSHING GUIDE *(2)*	FLHTKL
24	45500424	BUSHING, slider *(2)*	FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
25	91700025A	FORK REBUILD KIT, with 1, 3, 4, 5, 6, 9, 15, 23 and 24 *(2)*	FLHTKL

SHOCK ABSORBERS, REAR

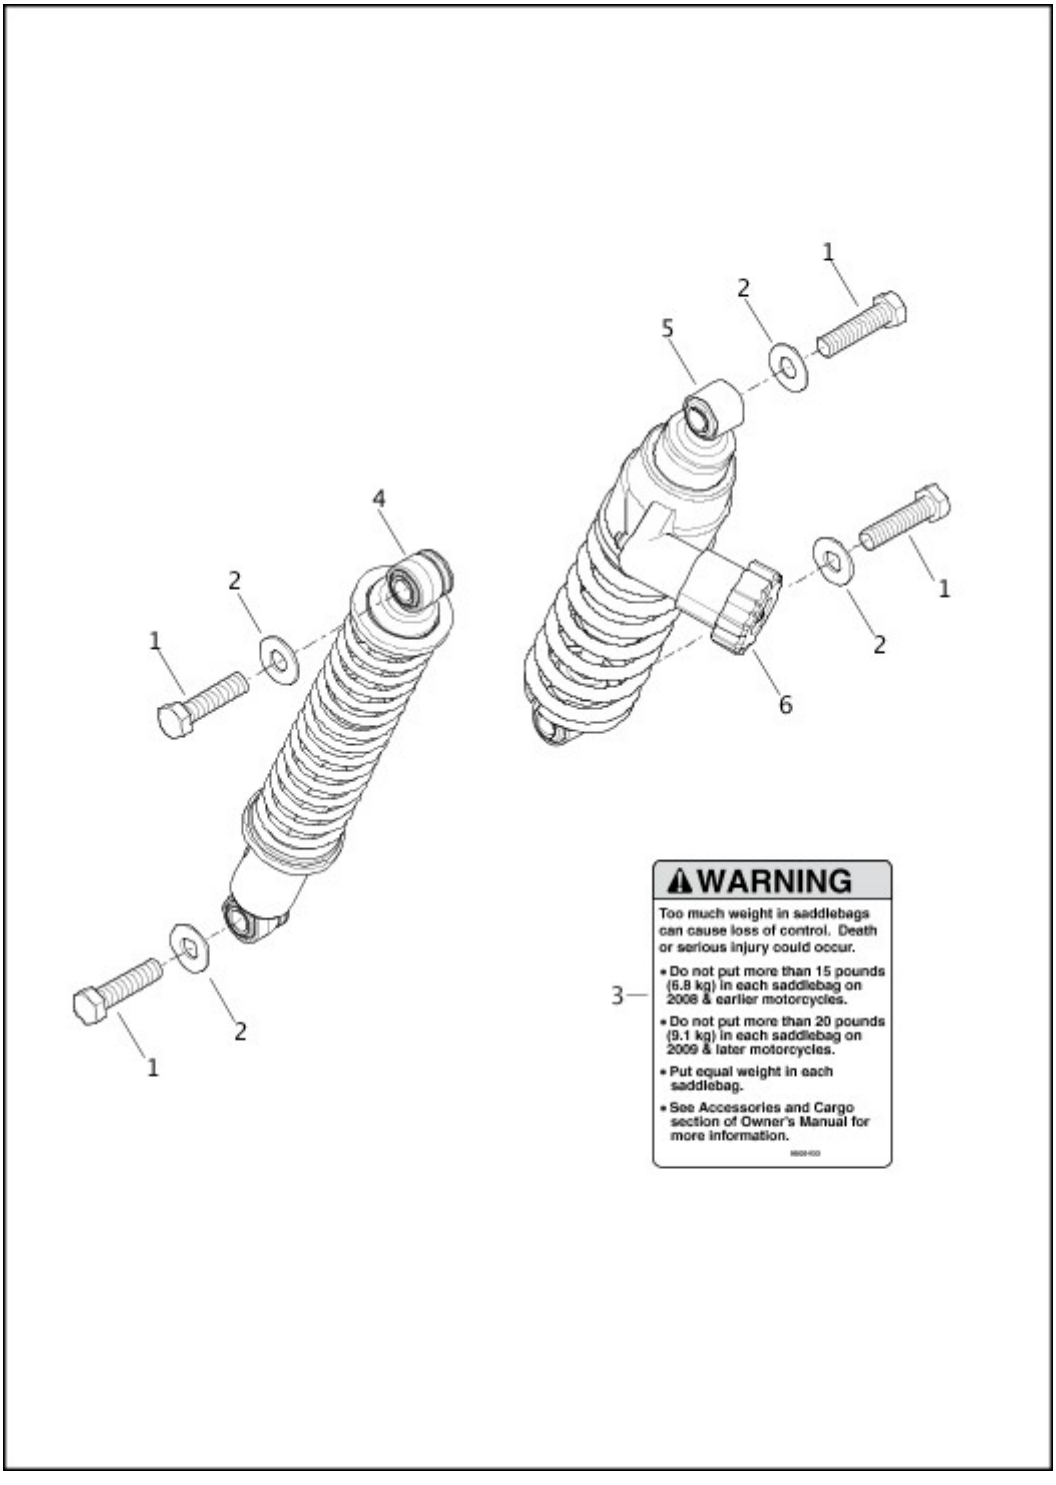


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3607	BOLT *(4)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	6590HW	WASHER *(4)*	ALL
3	90820-93D	LABEL, saddlebag load limits, inside right saddlebag	ALL
4	54000093	REAR SHOCK ABSORBER (right)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLTRU
4	54000114	REAR SHOCK ABSORBER (right)	FLHRXS, FLHT, FLHTKL, FLHX, FLHXS, FLTRX, FLTRXS
5	54000094	REAR SHOCK ABSORBER, with 54000141 (left)	FLHTCU, FLHTK, FLHTK SHRINE, FLTRU
5	54000095	REAR SHOCK ABSORBER, with 54000141 (left)	FLHR, FLHRC
5	54000096	REAR SHOCK ABSORBER, with 54000141 (left)	FLHRXS, FLHT, FLHX, FLHXS, FLTRX, FLTRXS
5	54000113	REAR SHOCK ABSORBER, with 54000141 (left)	FLHTKL
6	54000141	KNOB SERVICE KIT	ALL

FRAME AND JIFFY STAND (1 OF 2)

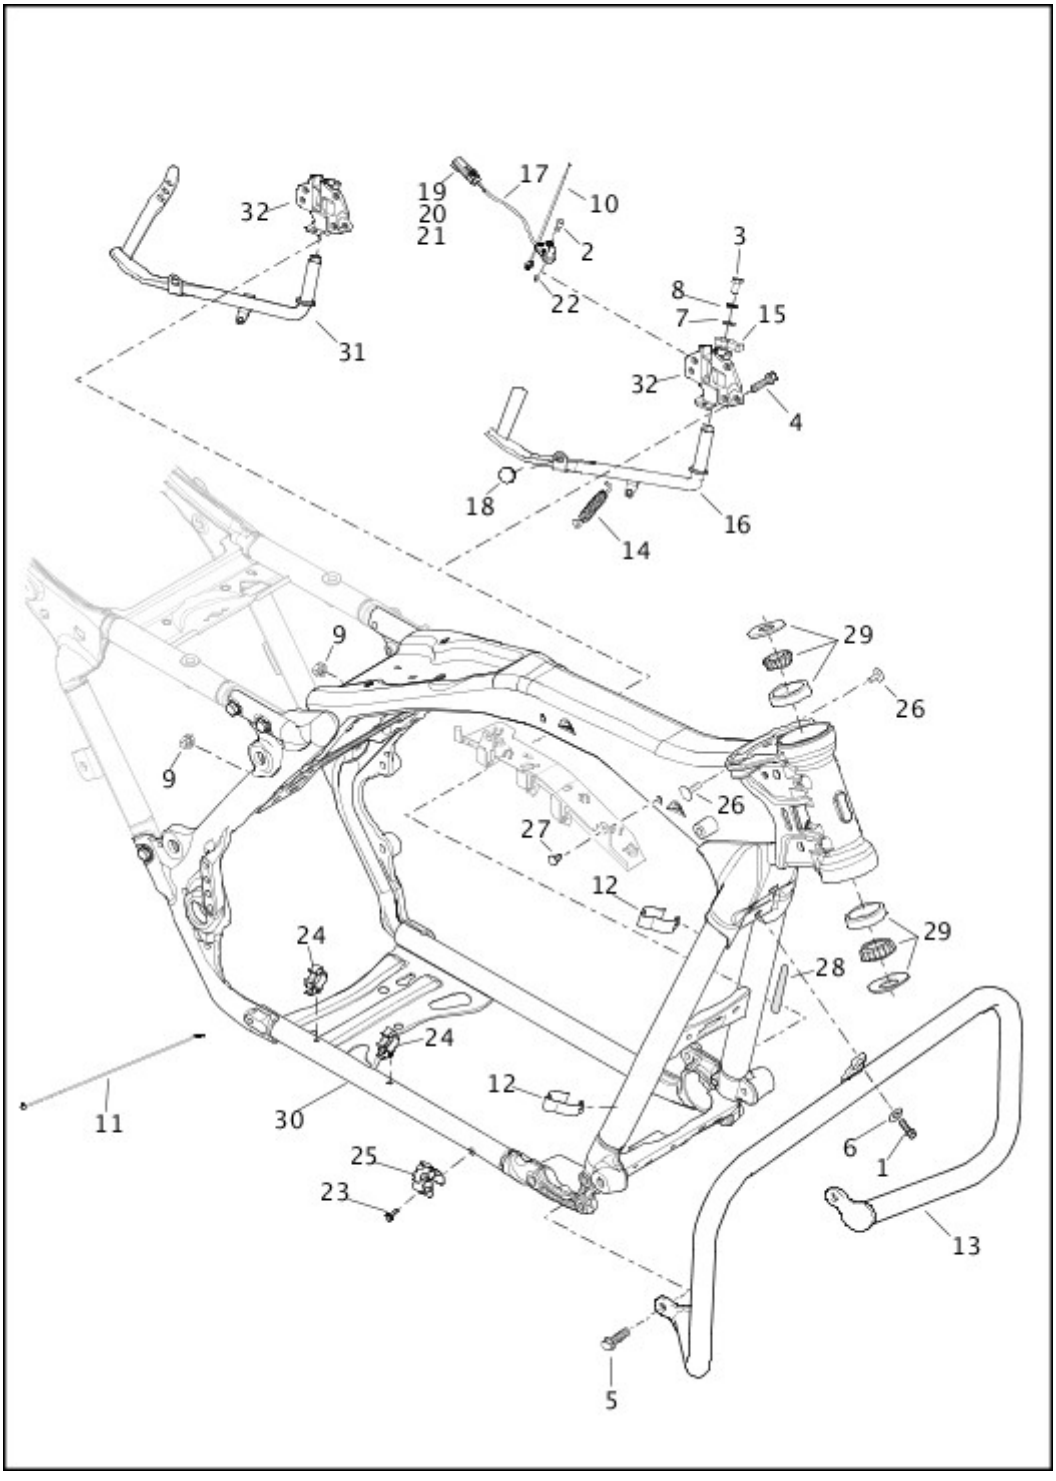

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2708A	SCREW	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3594	SCREW (England, HDI, Brazil)	FLHR, FLHRC, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	3987	BOLT	ALL
4	4688	SCREW *(2)*	ALL
5	4924	SCREW *(2)*	ALL
6	6116	WASHER	ALL
7	6702	WASHER	ALL
8	7041	LOCKWASHER	ALL
9	7495	NUT *(2)*	ALL
10	10177	CABLE STRAP, anchored, jiffy stand (England, HDI)	ALL
11	10039	CABLE STRAP *(9)*	ALL
12	10264	CLIP, clutch line *(2)*	ALL
13	49184-09A	ENGINE GUARD, with 2708A, 6116 and 14148-86 (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
13	49050-09A	ENGINE GUARD, with 2708A, 6116 and 14151-02 (black)	FLHRXS, FLHXS, FLTRXS
14	49725-07A	SPRING, jiffy stand	ALL
15	50015-74A	LEG STOP	ALL
16	50075-07A	LEG, jiffy stand	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
17	50126-08B	SENSOR, jiffy stand, with 72169-07, 72511-07BK and 73213-07 (England, HDI, Brazil)	FLHR, FLHRC, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
18	50245-07	BUMPER, jiffy stand leg	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	72169-07	TERMINAL, pin, 16-20 AWG (England, HDI, Brazil) *(3)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

FRAME AND JIFFY STAND (2 OF 2)

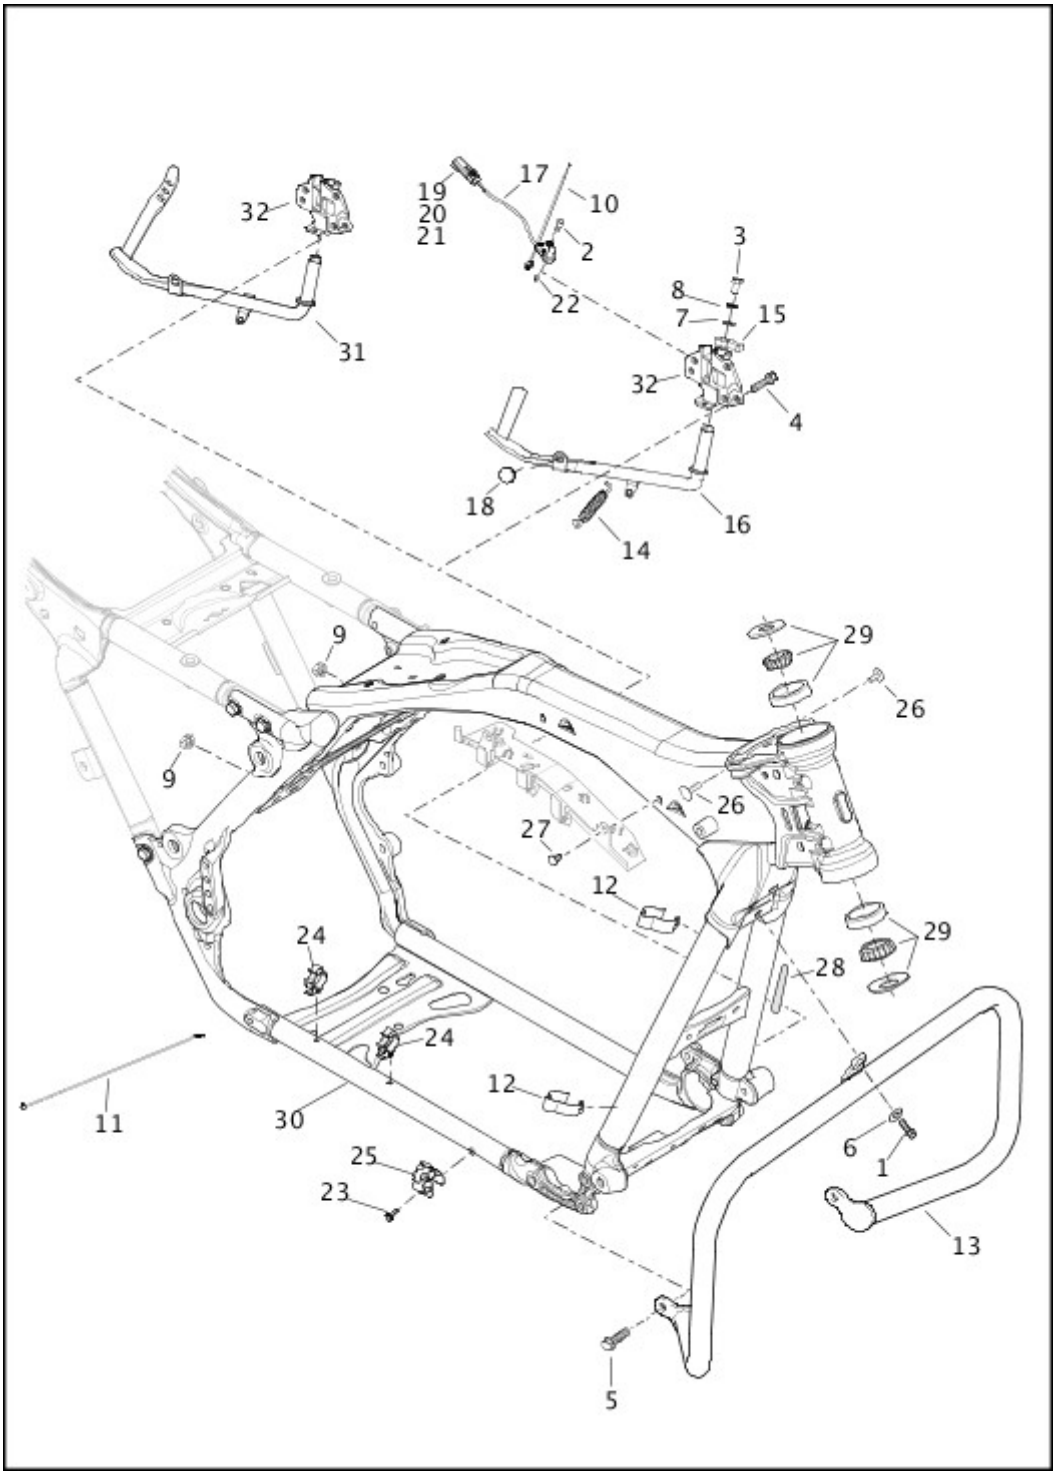


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	72511-07BK	HOUSING, three-way pin (black) (England, HDI, Brazil)	FLHR, FLHRC, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
21	73213-07	RETAINER, anchored (England, HDI, Brazil)	FLHR, FLHRC, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
22	90520-07	HOLE PLUG, jiffy stand (except England, HDI, Brazil)	ALL
23	10200546	SCREW	ALL
24	10800025A	CLIP, conduit, anchored *(2)*	ALL
25	12200147A	CLIP, retaining	ALL
26	12600067	FASTENER, plastic *(2)*	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
27	12600197	FASTENER, anchored *(2)*	ALL
28	14000827	CLEAR OVERLAY, VIN label (Japan)	FLHRC, FLHTK, FLHTK SHRINE, FLHXS, FLTRU, FLTRXS
29	45700009	BEARING KIT, steering head, with bearing cups, bearing cones and dirt guards	ALL
30	47000088BHP	FRAME, main, with bearing cups (Also order 45700009)	ALL
31	50000083	LEG, jiffy stand	FLHTKL
32	50000097	BRACKET, jiffy stand leg	FLHR, FLHRC, FLHRXS, FLHTCU, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
32	50000141A	BRACKET, jiffy stand leg	FLHT, FLHTKL

COVERS AND AIR DEFLECTORS

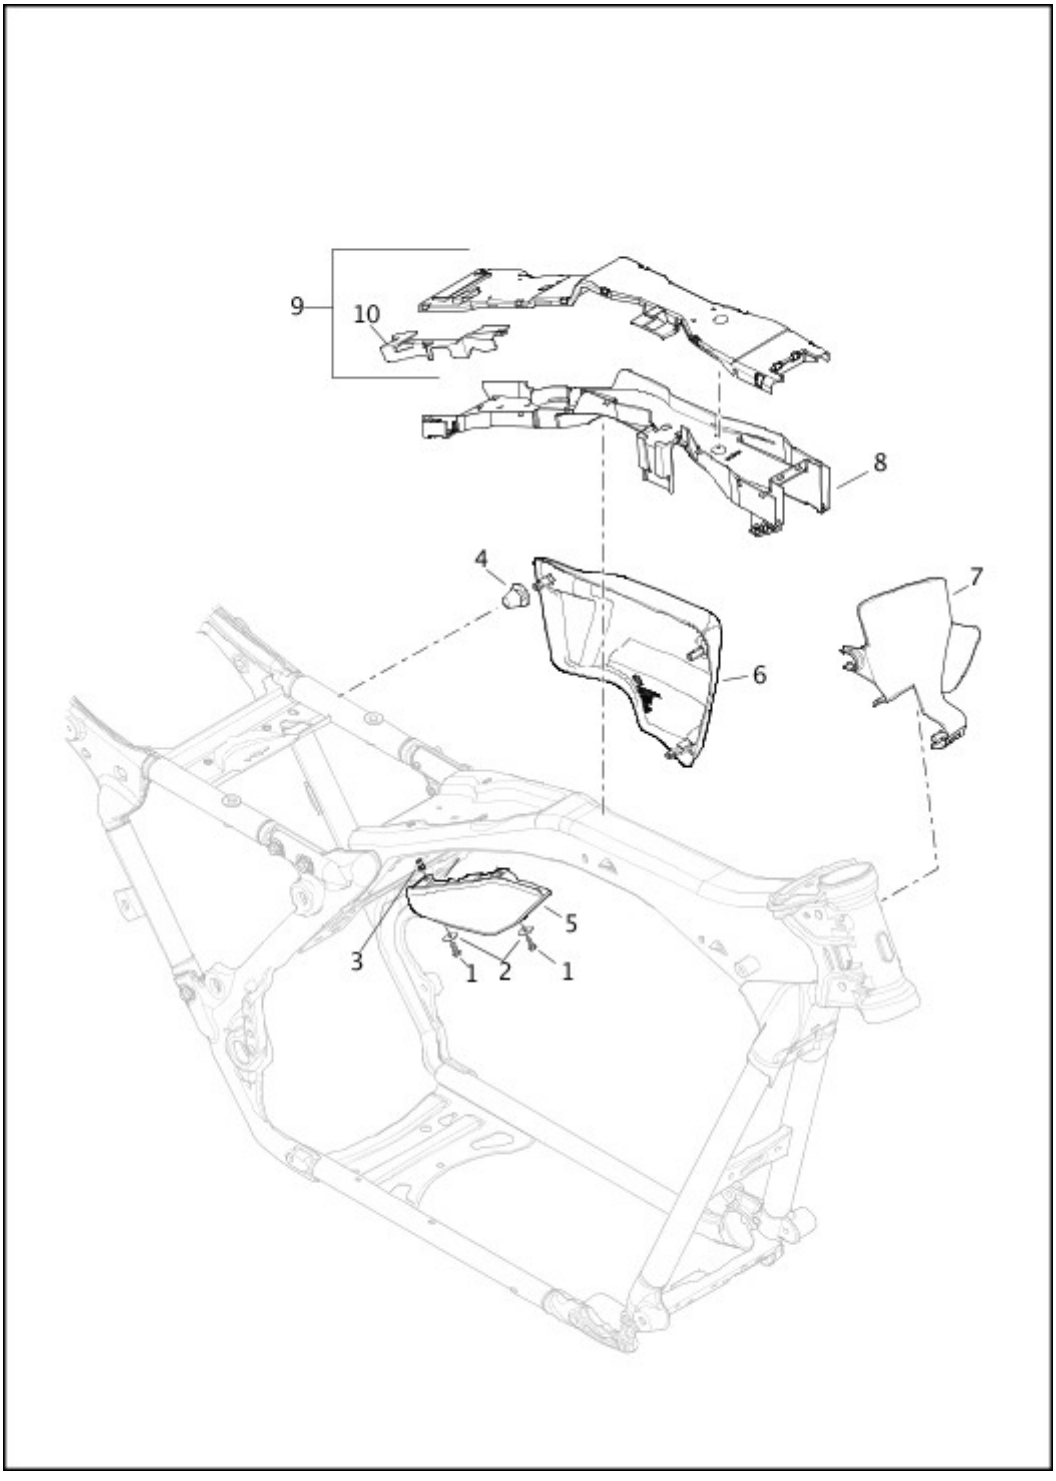


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3787	BOLT *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	6036	WASHER *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
3	8194	NUT, special *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
4	11650	GROMMET, side cover *(6)*	ALL
5	58167-09A	DEFLECTOR, air (right)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
5	58169-09	DEFLECTOR, air (left)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	66048-09A	SIDE COVER (right) (unpainted)	ALL
6	66250-09	SIDE COVER (left) (unpainted)	ALL
7	57200066	WIND DEFLECTOR (left)	FLTRU
7	57200065	WIND DEFLECTOR (right) (not shown)	FLTRU
8	69200202A	WIRE TROUGH (main harness)	ALL
9	69200203A	COVER, wire trough, with 15368-01A and 69201459 (main harness)	ALL
10	69201459	BRACKET	ALL

FRAME AND FORK, REAR AND TOUR-PAK SUPPORT

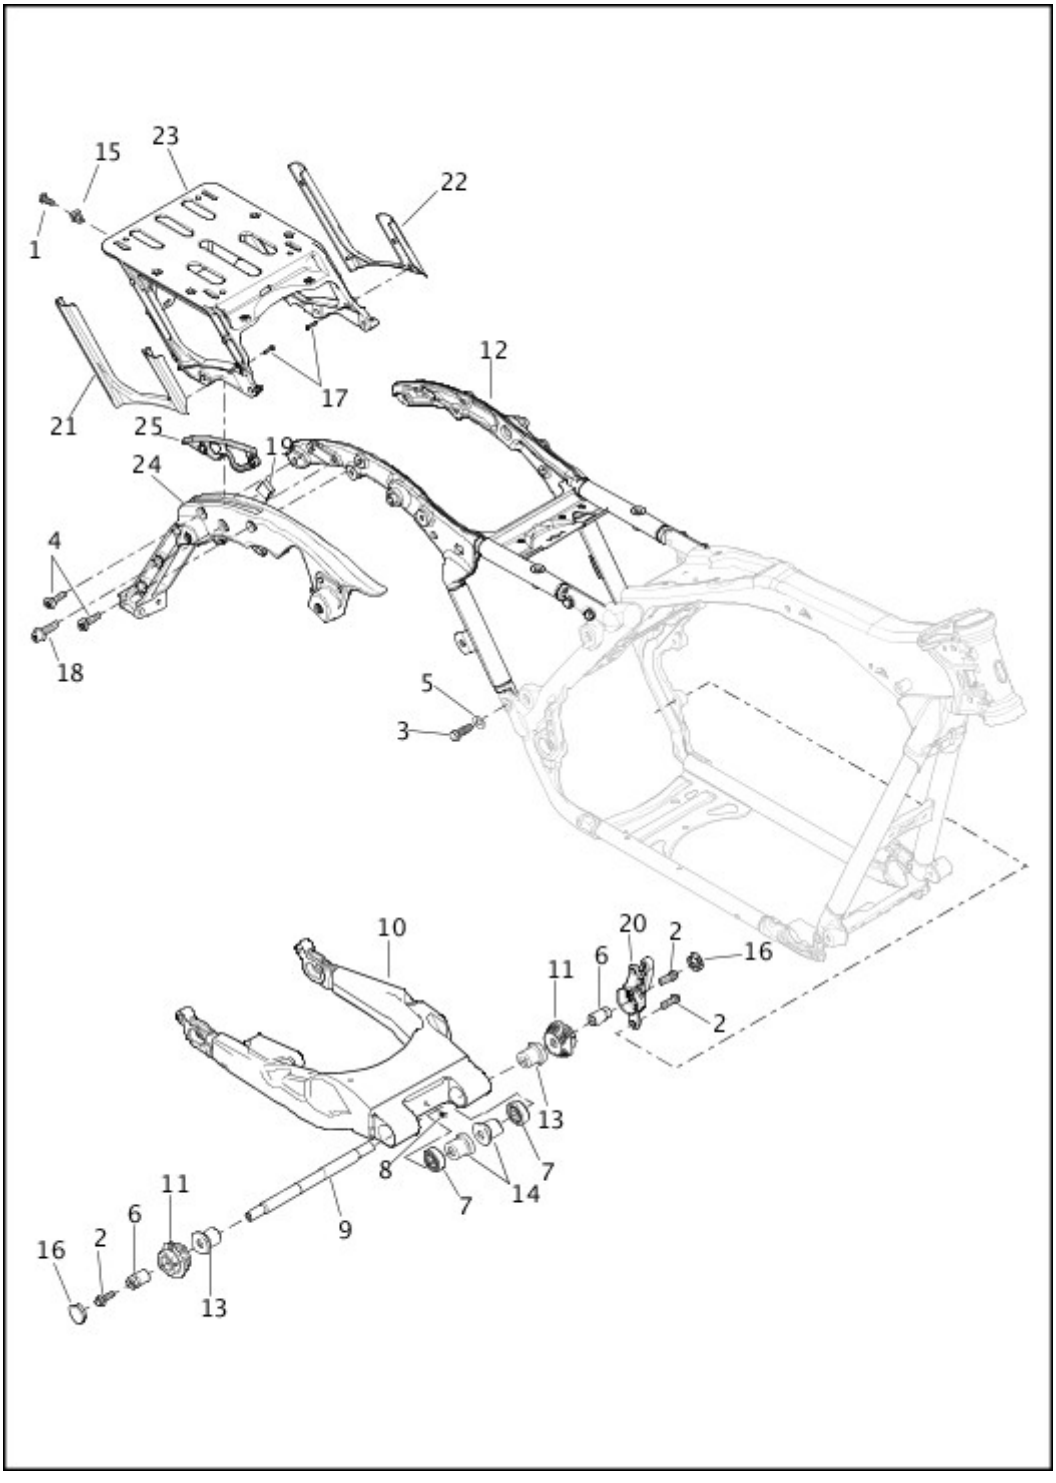

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2731W	SCREW *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	3057	SCREW *(4)*	ALL
3	3536	BOLT *(6)*	ALL
4	3684	SCREW *(4)*	ALL
5	6532	WASHER *(6)*	ALL
6	6982	WASHER, hex cup *(2)*	ALL
7	9208	BEARING *(2)*	ALL
8	11779	FASTENER, push-in (black)	ALL
9	47540-11	SHAFT, rear fork	ALL
10	47549-09A	REAR FORK, with 9208, 11779 and 48489-02	ALL
11	47584-09	RUBBER MOUNT *(2)*	ALL
12	48079-09BHP	FRAME, rear	ALL
13	48487-02	SPACER, outer *(2)*	ALL
14	48489-02	SPACER, inner *(2)*	ALL
15	59292-94	NUT, plastic *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
16	67875-11	CAP *(2)*	ALL
17	10200155	SCREW *(8)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
18	10200217	SCREW *(2)*	ALL
19	11100068	CUSHION *(2)*	ALL
20	16400005	BRACKET, rear fork (left)	ALL
21	47200080	COVER, Tour-Pak support (right) (chrome)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
22	47200081	COVER, Tour-Pak support (left) (chrome)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
23	53000125	TOUR-PAK SUPPORT (black)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
24	90200499	SUPPORT, saddlebag, with 11100068 (right) (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
24	90201319	SUPPORT, saddlebag, with 11100068 (right) (black)	FLHRXS, FLHXS, FLTRXS
24	90200501	SUPPORT, saddlebag, with 11100068 (left) (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
24	90201320	SUPPORT, saddlebag, with 11100068 (left) (black)	FLHRXS, FLHXS, FLTRXS
25	90200547	INSERT ASSEMBLY, saddlebag support *(2)*	FLHR, FLHRC, FLHT, FLHX, FLTRX
25	90201754DH	INSERT ASSEMBLY, saddlebag support (black) *(2)*	FLHRXS, FLHXS, FLTRXS

SEATS

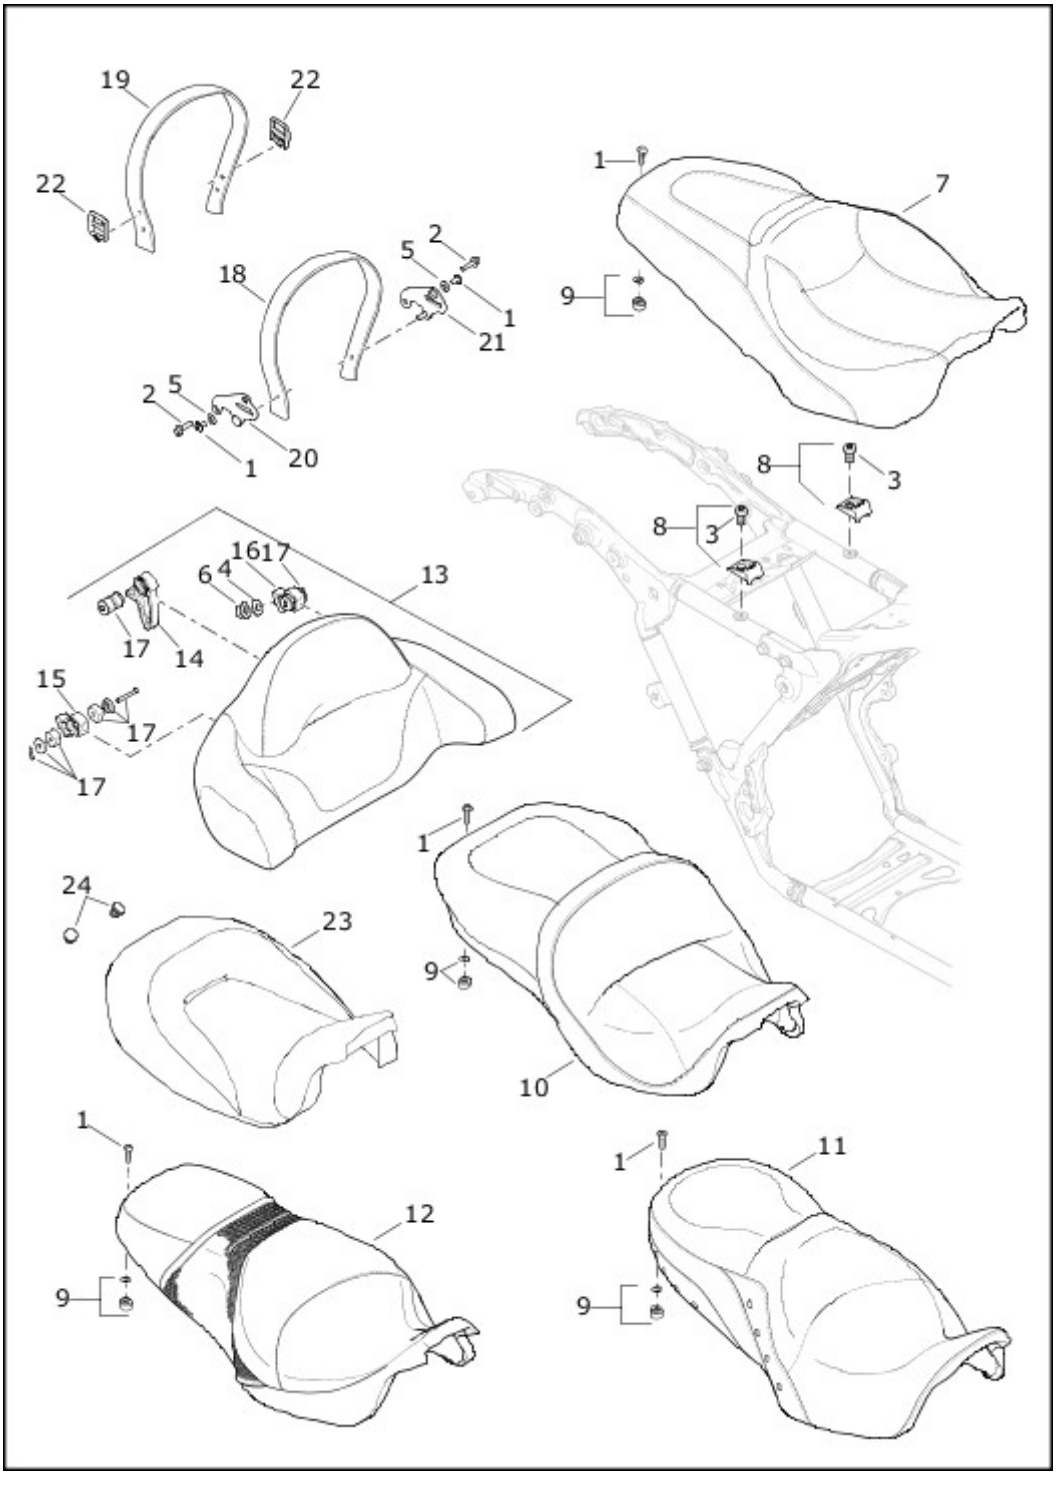

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2952A	SCREW *(3)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3901	SCREW *(2)*	ALL
3	4924	SCREW *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
4	6026	WASHER *(3)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
5	6703	WASHER *(2)*	ALL
6	7531	LOCKNUT *(3)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	52320-11	SEAT	FLHX, FLTRXS
7	52000142	SEAT	FLHRXS, FLHXS, FLTRX
8	54395-10	SEAT BUMPER KIT, with 4924	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
9	59768-97	SEAT NUT KIT, with nut and retention washer	ALL
10	52000033	SEAT (except Asia-Pacific)	FLHTCU, FLHTK, FLHTK SHRINE, FLTRU
10	52000122	SEAT (Asia-Pacific)	FLHTK, FLHTK SHRINE, FLTRU
10	52000174	SEAT (Asia-Pacific)	FLHTKL
10	52000334	SEAT KIT, with 52400099 (except Asia-Pacific)	FLHTKL
11	52000038	SEAT	FLHR
12	52000060	SEAT	FLHRC
13	52300053	BACKREST ASSEMBLY, with 6026, 7531, 52300121, 52300122, 52300123 and 52300127 (black)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
14	52300121	SUPPORT BRACKET, center	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
15	52300122	SUPPORT BRACKET (right)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
16	52300123	SUPPORT BRACKET (left)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	52300127	KIT, BACKREST ISOLATION, passenger backrest *(3)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
18	52400015	PASSENGER STRAP	FLHTCU, FLHTK, FLHTK SHRINE, FLTRU
18	52400017	PASSENGER STRAP	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
18	52400018	PASSENGER STRAP	FLHR
18	52400099	PASSENGER STRAP (except Asia-Pacific)	FLHTKL
18	52400116	PASSENGER STRAP (Asia-Pacific)	FLHTKL
19	52400054	PASSENGER STRAP, with 52400067	FLHRC
20	52400016	BRACKET, passenger strap (right)	ALL
21	52400021	BRACKET, passenger strap, (left)	ALL
22	52400067	BUCKLE, passenger strap *(2)*	FLHRC
23	52000464	SEAT	FLHT
24	3633	NUT *(2)*	FLHT

FOOTBOARDS, OPERATOR

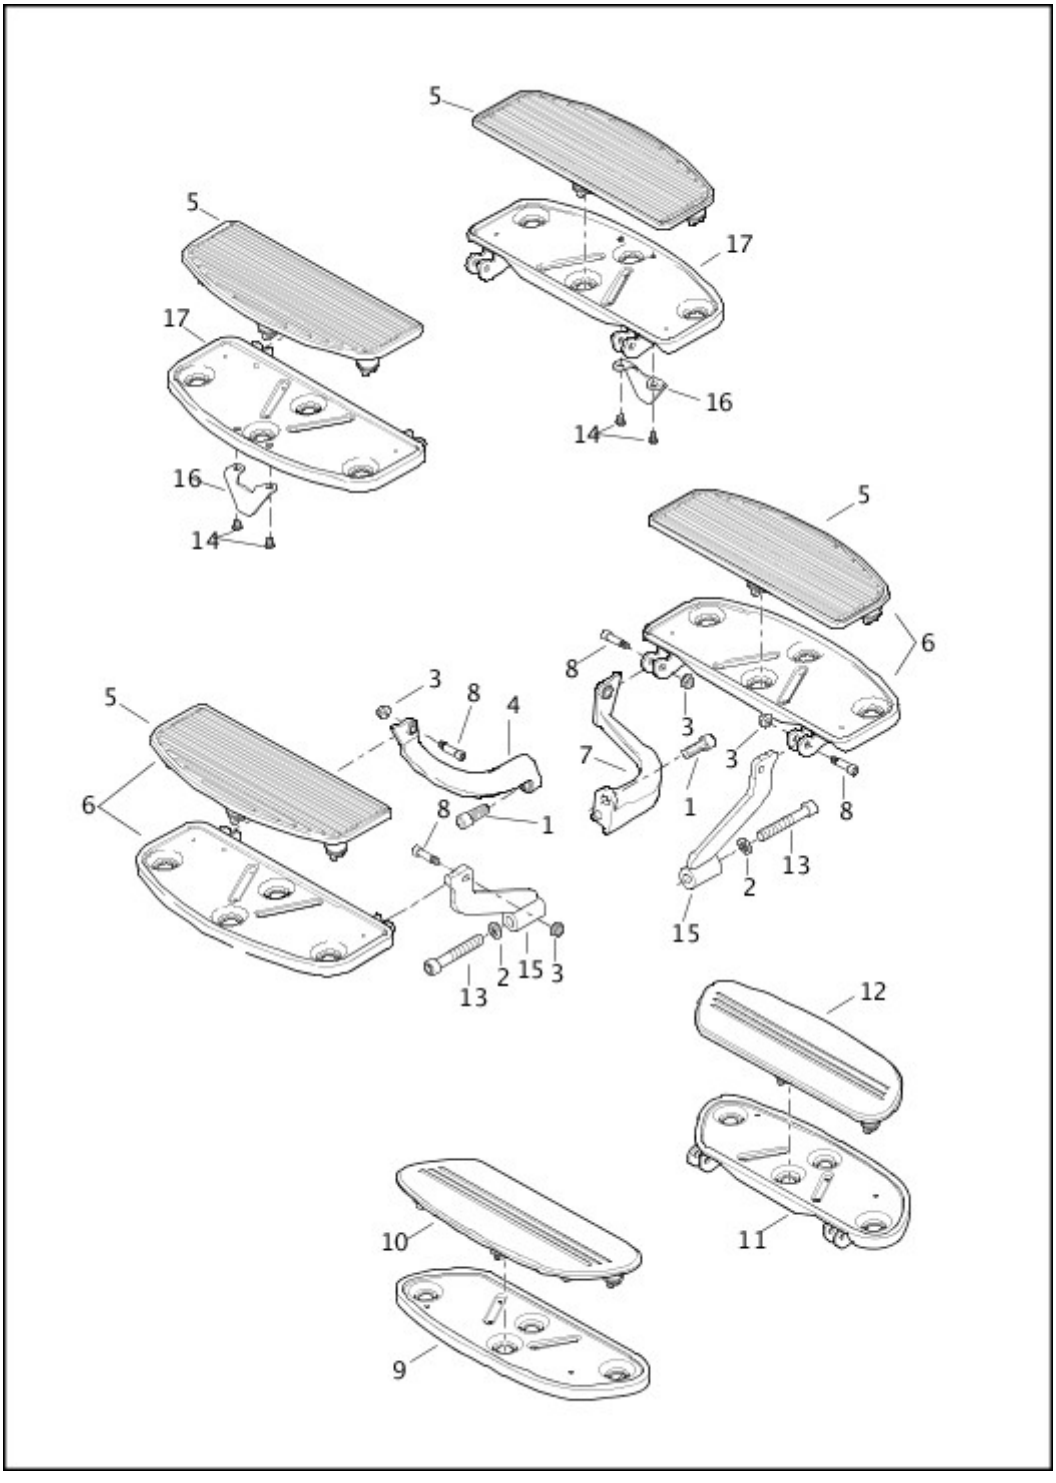


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4688	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	7038	LOCKWASHER *(2)*	ALL
3	7716	LOCKNUT *(4)*	ALL
4	50518-09	BRACKET, right rear	ALL
5	50614-06	PAD, footboard *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	50621-06	FOOTBOARD ASSEMBLY, operator, with 50614-06 *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLTRU
7	50622-09A	BRACKET, left rear	ALL
8	50674-05	SHOULDER BOLT, footboard *(4)*	ALL
9	50683-04	FOOTBOARD BOTTOM ASSEMBLY (right)	FLHX, FLTRX
9	51068-08	FOOTBOARD BOTTOM ASSEMBLY (right) (gloss black)	FLHRXS, FLHXS, FLTRXS
10	50684-11	RUBBER PAD, footboard (right)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
11	50688-04	FOOTBOARD BOTTOM ASSEMBLY (left)	FLHX, FLTRX
11	51070-08	FOOTBOARD BOTTOM ASSEMBLY (left) (gloss black)	FLHRXS, FLHXS, FLTRXS
12	50689-11	RUBBER PAD, footboard (left)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
13	10200429	SCREW *(2)*	ALL
14	10500053	SCREW *(4)*	FLHTKL
15	47200302A	BRACKET, front footboard *(2)*	ALL
16	50500339	FEELER, footboard *(2)*	FLHTKL
17	50500360	FOOTBOARD BOTTOM ASSEMBLY *(2)*	FLHTKL

FOOTBOARDS AND FOOTPEGS, PASSENGER

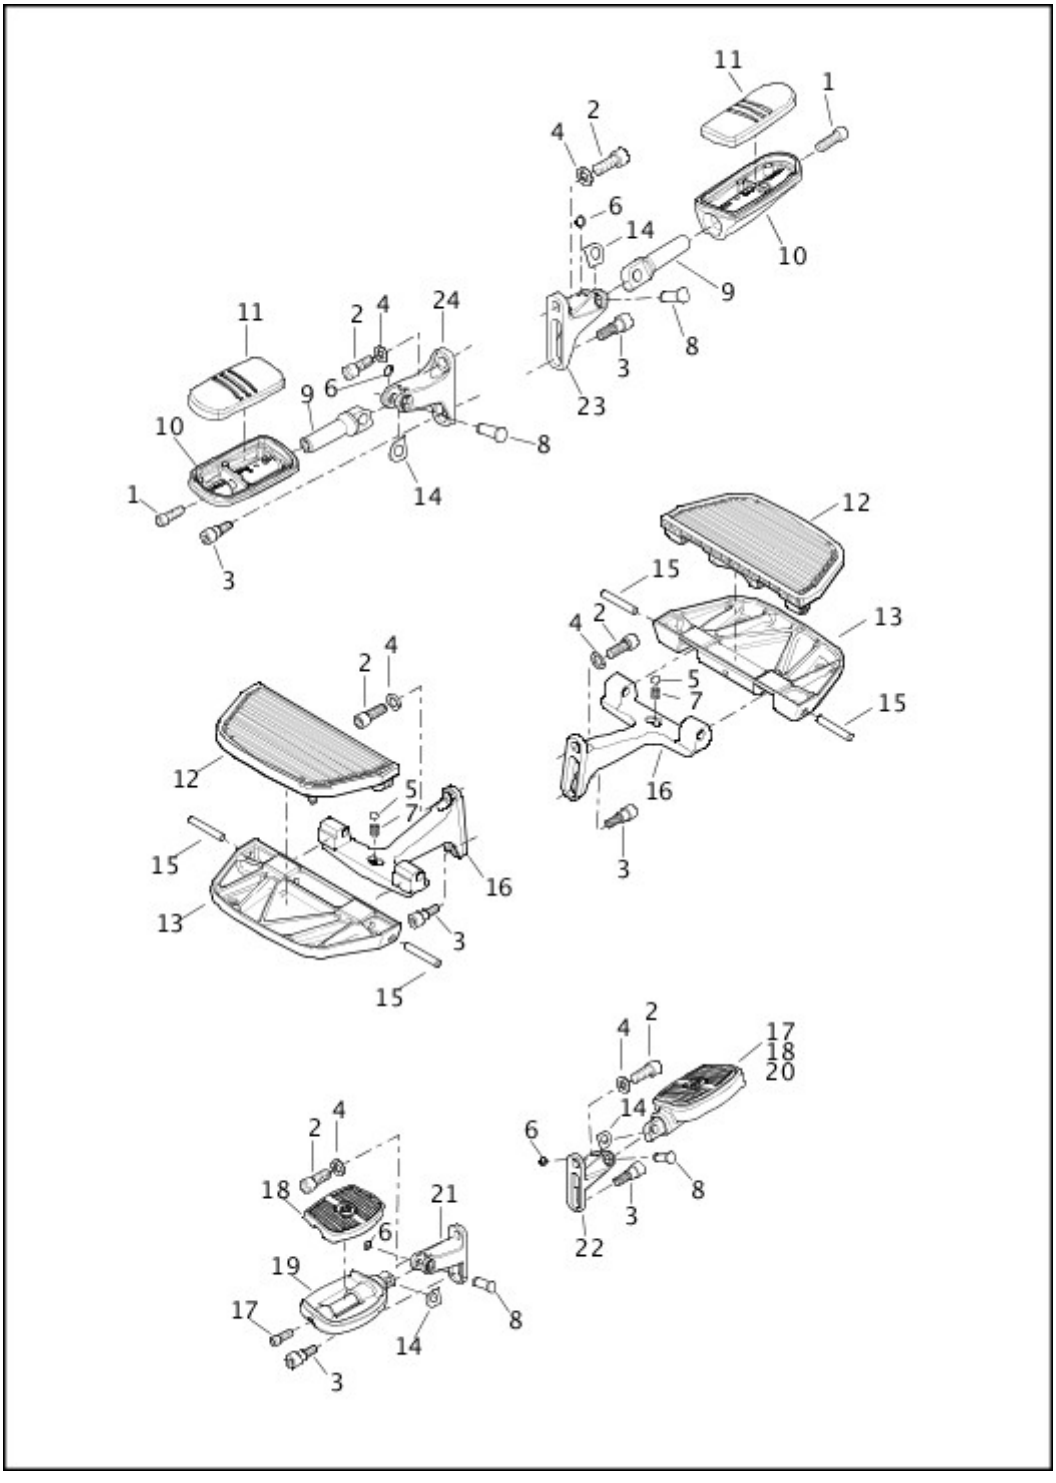

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2708A	SCREW *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
2	3143	SCREW *(2)*	ALL
3	4916	SCREW *(2)*	ALL
4	7038	LOCKWASHER *(2)*	ALL
5	8860	BALL *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLTRU
6	11304	RING, retaining, passenger footpeg support *(2)*	FLHRXS, FLHTKL, FLHX, FLHXS, FLTRX, FLTRXS
7	33085-74	SPRING *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLTRU
8	45041-01A	CLEVIS PIN, passenger footpeg support *(2)*	FLHRXS, FLHTKL, FLHX, FLHXS, FLTRX, FLTRXS
9	50208-04	MOUNT, passenger footpeg *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
10	50345-04	FOOTPEG, passenger (chrome) *(2)*	FLHX, FLTRX
10	50500876	FOOTPEG, passenger (gloss black) *(2)*	FLHRXS, FLHXS, FLTRXS
11	50350-04	PAD, passenger footpeg *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
12	50606-06	PAD, passenger footboard *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLTRU
13	50613-91A	FOOTBOARD, passenger (Domestic) *(2)*	FLHR, FLHTCU, FLHTK, FLHTK SHRINE, FLTRU
13	50899-99A	FOOTBOARD, passenger (HDI) *(2)*	FLHR, FLHRC, FLHTK, FLHTK SHRINE, FLTRU
14	50912-72	SPRING WASHER, passenger footpeg *(2)*	FLHRXS, FLHTKL, FLHX, FLHXS, FLTRX, FLTRXS
15	50933-86A	PIVOT PIN *(4)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	52719-10	SUPPORT KIT, footboard *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLTRU
17	12600031	SCREW *(2)*	FLHTKL
18	50500143	TREAD, footboard *(2)*	FLHTKL
19	50500145	FOOTBOARD ASSEMBLY, with 12600031 and 50500143 (right)	FLHTKL
20	50500146	FOOTBOARD ASSEMBLY, with 12600031 and 50500143 (left)	FLHTKL
21	50500332A	SUPPORT, right passenger floorboard (black)	FLHTKL
22	50500334A	SUPPORT, left passenger floorboard (black)	FLHTKL
23	50500460A	SUPPORT, left passenger footpeg (chrome)	FLHX, FLTRX
23	50500334A	SUPPORT, left passenger footpeg (gloss black)	FLHRXS, FLHXS, FLTRXS
24	50500462A	SUPPORT, right passenger footpeg (chrome)	FLHX, FLTRX
24	50500332A	SUPPORT, right passenger footpeg (gloss black)	FLHRXS, FLHXS, FLTRXS

FENDERS, FRONT

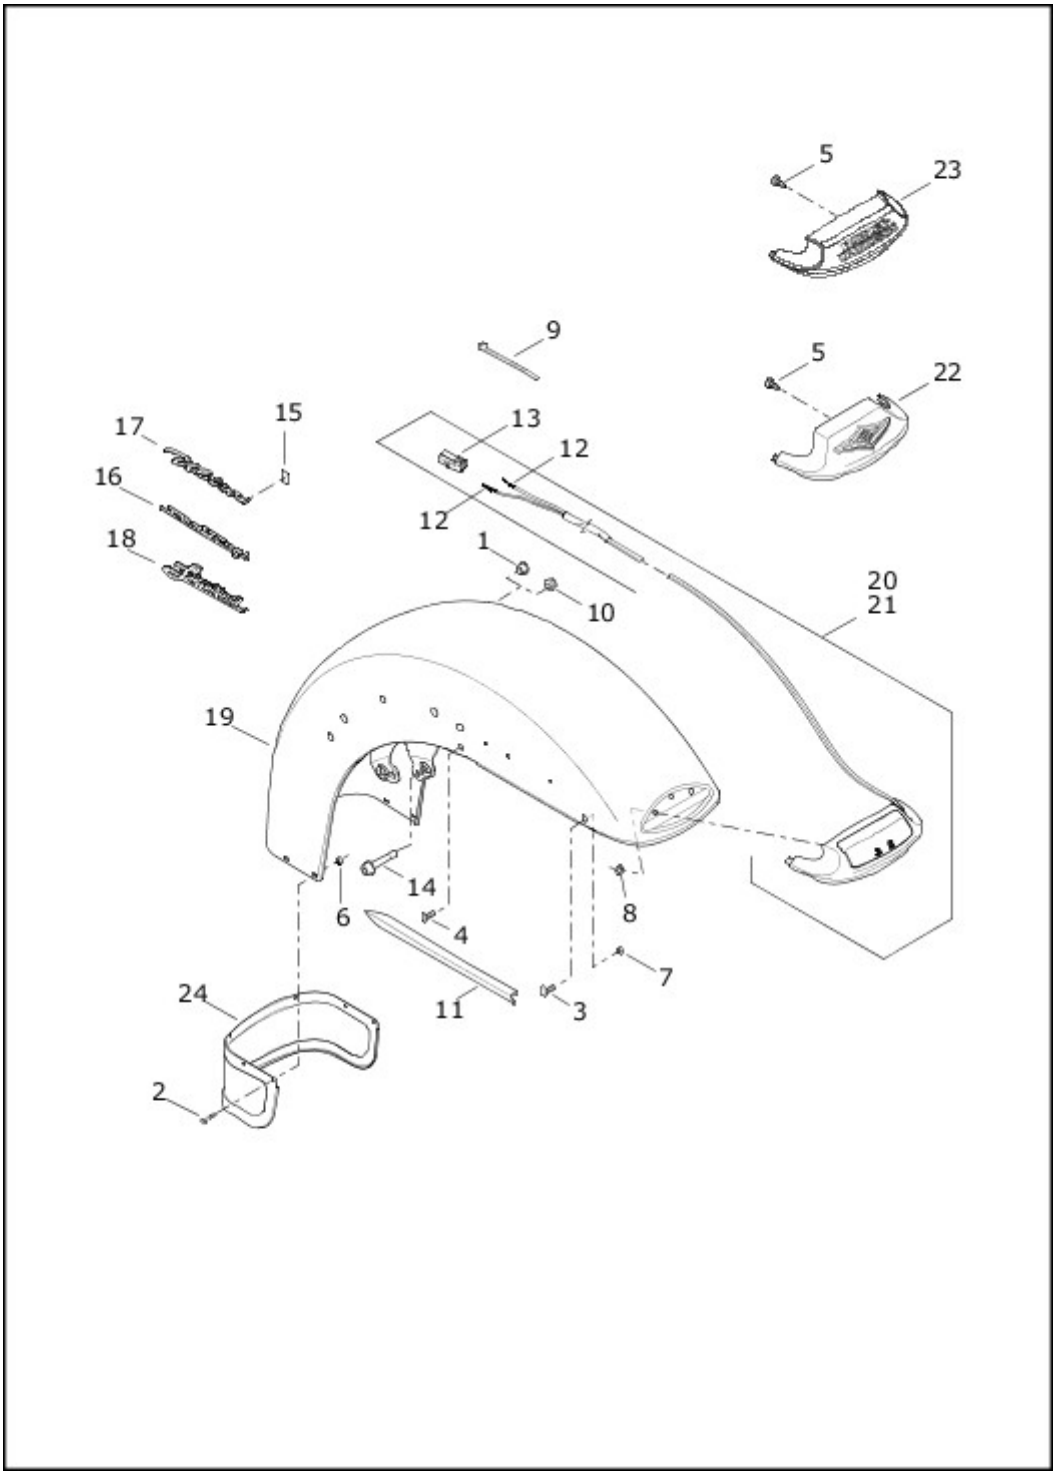

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	755	HOLE PLUG	FLHR, FLHRC, FLHTCU
2	2531	SCREW *(6)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
3	3560WA	BOLT *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
4	3561WC	BOLT *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
5	3612	SCREW *(2)*	FLHR, FLHRC, FLHTCU
6	7600	NUT *(6)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
7	7624	LOCKNUT *(4)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
8	7629	NUT *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
9	10065	CABLE STRAP *(3)*	ALL
10	11437	GROMMET, wiring harness	FLHTK, FLHTK SHRINE, FLHTKL
11	59211-74A	TRIM, front fender *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
12	73191-96	TERMINAL, socket, 16-20 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
13	73152-96BK	HOUSING, two-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
13	73152-96WE	HOUSING, two-way socket (without fender tip light) (white)	FLHT, FLHTCU, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
14	10500015	SCREW *(4)*	ALL
15	12200092	CLIP, retaining *(6)*	FLHR, FLHRC, FLHTCU
16	14100230	NAMEPLATE, Road King *(2)*	FLHR, FLHRC
17	14100231	NAMEPLATE, Ultra *(2)*	FLHTCU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	14100232	NAMEPLATE, Limited *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
19	58900009	FENDER (prime)	FLHRXS, FLHT, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
19	58900032	FENDER (prime)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
20	59600003	FENDER LIGHT ASSEMBLY, with 73191-96 (Domestic) (amber)	FLHTK, FLHTK SHRINE, FLHTKL
21	59600006	FENDER LIGHT ASSEMBLY, with 73191-96 (HDI) (white)	FLHTK, FLHTK SHRINE, FLHTKL
22	59600009	FRONT FENDER TIP	FLHR, FLHRC
23	59600011	FRONT FENDER TIP	FLHTCU
24	61400057	TRIM SKIRT, front fender (lower)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL

FENDERS, REAR (1 OF 2)

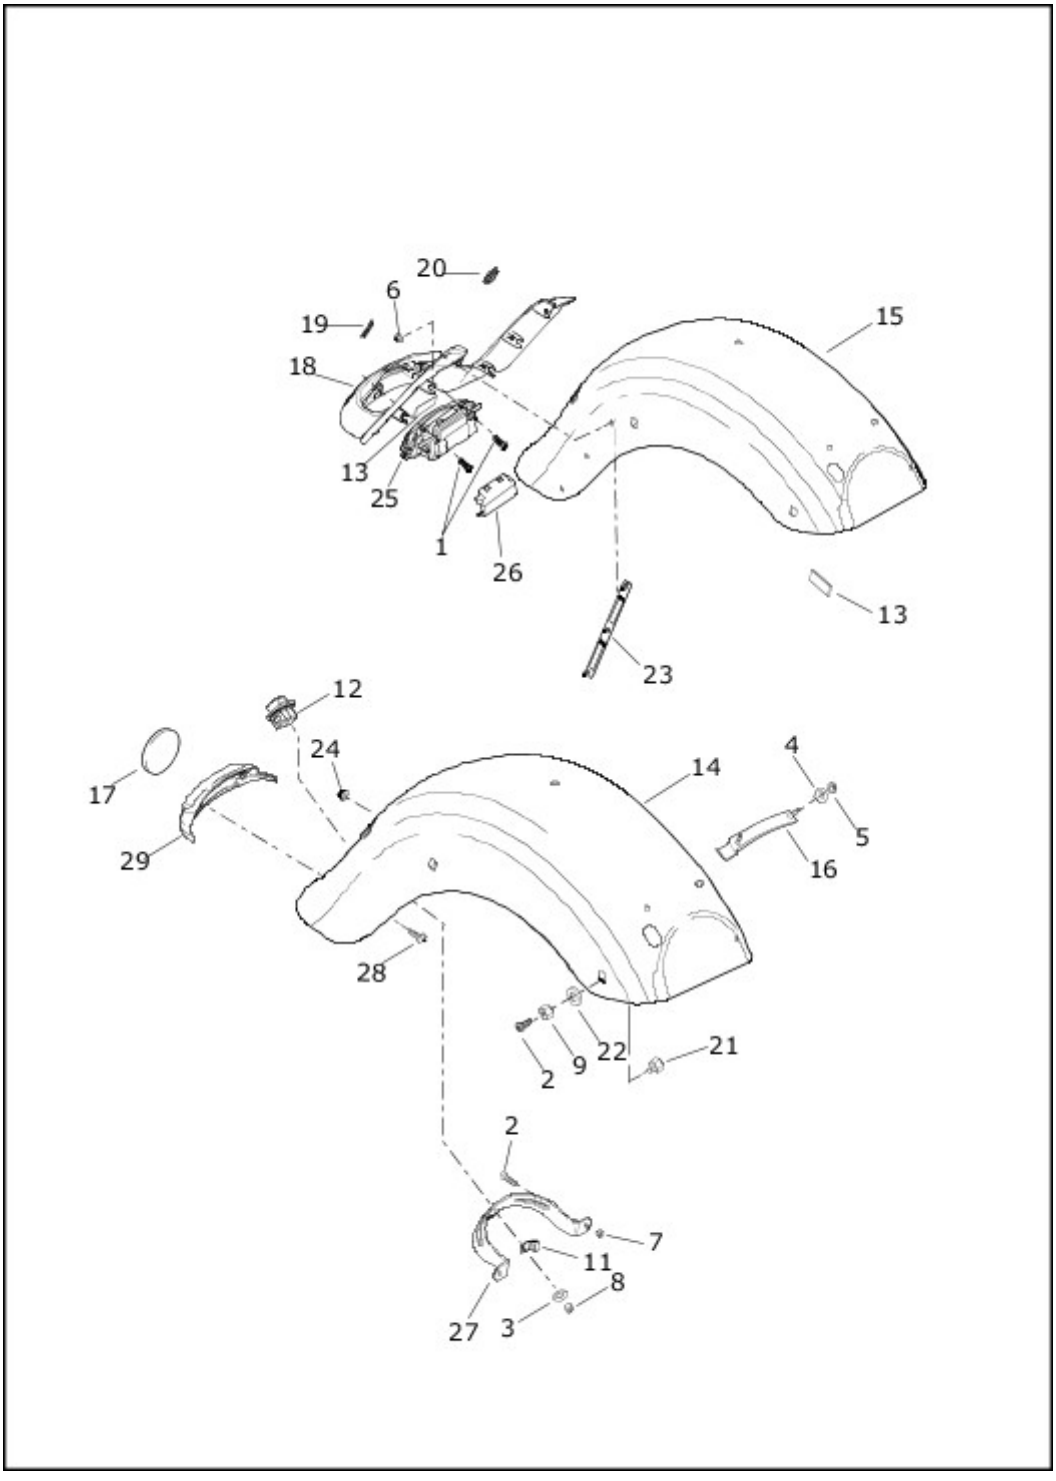


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2995	SCREW *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
2	3684	SCREW *(6)*	ALL
3	6703	WASHER	ALL
4	7434	WASHER *(2)*	ALL
5	7499	NUT *(2)*	ALL
6	7499	NUT *(6)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
7	7531	LOCKNUT *(2)*	ALL
8	7686	LOCKNUT	ALL
9	7880	NUT *(4)*	ALL
10	10006	CABLE STRAP	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
11	10053	CLAMP	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
12	11687	GROMMET, right angle (except Canada)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
13	11891	SPACER *(3)*	FLHRXS, FLHT, FLHX, FLHXS, FLTRX, FLTRXS
14	58702-09A	FENDER, rear (prime)	FLHR, FLHT
14	58702-09A	FENDER, rear (prime) (HDI)	FLHRC, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
14	59500046	FENDER, rear (prime) (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
15	59731-09A	FENDER, rear (prime) (Canada)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
15	60575-10A	FENDER, rear (prime) (Not Canada)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS

FENDERS, REAR (2 OF 2)

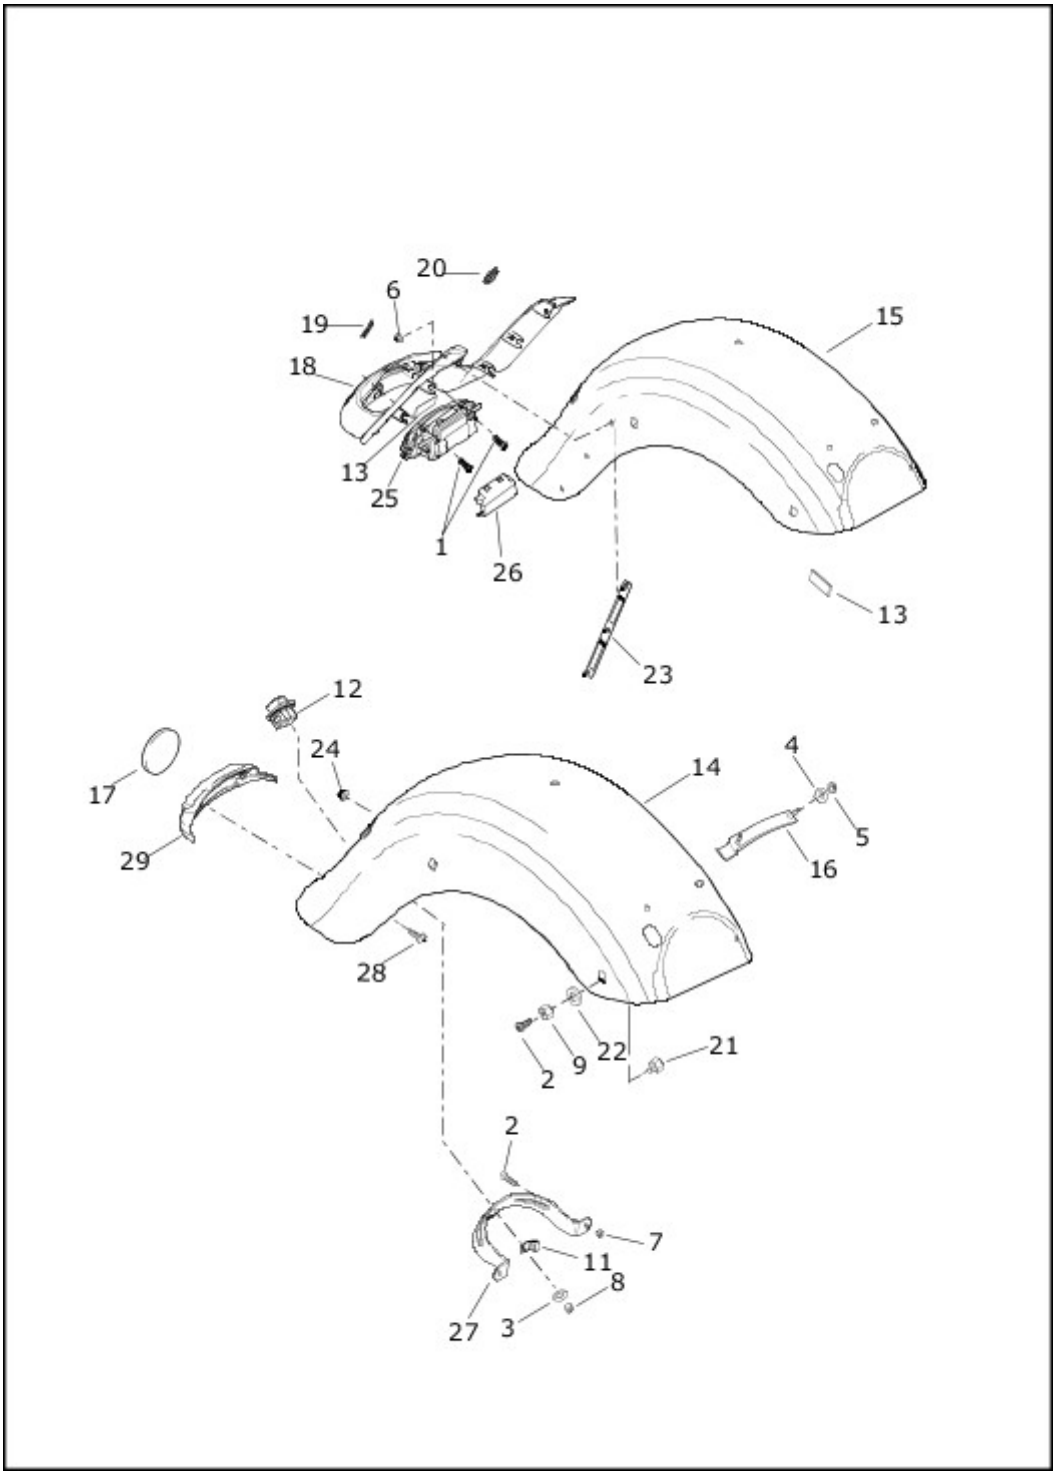

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	59174-99	STUD PLATE	ALL
17	59581-05	BUMPER, rear fender (black) (Domestic)	FLHR, FLHRXS, FLHT, FLHX, FLHXS, FLTRX, FLTRXS
17	59581-05	BUMPER, rear fender (black) (HDI)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
17	59581-05	BUMPER, rear fender (black) (Brazil)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLTRU, FLTRXS
18	59739-09	FASCIA, rear fender (unpainted)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
19	59749-06	PLUG	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
20	59778-06	GROMMET	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
21	59786-01	FENDER MOUNTING BOSS, inner *(4)*	ALL
22	59788-01	FENDER MOUNTING WASHER *(4)*	ALL
23	59818-09	STUD PLATE *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
24	67266-94	BUSHING, nylon, turn signal *(2)*	FLHR, FLHT
24	67266-94	BUSHING, nylon, turn signal (HDI) *(2)*	FLHRC, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
24	67266-94	BUSHING, nylon, turn signal (Canada) *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
25	69377-10	REAR FENDER LIGHT ASSEMBLY (Canada, HDI, Brazil)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
25	59600008	REAR FENDER LIGHT ASSEMBLY (Domestic, California)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
26	69615-10	SPLASH GUARD, fender tip lamp	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
27	91140-09	BRACKET, saddlebag to fender support	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	10500017	SCREW (Domestic) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
29	59600029	FENDER TIP, rear (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

LICENSE PLATE BRACKETS

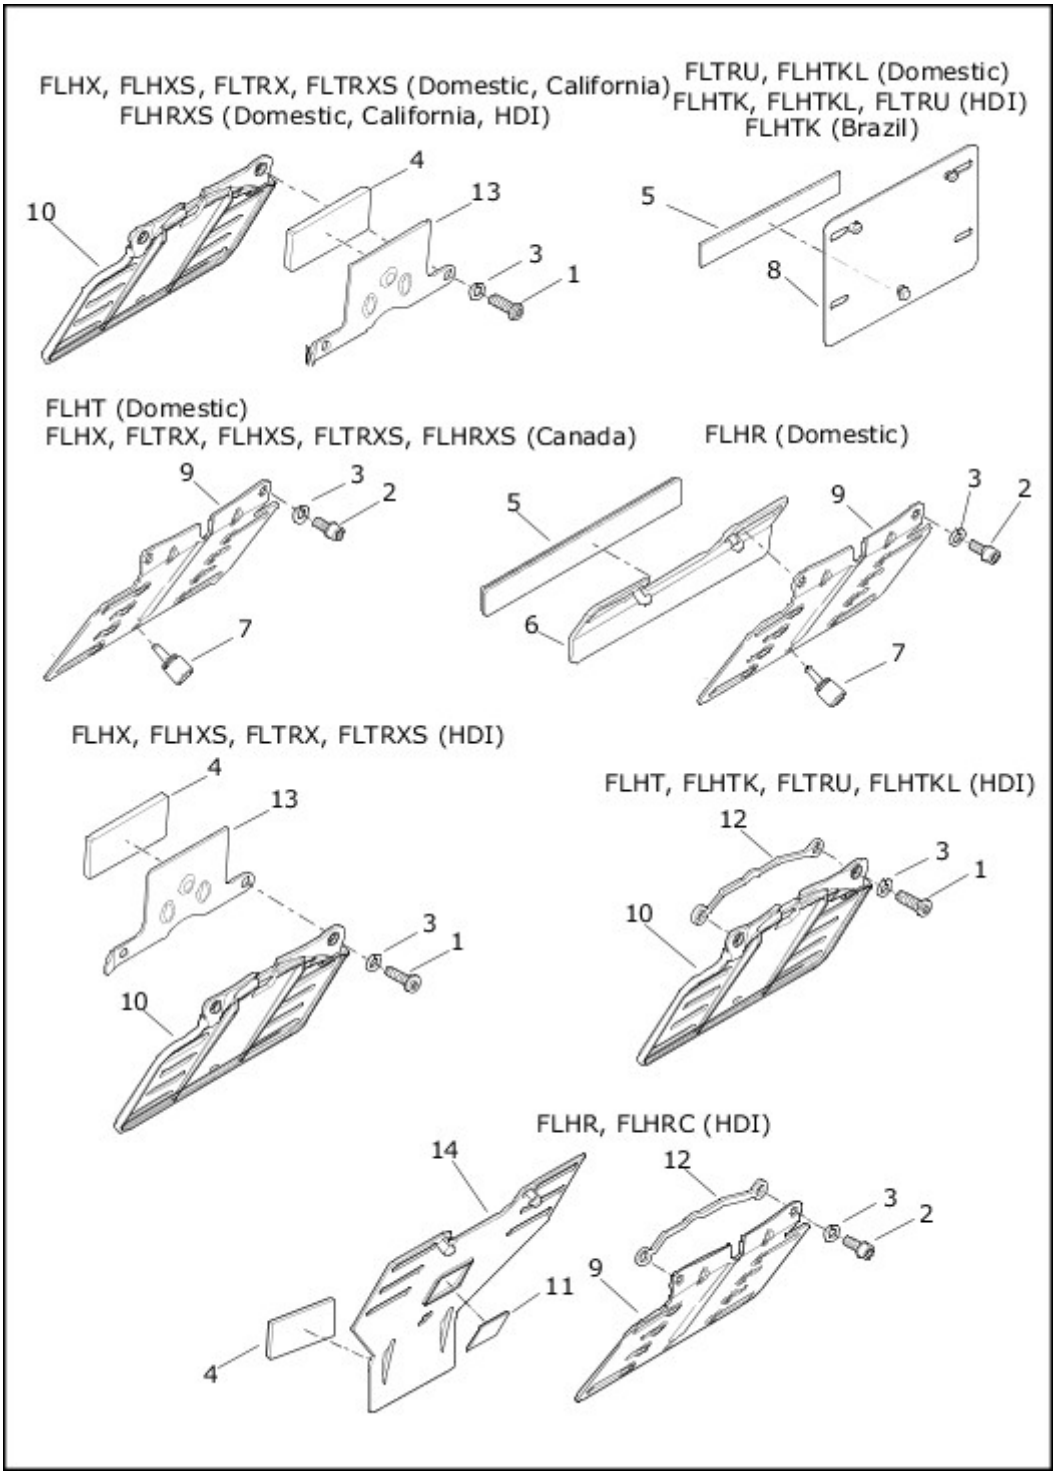

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2446	SCREW (except Canada) *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
1	2446	SCREW (HDI) *(2)*	FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
2	3061	SCREW *(2)*	FLHR, FLHT
2	3061	SCREW (Canada) *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
2	3061	SCREW (HDI) *(2)*	FLHRC
3	7036	WASHER *(2)*	FLHR, FLHRXS, FLHT, FLHX, FLHXS, FLTRX, FLTRXS
3	7036	WASHER (HDI) *(2)*	FLHR, FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
4	59259-90	REFLECTOR (red) (Domestic, California)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
4	59259-90	REFLECTOR (red) (HDI)	FLHR, FLHRC, FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
5	59988-72A	REFLECTOR (Domestic)	FLHR, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
5	59988-72A	REFLECTOR (HDI, Brazil)	FLHTK, FLHTK SHRINE, FLHTKL
6	60907-09	BRACKET, reflector	FLHR
7	60909-09	BUMPER, license plate bracket	FLHR
7	60909-09	BUMPER, license plate bracket (Canada)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
7	67900009	BUMPER, license plate bracket	FLHT
8	60918-10A	LICENSE PLATE BRACKET (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	60918-10A	LICENSE PLATE BRACKET (HDI)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	69380-09BHP	BRACKET, license plate (black)	FLHR, FLHT
9	69380-09BHP	BRACKET, license plate (Canada) (black)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
9	69380-09BHP	BRACKET, license plate (black) (HDI)	FLHR, FLHRC
10	73255-10	BRACKET, license plate (Domestic, California) (black)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
10	73255-10	BRACKET, license plate (HDI) (black)	FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	11100195	CUSHION (HDI)	FLHR, FLHRC
12	12400100	SPACER (HDI)	FLHR, FLHRC, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
13	67900213A	BRACKET, reflector (Domestic, California) (black)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
13	67900213A	BRACKET, reflector (HDI) (black)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
14	67900445	LICENSE PLATE BRACKET, with 59259-90 and 11100195 (HDI)	FLHR, FLHRC

FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS

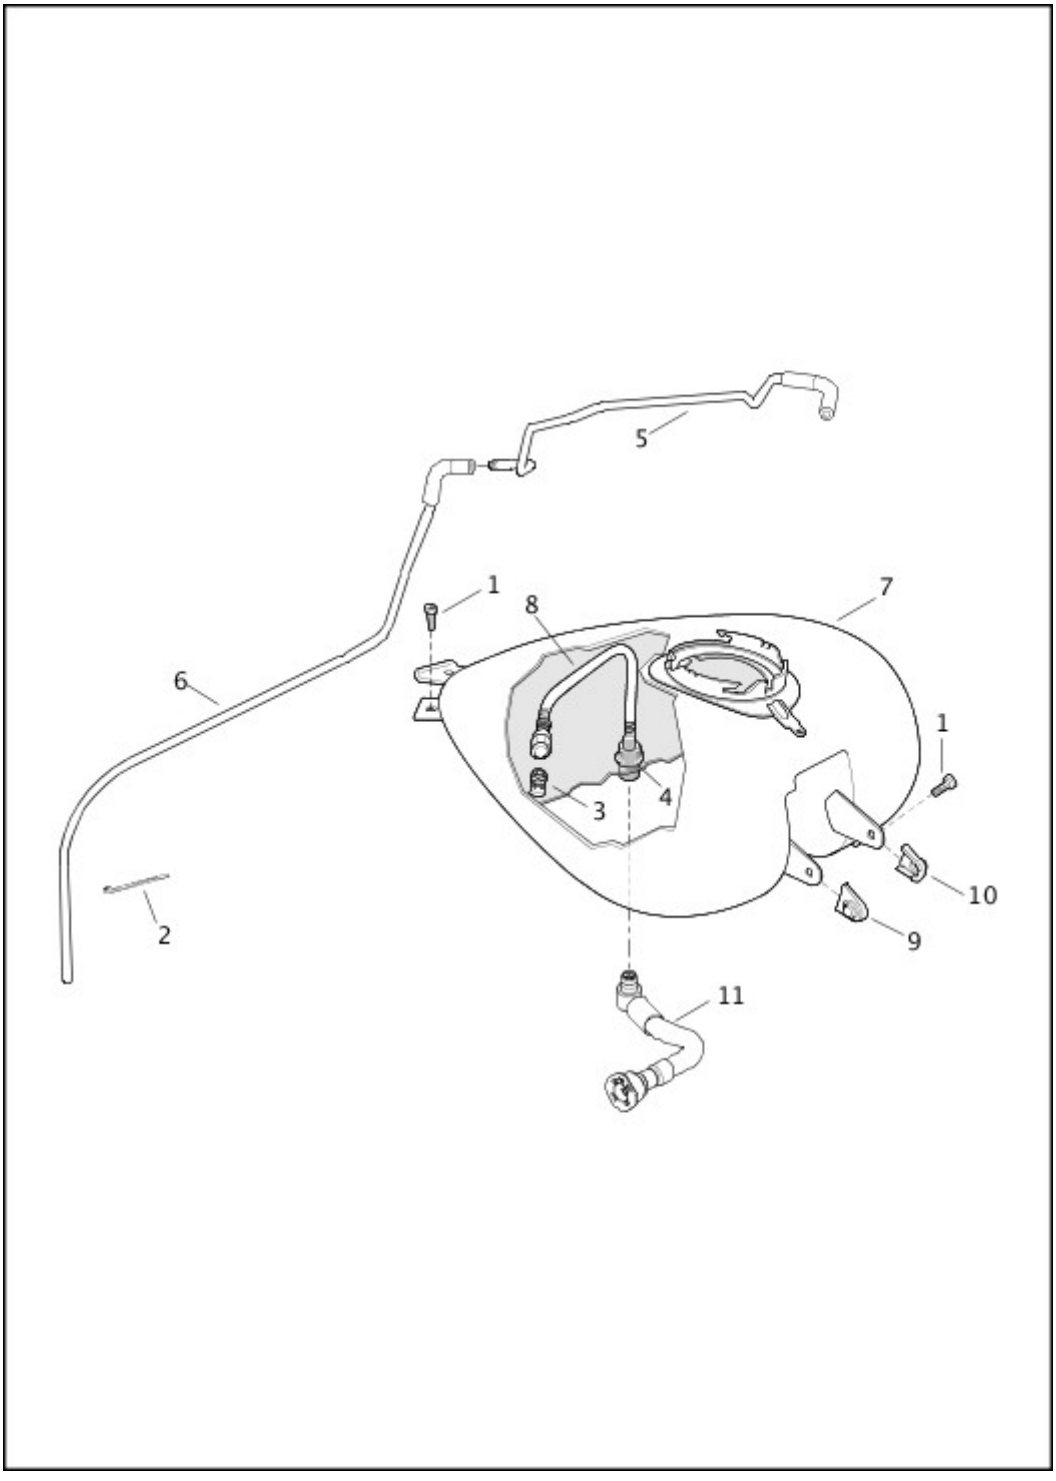


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3634	SCREW *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
2	10039	CABLE STRAP *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	10396	RETAINER, fuel line, 3/8 in (natural)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
4	11323A	O-RING, check valve to tank	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
5	27291-09A	LINE, evaporative (EVAP), tank	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	27440-09A	LINE, evaporative (EVAP) (Domestic, Canada, Australia)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	61356-08	FUEL TANK (prime)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
8	62228-08C	CHECK VALVE, assembly, with 10396 and 11323A	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
9	70901-09	BOOT, tank bracket (right)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
10	70999-09	BOOT, tank bracket (left)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	61200022	FUEL LINE, tank to intake	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

FUEL TANK - FLHR, FLHRC AND FLHRXS

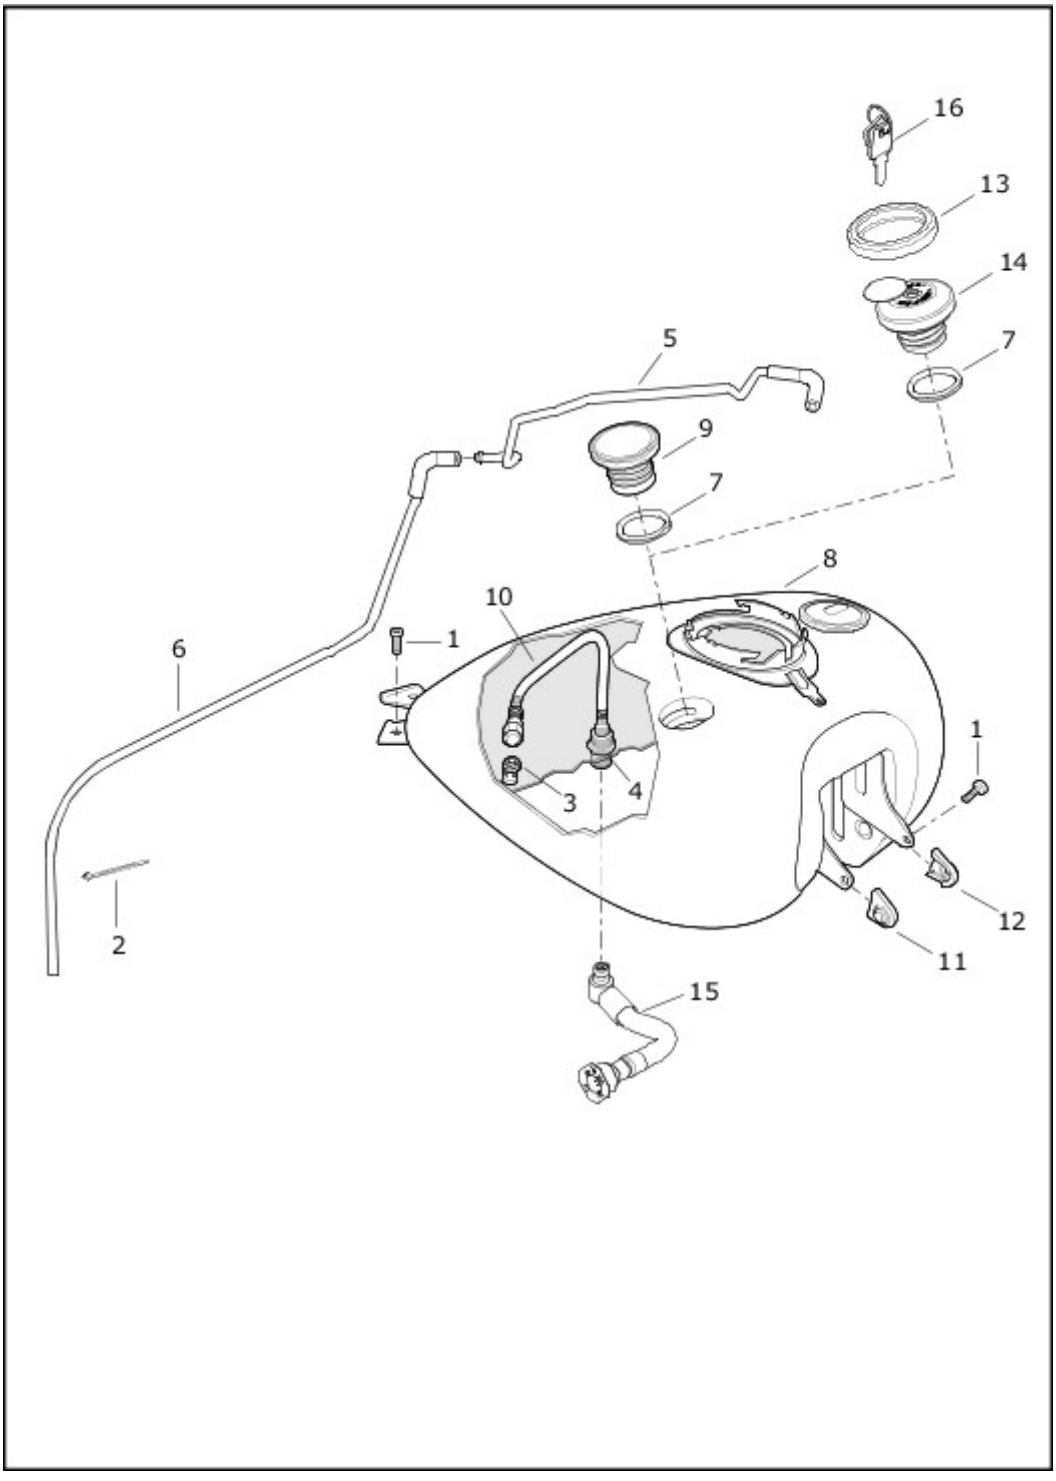

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	3634	SCREW *(4)*	FLHR, FLHRC, FLHRXS
2	10039	CABLE STRAP *(2)*	FLHR, FLHRC, FLHRXS
3	10396	RETAINER, fuel line, 3/8 in (natural)	FLHR, FLHRC, FLHRXS
4	11323A	O-RING, check valve to tank	FLHR, FLHRC, FLHRXS
5	27291-09A	LINE, evaporative (EVAP), tank	FLHR, FLHRC, FLHRXS
6	27440-09A	LINE, evaporative (EVAP) (Domestic, Canada, Australia)	FLHR, FLHRC, FLHRXS
7	61109-85D	GASKET, filler cap	FLHR, FLHRC, FLHRXS
8	61268-08	FUEL TANK (prime)	FLHR, FLHRC, FLHRXS
9	61272-92C	FILLER CAP, with 61109-85D (Domestic, Australia, Japan, Brazil)	FLHR, FLHRC, FLHRXS
9	61100099	FILLER CAP (HDI, England)	FLHR, FLHRC, FLHRXS
10	62228-08C	CHECK VALVE, assembly, with 10396 and 11323A	FLHR, FLHRC, FLHRXS
11	70901-09	BOOT, tank bracket (right)	FLHR, FLHRC, FLHRXS
12	70999-09	BOOT, tank bracket (left)	FLHR, FLHRC, FLHRXS
13	61100065	BUMPER, filler cap (China)	FLHR, FLHRXS
14	61100120	FILLER CAP KIT, locking, with 61109-85D and 90300093 (Asia-Pacific)	FLHR, FLHRXS
14	61100123	FILLER CAP KIT, locking, with 61109-85D, 61100065 and 90300093 (China)	FLHR, FLHRXS
15	61200022	FUEL LINE, tank to intake	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	90300093	KEY (set of 2) (Asia-Pacific)	FLHR, FLHRXS

CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3)

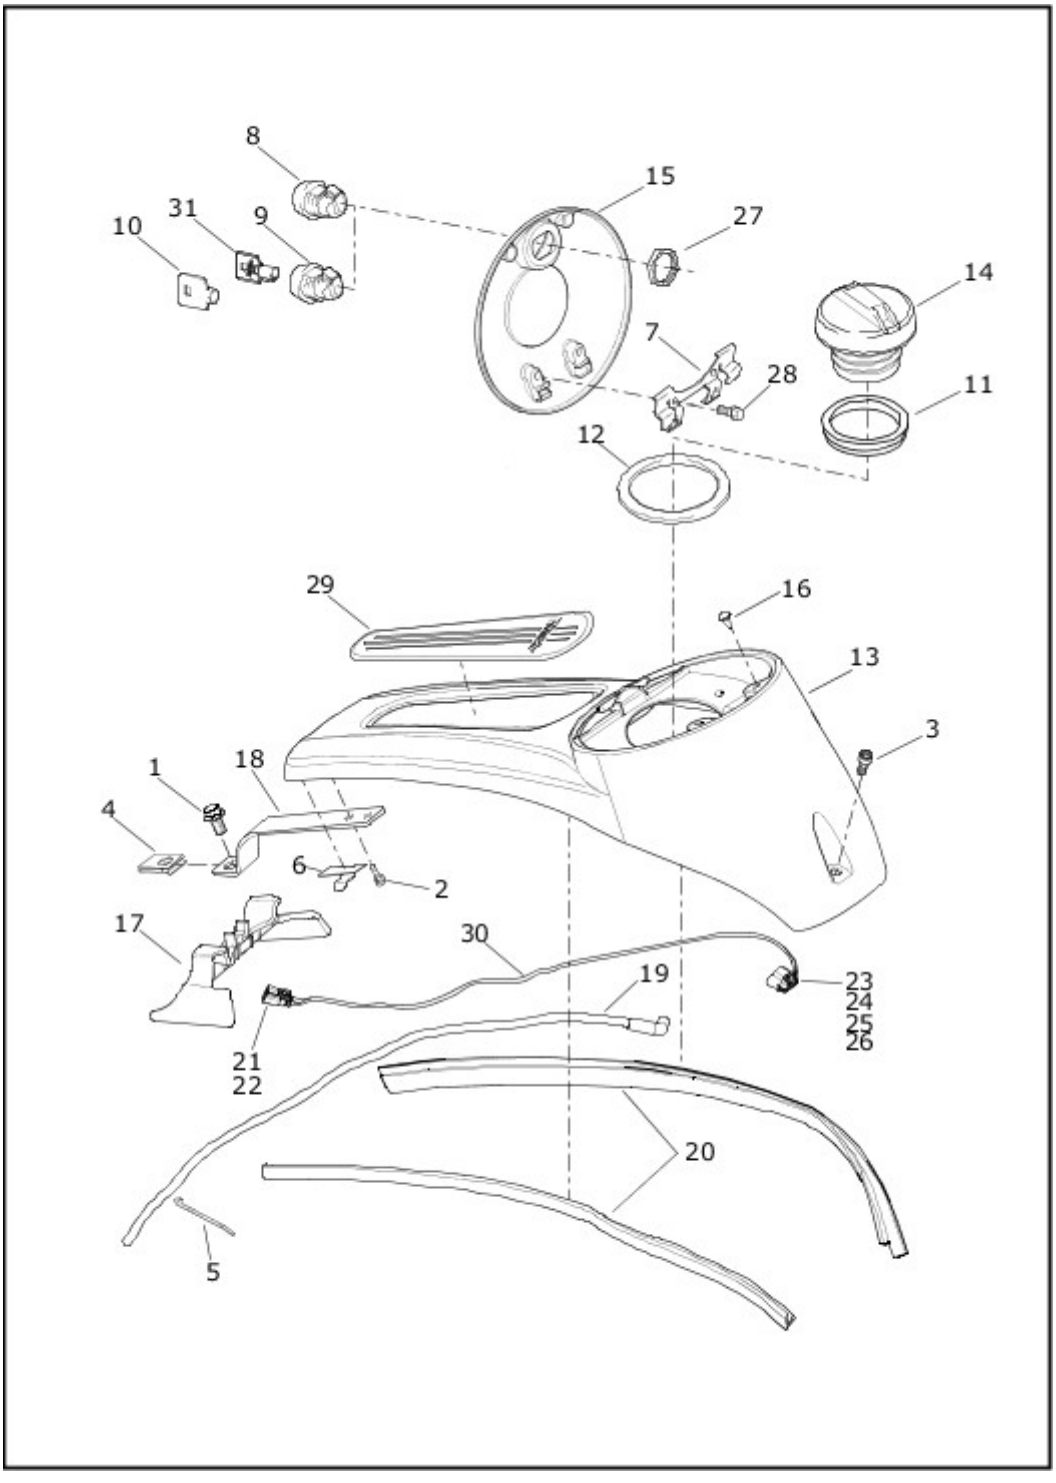

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3588	SCREW	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
2	4194	SCREW *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	4856	SCREW	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
4	8142	NUT, speed	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
5	10065	CABLE STRAP	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	10103	CLIP, adhesive backed *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	10334	CLIP, hinge mounting	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
8	53919-04B	PUSH BUTTON KIT, fuel tank, with 84850-92 (chrome) (Domestic)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX
8	90300096A	PUSH BUTTON KIT, fuel tank, with 84850-92 (black) (Domestic)	FLHXS, FLTRXS
9	61029-92A	LOCK, fuel tank, with 84850-92 (HDI)	FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS, FLTRXS
10	61081-92	COVER, key-head (set of 2) (HDI)	FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	61109-85D	GASKET, filler cap	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
12	61112-08	BOOT	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3)

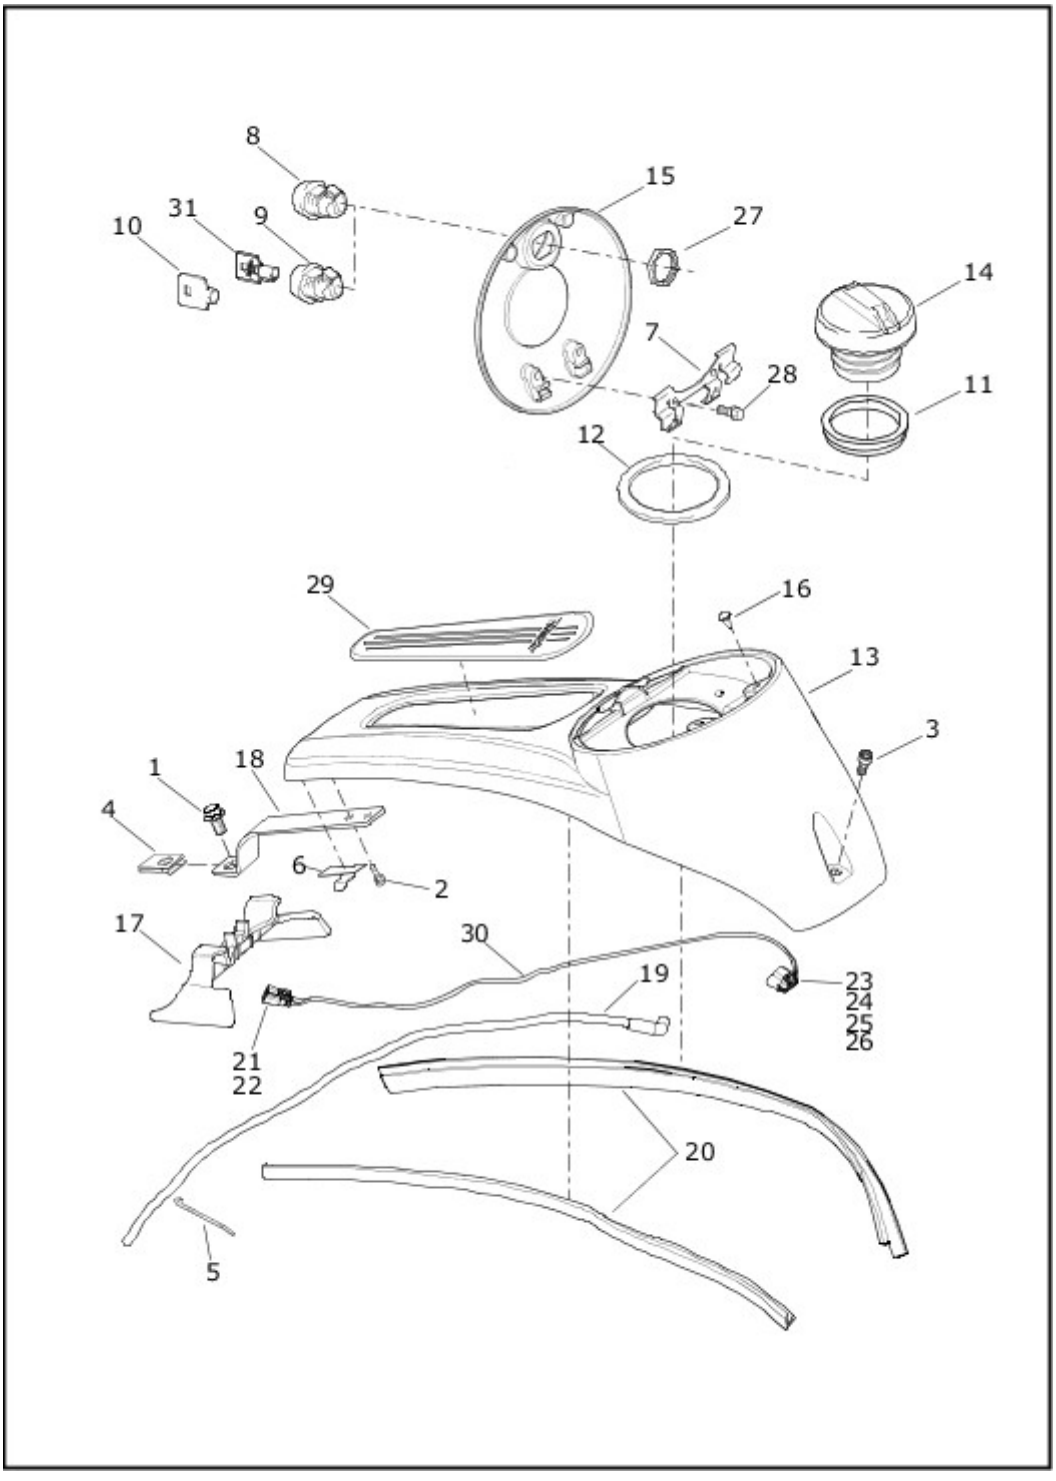

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	61270-08	CONSOLE ASSEMBLY, with hinge pin (chrome)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
13	69214-08	CONSOLE ASSEMBLY, with hinge pin (chrome)	FLHT, FLHX, FLHXS, FLTRX
13	70900466	CONSOLE ASSEMBLY, with hinge pin (black)	FLHXS, FLTRXS
14	61274-92	FUEL FILLER CAP, vacuum vented, with 61109-85D	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
15	61278-08A	DOOR KIT, console, with 10200442 (chrome)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX
15	70900465A	DOOR KIT, console, with screw (black)	FLHXS, FLTRXS
16	61313-88	BUMPER, cover *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
17	62775-08	TRIM COVER, fuel tank	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
18	67493-08	BRACKET, console mount	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
19	69241-08	DRAIN HOSE, console	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
20	71294-08	MOLDING, rubber *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
21	72168-07	TERMINAL, socket, 18-20 AWG *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	72444-07GY	HOUSING, four-way, socket (gray)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)

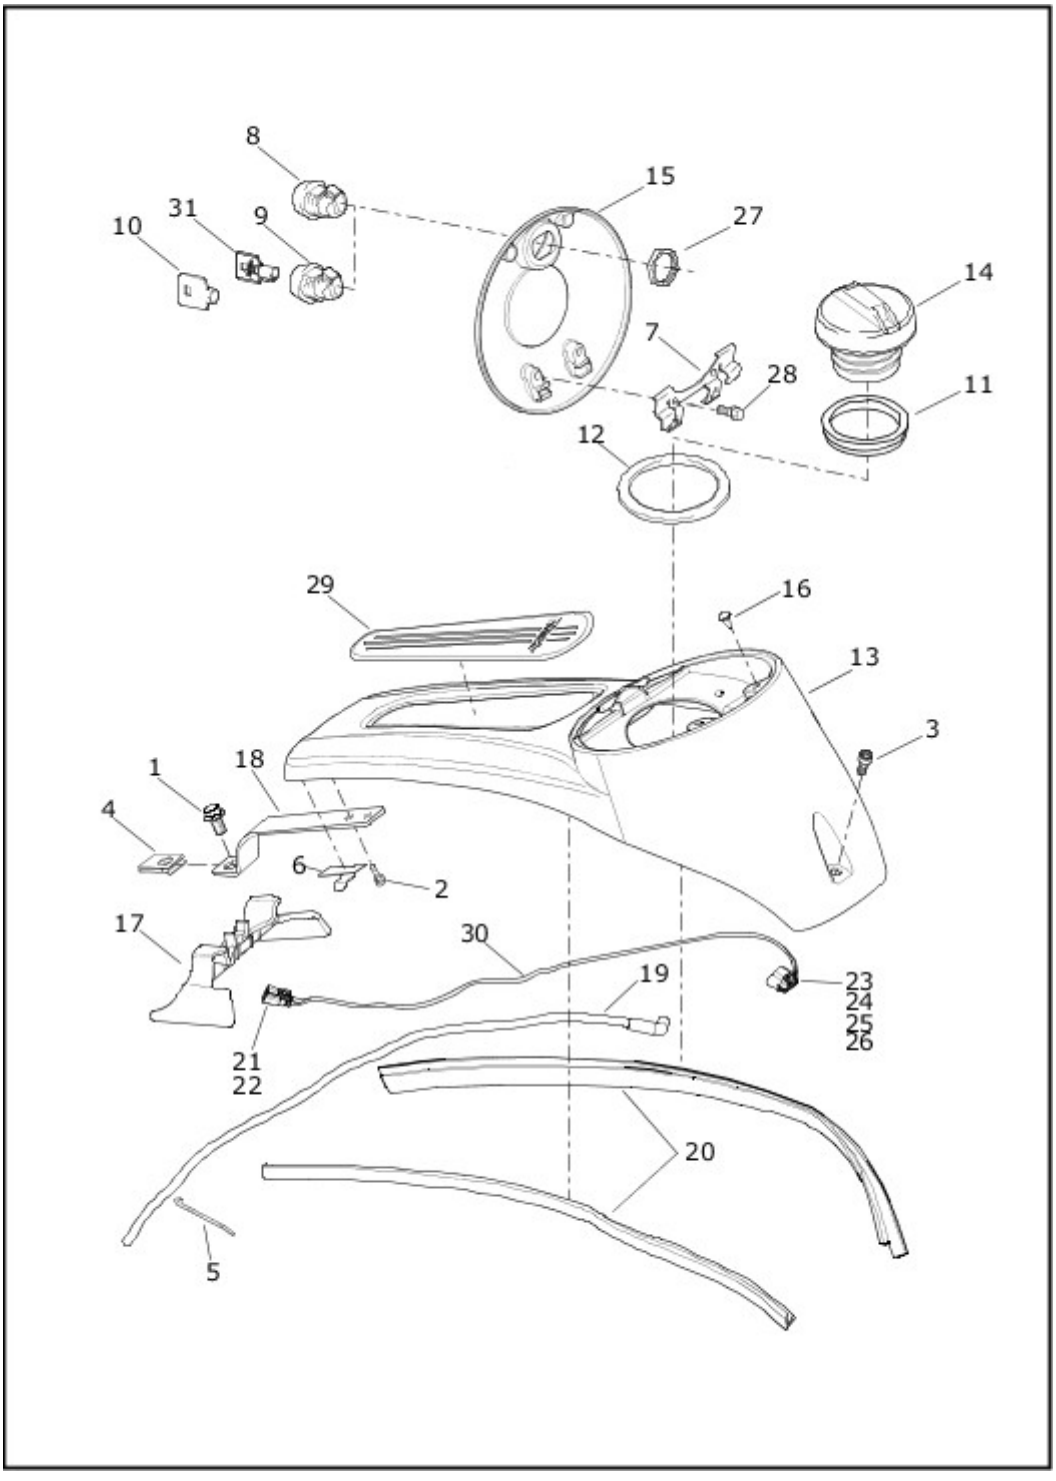

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

NOTE: See INTERCOM CONTROL POD for pod and console insert for FLHTCU, FLHTK, FLHTKL and FLTRU models.


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	72485-07	HOUSING, four-way socket (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
24	72493-07	TERMINAL, socket, 16-18 AWG *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
25	72494-07	WIRE SEAL, 16-18 AWG (yellow) *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
26	72557-07	SECONDARY LOCK, four-way socket	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
27	84850-92	NUT	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
28	10200442	SCREW *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
29	14100279	INSERT, console panel (not illustrated) (HDI)	FLHXS
29	14100615	INSERT, console panel	FLTRX
29	14101018	INSERT, console panel	FLHXS
29	14101019	INSERT, console panel	FLTRXS
29	14100855	INSERT, console panel (not illustrated) (Domestic)	FLHX, FLHXS
29	14101371	INSERT, console panel (not illustrated)	FLHT
30	69200125	WIRE HARNESS, console, with 72168-07, 72444-07GY, 72485-07, 72493-07, 72494-07 and 72557-07	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

NOTE: See INTERCOM CONTROL POD for pod and console insert for FLHTCU, FLHTK, FLHTKL and FLTRU models.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
31	90300043	KEY, with 61081-92 (set of 2) (specify key number) (HDI)	FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS

NOTE: See INTERCOM CONTROL POD for pod and console insert for FLHTCU, FLHTK, FLHTKL and FLTRU models.

INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS

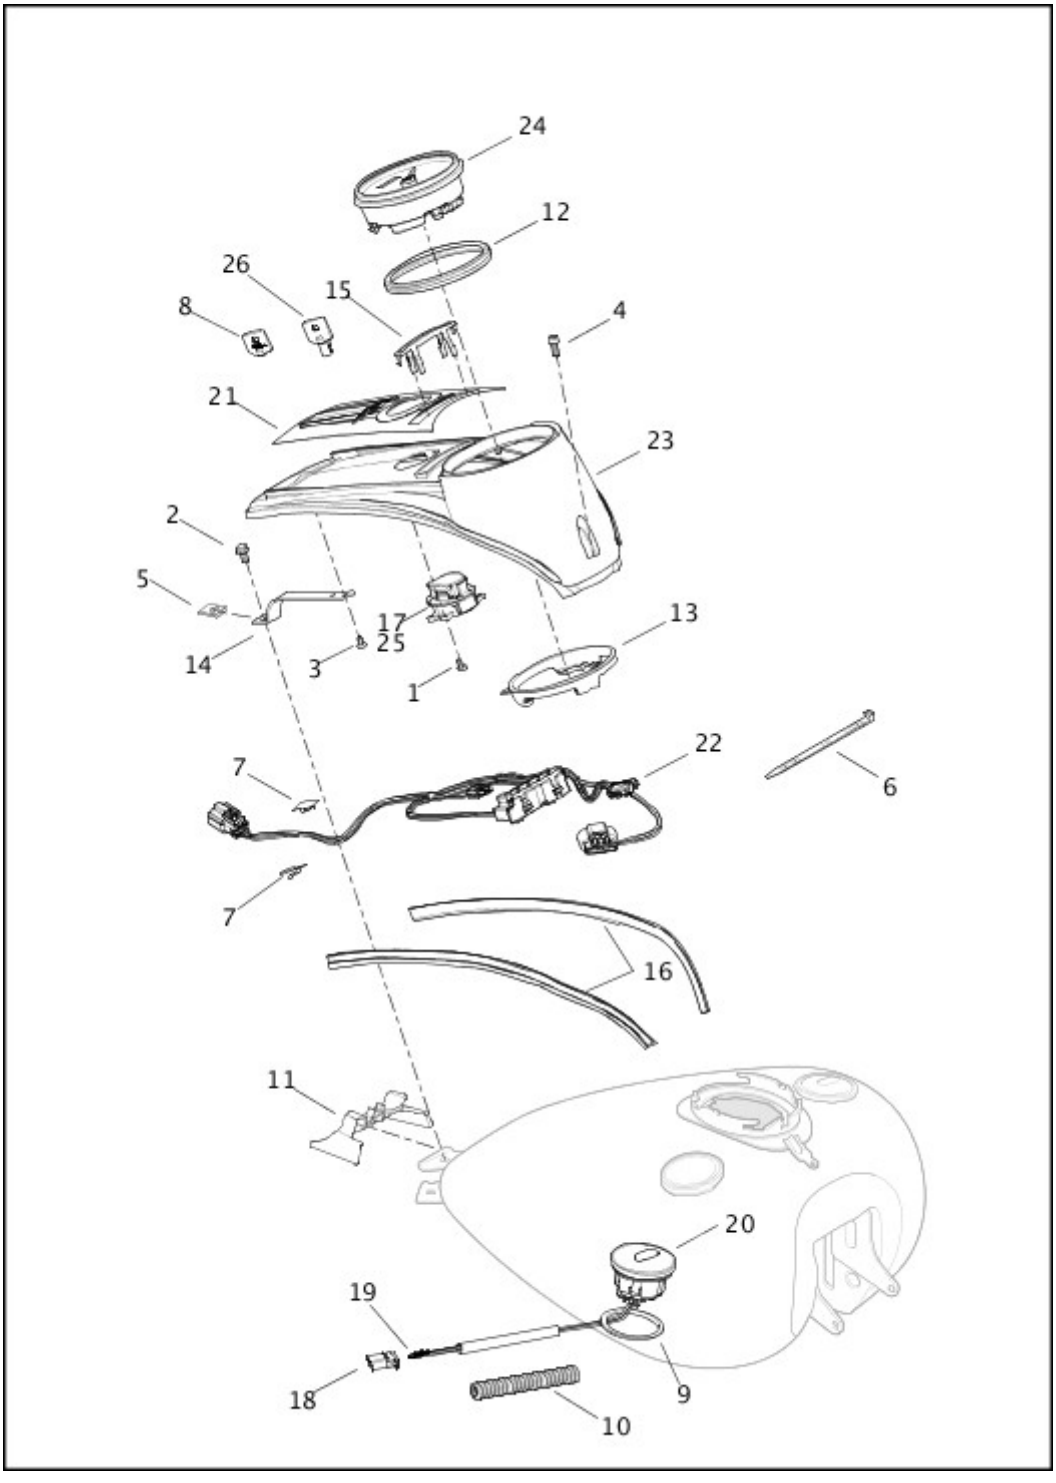

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3622	SCREW *(4)*	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3588	SCREW	FLHR, FLHRC, FLHRXS
3	4194	SCREW *(2)*	FLHR, FLHRC, FLHRXS
4	4856	SCREW	FLHR, FLHRC, FLHRXS
5	8142	NUT, speed	FLHR, FLHRC, FLHRXS
6	10065	CABLE STRAP *(2)*	FLHR, FLHRC, FLHRXS
7	10103	CLIP, under instrument panel *(2)*	FLHR, FLHRC, FLHRXS
8	61081-92	COVER, key-head (set of 2)	FLHR, FLHRC, FLHRXS
9	61192-96A	GASKET, fuel gauge	FLHR, FLHRC, FLHRXS
10	62519-03	HOSE, shield 1/4 in ID, 5.00 in long, fuel gauge wires	FLHR, FLHRC, FLHRXS
11	62775-08	TRIM COVER, fuel tank	FLHR, FLHRC, FLHRXS
12	67208-08	SEAL, speedometer	FLHR, FLHRC, FLHRXS
13	67341-04B	BACK CLAMP, 5 in speedo (red)	FLHR, FLHRC, FLHRXS
14	67493-08	BRACKET, console mount	FLHR, FLHRC, FLHRXS
15	68253-08A	INDICATOR BEZEL	FLHR, FLHRC, FLHRXS
16	71294-08	MOLDING *(2)*	FLHR, FLHRC, FLHRXS
17	71517-11A	IGNITION SWITCH (keyed-to-match)	FLHR, FLHRC, FLHRXS
18	72904-01BK	HOUSING, pin, four-way	FLHR, FLHRC, FLHRXS
19	72990-01	PIN TERMINAL *(3)*	FLHR, FLHRC, FLHRXS
20	75241-08	FUEL GAUGE, without LED, with 72990-01	FLHR, FLHRC, FLHRXS
21	14100087	INSERT, console	FLHR, FLHRC
21	14101013	INSERT, console (gloss black)	FLHRXS
22	69200124	WIRE HARNESS, console	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	70900117	INSTRUMENT PANEL (chrome)	FLHR, FLHRC
23	70900744	INSTRUMENT PANEL (gloss black)	FLHRXS
24	70900167B	INSTRUMENT MODULE, mph (Domestic, California)	FLHR, FLHRXS
24	70900168A	INSTRUMENT MODULE, km/h (Canada, HDI, Austrailia, Japan, Asia-Pacific)	FLHR
24	70900168A	INSTRUMENT MODULE, km/h (Canada, HDI, Austrailia, Japan)	FLHRXS
24	70900168A	INSTRUMENT MODULE, km/h (HDI, Brazil)	FLHRC
24	70900169A	INSTRUMENT MODULE, dual, mph/km/h, (England)	FLHR, FLHRC, FLHRXS
25	71400010A	LOCKSET, complete with keys, ignition switch, cover, fork lock and saddle bag lock	FLHR, FLHRXS
25	71400011A	LOCKSET, complete with keys, ignition switch, cover, and fork lock	FLHRC
26	90300043	KEY, with 61081-92 (set of 2) (specify key number)	FLHR, FLHRC, FLHRXS

INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS

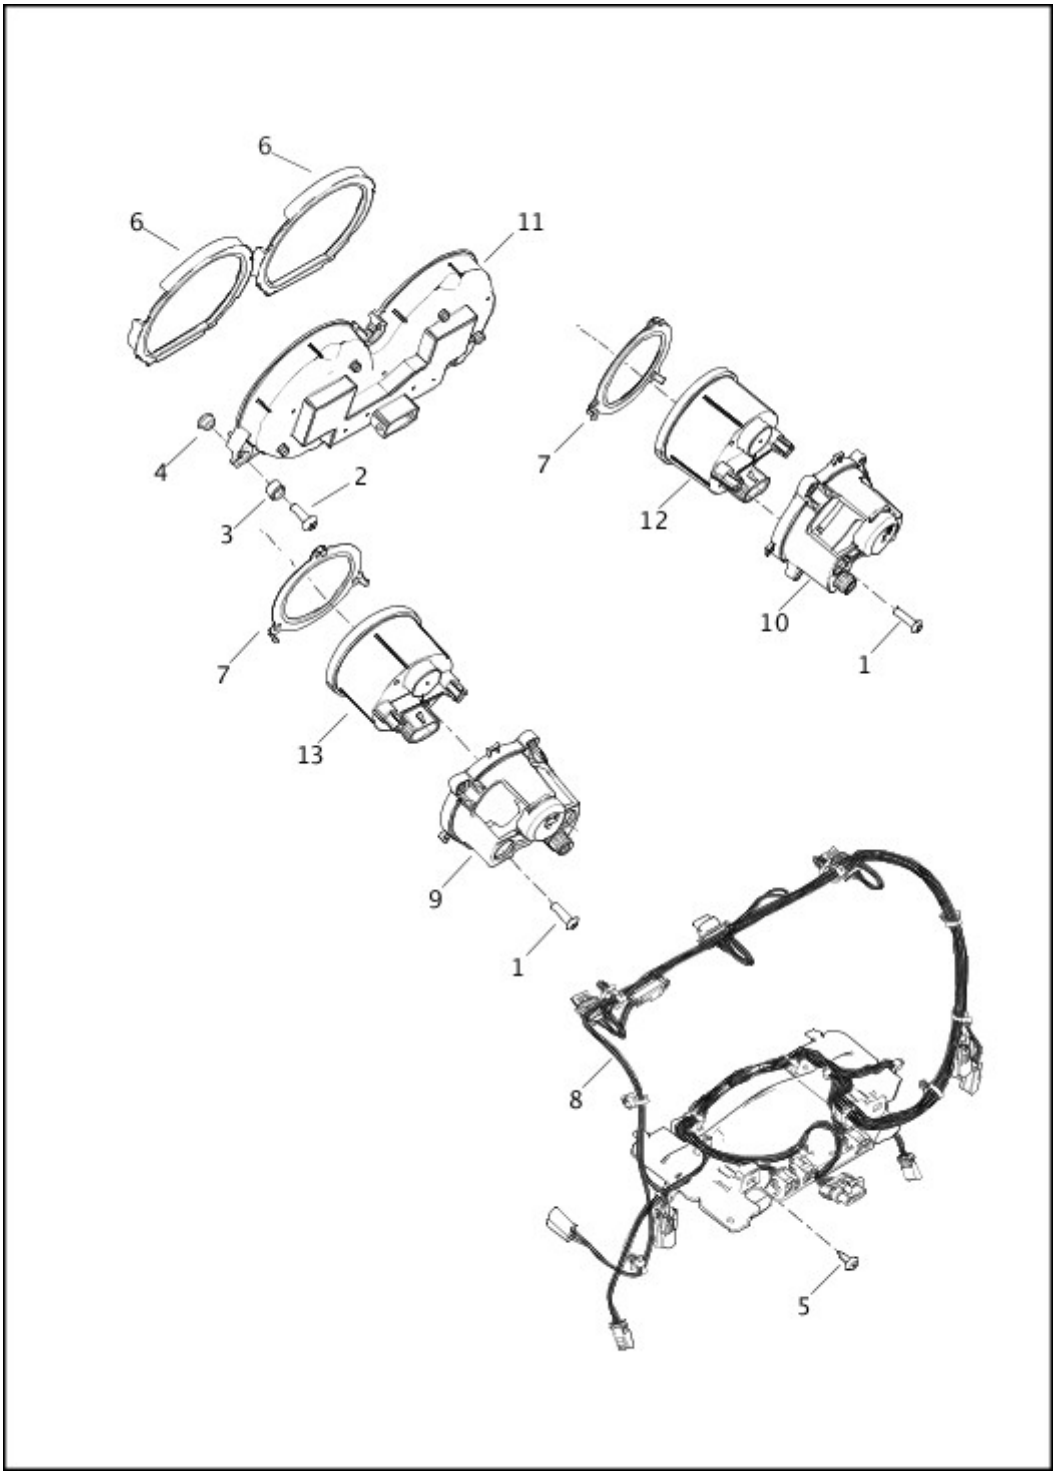

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2563	SCREW *(6)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
2	10200147	SCREW *(3)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
3	12100020	GROMMET, instrument cluster mount *(3)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
4	12400034	INSERT, instrument cluster mount *(3)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
5	12600067	FASTENER, plastic *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
6	61400080	GAUGE TRIM BEZEL ASSEMBLY, large *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
7	61400081	GAUGE TRIM BEZEL ASSEMBLY, small *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
8	69200121	WIRING HARNESS, fairing	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
9	69200257	BACK CLAMP, gauge (right)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
10	69200258	BACK CLAMP, gauge (left)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
11	70900118C	INSTRUMENT MODULE, mph, with 12100020 and 12400034 (Domestic, California)	FLHTK, FLHTK SHRINE, FLHTKL
11	70900119B	INSTRUMENT MODULE, km/h, with 12100020 and 12400034 (Brazil, Canada, HDI, Australia, Japan, Asia-Pacific)	FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	70900120B	INSTRUMENT MODULE, dual - mph/km/h, with 12100020 and 12400034 (England)	FLHTK, FLHTK SHRINE, FLHTKL
11	70900121C	INSTRUMENT MODULE, mph, with 12100020 and 12400034 (Domestic, California) (black)	FLHT, FLHTCU, FLHXS
11	70900122B	INSTRUMENT MODULE, km/h, with 12100020 and 12400034 (Canada, HDI, Australia, Japan, Asia-Pacific) (black)	FLHT, FLHTCU, FLHXS
11	70900123B	INSTRUMENT MODULE, dual - mph/km/h, with 12100020 and 12400034 (England) (black)	FLHT, FLHXS
11	70900124C	INSTRUMENT MODULE, mph, with 12100020 and 12400034 (Domestic, California) (silver)	FLHX
11	70900125B	INSTRUMENT MODULE, km/h, with 12100020 and 12400034 (Brazil, Canada, HDI, Australia, Japan, Asia-Pacific) (silver)	FLHX
11	70900126B	INSTRUMENT MODULE, dual - mph/km/h, with 12100020 and 12400034 (England) (silver)	FLHX
12	70900161	FUEL GAUGE	FLHTK, FLHTK SHRINE, FLHTKL
12	70900162	FUEL GAUGE (black)	FLHT, FLHTCU, FLHXS
12	70900163	FUEL GAUGE (silver)	FLHX
13	70900164	VOLTMETER	FLHTK, FLHTK SHRINE, FLHTKL
13	70900165	VOLTMETER (black)	FLHT, FLHTCU, FLHXS
13	70900166	VOLTMETER (silver)	FLHX

INSTRUMENTS - FLTRU, FLTRX AND FLTRXS

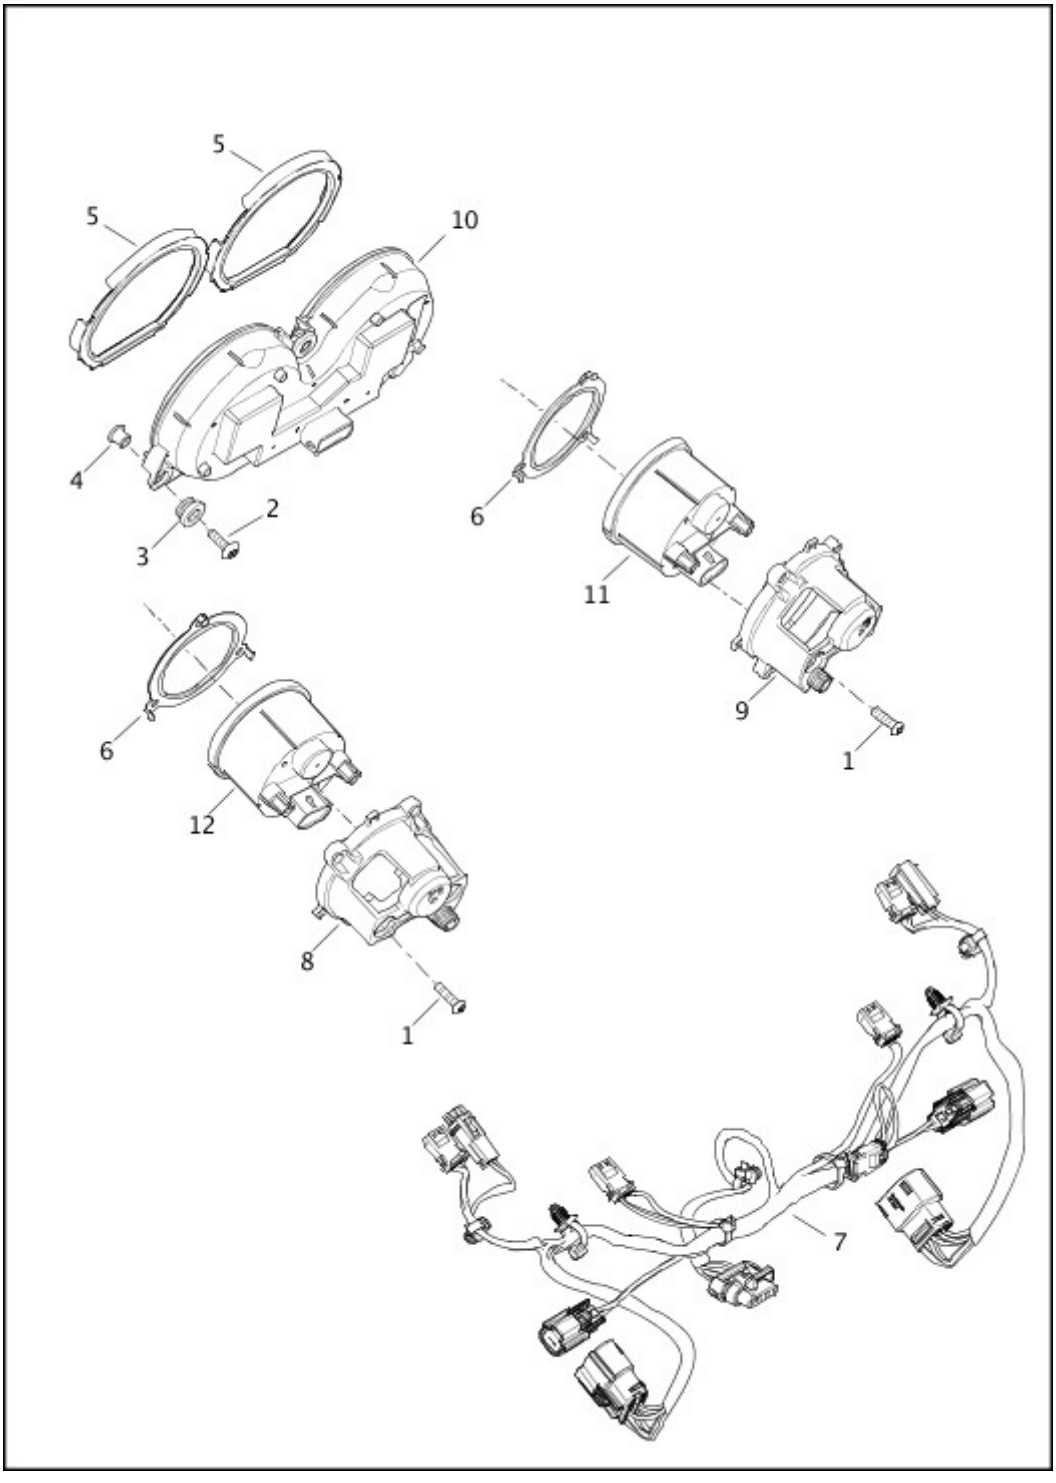

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2563	SCREW *(6)*	FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	10200147	SCREW *(3)*	FLTRU, FLTRX, FLTRXS
3	12100020	GROMMET, instrument cluster mount *(3)*	FLTRU, FLTRX, FLTRXS
4	12400034	INSERT, instrument cluster mount *(3)*	FLTRU, FLTRX, FLTRXS
5	61400080	GAUGE TRIM BEZEL ASSEMBLY, large *(2)*	FLTRU, FLTRX, FLTRXS
6	61400081	GAUGE TRIM BEZEL ASSEMBLY, small *(2)*	FLTRU, FLTRX, FLTRXS
7	69200122	WIRING HARNESS - FAIRING	FLTRU, FLTRX, FLTRXS
8	69200257	BACK CLAMP, gauge (right)	FLTRU, FLTRX, FLTRXS
9	69200258	BACK CLAMP, gauge, (left)	FLTRU, FLTRX, FLTRXS
10	70900121C	INSTRUMENT MODULE, mph, with 12100020 and 12400034 (Domestic, California) (black)	FLTRU, FLTRXS
10	70900122B	INSTRUMENT MODULE, km/h, with 12100020 and 12400034 (Canada, HDI, Japan, Asia-Pacific) (black)	FLTRU, FLTRXS
10	70900123B	INSTRUMENT MODULE, dual - mph/km/h, with 12100020 and 12400034 (England) (black)	FLTRU, FLTRXS
10	70900124C	INSTRUMENT MODULE, mph, with 12100020 and 12400034 (Domestic, California) (silver)	FLTRX
10	70900125B	INSTRUMENT MODULE, km/h, with 12100020 and 12400034 (Canada, HDI, Australia, Japan, Asia-Pacific) (silver)	FLTRX
11	70900162	FUEL GAUGE (black)	FLTRU, FLTRXS
11	70900163	FUEL GAUGE (silver)	FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	70900165	VOLTMETER (black)	FLTRU, FLTRXS
12	70900166	VOLTMETER (silver)	FLTRX

INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS

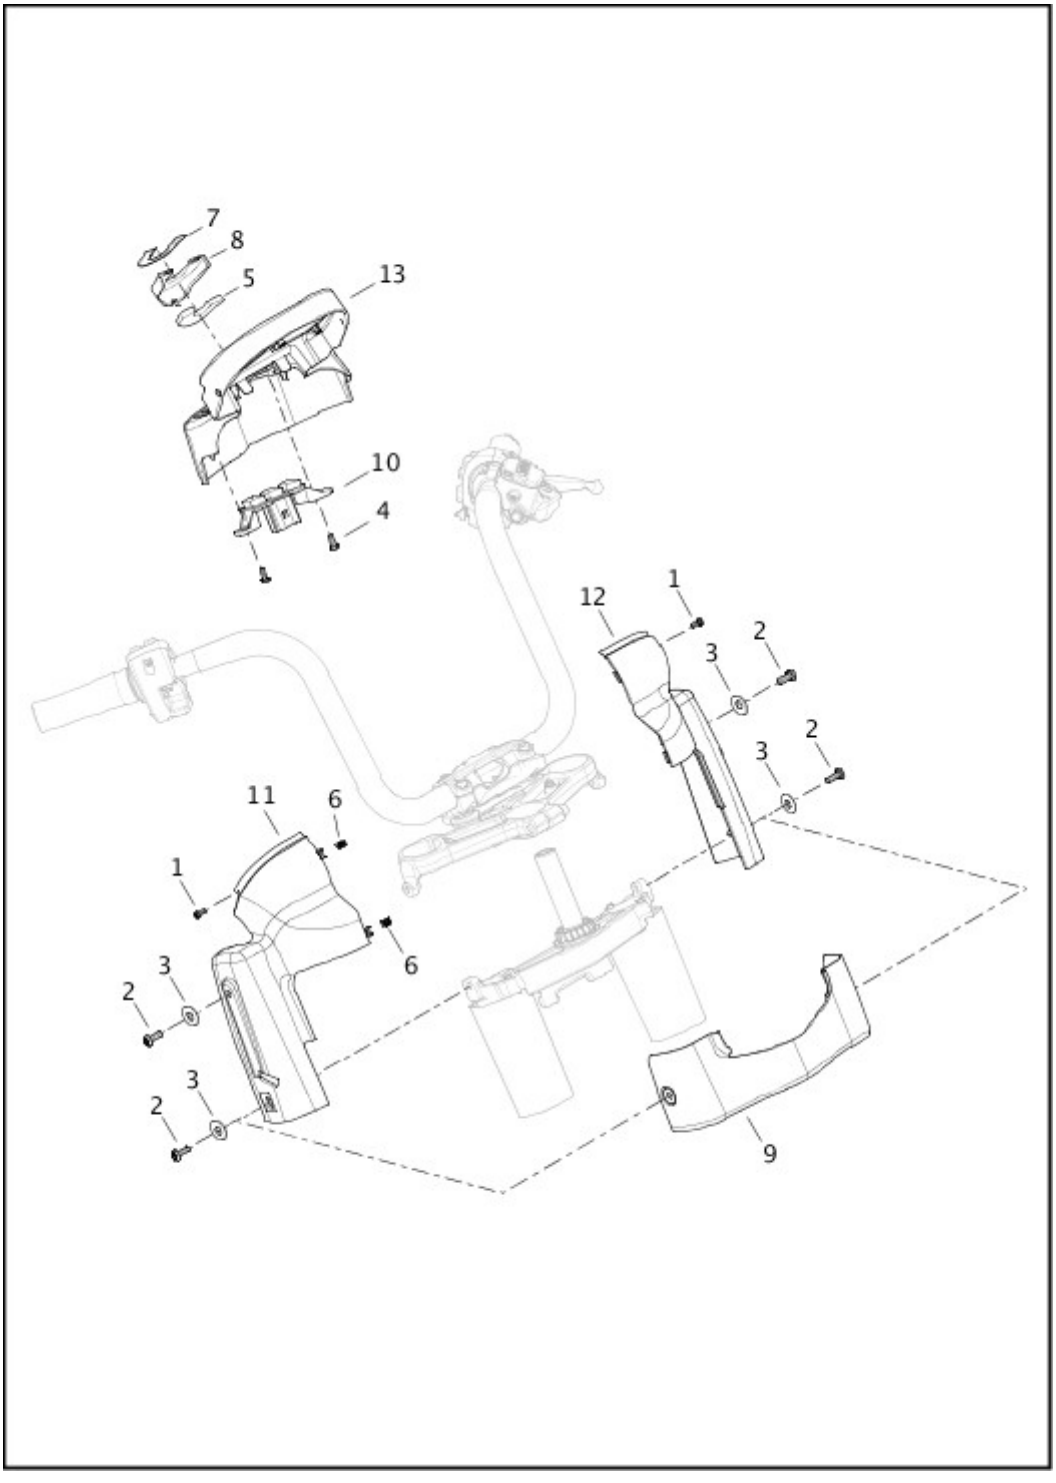


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3152	SCREW *(2)*	FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3676	SCREW *(4)*	FLTRU, FLTRX, FLTRXS
3	6333	WASHER *(4)*	FLTRU, FLTRX, FLTRXS
4	10200205	SCREW *(4)*	FLTRU, FLTRX, FLTRXS
5	11100152	FOAM PAD, ignition switch	FLTRU, FLTRX, FLTRXS
6	12200025	CLIP *(2)*	FLTRU, FLTRX, FLTRXS
7	14101073	MEDALLION	FLTRXS
8	25700489	COVER ASSEMBLY, ignition switch, with 11100152	FLTRU, FLTRX
8	25700870	COVER ASSEMBLY, ignition switch, with 11100152	FLTRXS
9	57000412	SKIRT, front (chrome)	FLTRU, FLTRX
9	57000302	SKIRT, front (unpainted) (used with vivid black and black denim paint)	FLTRXS
9	57000508	SKIRT, front (unpainted)	FLTRXS
10	70900138	HOLE PLUG *(2)*	FLTRU, FLTRX, FLTRXS
11	70900372	HOUSING ASSEMBLY (right) (prime)	FLTRU, FLTRX, FLTRXS
12	70900373	HOUSING ASSEMBLY (left) (prime)	FLTRU, FLTRX, FLTRXS
13	70900374	HOUSING COVER (prime)	FLTRU, FLTRX, FLTRXS

FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2)

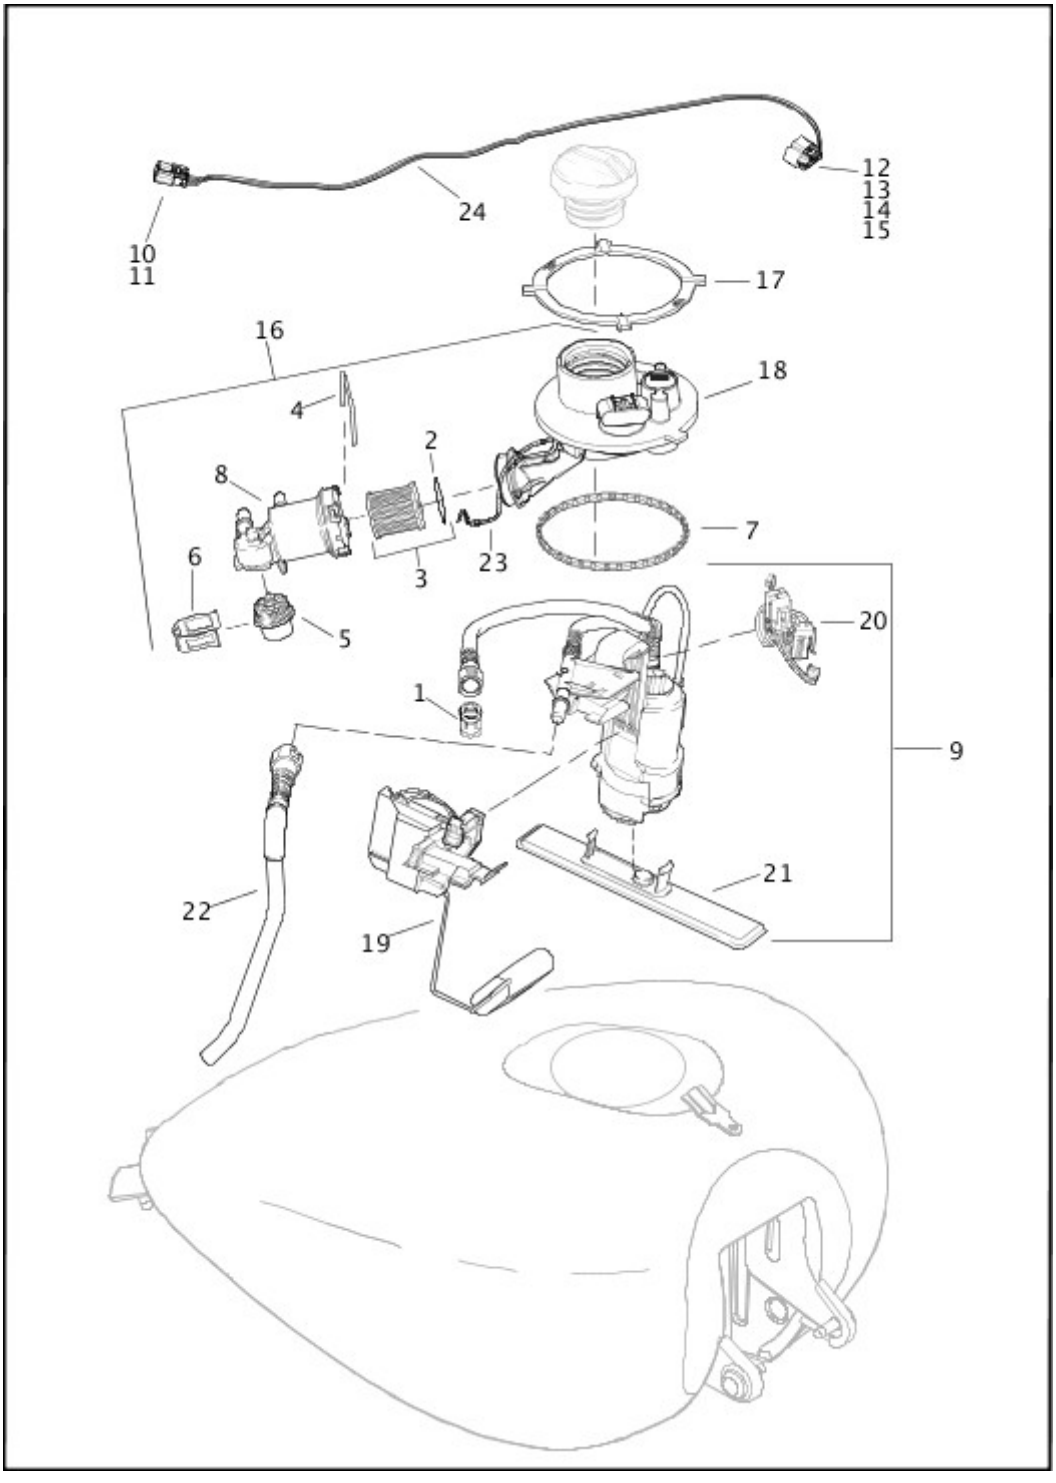

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	10395	RETAINER, fuel line, 5/16 in (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
2	11686	O-RING	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	61011-04A	FUEL FILTER KIT, with 11686	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
4	61012-04A	CLIP, filter retainer	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
5	61015-04A	FUEL REGULATOR ASSEMBLY KIT, with O-rings, spacer and screen	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	61213-04A	CLIP, regulator retainer	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	61402-08	GASKET, top plate	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
8	62229-08B	FILTER SHELL	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
9	62908-08	PUMP ASSEMBLY, fuel, with 10395, 75229-08 and 75254-04A	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
10	72168-07	TERMINAL, socket, 18-20 AWG *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	72444-07GY	HOUSING, four-way, socket (gray)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	72485-07	HOUSING, four-way socket (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
13	72493-07	TERMINAL, socket, 16-18 AWG *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2)

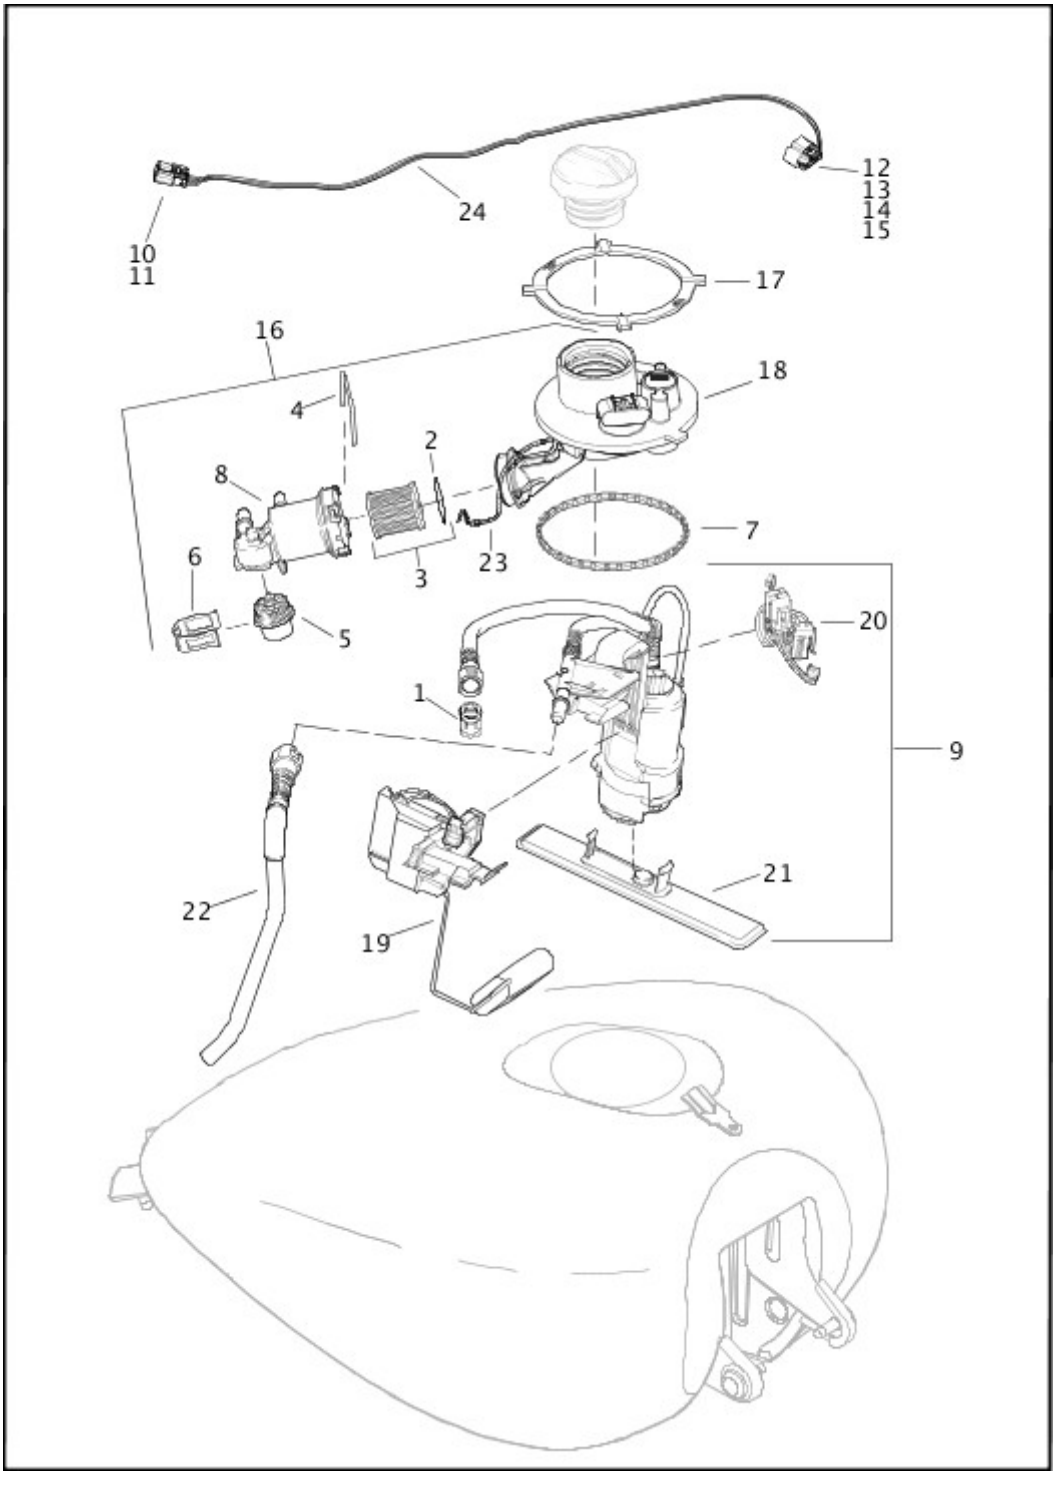

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	72494-07	WIRE SEAL, 16-18 AWG (yellow) *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
15	72557-07	SECONDARY LOCK, four-way socket	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
16	75069-08D	TOP PLATE ASSEMBLY, with 3, 4, 5, 6, 8, 18 and 23	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
17	75089-08	RING, fuel tank, cam	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
18	60900036	TOP PLATE	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
19	75205-08A	FUEL LEVEL SENDER	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
20	75229-08	HARNESS, fuel pump module	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
21	75254-04A	STRAINER, fuel pump inlet	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
22	75269-08	TRANSFER TUBE, fuel pump	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
23	75322-09	GROUND HARNESS	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
24	69200125	WIRE HARNESS, console, with 72168-07, 72444-07GY, 72485-07, 72493-07, 72494-07 and 72557-07	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

FUEL PUMP - FLHR, FLHRC AND FLHRXS

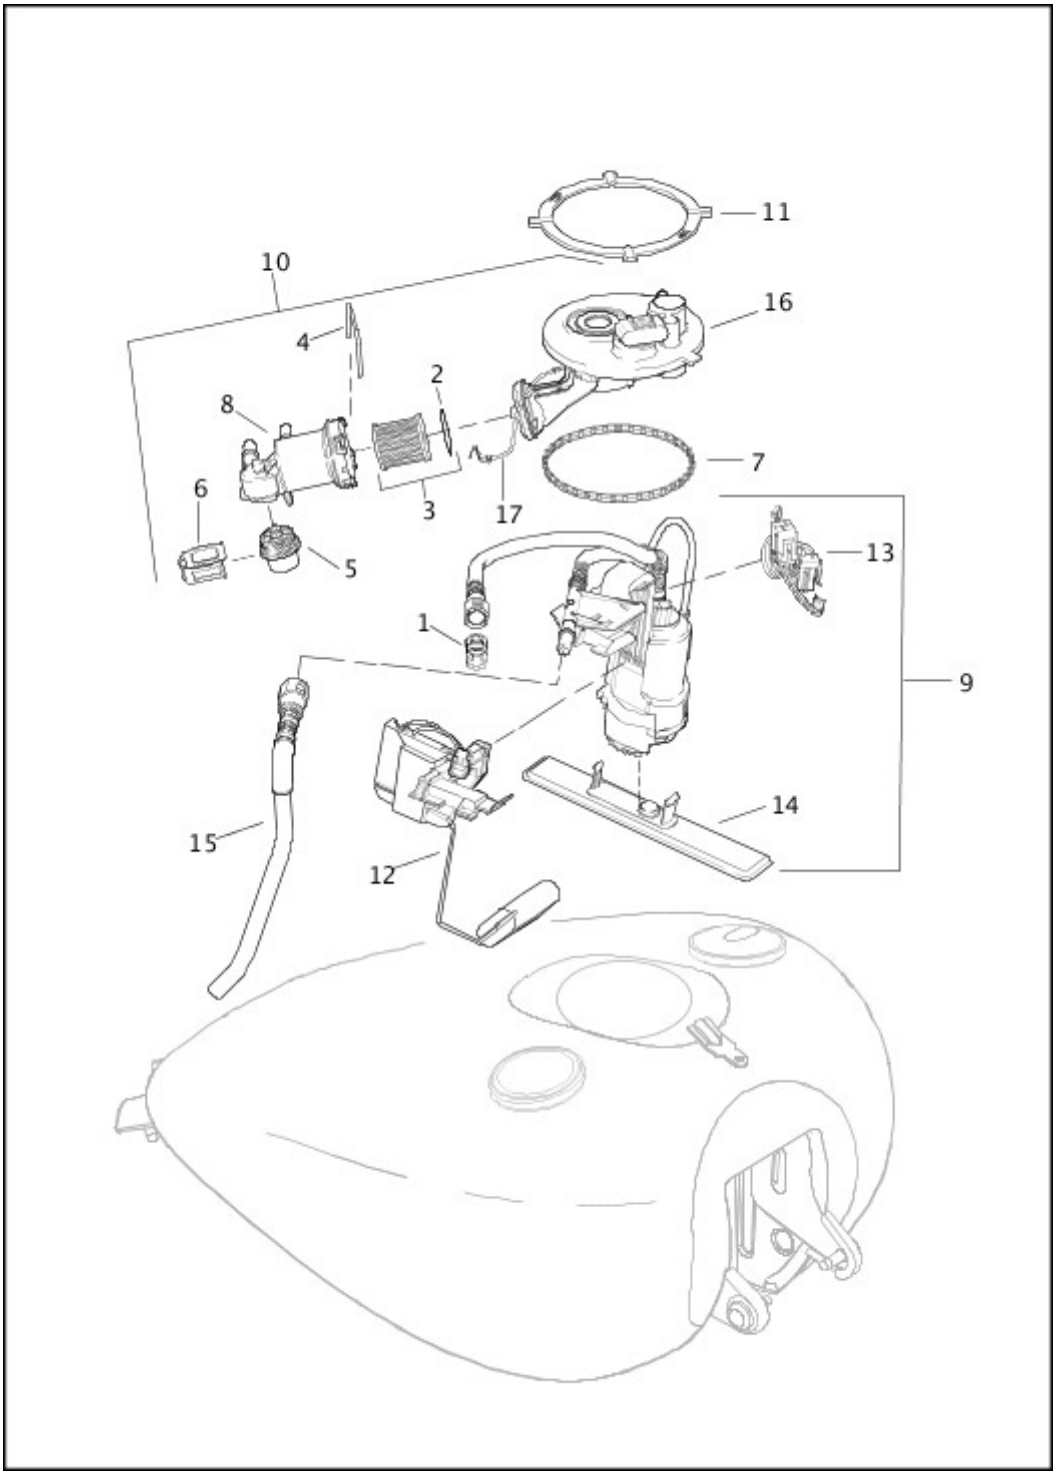


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	10395	RETAINER, fuel line, 5/16 in (black)	FLHR, FLHRC, FLHRXS
2	11686	O-RING	FLHR, FLHRC, FLHRXS
3	61011-04A	FUEL FILTER KIT, with 11686	FLHR, FLHRC, FLHRXS
4	61012-04A	CLIP, filter retainer	FLHR, FLHRC, FLHRXS
5	61015-04A	FUEL REGULATOR ASSEMBLY KIT, with O-rings, spacer and screen	FLHR, FLHRC, FLHRXS
6	61213-04A	CLIP, regulator retainer	FLHR, FLHRC, FLHRXS
7	61402-08	GASKET, top plate	FLHR, FLHRC, FLHRXS
8	62229-08B	FILTER SHELL	FLHR, FLHRC, FLHRXS
9	62908-08	PUMP ASSEMBLY, fuel, with 10395, 75229-08 and 75254-04A	FLHR, FLHRC, FLHRXS
10	75076-08B	TOP PLATE ASSEMBLY, with 3, 4, 5, 6, 8, 16 and 17	FLHR, FLHRC, FLHRXS
11	75089-08	RING, fuel tank, cam	FLHR, FLHRC, FLHRXS
12	75205-08A	FUEL LEVEL SENDER	FLHR, FLHRC, FLHRXS
13	75229-08	HARNESS, fuel pump module	FLHR, FLHRC, FLHRXS
14	75254-04A	STRAINER, fuel pump inlet	FLHR, FLHRC, FLHRXS
15	75269-08	TRANSFER TUBE, fuel pump	FLHR, FLHRC, FLHRXS
16	75291-08A	TOP PLATE	FLHR, FLHRC, FLHRXS
17	75322-09	GROUND HARNESS	FLHR, FLHRC, FLHRXS

EVAPORATIVE EMISSIONS COMPONENTS

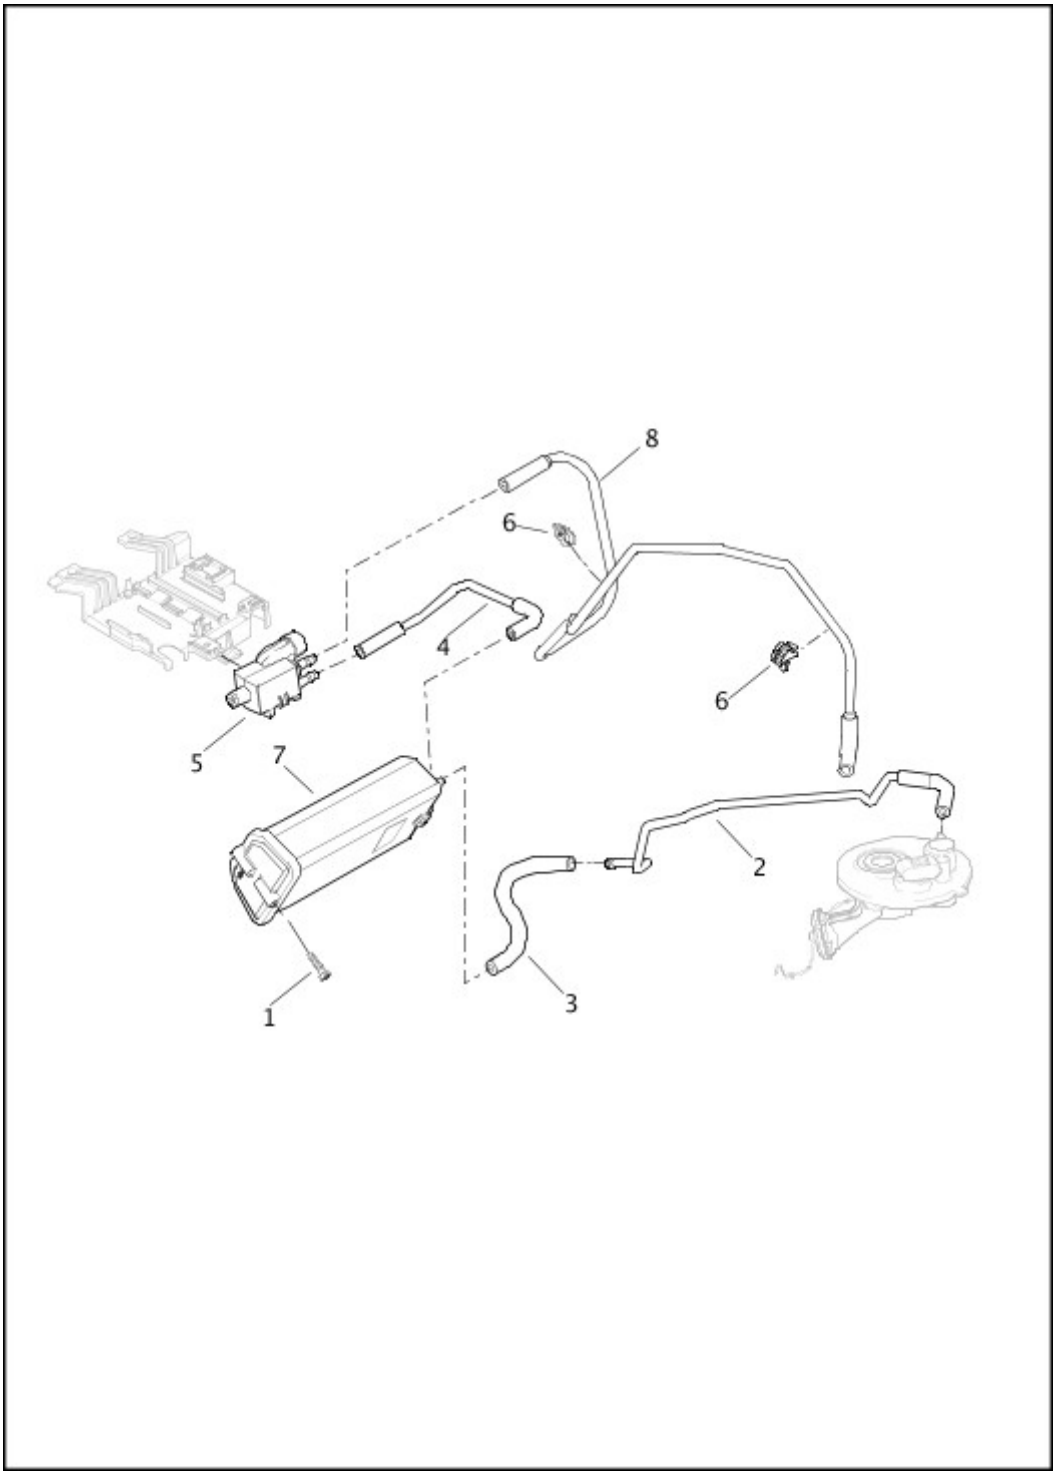

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

NOTE: These parts are required for motorcycles sold in California, Asia-Pacific, Brazil, China, England, HDI, and Japan markets.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4612	SCREW *(2)*	ALL
2	27291-09A	LINE, evaporative (EVAP), tank to canister	ALL
3	27297-09A	LINE, evaporative (EVAP), canister	ALL
4	27298-09A	LINE, evaporative (EVAP), purge to canister	ALL
5	27715-07	SOLENOID, purge valve	ALL
6	70681-09	RETAINER *(2)*	ALL
7	60800006	CARBON CANISTER	ALL
8	60800026	TUBE, solenoid to induction module	ALL

NOTE: These parts are required for motorcycles sold in California, Asia-Pacific, Brazil, China, England, HDI, and Japan markets.

FUEL TANK TRIM (1 OF 2)

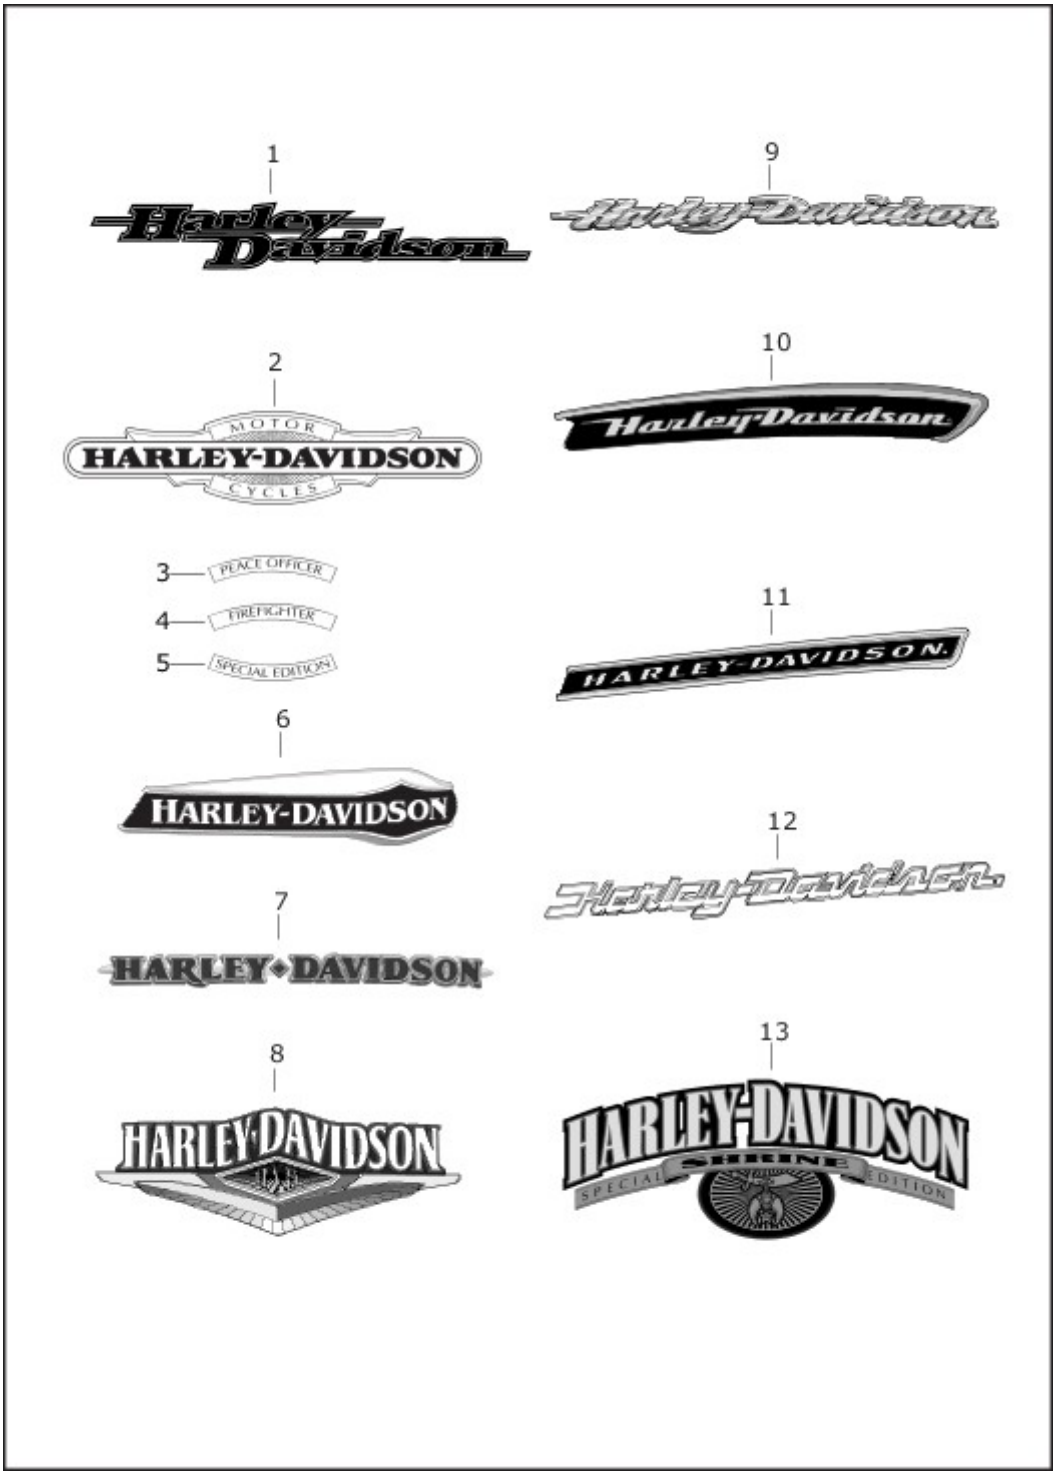

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	62435-11	MEDALLION (left) (for vivid black, wicked red, midnight blue tanks)	FLHX
1	62437-11	MEDALLION (right) (for vivid black, wicked red, midnight blue tanks)	FLHX
2	62152-08	MEDALLION, fuel tank (left) ****RESTRICTED SALES PART****	FLHTK
2	62153-08	MEDALLION, fuel tank (right) ****RESTRICTED SALES PART****	FLHTK
3	62241-08	INSERT, PEACE OFFICER *(2)* ****RESTRICTED SALES PART****	FLHTK
4	62242-08	INSERT, FIREFIGHTER *(2)* ****RESTRICTED SALES PART****	FLHTK
5	62243-08	INSERT, SPECIAL EDITION *(2)* ****RESTRICTED SALES PART****	FLHTK
6	14100073	MEDALLION (right) (for vivid black, twisted cherry, 2-tone midnight blue/barracuda silver, 2-tone wicked red/barracuda silver tanks)	FLHTCU
6	14100074	MEDALLION (left) (for vivid black, twisted cherry, 2-tone midnight blue/barracuda silver, 2-tone wicked red/barracuda silver tanks)	FLHTCU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
7	14100075	MEDALLION (right) (for vivid black, 2-tone wicked red/twisted cherry, 2-tone industrial gray denim/black denim, 2-tone midnight blue/barracuda silver tanks)	FLHTK, FLHTKL
7	14100076	MEDALLION (left) (for vivid black, 2-tone wicked red/twisted cherry, 2-tone industrial gray denim/black denim, 2-tone midnight blue/barracuda silver tanks)	FLHTK, FLHTKL
8	14100079	MEDALLION (right) (for vivid black, barracuda silver, 2-tone wicked red/twisted cherry tanks)	FLHR
8	14100080	MEDALLION (left) (for vivid black, barracuda silver, 2-tone wicked red/twisted cherry tanks)	FLHR

FUEL TANK TRIM (2 OF 2)

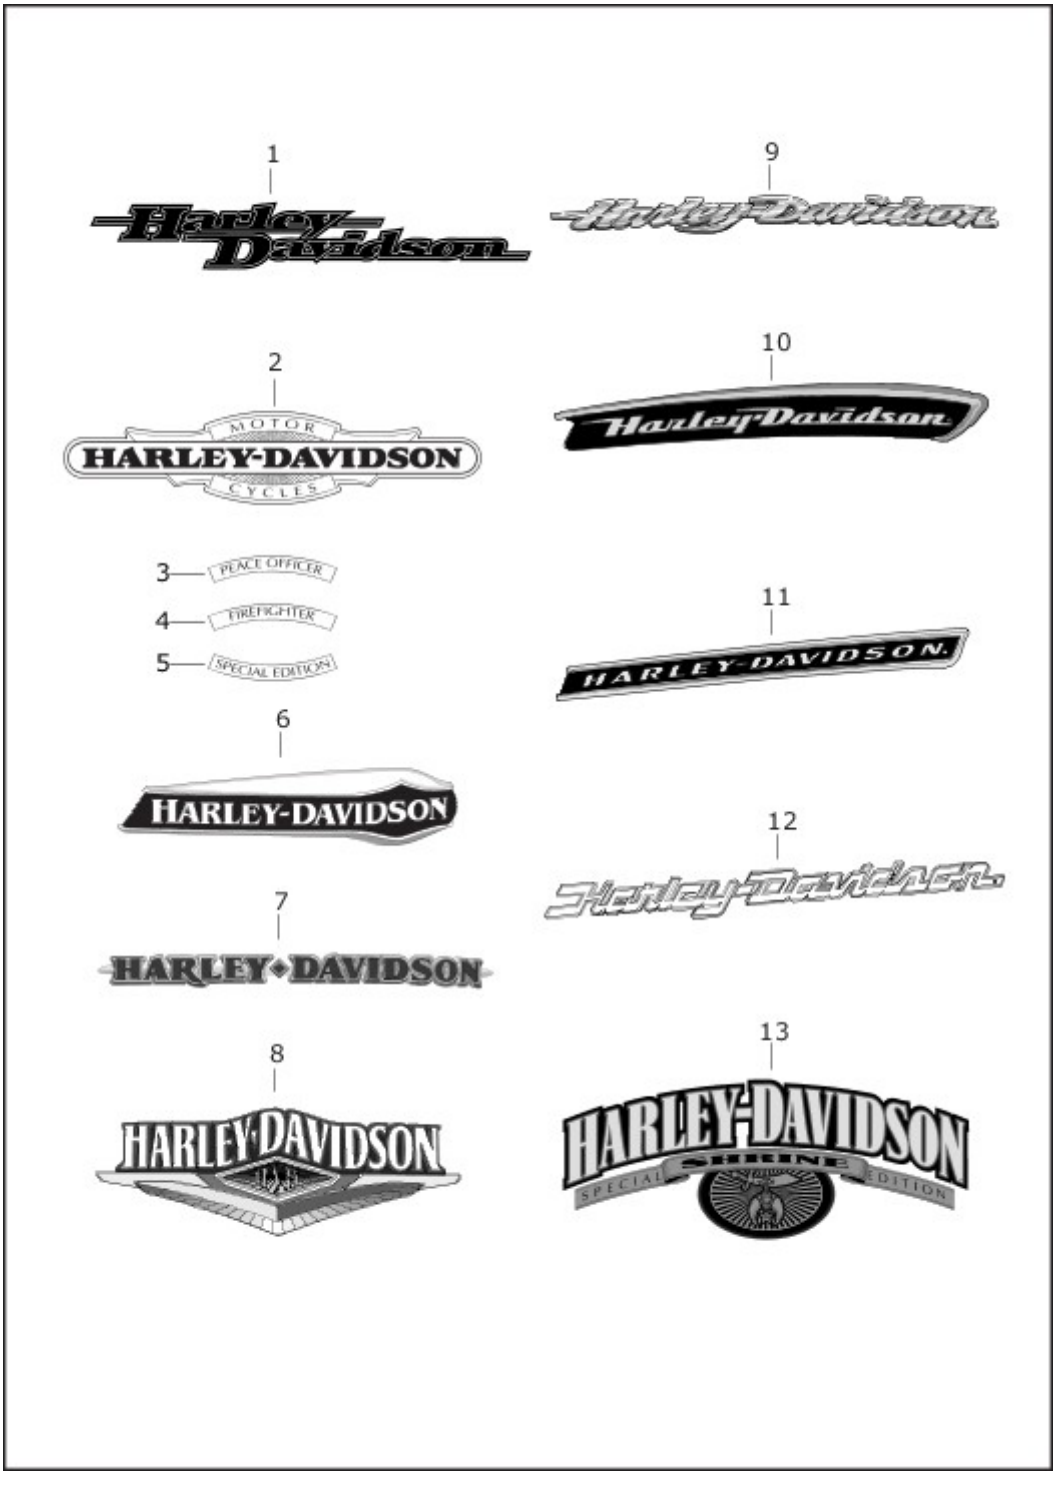

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

Index number 13 is a decal only sold as part of FLHTK (Shrine) fuel tank assembly


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
8	14100079	MEDALLION (right) (for vivid black, bonnevile salt pearl, billiard blue, 2-tone wicked red/twisted cherry tanks)	FLHRC
8	14100080	MEDALLION (left) (for vivid black, bonnevile salt pearl, billiard blue, 2-tone wicked red/twisted cherry tanks)	FLHRC
9	14100587	MEDALLION (right) (for vivid black, industrial gray, wicked red, twisted cherry tanks)	FLTRX
9	14100588	MEDALLION (left) (for vivid black, industrial gray, wicked red, twisted cherry tanks)	FLTRX
10	14100765	MEDALLION (left) (for vivid black, twisted cherry, 2-tone midnight blue/barracuda silver, 2-tone wicked red/barracuda silver tanks)	FLTRU
10	14100766	MEDALLION (right) (for vivid black, twisted cherry, 2-tone midnight blue/barracuda silver, 2-tone wicked red/barracuda silver tanks)	FLTRU
11	14100835	MEDALLION (left) (for vivid black, industrial gray denim, wicked red denim, barracuda silver, billiard blue tanks)	FLHXS
11	14100836	MEDALLION (right) (for vivid black, industrial gray denim, wicked red denim, barracuda silver, billiard blue tanks)	FLHXS

Index number 13 is a decal only sold as part of FLHTK (Shrine) fuel tank assembly

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	14100835	MEDALLION (left) (for vivid black, industrial gray denim, wicked red denim, billiard blue tanks)	FLTRXS
11	14100836	MEDALLION (right) (for vivid black, industrial gray denim, wicked red denim, billiard blue tanks)	FLTRXS
11	14100835	MEDALLION (left) (for vivid black, twisted cherry, bonneville salt denim, midnight blue tanks)	FLHRXS
11	14100836	MEDALLION (right) (for vivid black, twisted cherry, bonneville salt denim, midnight blue tanks)	FLHRXS
12	14101144BAGI	MEDALLION (left) (for 2-tone scorched orange/silver flux tanks)	FLHRXS, FLHXS, FLTRXS
12	14101145BAGI	MEDALLION (right) (for 2-tone scorched orange/silver flux tanks)	FLHRXS, FLHXS, FLTRXS
12	14101144BAGH	MEDALLION (left) (for 2-tone scorched orange/silver flux tanks)	FLHTK, FLTRU
12	14101145BAGH	MEDALLION (right) (for 2-tone scorched orange/silver flux tanks)	FLHTK, FLTRU

Index number 13 is a decal only sold as part of FLHTK (Shrine) fuel tank assembly

NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)

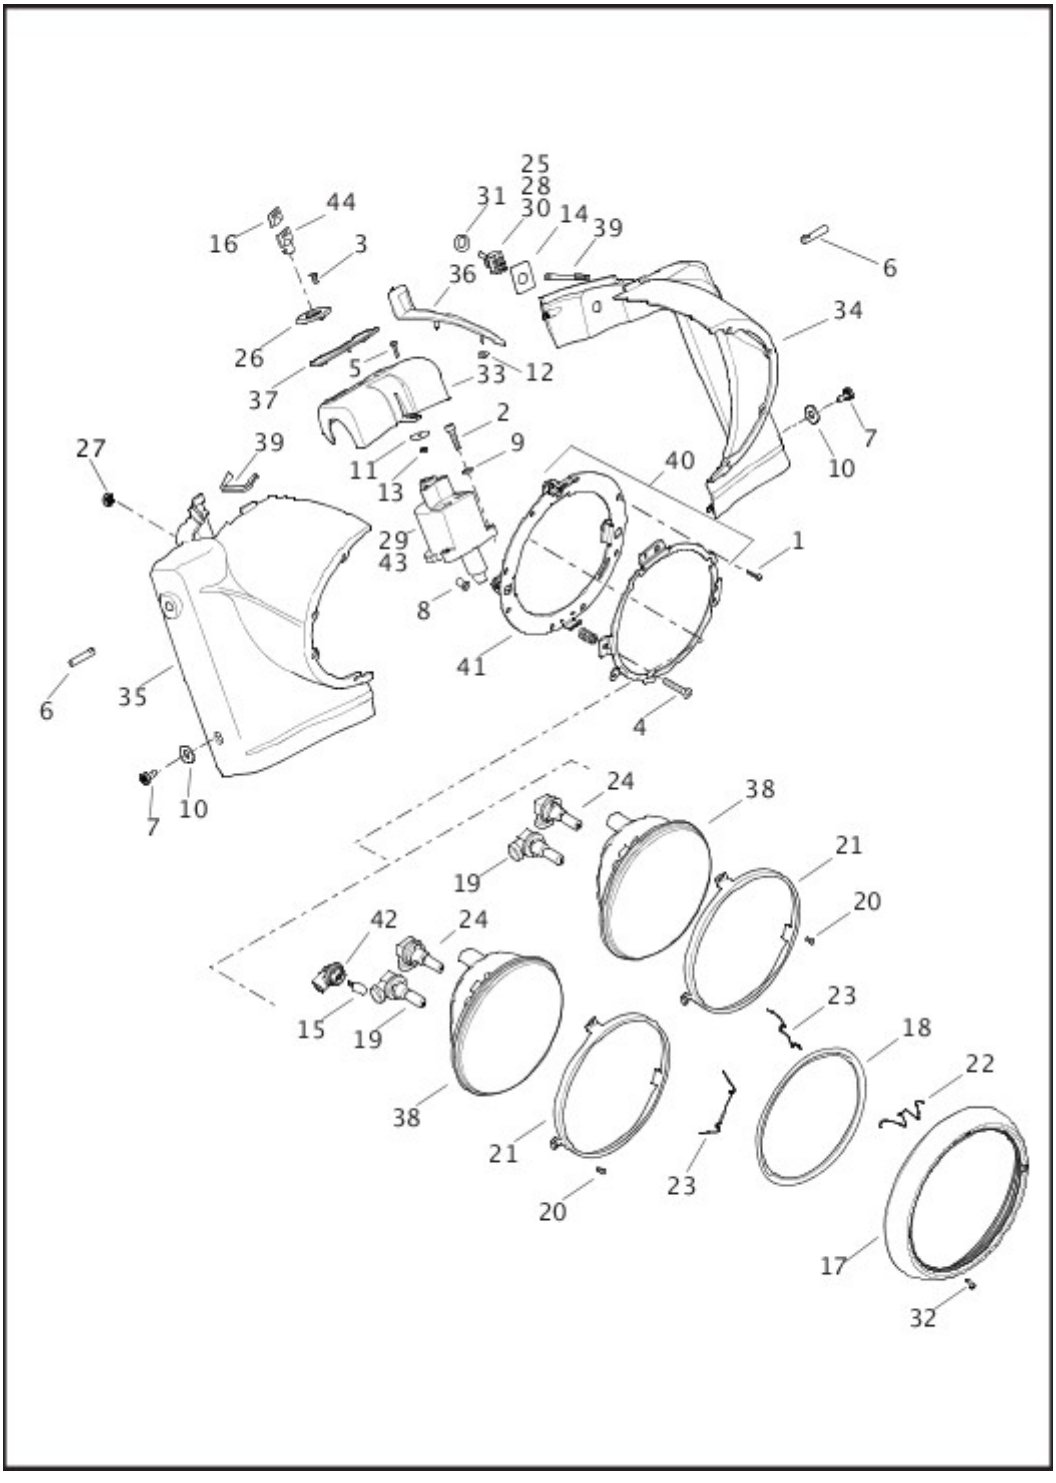

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	787	SCREW *(8)*	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	2647B	SCREW *(2)*	FLHR, FLHRC, FLHRXS
3	2933	SCREW *(2)*	FLHR, FLHRC, FLHRXS
4	3088	SCREW *(3)*	FLHR, FLHRC, FLHRXS
5	3225	BOLT	FLHR, FLHRC, FLHRXS
6	3265A	STUD *(4)*	FLHR, FLHRC
7	3676	SCREW *(4)*	FLHRXS
8	5210	WELL NUT *(8)*	FLHR, FLHRC, FLHRXS
9	6150W	WASHER *(2)*	FLHR, FLHRC, FLHRXS
10	6333	WASHER *(4)*	FLHRXS
11	6789	WASHER	FLHR, FLHRC, FLHRXS
12	7888A	NUT	FLHR, FLHRC, FLHRXS
13	7889	NUT	FLHR, FLHRC, FLHRXS
14	15346-98A	LABEL, fog lamp (left)	FLHR, FLHRC
15	53436-97	BULB, position lamp (HDI)	FLHR, FLHRC, FLHRXS
16	61081-92	COVER, key-head (set of 2)	FLHR, FLHRC, FLHRXS
17	67712-83B	TRIM RING, headlamp (chrome)	FLHR, FLHRC
	46555-03B	TRIM RING, headlamp (black)	FLHRXS
18	67716-60C	GASKET, headlamp door	FLHR, FLHRC, FLHRXS
19	67717-01	BULB, high beam halogen	FLHR, FLHRC, FLHRXS
20	67721-48	SCREW *(3)*	FLHR, FLHRC, FLHRXS
21	67726-08	RETAINING RING	FLHR, FLHRC, FLHRXS
22	67778-60A	SPRING, trim ring, headlamp, top	FLHR, FLHRC, FLHRXS
23	67780-60A	SPRING, trim ring, headlamp, bottom *(2)*	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
24	68881-01	BULB, low beam halogen	FLHR, FLHRC, FLHRXS
25	70292-89	SOCKET HOUSING, four-way	FLHR, FLHRC
26	71310-94	TRIM ASSEMBLY, fork lock	FLHR, FLHRC, FLHRXS
27	71455-11	HOLE PLUG (black)	FLHR, FLHRC
27	71455-11	HOLE PLUG (black) *(2)*	FLHRXS
28	71522-08	SWITCH, auxiliary lamp and accessories, with 70292-89 and 72038-71A (except Japan)	FLHR, FLHRC
28	71565-08	SWITCH, illuminated, with 70292-89 and 72038-71A (Japan)	FLHR
29	71540-94B	FORK LOCK (specify key number)	FLHR, FLHRC, FLHRXS
30	72038-71A	TERMINAL, socket (except Japan) *(4)*	FLHR, FLHRC
30	72038-71A	TERMINAL SOCKET (Japan) *(3)*	FLHR, FLHRC
31	74408-08A	DRESS NUT (chrome)	FLHR, FLHRC
32	10200156	SCREW	FLHR, FLHRC, FLHRXS
33	55800091	COVER, handlebar (chrome)	FLHR, FLHRC
33	55800761	COVER, handlebar (black)	FLHRXS
34	61300095	NACELLE (left) (chrome)	FLHR, FLHRC
34	61300097	NACELLE (left) (black)	FLHRXS
35	61300096	NACELLE (right) (chrome)	FLHR, FLHRC
35	61300098	NACELLE (right) (black)	FLHRXS
36	61400077	TRIM, nacelle (chrome)	FLHR, FLHRC
36	61400498	TRIM, nacelle (gloss black)	FLHRXS

NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2)

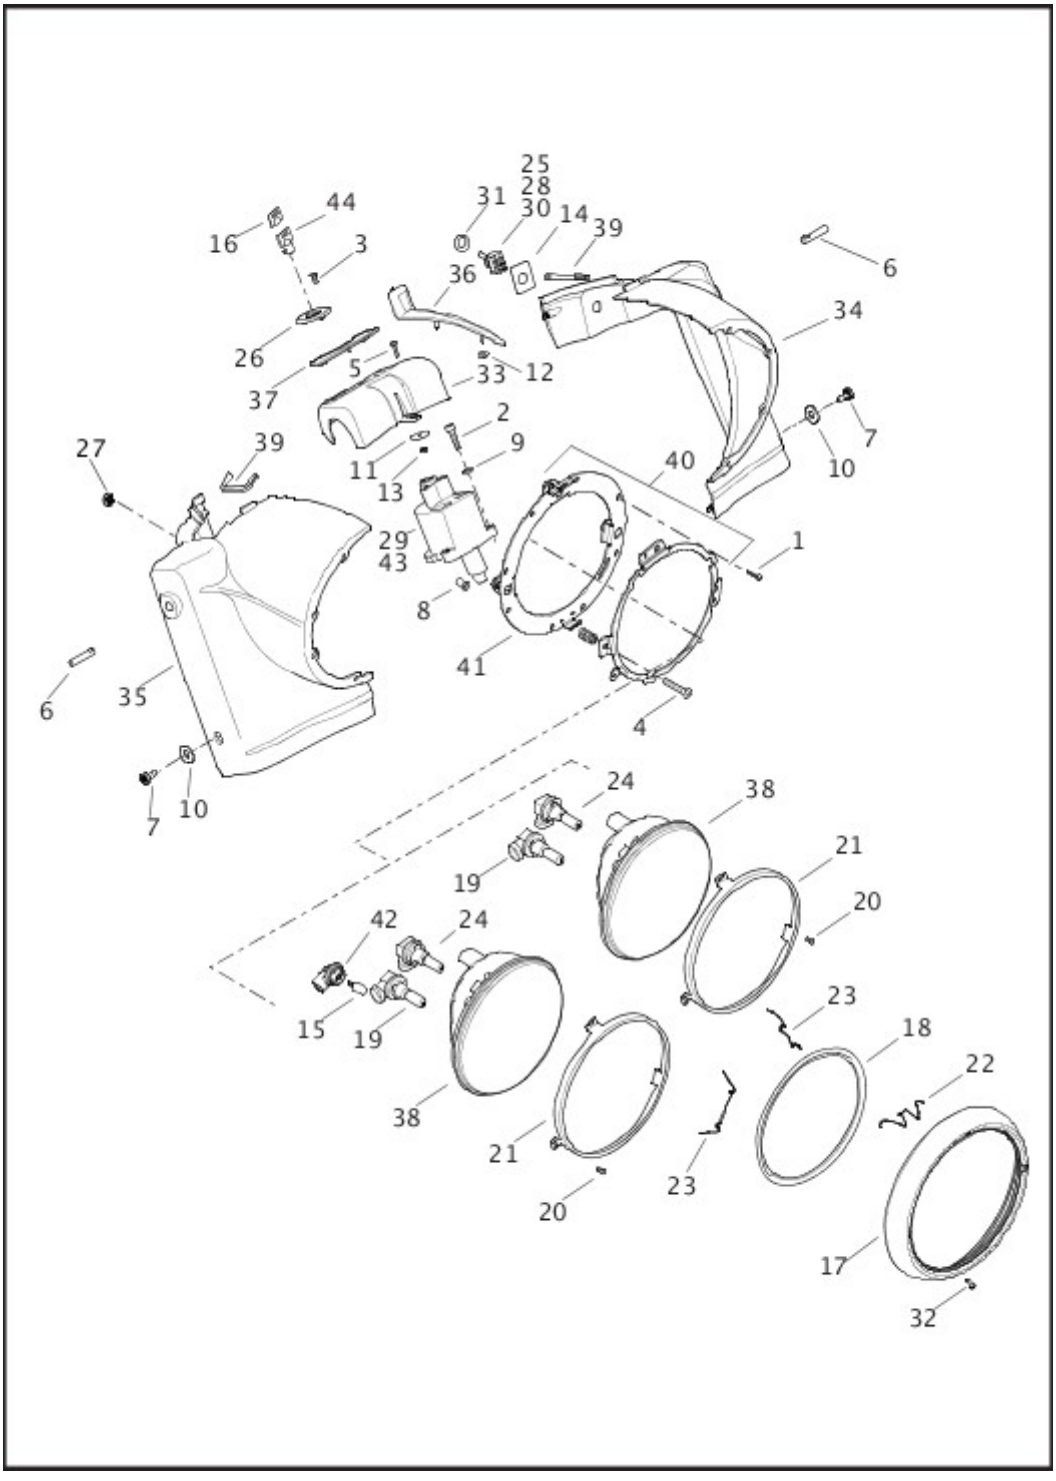


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	61400159	INSERT, handlebar cover	FLHR, FLHRC, FLHRXS
38	67700062	HEADLAMP ASSEMBLY, dual halogen, with 67717-01 and 68881-01(Domestic)	FLHR, FLHRXS
38	67700065	HEADLAMP ASSEMBLY, dual halogen, with 54346-97, 67717-01, 68881-01 and 68000038 (HDI)	FLHR, FLHRC, FLHRXS
39	67700105	TRIM *(2)*	FLHR, FLHRC, FLHRXS
40	67700204	MOUNTING RING ASSEMBLY, with 3088 and 67700205	FLHR, FLHRC, FLHRXS
41	67700205	MOUNTING RING, headlamp	FLHR, FLHRC, FLHRXS
42	68000038	CONNECTOR, position bulb (HDI)	FLHRC, FLHRXS
43	71400010A	LOCKSET, complete, with keys, ignition switch, fork lock and saddle bag lock	FLHR, FLHRXS
43	71400011A	LOCKSET, complete with keys, ignition switch, cover, and fork lock (HDI)	FLHRC
44	90300043	KEY, with 61081-92 (set of 2) (specify key number)	FLHR, FLHRC, FLHRXS

AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC

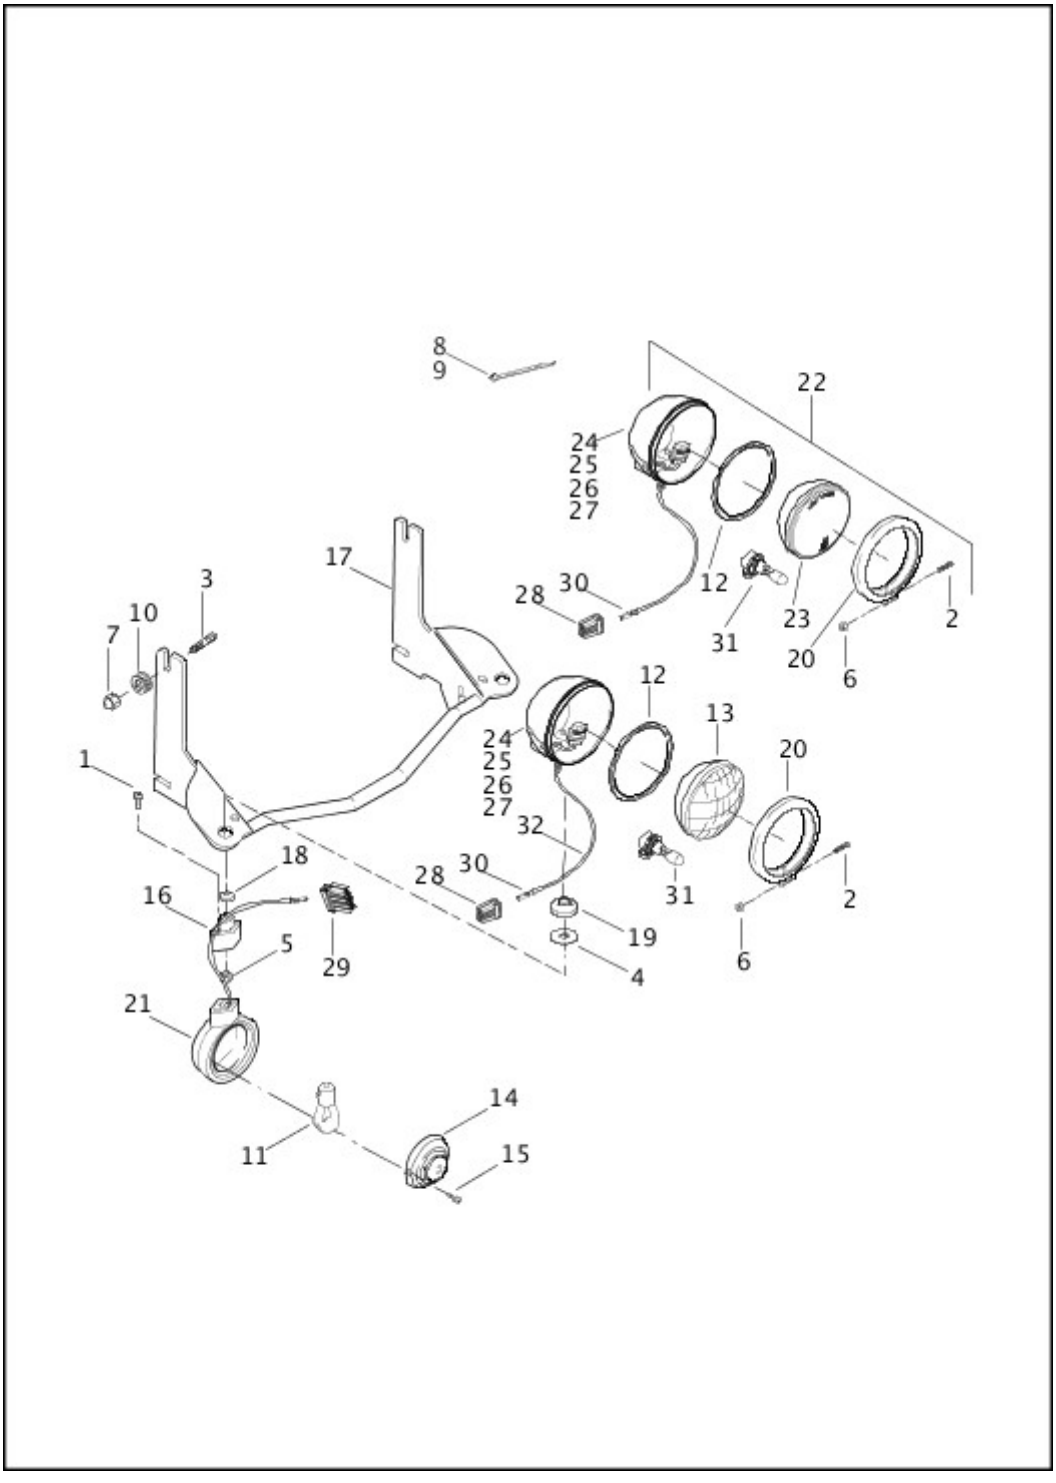

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2647B	SCREW *(4)*	FLHR, FLHRC

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3514	SCREW *(2)*	FLHR, FLHRC
3	3265A	STUD *(4)*	FLHR, FLHRC
4	6072	WASHER *(2)*	FLHR, FLHRC
5	7601	LOCKNUT *(2)*	FLHR, FLHRC
6	7606	LOCKNUT *(2)*	FLHR, FLHRC
7	7992	ACORN NUT *(4)*	FLHR, FLHRC
8	10039	CABLE STRAP *(2)*	FLHR, FLHRC
9	10065	CABLE STRAP	FLHR, FLHRC
10	67621-94	BUSHING *(4)*	FLHR, FLHRC
11	68168-89A	BULB, turn signal (Domestic) *(2)*	FLHR
11	68163-84	BULB, turn signal (2) (HDI)	FLHR, FLHRC
12	68331-02	RING, auxiliary lamps *(2)*	FLHR, FLHRC
13	68414-05A	LAMP, auxiliary, with 68000056 (Domestic) *(2)*	FLHR
14	68440-86	LENS, turn signal (Domestic) (amber) *(2)*	FLHR
14	68505-90	LENS, turn signal (HDI) (amber) *(2)*	FLHR, FLHRC
15	68452-86	SCREW *(4)*	FLHR, FLHRC
16	68519-68A	MOUNTING BRACKET *(2)*	FLHR, FLHRC
17	68712-94A	BRACKET, auxiliary/fog lamps	FLHR, FLHRC
18	68720-62	CLAMP BLOCK, auxiliary/fog lamps *(2)*	FLHR, FLHRC
19	68721-62	SWIVEL BLOCK, auxiliary/fog lamps *(2)*	FLHR, FLHRC
20	68725-62A	BEZEL RING, auxiliary/fog lamps *(2)*	FLHR, FLHRC

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	68766-94	TURN SIGNAL ASSEMBLY, with 68168-89A, 68440-86 and 68452-86 (Domestic) *(2)*	FLHR
21	68767-94	TURN SIGNAL, with 68163-84, 68452-86 and 68505-90 (2) (HDI)	FLHR, FLHRC
22	68846-09	FOG LAMP ASSEMBLY, with 3514, 7606, 68331-02, 68725-62A, 68847-09 and 72160-06 (HDI) *(2)*	FLHR, FLHRC
23	68847-09	BULB ASSEMBLY, fog lamp, with 68000056 (HDI) *(2)*	FLHR, FLHRC
24	72160-06	HOUSING, auxiliary/fog lamp, with 72161-06, 72298-95 and 72356-95 *(2)*	FLHR, FLHRC
25	72161-06	SOCKET HOUSING, two-way *(2)*	FLHR, FLHRC
26	72298-95	WIRE SEAL, 14-18 AWG (green) *(4)*	FLHR, FLHRC
27	72356-95	TERMINAL, socket, 18-20 AWG *(4)*	FLHR, FLHRC
28	73154-96BK	SOCKET HOUSING, four-way (black)	FLHR, FLHRC
29	73156-96BK	SOCKET HOUSING, six-way (black)	FLHR, FLHRC
30	73191-96	TERMINAL, socket, 16-20 AWG (Domestic) *(8)*	FLHR
30	73191-96	TERMINAL, socket, 16-20 AWG (HDI) *(6)*	FLHR, FLHRC
31	68000056	BULB, auxiliary/fog lamp *(2)*	FLHR, FLHRC
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
32	70554-69	CONDUIT (10-ft length) (black)	FLHR, FLHRC

AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)

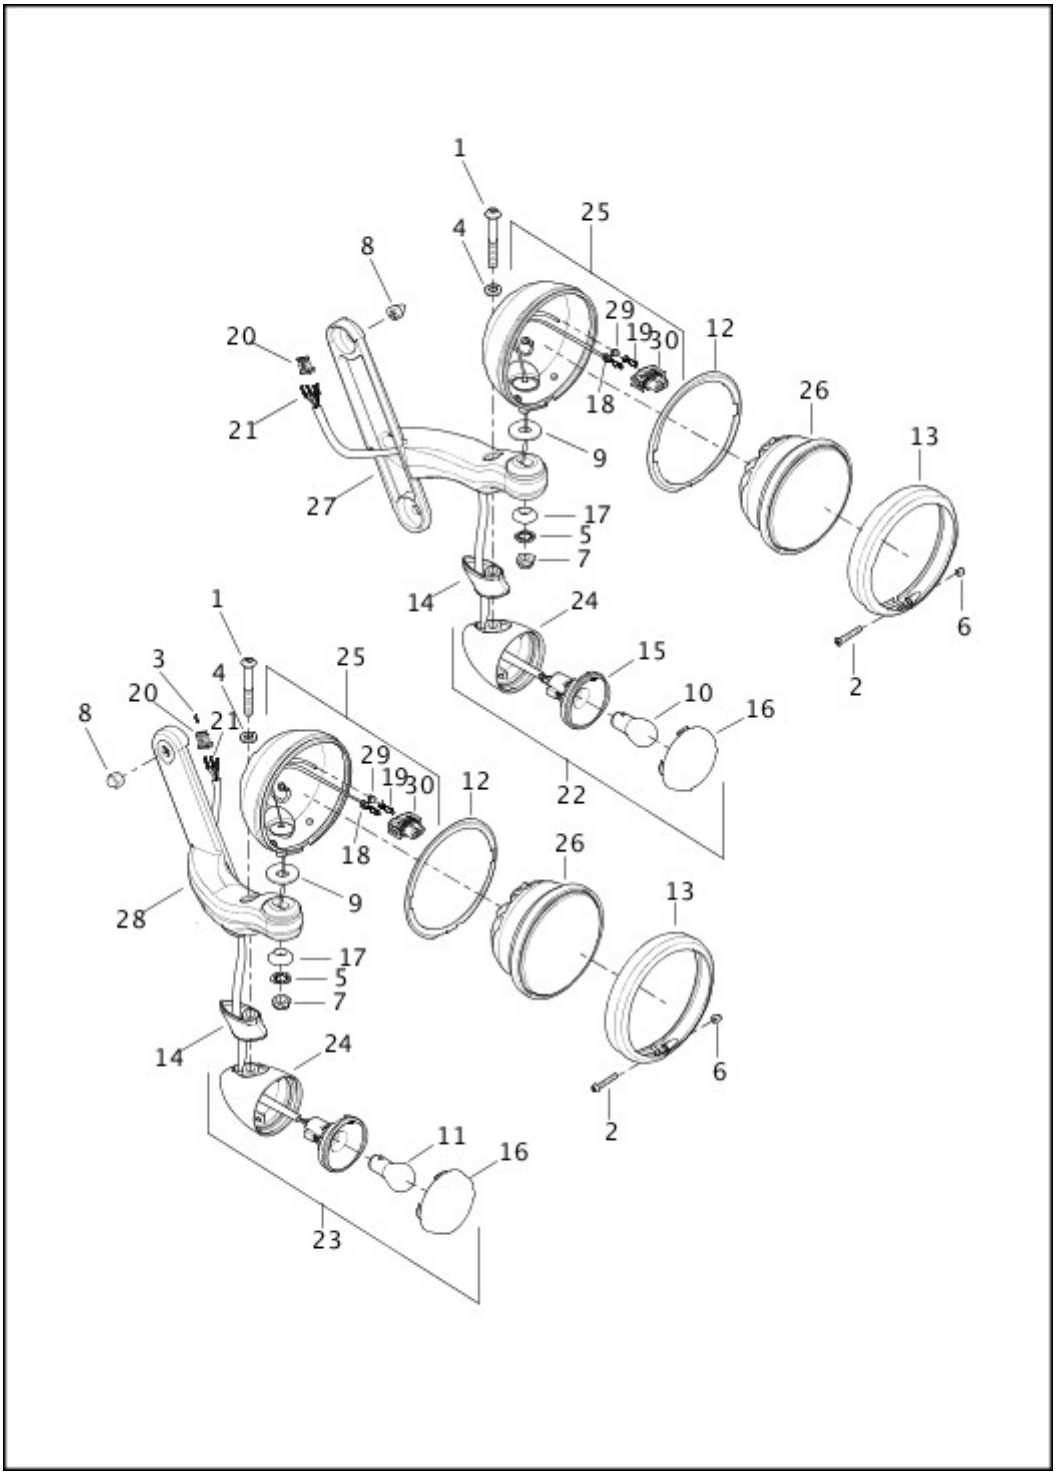


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1332	SCREW *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
2	3514	SCREW *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
3	5118	SEAL PIN (HDI) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
4	7041	LOCKWASHER *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
5	7130W	LOCKWASHER *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
6	7606	LOCKNUT *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
7	7667	NUT *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
8	7992	ACORN NUT *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
9	40901-05	ISOLATOR, rubber *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
10	68168-89A	BULB, turn signal (Domestic) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
11	68163-84	BULB, turn signal (2) (HDI)	FLHTK, FLHTK SHRINE, FLHTKL
12	68331-02	RING, auxiliary lamps *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
13	68725-62A	BEZEL RING, auxiliary/fog lamps *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
14	68821-00	TURN SIGNAL MOUNT, directional *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
15	68904-00	SOCKET ASSEMBLY, turn signal (Domestic) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL

AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)

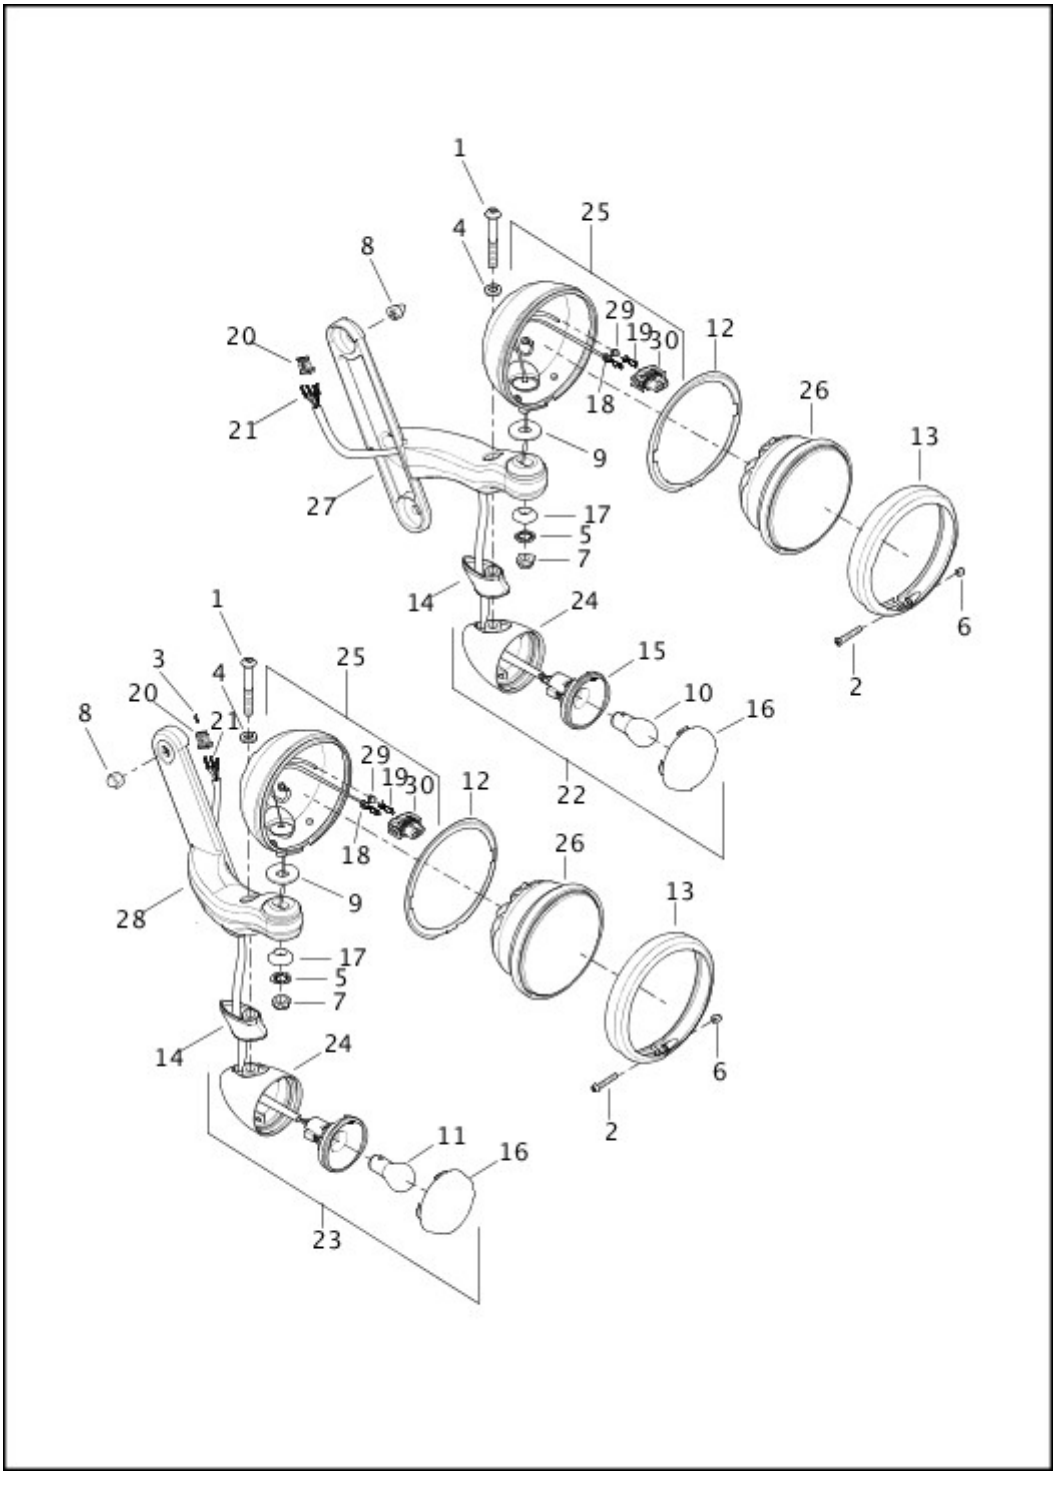

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	68973-00	LENS *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
17	69563-06	CLAMP BLOCK, auxiliary/fog lamps *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
18	72298-95	WIRE SEAL, 14-18 AWG (green) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
19	72356-95	TERMINAL, socket, 18-20 AWG *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
20	72908-11	HOUSING, four-way socket (black) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
21	72910-11	TERMINAL, socket, 20-22 AWG (Domestic) *(8)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
21	72910-11	TERMINAL, socket, 20-22 AWG (HDI) *(6)*	FLHTK, FLHTK SHRINE, FLHTKL
22	67800103	TURN SIGNAL ASSEMBLY, with 68168-89A, 68904-00, 68973-00 and 67800109 (Domestic) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
23	67800104	TURN SIGNAL ASSEMBLY, with 68163-84, 68973-00, 67800109 and socket assembly (HDI) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
24	67800109	HOUSING, turn signal (chrome) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
25	67800254A	HOUSING, auxiliary/fog lamp, with 72298-95, 72356-95, 72910-11, 69200199 and 69200259 *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
26	68000020	AUXILIARY/FOG LAMP, LED *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
27	68000021	BRACKET, auxiliary/fog lamp (left)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
28	68000022	BRACKET, auxiliary/fog lamp (right)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
29	69200199	WIRE SEAL, 18-20 AWG (purple) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
30	69200529	HOUSING, two-way socket *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL

TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS

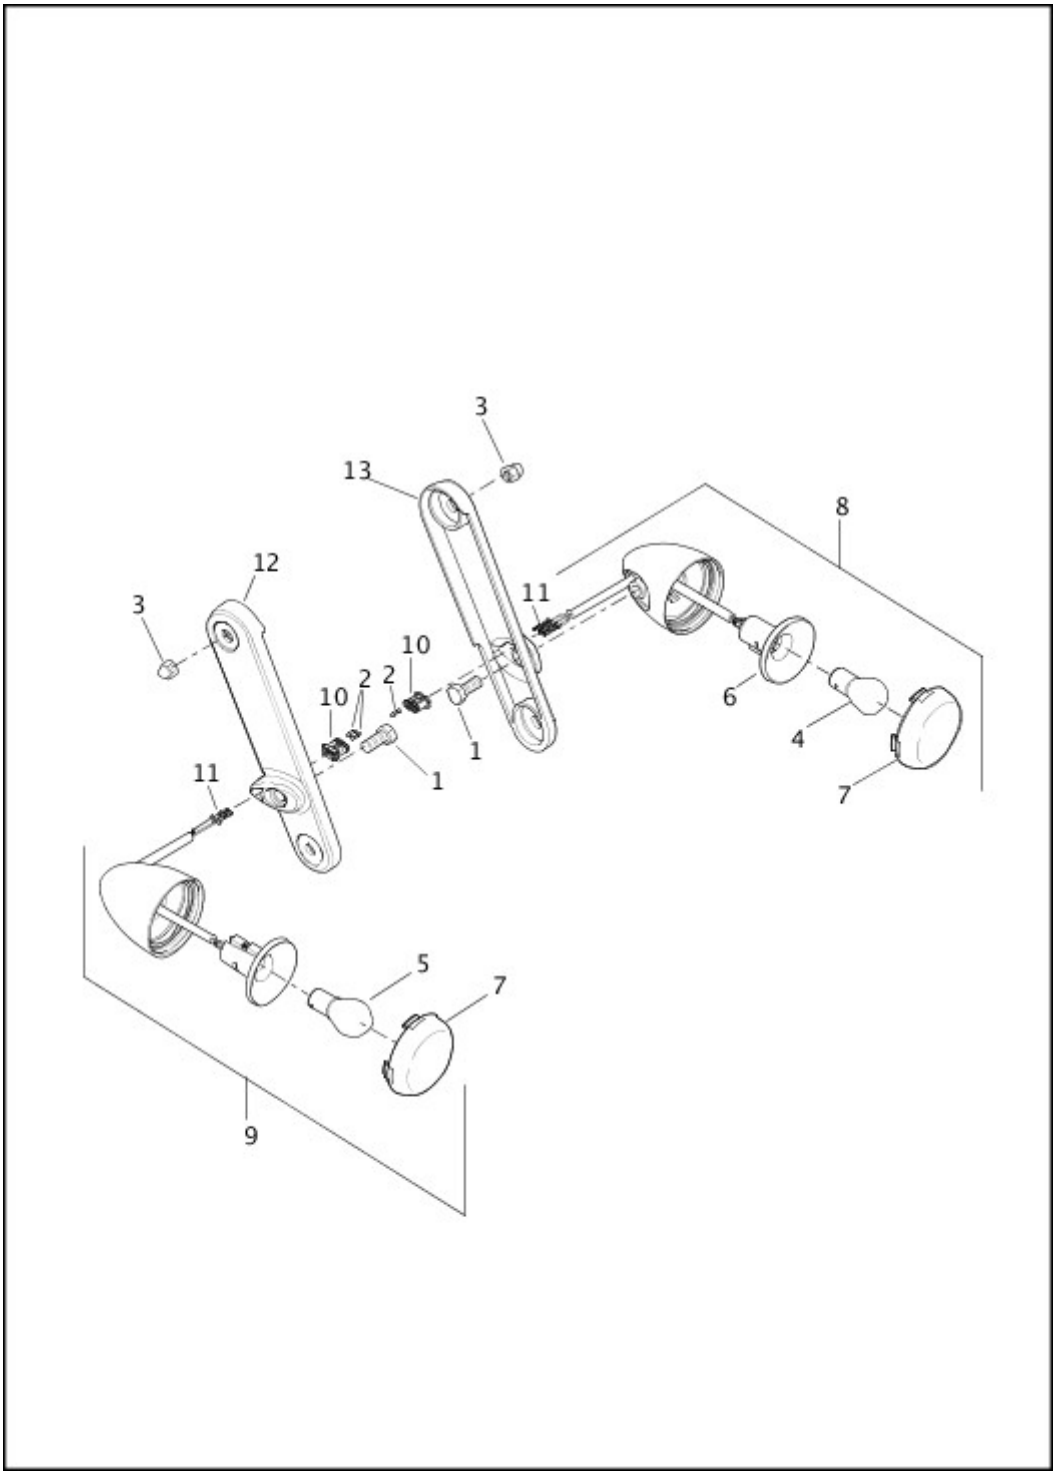

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3987	BOLT *(2)*	FLHT, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	5118	SEAL PIN (Domestic) *(2)*	FLHT, FLHX, FLHXS
2	5118	SEAL PIN (HDI) *(4)*	FLHT, FLHX, FLHXS
3	7992	ACORN NUT *(4)*	FLHT, FLHX, FLHXS
4	68168-89A	BULB, turn signal (Domestic) *(2)*	FLHT, FLHX
4	69331-02	BULB, turn signal (Domestic) *(2)*	FLHXS
5	68163-84	BULB, turn signal (2) (HDI)	FLHT, FLHX, FLHXS
6	68904-00	SOCKET ASSEMBLY, turn signal (Domestic) *(2)*	FLHT, FLHX, FLHXS
7	68973-00	LENS (amber) *(2)*	FLHT, FLHX
7	68973-00	LENS (amber) (HDI) *(2)*	FLHXS
7	69325-02	LENS (smoked) (Domestic) *(2)*	FLHXS
8	69292-06	TURN SIGNAL ASSEMBLY, with 68168-89A, 68904-00 and 68973-00 (chrome) (Domestic) *(2)*	FLHT, FLHX
8	67800906	TURN SIGNAL ASSEMBLY, with 68904-00, 69325-02, 69331-02 (black) (Domestic) *(2)*	FLHXS
9	69293-06	TURN SIGNAL ASSEMBLY, with 68163-84, 68973-00 and socket housing (chrome) (HDI) *(2)*	FLHT, FLHX
9	67800908	TURN SIGNAL ASSEMBLY, with 68163-84, 68976-00 and socket housing (black) (HDI) *(2)*	FLHXS
10	72908-11	HOUSING, four-way socket (black) *(2)*	FLHT, FLHX, FLHXS
11	72910-11	TERMINAL, socket, 20-22 AWG (Domestic) *(6)*	FLHT, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	72910-11	TERMINAL, socket, 20-22 AWG (HDI) *(4)*	FLHT, FLHX, FLHXS
12	68000036	BAR, right upright (chrome)	FLHT, FLHX
12	67800708	BAR, right upright (black)	FLHXS
13	67800709	BAR, left upright (black)	FLHXS
13	68000037	BAR, left upright (chrome)	FLHT, FLHX

TURN SIGNALS, FRONT - FLHRXS

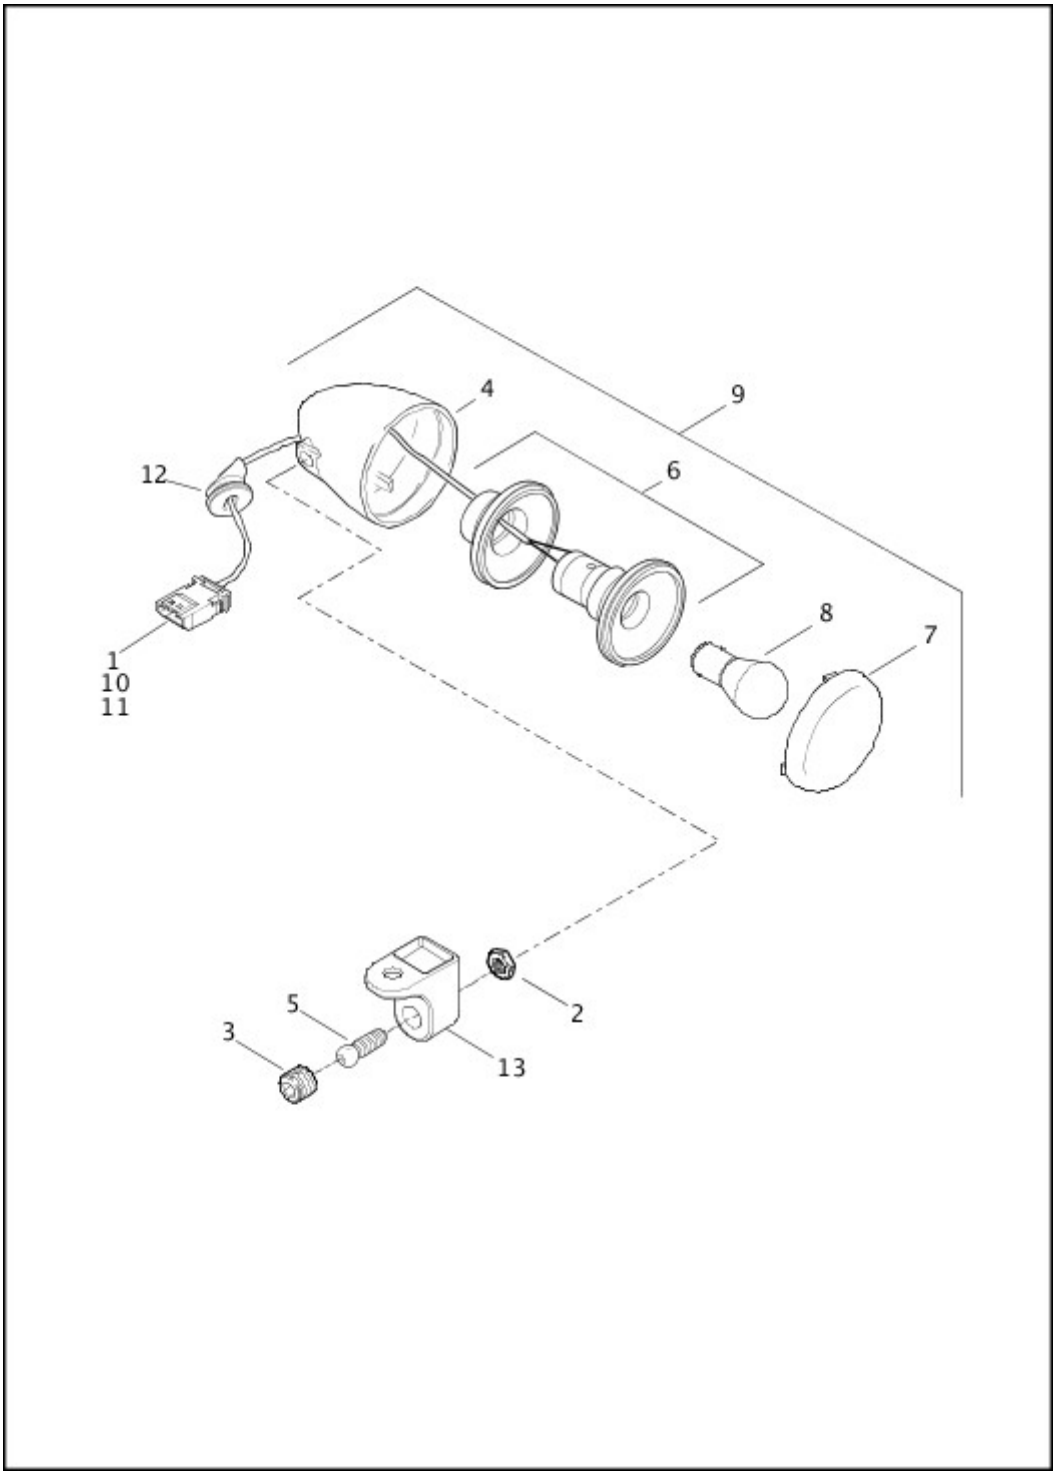


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	5118	SEAL PIN (Domestic) *(2)*	FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	5118	SEAL PIN (HDI) *(4)*	FLHRXS
2	7744	JAMNUT *(2)*	FLHRXS
3	67015-02	SET SCREW *(2)*	FLHRXS
4	68776-06	HOUSING, turn signal (black) *(2)*	FLHRXS
5	67822-88	BALL STUD *(2)*	FLHRXS
6	68904-00	SOCKET ASSEMBLY, front (Domestic) *(2)*	FLHRXS
7	69325-02	LENS, turn signal (Domestic) (smoked) *(2)*	FLHRXS
7	68973-00	LENS, turn signal (HDI, England, Australia, Japan) (amber) *(2)*	FLHRXS
8	69331-02	BULB, turn signal (Domestic) *(2)*	FLHRXS
8	68163-84	BULB, turn signal (HDI, England, Australia, Japan) *(2)*	FLHRXS
9	69587-07	TURN SIGNAL ASSEMBLY, front, w/ 69325-02, 69331-02 & 68904-00 (Domestic) *(2)*	FLHRXS
9	68838-06	TURN SIGNAL ASSEMBLY, front, w/ 68163-84, 68973-00 (HDI, England, Australia, Japan) *(2)*	FLHRXS
10	72907-11	HOUSING, 4-way, pin *(2)*	FLHRXS
11	72909-11	TERMINAL, pin, 20-22 AWG (Domestic) *(6)*	FLHRXS
11	72909-11	TERMINAL, pin, 20-22 AWG (HDI) *(4)*	FLHRXS
12	12100043	GROMMET *(2)*	FLHRXS
13	67800938	BRACKET MOUNTING, turn signal (black) *(2)*	FLHRXS

WINDSHIELD - FLHR AND FLHRC

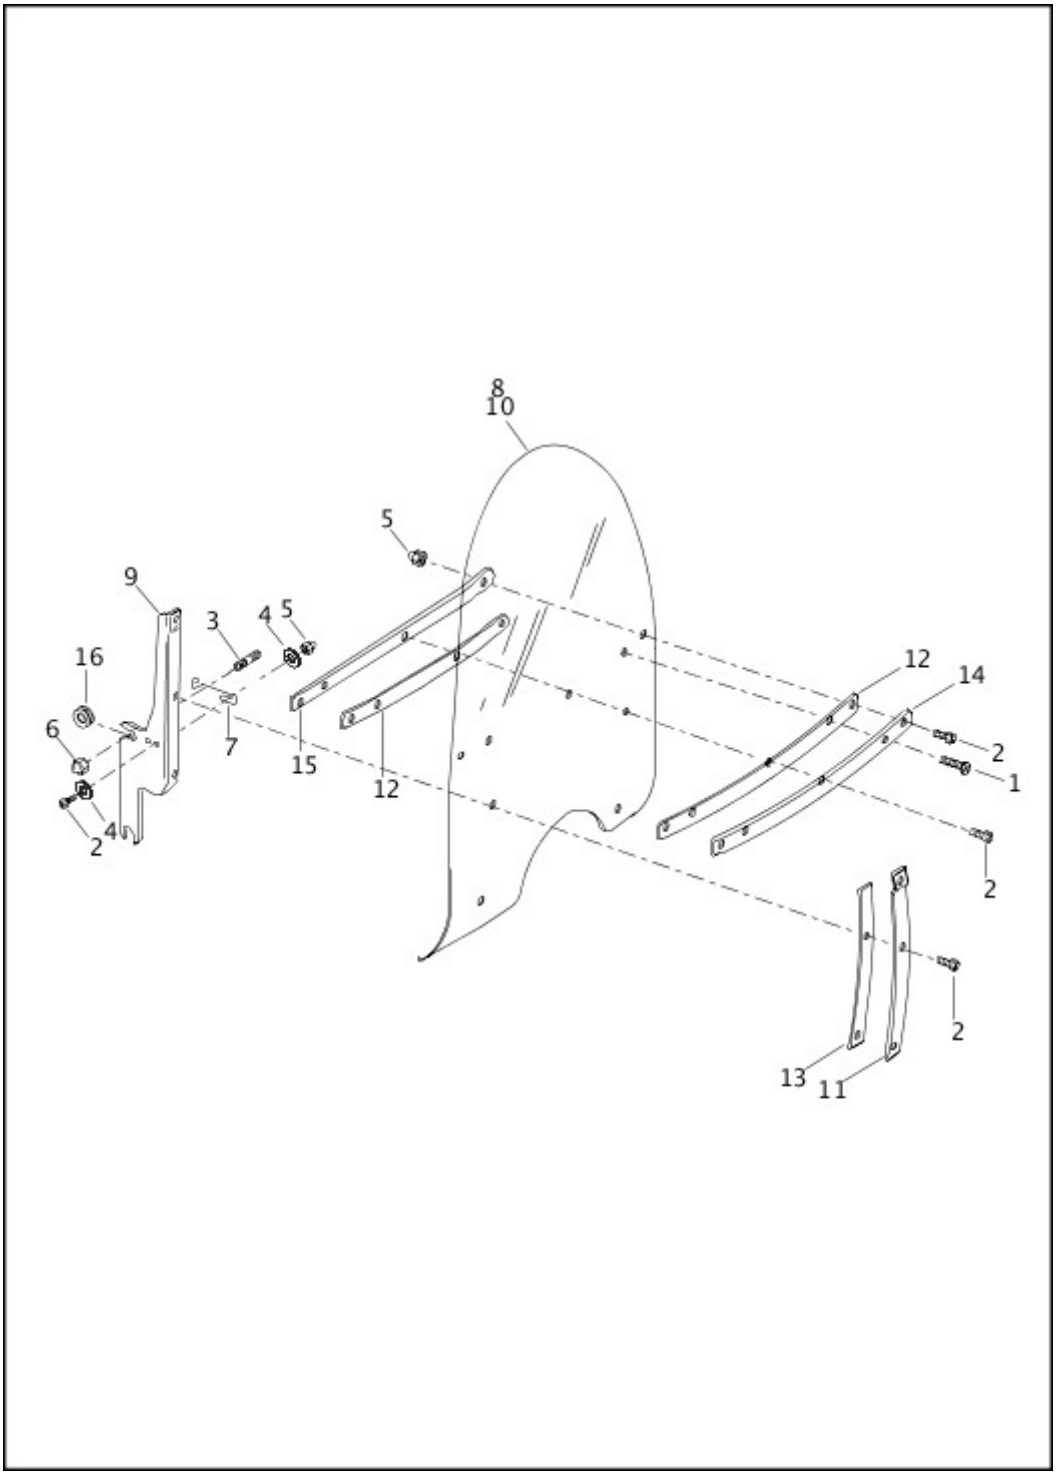

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2452	SCREW *(2)*	FLHR, FLHRC
2	2921A	SCREW *(11)*	FLHR, FLHRC
3	3265A	STUD *(4)*	FLHR, FLHRC
4	6119	WASHER *(8)*	FLHR, FLHRC
5	7651A	ACORN NUT *(13)*	FLHR, FLHRC
6	7992	ACORN NUT *(4)*	FLHR, FLHRC
7	38722-94	SPRING LATCH *(2)*	FLHR, FLHRC
8	57668-10	WINDSHIELD ASSEMBLY, complete, low (clear) (Asia-Pacific)	FLHR
8	57994-94	WINDSHIELD ASSEMBLY, complete (Domestic, Canada, California)	FLHR
8	57994-94	WINDSHIELD ASSEMBLY, complete (Australia, Brazil)	FLHR, FLHRC
8	58325-06	WINDSHIELD ASSEMBLY, complete (HDI, England, Japan)	FLHR, FLHRC
9	58084-94	ADJUSTING BRACKET (right)	FLHR, FLHRC
9	58088-94	ADJUSTING BRACKET (left)	FLHR, FLHRC
10	58193-94	WINDSHIELD REPLACEMENT KIT, with 58416-77A and 58417-77 (Domestic, Canada, California)	FLHR
10	58193-94	WINDSHIELD REPLACEMENT KIT, with 58416-77A and 58417-77 (Australia, Brazil)	FLHR, FLHRC
10	58327-06	WINDSHIELD REPLACEMENT KIT, with 58416-77A and 58417-77 (HDI, England, Japan)	FLHR, FLHRC

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	57400005	WINDSHIELD REPLACEMENT KIT, with 58416-77A and 58417-77 (Asia-Pacific)	FLHR
11	58406-75A	BRACE (right)	FLHR, FLHRC
11	58408-75A	BRACE (left)	FLHR, FLHRC
12	58416-77A	TAPE *(2)*	FLHR, FLHRC
13	58417-77	TAPE *(2)*	FLHR, FLHRC
14	58428-94	BRACE, outer	FLHR, FLHRC
15	58431-94	BRACE, inner	FLHR, FLHRC
16	67621-94	BUSHING *(4)*	FLHR, FLHRC

WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)

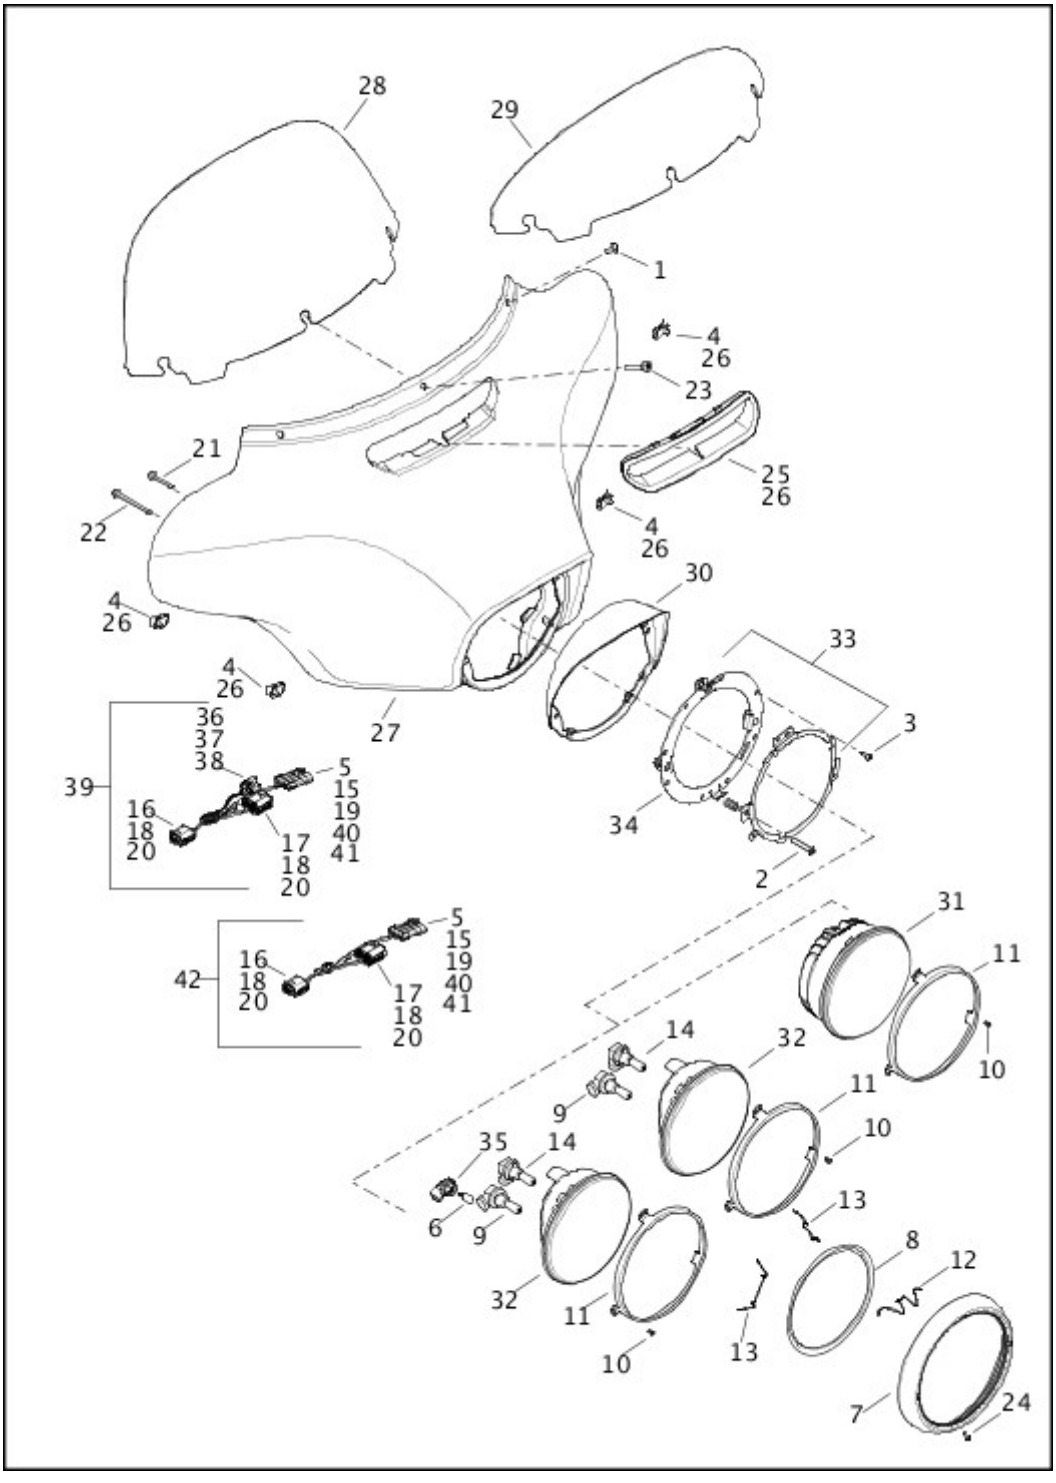

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2445	SCREW *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
2	3088	SCREW *(3)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
3	4790	SCREW *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
4	7900	CLIP NUT *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
5	10147	CLIP, connector	FLHT, FLHX, FLHXS
6	53436-97	BULB, position lamp (HDI)	FLHT, FLHX, FLHXS
7	67712-83B	TRIM RING, headlamp (chrome)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX
7	46555-03B	TRIM RING, headlamp (black)	FLHXS
8	67716-60C	GASKET, headlamp door	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
9	67717-01	BULB, high beam halogen	FLHT, FLHX, FLHXS
10	67721-48	SCREW *(3)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
11	67726-08	RETAINING RING, headlamp	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
12	67778-60A	SPRING, trim ring, headlamp, top	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
13	67780-60A	SPRING, trim ring, headlamp, bottom *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
14	68881-01	BULB, low beam halogen	FLHT, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	72214-94	WIRE SEAL, 14-16 AWG (dark red) *(3)*	FLHT, FLHX, FLHXS
16	72449-01	HOUSING, two-way socket (black)	FLHT, FLHX, FLHXS
17	72450-01	HOUSING, two-way socket (gray)	FLHT, FLHX, FLHXS
18	72527-01	TERMINAL, socket, 18-20 AWG *(4)*	FLHT, FLHX, FLHXS
19	72608-08	TERMINAL, pin, 16-20 AWG *(3)*	FLHT, FLHX, FLHXS
20	72633-02	WIRE SEAL, 14-16 AWG (white) *(4)*	FLHT, FLHX, FLHXS
21	10200059	SCREW *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
22	10200060	SCREW *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
23	10200112	SCREW	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
24	10200156	SCREW	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
25	29200007	BEZEL, air duct, outer fairing	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)

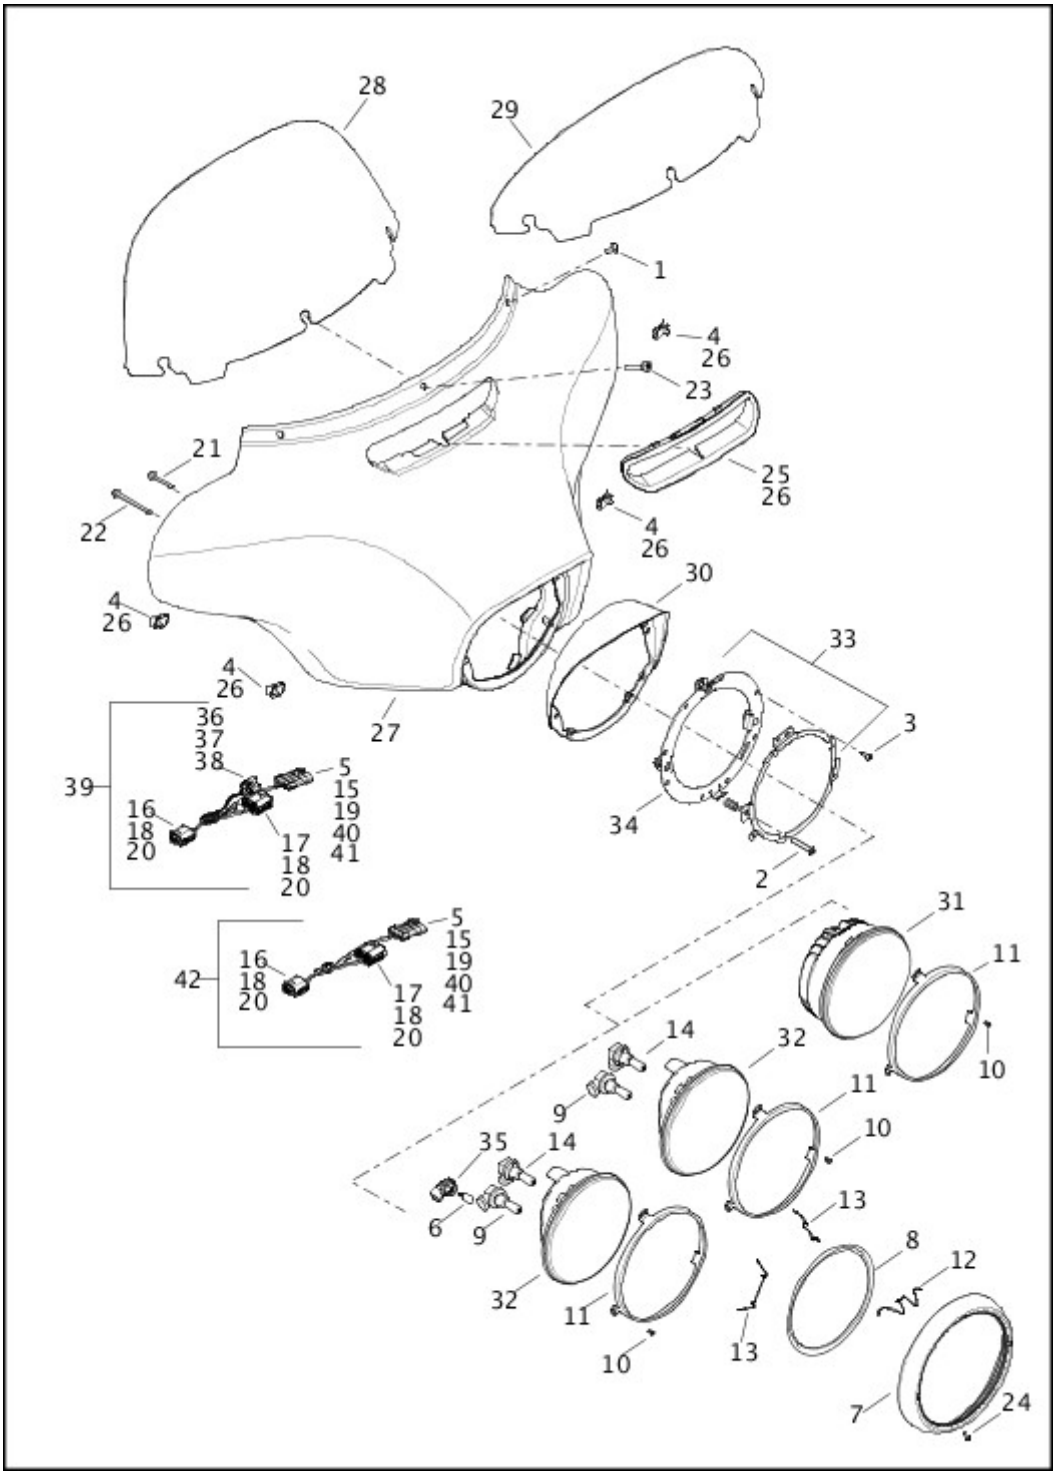

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	57000377	KIT, HARDWARE, fairing, with 7900 and 29200007	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
27	57000383	FAIRING, outer, with 57000377 (unfinished)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
28	57400001	WINDSHIELD (clear) (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE
28	57400001	WINDSHIELD (clear) (Brazil, Australia)	FLHTK, FLHTK SHRINE
28	57400002	WINDSHIELD (clear) (HDI, England, Japan)	FLHTK, FLHTK SHRINE
28	57400250	WINDSHIELD (clear) (Domestic, HDI, England, Japan)	FLHTKL
28	57400250	WINDSHIELD (clear) (HDI)	FLHT
28	57400441	WINDSHIELD (clear) (Domestic, Australia)	FLHT
29	57400003	WIND DEFLECTOR (smoked) (Domestic)	FLHX, FLHXS
29	57400003	WIND DEFLECTOR (smoked) (Australia)	FLHX, FLHXS
29	57400004	WIND DEFLECTOR (smoked) (HDI, England, Japan)	FLHX, FLHXS
29	57400058	WIND DEFLECTOR (clear) (Asia-Pacific)	FLHTK, FLHTK SHRINE, FLHTKL, FLHXS
30	61400135	TRIM, headlamp	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
31	67700060	HEADLAMP, LED, with 67721-48, 67726-08 and 67700204	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
32	67700062	HEADLAMP ASSEMBLY, dual halogen, with 67717-01 and 68881-01 (Domestic)	FLHT, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
32	67700065	HEADLAMP ASSEMBLY, dual halogen, with 53436-97, 67717-01, 68881-01 and 68000038 (HDI)	FLHT, FLHX, FLHXS
33	67700204	MOUNTING RING ASSEMBLY, headlamp, with 3088 and 67700205	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
34	67700205	MOUNTING RING, headlamp	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
35	68000038	CONNECTOR, position lamp, 90 degree (HDI)	FLHT, FLHX, FLHXS
36	69200220	HOUSING, two-way socket (black) (HDI)	FLHT, FLHX, FLHXS
37	69200221	TERMINAL, socket, 18-20 AWG (HDI) *(2)*	FLHT, FLHX, FLHXS
38	69200222	WIRE SEAL, 16 AWG (green) (HDI) *(2)*	FLHT, FLHX, FLHXS
39	69200223	WIRE HARNESS, dual halogen headlamp, with 5, 15, 16, 17, 18, 19, 20, 36, 37, 38, 40 and 41 (HDI)	FLHT, FLHX, FLHXS
40	69200255	HOUSING, four-way pin	FLHT, FLHX, FLHXS
41	69200256	SECONDARY LOCK, four-way socket	FLHT, FLHX, FLHXS
42	69200298	WIRE HARNESS, dual halogen headlamp, with 5, 15, 16, 17, 18, 19, 20, 40 and 41 (Domestic)	FLHT, FLHX, FLHXS

WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)

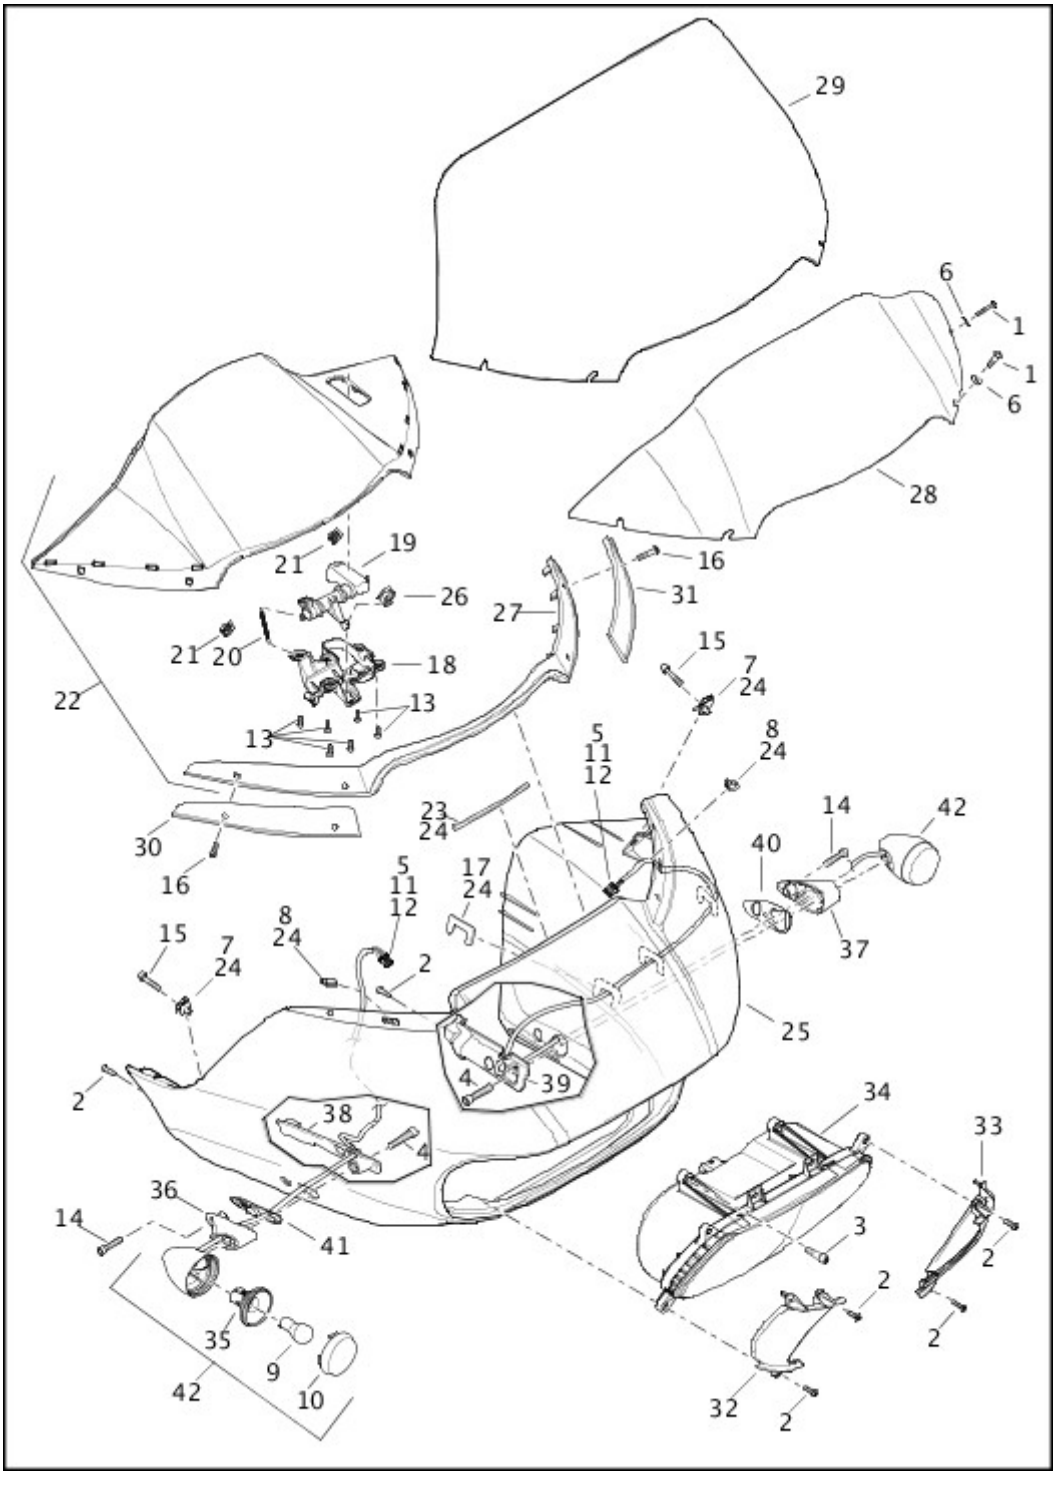

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	933	SCREW *(4)*	FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	2563	SCREW *(6)*	FLTRU, FLTRX, FLTRXS
3	4741A	SCREW *(4)*	FLTRU, FLTRX, FLTRXS
4	4816A	SCREW *(2)*	FLTRU, FLTRX, FLTRXS
5	5118	SEAL PIN *(2)*	FLTRU, FLTRX, FLTRXS
6	6054	WASHER *(4)*	FLTRX, FLTRXS
7	7900	CLIP NUT *(2)*	FLTRU, FLTRX, FLTRXS
8	10065	CABLE STRAP *(2)*	FLTRU, FLTRX, FLTRXS
9	68168-89A	BULB (Domestic) *(2)*	FLTRU, FLTRX
9	68163-84	BULB (HDI) *(2)*	FLTRU, FLTRXS
9	69331-02	BULB (Domestic) *(2)*	FLTRXS
10	68973-00	LENS (amber) *(2)*	FLTRU, FLTRX
10	68973-00	LENS (amber) (HDI) *(2)*	FLTRXS
10	69325-02	LENS (smoked) (Domestic) *(2)*	FLTRXS
11	72908-11	HOUSING, four-way socket (black) *(2)*	FLTRU, FLTRX, FLTRXS
12	72910-11	TERMINAL, socket, 20-22 AWG (Domestic) *(6)*	FLTRU, FLTRX, FLTRXS
12	72910-11	TERMINAL, socket, 20-22 AWG (HDI) *(4)*	FLTRU, FLTRXS
13	10200257	SCREW *(6)*	FLTRU, FLTRX, FLTRXS
14	10200350	SCREW *(2)*	FLTRU, FLTRX, FLTRXS
15	10200365	SCREW *(2)*	FLTRU, FLTRX, FLTRXS
16	10200400	SCREW *(4)*	FLTRU
17	11100066	PAD *(6)*	FLTRU, FLTRX, FLTRXS
18	29200073	MECHANISM HOUSING	FLTRU, FLTRX, FLTRXS
19	29200075	BUTTON	FLTRU, FLTRX, FLTRXS
20	29200078	SPRING	FLTRU, FLTRX, FLTRXS
21	29200080	CLIP	FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	29200041BYM	TOP DUCT ASSEMBLY, with 13, 18, 19, 20, 21, 26 and 27 (black denim)	FLTRU, FLTRX
22	29200041DH	TOP DUCT ASSEMBLY, with 13, 18, 19, 20, 21, 26 and 27 (vivid black)	FLTRU, FLTRXS
23	29200081	FOAM PAD, top duct	FLTRU, FLTRX, FLTRXS
24	57000501	HARDWARE KIT, fairing, with 7900, 10065, 11100066 and 29200081	FLTRU, FLTRX, FLTRXS
25	57000504	FAIRING KIT, front, with 57000501 (unpainted)	FLTRU, FLTRX, FLTRXS
26	57100167	DOOR LATCH	FLTRU, FLTRX, FLTRXS
27	57400187	GASKET	FLTRU, FLTRX, FLTRXS

WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)

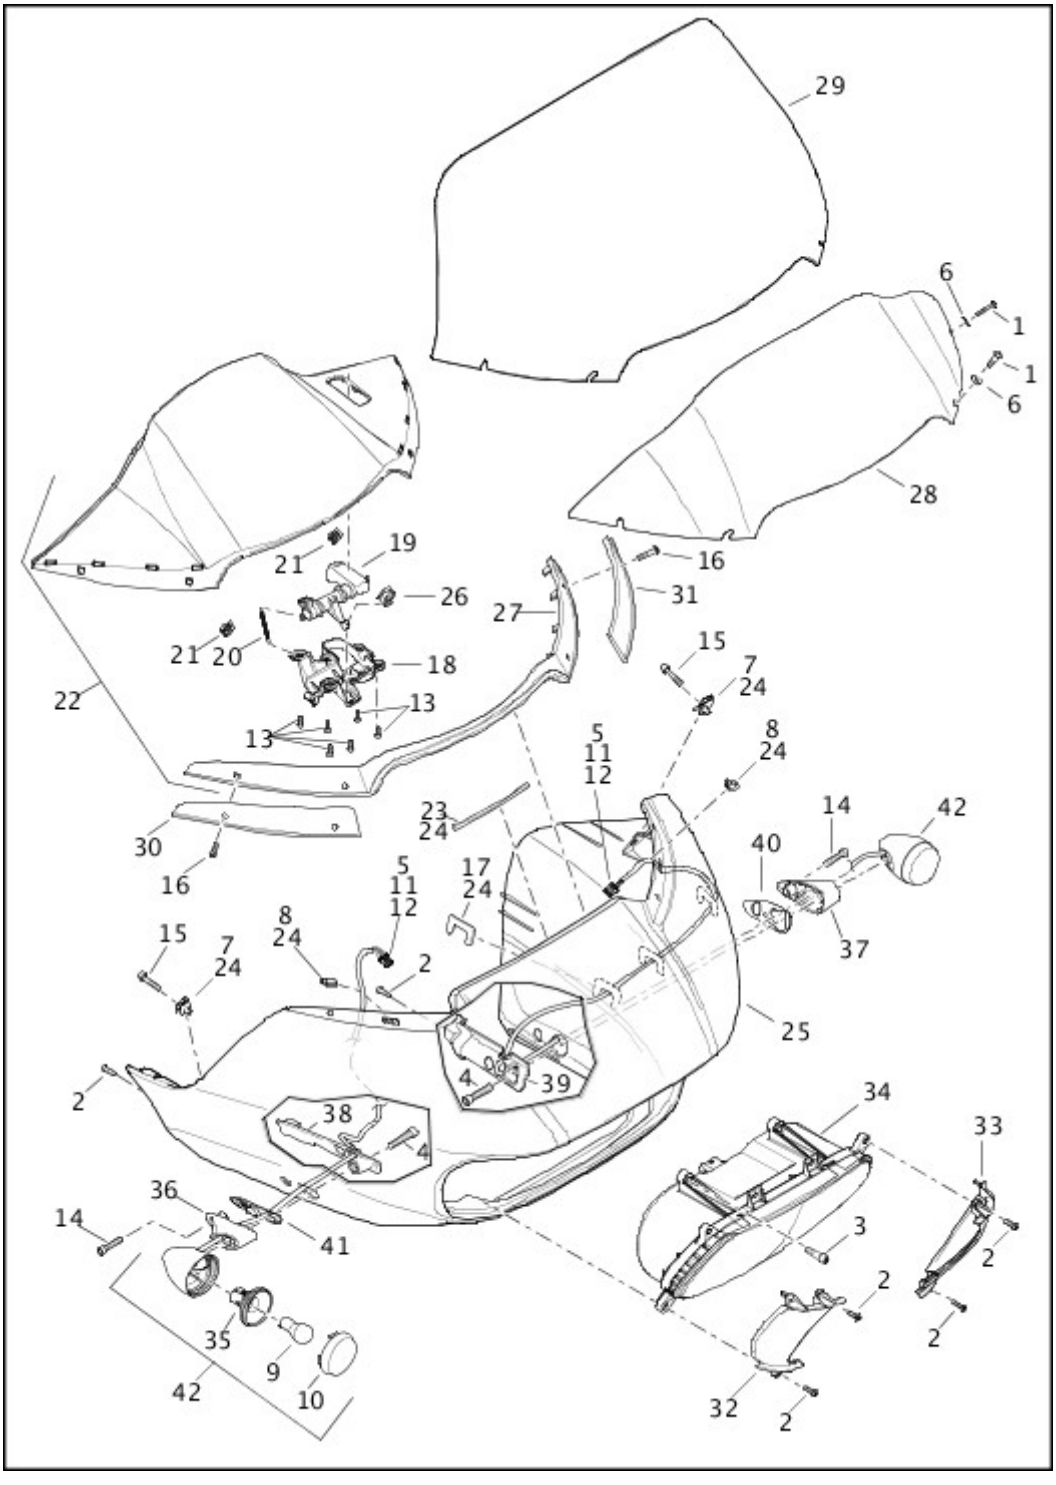

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	57400191	WINDSHIELD KIT, with 933 and 6054 (dark smoke) (HDI, England, Japan, Asia-Pacific)	FLTRXS
28	57400302	WINDSHIELD (dark smoke) (Domestic, Australia, Brazil)	FLTRX, FLTRXS
29	57400260	WINDSHIELD (clear) (Asia-Pacific)	FLTRU
29	57400262	WINDSHIELD (clear) (HDI, England, Japan)	FLTRU
29	57400305	WINDSHIELD (clear) (Domestic, Brazil)	FLTRU
30	57400308	TRIM, right (black)	FLTRU
31	57400309	TRIM, left (black)	FLTRU
32	61400173	BEZEL (right) (prime)	FLTRU, FLTRX, FLTRXS
33	61400198	BEZEL (left) (prime)	FLTRU, FLTRX, FLTRXS
34	67700199	HEADLAMP	FLTRU, FLTRX, FLTRXS
35	67800147	SOCKET ASSEMBLY, turn signal (Domestic) *(2)*	FLTRU, FLTRX
35	67800148	SOCKET ASSEMBLY, turn signal (HDI) *(2)*	FLTRU
35	68904-00	SOCKET ASSEMBLY, turn signal (Domestic) *(2)*	FLTRXS
36	67800299	TURN SIGNAL MOUNT (right)	FLTRU, FLTRX
36	67800703	TURN SIGNAL MOUNT (right)	FLTRXS
37	67800300	TURN SIGNAL MOUNT (left)	FLTRU, FLTRX
37	67800704	TURN SIGNAL MOUNT (left)	FLTRXS
38	67800301	MOUNT, turn signal (right)	FLTRU, FLTRX, FLTRXS
39	67800302	MOUNT, turn signal (left)	FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
40	67800303	GASKET (left)	FLTRU, FLTRX, FLTRXS
41	67800471	GASKET (right)	FLTRU, FLTRX, FLTRXS
42	67800512	TURN SIGNAL, front, with 68168-89A, 68973-00 and 67800147 (Domestic) *(2)*	FLTRU, FLTRX
42	67800513	TURN SIGNAL, front, with 68163-84, 68973-00 and 67800148 (HDI) *(2)*	FLTRU, FLTRX
42	67800906	TURN SIGNAL, front, with 68904-00, 69325-02 and 69331-02 (Domestic) *(2)*	FLTRXS
42	67800908	TURN SIGNAL, front, with 68163-84, 68976-00 and socket assembly (HDI) *(2)*	FLTRXS

FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)

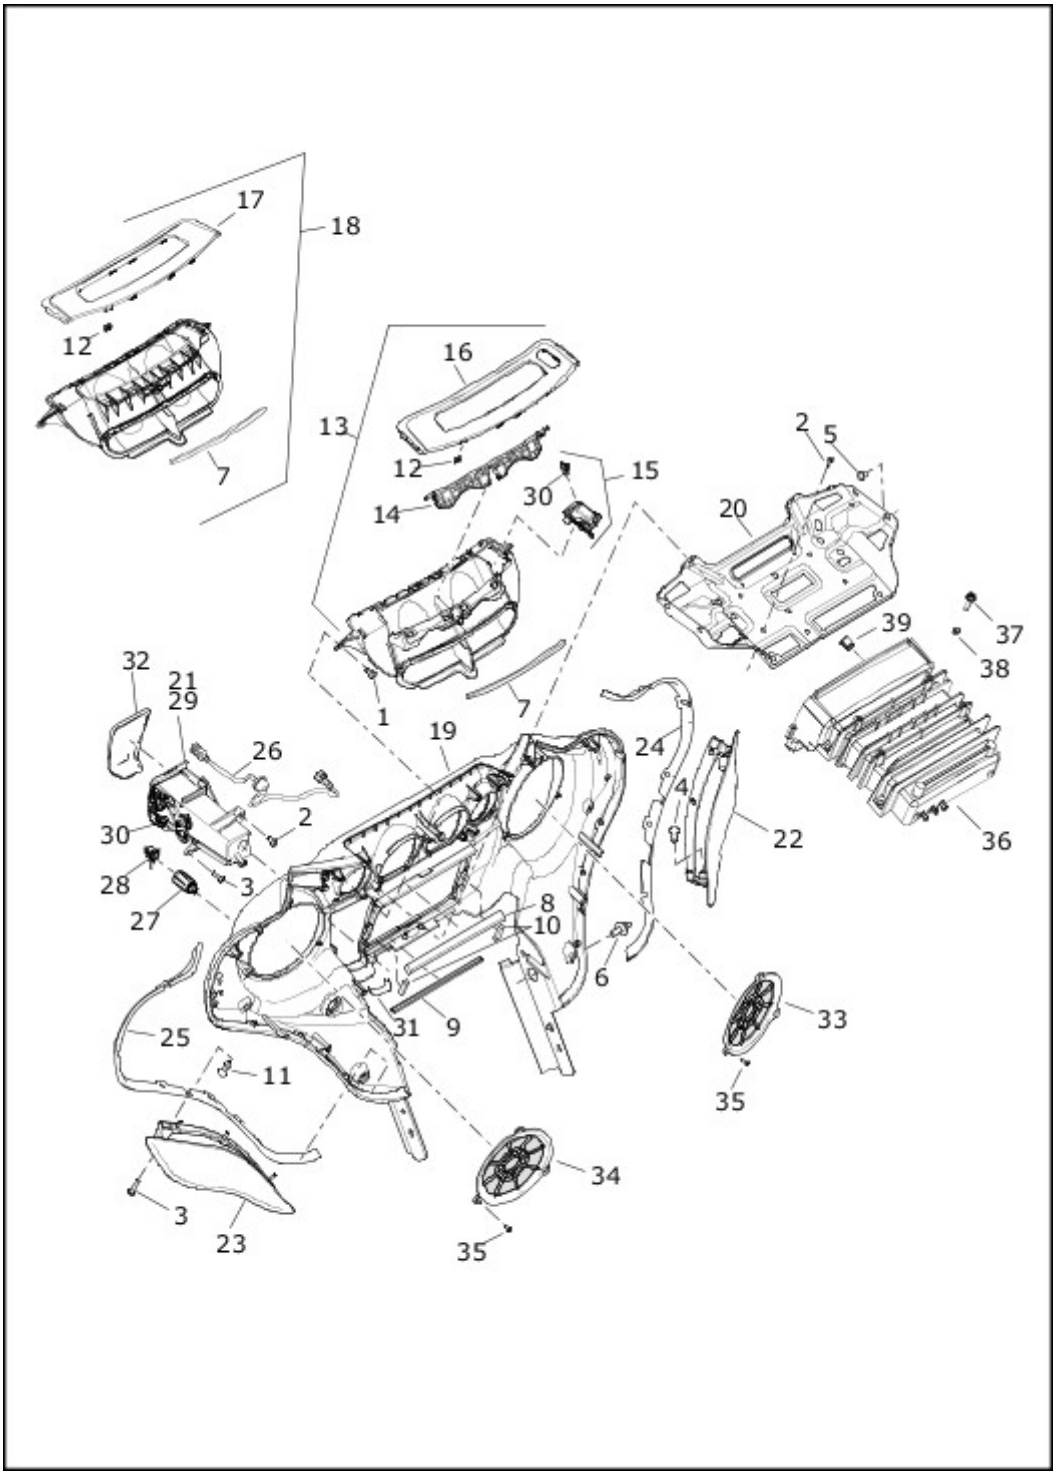

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2445	SCREW *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
2	2478	SCREW *(5)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
3	2563	SCREW	FLHX, FLHXS
3	2563	SCREW *(7)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
4	57638-08	SNAP HINGE, air deflector *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
5	10200141	SCREW *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
6	10900005	STUD, double sided *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
7	11100038	FOAM TAPE	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
8	11100050	FOAM TAPE	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
9	11100051	FOAM TAPE	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
10	11100057	FOAM TAPE *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
11	12100034	PLUG, air deflector hole *(6)*	FLHT, FLHX, FLHXS
12	12200064	CLIP, panel *(10)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
13	29200003	AIR DUCT, inner fairing, with 7, 12, 14, 15, 16 and 28	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
14	29200034	DOOR, top duct	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	29200035	BUTTON ASSEMBLY, top duct, with 76000127	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
16	29200039	BEZEL, air duct,inner fairing, with 12200064	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
17	29200087	BEZEL, air duct, inner fairing, with 12200064	FLHT
18	29200088	AIR DUCT, inner fairing, with 11100038 and 29200087	FLHT

FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)

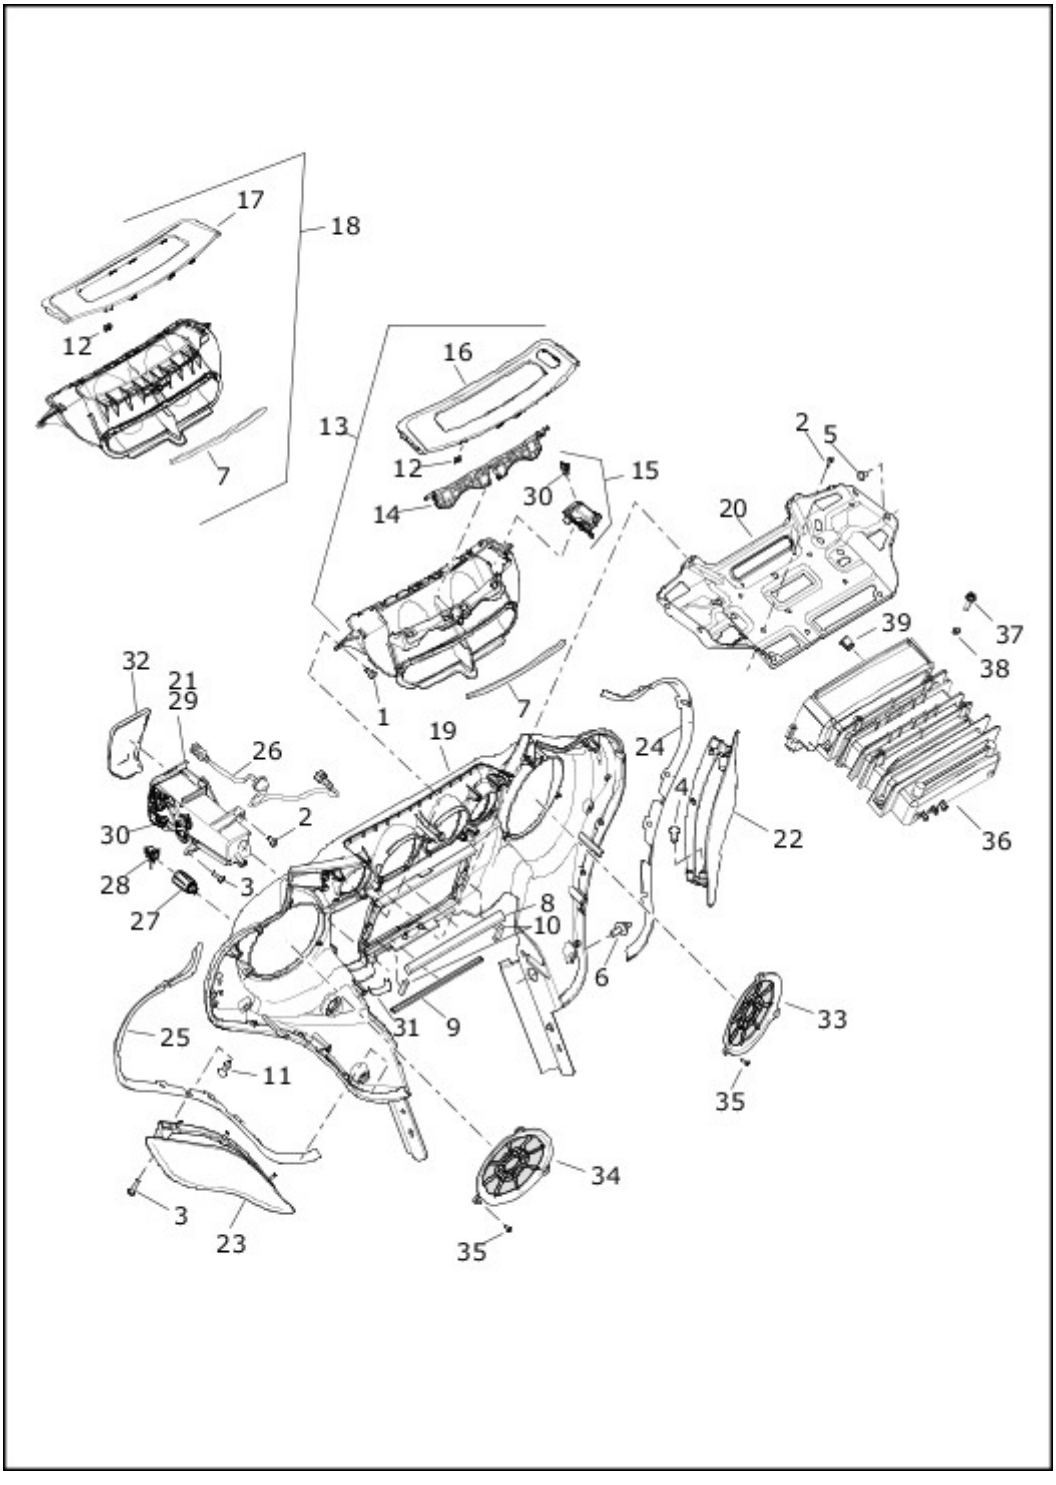

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	57000064BYM	INNER FAIRING ASSEMBLY, with 11100050, 11100051, 11100057, 61400063, 61400064 and 76000234 (satin black)	FLHTCU
19	57000064DH	INNER FAIRING ASSEMBLY, with 11100050, 11100051, 11100057, 61400063, 61400064 and 76000234 (gloss black)	FLHTK, FLHTK SHRINE, FLHTKL
19	57000065BYM	INNER FAIRING ASSEMBLY, with 11100050, 11100051, 11100057, 61400063, 61400064 and 76000234 (satin black)	FLHT, FLHX
19	57000065DH	INNER FAIRING ASSEMBLY, with 11100050, 11100051, 11100057, 61400063, 61400064 and 76000234 (gloss black)	FLHXS
20	57000186	BRACKET, support, inner fairing	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
21	57000299	FOAM INSERT, media compartment	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
22	57200012	AIR DEFLECTOR, with 57638-08 (left)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
23	57200017	AIR DEFLECTOR, with 57638-08 (right)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
24	61400063	TRIM, inner fairing (left)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
25	61400064	TRIM, inner fairing (right)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
26	69200031A	WIRE HARNESS, USB jumper	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	69200170	POWER OUTLET, fairing, with 69200171	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
28	69200171	CAP, power outlet	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
29	76000107A	MEDIA COMPARTMENT ASSEMBLY, with 57000299, 69200031A and 76000127	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
29	76000944	MEDIA COMPARTMENT ASSEMBLY, with 76000127	FLHT
30	76000127	LATCH *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
31	76000234	GASKET, media storage	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
32	76000409BYM	DOOR, media compartment, outer (black denim)	FLHT, FLHTCU, FLHX
32	76000409DH	DOOR, media compartment, outer (gloss black)	FLHTK, FLHTK SHRINE, FLHTKL, FLHXS
33	76000055	SPEAKER GRILLE	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX
33	76000322	SPEAKER GRILLE (left) (not shown)	FLHX, FLHXS
34	76000055	SPEAKER GRILLE	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX
34	76000321	SPEAKER GRILLE (right) (not shown)	FLHX, FLHXS
35	10500017	SCREW *(6)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
36	76000187	GLOVEBOX, with 12600070 and 12600071	FLHT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	12600070	BOLT *(4)*	FLHT
38	12600071	RETAINER *(4)*	FLHT
39	12100154	PLUG	FLHT

FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)

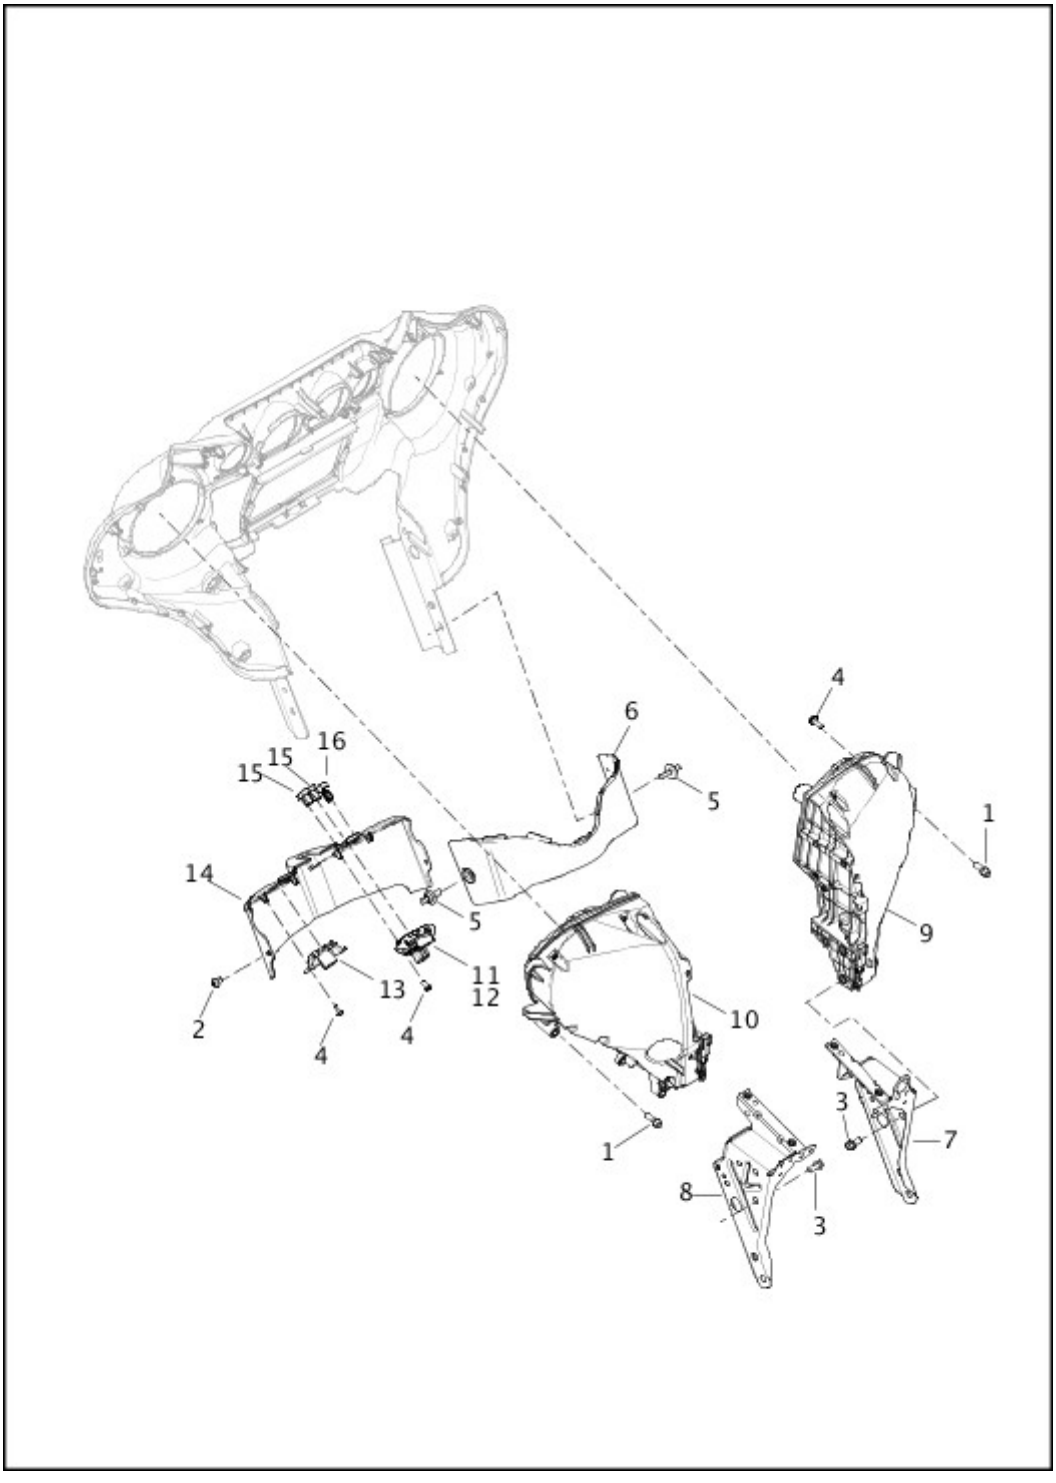

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	10200134	SCREW *(6)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
2	10200141	SCREW *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
3	10200142	SCREW *(6)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
4	10200205	SCREW *(12)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
5	10900005	STUD, double sided *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
6	57000017	SKIRT, outer fairing (chrome)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX
6	57100227	SKIRT, outer fairing (gloss black)	FLHXS
7	57000169A	BRACKET, fairing support (left)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
8	57000170	BRACKET, fairing support (right)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
9	57000172	SPEAKER ENCLOSURE ASSEMBLY (left)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
10	57000175	SPEAKER ENCLOSURE ASSEMBLY (right)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
11	69200172	SWITCH ASSEMBLY, auxiliary/fog lamps, with 69200173, 71400031 and 71400044	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
12	69200173	SWITCH	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
13	70900138	HOLE PLUG, fairing cap	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	70900138	HOLE PLUG, fairing cap *(2)*	FLHT, FLHX, FLHXS
14	70900392BYM	DASH PANEL, fairing (black denim)	FLHT, FLHTCU, FLHX
14	70900392DH	DASH PANEL, fairing (gloss black)	FLHTK, FLHTK SHRINE, FLHTKL, FLHXS
15	71400031	SWITCH BUTTON, blank *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
16	71400044	SWITCH, auxiliary/fog lamps	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL

FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)

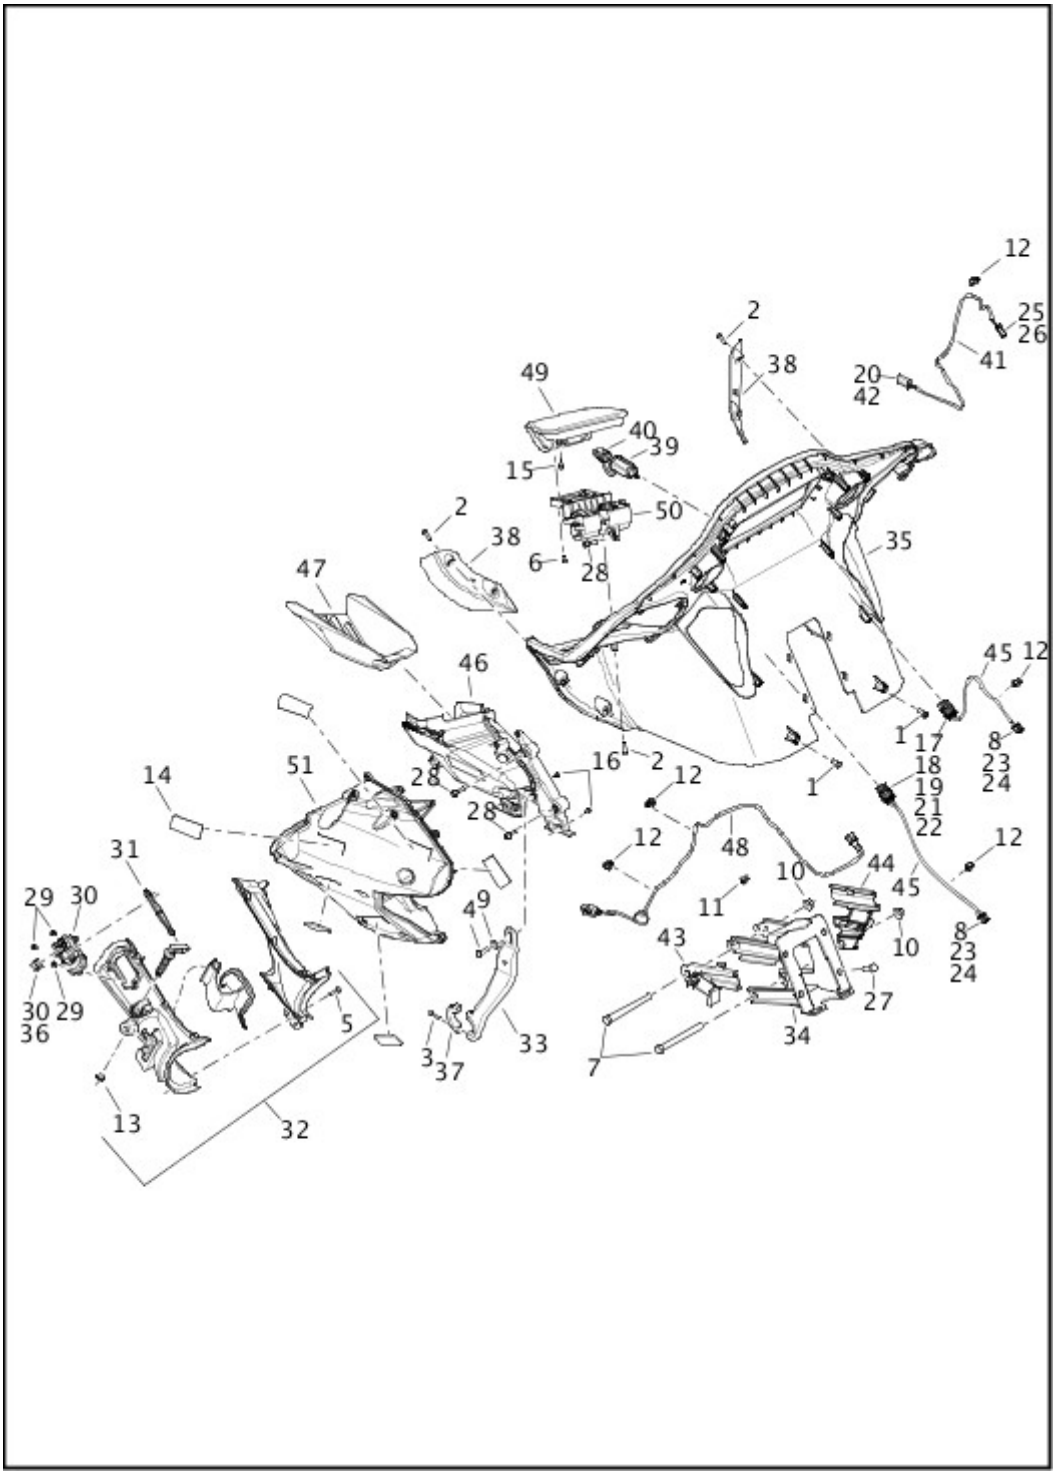

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1062	SCREW *(4)*	FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	2563	SCREW *(14)*	FLTRU, FLTRX, FLTRXS
3	2647B	SCREW *(4)*	FLTRU, FLTRX
3	10200349	SCREW (black) *(4)*	FLTRXS
4	3787	BOLT *(2)*	FLTRU, FLTRX, FLTRXS
5	4612	SCREW *(10)*	FLTRU, FLTRX, FLTRXS
6	4694	SCREW *(8)*	FLTRU, FLTRX, FLTRXS
7	4706	SCREW *(2)*	FLTRU, FLTRX, FLTRXS
8	5118	SEAL PIN *(2)*	FLTRU, FLTRX, FLTRXS
9	6703	WASHER *(2)*	FLTRU, FLTRX, FLTRXS
10	7601	LOCKNUT *(2)*	FLTRU, FLTRX, FLTRXS
11	10065	CABLE STRAP	FLTRU, FLTRX, FLTRXS
12	10177	CABLE STRAP *(4)*	FLTRU, FLTRX, FLTRXS
13	11036	RETAINING RING *(2)*	FLTRU, FLTRX, FLTRXS
14	11668	FOAM PAD *(10)*	FLTRU, FLTRX, FLTRXS
15	58888-98A	BUMPER, fairing door *(4)*	FLTRU, FLTRX, FLTRXS
16	61313-88	BUMPER *(4)*	FLTRU, FLTRX, FLTRXS
17	72066-06A	HOUSING, four-way socket (black) *(2)*	FLTRU, FLTRX, FLTRXS
18	72097-06	SEAL PIN, orange *(2)*	FLTRU, FLTRX, FLTRXS
19	72135-06	SECONDARY LOCK, four-way socket *(2)*	FLTRU, FLTRX, FLTRXS
20	72264-94	TERMINAL, 18-20 AWG *(2)*	FLTRU, FLTRX, FLTRXS
21	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLTRU, FLTRX, FLTRXS
22	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLTRU, FLTRX, FLTRXS
23	72908-11	HOUSING, four-way socket (black) *(2)*	FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
24	72910-11	TERMINAL, socket, 20-22 AWG *(6)*	FLTRU, FLTRX, FLTRXS
25	73152-96BK	HOUSING, two-way socket (black)	FLTRU, FLTRX, FLTRXS
26	73191-96	TERMINAL, socket, 16-20 AWG *(2)*	FLTRU, FLTRX, FLTRXS
27	10200120	SCREW *(4)*	FLTRU, FLTRX, FLTRXS
28	10200134	SCREW *(14)*	FLTRU, FLTRX, FLTRXS
29	10500017	SCREW *(6)*	FLTRU, FLTRX, FLTRXS
30	29200061	BUTTON ASSEMBLY, with 57100167 (right)	FLTRU, FLTRX, FLTRXS
30	29200062	BUTTON ASSEMBLY, with 57100167 (left) (not shown)	FLTRU, FLTRX, FLTRXS
31	29200063	ROD, linkage *(2)*	FLTRU, FLTRX, FLTRXS
32	29200071	AIR DUCT ASSEMBLY, with 5, 13, 29, 30 and 31 (right)	FLTRU, FLTRX, FLTRXS
32	29200072	AIR DUCT ASSEMBLY, with 5, 13, 29, 30 and 31 (left) (not shown)	FLTRU, FLTRX, FLTRXS
33	47200262	BRACKET (right)	FLTRU, FLTRX
33	47200261	BRACKET (left) (not shown)	FLTRU, FLTRX
33	47200278	BRACKET KIT, with 10200349, 47200281 and brackets	FLTRXS
34	47200266	BRACKET, inner fairing mount	FLTRU, FLTRX, FLTRXS

FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)

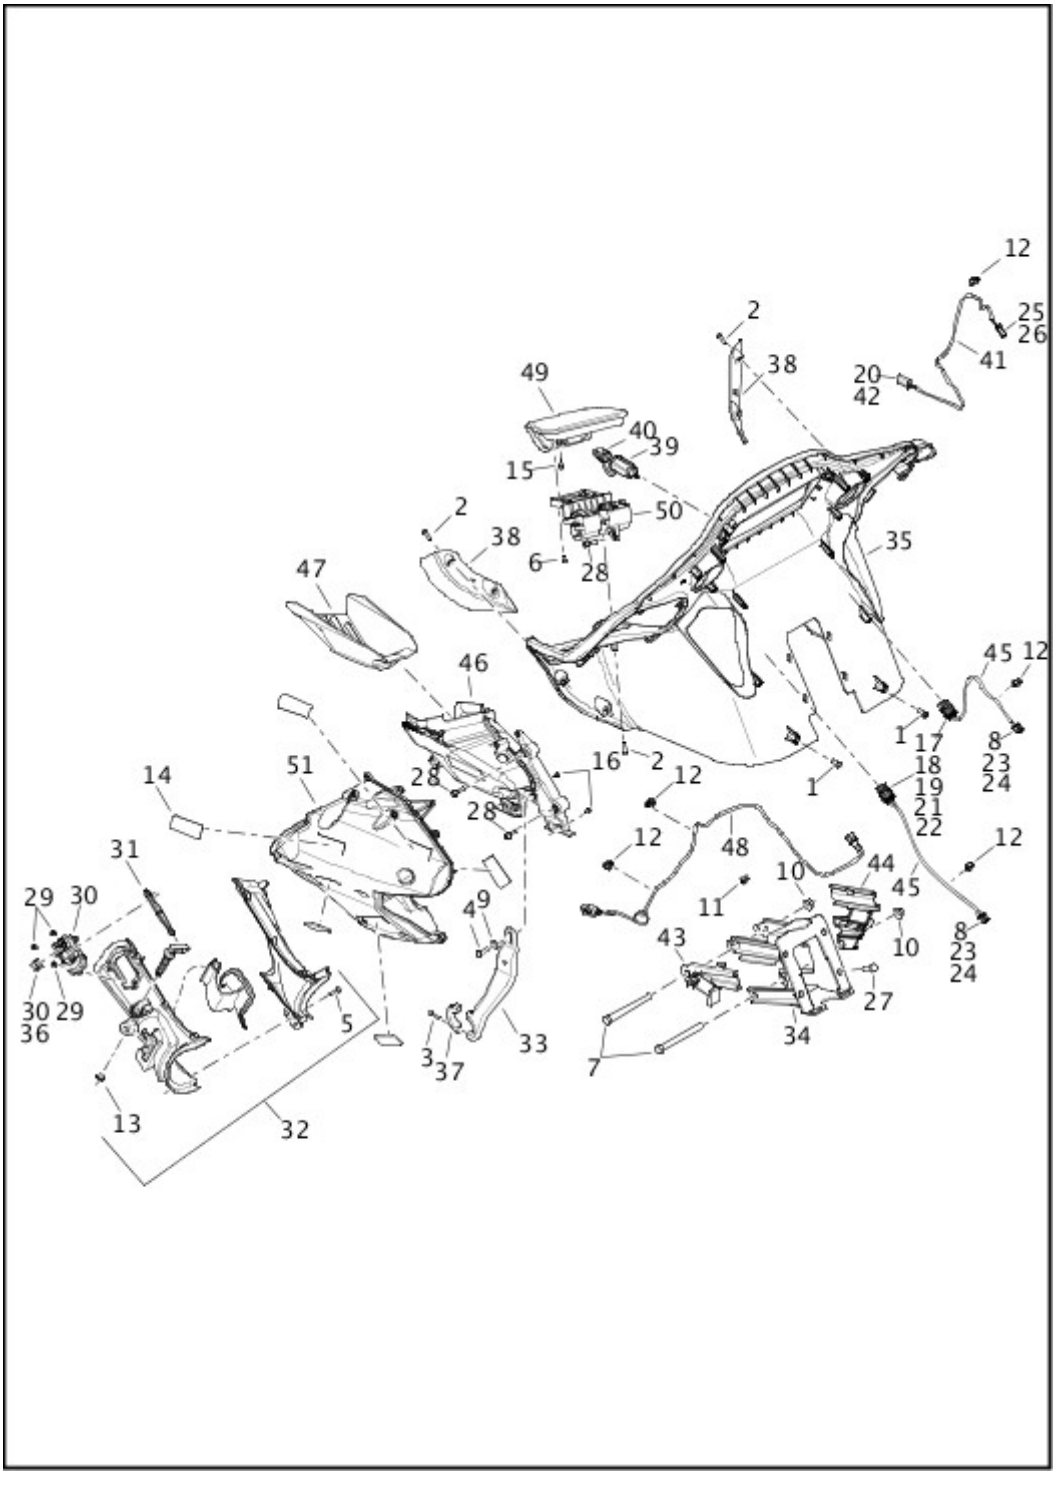

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
35	57000305	INNER FAIRING (unpainted)	FLTRU, FLTRX, FLTRXS
35	57000374BYM	INNER FAIRING (black denim)	FLTRU, FLTRXS
35	57000374DH	INNER FAIRING (vivid denim)	FLTRU, FLTRXS
36	57100167	DOOR LATCH *(2)*	FLTRU, FLTRX, FLTRXS
37	57100247	CLAMP *(2)*	FLTRU, FLTRX
37	47200281	CLAMP *(2)*	FLTRXS
38	57200063	WILLIE WING (right)	FLTRU, FLTRX, FLTRXS
38	57200064	WILLIE WING (left)	FLTRU, FLTRX, FLTRXS
39	69200170	POWER OUTLET, with 69200171	FLTRU, FLTRX, FLTRXS
40	69200171	CAP	FLTRU, FLTRX, FLTRXS
41	69200248	WIRE HARNESS, power outlet jumper, with 12, 20, 25, 26 and 42	FLTRU, FLTRX, FLTRXS
42	69200337	HOUSING, two-way socket (gray)	FLTRU, FLTRX, FLTRXS
43	69200701	GUIDE, wire harness (right)	FLTRU, FLTRX, FLTRXS
44	69200702	GUIDE, wire harness (left)	FLTRU, FLTRX, FLTRXS
45	69200753	WIRE HARNESS, gauge jumper, with 8, 12, 17, 18, 19, 21, 22, 23 and 24 *(2)*	FLTRU, FLTRX, FLTRXS
46	76000370A	MEDIA STORAGE COMPARTMENT, with 16, 47 and 48 (right)	FLTRU, FLTRX, FLTRXS
46	76000422	MEDIA STORAGE COMPARTMENT, with 16 and 47 (left) (not shown)	FLTRU, FLTRX, FLTRXS
47	76000373	LINER, media (right)	FLTRU, FLTRX, FLTRXS
47	76000425	LINER, media (left) (not shown)	FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
48	76000374A	USB CABLE ASSEMBLY	FLTRU, FLTRX, FLTRXS
49	76000376BYM	MEDIA DOOR ASSEMBLY, storage, with 15 (black denim) (right)	FLTRU, FLTRX
49	76000376DH	MEDIA DOOR ASSEMBLY, storage, with 15 (right) (vivid black)	FLTRXS
49	76000426BYM	MEDIA DOOR ASSEMBLY, storage, with 15 (left) (not shown) (black denim)	FLTRU, FLTRX
49	76000426DH	MEDIA DOOR ASSEMBLY, storage, with 15 (left) (not shown) (vivid black)	FLTRXS
50	76000398	HINGE ASSEMBLY, media storage (right)	FLTRU, FLTRX, FLTRXS
50	76000436	HINGE ASSEMBLY, media storage (left) (not shown)	FLTRU, FLTRX, FLTRXS
51	76000458	SPEAKER ENCLOSURE, with 11668 (right)	FLTRU, FLTRX, FLTRXS
51	76000460	SPEAKER ENCLOSURE, with 11668 (left) (not shown)	FLTRU, FLTRX, FLTRXS

FAIRING, LOWERS, AIR COOLED - FLHTCU

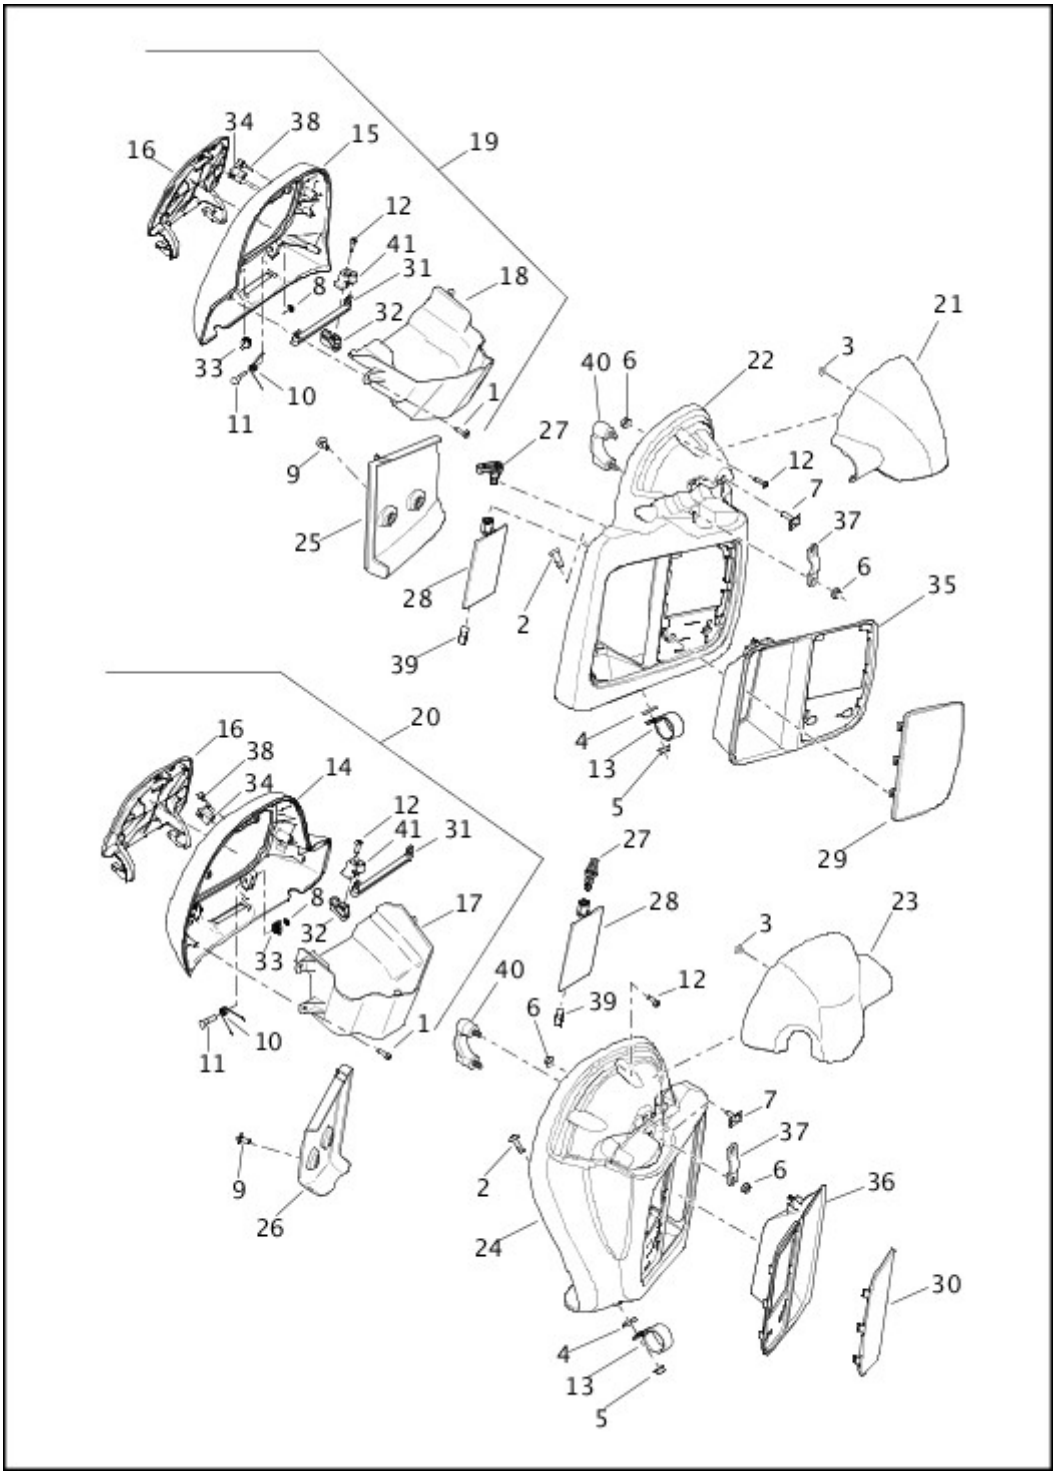

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2995	SCREW *(6)*	FLHTCU
2	3655A	SCREW *(2)*	FLHTCU
3	6235	WASHER *(2)*	FLHTCU
4	7415A	WASHER *(2)*	FLHTCU
5	7576	NUT *(2)*	FLHTCU
6	7716	LOCKNUT *(6)*	FLHTCU
7	8175	CLIP *(2)*	FLHTCU
8	10100033	PUSH NUT *(4)*	FLHTCU
9	10200052	SCREW *(4)*	FLHTCU
10	11700005	SPRING, torsion, door *(2)*	FLHTCU
11	12000005	PIN, door hinge *(4)*	FLHTCU
12	12600049	SCREW *(8)*	FLHTCU
13	47200275	CLAMP *(2)*	FLHTCU
14	57100098	FRAME, glove box (right)	FLHTCU
15	57100101	FRAME, glove box (left)	FLHTCU
16	57100102A	DOOR, glove box *(2)*	FLHTCU
17	57100103	TRAY, glove box (right)	FLHTCU
18	57100104	TRAY, glove box (left)	FLHTCU
19	57100108A	GLOVE BOX ASSEMBLY, with 2995, 10100033, 11700005, 12000005, 12600049, 57100101, 57100102, 57100104, 57100164, 57100165, 57100166, 57100167, 57100188 and 57100225 (left)	FLHTCU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	57100110A	GLOVE BOX ASSEMBLY, with 2995, 10100033, 11700005, 12000005, 12600049, 57100098, 57100102, 57100103, 57100164, 57100165, 57100166, 57100167, 57100188 and 57100225 (right)	FLHTCU
21	57100111	CAP, fairing lower (left) (unpainted)	FLHTCU
22	57100112	FAIRING (lower) (left) (unpainted)	FLHTCU
23	57100113	CAP, fairing (lower) (right) (unpainted)	FLHTCU
24	57100114	FAIRING (lower) (right) (unpainted)	FLHTCU
25	57100149	COVER, lower fairing (left)	FLHTCU
26	57100150	COVER, lower fairing (right)	FLHTCU
27	57100154	HINGE *(2)*	FLHTCU
28	57100155	DOOR, vent *(2)*	FLHTCU
29	57100161	PLATE (lower) (left)	FLHTCU
30	57100162	PLATE (lower) (right)	FLHTCU
31	57100164	LINK, door vent *(2)*	FLHTCU
32	57100165	KNOB, door vent *(2)*	FLHTCU
33	57100166	DAMPER, door *(2)*	FLHTCU
34	57100167	LATCH, door *(2)*	FLHTCU
35	57100170	FASCIA ASSEMBLY (lower) (left)	FLHTCU
36	57100171	FASCIA ASSEMBLY (lower) (right)	FLHTCU
37	57100187	RETAINER, U-bolt *(2)*	FLHTCU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
38	57100188	BUMPER, glove box door *(4)*	FLHTCU
39	57100200	PIN, door, vent *(2)*	FLHTCU
40	57100208	CLAMP, lower fairing *(2)*	FLHTCU
41	57100225	SLIDER, door, vent *(2)*	FLHTCU

FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)

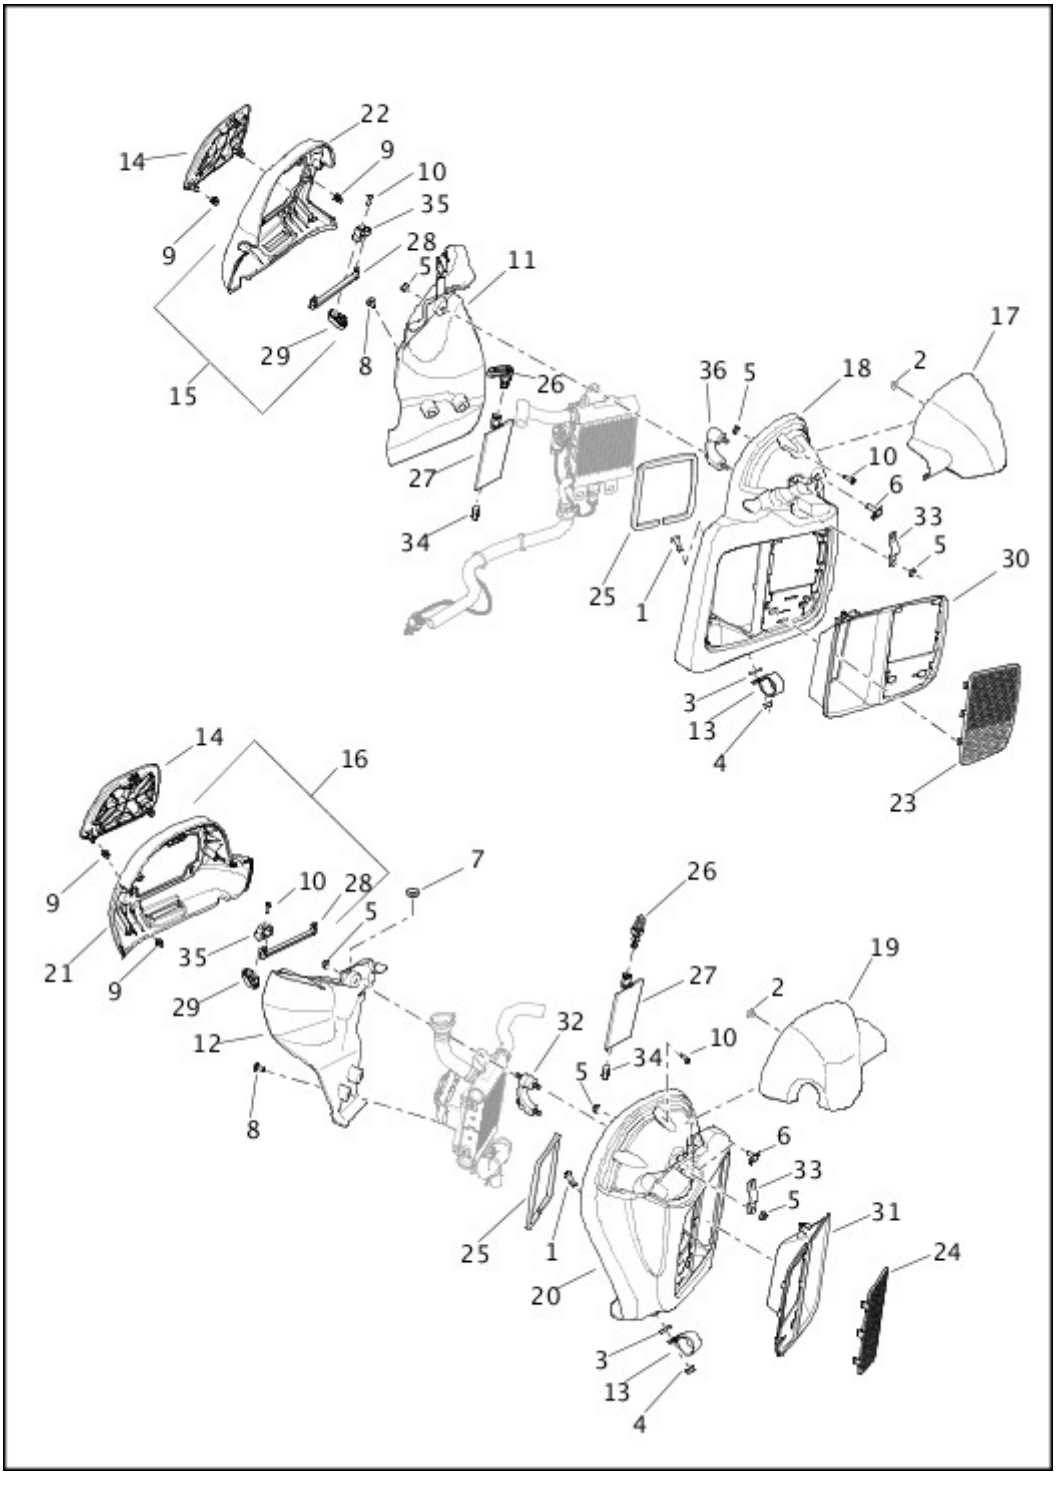

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3655A	SCREW *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	6235	WASHER *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
3	7415A	WASHER *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
4	7576	NUT *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
5	7716	LOCKNUT *(8)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	8175	BOLT, retainer *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	11519	MOUNT, rubber (right)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	10200052	SCREW *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	12200025	CLIP *(10)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
10	12600049	SCREW *(8)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
11	26800008	DUCT, radiator (left)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
12	26800009	DUCT, radiator (right)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
13	47200275	CLAMP *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
14	57100099	PANEL ASSEMBLY, glove box, with 12200025 *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
15	57100107	GLOVE BOX ASSEMBLY, with 12600049, 57100148, 57100164, 57100165 and 57100225 (left)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
16	57100109	GLOVE BOX ASSEMBLY, with 12600049, 57100147, 57100164, 57100165 and 57100225 (right)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	57100111	CAP, fairing (lower) (left) (unpainted)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
18	57100112	FAIRING (lower) (left) (unpainted)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
19	57100113	CAP, fairing (lower) (right) (unpainted)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
20	57100114	FAIRING (lower) (right) (unpainted)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)

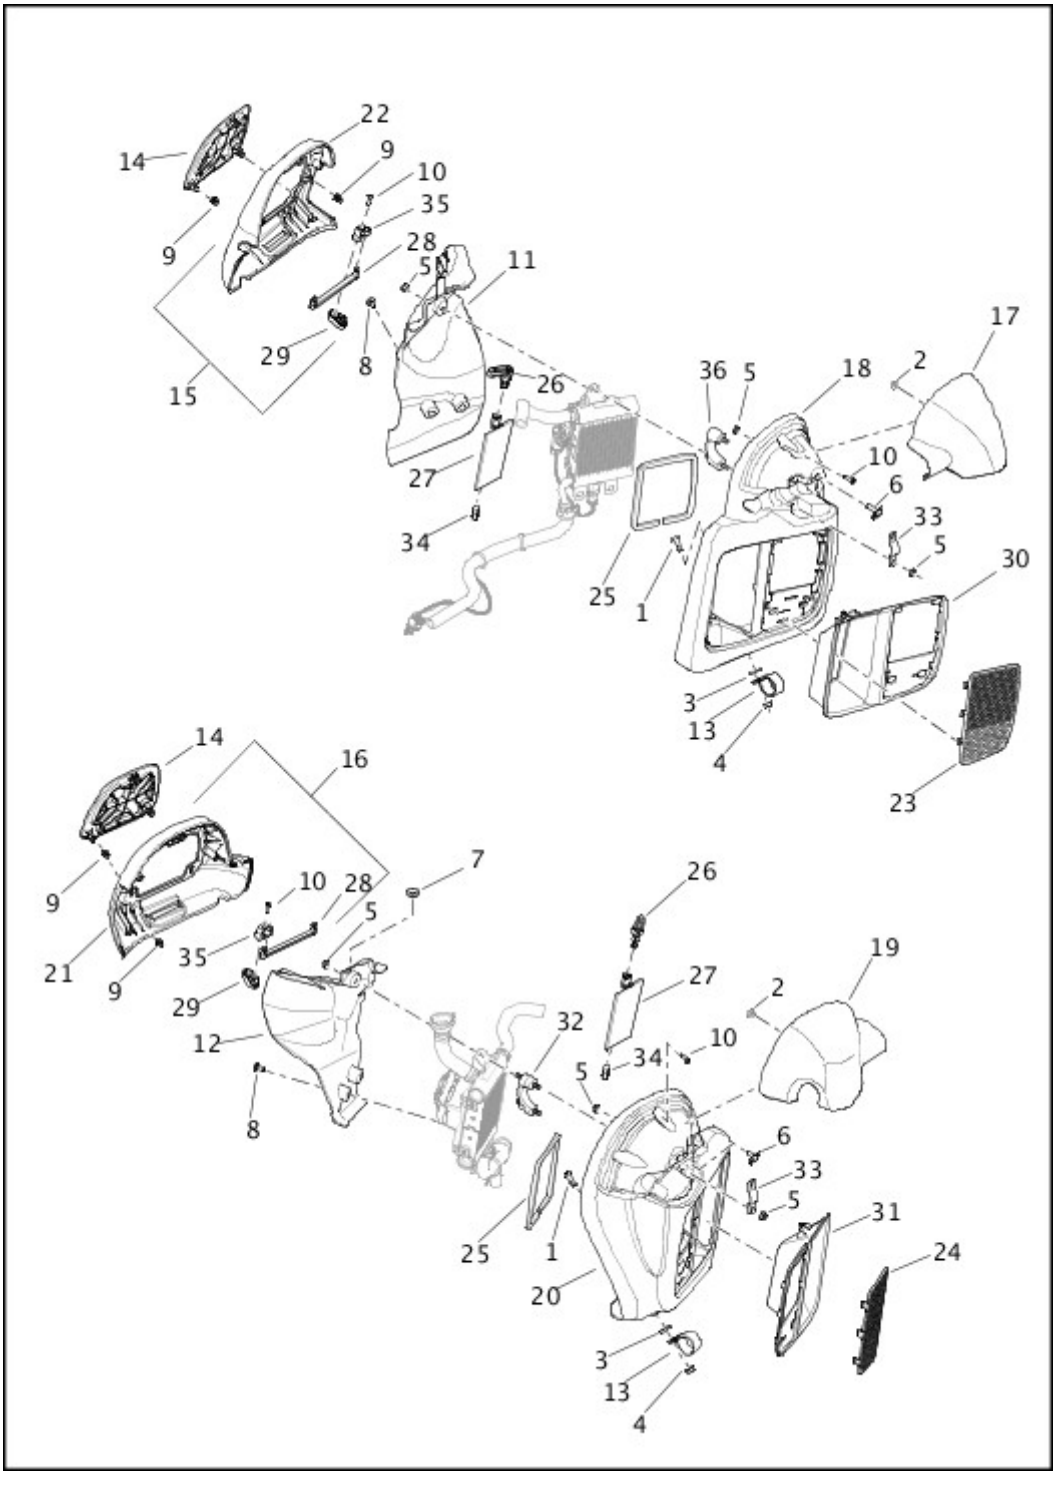


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	57100147	FRAME, glove box, with 12200025 (right)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
22	57100148	FRAME, glove box, with 12200025 (left)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
23	57100151	SCREEN, radiator (left)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
24	57100152	SCREEN, radiator (right)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
25	57100153	GASKET, radiator *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
26	57100154	HINGE *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
27	57100155	DOOR, vent *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
28	57100164	LINK, door, vent *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
29	57100165	KNOB, door, vent *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
30	57100170	FASCIA ASSEMBLY (lower) (left)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
31	57100171	FASCIA ASSEMBLY (lower) (right)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
32	57100172	CLAMP, lower fairing	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
33	57100187	RETAINER, U-bolt *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
34	57100200	PIN, door, vent *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
35	57100225	SLIDER, door, vent *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
36	57100256	CLAMP, lower fairing	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS

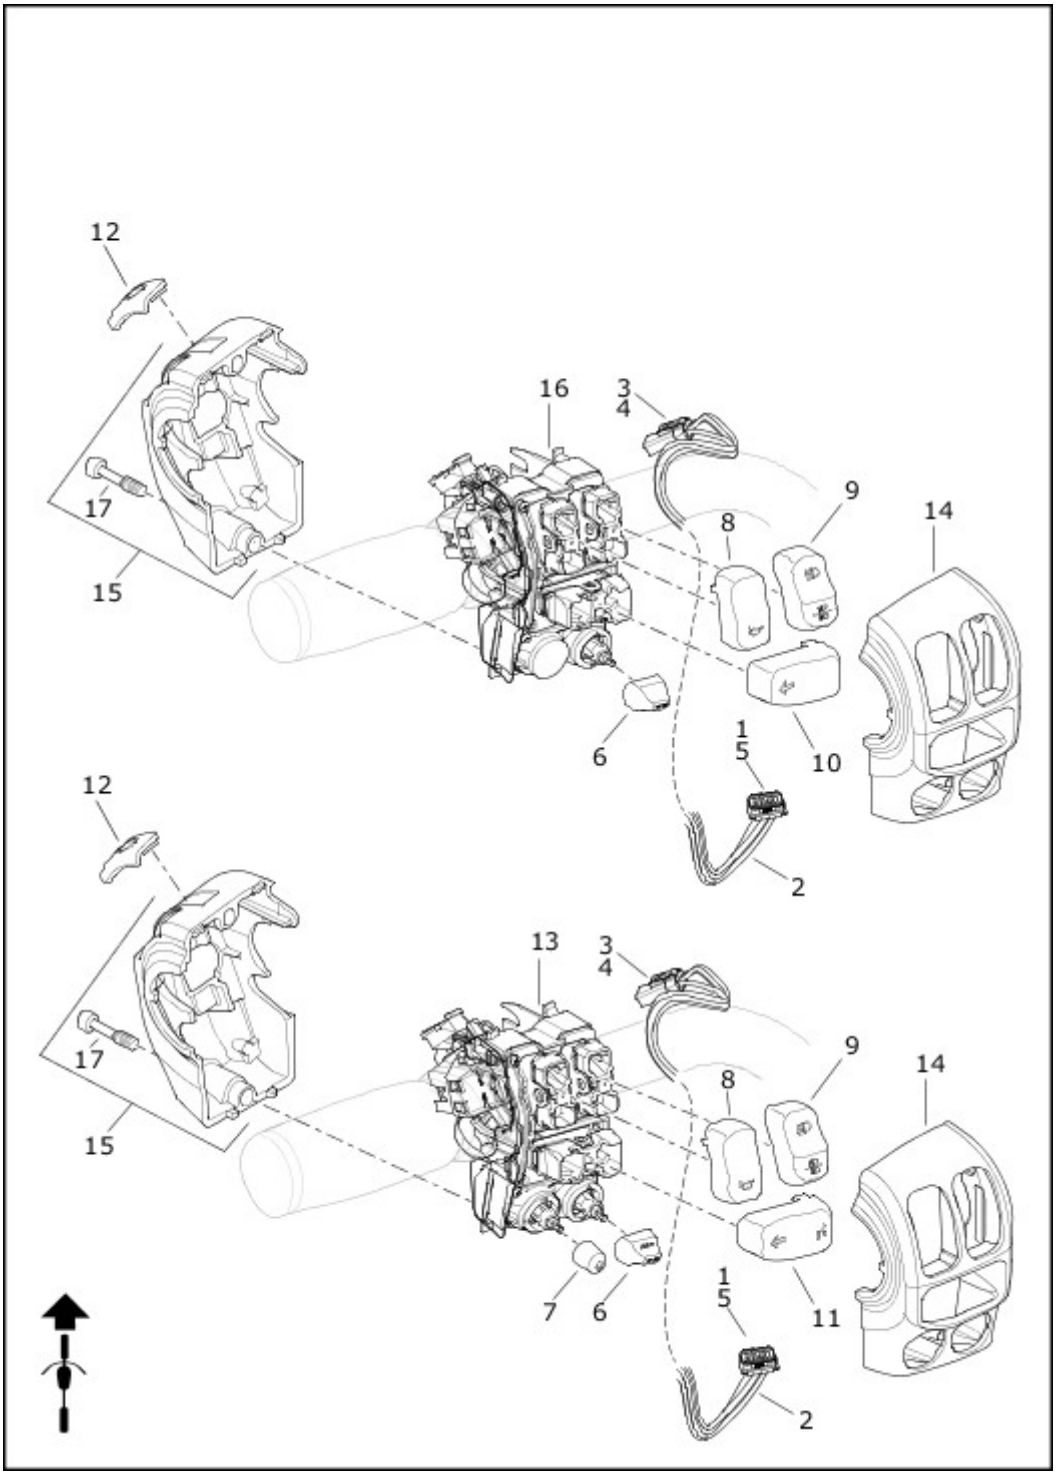

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	72908-11	HOUSING, four-way socket (black)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
2	69200178	WIRE HARNESS, left hand control jumper, with 72908-11, 69200306, 69200307 and 69200308	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRX, FLTRXS
	69200630	WIRE HARNESS, left hand control jumper, with 72908-11, 69200306, 69200307 and 69200308	FLTRU
3	69200306	SOCKET HOUSING, four-way	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
4	69200307	TERMINAL, socket, 22 AWG *(4)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
5	69200308	TERMINAL, socket, 22 AWG *(4)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	71500044	SWITCH CAP, cruise	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	71500045	SWITCH CAP, audio home	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
8	71500047	SWITCH CAP, horn	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	71500048	SWITCH CAP, lights, high beam, low beam and flash to pass	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
10	71500053	SWITCH CAP, left turn signal	FLHR, FLHRC, FLHT
11	71500055	SWITCH CAP, left turn signal and voice recognition	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
12	71500094	SWITCH CAP, trigger switch	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
13	71500128B	SWITCH PACK, left hand control, with 71500044, 71500045, 71500047, 71500048 and 71500055	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
14	71500338	COVER, front, left hand control	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
15	71500342	COVER, rear, left hand control, with 10500008	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
16	71500419A	SWITCH PACK, left hand control, with 71500044, 71500047, 71500048 and 71500053	FLHR, FLHRC, FLHT
17	10500008	SCREW *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

SWITCHES, HANDLEBAR, LEFT - FLHRXS

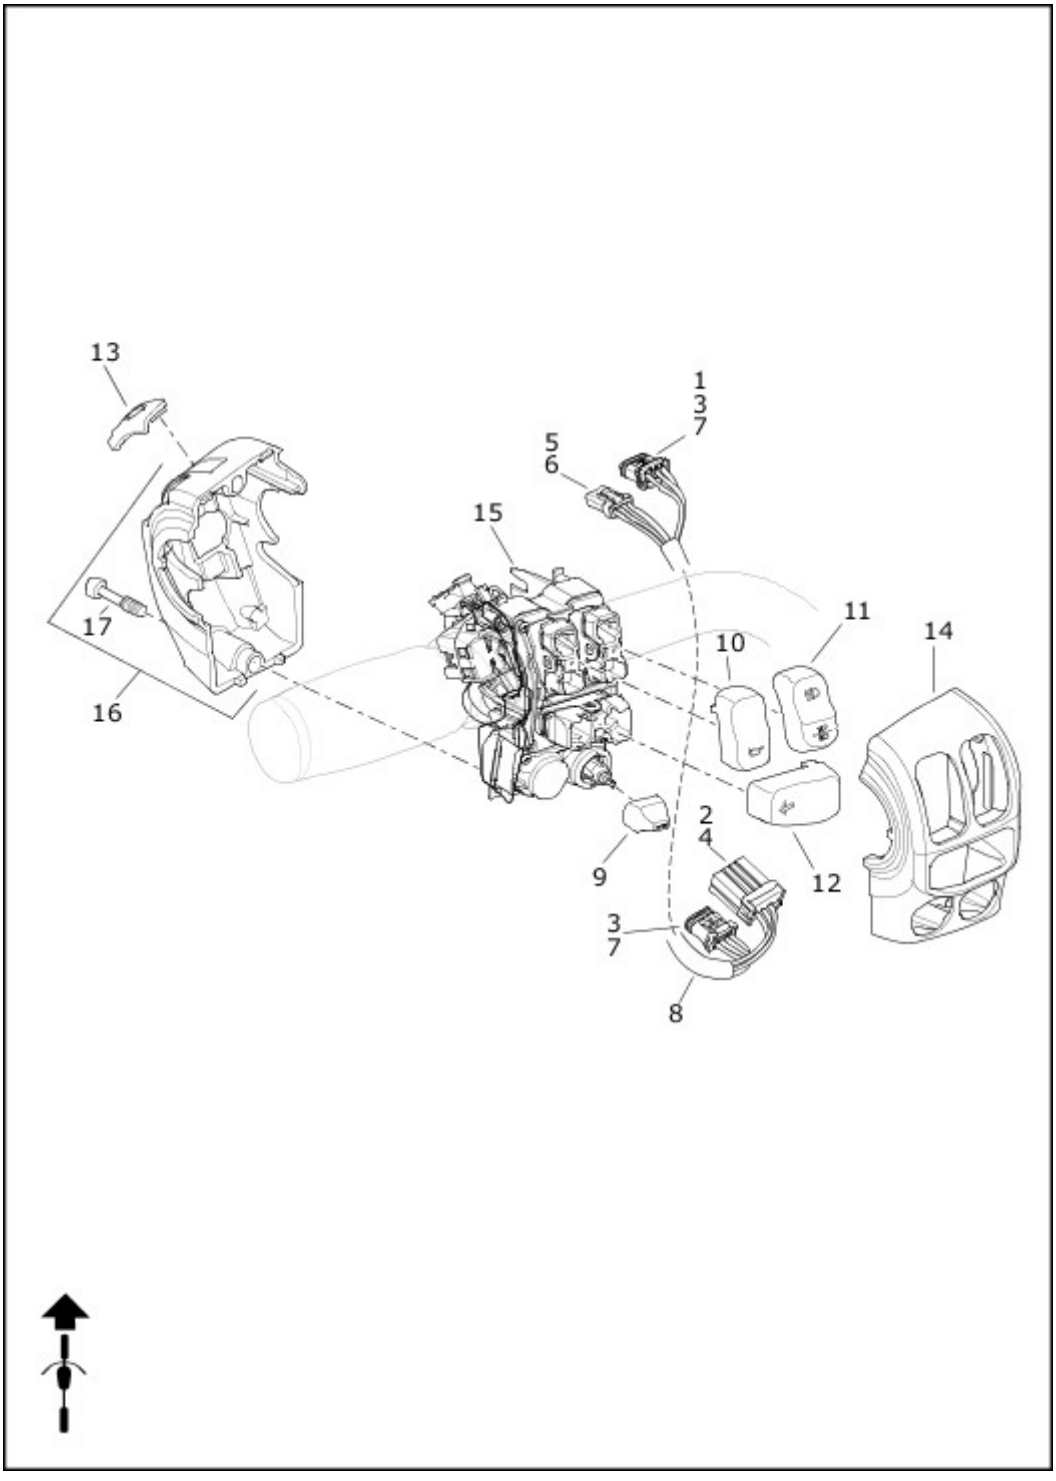


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	5118	SEAL PIN	FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	72560-07	TERMINAL, socket, 22 AWG *(3)*	FLHRXS
3	72908-11	HOUSING, four-way socket (black) *(2)*	FLHRXS
4	73154-96BK	HOUSING, four-way socket	FLHRXS
5	69200306	HOUSING, four-way socket	FLHRXS
6	69200307	TERMINAL, socket, 22 AWG *(4)*	FLHRXS
7	69200308	TERMINAL, socket, 22 AWG *(7)*	FLHRXS
8	69201723	WIRE HARNESS, left hand control jumper, with 5118, 72560-07, 72908-11, 73154-96BK, 69200306, 69200307 and 69200308	FLHRXS
9	71500044	SWITCH CAP, cruise	FLHRXS
10	71500047	SWITCH CAP, horn	FLHRXS
11	71500048	SWITCH CAP, lights, high beam, low beam and flash to pass	FLHRXS
12	71500053	SWITCH CAP, left turn signal	FLHRXS
13	71500094	SWITCH CAP, trigger switch	FLHRXS
14	71500338	COVER, front, left hand control	FLHRXS
15	71500419A	SWITCH PACK, left hand control, with 71500044, 71500047, 71500048 and 71500053	FLHRXS
16	71500473	COVER, rear, left hand control, with 10500008	FLHRXS
17	10500008	SCREW *(2)*	FLHRXS

SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2)

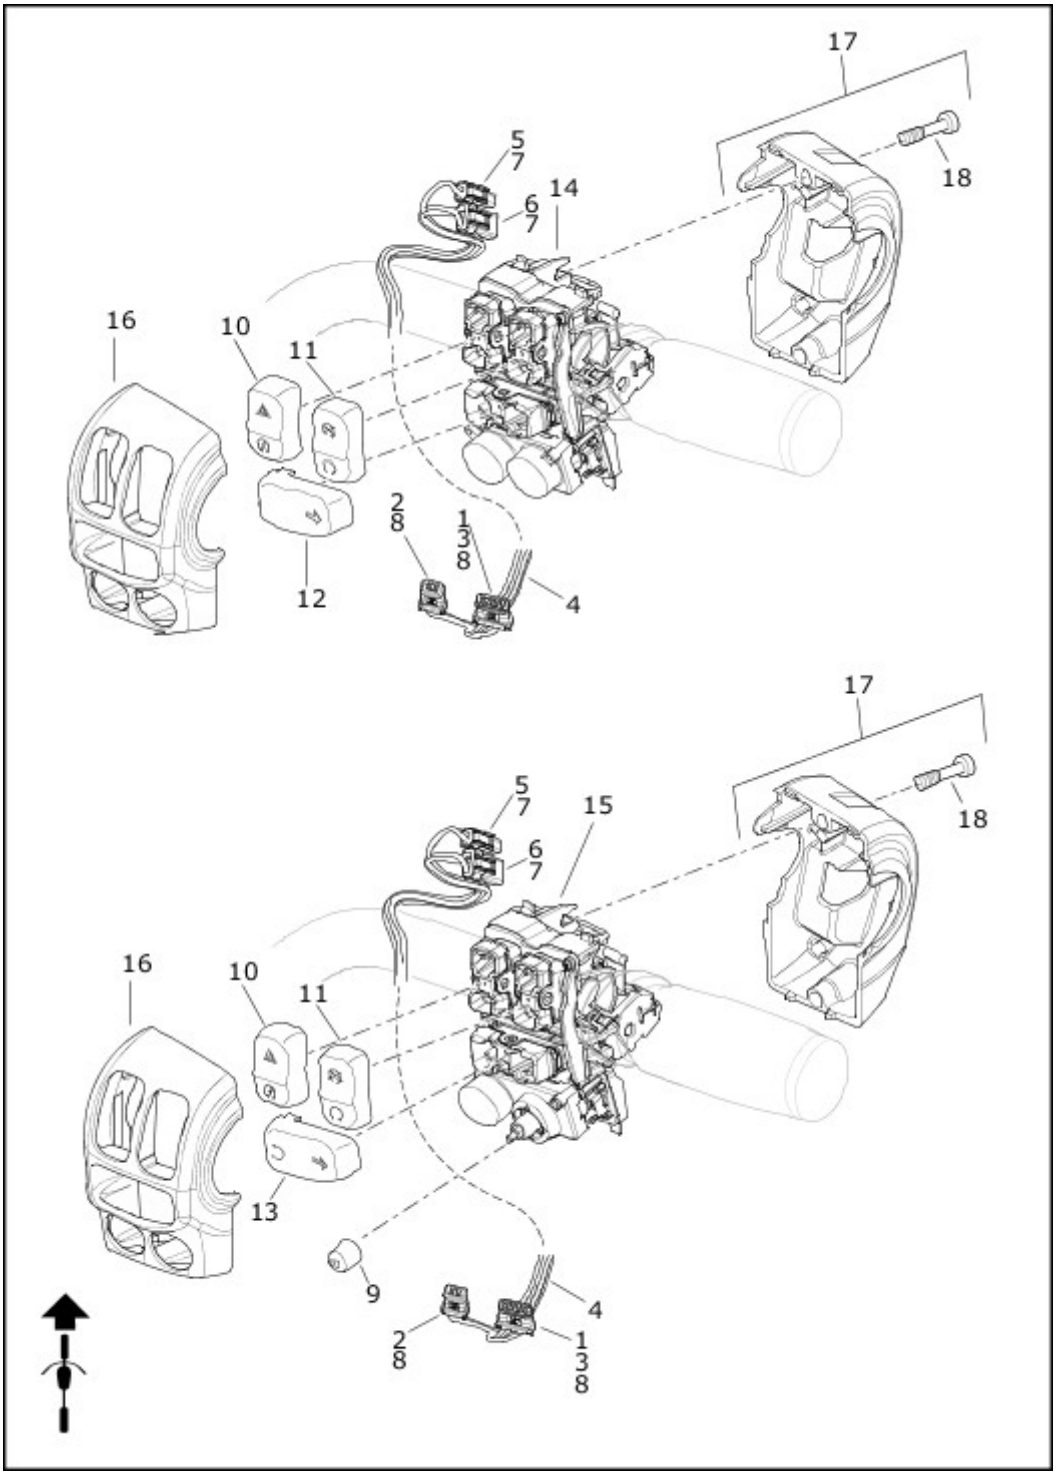


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	5118	SEAL PIN	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
2	72906-11	HOUSING, two-way socket (black)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	72908-11	HOUSING, four-way socket (black)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
4	69200179	WIRE HARNESS, right hand control jumper, with 5118, 72906-11, 72908-11, 69200305, 69200306, 69200307 and 69200308	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRX, FLTRXS
4	69200631	WIRE HARNESS, right hand control jumper, with 5118, 72906-11, 72908-11, 69200305, 69200306, 69200307 and 69200308	FLTRU
5	69200305	HOUSING, two-way socket (white)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	69200306	HOUSING, four-way socket (white)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	69200307	TERMINAL, socket, 22 AWG *(5)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
8	69200308	TERMINAL, socket, 22 AWG *(5)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2)

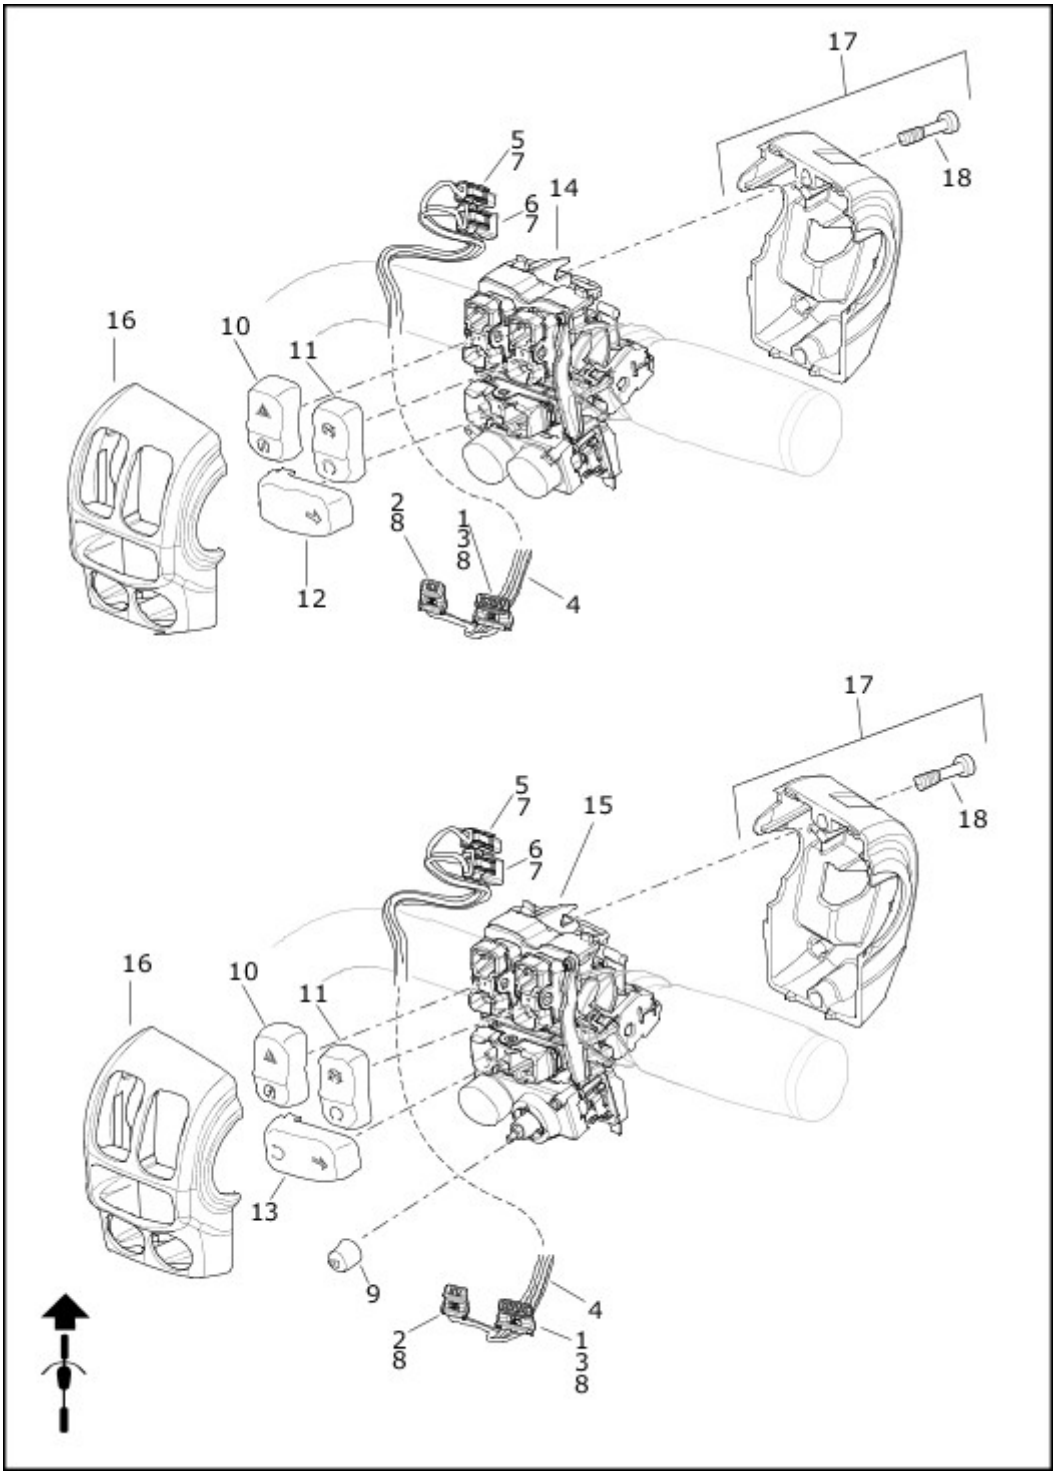

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	71500046	SWITCH CAP, audio select	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
10	71500049	SWITCH CAP, start/hazard	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	71500050	SWITCH CAP, stop and run	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
12	71500057	SWITCH CAP, right turn signal	FLHR, FLHRC, FLHT
13	71500478	SWITCH CAP, right turn signal and back	FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
13	71500478	SWITCH CAP, right turn signal and back (used with BOOM!™ BOX GTS)	FLHTCU, FLHX, FLTRX
13	71500063	SWITCH CAP, right turn signal and info (not illustrated) (used with BOOM!™ BOX 4.3)	FLHTCU, FLHX, FLTRX
14	71500127C	SWITCH PACK, right hand control, with 71500049, 71500050 and 71500057	FLHR, FLHRC, FLHT
15	71500501	SWITCH PACK, right hand control, with 71500046, 71500049, 71500050 and 71500478	FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
15	71500501	SWITCH PACK, right hand control, with 71500046, 71500049, 71500050 and 71500478 (used with BOOM!™ BOX GTS)	FLHTCU, FLHX, FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	71500129C	SWITCH PACK, right hand control, with 71500046, 71500049, 71500050 and 71500063 (used with BOOM!™ BOX 4.3)	FLHTCU, FLHX, FLTRX
16	71500340	COVER, front, right hand control	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
17	71500348	COVER, rear, right hand control, with 10500008	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
18	10500008	SCREW *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

SWITCHES, HANDLEBAR, RIGHT - FLHRXS

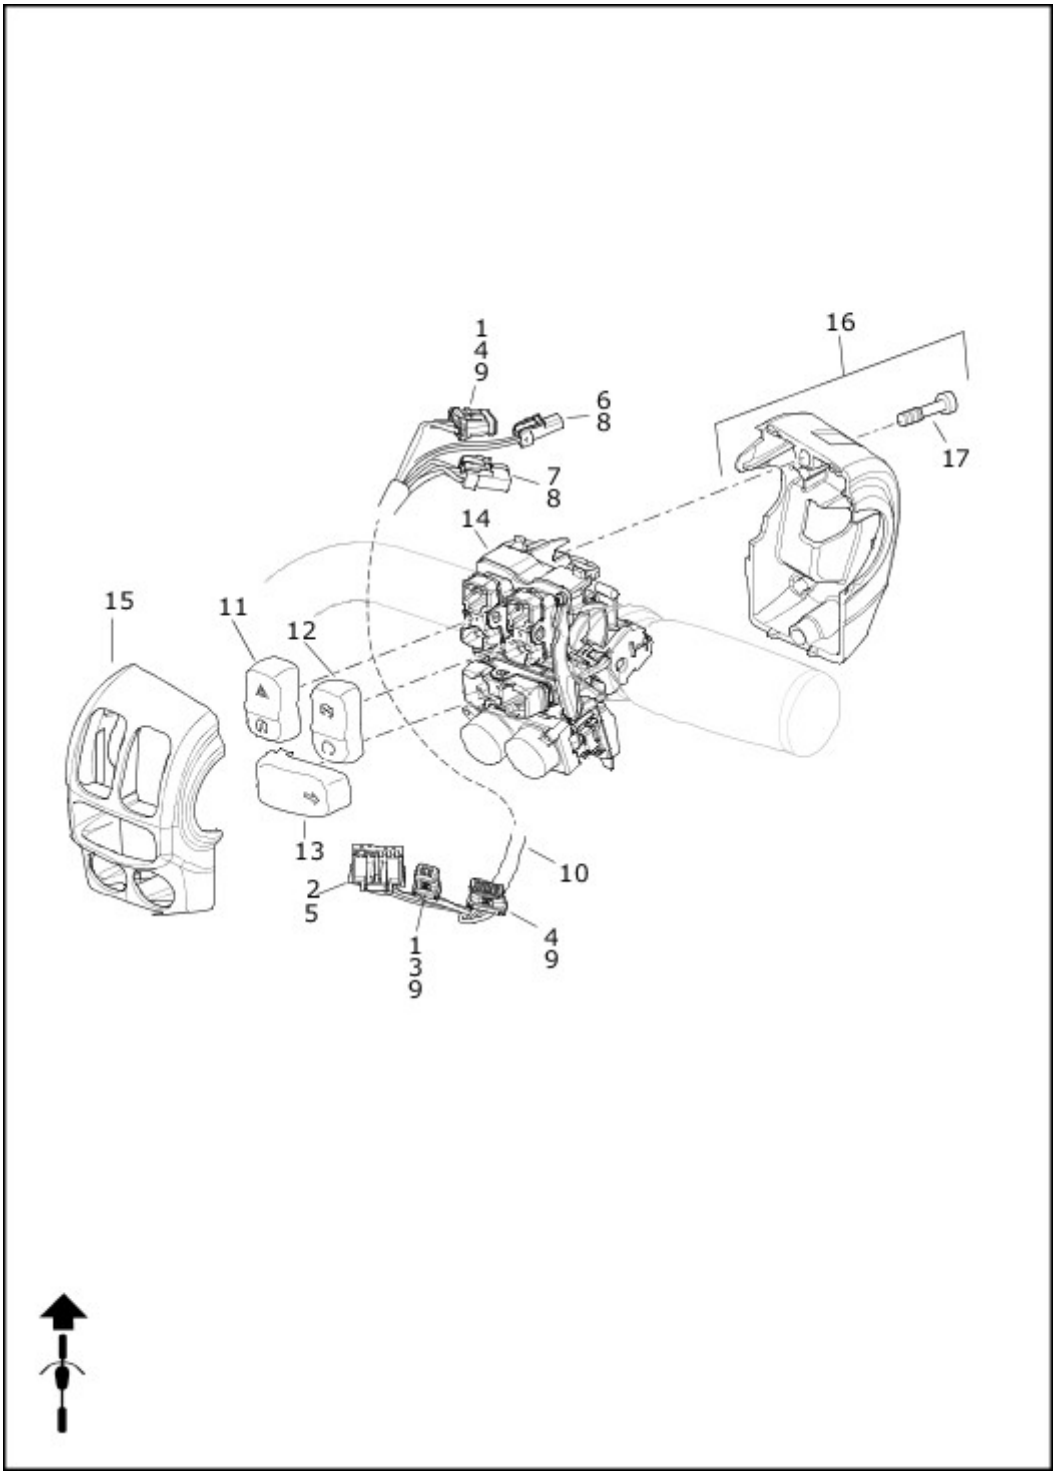


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	5118	SEAL PIN *(2)*	FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	72560-07	TERMINAL, socket, 22 AWG *(3)*	FLHRXS
3	72906-11	HOUSING, two-way socket (black)	FLHRXS
4	72908-11	HOUSING, four-way socket (black)	FLHRXS
5	73156-96BK	HOUSING, six-way socket (black)	FLHRXS
6	69200305	HOUSING, two-way socket (white)	FLHRXS
7	69200306	HOUSING, four-way socket (white)	FLHRXS
8	69200307	TERMINAL, socket, 22 AWG *(5)*	FLHRXS
9	69200308	TERMINAL, socket, 22 AWG *(8)*	FLHRXS
10	69201724	WIRE HARNESS, right hand control jumper, with 5118, 72560-07, 72906-11, 72908-11, 73156-96BK, 69200305, 69200306, 69200307 and 69200308	FLHRXS
11	71500049	SWITCH CAP, start/hazard	FLHRXS
12	71500050	SWITCH CAP, stop and run	FLHRXS
13	71500057	SWITCH CAP, right turn signal	FLHRXS
14	71500127C	SWITCH PACK, right hand control, with 71500049, 71500050 and 71500057	FLHRXS
15	71500340	COVER, front, right hand control	FLHRXS
16	71500475	COVER, rear, right hand control, with 10500008	FLHRXS
17	10500008	SCREW *(2)*	FLHRXS

HANDLEBAR

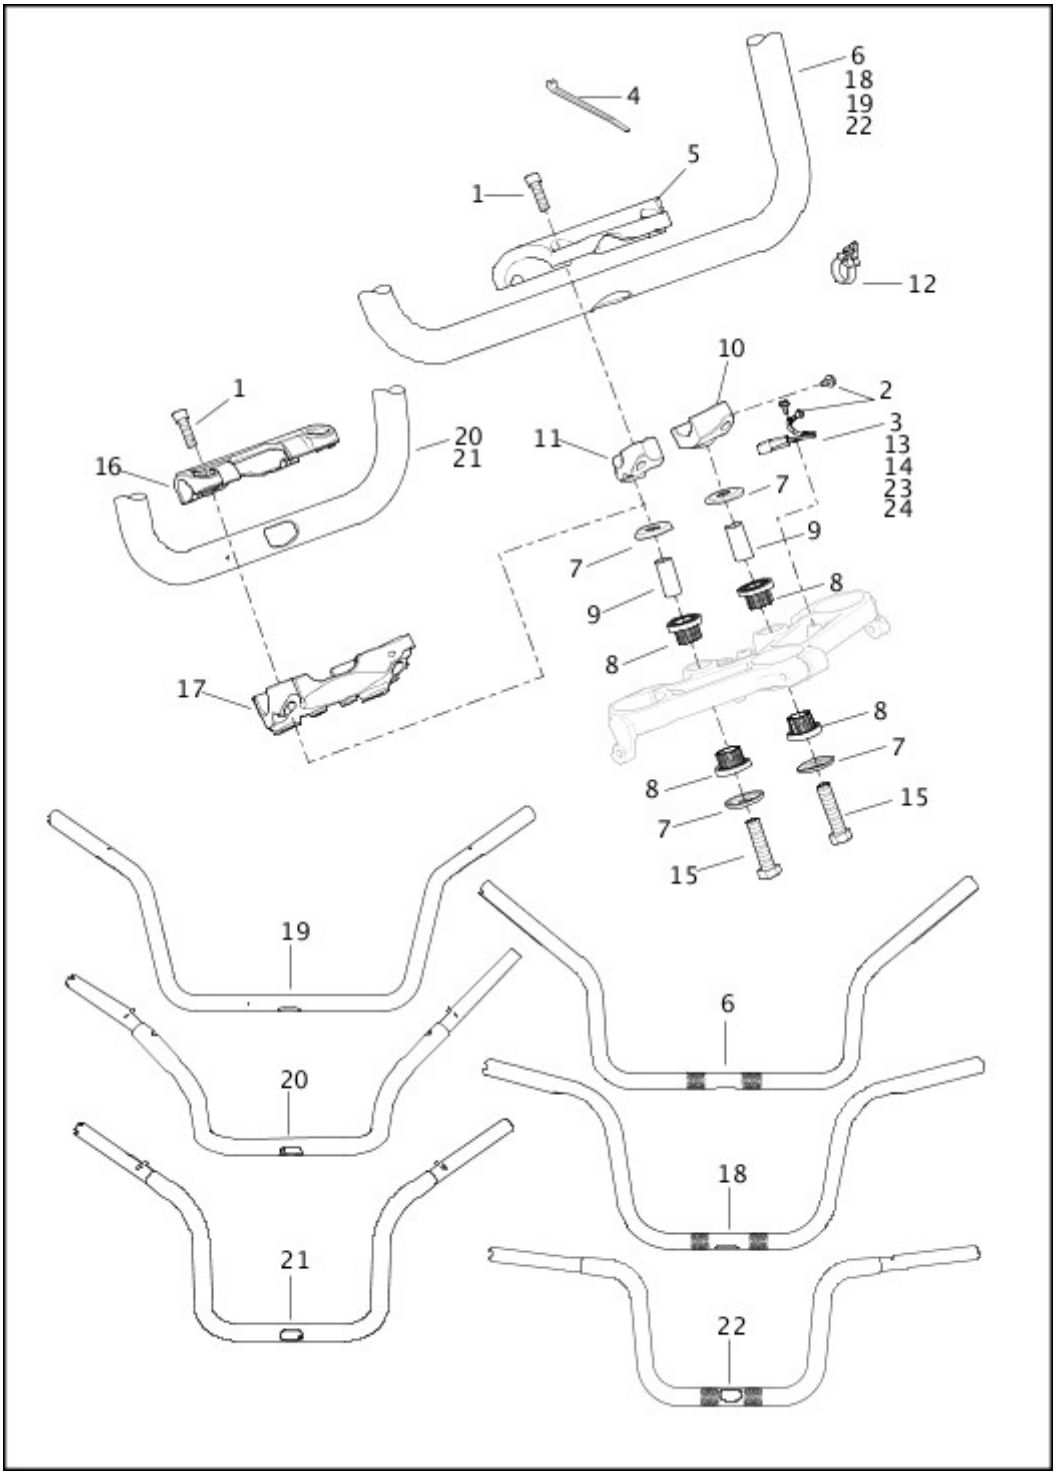

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2708A	SCREW *(4)*	ALL
2	4240	SCREW *(2)*	ALL
3	9853	TAB, fastening	ALL
4	10006	CABLE STRAP *(6)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
4	10006	CABLE STRAP *(5)*	FLTRU, FLTRX, FLTRXS
5	55918-08	CLAMP (upper)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
5	55900050	CLAMP (upper)	FLHRXS
6	55924-14	HANDLEBAR	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHX
7	56159-73	CUP WASHER *(4)*	ALL
8	56161-83A	BUSHING, rubber *(4)*	ALL
9	56163-93	SPACER *(2)*	ALL
10	57450-14	RISER (lower) (left)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
10	55900051	RISER (lower) (left)	FLHRXS
11	57451-14	RISER (lower) (right)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
11	55900052	RISER (lower) (right)	FLHRXS
12	70345-84	RETAINER *(4)*	FLHR, FLHRC
13	72053-92	HOUSING, one-way pin	ALL
14	72241-94A	TERMINAL, 10 ring, 14-18 AWG	ALL
15	12600032	SCREW *(2)*	ALL
16	55900071	CLAMP (upper)	FLHRXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	55900078	RISER, handlebar	FLTRX, FLTRXS
17	55900079	RISER, handlebar	FLTRU
18	55800099	HANDLEBAR (chrome)	FLHR, FLHRC
19	55800305	HANDLEBAR (chrome)	FLHTKL
19	55800767	HANDLEBAR (black)	FLHXS
20	55800332	HANDLEBAR (chrome)	FLTRX
21	55800378	HANDLEBAR (black)	FLTRXS
21	55800436	HANDLEBAR (chrome)	FLTRU
22	55800734	HANDLEBAR (black)	FLHRXS
23	69200224	WIRE HARNESS, triple clamp, ground jumper, with 9853, 72053-92, 72241-94A and 69200536	ALL
24	69200536	TERMINAL, ring, 12-14 AWG	ALL

THROTTLE CONTROL

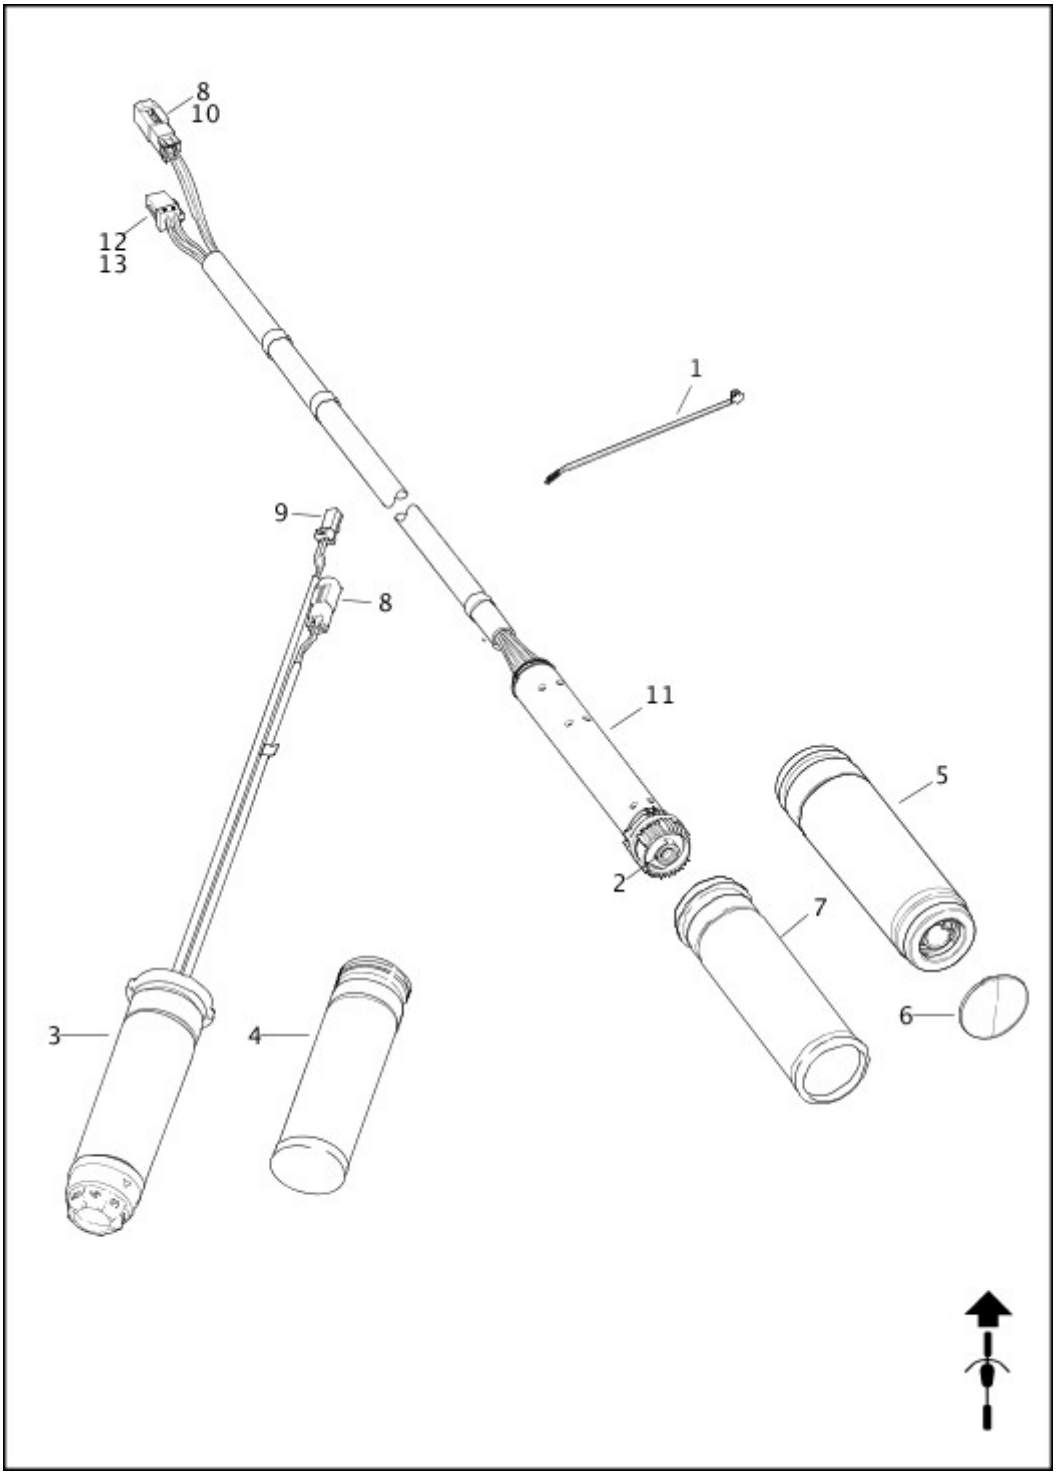


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	10006	CABLE STRAP	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	32306-08	SEAL CAP, throttle sensor	ALL
3	56209-10	GRIP, heated, with 72902-01BK and 72912-01BK (left)	FLHTK, FLHTK SHRINE
4	56248-08	GRIP (left)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
4	56667-04	GRIP (left)	FLHTKL
5	56249-10	GRIP, heated (right)	FLHTK, FLHTK SHRINE
6	56250-10	END CAP (right)	FLHTK, FLHTK SHRINE
7	56304-08	GRIP AND SLEEVE, throttle (right)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	56100075	GRIP AND SLEEVE, throttle (right)	FLHTKL
8	72902-01BK	HOUSING, two-way pin (black)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
8	72902-01BK	HOUSING, two-way pin (black) *(2)*	FLHTK, FLHTK SHRINE
9	72912-01BK	HOUSING, two-way socket (black)	FLHTK, FLHTK SHRINE
10	72990-01	PIN TERMINAL *(2)*	ALL
11	32700050A	SENSOR, twist grip, with 32306-08, 72902-01BK, 72990-01, 69200307 and 69201162	ALL
12	69200307	TERMINAL, socket, 22 AWG *(6)*	ALL
13	69201162	HOUSING, six-way socket (black)	ALL

TAIL LAMP AND TURN SIGNALS, REAR - FLHT

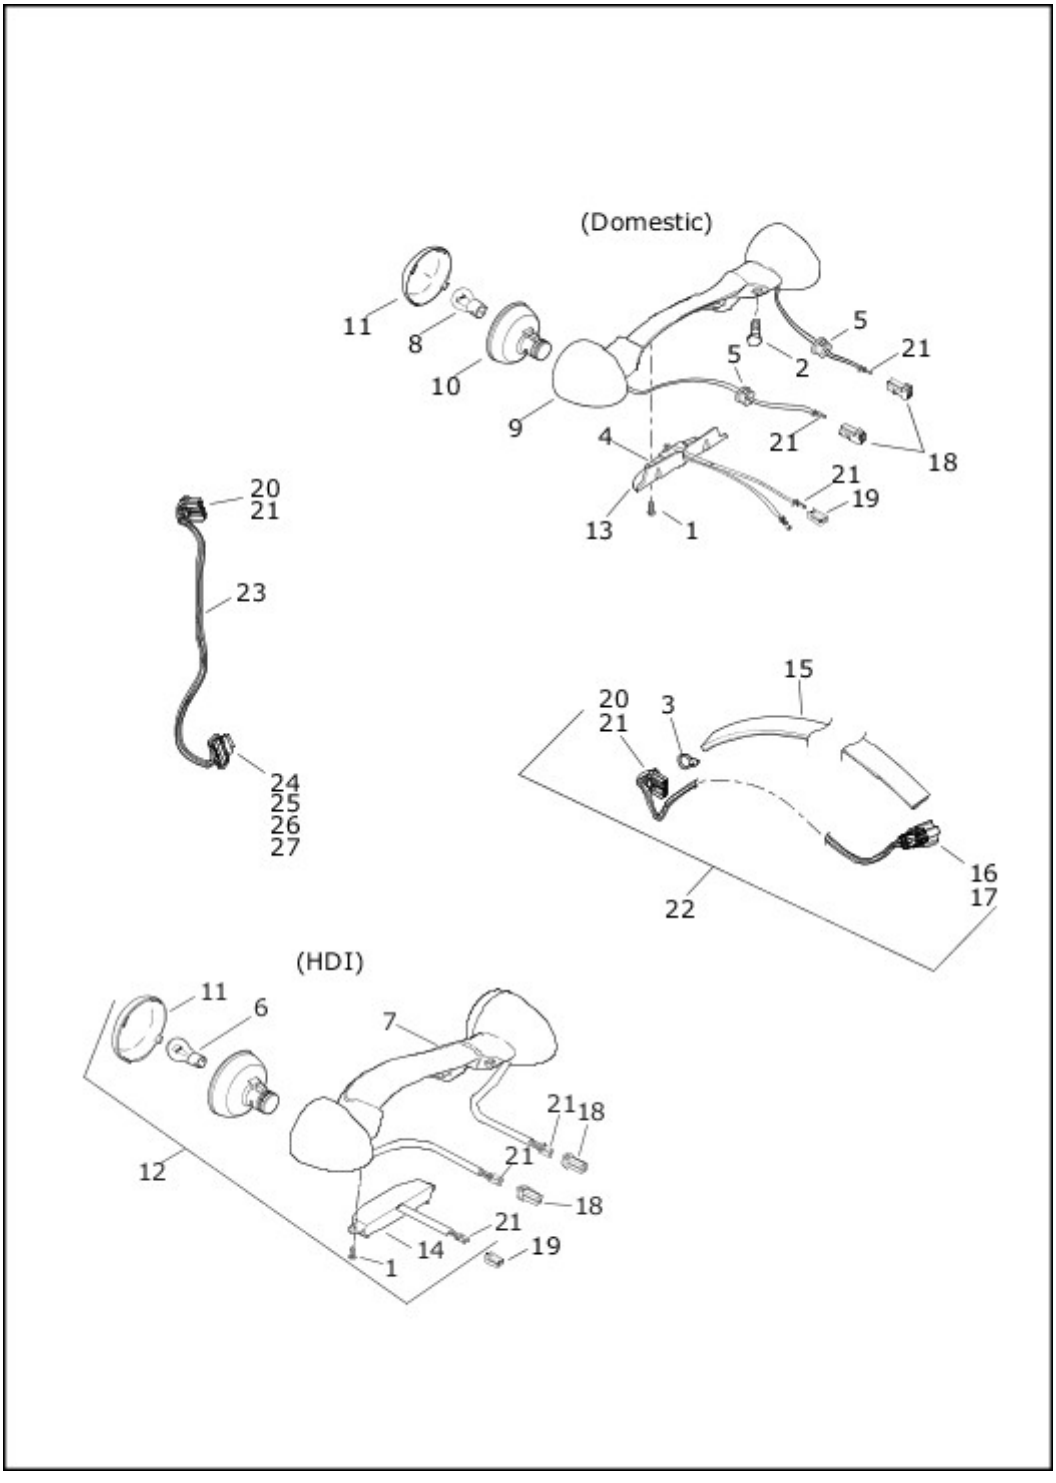

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2482	SCREW *(2)*	FLHT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3061	SCREW *(2)*	FLHT
3	10006	CABLE STRAP	FLHT
4	52441-95	BULB *(2)*	FLHT
5	67266-94	BUSHING *(2)*	FLHT
6	68163-84	BULB (HDI) *(2)*	FLHT
7	68550-09	BRACKET	FLHT
8	68572-64B	BULB (Domestic) *(2)*	FLHT
9	68629-05	LIGHTBAR (Domestic)	FLHT
10	68905-00	SOCKET ASSEMBLY (Domestic) *(2)*	FLHT
11	68973-00	LENS *(2)*	FLHT
12	68997-09	LAMP ASSEMBLY, rear turn signal, with 1, 6, 7, 11, 14, 18 and 21 (HDI)	FLHT
13	69353-05	LAMP ASSEMBLY, with 52441-95 and 73191-96 (Domestic)	FLHT
14	69378-09	LIGHT ASSEMBLY, with 73191-96 and lens (HDI)	FLHT
15	70522-06B	CONDUIT, self-adhesive	FLHT
16	72168-07	TERMINAL, socket, 18-20 AWG *(6)*	FLHT
17	72414-07BK	HOUSING, six-way socket (black)	FLHT
18	73152-96BK	HOUSING, two-way socket (black) *(2)*	FLHT
19	73153-96BK	HOUSING, three-way socket (black)	FLHT
20	73156-96BK	HOUSING, six-way socket (black)	FLHT
21	73191-96	TERMINAL, socket, 16-20 AWG *(12)*	FLHT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	69200128	HARNESS, with 3, 15, 16, 17, 20 and 21 (Domestic, HDI)	FLHT
23	69200130	HARNESS, with 20, 21, 24, 25, 26 and 27 (Canada, Australia, England, Japan)	FLHT
24	72130-04	HOUSING, 12-way socket (black)	FLHT
25	74197-04	SECONDARY LOCK, 12-way socket	FLHT
26	74196-04	TERMINAL, socket, 20 AWG *(7)*	FLHT
27	72189-04	SEAL PIN *(5)*	FLHT

TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS

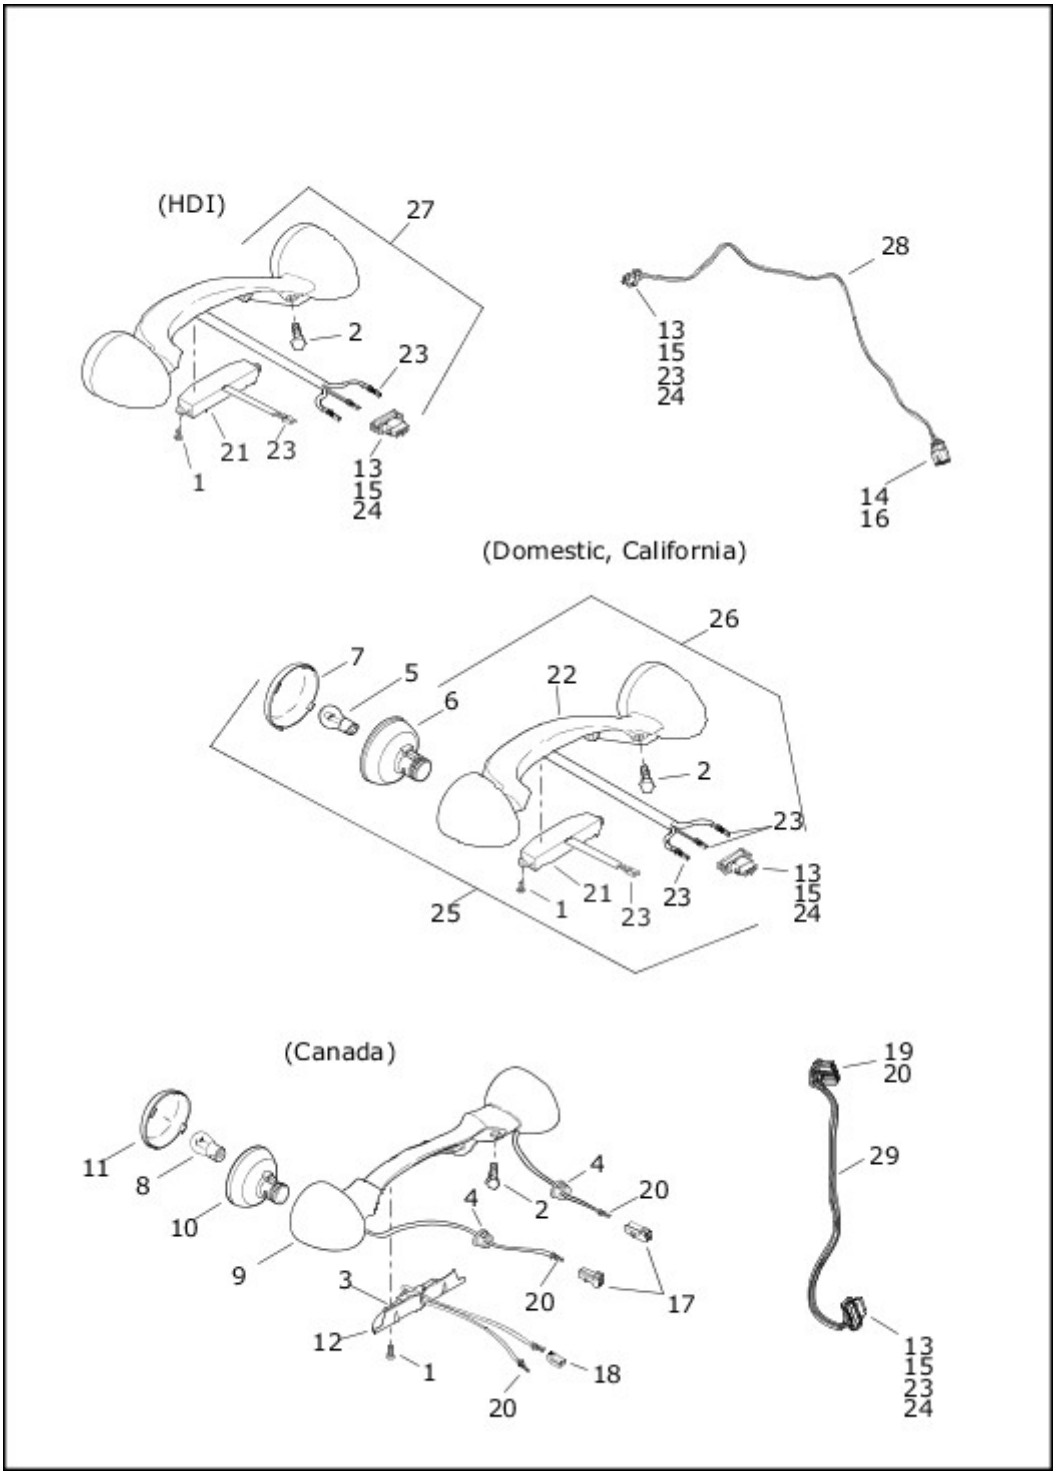

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2482	SCREW *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
2	3576	SCREW *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
3	52441-95	BULB, backlite *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
4	67266-94	BUSHING, nylon *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
5	68168-89A	BULB *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
6	68497-07	SOCKET ASSEMBLY, with mount *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
7	68559-07	LENS (red) *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
8	68572-64B	BULB *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
9	68629-05	LIGHTBAR, turn signal (chrome)	FLHX, FLTRX
9	67800900	LIGHTBAR, turn signal (black)	FLHRXS, FLHXS, FLTRXS
10	68905-00	SOCKET ASSEMBLY *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
11	68973-00	LENS *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
12	69353-05	LAMP ASSEMBLY, with 52441-95 and 73191-96	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
13	72130-04	HOUSING, 12-way socket (black) (except Canada) *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
13	72130-04	HOUSING, 12-way socket (black) (Canada)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
14	72168-07	TERMINAL, socket, 18-20 AWG *(6)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
15	72189-04	SEAL PIN (except Canada) *(9)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
15	72189-04	SEAL PIN (Canada) *(5)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	72414-07BK	HOUSING, six-way socket (black)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
17	73152-96BK	HOUSING, two-way socket (black) *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
18	73153-96BK	HOUSING, three-way socket (black)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
19	73156-96BK	HOUSING, six-way socket (black)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
20	73191-96	TERMINAL, socket, 16-20 AWG *(10)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
21	73254-10	LIGHT ASSEMBLY, with 74196-04 and lens	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
22	73309-10	BRACKET (chrome)	FLHX, FLTRX
22	67800485	BRACKET (black)	FLHRXS, FLHXS, FLTRXS
23	74196-04	TERMINAL, socket, 20 AWG (except Canada) *(15)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
23	74196-04	TERMINAL, socket, 20 AWG (Canada) *(7)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
24	74197-04	SECONDARY LOCK, 12-way socket (except Canada) *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
24	74197-04	SECONDARY LOCK, 12-way socket (Canada)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
25	73314-10	DIRECTIONAL LAMP ASSEMBLY, rear, with 1, 5, 6, 7, 13, 15, 21, 22, 23 and 24 (chrome)	FLHX, FLTRX
26	67800483	DIRECTIONAL LAMP ASSEMBLY, rear, with 1, 5, 13, 15, 21, 22, 23 and 24 (black)	FLHRXS, FLHXS, FLTRXS
27	67800132	DIRECTIONAL LAMP ASSEMBLY, rear, with 1, 13, 15, 21, 23 and 24 (chrome)	FLHX, FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	67800484	DIRECTIONAL LAMP ASSEMBLY, rear, with 1, 13, 15, 21, 23 and 24 (black)	FLHRXS, FLHXS, FLTRXS
28	69200129	HARNESS, rear lighting jumper, with 13, 14, 15, 16, 23 and 24 (except Canada)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
29	69200130	HARNESS, rear lighting, jumper, with 13, 15, 19, 20, 23 and 24 (Canada)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS

TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC

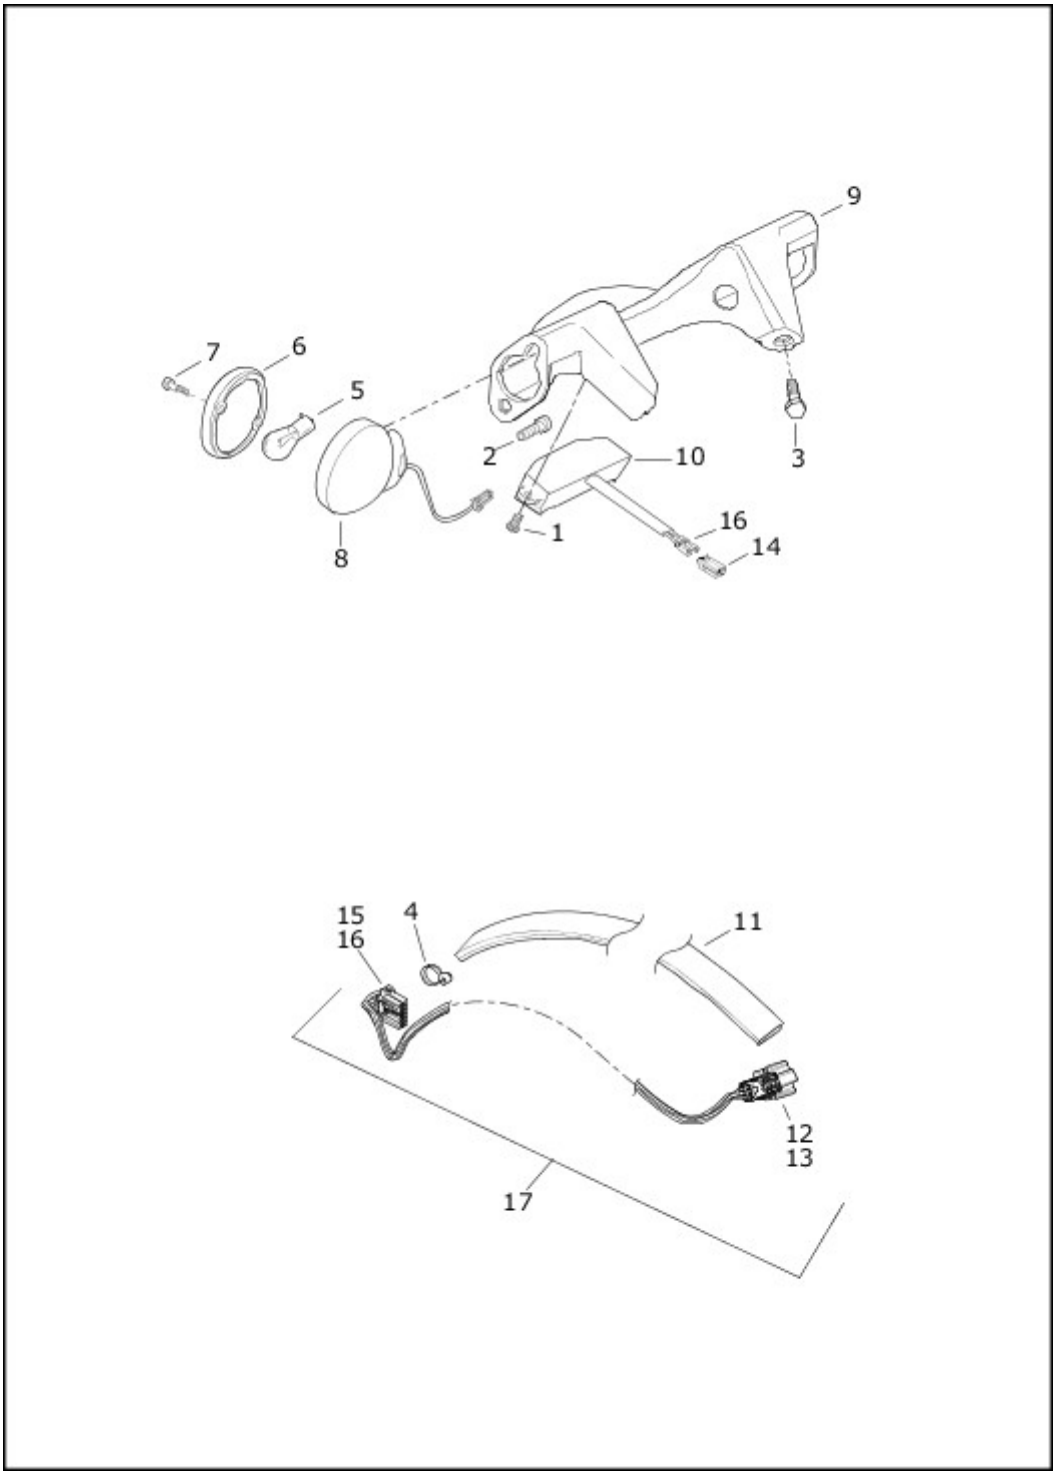


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2482	SCREW *(2)*	FLHR, FLHRC

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	2692WB	SCREW *(4)*	FLHR, FLHRC
3	3576	SCREW *(2)*	FLHR, FLHRC
4	10006	CABLE STRAP	FLHR, FLHRC
5	68572-64B	BULB (Domestic) *(2)*	FLHR
5	68163-84	BULB (HDI) *(2)*	FLHR, FLHRC
6	68440-86	LENS (amber) (Domestic) *(2)*	FLHR
6	68506-92	LENS (amber) (HDI) *(2)*	FLHR, FLHRC
7	68452-86	SCREW *(4)*	FLHR, FLHRC
8	68713-94A	LAMP ASSEMBLY, with 5, 6 and 7 (Domestic) *(2)*	FLHR
8	68765-94A	LAMP ASSEMBLY, with 5, 6 and 7 (HDI) *(2)*	FLHR, FLHRC
9	68742-09	BRACKET, rear turn signal	FLHR, FLHRC
10	69378-09	LIGHT ASSEMBLY, with 73191-96 and lens	FLHR, FLHRC
11	70522-06B	CONDUIT, self-adhesive	FLHR, FLHRC
12	72168-07	TERMINAL, socket, 18-20 AWG *(6)*	FLHR, FLHRC
13	72414-07BK	HOUSING, six-way socket (black)	FLHR, FLHRC
14	73153-96BK	HOUSING, three-way socket (black)	FLHR, FLHRC
15	73156-96BK	HOUSING, six-way socket (black)	FLHR, FLHRC
16	73191-96	TERMINAL, socket, 16-20 AWG *(12)*	FLHR, FLHRC
17	69200128	HARNESS, tail lamps, with 4, 11, 12, 13, 15 and 16	FLHR, FLHRC

TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)

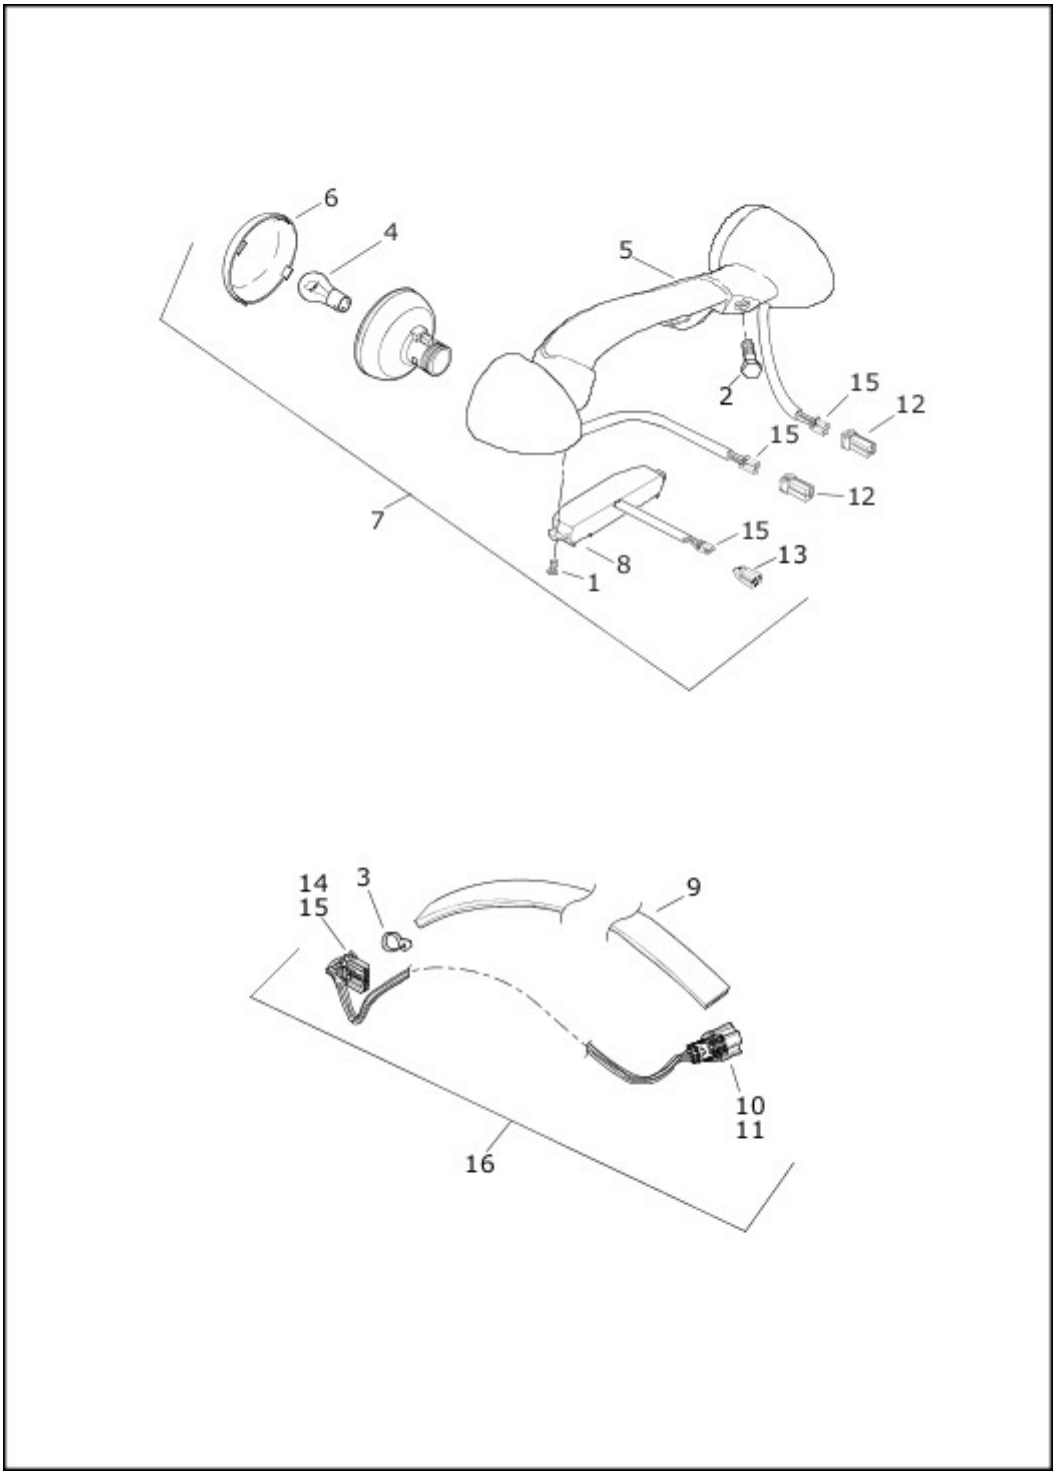


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2482	SCREW *(2)*	FLHTK, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3576	SCREW *(2)*	FLHTK, FLHTKL, FLTRU
3	10006	CABLE STRAP	FLHTK, FLHTKL, FLTRU
4	68163-84	BULB *(2)*	FLHTK, FLHTKL, FLTRU
5	68550-09	BRACKET	FLHTK, FLHTKL, FLTRU
6	68973-00	LENS *(2)*	FLHTK, FLHTKL, FLTRU
7	68997-09	LAMP ASSEMBLY, rear turn signal, with 1, 4, 5, 6, 8, 12 and 15	FLHTK, FLHTKL, FLTRU
8	69378-09	LIGHT ASSEMBLY, with 73191-96 and lens	FLHTK, FLHTKL, FLTRU
9	70522-06B	CONDUIT, self-adhesive	FLHTK, FLHTKL, FLTRU
10	72168-07	TERMINAL, socket, 18-20 AWG *(6)*	FLHTK, FLHTKL, FLTRU
11	72414-07BK	HOUSING, six-way socket (black)	FLHTK, FLHTKL, FLTRU
12	73152-96BK	HOUSING, two-way socket (black) *(2)*	FLHTK, FLHTKL, FLTRU
13	73153-96BK	HOUSING, three-way socket	FLHTK, FLHTKL, FLTRU
14	73156-96BK	HOUSING, six-way socket (black)	FLHTK, FLHTKL, FLTRU
15	73191-96	TERMINAL, socket, 16-20 AWG *(12)*	FLHTK, FLHTKL, FLTRU
16	69200128	HARNESS, rear lamps, with 3, 9, 10, 11, 14 and 15	FLHTK, FLHTKL, FLTRU

TAIL LAMP (1 OF 2)

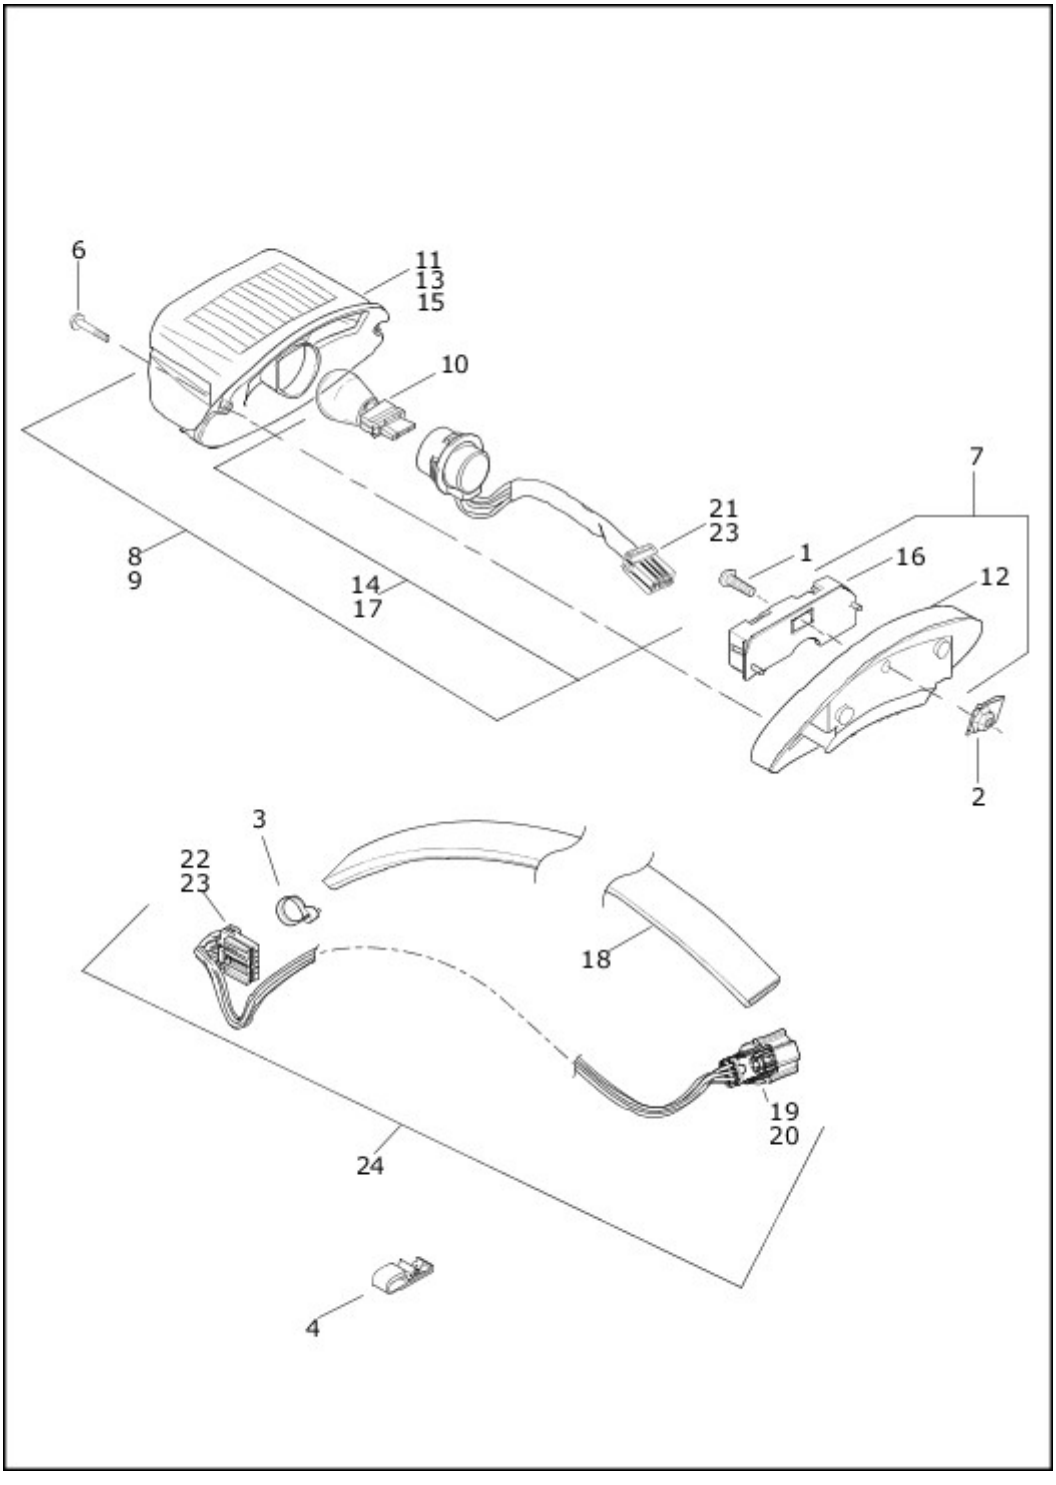

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

Index number 5 is not used in this illustration


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3022A	SCREW	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
1	3022A	SCREW (Canada only)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
2	7964	J-NUT	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	7964	J-NUT (Canada only)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
3	10006	CABLE STRAP	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
4	10183	CLIP, T-stud *(2)*	FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	68026-99	SCREW *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	68026-99	SCREW (Canada only) *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
7	68066-99A	TAIL LAMP BASE ASSEMBLY, with 68296-99A and 68830-99A (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	68066-99A	TAIL LAMP BASE ASSEMBLY, with 68296-99A and 68830-99A (Canada only) (chrome)	FLHRXS, FLHX, FLTRX
7	67800847	TAIL LIGHT BASE (black) (Canada only)	FLHXS, FLTRXS
8	68140-04	LAMP ASSEMBLY, tail lamp, with 68369-03 and 68370-03A (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	68142-04	LAMP ASSEMBLY, tail lamp, with 68558-03 and 69187-03A (HDI)	FLHR, FLHRC, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

Index number 5 is not used in this illustration

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	68167-04	BULB, tail lamp, wedge mount	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
10	68167-04	BULB, tail lamp, wedge mount (Canada only)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
11	68245-03	LENS, tail lamp (red), with 68026-99 (Domestic)	FLHR, FLHT
11	68245-03	LENS, tail lamp (red), with 68026-99 (Canada only)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS

Index number 5 is not used in this illustration

TAIL LAMP (2 OF 2)

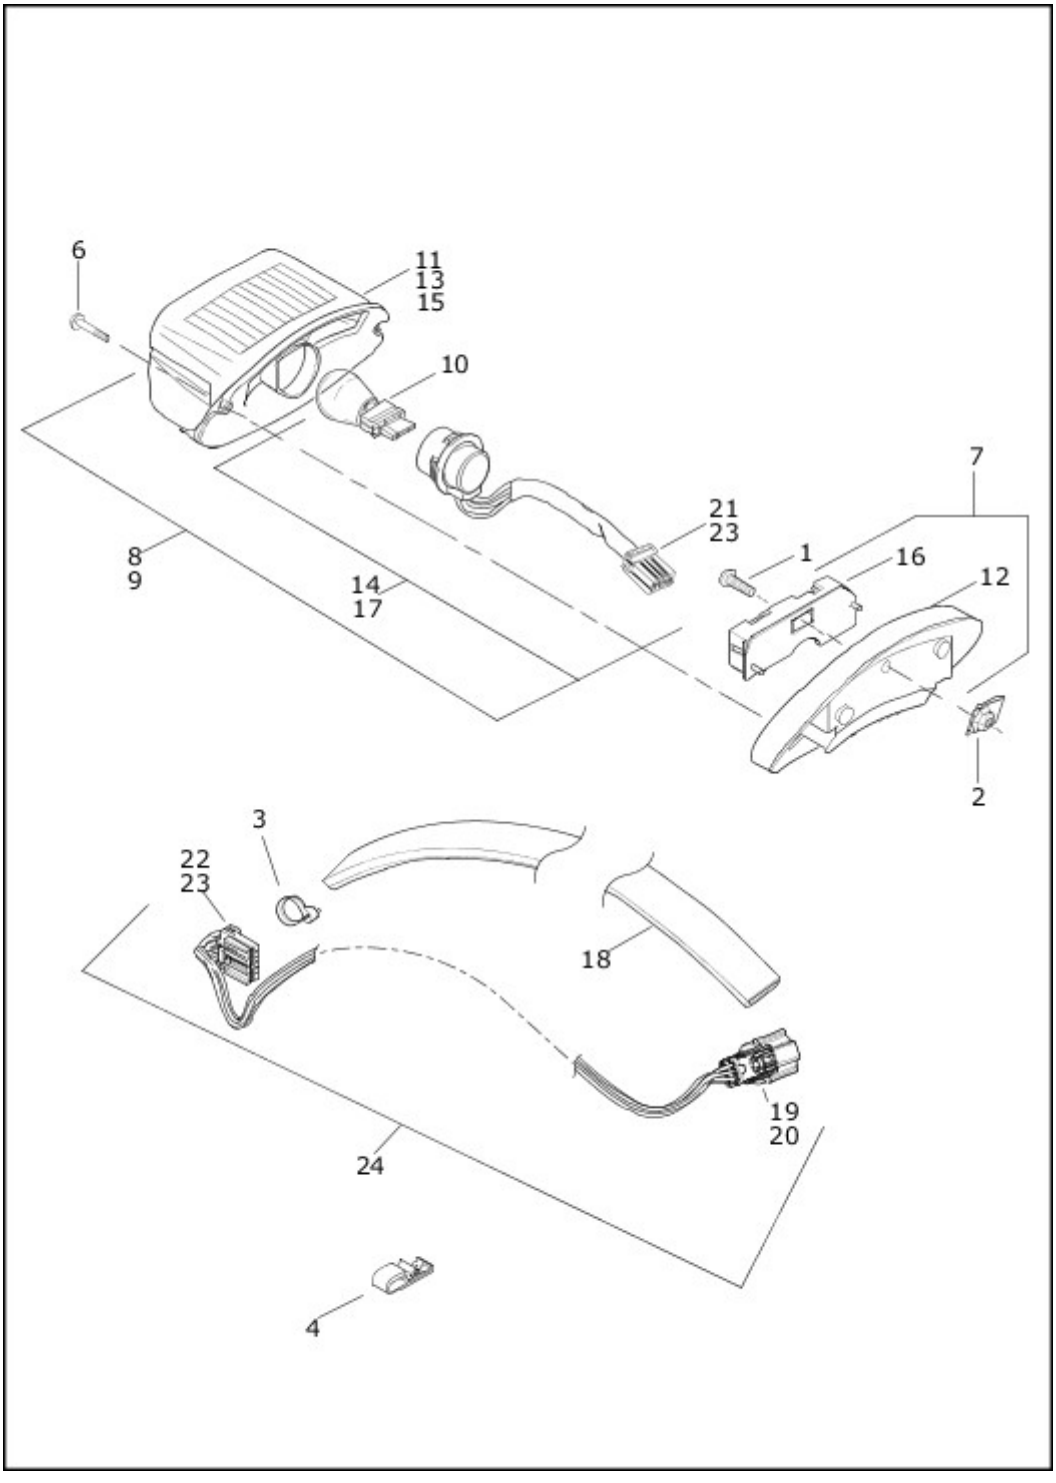

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	68296-99A	TAIL LIGHT BASE (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
12	68296-99A	TAIL LIGHT BASE (chrome) (Canada only)	FLHRXS, FLHX, FLTRX
13	68369-03	LENS, tail lamp, with 68026-99	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
14	68370-03A	SOCKET ASSEMBLY, tail lamp, with 68167-04, 73154-96BK and 73191-96 (Domestic)	FLHR, FLHT
14	68370-03A	SOCKET ASSEMBLY, tail lamp, with 68167-04, 73154-96BK and 73191-96	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
14	68370-03A	SOCKET ASSEMBLY, tail lamp, with 68167-04, 73154-96BK and 73191-96 (Canada only)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
15	68558-03	LENS, tail lamp, with 68026-99 (HDI)	FLHR, FLHRC, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
16	68830-99A	CIRCUIT BOARD AND COVER	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
16	68830-99A	CIRCUIT BOARD AND COVER (Canada only)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
17	69187-03A	BULB SOCKET ASSEMBLY, tail lamp, with 68167-04, 73154-96BK and 73191-96 (HDI)	FLHR, FLHRC, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
18	70522-06B	CONDUIT, self-adhesive	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
19	72168-07	TERMINAL, socket, 18-20 AWG *(6)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
20	72414-07BK	HOUSING, six-way socket (black)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	73154-96BK	SOCKET HOUSING, four-way	ALL
22	73156-96BK	SOCKET HOUSING, six-way	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
23	73191-96	TERMINAL, socket, 16-20 AWG *(3)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
23	73191-96	TERMINAL, socket, 16-20 AWG *(9)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
24	69200128	HARNESS, rear lamps, with 10006, 70522-06B, 72168-07, 72414-07BK, 73156-96BK and 73191-96	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

EXHAUST SYSTEM (1 OF 2)

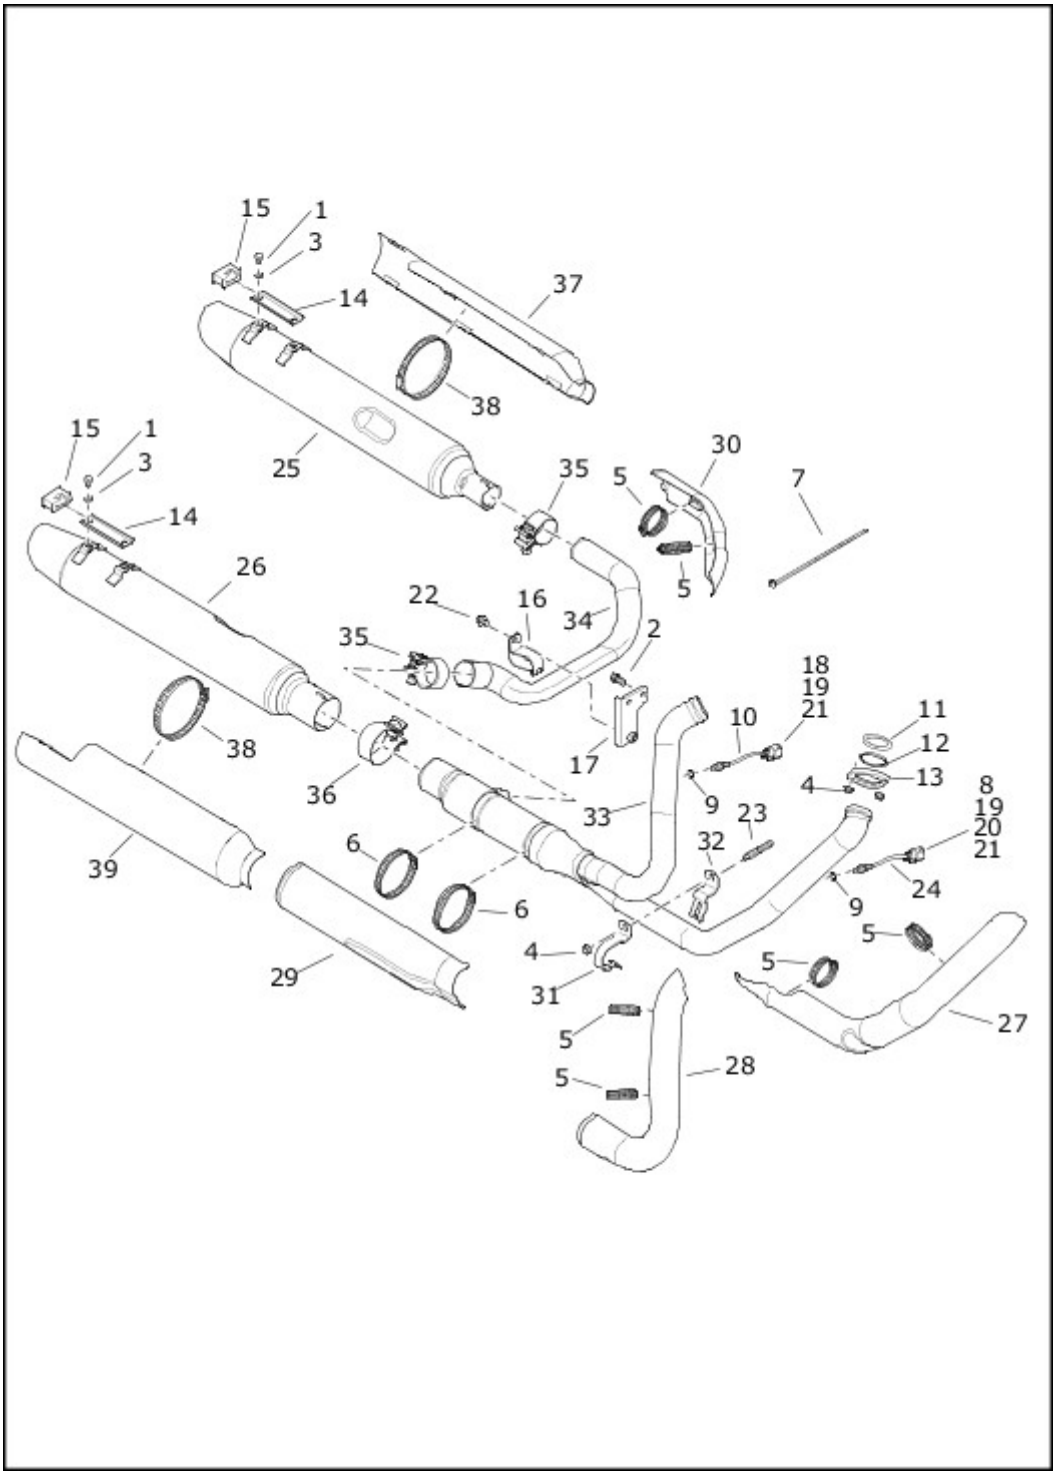

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3929	SCREW *(4)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	4705	SCREW *(2)*	ALL
3	7041	LOCKWASHER *(4)*	ALL
4	7593	NUT *(5)*	ALL
5	9955	CLAMP, worm drive #24 *(6)*	ALL
6	9956	CLAMP, worm drive #40 *(2)*	ALL
7	10039	CABLE STRAP	ALL
8	10177	CABLE STRAP, anchored	ALL
9	11936	GASKET, oxygen (O2) sensor *(2)*	ALL
10	27809-10	SENSOR, oxygen (O2), rear, with 11936, 72177-07BK, 72344-10 and 73307-10	ALL
11	65324-83B	GASKET, exhaust port *(2)*	ALL
12	65325-83A	RETAINING RING, exhaust gasket *(2)*	ALL
13	65328-83A	CLAMP, exhaust manifold *(2)*	ALL
14	65723-85	MOUNTING BRACKET *(2)*	ALL
15	65724-85A	MOUNT, rubber *(2)*	ALL
16	66861-09B	CLAMP, exhaust pipe, hinged	ALL
17	66881-09	BRACKET, exhaust pipe hanger	ALL
18	72177-07BK	HOUSING, four-way socket (black)	ALL
19	72344-10	TERMINAL, socket, 22 AWG (gold) *(4)*	ALL
20	72444-07GY	HOUSING, four-way, socket (gray)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	73307-10	TERMINAL, socket, 22 AWG *(4)*	ALL
22	10200569	SCREW	ALL
23	10900015A	STUD, exhaust	ALL
24	32700046	SENSOR, oxygen (O2), front, with 10177, 11936, 72344-10, 72444-07GY and 73307-10	ALL
25	64900235A	MUFFLER (left) (chrome) (Domestic, Canada, California)	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
25	64900765A	MUFFLER (left) (black) (Domestic, Canada, California)	FLHRXS, FLHXS, FLTRXS
25	64900239	MUFFLER (left) (chrome) (Australia, England, HDI, Japan)	FLHR, FLHRC, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
25	64900769	MUFFLER (left) (black) (Australia, England, HDI, Japan)	FLHRXS, FLHXS, FLTRXS
25	64900767	MUFFLER (left) (black) (Asia-Pacific, Brazil)	FLHRXS, FLHXS, FLTRXS
25	64900237	MUFFLER (left) (chrome) (Asia-Pacific)	FLHR, FLHTK, FLHTKL, FLHX, FLTRU, FLTRX
25	64900237	MUFFLER (left) (chrome) (Brazil)	FLHRC, FLHTK, FLHX, FLTRU
25	64900815	MUFFLER (left) (chrome) (China)	FLHR, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
25	64900817	MUFFLER (left) (black) (China)	FLHRXS, FLHXS, FLTRXS

EXHAUST SYSTEM (2 OF 2)

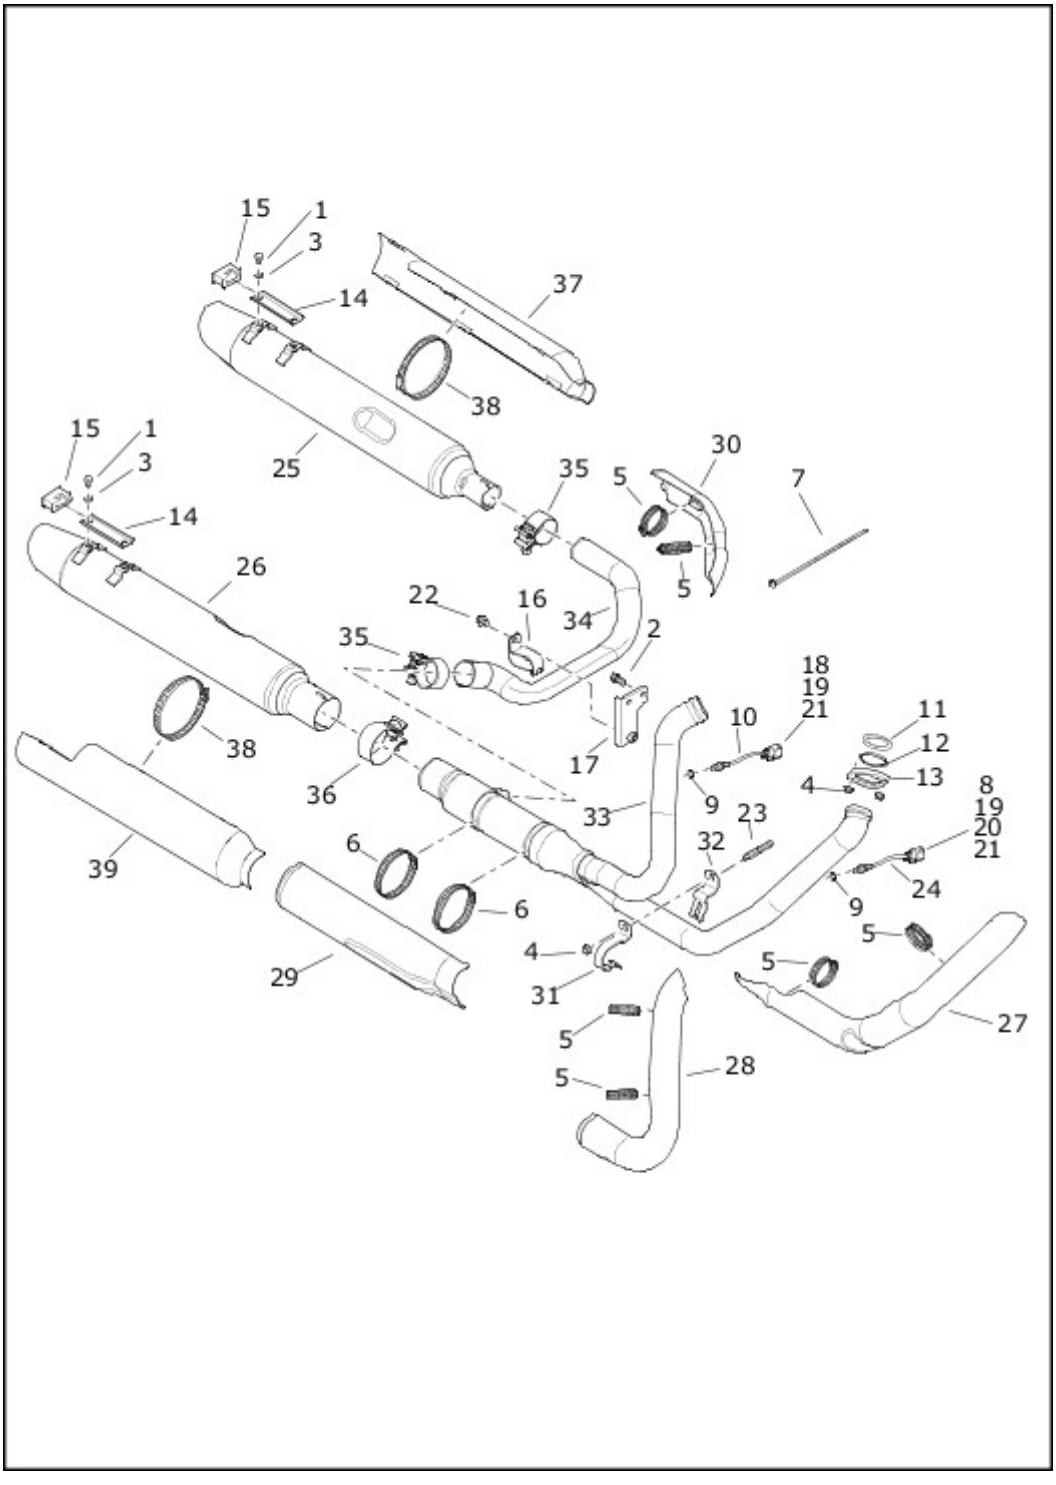

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	64900236A	MUFFLER (right) (chrome) (Domestic, Canada, California)	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
26	64900766A	MUFFLER (right) (black) (Domestic, Canada, California)	FLHRXS, FLHXS, FLTRXS
26	64900240	MUFFLER (right) (chrome) (Australia, England, HDI, Japan)	FLHR, FLHRC, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
26	64900770	MUFFLER (right) (black) (Australia, England, HDI, Japan)	FLHRXS, FLHXS, FLTRXS
26	64900768	MUFFLER (right) (black) (Asia-Pacific, Brazil)	FLHRXS, FLHXS, FLTRXS
26	64900238	MUFFLER (right) (chrome) (Asia-Pacific)	FLHR, FLHTK, FLHTKL, FLHX, FLTRU, FLTRX
26	64900238	MUFFLER (right) (chrome) (Brazil)	FLHRC, FLHTK, FLHX, FLTRU
26	64900814	MUFFLER (right) (chrome) (China)	FLHR, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
26	64900816	MUFFLER (right) (black) (China)	FLHRXS, FLHXS, FLTRXS
27	65400176	SHIELD, exhaust pipe, front	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
27	65400483	SHIELD, exhaust pipe, front (black)	FLHRXS, FLHXS, FLTRXS
28	65400177	EXHAUST SHIELD ASSEMBLY, rear header pipe	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
28	65400484	EXHAUST SHIELD ASSEMBLY, rear header pipe (black)	FLHRXS, FLHXS, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
29	65400178	EXHAUST SHIELD ASSEMBLY, catalytic converter	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
29	65400485	EXHAUST SHIELD ASSEMBLY, catalytic converter (black)	FLHRXS, FLHXS, FLTRXS
30	65400179	SHIELD, left exhaust pipe, rear	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
30	65400486	SHIELD, left exhaust pipe, rear (black)	FLHRXS, FLHXS, FLTRXS
31	65500042	BRACKET, muffler strap, male	ALL
32	65500043	BRACKET, muffler strap, female	ALL
33	65600176	HEADER ASSEMBLY, catalytic (Domestic, Canada, California) (chrome)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
33	65600177	HEADER ASSEMBLY, catalytic (Australia, England, Japan, HDI, Asia-Pacific, Brazil) (chrome)	FLHR, FLHRC, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
34	65600178	CROSSOVER PIPE ASSEMBLY (chrome)	ALL
35	65900012	CLAMP, muffler *(2)*	ALL
36	65900015	CLAMP, muffler	ALL
37	65400545	SHIELD, muffler (left) (chrome) (China)	FLHR, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
37	65400546	SHIELD, muffler (left) (black) (China)	FLHRXS, FLHXS, FLTRXS
38	66047-05	CLAMP (China) *(6)*	ALL
39	65400547	SHIELD, muffler (right) (chrome) (China)	FLHR, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
39	65400548	SHIELD, muffler (right) (black) (China)	FLHRXS, FLHXS, FLTRXS

WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8)

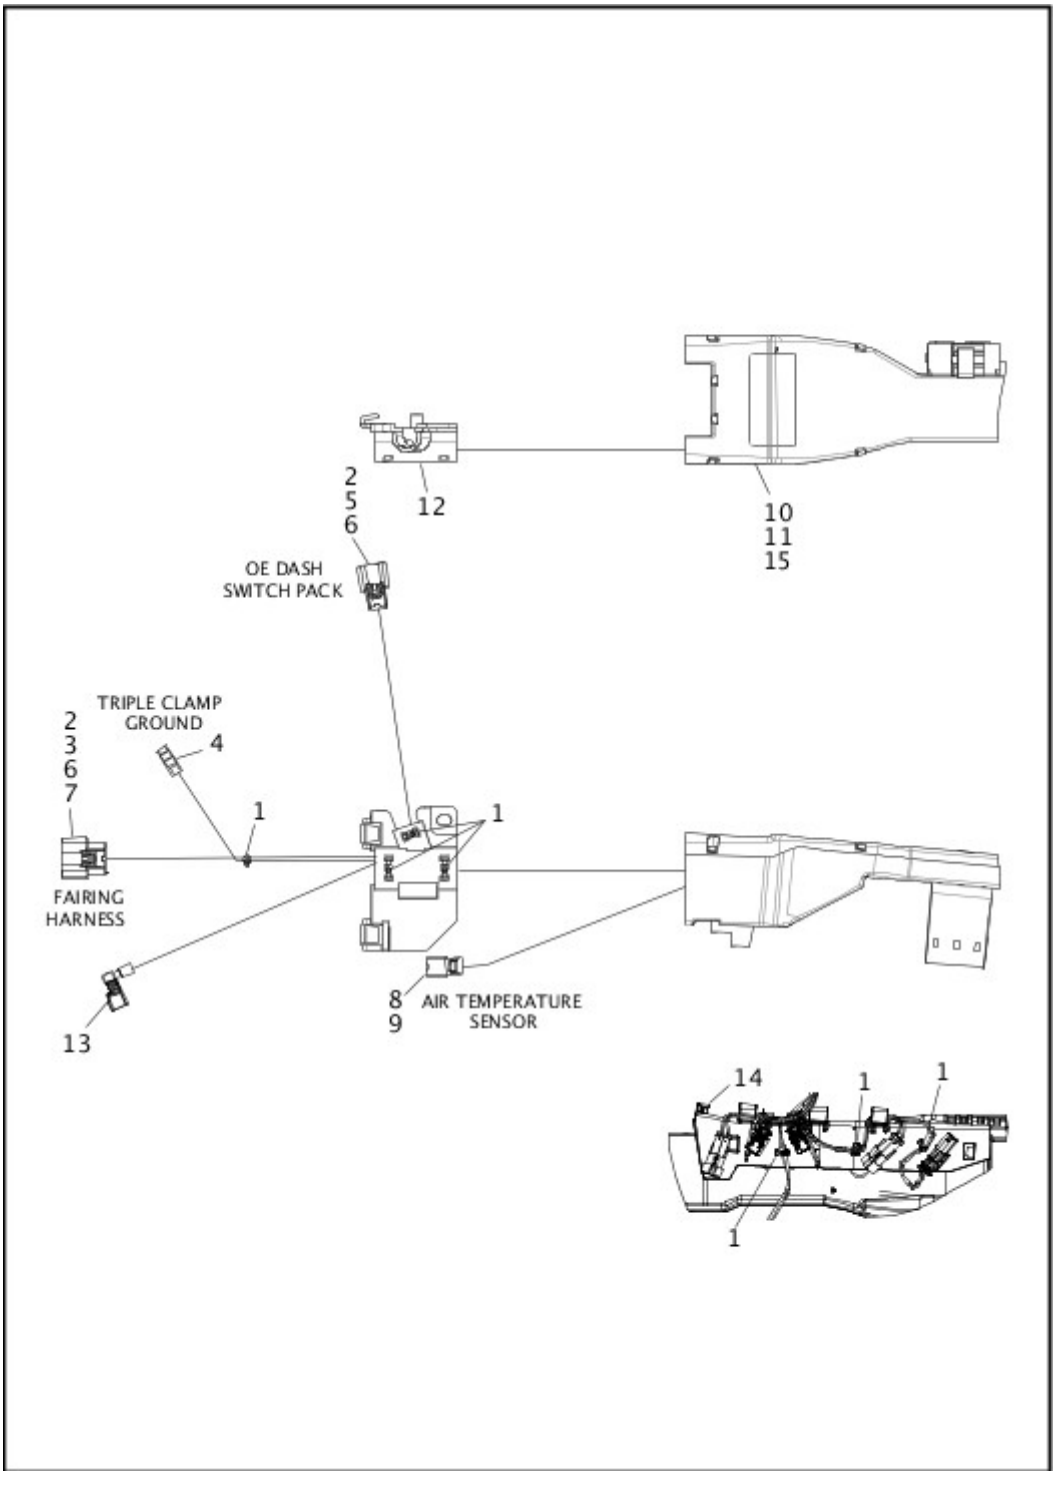


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201125A	MAIN WIRING HARNESS - NON-ABS	FLHT, FLHX
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(7)*	FLHT, FLHX
2	72168-07	TERMINAL, socket, 18-20 AWG *(7)*	FLHT, FLHX
3	72272-07	TERMINAL, socket, 14-16 AWG *(4)*	FLHT, FLHX
4	72364-06	TERMINAL, socket, 10-14 AWG	FLHT, FLHX
5	72414-07BK	HOUSING, six-way socket (black)	FLHT, FLHX
6	72473-07	SEAL PIN, natural *(7)*	FLHT, FLHX
7	72489-07GY	HOUSING, 12-way socket (gray)	FLHT, FLHX
8	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLHT, FLHX
9	69200201	HOUSING, two-way socket (black)	FLHT, FLHX
10	69200202A	WIRE TROUGH	FLHT, FLHX
11	69200203A	COVER, wire trough, with 15368-01A and 69201459	FLHT, FLHX
12	69200214	CADDY, left steer head	FLHT, FLHX
13	69200294	CABLE, AM/FM antenna	FLHT, FLHX
14	69201287	BRACKET, mounting, electrical connector	FLHT, FLHX
15	69201459	BRACKET	FLHT, FLHX

WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8)

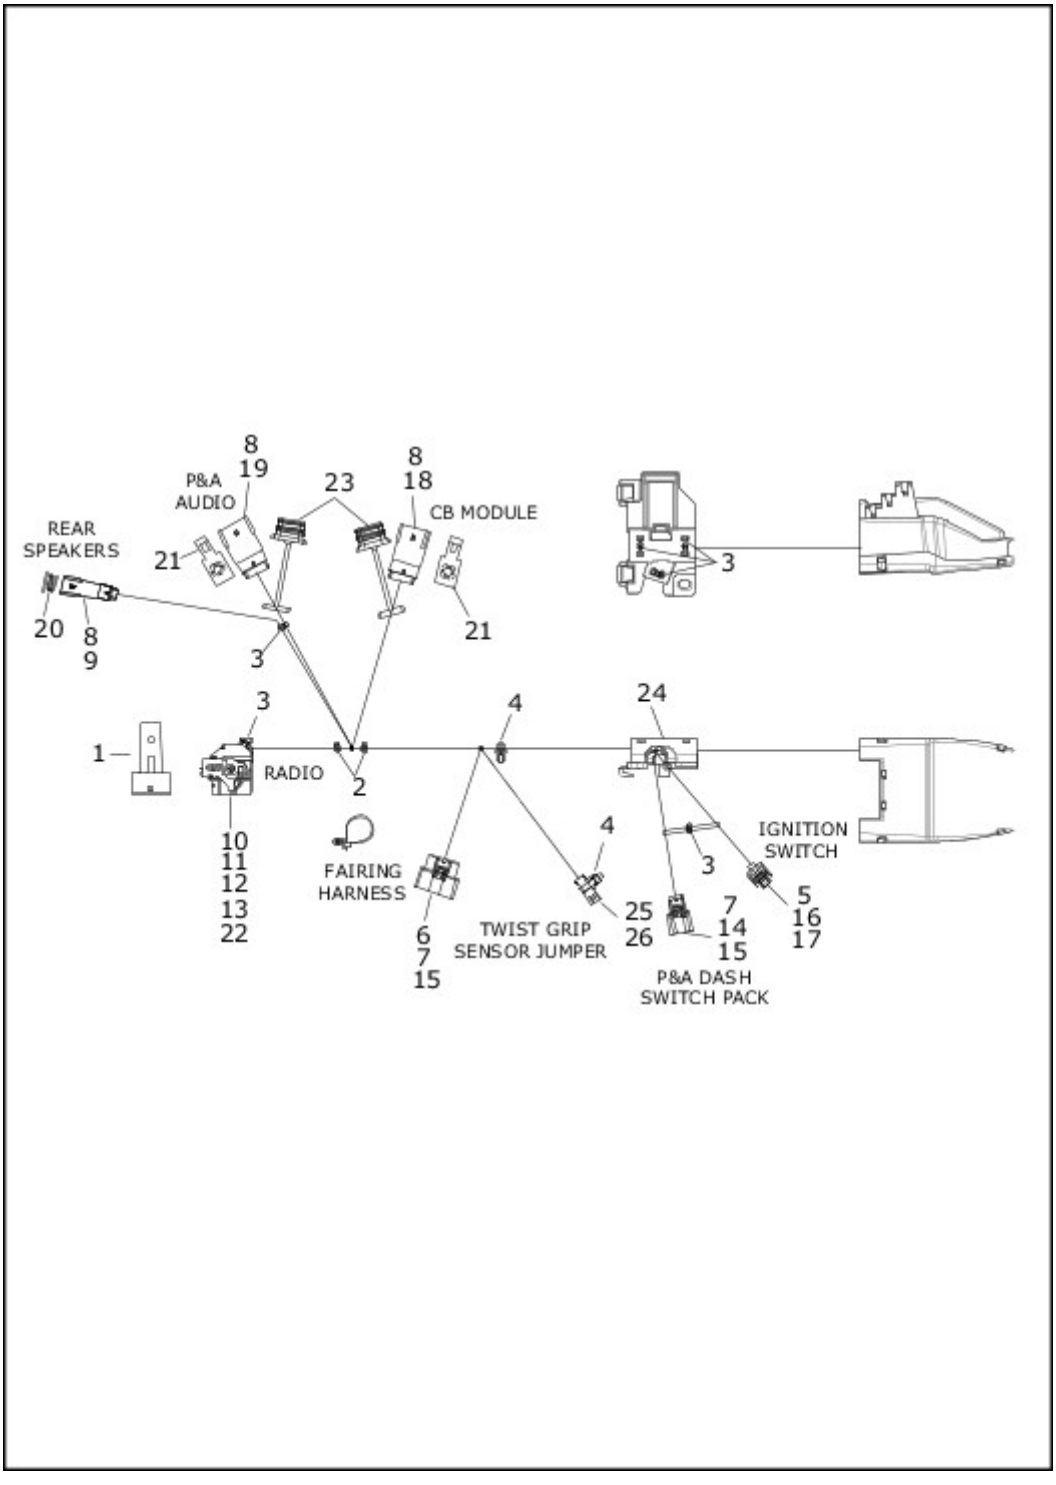

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	69202354	PLUG, weather	FLHT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201125A	MAIN WIRING HARNESS - NON-ABS	FLHT, FLHX
NOTE: Includes the following parts.			
2	10006	CABLE STRAP *(2)*	FLHT, FLHX
3	10065	CABLE STRAP *(6)*	FLHT, FLHX
4	10177	CABLE STRAP, anchored *(2)*	FLHT, FLHX
5	72062-06	HOUSING, two-way socket (gray)	FLHT, FLHX
6	72166-07BK	HOUSING, 16-way socket (black)	FLHT, FLHX
7	72168-07	TERMINAL, socket, 18-20 AWG *(16)*	FLHT, FLHX
8	72169-07	TERMINAL, pin, 16-20 AWG *(28)*	FLHT, FLHX
9	72175-07BK	HOUSING, four-way pin (black)	FLHT, FLHX
10	72209-11	COVER, wire	FLHT, FLHX
11	72222-11	TERMINAL, socket, 18-20 AWG *(26)*	FLHT, FLHX
12	72226-11	TERMINAL, socket, 14-16 AWG *(8)*	FLHT, FLHX
13	72256-11	SEAL PIN *(14)*	FLHT, FLHX
14	72414-07BK	HOUSING, six-way socket (black)	FLHT, FLHX
15	72473-07	SEAL PIN, natural *(6)*	FLHT, FLHX
16	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLHT, FLHX
17	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLHT, FLHX
18	72488-07BK	HOUSING, 12-way pin (black)	FLHT, FLHX
19	72490-07GY	HOUSING, 12-way pin (gray)	FLHT, FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	72632-10	PLUG, weather, four-way pin	FLHT, FLHX
21	73213-07	RETAINER, anchored *(2)*	FLHT, FLHX
22	69200193	HOUSING, 48-way socket (black)	FLHT, FLHX
23	69200205	PLUG, weather, 12-way pin *(2)*	FLHT, FLHX
24	69200215	CADDY, right steer head	FLHT, FLHX
25	69201163	HOUSING, six-way pin (black)	FLHT, FLHX
26	69201164	TERMINAL, pin, 22 AWG *(6)*	FLHT, FLHX

WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8)

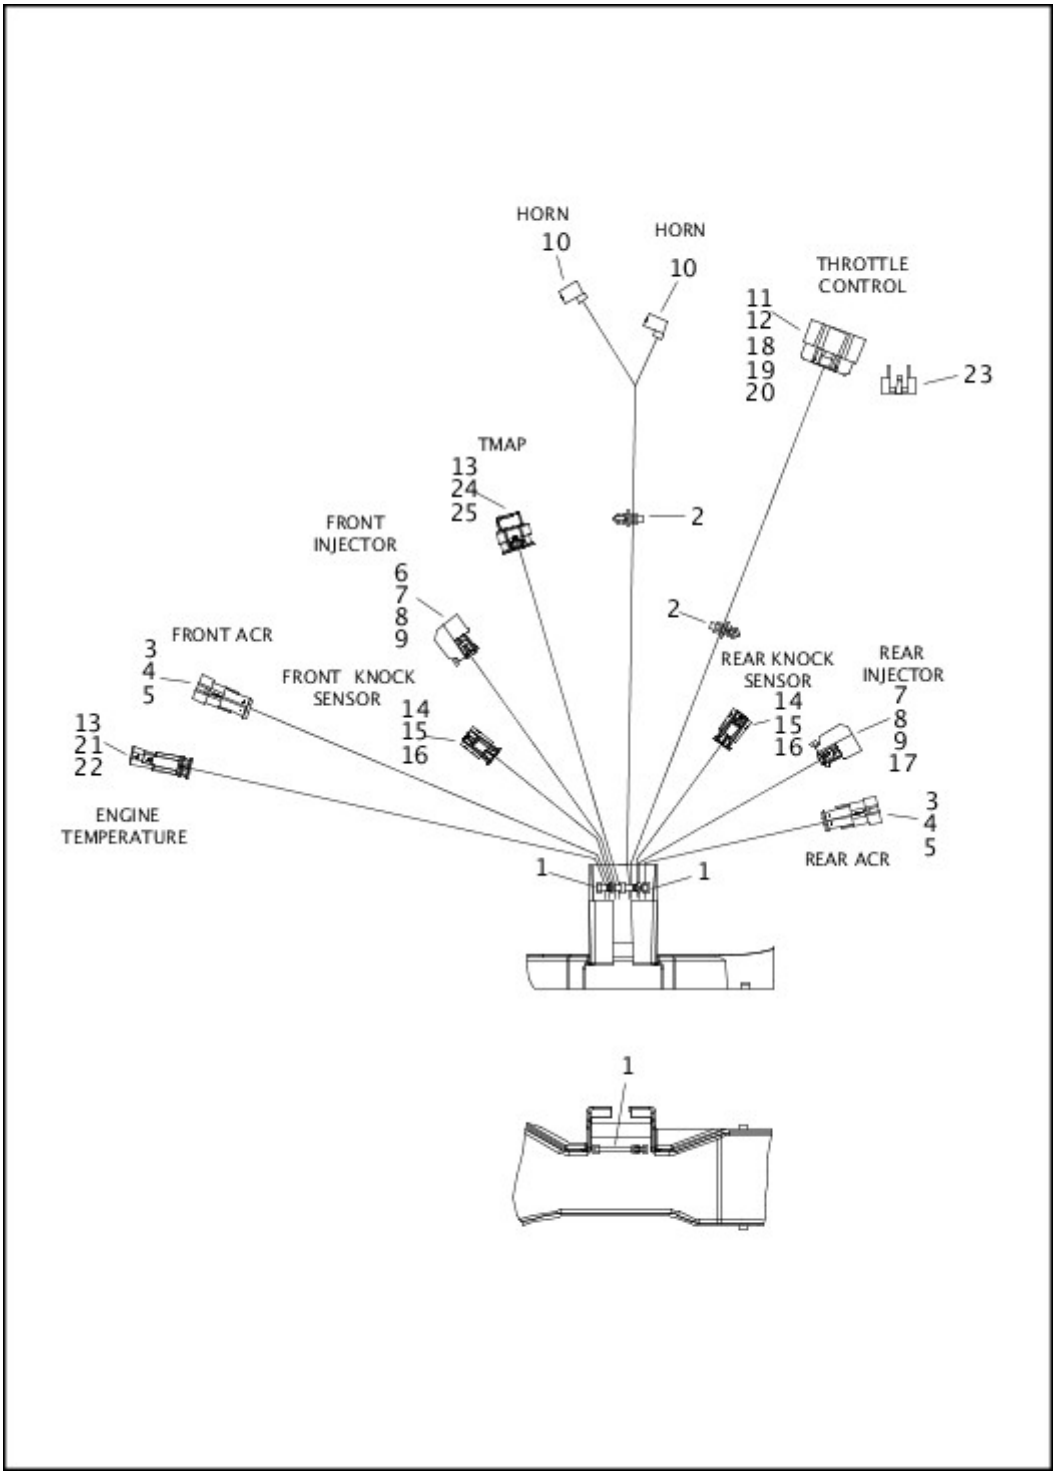

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201125A	MAIN WIRING HARNESS - NON-ABS	FLHT, FLHX
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHT, FLHX
2	10177	CABLE STRAP, anchored *(2)*	FLHT, FLHX
3	72008-05	TERMINAL, pin, 20-22 AWG *(4)*	FLHT, FLHX
4	72009-05	HOUSING, two-way pin (black) *(2)*	FLHT, FLHX
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLHT, FLHX
6	72098-06	HOUSING, two-way socket (gray)	FLHT, FLHX
7	72099-06	WIRE SEAL, 16-18 AWG (blue) *(4)*	FLHT, FLHX
8	72110-06	TERMINAL, socket, 16-18 AWG *(4)*	FLHT, FLHX
9	72145-06	SECONDARY LOCK, two-way socket *(2)*	FLHT, FLHX
10	72283-09	TERMINAL, socket, 14-16 AWG, 90 degree *(2)*	FLHT, FLHX
11	72499-07	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHT, FLHX
12	72569-08	TERMINAL, socket, 20-22 AWG *(2)*	FLHT, FLHX
13	69201301	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHT, FLHX
14	69201390	HOUSING, two-way socket (black) *(2)*	FLHT, FLHX
15	69201391	TERMINAL, socket, 20 AWG *(4)*	FLHT, FLHX
16	69201392	WIRE SEAL, 20 AWG (yellow) *(4)*	FLHT, FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	69201393	HOUSING, two-way socket (black)	FLHT, FLHX
18	69201394	HOUSING, six-way socket (black)	FLHT, FLHX
19	69201395	SECONDARY LOCK, six-way socket	FLHT, FLHX
20	69201396	TERMINAL, socket, 20 AWG *(4)*	FLHT, FLHX
21	69201397	HOUSING, two-way pin (gray)	FLHT, FLHX
22	69201398	TERMINAL, pin, 20 AWG *(2)*	FLHT, FLHX
23	69201416	CPA, six-way socket	FLHT, FLHX
24	69201441	HOUSING, four-way socket	FLHT, FLHX
25	69201442	TERMINAL, socket, 18 AWG *(4)*	FLHT, FLHX

WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8)

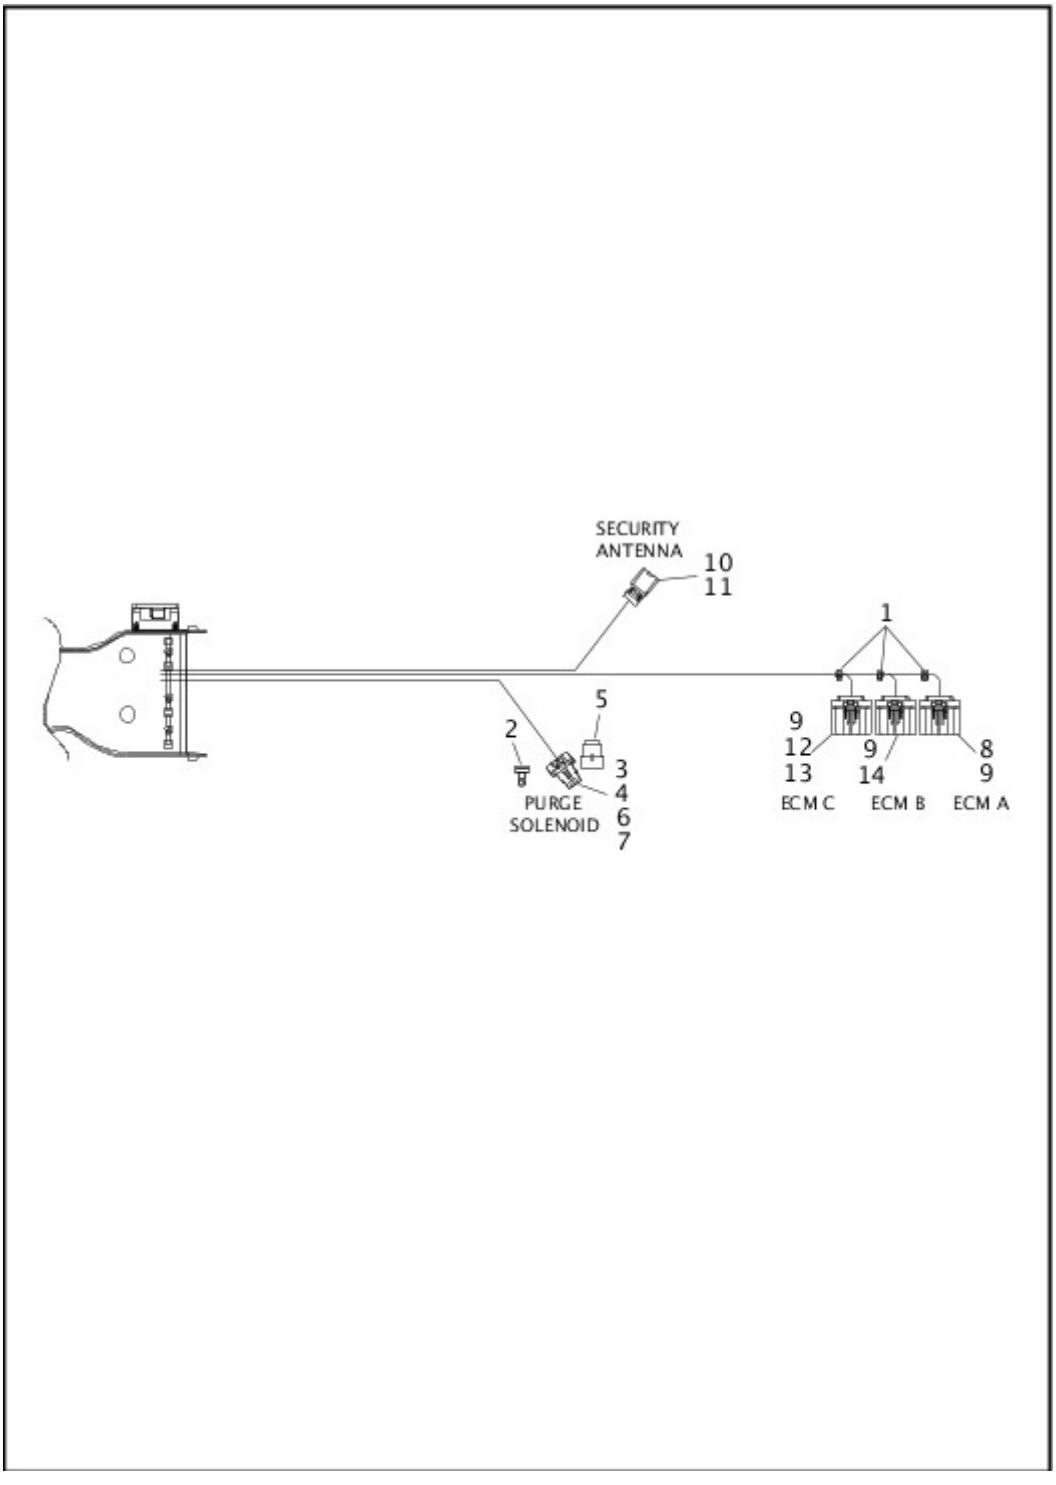


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201125A	MAIN WIRING HARNESS - NON-ABS	FLHT, FLHX
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHT, FLHX
2	10147	CLIP, connector	FLHT, FLHX
3	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLHT, FLHX
4	72518-01	HOUSING, two-way socket (red)	FLHT, FLHX
5	72533-06	PLUG, weather, two-way pin	FLHT, FLHX
6	72609-08	SECONDARY LOCK, two-way socket	FLHT, FLHX
7	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLHT, FLHX
8	72664-12A	HOUSING, 18-way socket (black)	FLHT, FLHX
9	72666-12	TERMINAL, socket, 18-20 AWG *(43)*	FLHT, FLHX
10	72720-07	HOUSING, two-way socket (black)	FLHT, FLHX
11	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLHT, FLHX
12	69201168	TERMINAL, socket, 22 AWG *(2)*	FLHT, FLHX
13	69201415	HOUSING, 18-way socket (brown)	FLHT, FLHX
14	69201440	HOUSING, 18-way socket (gray)	FLHT, FLHX

WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (5 OF 8)

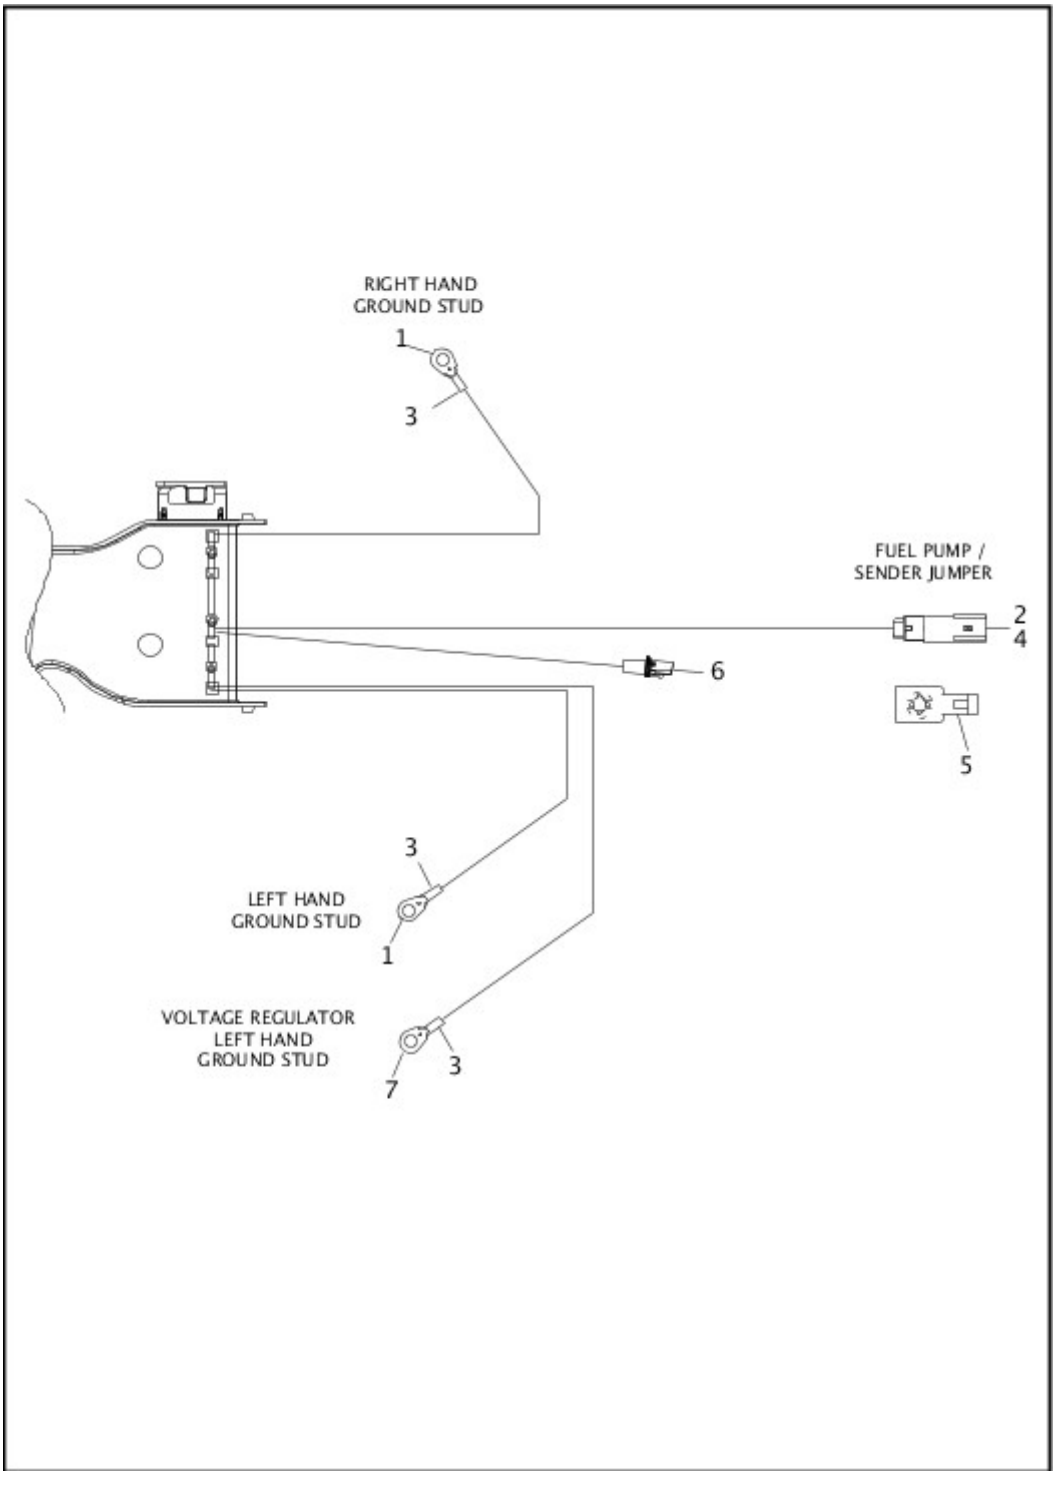


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201125A	MAIN WIRING HARNESS - NON-ABS	FLHT, FLHX
NOTE: Includes the following parts.			
1	9819	TERMINAL, ring, 12 AWG *(2)*	FLHT, FLHX
2	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLHT, FLHX
3	72249-94	HEAT SHRINK TUBE, .415 x 1 in (black)	FLHT, FLHX
4	72415-07GY	HOUSING, four-way pin (gray)	FLHT, FLHX
5	73213-07	RETAINER, anchored	FLHT, FLHX
6	69200294	CABLE, AM/FM antenna	FLHT, FLHX
7	69201596	TERMINAL, ring, 8-10 AWG	FLHT, FLHX

WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8)

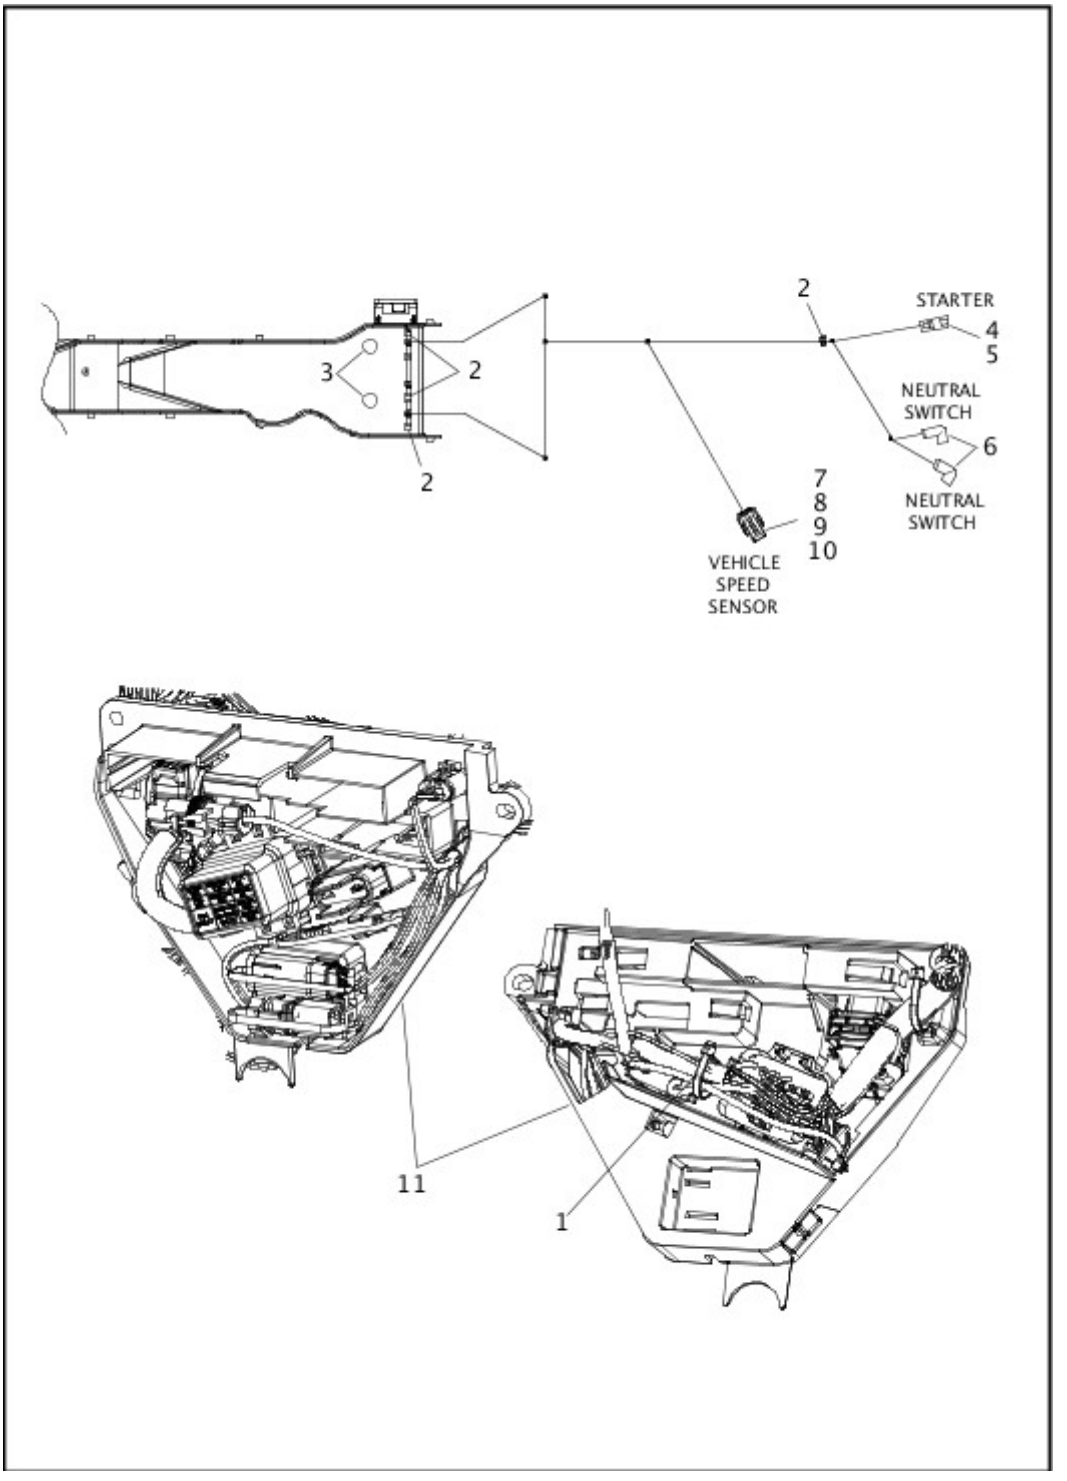


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201125A	MAIN WIRING HARNESS - NON-ABS	FLHT, FLHX
NOTE: Includes the following parts.			
1	10006	CABLE STRAP	FLHT, FLHX
2	10065	CABLE STRAP *(4)*	FLHT, FLHX
3	11779	FASTENER, push-in (black) *(2)*	FLHT, FLHX
4	72291-94	TERMINAL, socket, 14-16 AWG	FLHT, FLHX
5	72295-94	HOUSING, one-way socket (white)	FLHT, FLHX
6	72405-98BK	WIRE ASSEMBLY, push-on, right angle molded, 65-1/2 in length (black) *(2)*	FLHT, FLHX
7	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHT, FLHX
8	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHT, FLHX
9	72543-07BK	HOUSING, three-way socket (black)	FLHT, FLHX
10	72544-07	SECONDARY LOCK, three-way socket	FLHT, FLHX
11	69200175	CADDY, fuse block, electrical panel	FLHT, FLHX

WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8)

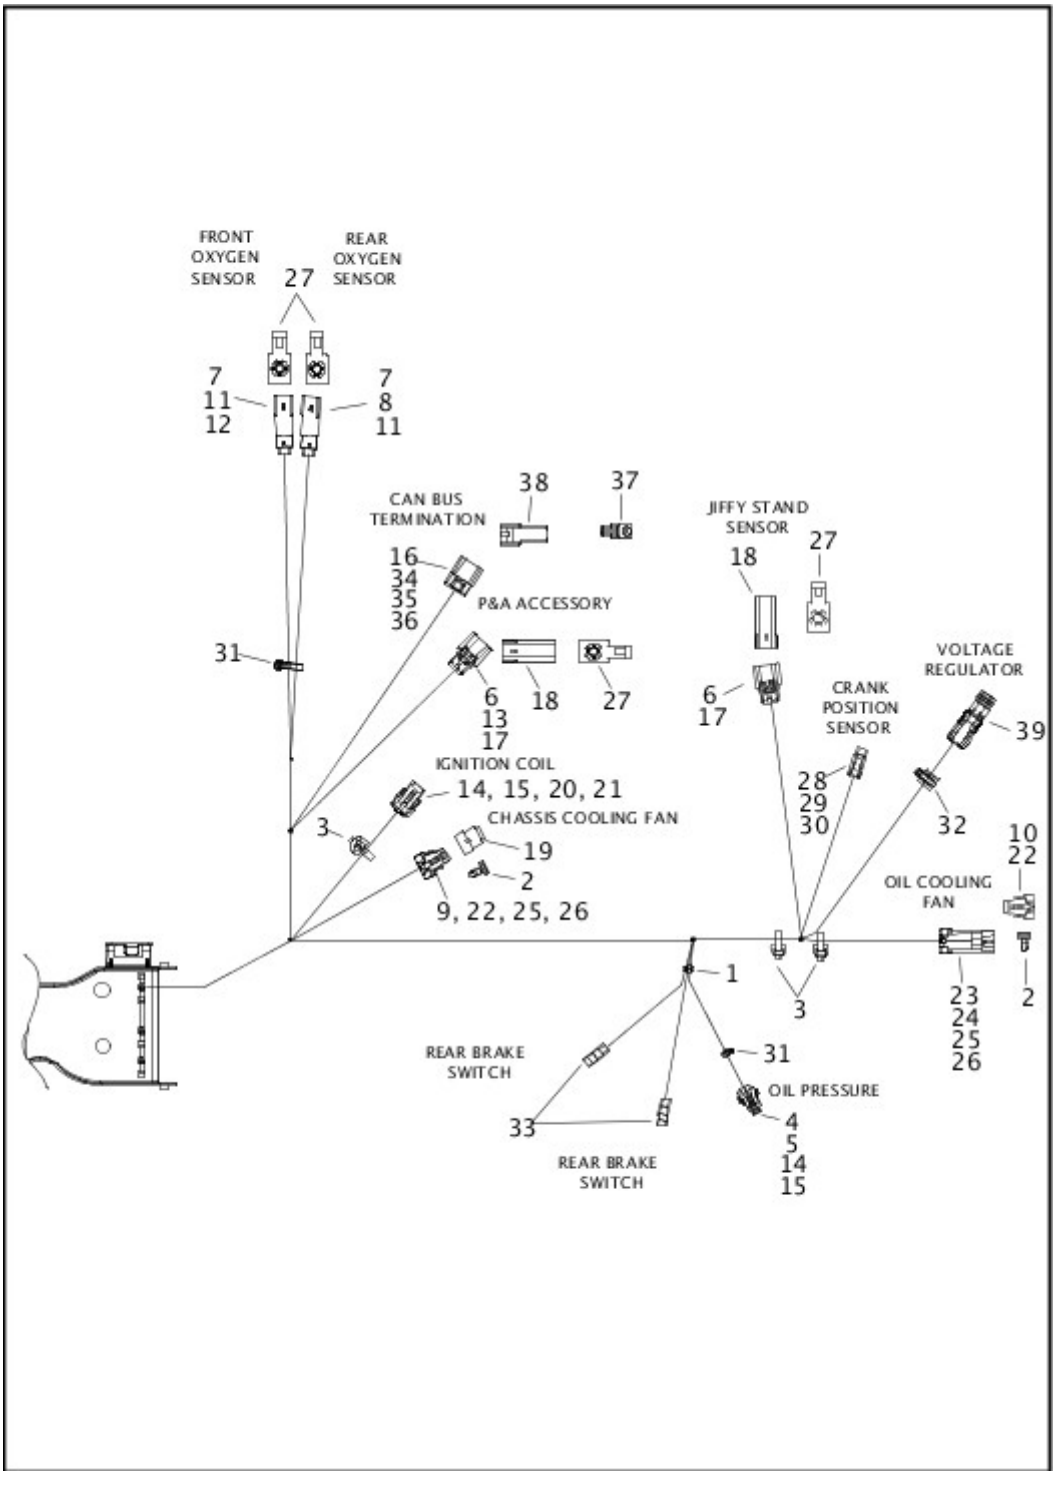

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201125A	MAIN WIRING HARNESS - NON-ABS	FLHT, FLHX
NOTE: Includes the following parts.			
1	10065	CABLE STRAP	FLHT, FLHX
2	10147	CLIP, connector *(2)*	FLHT, FLHX
3	10177	CABLE STRAP, anchored *(3)*	FLHT, FLHX
4	72065-06A	HOUSING, three-way socket (black)	FLHT, FLHX
5	72127-06	SECONDARY LOCK, three-way	FLHT, FLHX
6	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLHT, FLHX
7	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLHT, FLHX
8	72175-07BK	HOUSING, four-way pin (black)	FLHT, FLHX
9	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLHT, FLHX
10	72232-96	SEAL PIN (red) *(2)*	FLHT, FLHX
11	72343-10	TERMINAL, pin, 16-20 AWG *(4)*	FLHT, FLHX
12	72415-07GY	HOUSING, four-way pin (gray)	FLHT, FLHX
13	72473-07	SEAL PIN, natural	FLHT, FLHX
14	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLHT, FLHX
15	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLHT, FLHX
16	72499-07	WIRE SEAL, 20-22 AWG (green) *(2)*	FLHT, FLHX
17	72512-07BK	HOUSING, three-way socket (black) *(2)*	FLHT, FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72519-09BK	PLUG, weather, three-way socket *(2)*	FLHT, FLHX
19	72533-06	PLUG, weather, two-way pin	FLHT, FLHX
20	72544-07	SECONDARY LOCK, three-way socket	FLHT, FLHX
21	72589-09	HOUSING, three-way socket (black)	FLHT, FLHX
22	72606-08	HOUSING, two-way socket (black) *(2)*	FLHT, FLHX
23	72607-08	HOUSING, two-way pin (black)	FLHT, FLHX
24	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	FLHT, FLHX
25	72609-08	SECONDARY LOCK, two-way socket *(2)*	FLHT, FLHX
26	72610-08	WIRE SEAL, 18-20 AWG (white) *(4)*	FLHT, FLHX
27	73213-07	RETAINER, anchored *(4)*	FLHT, FLHX
28	74112-98BK	HOUSING, two-way socket (black)	FLHT, FLHX
29	74152-98	SECONDARY LOCK, two-way socket	FLHT, FLHX
30	74191-98	TERMINAL, socket 16-20 AWG *(2)*	FLHT, FLHX
31	12500014	CABLE STRAP *(2)*	FLHT, FLHX
32	12500018	CABLE STRAP	FLHT, FLHX
33	69200238	TERMINAL, socket, 20 AWG *(2)*	FLHT, FLHX
34	69201396	TERMINAL, socket, 20 AWG *(2)*	FLHT, FLHX
35	69201400	HOUSING, two-way socket,(black)	FLHT, FLHX
36	69201401	SECONDARY LOCK, two-way socket	FLHT, FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	69201404	CONNECTOR, anchored	FLHT, FLHX
38	69201405	RESISTOR PACK	FLHT, FLHX
39	69201423	DC LEAD ASSEMBLY, two-way socket	FLHT, FLHX

WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8)

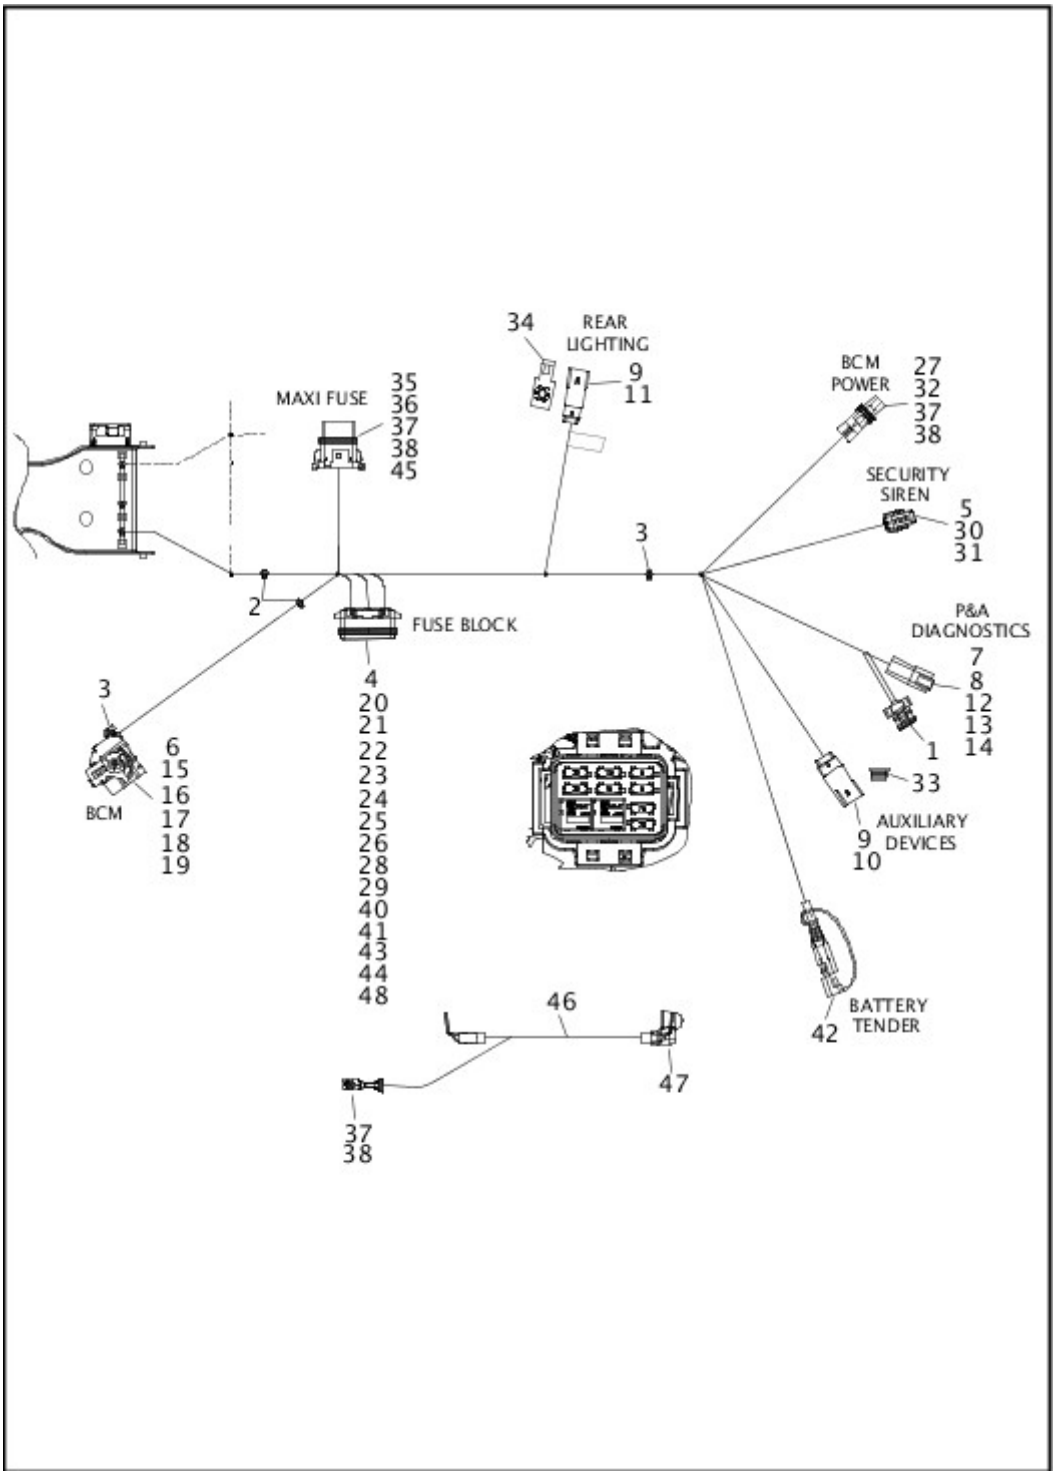

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201125A	MAIN WIRING HARNESS - NON-ABS	FLHT, FLHX
NOTE: Includes the following parts.			
1	6990	PLUG WEATHER, six-way pin	FLHT, FLHX
2	10006	CABLE STRAP *(2)*	FLHT, FLHX
3	10065	CABLE STRAP *(2)*	FLHT, FLHX
4	31586-07	RELAY *(2)*	FLHT, FLHX
5	72064-06	HOUSING, three-way socket (black)	FLHT, FLHX
6	72081-11	HOUSING, 48-way socket (black)	FLHT, FLHX
7	72106-94BK	HOUSING, six-way pin (black) (replaces gray connector)	FLHT, FLHX
8	72146-94	SECONDARY LOCK, six-way pin	FLHT, FLHX
9	72169-07	TERMINAL, pin, 16-20 AWG *(10)*	FLHT, FLHX
10	72175-07BK	HOUSING, four-way pin (black)	FLHT, FLHX
11	72188-07BK	HOUSING, six-way pin (black)	FLHT, FLHX
12	72190-94	TERMINAL, pin, 16-18 AWG *(2)*	FLHT, FLHX
13	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLHT, FLHX
14	72195-94	SEAL PIN	FLHT, FLHX
15	72209-11	COVER, wire	FLHT, FLHX
16	72222-11	TERMINAL, socket, 18-20 AWG *(21)*	FLHT, FLHX
17	72226-11	TERMINAL, socket, 14-16 AWG	FLHT, FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLHT, FLHX
19	72256-11	SEAL PIN, 0.6 MM (white) *(9)*	FLHT, FLHX
20	72296-95	TERMINAL, socket, 14-16 AWG *(3)*	FLHT, FLHX
21	72298-95	WIRE SEAL, 14-18 AWG (green) *(3)*	FLHT, FLHX
22	72299-95	SEAL PIN, green *(2)*	FLHT, FLHX
23	72308-97	TERMINAL, socket, 12-14 AWG *(5)*	FLHT, FLHX
24	72330-95	FUSE, 15 A (blue)	FLHT, FLHX
25	72331-95	FUSE, 5 A (tan) *(2)*	FLHT, FLHX
26	72345-02	FUSE, 20 A (yellow) *(3)*	FLHT, FLHX
27	72350-11	HOUSING, one-way socket (black)	FLHT, FLHX
28	72356-95	TERMINAL, socket, 18-20 AWG *(14)*	FLHT, FLHX
29	72412-97	WIRE SEAL, 12-14 AWG (gray) *(5)*	FLHT, FLHX
30	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHT, FLHX
31	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHT, FLHX
32	72575-11	SECONDARY LOCK, one-way socket	FLHT, FLHX
33	72632-10	PLUG, weather, four-way pin	FLHT, FLHX
34	73213-07	RETAINER, anchored	FLHT, FLHX
35	73301-04	HOUSING, two-way pin (black)	FLHT, FLHX
36	73303-04	SECONDARY LOCK, two-way socket	FLHT, FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	73304-04	TERMINAL, socket, 10 AWG *(3)*	FLHT, FLHX
38	73305-04	WIRE SEAL, 10 AWG (blue) *(3)*	FLHT, FLHX
39	11100115	CLOTH, HARNESS WRAP, 50 m (not shown)	FLHT, FLHX
40	69200194	FUSE BLOCK, 24-way	FLHT, FLHX
41	69200199	WIRE SEAL, 18-20 AWG (purple) *(14)*	FLHT, FLHX
42	69200212	HARNESS, battery tender	FLHT, FLHX
43	69200293	FUSE, 7.5 A (brown) *(2)*	FLHT, FLHX
44	69200312	SECONDARY LOCK, fuse block *(3)*	FLHT, FLHX
45	69200336	MAIN FUSE, 50 A (red), NOTE: Fuse is sold separately and is not part of main harness	FLHT, FLHX
46	69201130	WIRE HARNESS, battery positive to starter, with 73304-04, 73305-04 and 69201307	FLHT, FLHX
47	69201307	BOOT, battery positive	FLHT, FLHX
48	69201411	COVER, fuse block	FLHT, FLHX

WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8)

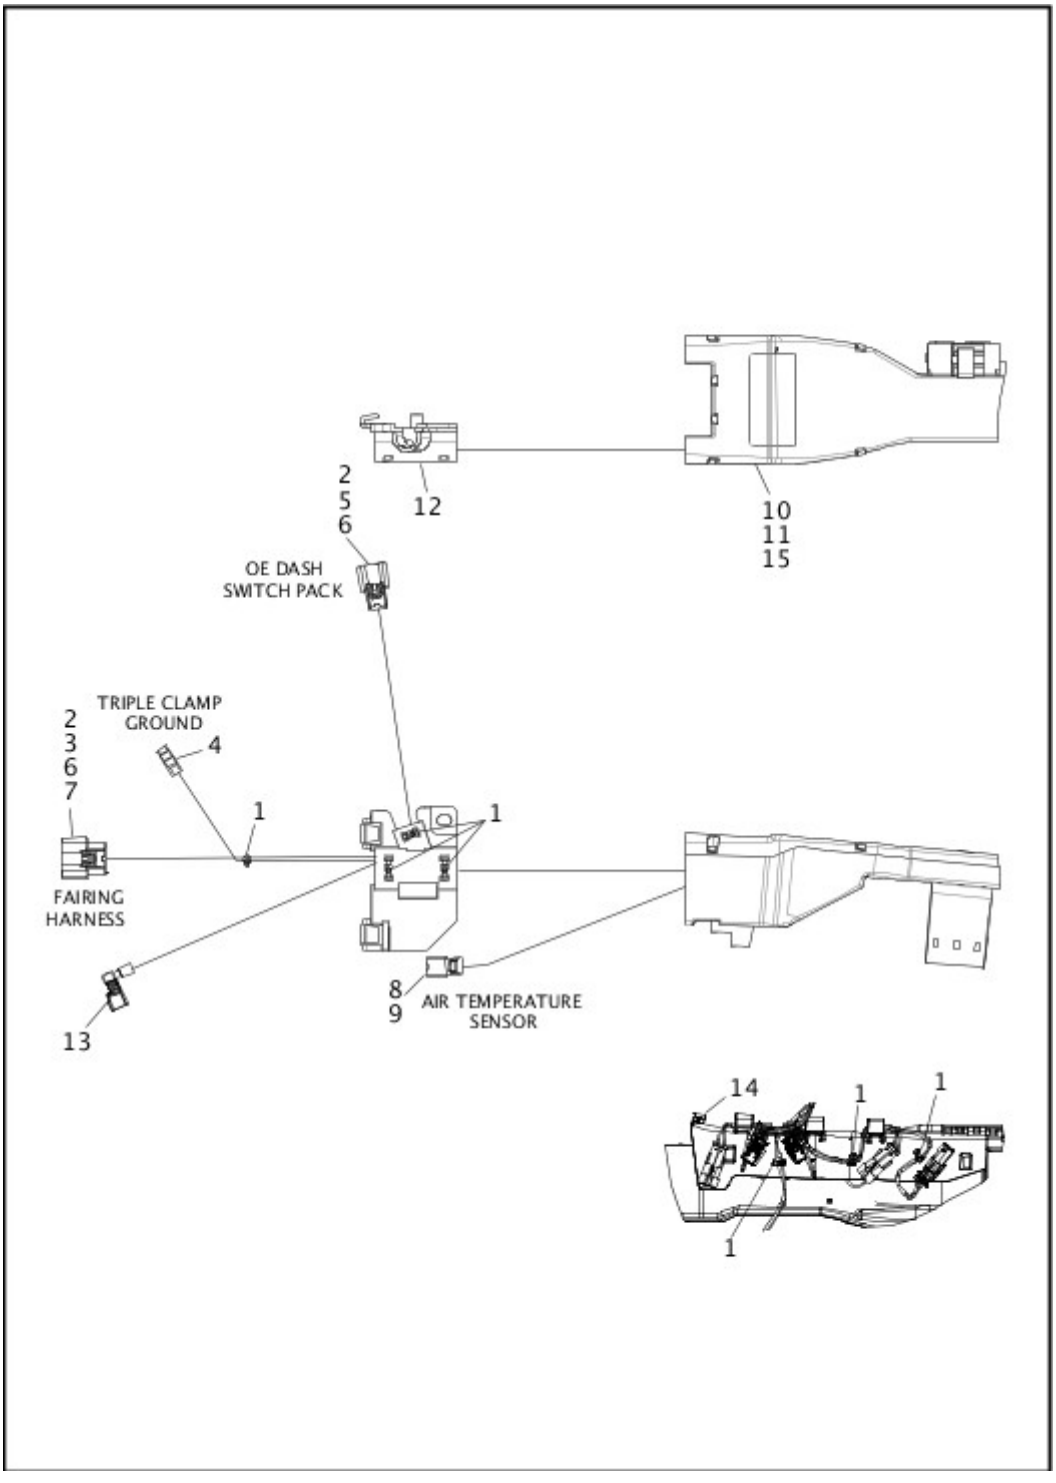


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201121A	MAIN WIRING HARNESS - ABS	FLHT, FLHX, FLHXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(7)*	FLHT, FLHX, FLHXS
2	72168-07	TERMINAL, socket, 18-20 AWG *(7)*	FLHT, FLHX, FLHXS
3	72272-07	TERMINAL, socket, 14-16 AWG *(4)*	FLHT, FLHX, FLHXS
4	72364-06	TERMINAL, socket, 10-14 AWG	FLHT, FLHX, FLHXS
5	72414-07BK	HOUSING, six-way socket (black)	FLHT, FLHX, FLHXS
6	72473-07	SEAL PIN, natural *(7)*	FLHT, FLHX, FLHXS
7	72489-07GY	HOUSING, 12-way socket (gray)	FLHT, FLHX, FLHXS
8	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLHT, FLHX, FLHXS
9	69200201	HOUSING, two-way socket (black)	FLHT, FLHX, FLHXS
10	69200202A	WIRE TROUGH	FLHT, FLHX, FLHXS
11	69200203A	COVER, wire trough, with 15368-01A and 69201459	FLHT, FLHX, FLHXS
12	69200214	CADDY, left steer head	FLHT, FLHX, FLHXS
13	69200294	CABLE, AM/FM antenna	FLHT, FLHX, FLHXS
14	69201287	BRACKET, mounting, electrical connector	FLHT, FLHX, FLHXS
15	69201459	BRACKET	FLHT, FLHX, FLHXS

WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8)

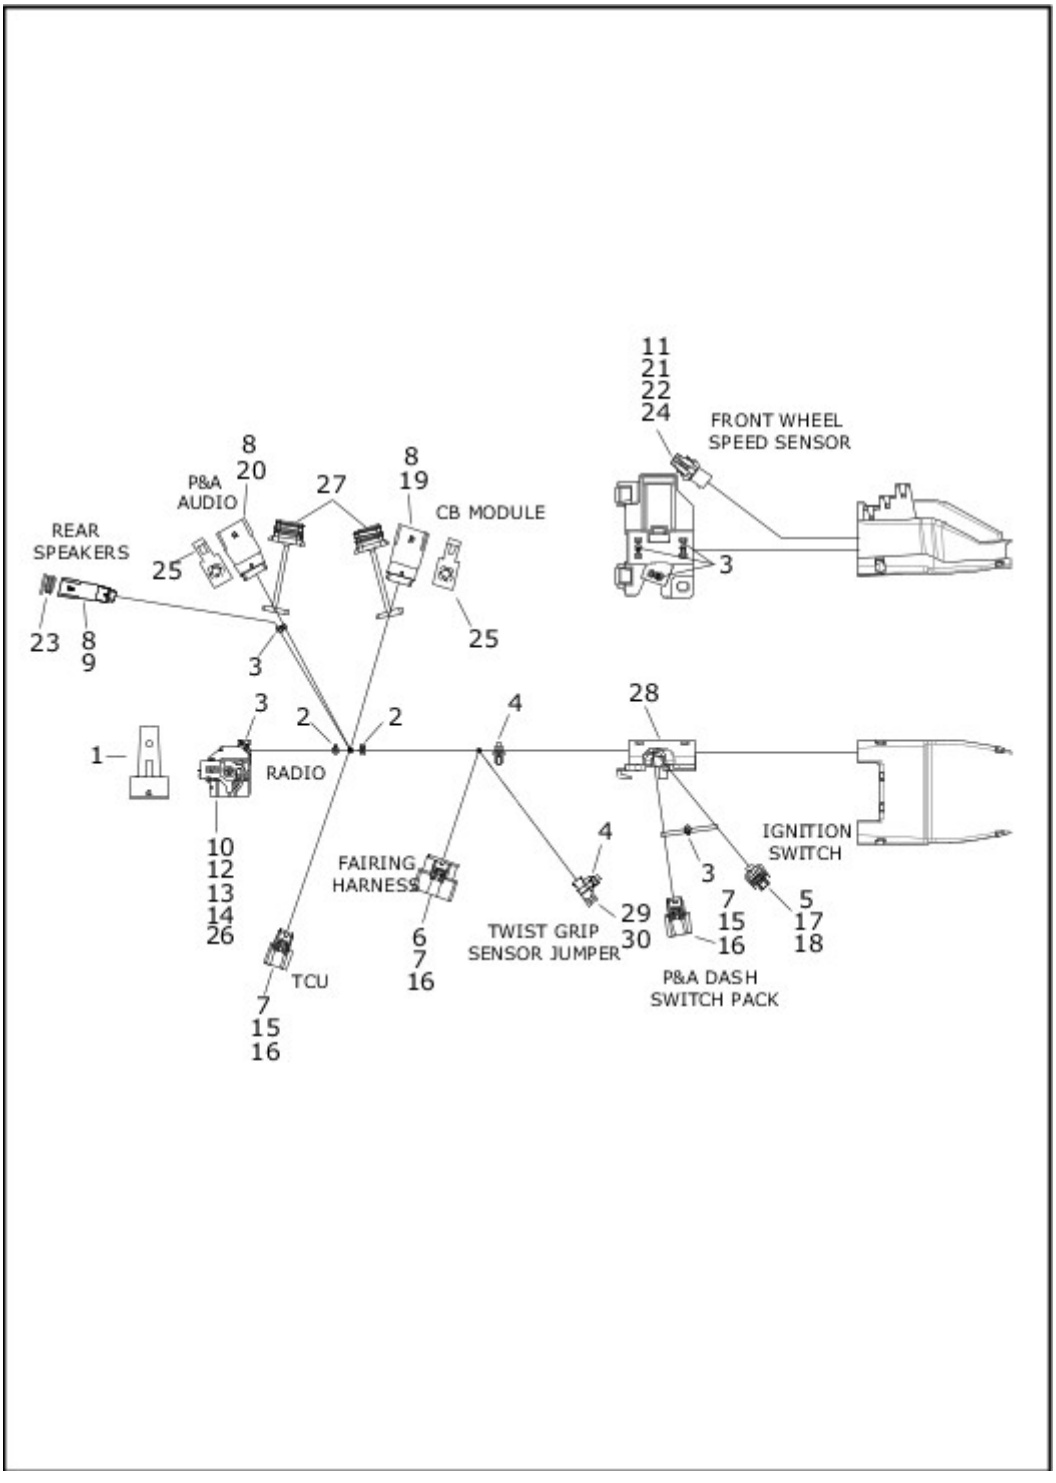

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	69202354	PLUG, weather	FLHT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201121A	MAIN WIRING HARNESS - ABS	FLHT, FLHX, FLHXS
NOTE: Includes the following parts.			
2	10006	CABLE STRAP *(2)*	FLHT, FLHX, FLHXS
3	10065	CABLE STRAP *(6)*	FLHT, FLHX, FLHXS
4	10177	CABLE STRAP, anchored *(2)*	FLHT, FLHX, FLHXS
5	72062-06	HOUSING, two-way socket (gray)	FLHT, FLHX, FLHXS
6	72166-07BK	HOUSING, 16-way socket (black)	FLHT, FLHX, FLHXS
7	72168-07	TERMINAL, socket, 18-20 AWG *(16)*	FLHT, FLHX, FLHXS
8	72169-07	TERMINAL, pin, 16-20 AWG *(28)*	FLHT, FLHX, FLHXS
9	72175-07BK	HOUSING, four-way pin (black)	FLHT, FLHX, FLHXS
10	72209-11	COVER, wire	FLHT, FLHX, FLHXS
11	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLHT, FLHX, FLHXS
12	72222-11	TERMINAL, socket, 18-20 AWG *(26)*	FLHT, FLHX, FLHXS
13	72226-11	TERMINAL, socket, 14-16 AWG *(8)*	FLHT, FLHX, FLHXS
14	72256-11	SEAL PIN, 0.6 mm (white) *(14)*	FLHT, FLHX, FLHXS
15	72414-07BK	HOUSING, six-way socket (black)	FLHT, FLHX, FLHXS
16	72473-07	SEAL PIN, natural *(6)*	FLHT, FLHX, FLHXS
17	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLHT, FLHX, FLHXS
18	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLHT, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	72488-07BK	HOUSING, 12-way pin (black)	FLHT, FLHX, FLHXS
20	72490-07GY	HOUSING, 12-way pin (gray)	FLHT, FLHX, FLHXS
21	72606-08	HOUSING, two-way socket (black)	FLHT, FLHX, FLHXS
22	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLHT, FLHX, FLHXS
23	72632-10	PLUG, weather, four-way pin	FLHT, FLHX, FLHXS
24	72639-10	SECONDARY LOCK, two-way socket	FLHT, FLHX, FLHXS
25	73213-07	RETAINER, anchored *(2)*	FLHT, FLHX, FLHXS
26	69200193	HOUSING, 48-way socket (black)	FLHT, FLHX, FLHXS
27	69200205	PLUG, weather, 12-way pin *(2)*	FLHT, FLHX, FLHXS
28	69200215	CADDY, right steer head	FLHT, FLHX, FLHXS
29	69201163	HOUSING, six-way pin (black)	FLHT, FLHX, FLHXS
30	69201164	TERMINAL, pin, 22 AWG *(6)*	FLHT, FLHX, FLHXS

WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8)

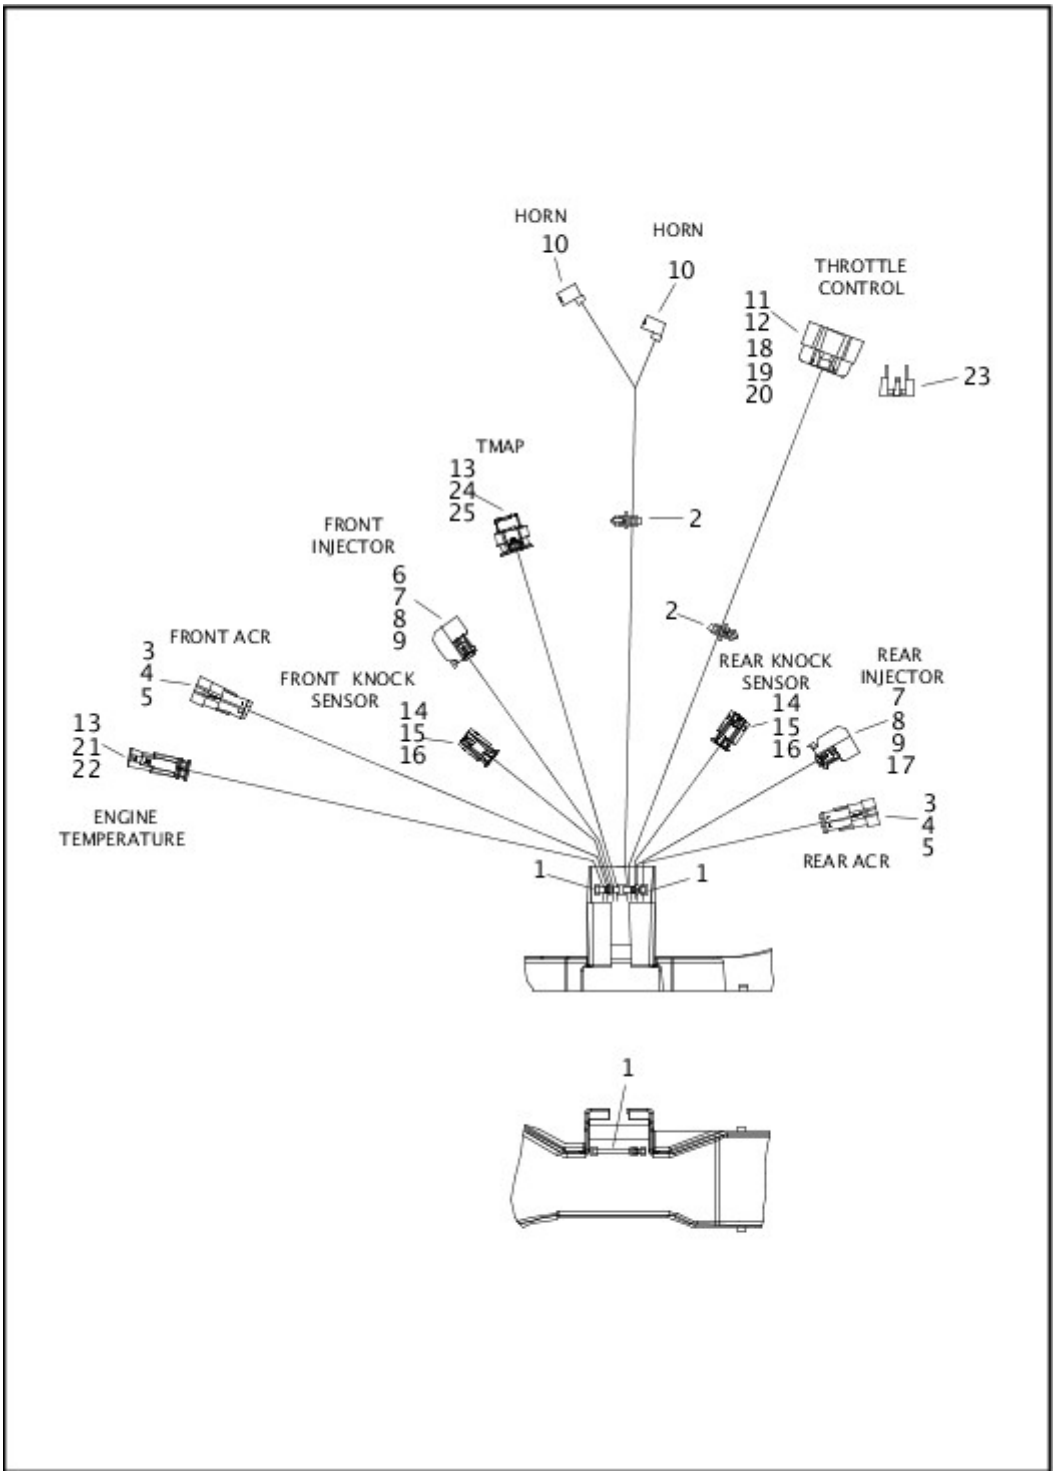

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201121A	MAIN WIRING HARNESS - ABS	FLHT, FLHX, FLHXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHT, FLHX, FLHXS
2	10177	CABLE STRAP, anchored *(2)*	FLHT, FLHX, FLHXS
3	72008-05	TERMINAL, pin, 20-22 AWG *(4)*	FLHT, FLHX, FLHXS
4	72009-05	HOUSING, two-way pin (black) *(2)*	FLHT, FLHX, FLHXS
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLHT, FLHX, FLHXS
6	72098-06	HOUSING, two-way socket (gray)	FLHT, FLHX, FLHXS
7	72099-06	WIRE SEAL, 16-18 AWG (blue) *(4)*	FLHT, FLHX, FLHXS
8	72110-06	TERMINAL, socket, 16-18 AWG *(4)*	FLHT, FLHX, FLHXS
9	72145-06	SECONDARY LOCK, two-way socket *(2)*	FLHT, FLHX, FLHXS
10	72283-09	TERMINAL, socket, 14-16 AWG, 90 degree *(2)*	FLHT, FLHX, FLHXS
11	72499-07	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHT, FLHX, FLHXS
12	72569-08	TERMINAL, socket, 20-22 AWG *(2)*	FLHT, FLHX, FLHXS
13	69201301	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHT, FLHX, FLHXS
14	69201390	HOUSING, two-way socket (black) *(2)*	FLHT, FLHX, FLHXS
15	69201391	TERMINAL, socket, 20 AWG *(4)*	FLHT, FLHX, FLHXS
16	69201392	WIRE SEAL, 20 AWG (blue) *(4)*	FLHT, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	69201393	HOUSING, two-way socket (black)	FLHT, FLHX, FLHXS
18	69201394	HOUSING, six-way socket (black)	FLHT, FLHX, FLHXS
19	69201395	SECONDARY LOCK, six-way socket	FLHT, FLHX, FLHXS
20	69201396	TERMINAL, socket, 20 AWG *(4)*	FLHT, FLHX, FLHXS
21	69201397	HOUSING, two-way pin (gray)	FLHT, FLHX, FLHXS
22	69201398	TERMINAL, pin, 20 AWG *(2)*	FLHT, FLHX, FLHXS
23	69201416	SECONDART LOCK, six-way socket	FLHT, FLHX, FLHXS
24	69201441	HOUSING, four-way socket	FLHT, FLHX, FLHXS
25	69201442	TERMINAL, socket, 18 AWG *(4)*	FLHT, FLHX, FLHXS

WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8)

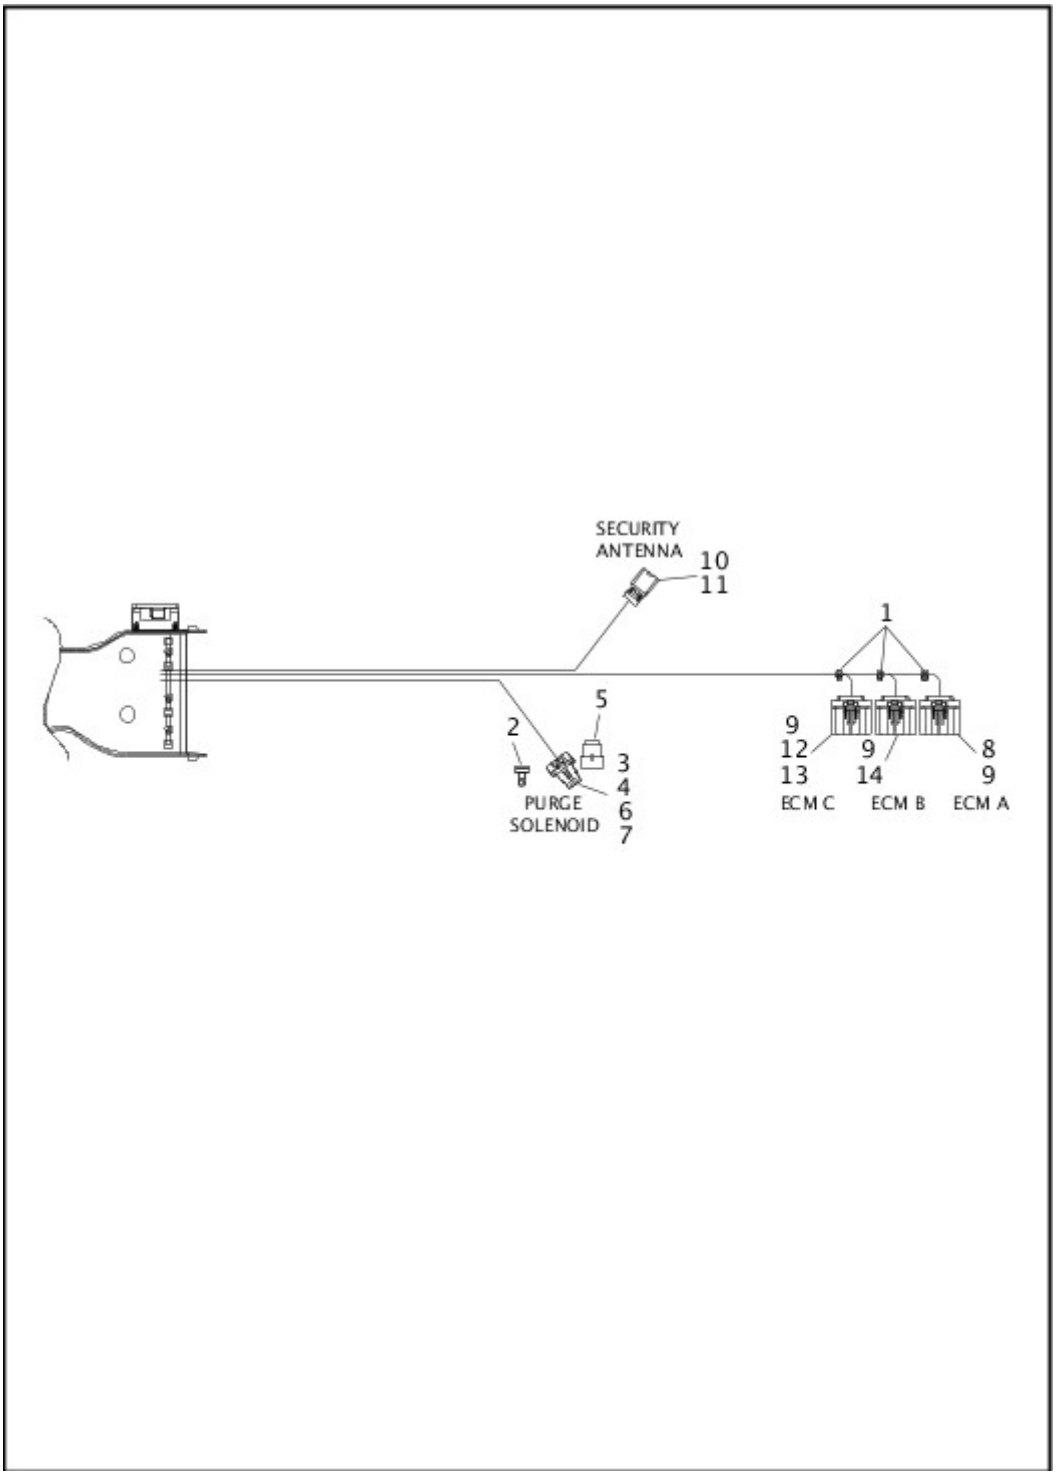


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201121A	MAIN WIRING HARNESS - ABS	FLHT, FLHX, FLHXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHT, FLHX, FLHXS
2	10147	CLIP, connector	FLHT, FLHX, FLHXS
3	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLHT, FLHX, FLHXS
4	72518-01	HOUSING, two-way socket (red)	FLHT, FLHX, FLHXS
5	72533-06	PLUG, weather, two-way pin	FLHT, FLHX, FLHXS
6	72609-08	SECONDARY LOCK, two-way socket	FLHT, FLHX, FLHXS
7	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLHT, FLHX, FLHXS
8	72664-12A	HOUSING, 18-way socket (black)	FLHT, FLHX, FLHXS
9	72666-12	TERMINAL, socket, 18-20 AWG *(43)*	FLHT, FLHX, FLHXS
10	72720-07	HOUSING, two-way socket (black)	FLHT, FLHX, FLHXS
11	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLHT, FLHX, FLHXS
12	69201168	TERMINAL, socket, 22 AWG *(2)*	FLHT, FLHX, FLHXS
13	69201415	HOUSING, 18-way socket (brown)	FLHT, FLHX, FLHXS
14	69201440	HOUSING, 18-way socket (gray)	FLHT, FLHX, FLHXS

WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (5 OF 8)

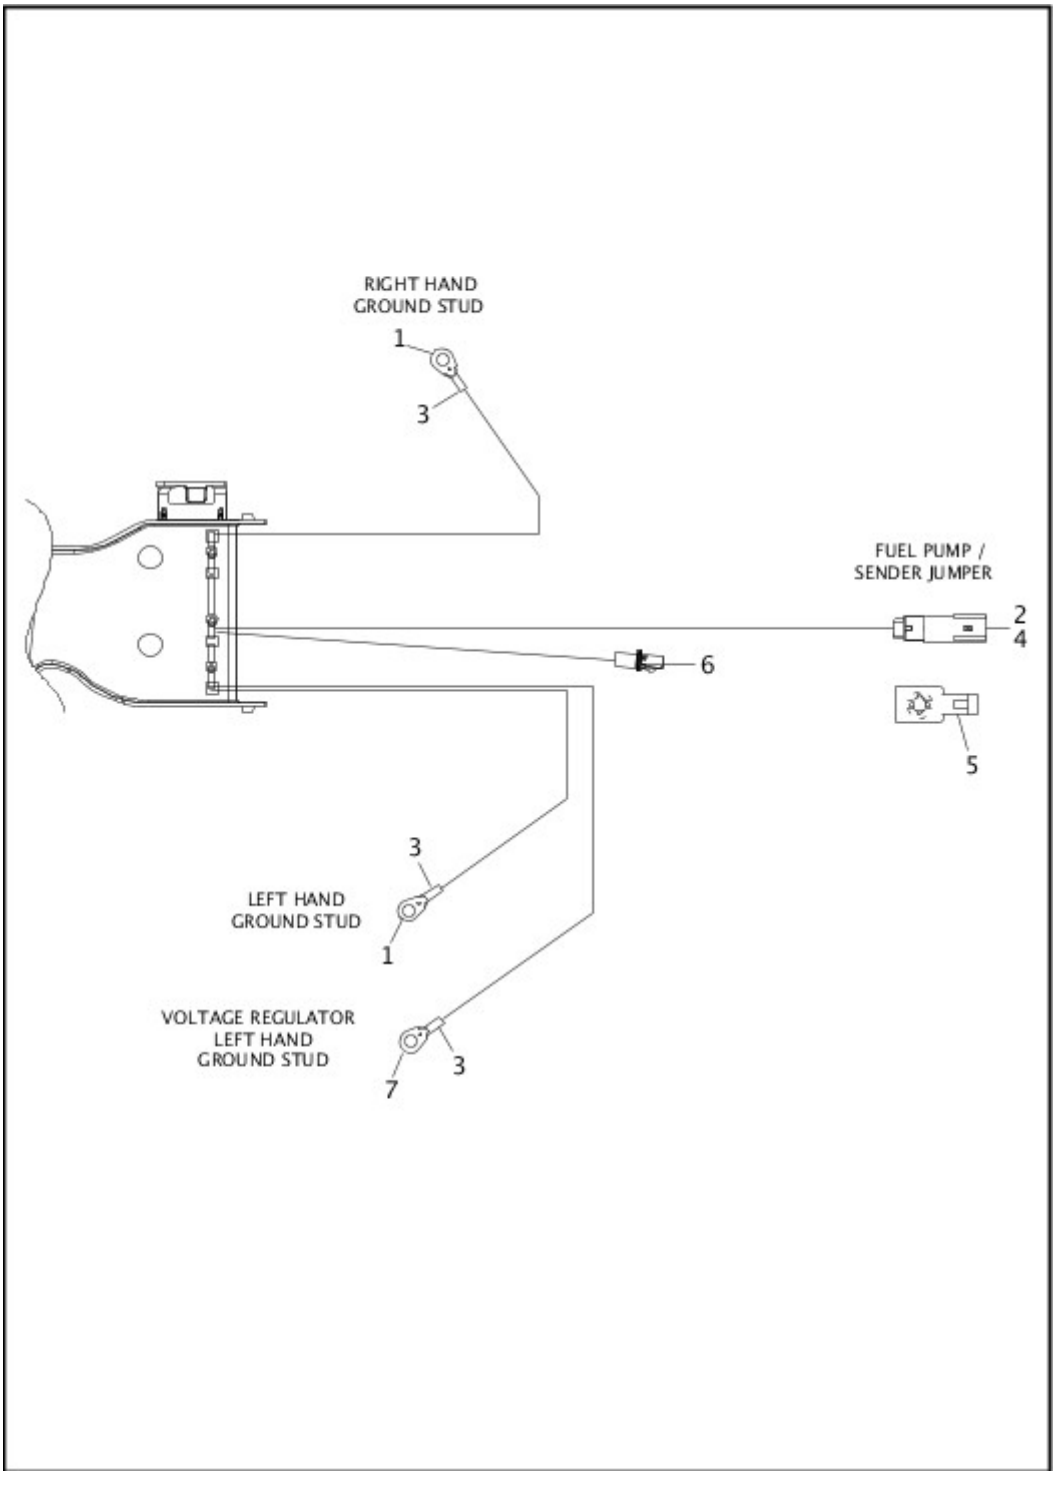


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201121A	MAIN WIRING HARNESS - ABS	FLHT, FLHX, FLHXS
NOTE: Includes the following parts.			
1	9819	TERMINAL, ring, 12 AWG *(2)*	FLHT, FLHX, FLHXS
2	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLHT, FLHX, FLHXS
3	72249-94	HEAT SHRINK TUBE, .415 x 1 in (black)	FLHT, FLHX, FLHXS
4	72415-07GY	HOUSING, four-way pin (gray)	FLHT, FLHX, FLHXS
5	73213-07	RETAINER, anchored	FLHT, FLHX, FLHXS
6	69200294	CABLE, AM/FM antenna	FLHT, FLHX, FLHXS
7	69201596	TERMINAL, ring, 8-10 AWG	FLHT, FLHX, FLHXS

WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8)

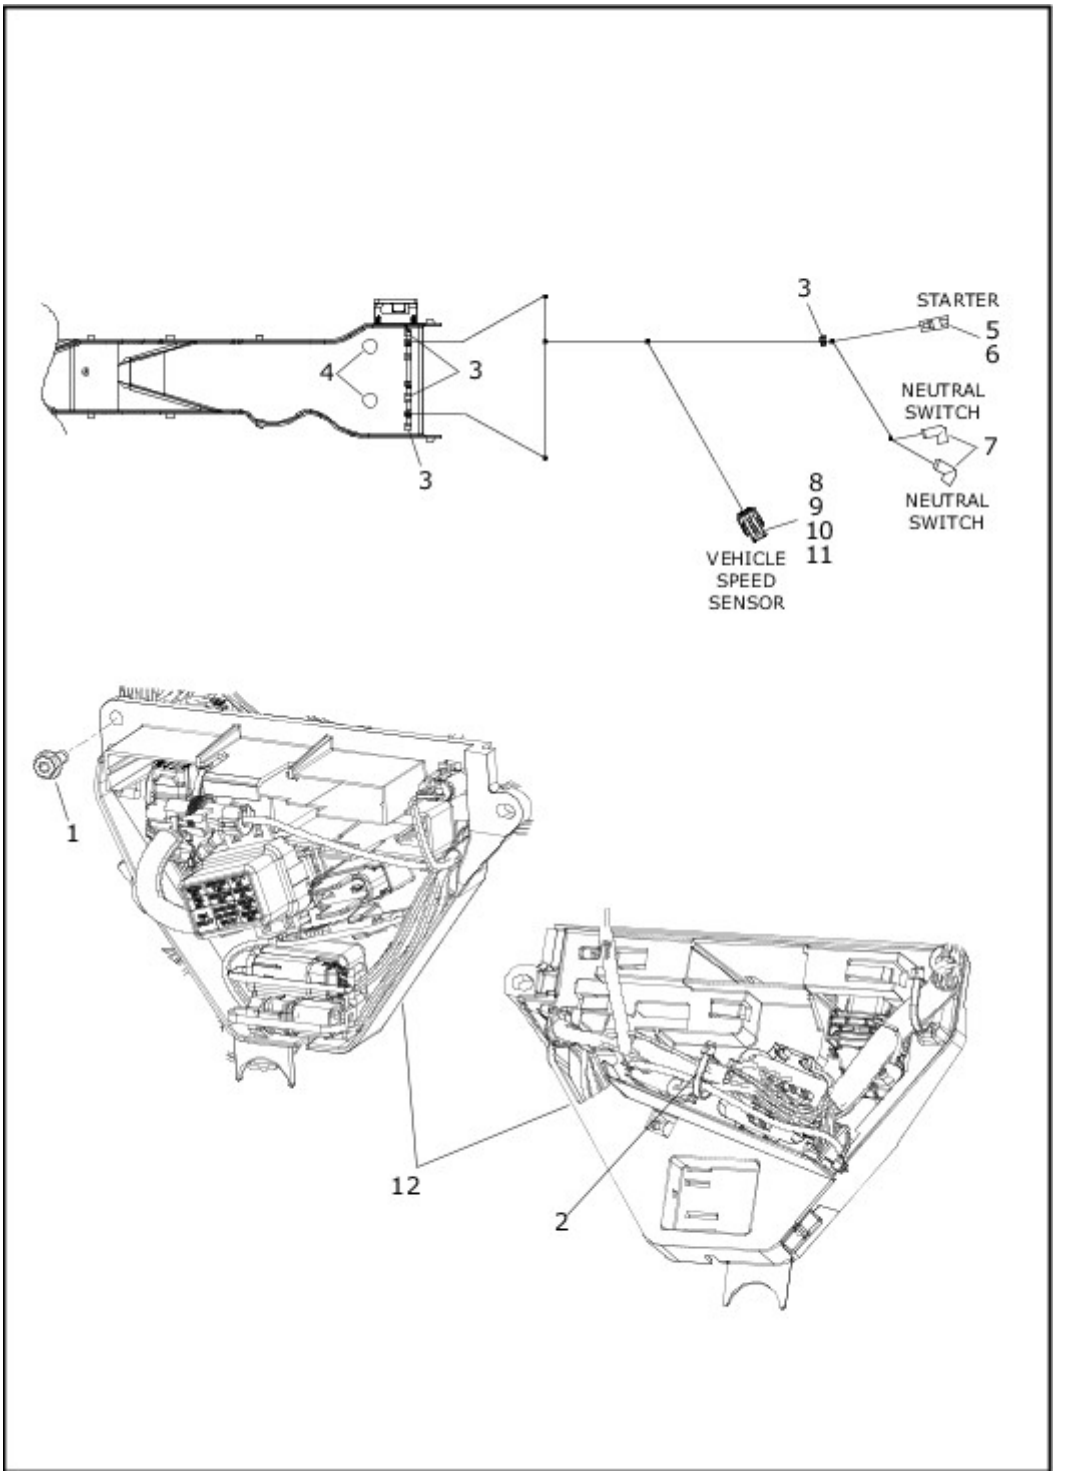


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201121A	MAIN WIRING HARNESS - ABS	FLHT, FLHX, FLHXS
NOTE: Includes the following parts.			
1	3634	SCREW *(2)*	FLHT, FLHX, FLHXS
2	10006	CABLE STRAP	FLHT, FLHX, FLHXS
3	10065	CABLE STRAP *(4)*	FLHT, FLHX, FLHXS
4	11779	FASTENER, push-in (black) *(2)*	FLHT, FLHX, FLHXS
5	72291-94	TERMINAL, socket, 14-16 AWG	FLHT, FLHX, FLHXS
6	72295-94	HOUSING, one-way socket (white)	FLHT, FLHX, FLHXS
7	72405-98BK	WIRE ASSEMBLY, push-on, right angle molded, 65-1/2 in length *(2)*	FLHT, FLHX, FLHXS
8	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHT, FLHX, FLHXS
9	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHT, FLHX, FLHXS
10	72543-07BK	HOUSING, three-way socket (black)	FLHT, FLHX, FLHXS
11	72544-07	SECONDARY LOCK, three-way socket	FLHT, FLHX, FLHXS
12	69200175	CADDY, fuse block, electrical panel	FLHT, FLHX, FLHXS

WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8)

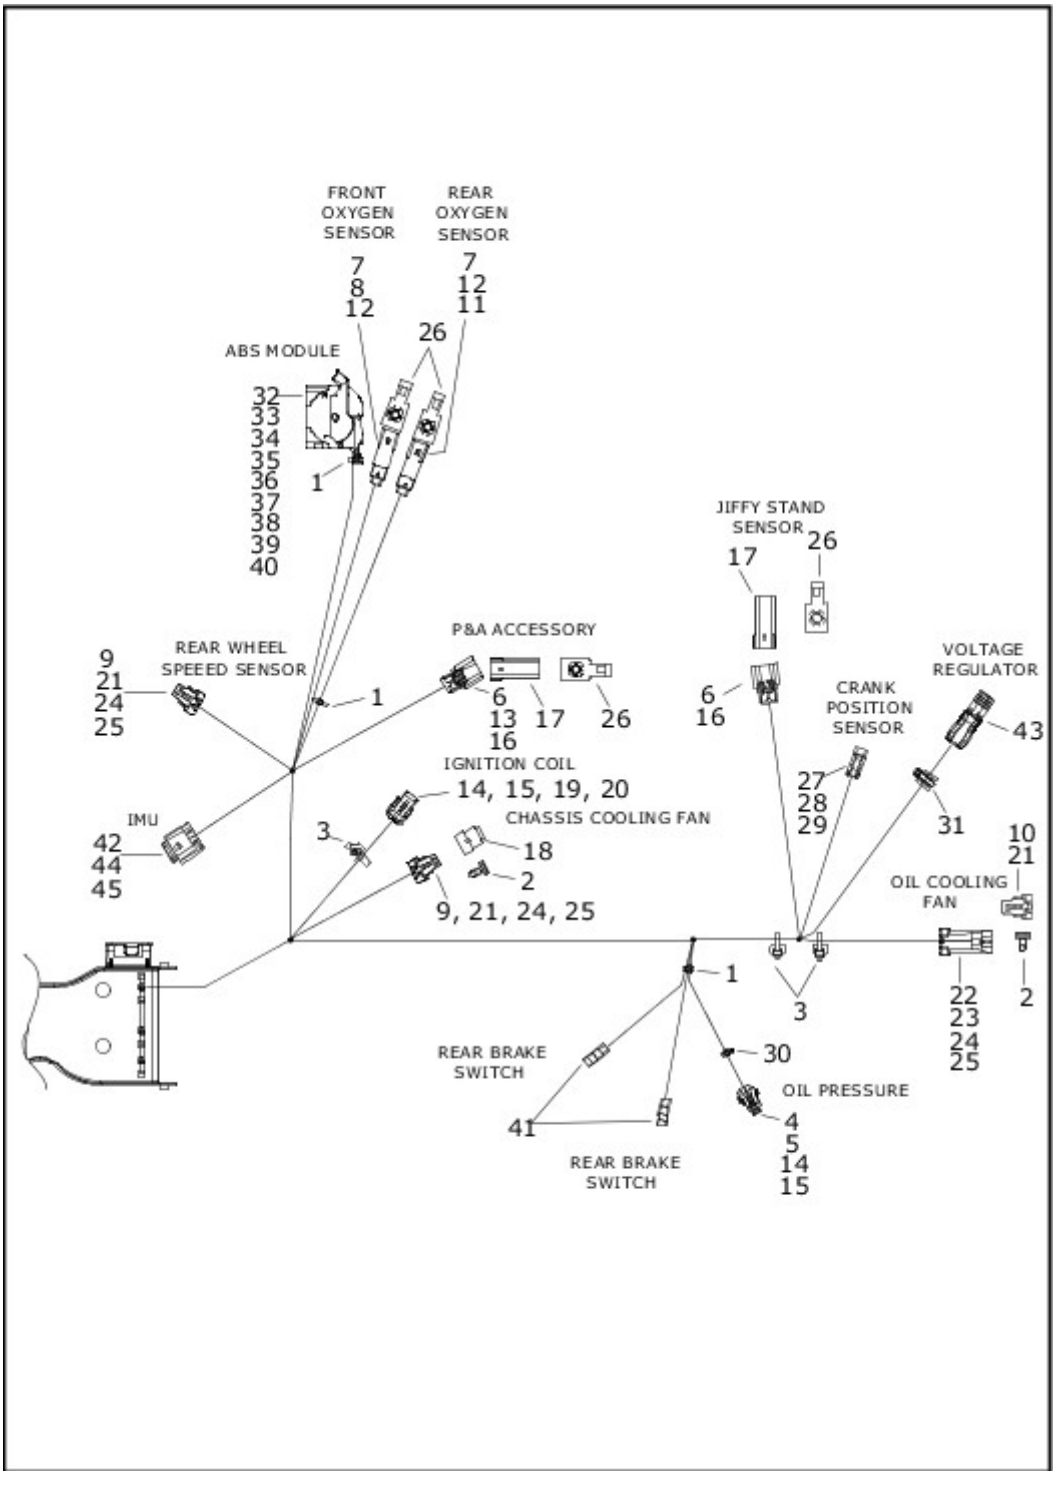

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201121A	MAIN WIRING HARNESS - ABS	FLHT, FLHX, FLHXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHT, FLHX, FLHXS
2	10147	CLIP, connector *(2)*	FLHT, FLHX, FLHXS
3	10177	CABLE STRAP, anchored *(3)*	FLHT, FLHX, FLHXS
4	72065-06A	HOUSING, three-way socket (black)	FLHT, FLHX, FLHXS
5	72127-06	SECONDARY LOCK, three-way socket	FLHT, FLHX, FLHXS
6	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLHT, FLHX, FLHXS
7	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLHT, FLHX, FLHXS
8	72175-07BK	HOUSING, four-way pin (black)	FLHT, FLHX, FLHXS
9	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLHT, FLHX, FLHXS
10	72232-96	SEAL PIN (red) *(2)*	FLHT, FLHX, FLHXS
11	72343-10	TERMINAL, pin, 16-20 AWG *(4)*	FLHT, FLHX, FLHXS
12	72415-07GY	HOUSING, four-way pin (gray)	FLHT, FLHX, FLHXS
13	72473-07	SEAL PIN, natural	FLHT, FLHX, FLHXS
14	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLHT, FLHX, FLHXS
15	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLHT, FLHX, FLHXS
16	72499-07	WIRE SEAL, 20-22 AWG (green) *(2)*	FLHT, FLHX, FLHXS
17	72512-07BK	HOUSING, three-way socket (black) *(2)*	FLHT, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72519-09BK	PLUG, weather, three-way socket *(2)*	FLHT, FLHX, FLHXS
19	72533-06	PLUG, weather, two-way pin	FLHT, FLHX, FLHXS
20	72544-07	SECONDARY LOCK, three-way socket	FLHT, FLHX, FLHXS
21	72589-09	HOUSING, three-way socket (black)	FLHT, FLHX, FLHXS
22	72606-08	HOUSING, two-way socket (black) *(3)*	FLHT, FLHX, FLHXS
23	72607-08	HOUSING, two-way pin (black)	FLHT, FLHX, FLHXS
24	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	FLHT, FLHX, FLHXS
25	72609-08	SECONDARY LOCK, two-way socket *(3)*	FLHT, FLHX, FLHXS
26	72610-08	WIRE SEAL, 18-20 AWG (white) *(6)*	FLHT, FLHX, FLHXS
27	73213-07	RETAINER, anchored *(4)*	FLHT, FLHX, FLHXS
28	74112-98BK	HOUSING, two-way socket (black)	FLHT, FLHX, FLHXS
29	74152-98	SECONDARY LOCK, two-way socket	FLHT, FLHX, FLHXS
30	74191-98	TERMINAL, socket 16-20 AWG *(2)*	FLHT, FLHX, FLHXS
31	12500014	CABLE STRAP	FLHT, FLHX, FLHXS
32	12500018	CABLE STRAP	FLHT, FLHX, FLHXS
33	69200183	HOUSING, 26-way socket	FLHT, FLHX, FLHXS
34	69200184	COVER, wire	FLHT, FLHX, FLHXS
35	69200185	TERMINAL, socket, 20 AWG *(6)*	FLHT, FLHX, FLHXS
36	69200186	TERMINAL, socket, 14-16 AWG *(2)*	FLHT, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	69200187	TERMINAL, socket, 12 AWG *(2)*	FLHT, FLHX, FLHXS
38	69200188	WIRE SEAL, 20 AWG *(6)*	FLHT, FLHX, FLHXS
39	69200189	WIRE SEAL, 14-16 AWG *(2)*	FLHT, FLHX, FLHXS
40	69200190	WIRE SEAL, 12 AWG *(2)*	FLHT, FLHX, FLHXS
41	69200191	SEAL PIN *(16)*	FLHT, FLHX, FLHXS
42	69200238	TERMINAL, socket, 20 AWG *(2)*	FLHT, FLHX, FLHXS
43	69201396	TERMINAL, socket, 20 AWG *(2)*	FLHT, FLHX, FLHXS
44	69201400	HOUSING, two-way socket, (black)	FLHT, FLHX, FLHXS
45	69201401	SECONDARY LOCK, two-way socket	FLHT, FLHX, FLHXS
46	69201404	CONNECTOR, anchored	FLHT, FLHX, FLHXS
47	69201405	RESISTOR PACK	FLHT, FLHX, FLHXS
48	69201423	DC LEAD ASSEMBLY, two-way socket	FLHT, FLHX, FLHXS

WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8)

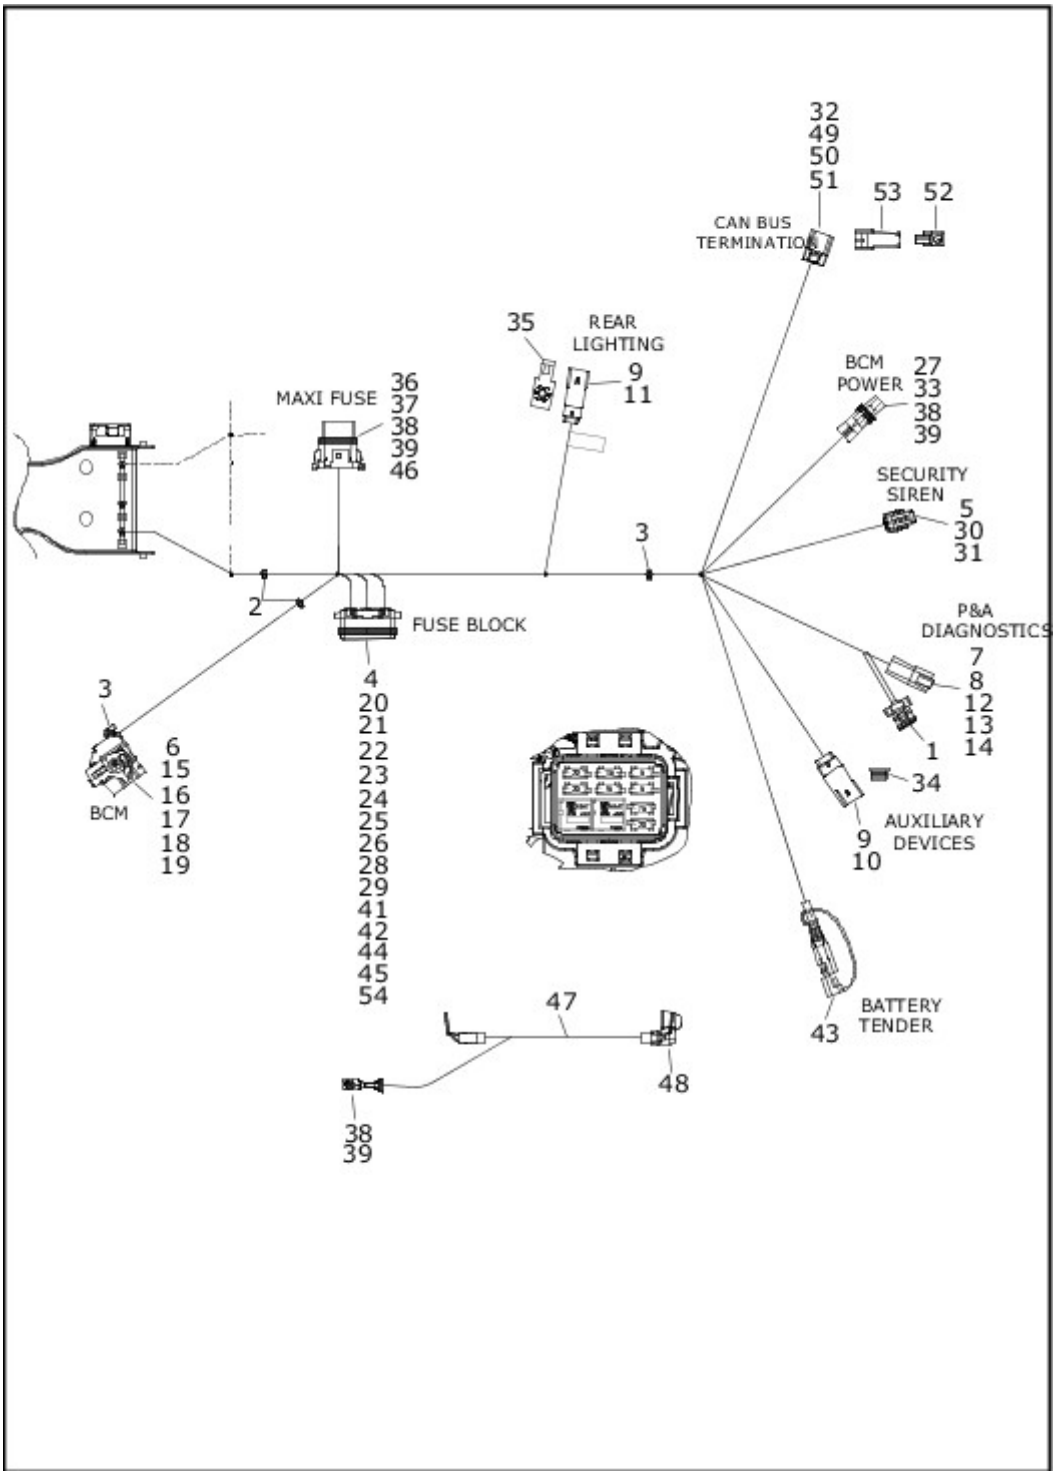

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201121A	MAIN WIRING HARNESS - ABS	FLHT, FLHX, FLHXS
NOTE: Includes the following parts.			
1	6990	PLUG WEATHER, six-way pin	FLHT, FLHX, FLHXS
2	10006	CABLE STRAP *(2)*	FLHT, FLHX, FLHXS
3	10065	CABLE STRAP *(2)*	FLHT, FLHX, FLHXS
4	31586-07	RELAY *(2)*	FLHT, FLHX, FLHXS
5	72064-06	HOUSING, three-way socket (black)	FLHT, FLHX, FLHXS
6	72081-11	HOUSING, 48-way socket (black)	FLHT, FLHX, FLHXS
7	72106-94BK	HOUSING, six-way pin (black) (replaces gray connector)	FLHT, FLHX, FLHXS
8	72146-94	SECONDARY LOCK, six-way pin	FLHT, FLHX, FLHXS
9	72169-07	TERMINAL, pin, 16-20 AWG *(10)*	FLHT, FLHX, FLHXS
10	72175-07BK	HOUSING, four-way pin (black)	FLHT, FLHX, FLHXS
11	72188-07BK	HOUSING, six-way pin (black)	FLHT, FLHX, FLHXS
12	72190-94	TERMINAL, pin, 16-18 AWG *(2)*	FLHT, FLHX, FLHXS
13	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLHT, FLHX, FLHXS
14	72195-94	SEAL PIN	FLHT, FLHX, FLHXS
15	72209-11	COVER, wire	FLHT, FLHX, FLHXS
16	72222-11	TERMINAL, socket, 18-20 AWG *(21)*	FLHT, FLHX, FLHXS
17	72226-11	TERMINAL, socket, 14-16 AWG	FLHT, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLHT, FLHX, FLHXS
19	72256-11	SEAL PIN, 0.6 mm (white) *(9)*	FLHT, FLHX, FLHXS
20	72296-95	TERMINAL, socket, 14-16 AWG *(3)*	FLHT, FLHX, FLHXS
21	72298-95	WIRE SEAL, 14-18 AWG (green) *(3)*	FLHT, FLHX, FLHXS
22	72299-95	SEAL PIN, green *(2)*	FLHT, FLHX, FLHXS
23	72308-97	TERMINAL, socket, 12-14 AWG *(5)*	FLHT, FLHX, FLHXS
24	72330-95	FUSE, 15 A (blue)	FLHT, FLHX, FLHXS
25	72331-95	FUSE, 5 A (tan) *(2)*	FLHT, FLHX, FLHXS
26	72345-02	FUSE, 20 A (yellow) *(3)*	FLHT, FLHX, FLHXS
27	72350-11	HOUSING, one-way socket (black)	FLHT, FLHX, FLHXS
28	72356-95	TERMINAL, socket, 18-20 AWG *(14)*	FLHT, FLHX, FLHXS
29	72412-97	WIRE SEAL, 12-14 AWG (gray) *(5)*	FLHT, FLHX, FLHXS
30	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHT, FLHX, FLHXS
31	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHT, FLHX, FLHXS
32	72575-11	SECONDARY LOCK, one-way socket	FLHT, FLHX, FLHXS
33	72632-10	PLUG, weather, four-way pin	FLHT, FLHX, FLHXS
34	73213-07	RETAINER, anchored	FLHT, FLHX, FLHXS
35	73301-04	HOUSING, two-way pin (black)	FLHT, FLHX, FLHXS
36	73303-04	SECONDARY LOCK, two-way socket	FLHT, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	73304-04	TERMINAL, socket, 10 AWG *(3)*	FLHT, FLHX, FLHXS
38	73305-04	WIRE SEAL, 10 AWG (blue) *(3)*	FLHT, FLHX, FLHXS
39	11100115	CLOTH, HARNESS WRAP, 50 m (not shown)	FLHT, FLHX, FLHXS
40	69200194	FUSE BLOCK, 24-way	FLHT, FLHX, FLHXS
41	69200199	WIRE SEAL, 18-20 AWG (purple) *(14)*	FLHT, FLHX, FLHXS
42	69200212	HARNESS, battery tender	FLHT, FLHX, FLHXS
43	69200293	FUSE, 7.5 A (brown) *(2)*	FLHT, FLHX, FLHXS
44	69200312	SECONDARY LOCK, fuse block *(3)*	FLHT, FLHX, FLHXS
45	69200336	MAIN FUSE, 50 A (red), NOTE: Fuse is sold separately and is not part of main harness	FLHT, FLHX, FLHXS
46	69201130	WIRE HARNESS, battery positive to starter, with 73304-04, 73305-04 and 69201307	FLHT, FLHX, FLHXS
47	69201307	BOOT, battery positive	FLHT, FLHX, FLHXS
48	69201411	COVER, fuse block	FLHT, FLHX, FLHXS

WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8)

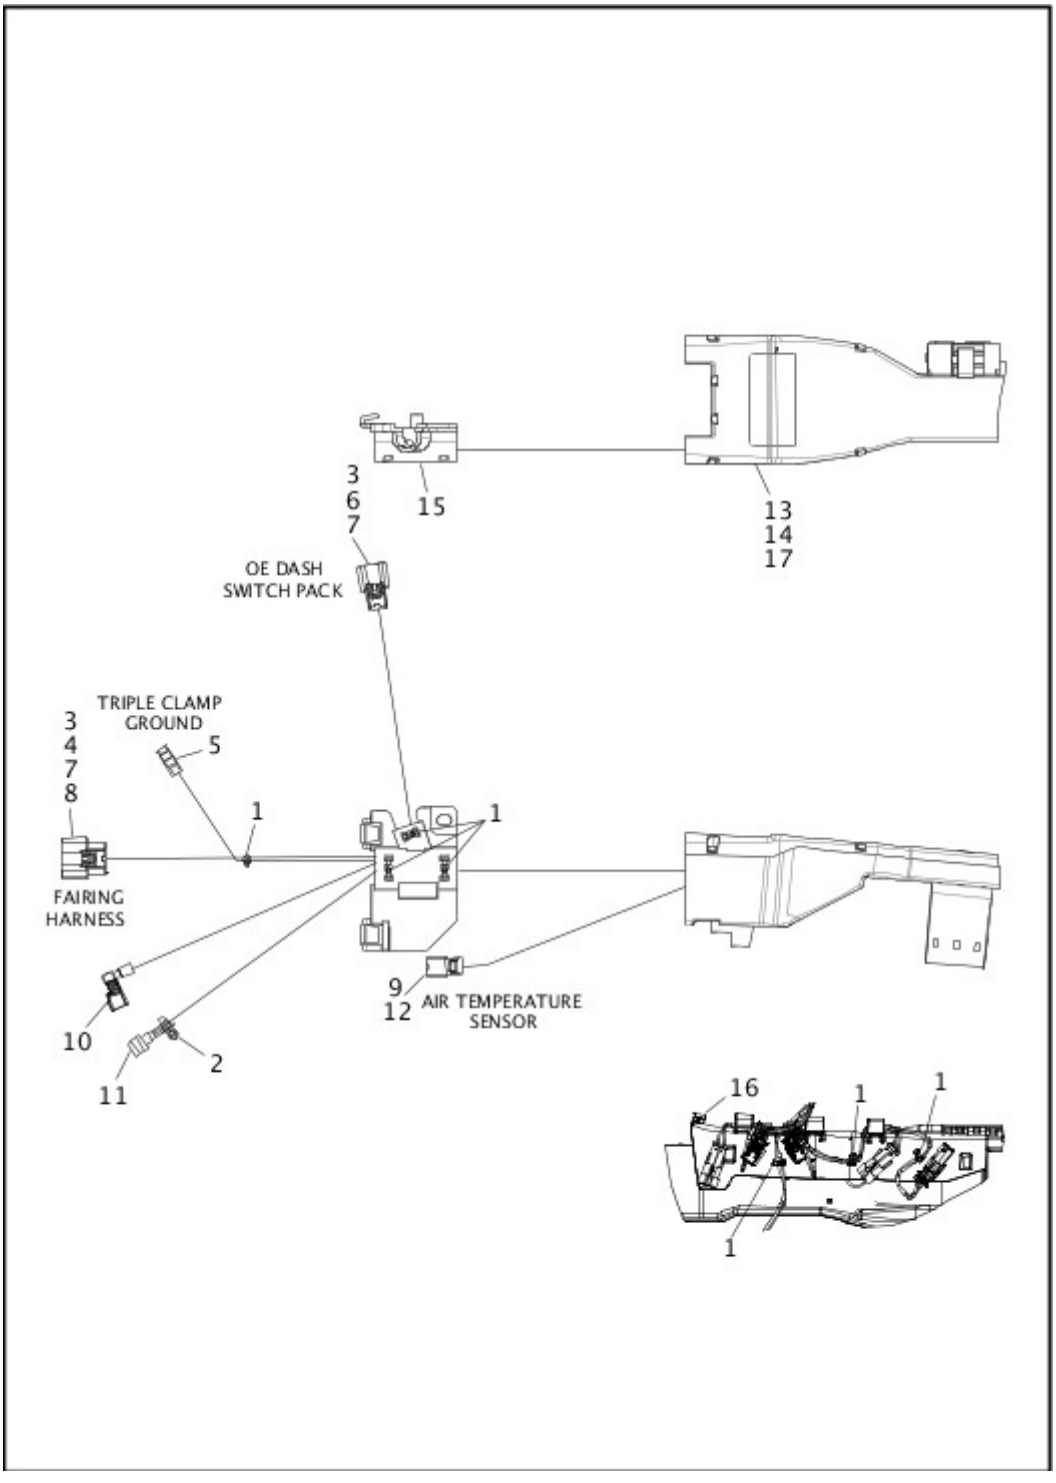


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201120A	MAIN WIRING HARNESS - ABS	FLHTCU
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(7)*	FLHTCU
2	10177	CABLE STRAP, anchored	FLHTCU
3	72168-07	TERMINAL, socket, 18-20 AWG *(7)*	FLHTCU
4	72272-07	TERMINAL, socket, 14-16 AWG *(4)*	FLHTCU
5	72364-06	TERMINAL, socket 10-14 AWG	FLHTCU
6	72414-07BK	HOUSING, six-way socket (black)	FLHTCU
7	72473-07	SEAL PIN, natural *(7)*	FLHTCU
8	72489-07GY	HOUSING, 12-way socket (gray)	FLHTCU
9	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLHTCU
10	69200032	WIRE HARNESS, AM/FM antenna	FLHTCU
11	69200136	WIRE HARNESS, CB antenna	FLHTCU
12	69200201	HOUSING, two-way socket (black)	FLHTCU
13	69200202A	WIRE TROUGH	FLHTCU
14	69200203A	COVER, wire trough, with 15368-01A and 69201459	FLHTCU
15	69200214	CADDY, left steer head	FLHTCU
16	69201287	BRACKET, mounting, electrical connector	FLHTCU
17	69201459	BRACKET	FLHTCU

WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8)

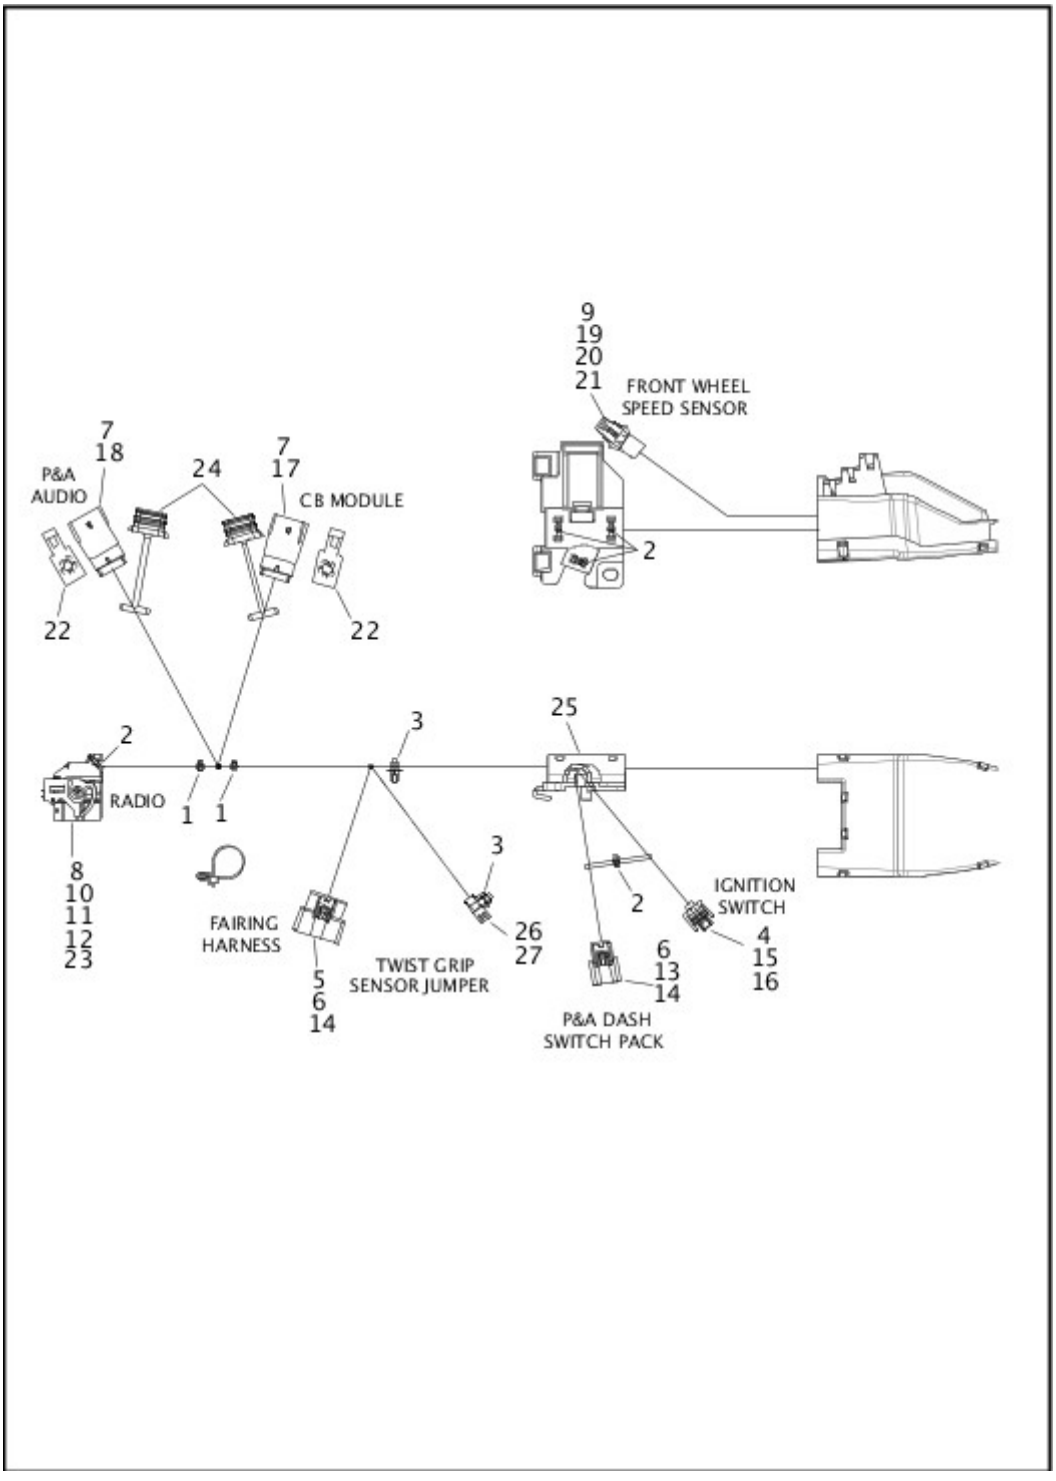

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201120A	MAIN WIRING HARNESS - ABS	FLHTCU
NOTE: Includes the following parts.			
1	10006	CABLE STRAP *(2)*	FLHTCU
2	10065	CABLE STRAP *(5)*	FLHTCU
3	10177	CABLE STRAP, anchored *(2)*	FLHTCU
4	72062-06	HOUSING, two-way socket (gray)	FLHTCU
5	72166-07BK	HOUSING, 16-way socket (black)	FLHTCU
6	72168-07	TERMINAL, socket, 18-20 AWG *(16)*	FLHTCU
7	72169-07	TERMINAL, pin, 16-20 AWG *(24)*	FLHTCU
8	72209-11	COVER, wire	FLHTCU
9	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLHTCU
10	72222-11	TERMINAL, socket, 18-20 AWG *(27)*	FLHTCU
11	72226-11	TERMINAL, socket, 14-16 AWG *(8)*	FLHTCU
12	72256-11	SEAL PIN 0.6 mm (white) *(13)*	FLHTCU
13	72414-07BK	HOUSING, six-way socket (black)	FLHTCU
14	72473-07	SEAL PIN, natural *(6)*	FLHTCU
15	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLHTCU
16	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLHTCU
17	72488-07BK	HOUSING, 12-way pin (black)	FLHTCU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72490-07GY	HOUSING, 12-way pin (gray)	FLHTCU
19	72606-08	HOUSING, two-way socket (black)	FLHTCU
20	72639-10	SECONDARY LOCK, two-way socket	FLHTCU
21	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLHTCU
22	73213-07	RETAINER, anchored *(2)*	FLHTCU
23	69200193	HOUSING, 48-way socket	FLHTCU
24	69200205	PLUG, weather, 12-way pin *(2)*	FLHTCU
25	69200215	CADDY, right steer head	FLHTCU
26	69201163	HOUSING, six-way pin (black)	FLHTCU
27	69201164	TERMINAL, pin, 22 AWG *(6)*	FLHTCU

WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8)

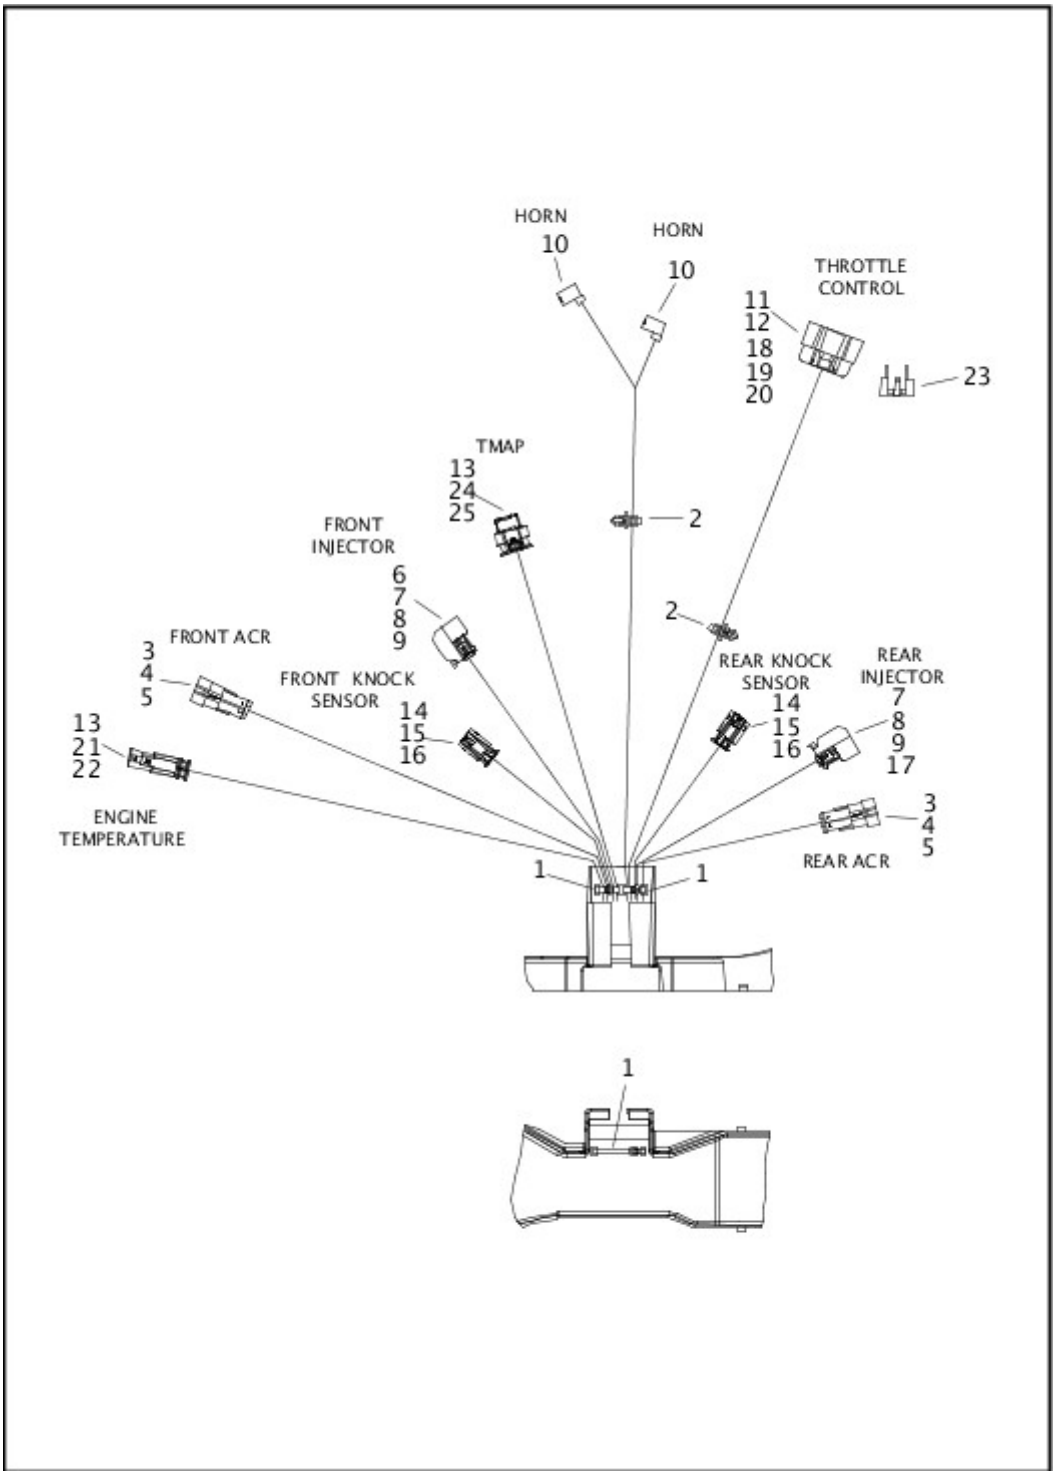

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201120A	MAIN WIRING HARNESS - ABS	FLHTCU
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHTCU
2	10177	CABLE STRAP, anchored *(2)*	FLHTCU
3	72008-05	TERMINAL, socket, 20-22 AWG *(4)*	FLHTCU
4	72009-05	HOUSING, two-way pin (black) *(2)*	FLHTCU
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLHTCU
6	72098-06	HOUSING, two-way socket (gray)	FLHTCU
7	72099-06	WIRE SEAL, 16-18 AWG (blue) *(4)*	FLHTCU
8	72110-06	TERMINAL, socket, 16-18 AWG *(4)*	FLHTCU
9	72145-06	SECONDARY LOCK, two-way socket *(2)*	FLHTCU
10	72283-09	TERMINAL, socket, 14-16 AWG, 90 degree *(2)*	FLHTCU
11	72499-07	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHTCU
12	72569-08	TERMINAL, socket, 20-22 AWG *(2)*	FLHTCU
13	69201301	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHTCU
14	69201390	HOUSING, two-way socket *(2)*	FLHTCU
15	69201391	TERMINAL, socket, 20 AWG *(4)*	FLHTCU
16	69201392	WIRE SEAL, 20 AWG (yellow) *(4)*	FLHTCU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	69201393	HOUSING, two-way socket (black)	FLHTCU
18	69201394	HOUSING, six-way socket (black)	FLHTCU
19	69201395	SECONDARY LOCK, six-way socket	FLHTCU
20	69201396	TERMINAL, socket, 20 AWG *(4)*	FLHTCU
21	69201397	HOUSING, two-way pin (gray)	FLHTCU
22	69201398	TERMINAL, pin, 20 AWG *(2)*	FLHTCU
23	69201416	CPA, six-way socket	FLHTCU
24	69201441	HOUSING, four-way socket	FLHTCU
25	69201442	TERMINAL, socket, 18 AWG *(4)*	FLHTCU

WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8)

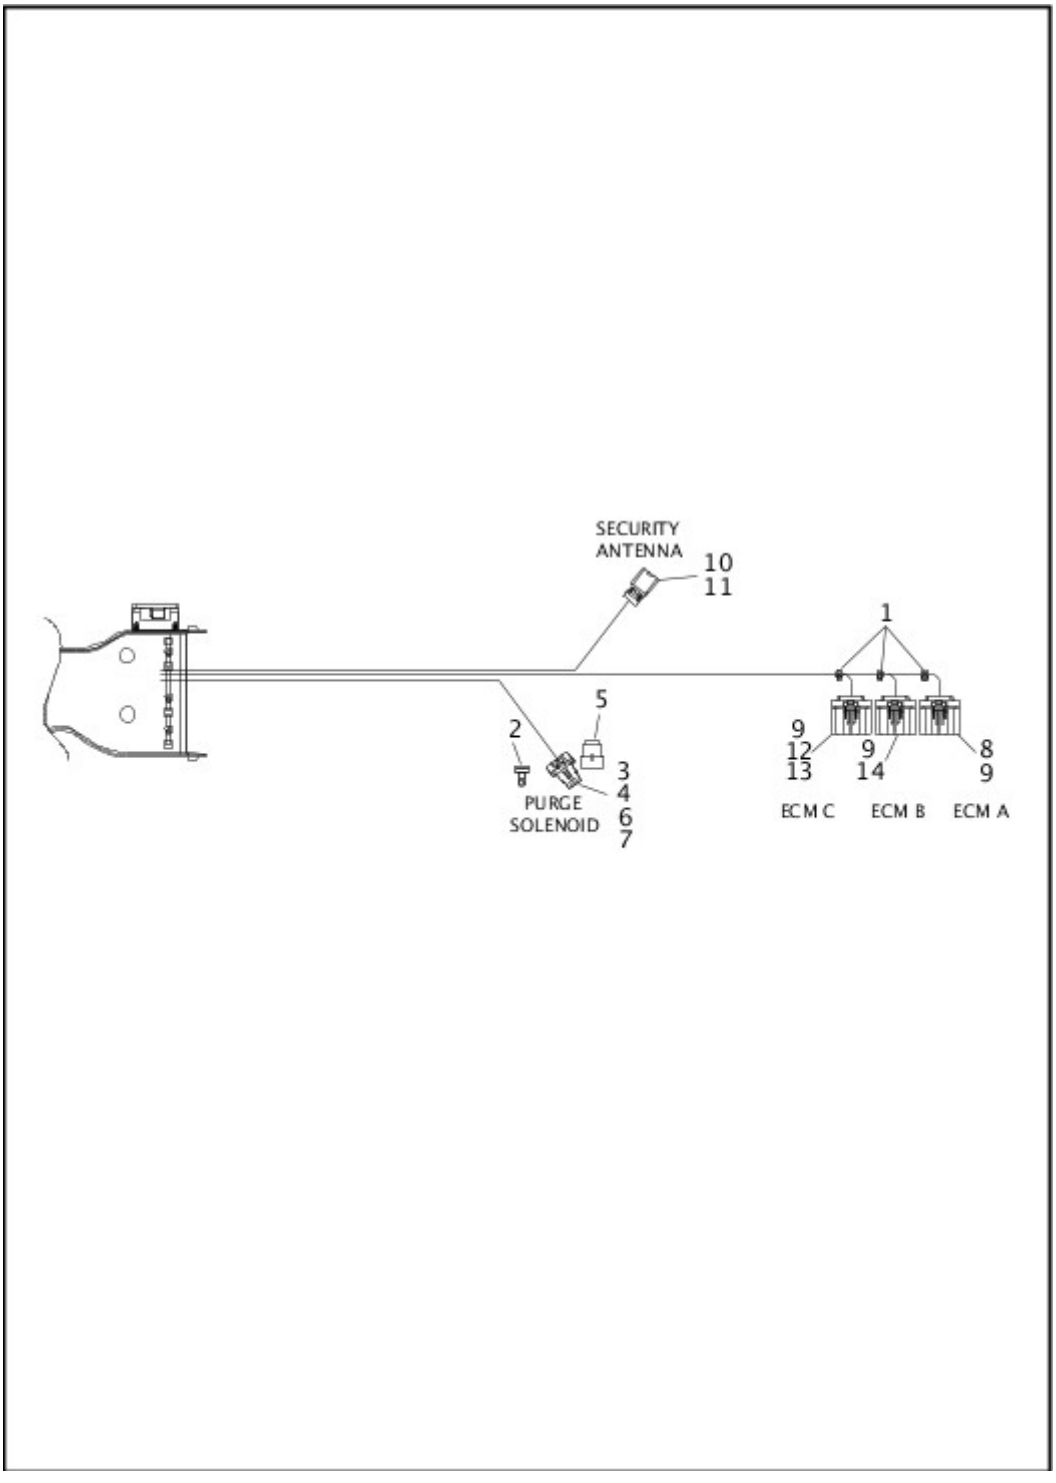


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201120A	MAIN WIRING HARNESS - ABS	FLHTCU
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHTCU
2	10147	CLIP, connector	FLHTCU
3	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLHTCU
4	72518-01	HOUSING, two-way socket (red)	FLHTCU
5	72533-06	PLUG, weather, two-way pin	FLHTCU
6	72609-08	SECONDARY LOCK, two-way socket	FLHTCU
7	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLHTCU
8	72664-12A	HOUSING, 18-way socket (black)	FLHTCU
9	72666-12	TERMINAL, socket, 18-20 AWG *(43)*	FLHTCU
10	72720-07	HOUSING, two-way socket (black)	FLHTCU
11	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLHTCU
12	69201168	TERMINAL, socket, 22 AWG *(2)*	FLHTCU
13	69201415	HOUSING, 18-way socket (brown)	FLHTCU
14	69201440	HOUSING, 18-way socket (gray)	FLHTCU

WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8)

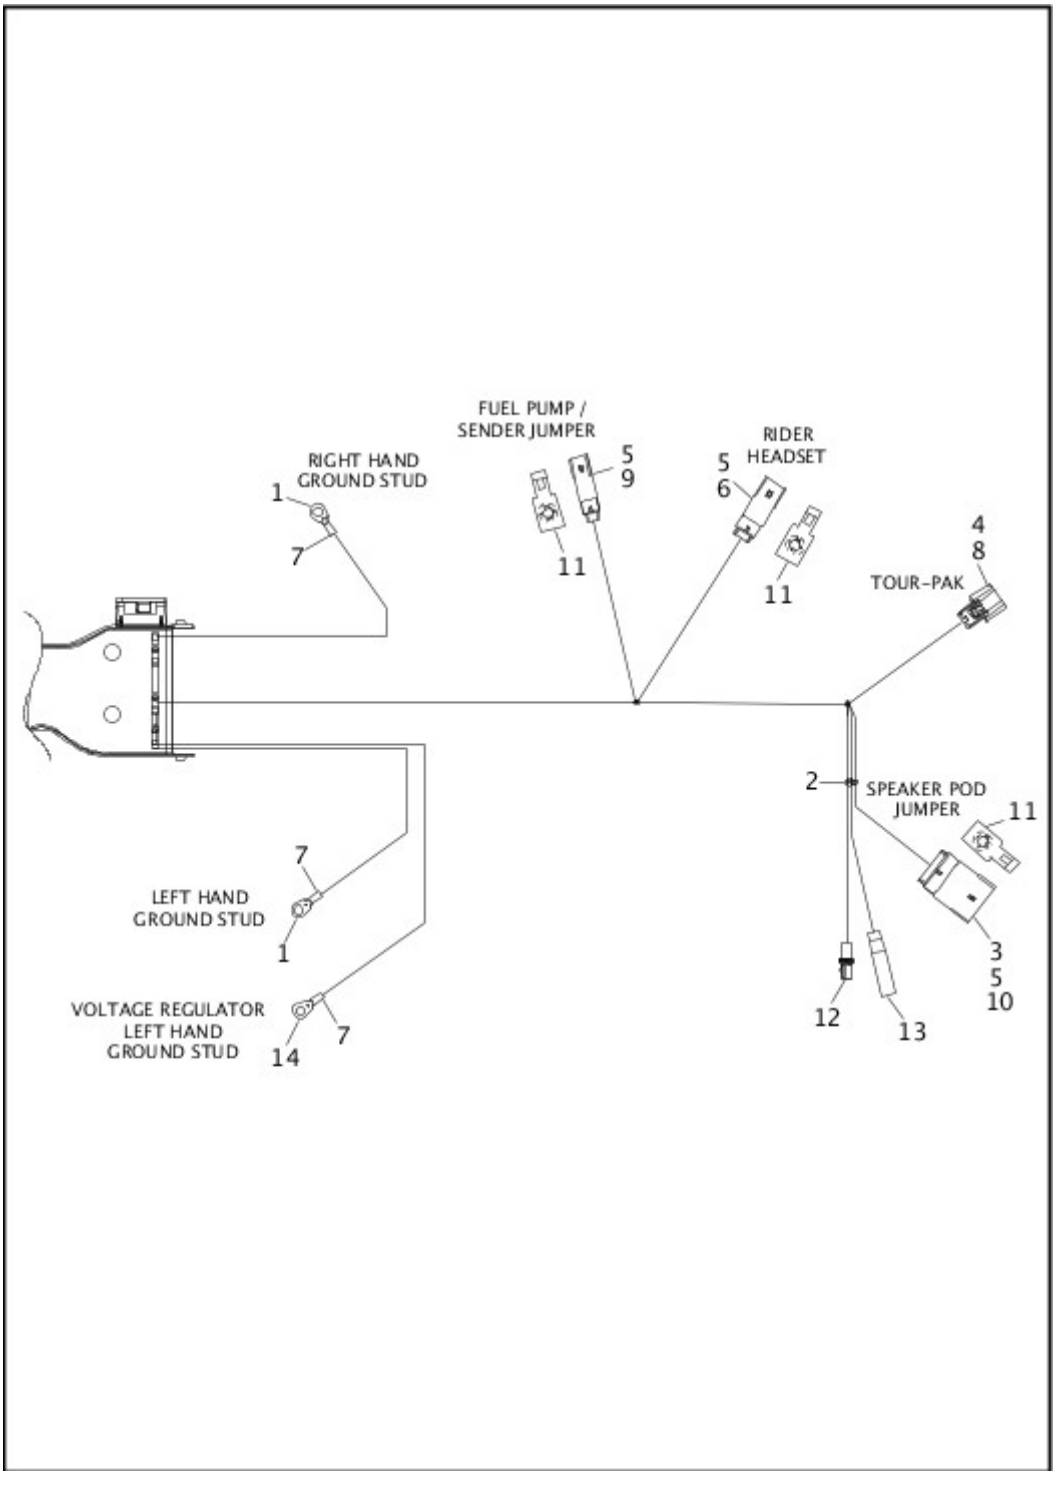


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201120A	MAIN WIRING HARNESS - ABS	FLHTCU
NOTE: Includes the following parts.			
1	9819	TERMINAL, ring, 12 AWG *(2)*	FLHTCU
2	10065	CABLE STRAP	FLHTCU
3	72167-07BK	HOUSING, 16-way pin (black)	FLHTCU
4	72168-07	TERMINAL, socket, 18-20 AWG *(6)*	FLHTCU
5	72169-07	TERMINAL, pin, 16-20 AWG *(23)*	FLHTCU
6	72188-07BK	HOUSING, six-way pin (black)	FLHTCU
7	72249-94	HEAT SHRINK TUBE, .415 x 1 in (black)	FLHTCU
8	72414-07BK	HOUSING, six-way socket (black)	FLHTCU
9	72415-07GY	HOUSING, four-way pin (gray)	FLHTCU
10	72473-07	SEAL PIN, natural *(3)*	FLHTCU
11	73213-07	RETAINER, anchored *(3)*	FLHTCU
12	69200032	WIRE HARNESS, AM/FM antenna	FLHTCU
13	69200136	WIRE HARNESS, CB antenna	FLHTCU
14	69201596	TERMINAL, ring, 8-10 AWG	FLHTCU

WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8)

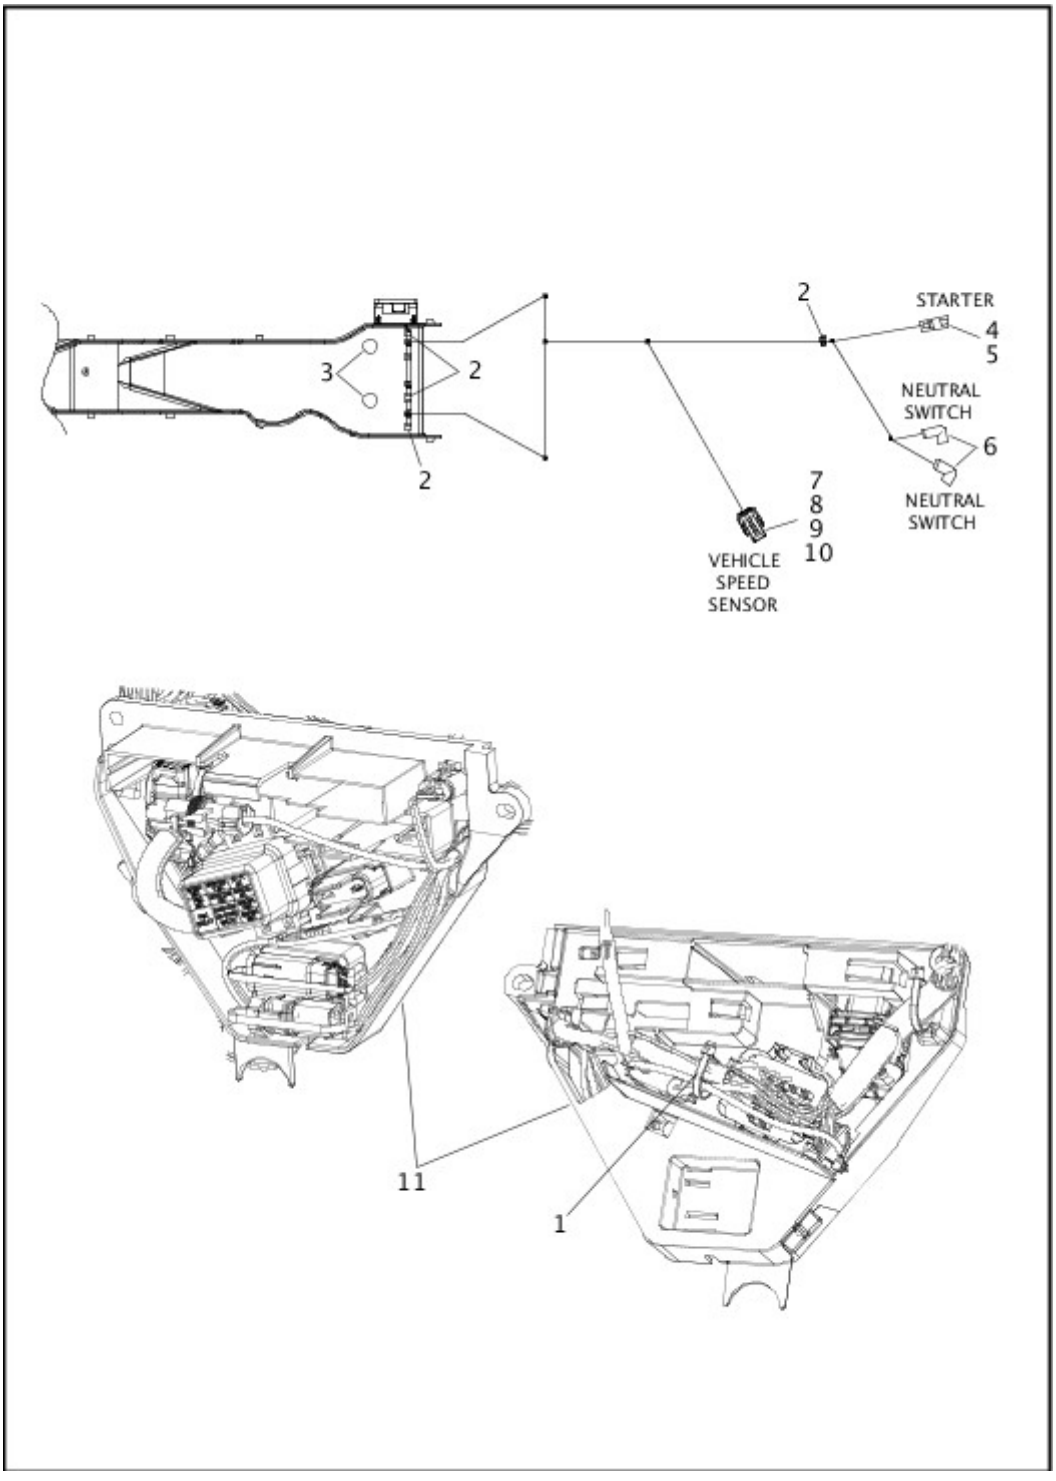


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201120A	MAIN WIRING HARNESS - ABS	FLHTCU
NOTE: Includes the following parts.			
1	10006	CABLE STRAP	FLHTCU
2	10065	CABLE STRAP *(4)*	FLHTCU
3	11779	FASTENER, push-in (black) *(2)*	FLHTCU
4	72291-94	TERMINAL, socket, 14-16 AWG	FLHTCU
5	72295-94	CONNECTOR, starter housing	FLHTCU
6	72405-98BK	WIRE ASSEMBLY, push-on, right angle molded, 65-1/2 in length (black) *(2)*	FLHTCU
7	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHTCU
8	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHTCU
9	72543-07BK	HOUSING, three-way socket (black)	FLHTCU
10	72544-07	SECONDARY LOCK, three-way socket	FLHTCU
11	69200175	CADDY, fuse block, electrical panel	FLHTCU

WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8)

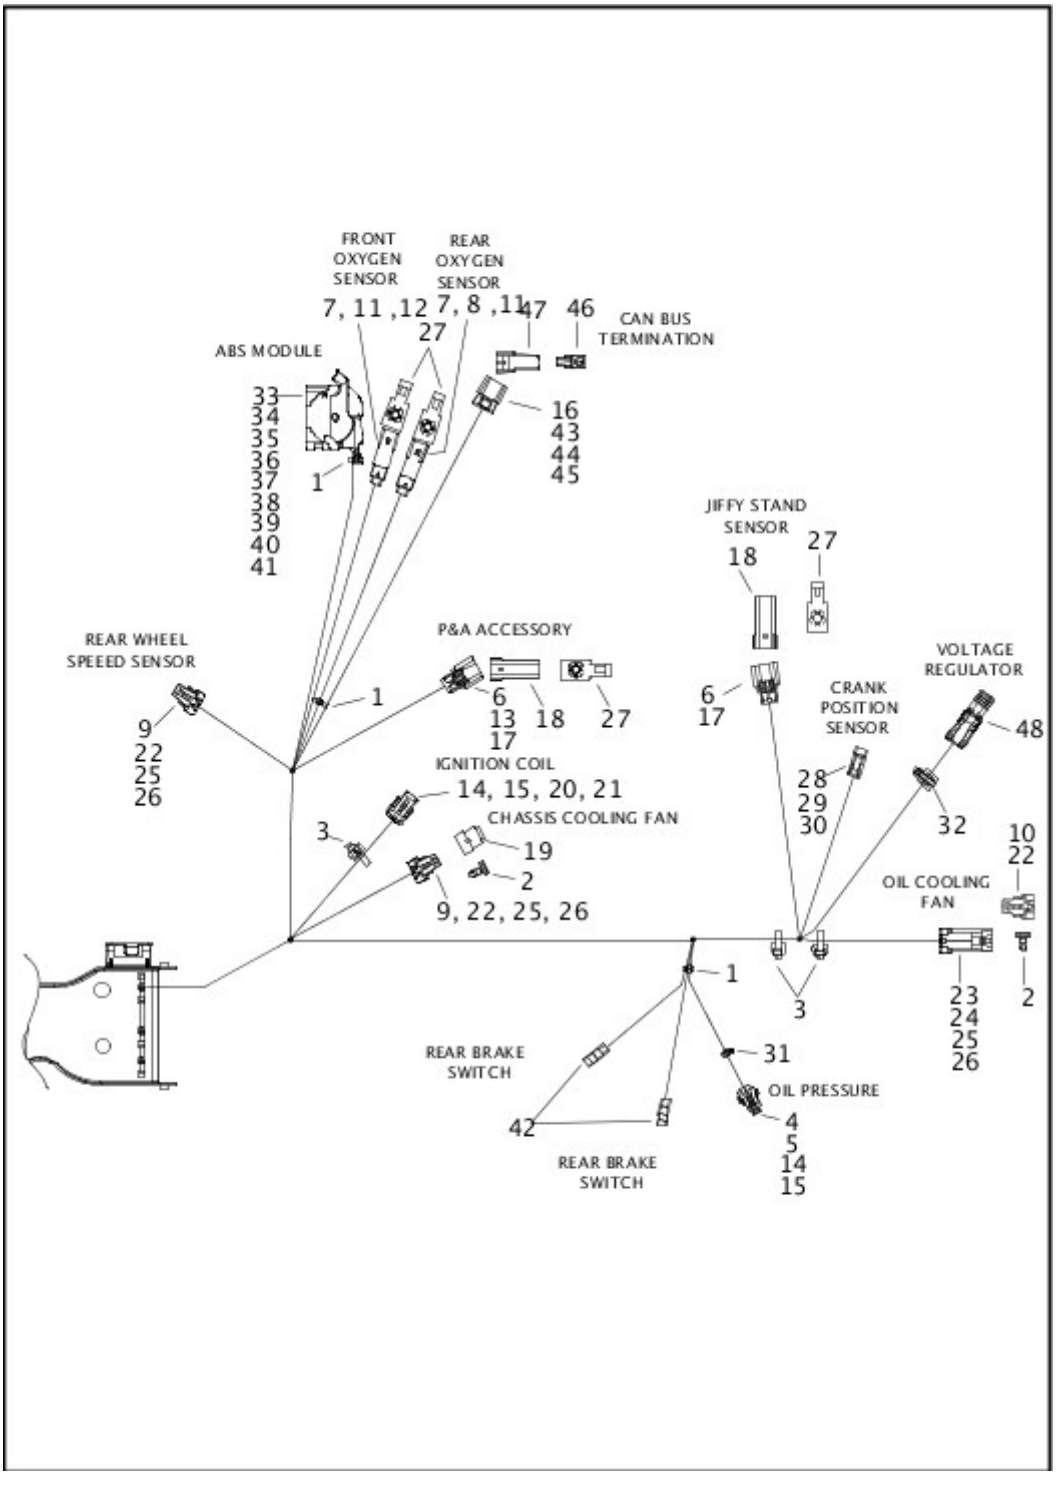

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201120A	MAIN WIRING HARNESS - ABS	FLHTCU
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHTCU
2	10147	CLIP, connector *(2)*	FLHTCU
3	10177	CABLE STRAP, anchored *(3)*	FLHTCU
4	72065-06A	HOUSING, three-way socket (black)	FLHTCU
5	72127-06	SECONDARY LOCK, three-way	FLHTCU
6	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLHTCU
7	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLHTCU
8	72175-07BK	HOUSING, four-way pin (black)	FLHTCU
9	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLHTCU
10	72232-96	SEAL PIN (red) *(2)*	FLHTCU
11	72343-10	TERMINAL, pin, 16-20 AWG *(4)*	FLHTCU
12	72415-07GY	HOUSING, four-way pin (gray)	FLHTCU
13	72473-07	SEAL PIN, natural	FLHTCU
14	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLHTCU
15	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLHTCU
16	72499-07	WIRE SEAL, 20-22 AWG (green) *(2)*	FLHTCU
17	72512-07BK	HOUSING, three-way socket (black) *(2)*	FLHTCU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72519-09BK	PLUG, weather, three-way socket *(2)*	FLHTCU
19	72533-06	PLUG, weather, two-way pin	FLHTCU
20	72544-07	SECONDARY LOCK, three-way socket	FLHTCU
21	72589-09	HOUSING, three-way socket (black)	FLHTCU
22	72606-08	HOUSING, two-way socket (black) *(3)*	FLHTCU
23	72607-08	HOUSING, two-way pin (black)	FLHTCU
24	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	FLHTCU
25	72609-08	SECONDARY LOCK, two-way socket *(3)*	FLHTCU
26	72610-08	WIRE SEAL, 18-20 AWG (white) *(6)*	FLHTCU
27	73213-07	RETAINER, anchored *(4)*	FLHTCU
28	74112-98BK	HOUSING, two-way socket (black)	FLHTCU
29	74152-98	SECONDARY LOCK, two-way socket	FLHTCU
30	74191-98	TERMINAL, socket 16-20 AWG *(2)*	FLHTCU
31	12500014	CABLE STRAP	FLHTCU
32	12500018	CABLE STRAP	FLHTCU
33	69200183	HOUSING, 26-way socket	FLHTCU
34	69200184	COVER, wire	FLHTCU
35	69200185	TERMINAL, socket, 20 AWG *(6)*	FLHTCU
36	69200186	TERMINAL, socket, 14-16 AWG *(2)*	FLHTCU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	69200187	TERMINAL, socket, 12 AWG *(2)*	FLHTCU
38	69200188	WIRE SEAL, 20 AWG *(6)*	FLHTCU
39	69200189	WIRE SEAL, 14-16 AWG *(2)*	FLHTCU
40	69200190	WIRE SEAL, 12 AWG *(2)*	FLHTCU
41	69200191	SEAL PIN *(16)*	FLHTCU
42	69200238	TERMINAL, socket, 20 AWG (black) *(2)*	FLHTCU
43	69201396	TERMINAL, socket, 20 AWG *(2)*	FLHTCU
44	69201400	HOUSING, two-way socket, (black)	FLHTCU
45	69201401	SECONDARY LOCK, two-way socket	FLHTCU
46	69201404	RETAINER, anchored	FLHTCU
47	69201405	RESISTOR PACK	FLHTCU
48	69201423	DC LEAD ASSEMBLY, two-way socket	FLHTCU

WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8)

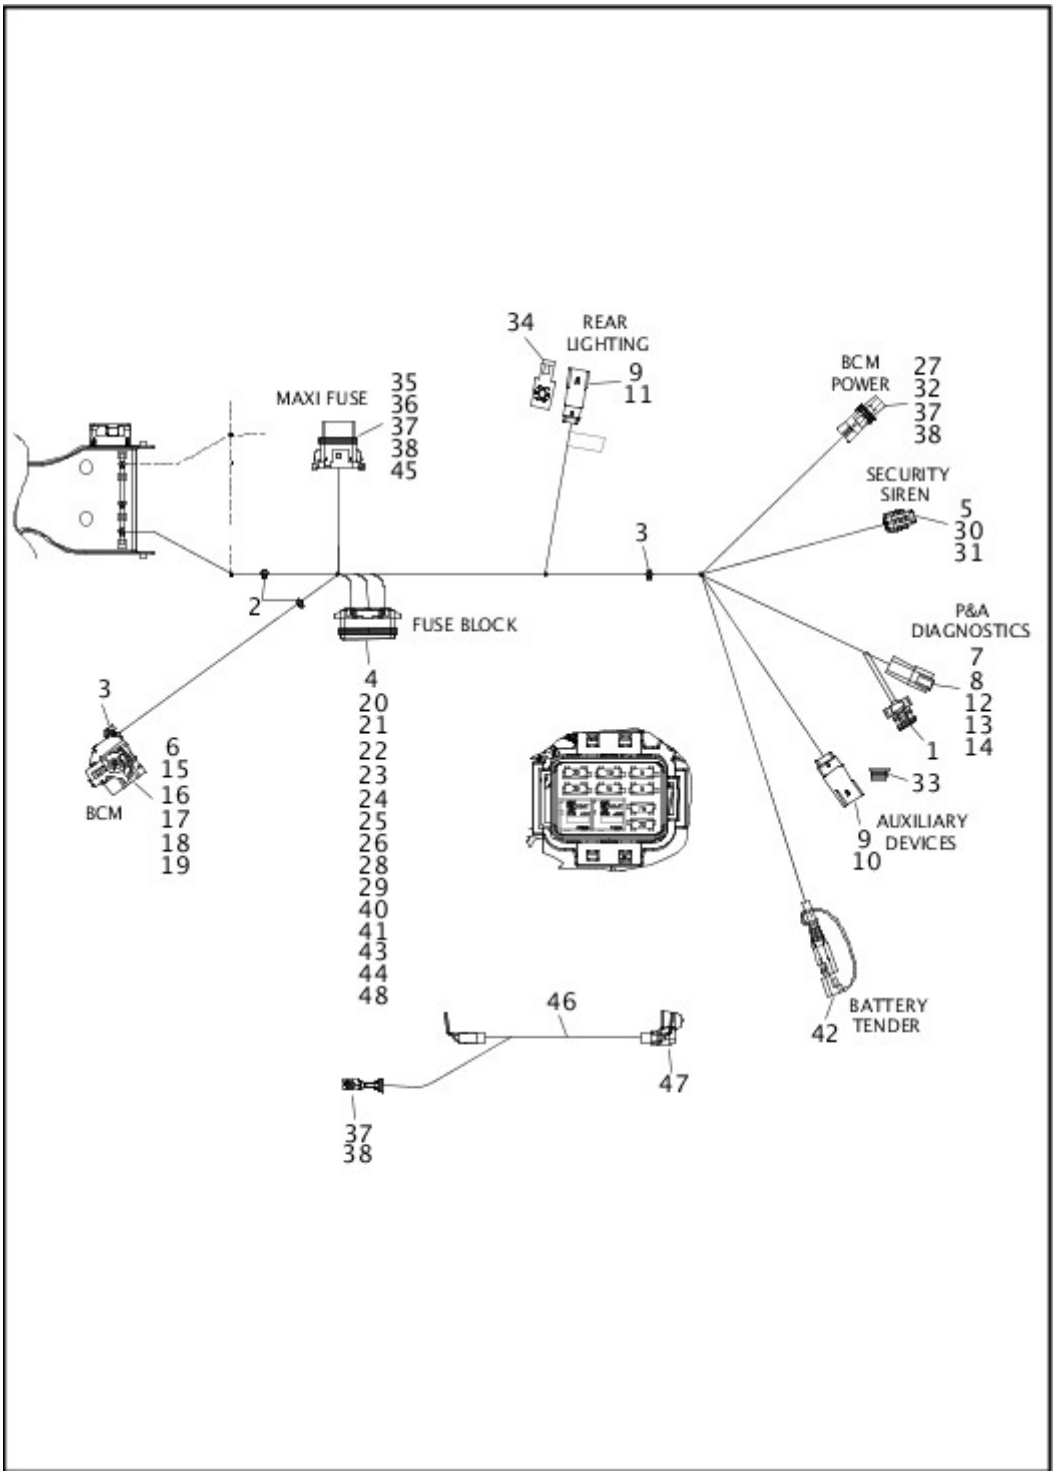

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201120A	MAIN WIRING HARNESS - ABS	FLHTCU
NOTE: Includes the following parts.			
1	6990	PLUG, weather, six-way pin	FLHTCU
2	10006	CABLE STRAP *(2)*	FLHTCU
3	10065	CABLE STRAP *(2)*	FLHTCU
4	31586-07	RELAY *(2)*	FLHTCU
5	72064-06	HOUSING, three-way socket (black)	FLHTCU
6	72081-11	HOUSING, 48-way socket (black)	FLHTCU
7	72106-94BK	HOUSING, six-way pin (black) (replaces gray connector)	FLHTCU
8	72146-94	SECONDARY LOCK, six-way pin	FLHTCU
9	72169-07	TERMINAL, pin, 16-20 AWG *(10)*	FLHTCU
10	72175-07BK	HOUSING, four-way pin (black)	FLHTCU
11	72188-07BK	HOUSING, six-way pin (black)	FLHTCU
12	72190-94	TERMINAL, pin, 16-18 AWG *(2)*	FLHTCU
13	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLHTCU
14	72195-94	SEAL PIN	FLHTCU
15	72209-11	COVER, wire	FLHTCU
16	72222-11	TERMINAL, socket, 18-20 AWG *(21)*	FLHTCU
17	72226-11	TERMINAL, socket, 14-16 AWG	FLHTCU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLHTCU
19	72256-11	SEAL PIN, 0.6 mm (white) *(9)*	FLHTCU
20	72296-95	TERMINAL, socket, 14-16 AWG *(3)*	FLHTCU
21	72298-95	WIRE SEAL, 14-18 AWG (green) *(3)*	FLHTCU
22	72299-95	SEAL PIN, green *(2)*	FLHTCU
23	72308-97	TERMINAL, socket, 12-14 AWG *(5)*	FLHTCU
24	72330-95	FUSE, 15 A (blue)	FLHTCU
25	72331-95	FUSE, 5 A (tan) *(2)*	FLHTCU
26	72345-02	FUSE, 20 A (yellow) *(3)*	FLHTCU
27	72350-11	HOUSING, one-way socket (black)	FLHTCU
28	72356-95	TERMINAL, socket, 18-20 AWG *(14)*	FLHTCU
29	72412-97	WIRE SEAL, 12-14 AWG (gray) *(5)*	FLHTCU
30	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHTCU
31	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHTCU
32	72575-11	SECONDARY LOCK, one-way socket	FLHTCU
33	72632-10	PLUG, weather, four-way pin	FLHTCU
34	73213-07	RETAINER, anchored	FLHTCU
35	73301-04	HOUSING, two-way pin (black)	FLHTCU
36	73303-04	SECONDARY LOCK, two-way socket	FLHTCU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	73304-04	TERMINAL, socket, 10 AWG *(3)*	FLHTCU
38	73305-04	WIRE SEAL, 10 AWG (blue) *(3)*	FLHTCU
39	11100115	CLOTH, HARNESS WRAP, 50 m (not shown)	FLHTCU
40	69200194	FUSE BLOCK, 24-way	FLHTCU
41	69200199	WIRE SEAL, 18-20 AWG (purple) *(14)*	FLHTCU
42	69200212	HARNESS, battery tender	FLHTCU
43	69200293	FUSE, 7.5 A (brown) *(2)*	FLHTCU
44	69200312	SECONDARY LOCK, fuse block *(3)*	FLHTCU
45	69200336	FUSE, main, 50 A (red), NOTE: Fuse is sold separately and is not part of main harness	FLHTCU
46	69201130	WIRE HARNESS, battery positive to starter, with 73304-04, 73305-04 and 69201307	FLHTCU
47	69201307	BOOT, battery positive	FLHTCU
48	69201411	COVER, fuse block	FLHTCU

WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10)

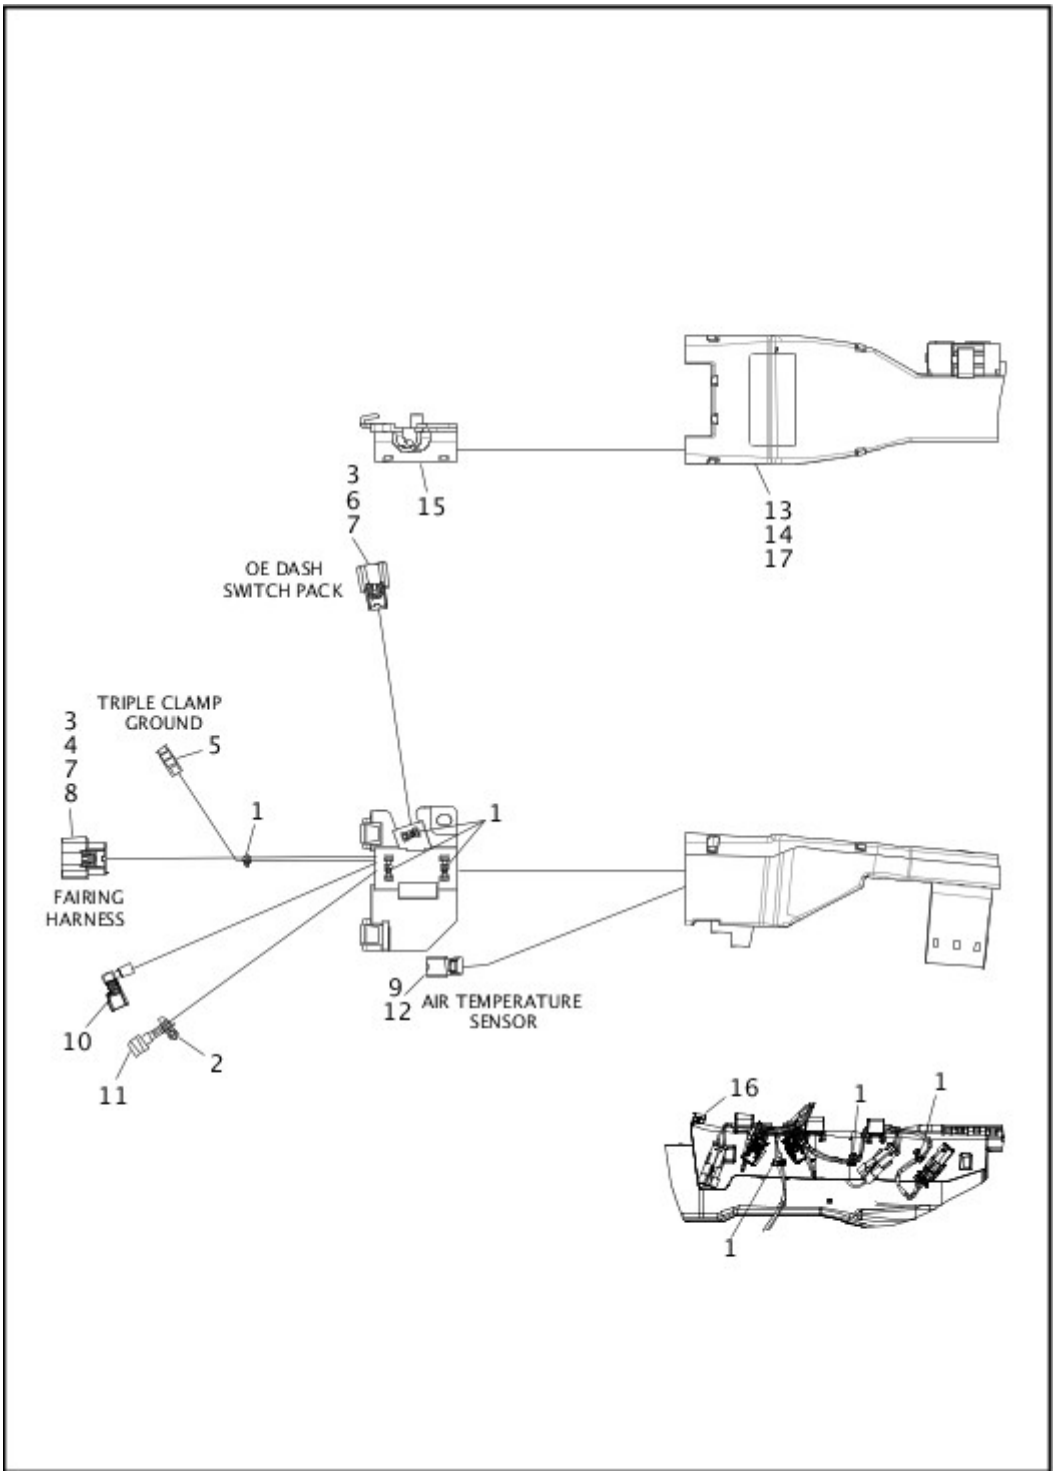

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201119A	MAIN WIRING HARNESS - ABS	FLHTK, FLHTK SHRINE, FLHTKL
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(7)*	FLHTK, FLHTK SHRINE, FLHTKL
2	10177	CABLE STRAP, anchored	FLHTK, FLHTK SHRINE, FLHTKL
3	72168-07	TERMINAL, socket, 18-20 AWG *(7)*	FLHTK, FLHTK SHRINE, FLHTKL
4	72272-07	TERMINAL, socket, 14-16 AWG *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
5	72364-06	TERMINAL, socket, 10-14 AWG	FLHTK, FLHTK SHRINE, FLHTKL
6	72414-07BK	HOUSING, six-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
7	72473-07	SEAL PIN, natural *(7)*	FLHTK, FLHTK SHRINE, FLHTKL
8	72489-07GY	HOUSING, 12-way socket (gray)	FLHTK, FLHTK SHRINE, FLHTKL
9	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
10	69200032	WIRE HARNESS, AM/FM antenna	FLHTK, FLHTK SHRINE, FLHTKL
11	69200136	WIRE HARNESS, CB antenna	FLHTK, FLHTK SHRINE, FLHTKL
12	69200201	HOUSING, two-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
13	69200202A	WIRE TROUGH	FLHTK, FLHTK SHRINE, FLHTKL
14	69200203A	COVER, wire trough, with 15368-01A and 69201459	FLHTK, FLHTK SHRINE, FLHTKL
15	69200214	CADDY, left steer head	FLHTK, FLHTK SHRINE, FLHTKL
16	69201287	BRACKET, mounting, electrical connector	FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	69201459	BRACKET	FLHTK, FLHTK SHRINE, FLHTKL

WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10)

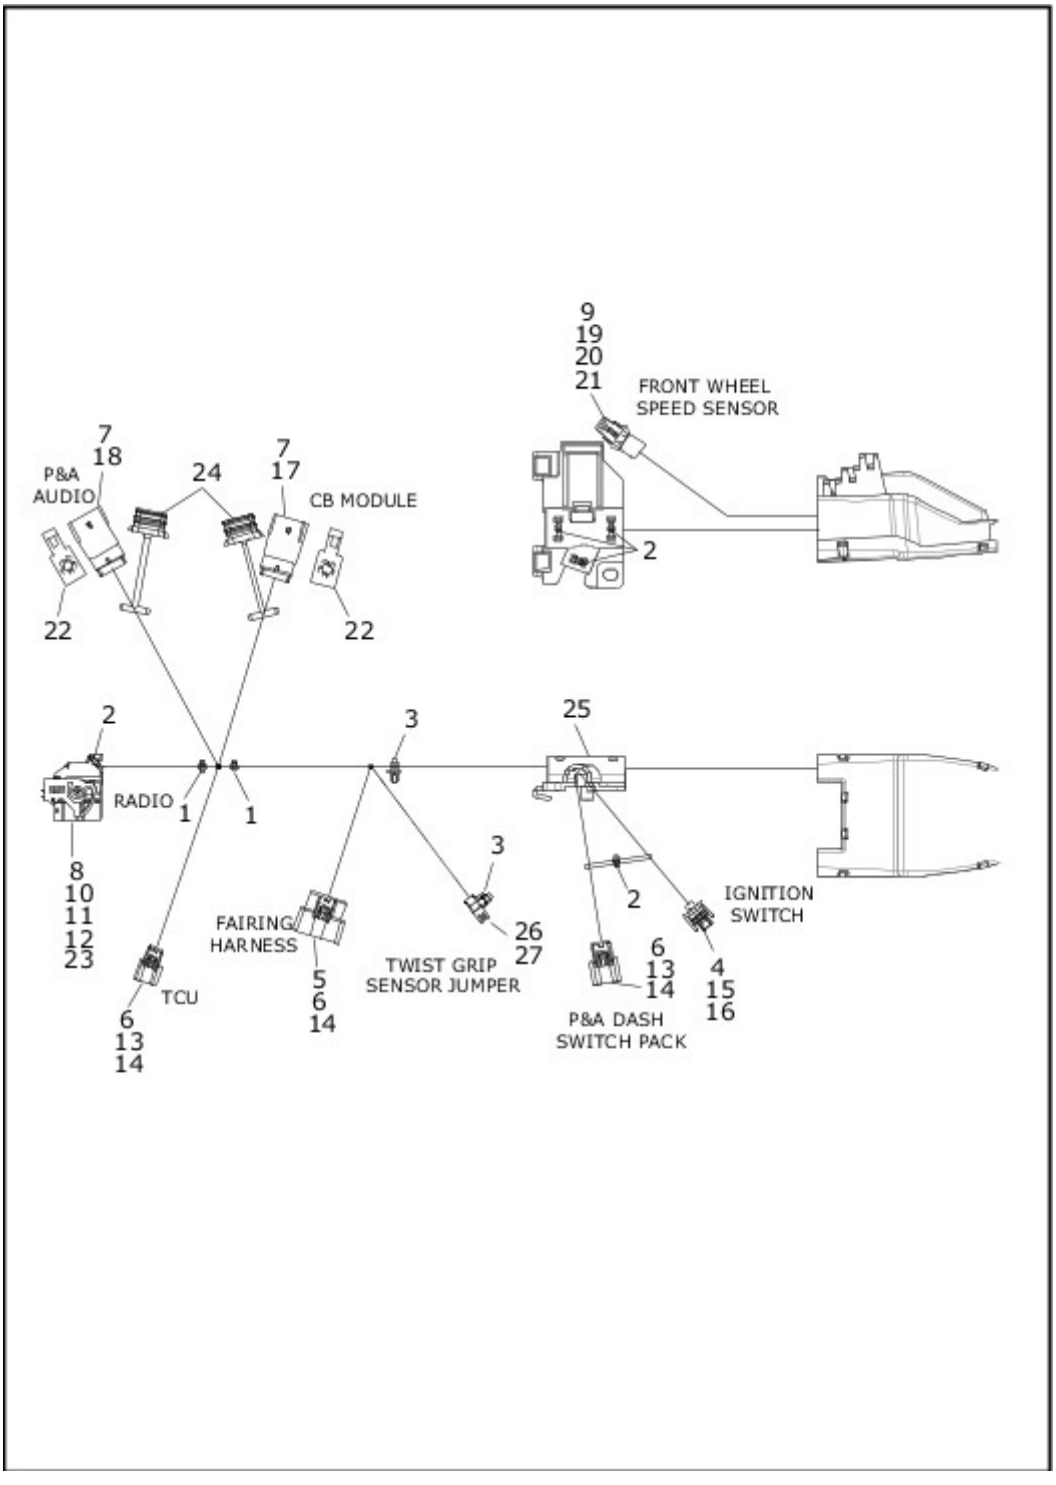

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201119A	MAIN WIRING HARNESS - ABS	FLHTK, FLHTK SHRINE, FLHTKL
NOTE: Includes the following parts.			
1	10006	CABLE STRAP *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
2	10065	CABLE STRAP *(5)*	FLHTK, FLHTK SHRINE, FLHTKL
3	10177	CABLE STRAP, anchored *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
4	72062-06	HOUSING, two-way socket (gray)	FLHTK, FLHTK SHRINE, FLHTKL
5	72166-07BK	HOUSING, 16-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
6	72168-07	TERMINAL, socket, 18-20 AWG *(16)*	FLHTK, FLHTK SHRINE, FLHTKL
7	72169-07	TERMINAL, pin, 16-20 AWG *(23)*	FLHTK, FLHTK SHRINE, FLHTKL
8	72209-11	COVER, wire	FLHTK, FLHTK SHRINE, FLHTKL
9	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
10	72222-11	TERMINAL, socket, 18-20 AWG *(28)*	FLHTK, FLHTK SHRINE, FLHTKL
11	72226-11	TERMINAL, socket, 14-16 AWG *(8)*	FLHTK, FLHTK SHRINE, FLHTKL
12	72256-11	SEAL PIN, 0.6 mm (white) *(12)*	FLHTK, FLHTK SHRINE, FLHTKL
13	72414-07BK	HOUSING, six-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
14	72473-07	SEAL PIN, natural *(6)*	FLHTK, FLHTK SHRINE, FLHTKL
15	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
16	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	72488-07BK	HOUSING, 12-way pin (black)	FLHTK, FLHTK SHRINE, FLHTKL
18	72490-07GY	HOUSING, 12-way pin (gray)	FLHTK, FLHTK SHRINE, FLHTKL
19	72606-08	HOUSING, two-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
20	72639-10	SECONDARY LOCK, two-way socket	FLHTK, FLHTK SHRINE, FLHTKL
21	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
22	73213-07	RETAINER, anchored *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
23	69200193	HOUSING, 48-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
24	69200205	PLUG, weather, 12-way pin *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
25	69200215	CADDY, right steer head	FLHTK, FLHTK SHRINE, FLHTKL
26	69201163	HOUSING, six-way pin (black)	FLHTK, FLHTK SHRINE, FLHTKL
27	69201164	TERMINAL, pin, 22 AWG *(6)*	FLHTK, FLHTK SHRINE, FLHTKL

WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10)

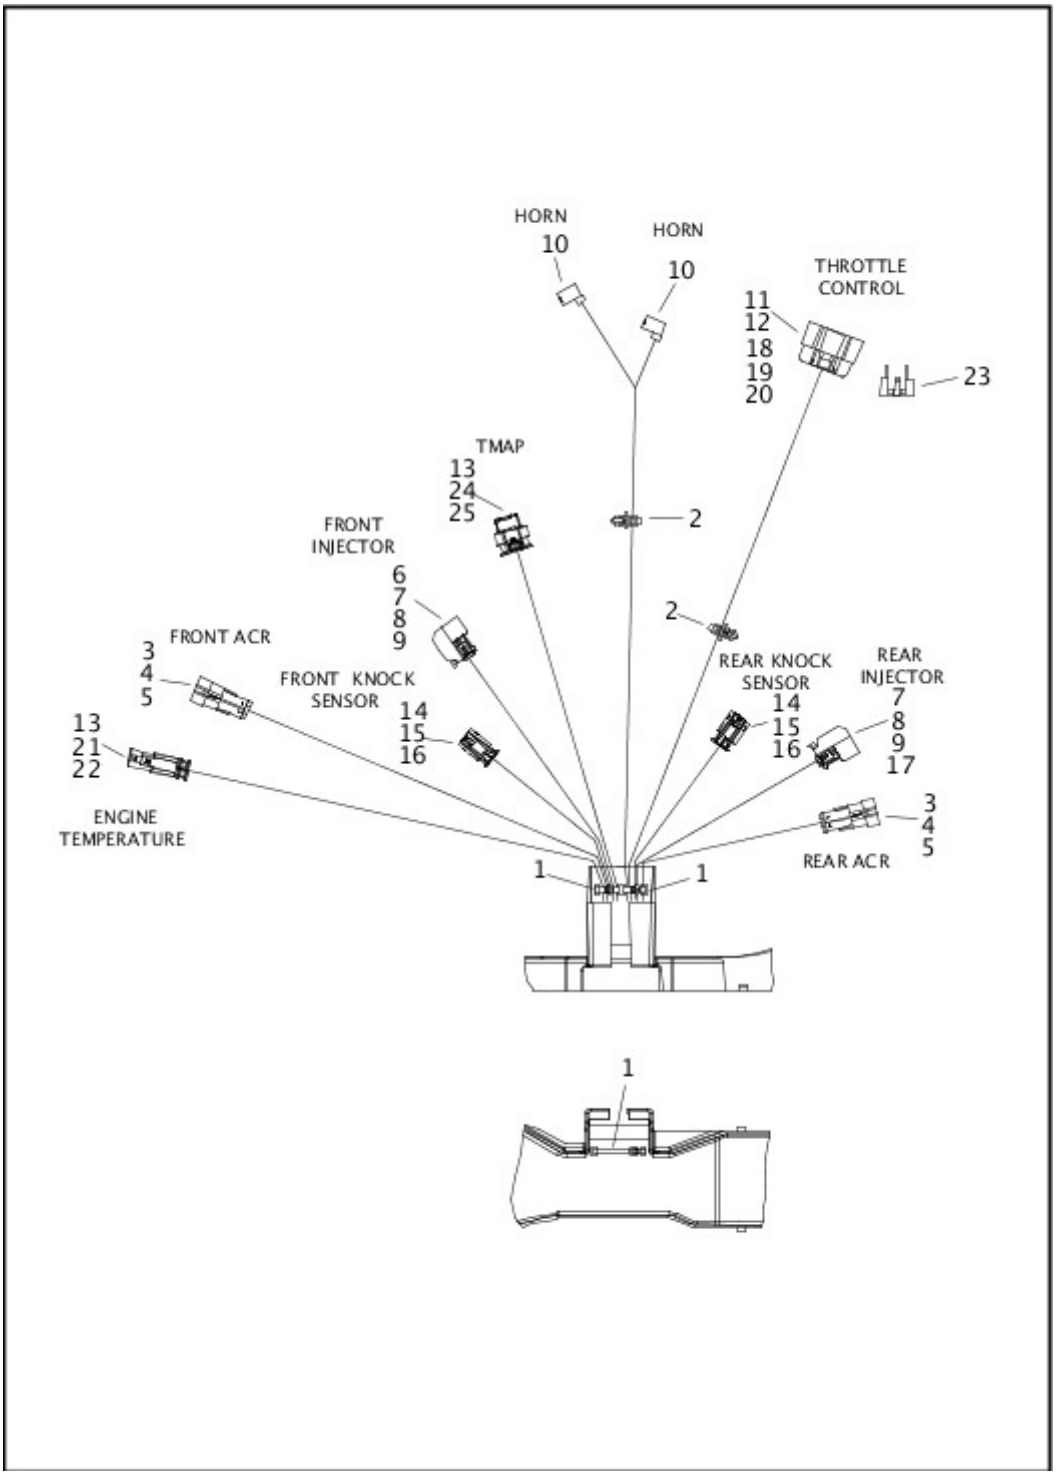

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201119A	MAIN WIRING HARNESS - ABS	FLHTK, FLHTK SHRINE, FLHTKL
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
2	10177	CABLE STRAP, anchored *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
3	72008-05	TERMINAL, pin, 20-22 AWG *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
4	72009-05	HOUSING, two-way pin (black) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
6	72098-06	HOUSING, two-way socket (gray)	FLHTK, FLHTK SHRINE, FLHTKL
7	72099-06	WIRE SEAL, 16-18 AWG (blue) *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
8	72110-06	TERMINAL, socket, 16-18 AWG *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
9	72145-06	SECONDARY LOCK, two-way socket (blue) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
10	72283-09	TERMINAL, socket, 14-16 AWG, 90 degree *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
11	72499-07	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHTK, FLHTK SHRINE, FLHTKL
12	72569-08	TERMINAL, socket, 20-22 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
13	69201301	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHTK, FLHTK SHRINE, FLHTKL
14	69201390	HOUSING, two-way socket (black) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
15	69201391	TERMINAL, socket, 20 AWG *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
16	69201392	WIRE SEAL, 20 AWG (yellow) *(4)*	FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	69201393	HOUSING, two-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
18	69201394	HOUSING, six-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
19	69201395	SECONDARY LOCK, six-way socket	FLHTK, FLHTK SHRINE, FLHTKL
20	69201396	TERMINAL, socket, 20 AWG *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
21	69201397	HOUSING, two-way pin (black)	FLHTK, FLHTK SHRINE, FLHTKL
22	69201398	TERMINAL, pin, 20 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
23	69201416	SECONDARY LOCK, six-way socket	FLHTK, FLHTK SHRINE, FLHTKL
24	69201441	HOUSING, four-way socket	FLHTK, FLHTK SHRINE, FLHTKL
25	69201442	TERMINAL, socket, 18 AWG *(4)*	FLHTK, FLHTK SHRINE, FLHTKL

WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10)

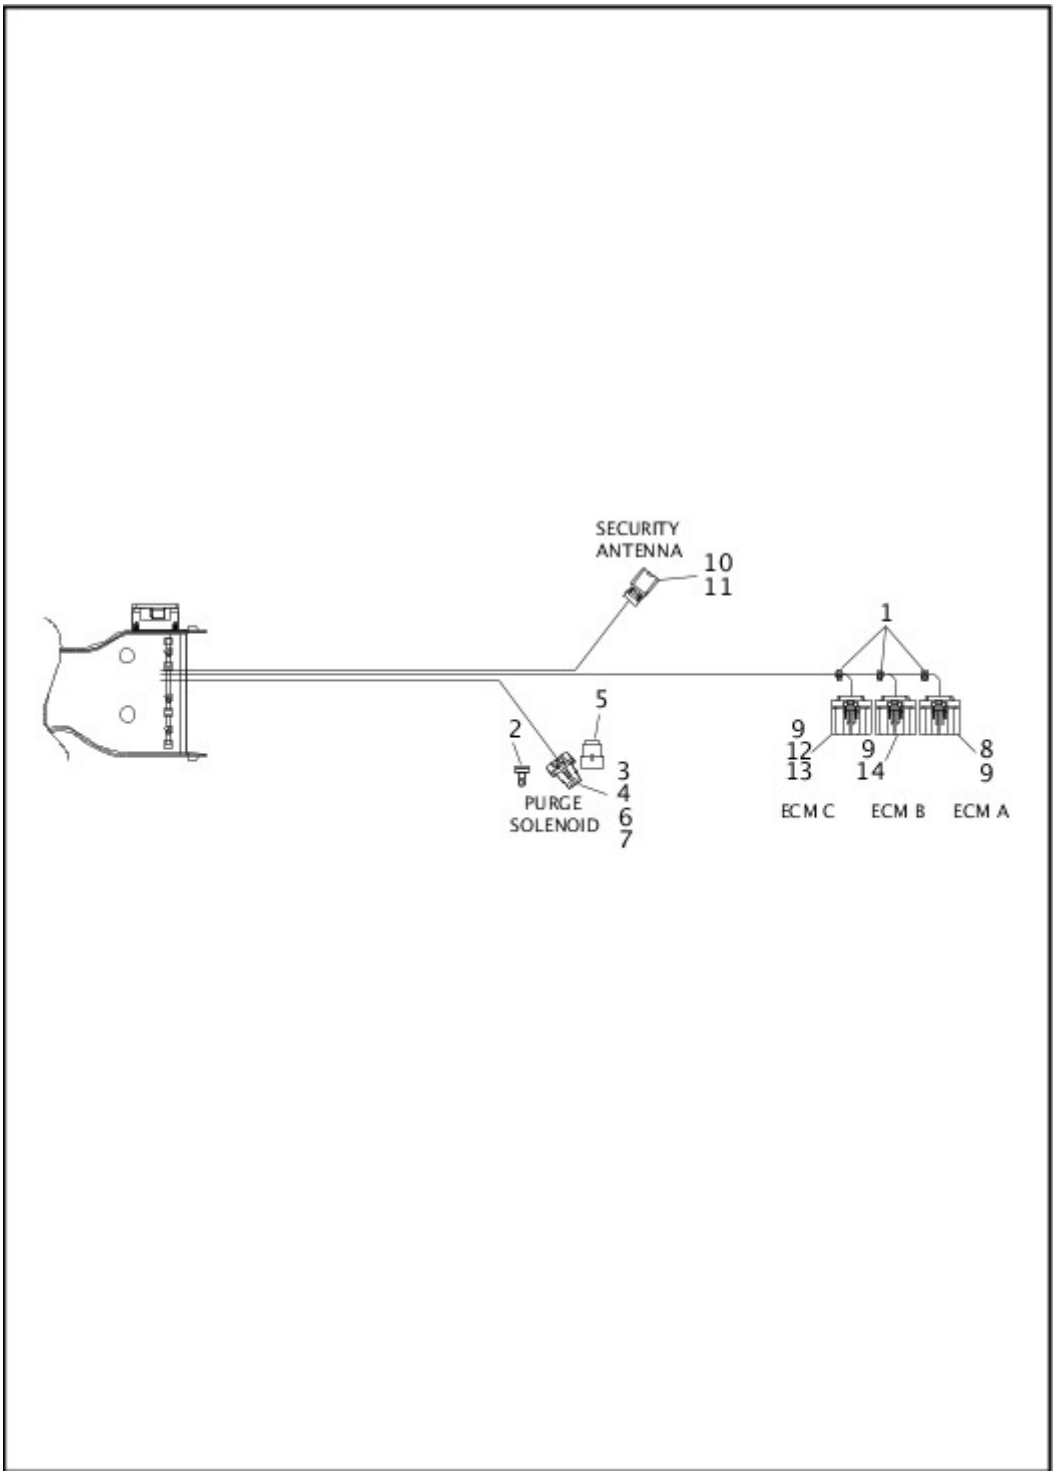


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201119A	MAIN WIRING HARNESS - ABS	FLHTK, FLHTK SHRINE, FLHTKL
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
2	10147	CLIP, connector	FLHTK, FLHTK SHRINE, FLHTKL
3	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
4	72518-01	HOUSING, two-way socket (red)	FLHTK, FLHTK SHRINE, FLHTKL
5	72533-06	PLUG, weather, two-way pin	FLHTK, FLHTK SHRINE, FLHTKL
6	72609-08	SECONDARY LOCK, two-way socket	FLHTK, FLHTK SHRINE, FLHTKL
7	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
8	72664-12A	HOUSING, 18-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
9	72666-12	TERMINAL, socket, 18-20 AWG *(46)*	FLHTK, FLHTK SHRINE, FLHTKL
10	72720-07	HOUSING, two-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
11	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
12	69201168	TERMINAL, socket, 22 AWG (silver) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
13	69201410	HOUSING, 18-way socket (brown)	FLHTK, FLHTK SHRINE, FLHTKL
14	69201414	HOUSING, 18-way socket (gray)	FLHTK, FLHTK SHRINE, FLHTKL

WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10)

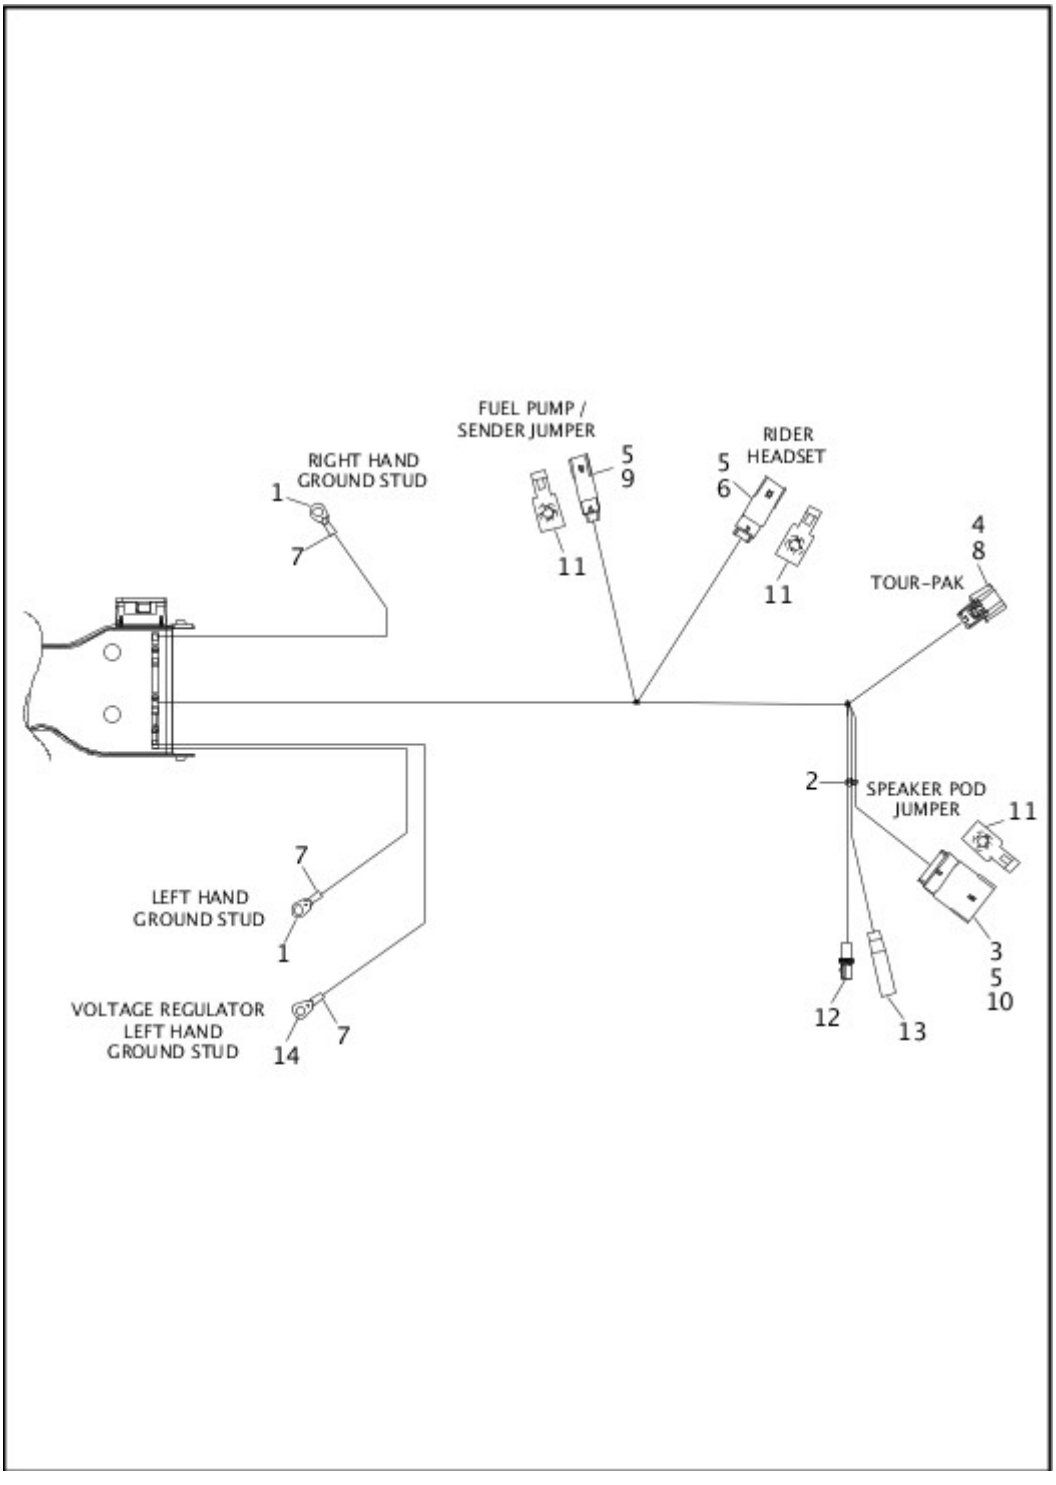


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201119A	MAIN WIRING HARNESS - ABS	FLHTK, FLHTK SHRINE, FLHTKL
NOTE: Includes the following parts.			
1	9819	TERMINAL, ring, 12 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
2	10065	CABLE STRAP	FLHTK, FLHTK SHRINE, FLHTKL
3	72167-07BK	HOUSING, 16-way pin (black)	FLHTK, FLHTK SHRINE, FLHTKL
4	72168-07	TERMINAL, socket, 18-20 AWG *(6)*	FLHTK, FLHTK SHRINE, FLHTKL
5	72169-07	TERMINAL, pin, 16-20 AWG *(23)*	FLHTK, FLHTK SHRINE, FLHTKL
6	72188-07BK	HOUSING, six-way pin (black)	FLHTK, FLHTK SHRINE, FLHTKL
7	72249-94	HEAT SHRINK TUBE, .415 x 1 in (black)	FLHTK, FLHTK SHRINE, FLHTKL
8	72414-07BK	HOUSING, six-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
9	72415-07GY	HOUSING, four-way pin (gray)	FLHTK, FLHTK SHRINE, FLHTKL
10	72473-07	SEAL PIN, natural *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
11	73213-07	RETAINER, anchored *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
12	69200032	WIRE HARNESS, AM/FM antenna	FLHTK, FLHTK SHRINE, FLHTKL
13	69200136	WIRE HARNESS, CB antenna	FLHTK, FLHTK SHRINE, FLHTKL
14	69201596	TERMINAL, ring, 8-10 AWG	FLHTK, FLHTK SHRINE, FLHTKL

WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10)

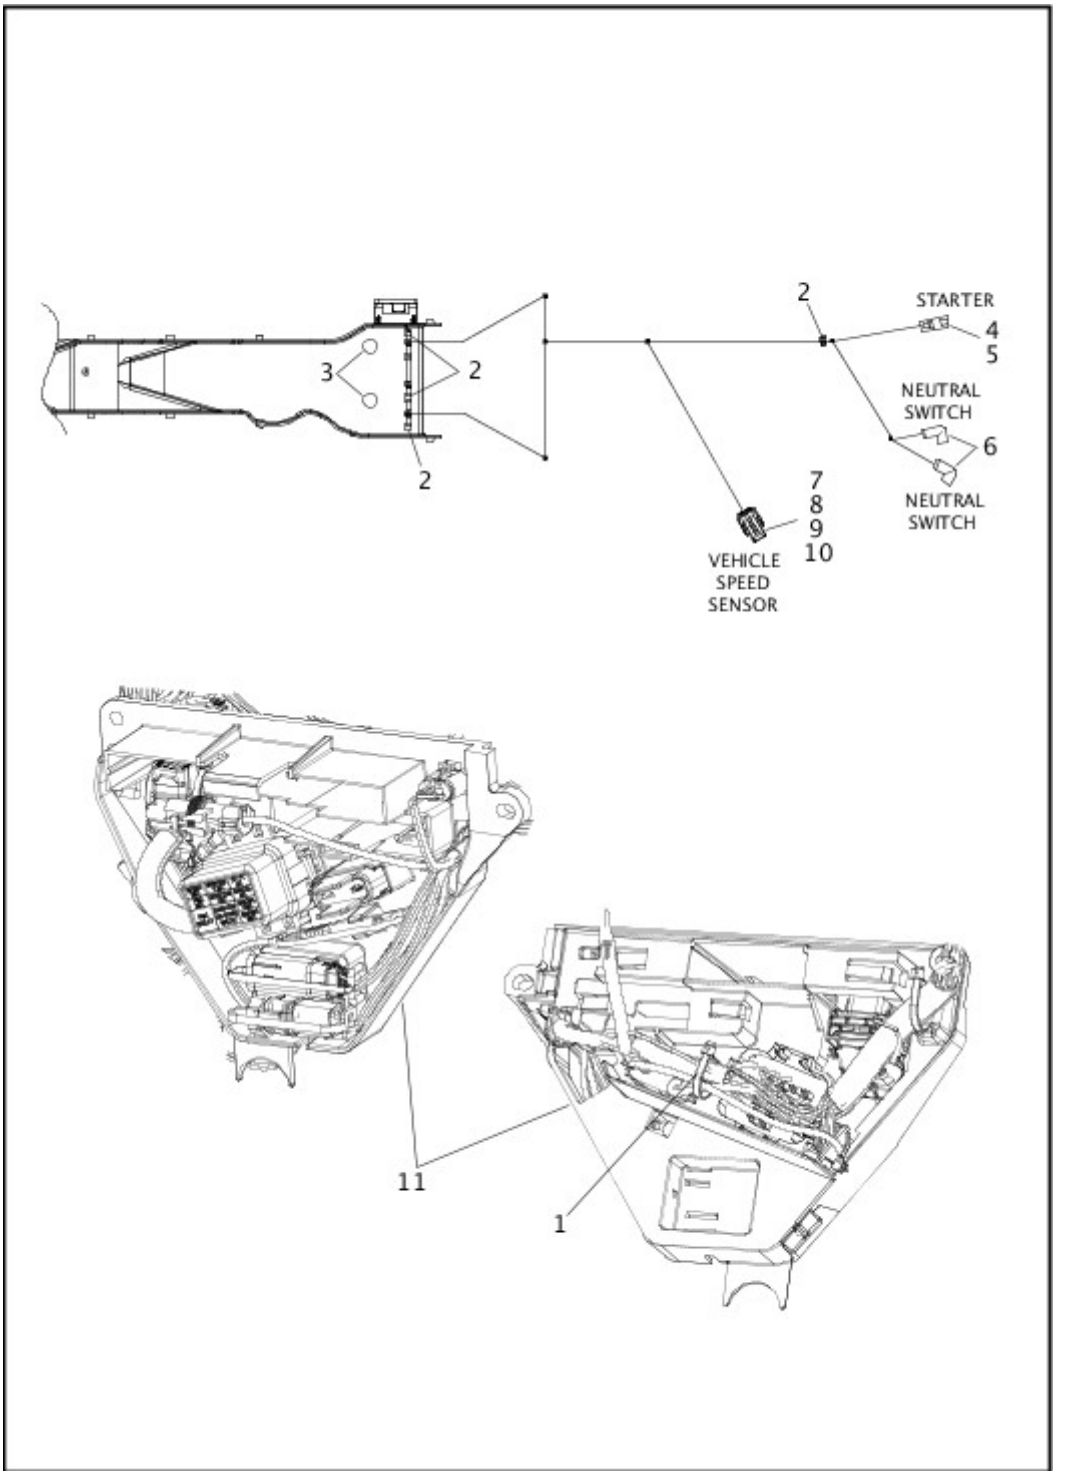


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201119A	MAIN WIRING HARNESS - ABS	FLHTK, FLHTK SHRINE, FLHTKL
NOTE: Includes the following parts.			
1	10006	CABLE STRAP	FLHTK, FLHTK SHRINE, FLHTKL
2	10065	CABLE STRAP *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
3	11779	FASTENER, push-in (black) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
4	72291-94	TERMINAL, socket, 14-16 AWG	FLHTK, FLHTK SHRINE, FLHTKL
5	72295-94	CONNECTOR, starter housing	FLHTK, FLHTK SHRINE, FLHTKL
6	72405-98BK	WIRE ASSEMBLY, push-on, right angle molded, 65-1/2 in length *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
7	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
8	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
9	72543-07BK	HOUSING, three-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
10	72544-07	SECONDARY LOCK, three-way socket	FLHTK, FLHTK SHRINE, FLHTKL
11	69200175	CADDY, fuse block, electrical panel	FLHTK, FLHTK SHRINE, FLHTKL

WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10)

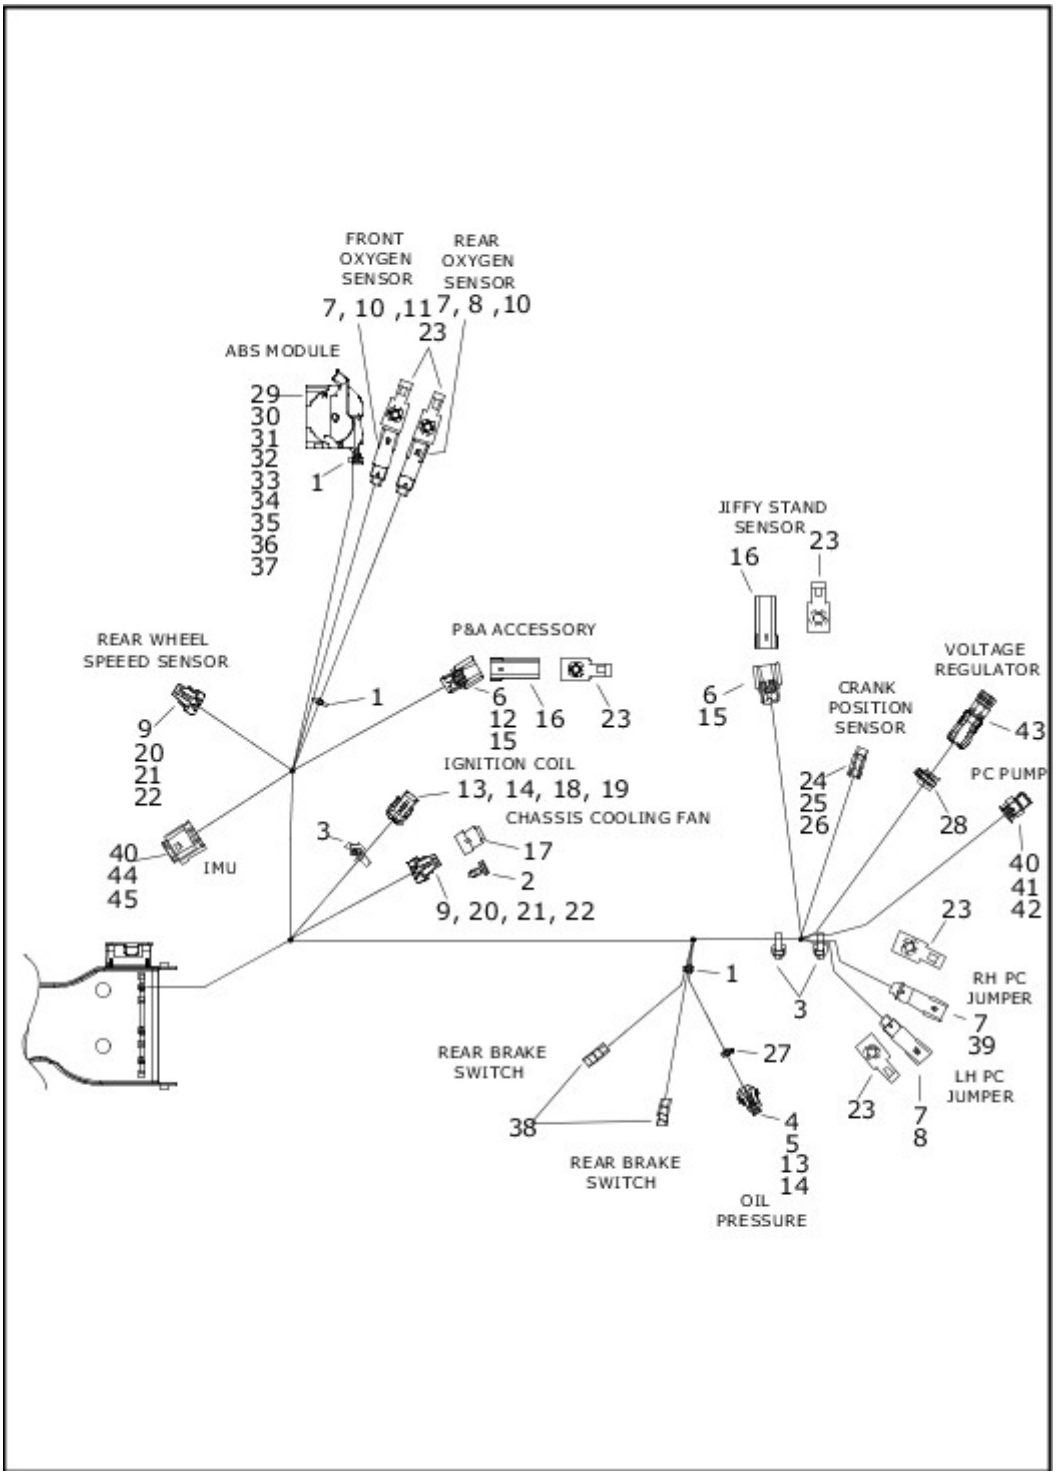

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201119A	MAIN WIRING HARNESS - ABS	FLHTK, FLHTK SHRINE, FLHTKL
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
2	10147	CLIP, connector	FLHTK, FLHTK SHRINE, FLHTKL
3	10177	CABLE STRAP, anchored *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
4	72065-06A	HOUSING, three-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
5	72127-06	SECONDARY LOCK, three-way	FLHTK, FLHTK SHRINE, FLHTKL
6	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLHTK, FLHTK SHRINE, FLHTKL
7	72169-07	TERMINAL, pin, 16-20 AWG *(10)*	FLHTK, FLHTK SHRINE, FLHTKL
8	72175-07BK	HOUSING, four-way pin (black) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
9	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
10	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
11	72415-07GY	HOUSING, four-way pin (gray)	FLHTK, FLHTK SHRINE, FLHTKL
12	72473-07	SEAL PIN, natural	FLHTK, FLHTK SHRINE, FLHTKL
13	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLHTK, FLHTK SHRINE, FLHTKL
14	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLHTK, FLHTK SHRINE, FLHTKL
15	72499-07	WIRE SEAL, 20-22 AWG (green) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
16	72512-07BK	HOUSING, three-way socket (black) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	72519-09BK	PLUG, weather, three-way socket *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
18	72533-06	PLUG, weather, two-way pin	FLHTK, FLHTK SHRINE, FLHTKL
19	72544-07	SECONDARY LOCK, three-way socket	FLHTK, FLHTK SHRINE, FLHTKL
20	72589-09	HOUSING, three-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
21	72606-08	HOUSING, two-way socket (black) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
22	72609-08	SECONDARY LOCK, two-way socket *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
23	72610-08	WIRE SEAL, 18-20 AWG (white) *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
24	73213-07	RETAINER, anchored *(6)*	FLHTK, FLHTK SHRINE, FLHTKL

WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10)

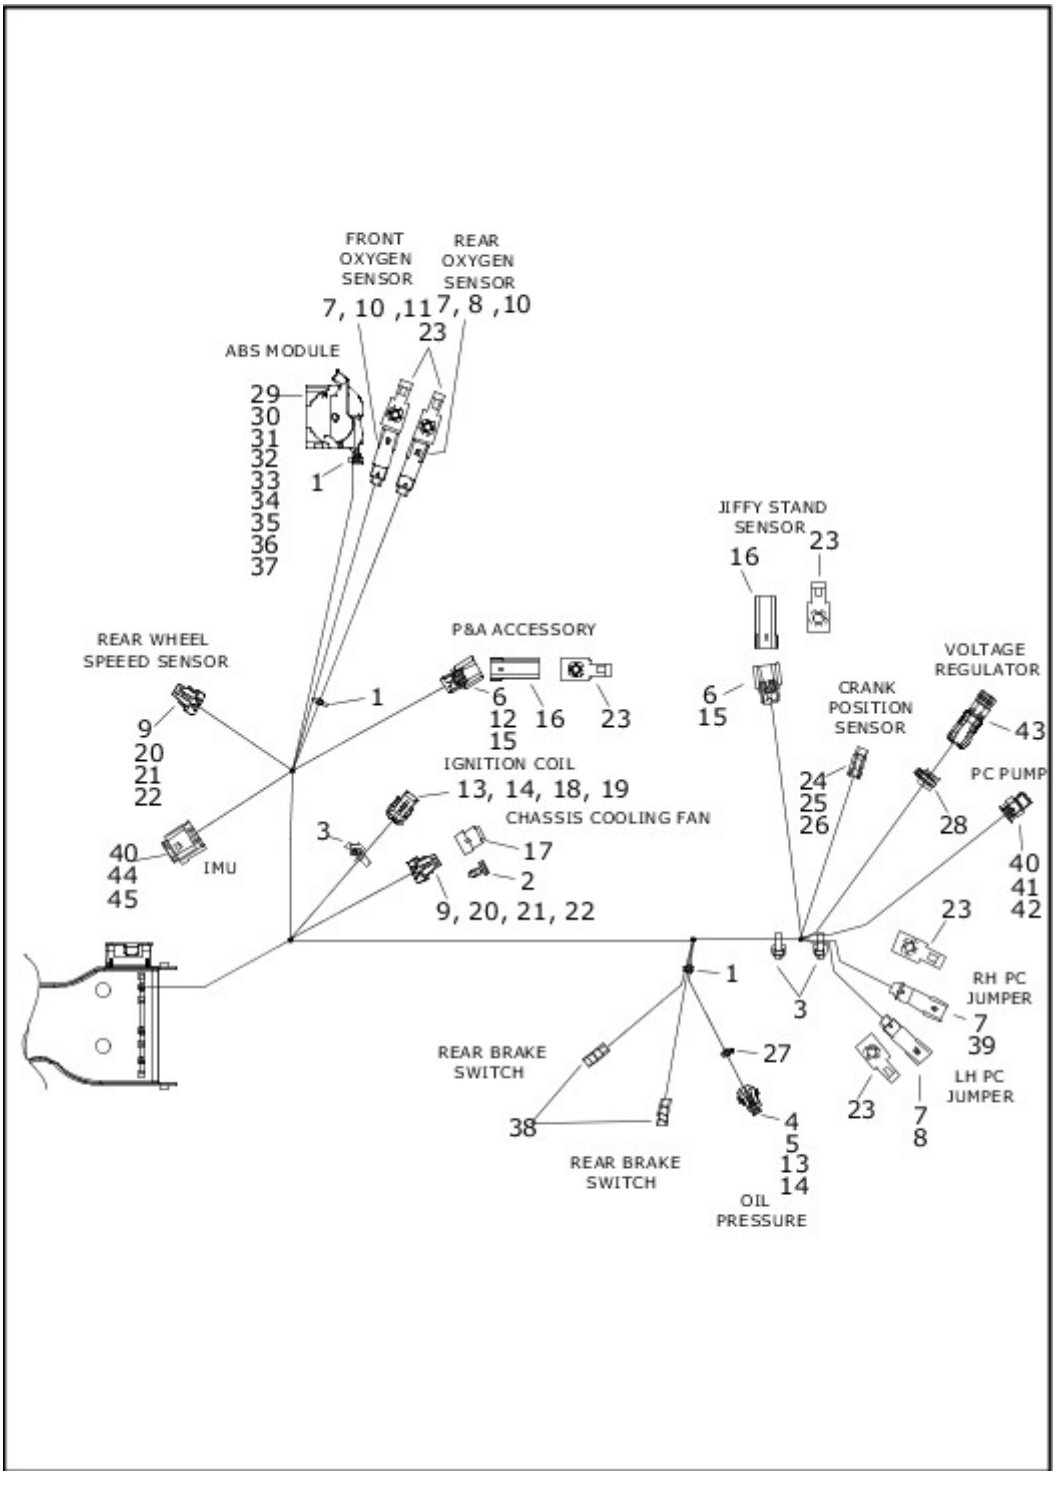

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201119A	MAIN WIRING HARNESS - ABS	FLHTK, FLHTK SHRINE, FLHTKL
NOTE: Includes the following parts.			
25	74112-98BK	HOUSING, two-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
26	74152-98	SECONDARY LOCK, two-way socket	FLHTK, FLHTK SHRINE, FLHTKL
27	74191-98	TERMINAL, socket 16-20 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
28	12500014	CABLE STRAP	FLHTK, FLHTK SHRINE, FLHTKL
29	12500018	CABLE STRAP	FLHTK, FLHTK SHRINE, FLHTKL
30	69200183	HOUSING, 26-way socket	FLHTK, FLHTK SHRINE, FLHTKL
31	69200184	COVER, wire	FLHTK, FLHTK SHRINE, FLHTKL
32	69200185	TERMINAL, socket, 20 AWG *(6)*	FLHTK, FLHTK SHRINE, FLHTKL
33	69200186	TERMINAL, socket, 14-16 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
34	69200187	TERMINAL, socket, 12 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
35	69200188	WIRE SEAL, 20 AWG *(6)*	FLHTK, FLHTK SHRINE, FLHTKL
36	69200189	WIRE SEAL, 14-16 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
37	69200190	WIRE SEAL, 12 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
38	69200191	SEAL PIN *(16)*	FLHTK, FLHTK SHRINE, FLHTKL
39	69200238	TERMINAL, 20 AWG (black) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
40	69200272	HOUSING, two-way pin (black)	FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
41	69201301	WIRE SEAL, 20-22 AWG (green) *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
42	69201396	TERMINAL, socket, 20 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
43	69201400	HOUSING, two-way socket,(black)	FLHTK, FLHTK SHRINE, FLHTKL
44	69201401	SECONDARY LOCK, two-way socket	FLHTK, FLHTK SHRINE, FLHTKL
45	69201404	RETAINER, anchored	FLHTK, FLHTK SHRINE, FLHTKL
46	69201405	RESISTOR PACK	FLHTK, FLHTK SHRINE, FLHTKL
47	69201406	HOUSING, three-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
48	69201407	TERMINAL, socket, 20 AWG *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
49	69201423	DC LEAD ASSEMBLY, two-way socket	FLHTK, FLHTK SHRINE, FLHTKL

WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10)

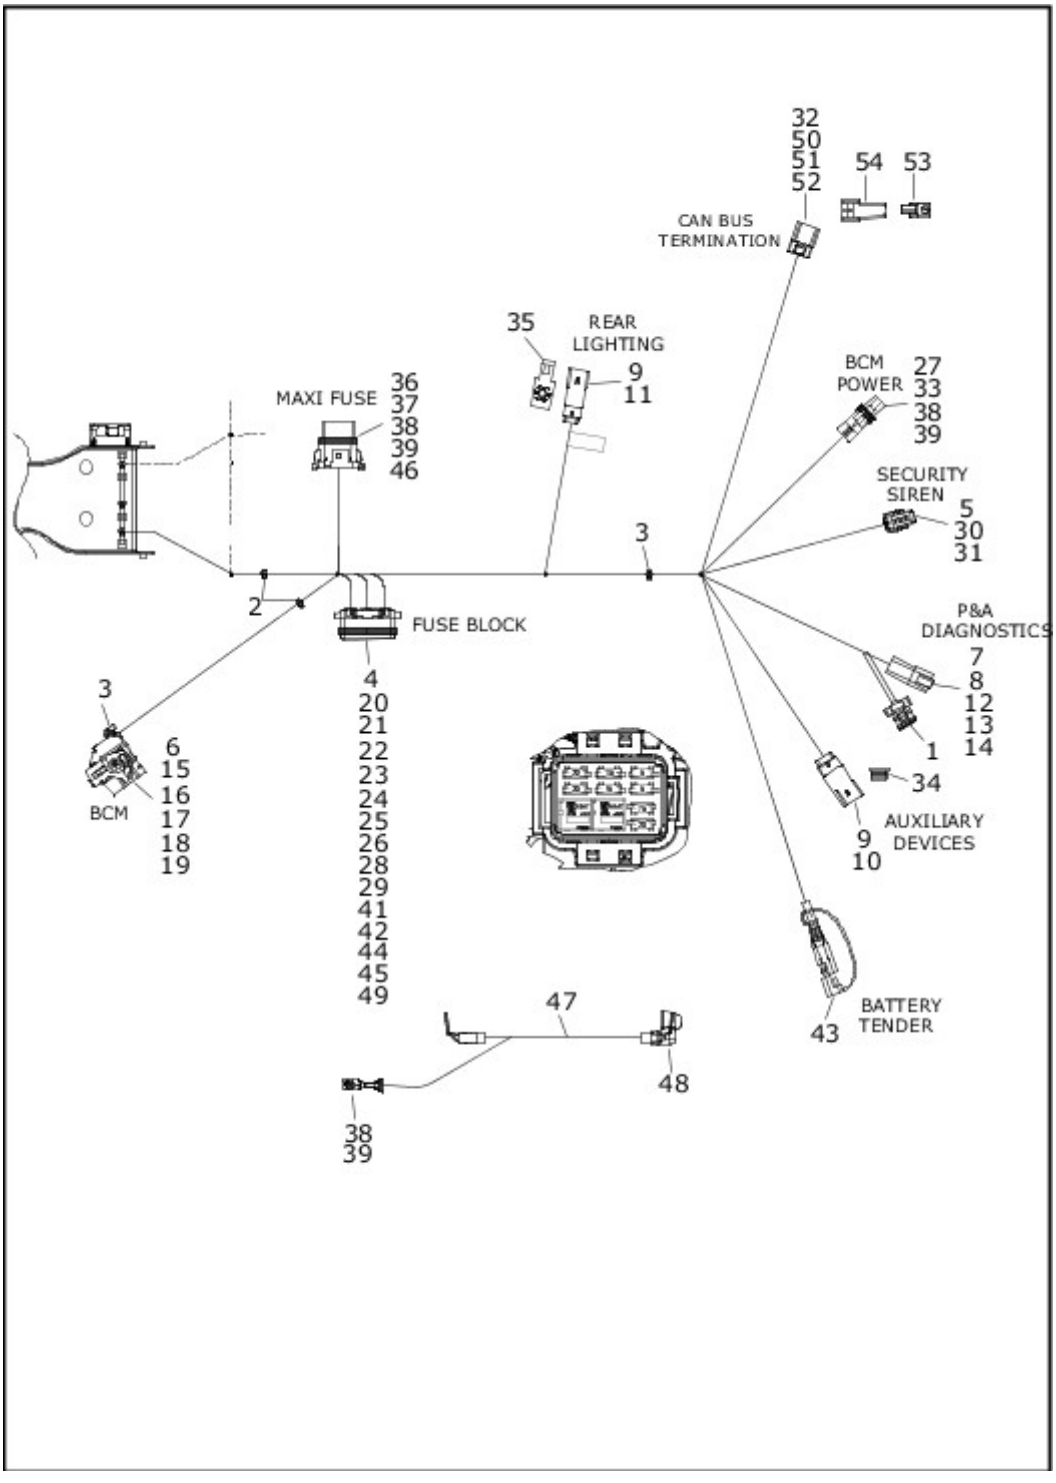

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201119A	MAIN WIRING HARNESS - ABS	FLHTK, FLHTK SHRINE, FLHTKL
NOTE: Includes the following parts.			
1	6990	PLUG, weather, six-way pin	FLHTK, FLHTK SHRINE, FLHTKL
2	10006	CABLE STRAP *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
3	10065	CABLE STRAP *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
4	31586-07	RELAY *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
5	72064-06	HOUSING, three-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
6	72081-11	HOUSING, 48-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
7	72106-94BK	HOUSING, six-way pin (black) (replaces gray connector)	FLHTK, FLHTK SHRINE, FLHTKL
8	72146-94	SECONDARY LOCK, six-way pin	FLHTK, FLHTK SHRINE, FLHTKL
9	72169-07	TERMINAL, pin, 16-20 AWG *(10)*	FLHTK, FLHTK SHRINE, FLHTKL
10	72175-07BK	HOUSING, four-way pin (black)	FLHTK, FLHTK SHRINE, FLHTKL
11	72188-07BK	HOUSING, six-way pin (black)	FLHTK, FLHTK SHRINE, FLHTKL
12	72190-94	TERMINAL, pin, 16-18 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
13	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
14	72195-94	SEAL PIN	FLHTK, FLHTK SHRINE, FLHTKL
15	72209-11	COVER, wire	FLHTK, FLHTK SHRINE, FLHTKL
16	72222-11	TERMINAL, socket, 18-20 AWG *(21)*	FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	72226-11	TERMINAL, socket, 14-16 AWG	FLHTK, FLHTK SHRINE, FLHTKL
18	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLHTK, FLHTK SHRINE, FLHTKL
19	72256-11	SEAL PIN, 0.6 mm (white) *(9)*	FLHTK, FLHTK SHRINE, FLHTKL
20	72296-95	TERMINAL, socket, 14-16 AWG *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
21	72298-95	WIRE SEAL, 14-18 AWG (green) *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
22	72299-95	SEAL PIN, green *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
23	72308-97	TERMINAL, socket, 12-14 AWG *(5)*	FLHTK, FLHTK SHRINE, FLHTKL

WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10)

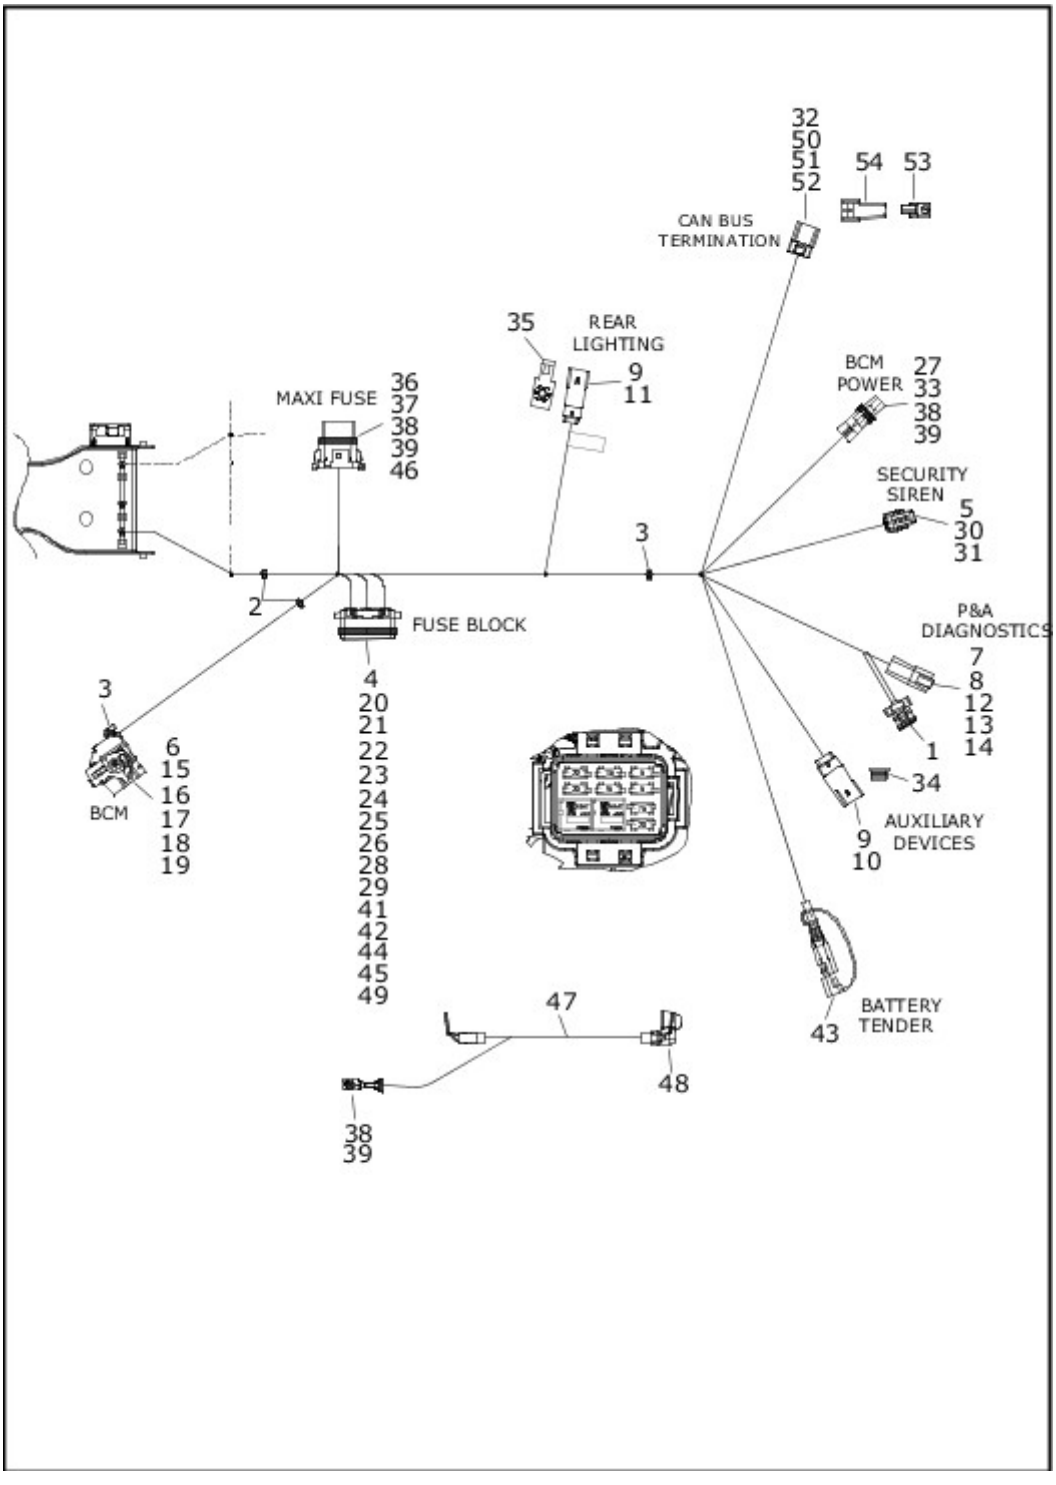

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201119A	MAIN WIRING HARNESS - ABS	FLHTK, FLHTK SHRINE, FLHTKL
NOTE: Includes the following parts.			
24	72330-95	FUSE, 15 A (blue)	FLHTK, FLHTK SHRINE, FLHTKL
25	72331-95	FUSE, 5 A (tan) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
26	72345-02	FUSE, 20 A (yellow) *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
27	72350-11	HOUSING, one-way socket (black)	FLHTK, FLHTK SHRINE, FLHTKL
28	72356-95	TERMINAL, socket, 18-20 AWG *(14)*	FLHTK, FLHTK SHRINE, FLHTKL
29	72412-97	WIRE SEAL, 12-14 AWG (gray) *(5)*	FLHTK, FLHTK SHRINE, FLHTKL
30	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
31	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
32	72575-11	SECONDARY LOCK, one-way socket	FLHTK, FLHTK SHRINE, FLHTKL
33	72632-10	PLUG, weather, four-way pin	FLHTK, FLHTK SHRINE, FLHTKL
34	73213-07	RETAINER, anchored	FLHTK, FLHTK SHRINE, FLHTKL
35	73301-04	HOUSING, two-way pin (black)	FLHTK, FLHTK SHRINE, FLHTKL
36	73303-04	SECONDARY LOCK, two-way socket	FLHTK, FLHTK SHRINE, FLHTKL
37	73304-04	TERMINAL, socket, 10 AWG *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
38	73305-04	WIRE SEAL, 10 AWG (blue) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
39	11100115	CLOTH, HARNESS WRAP, 50 m (not shown)	FLHTK, FLHTK SHRINE, FLHTKL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
40	69200194	FUSE BLOCK, 24-way	FLHTK, FLHTK SHRINE, FLHTKL
41	69200199	WIRE SEAL, 18-20 AWG (purple) *(14)*	FLHTK, FLHTK SHRINE, FLHTKL
42	69200212	HARNESS, battery tender	FLHTK, FLHTK SHRINE, FLHTKL
43	69200293	FUSE, 7.5 A (brown) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
44	69200312	SECONDARY LOCK, fuse block *(3)*	FLHTK, FLHTK SHRINE, FLHTKL
45	69200336	MAIN FUSE, 50 A (red), NOTE: Fuse is sold separately and is not part of main harness	FLHTK, FLHTK SHRINE, FLHTKL
46	69201130	WIRE HARNESS, battery positive to starter, with 73304-04, 73305-04 and 69201307	FLHTK, FLHTK SHRINE, FLHTKL
47	69201307	BOOT, battery positive	FLHTK, FLHTK SHRINE, FLHTKL
48	69201411	COVER, fuse block	FLHTK, FLHTK SHRINE, FLHTKL

WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8)

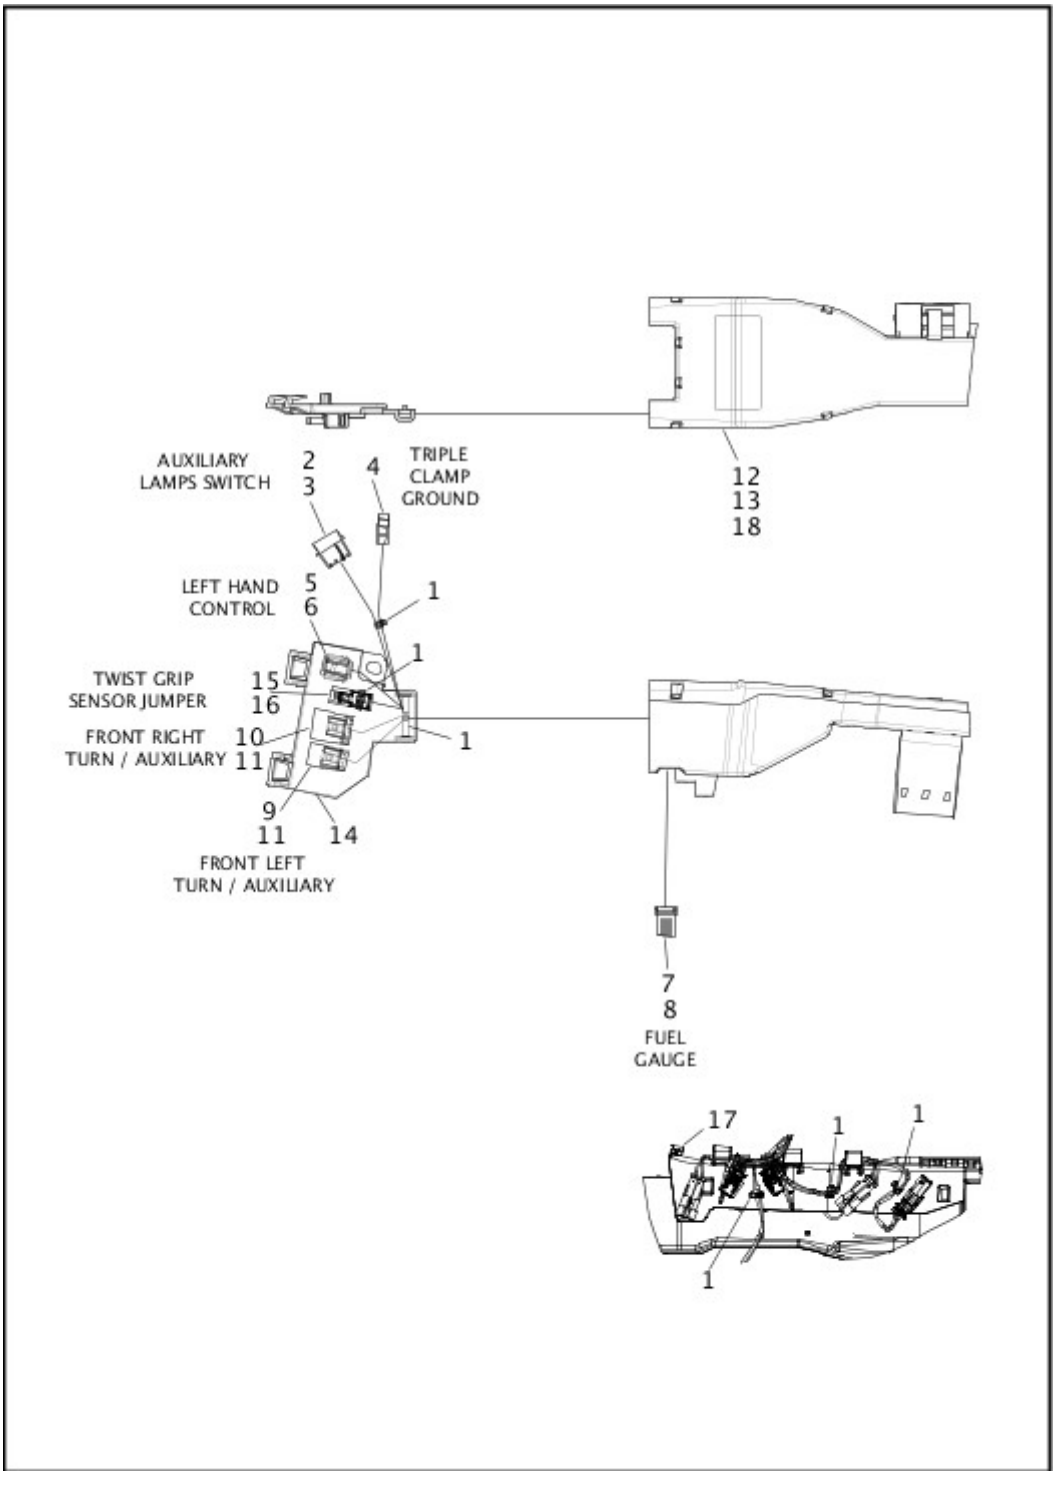


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201126	MAIN WIRING HARNESS - NON-ABS	FLHR
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(6)*	FLHR
2	70291-89	HOUSING, four-way pin	FLHR
3	72039-71A	TERMINAL, pin *(3)*	FLHR
4	72364-06	TERMINAL, socket 10-14 AWG	FLHR
5	72907-11	HOUSING, four-way pin (black)	FLHR
6	72909-11	TERMINAL, pin, 20-22 AWG *(4)*	FLHR
7	72914-01BK	HOUSING, four-way socket (black)	FLHR
8	72991-01	TERMINAL, socket 18-22 AWG *(3)*	FLHR
9	73104-96BK	HOUSING, four-way pin (black)	FLHR
10	73106-96BK	HOUSING, six-way pin (black)	FLHR
11	73190-96	TERMINAL, pin, 16-20 AWG *(8)*	FLHR
12	69200202A	WIRE TROUGH	FLHR
13	69200203A	COVER, wire trough, with 15368-01A and 69201459	FLHR
14	69200284A	BRACKET, mounting	FLHR
15	69201163	HOUSING, six-way pin (black)	FLHR
16	69201164	TERMINAL, pin, 22 AWG *(6)*	FLHR
17	69201287	BRACKET, mounting, electrical connector	FLHR
18	69201459	BRACKET	FLHR

WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8)

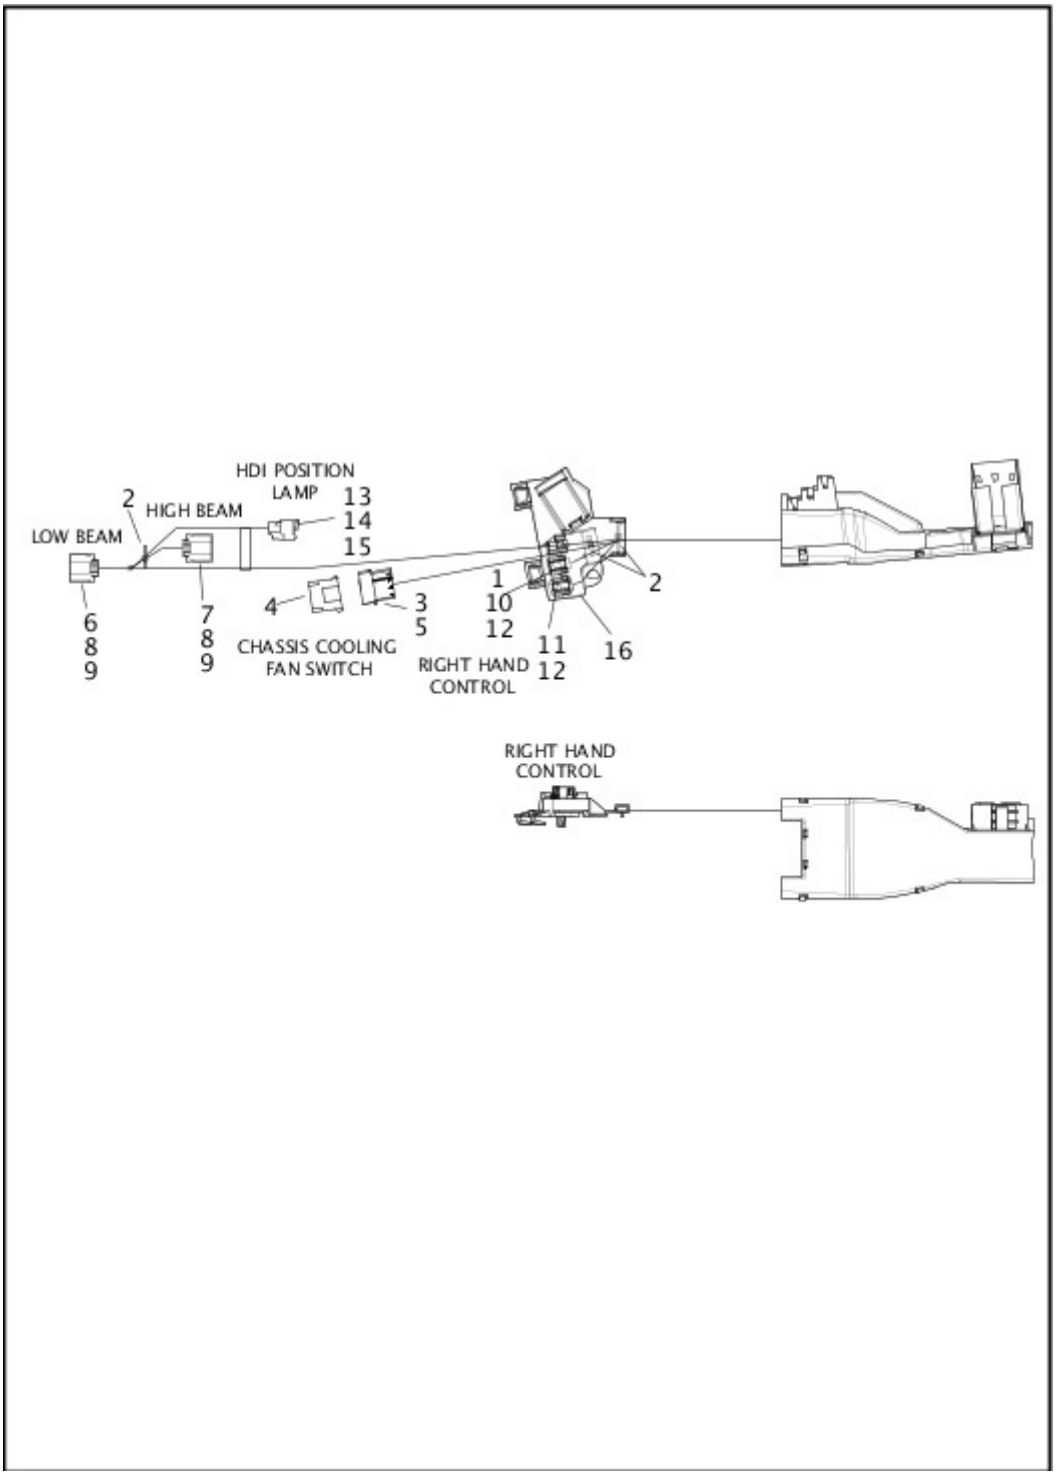


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201126	MAIN WIRING HARNESS - NON-ABS	FLHR
NOTE: Includes the following parts.			
1	5118	SEAL PIN	FLHR
2	10065	CABLE STRAP *(3)*	FLHR
3	70291-89	HOUSING, four-way pin	FLHR
4	70292-89	HOUSING, four-way socket	FLHR
5	72039-71A	TERMINAL, pin *(2)*	FLHR
6	72449-01	HOUSING, two-way socket (black)	FLHR
7	72450-01	HOUSING, two-way socket (gray)	FLHR
8	72527-01	TERMINAL, socket, 18-20 AWG *(4)*	FLHR
9	72633-02	WIRE SEAL, 14-16 AWG (white) *(4)*	FLHR
10	72905-11	HOUSING, two-way pin (black)	FLHR
11	72907-11	HOUSING, four-way pin (black)	FLHR
12	72909-11	TERMINAL, pin, 20-22 AWG *(5)*	FLHR
13	69200220	HOUSING, two-way socket (black)	FLHR
14	69200221	TERMINAL, socket, 18-20 AWG *(2)*	FLHR
15	69200222	WIRE SEAL, 16 AWG (green) *(2)*	FLHR
16	69200285	BRACKET, mounting	FLHR

WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8)

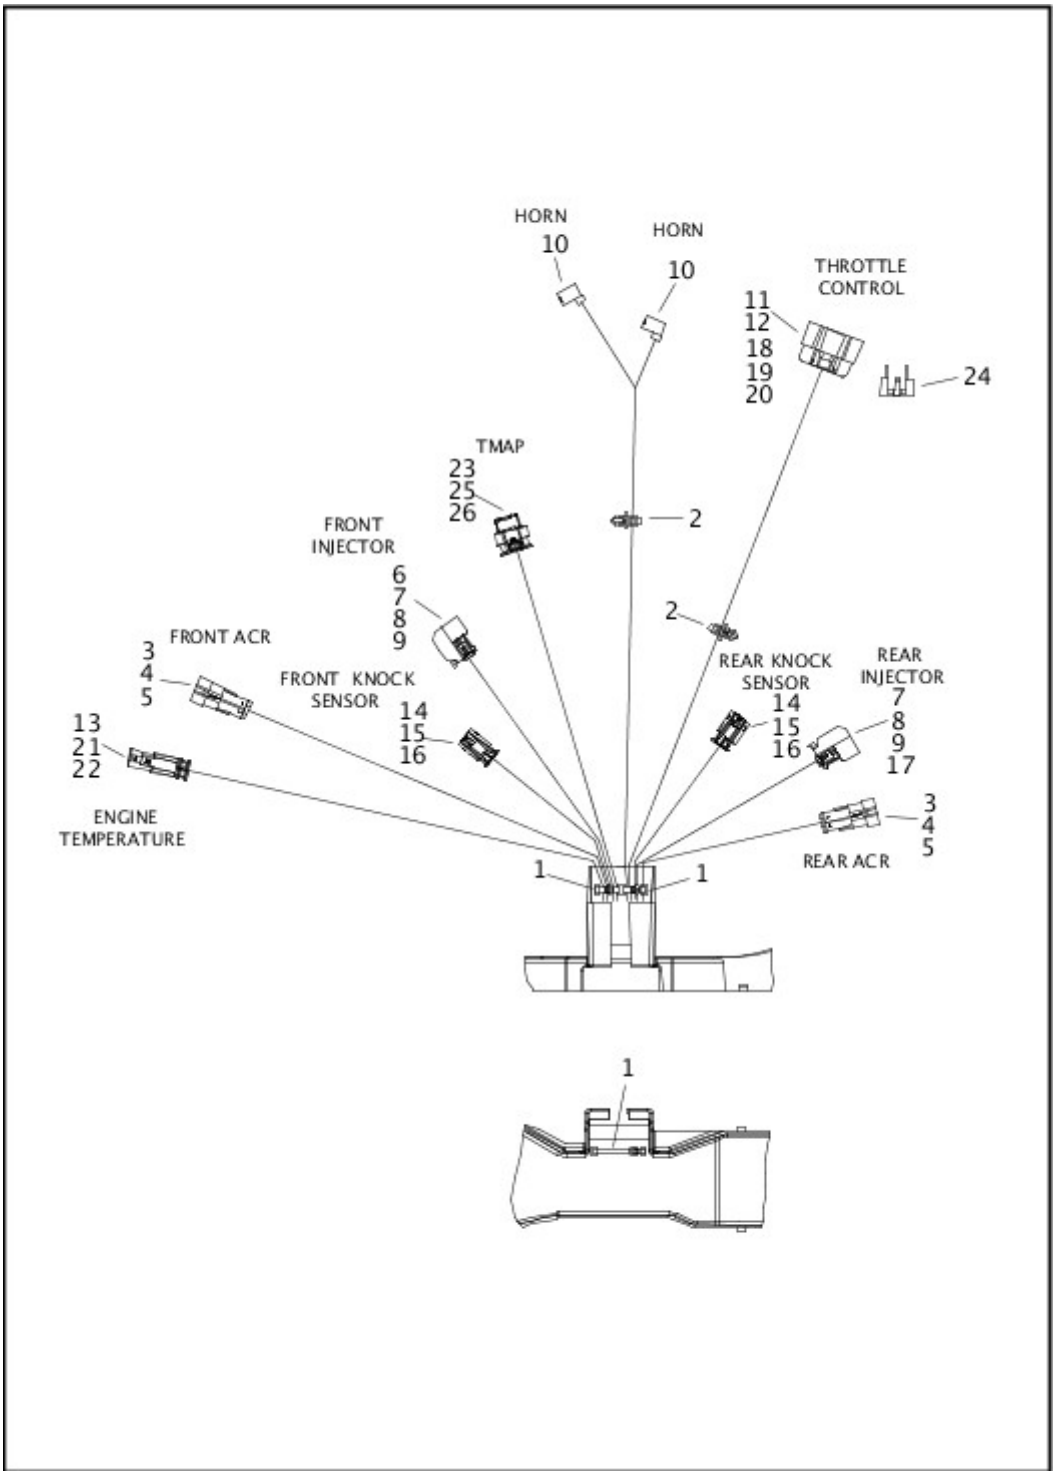

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201126	MAIN WIRING HARNESS - NON-ABS	FLHR
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHR
2	10177	CABLE STRAP, anchored *(2)*	FLHR
3	72008-05	TERMINAL, pin, 20-22 AWG *(4)*	FLHR
4	72009-05	HOUSING, two-way pin (black) *(2)*	FLHR
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLHR
6	72098-06	HOUSING, two-way socket (gray)	FLHR
7	72099-06	WIRE SEAL, 16-18 AWG (blue) *(4)*	FLHR
8	72110-06	TERMINAL, socket, 16-18 AWG *(4)*	FLHR
9	72145-06	SECONDARY LOCK, two-way socket *(2)*	FLHR
10	72283-09	TERMINAL, socket, 14-16 AWG, 90 degree *(2)*	FLHR
11	72499-07	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHR
12	72569-08	TERMINAL, socket, 20-22 AWG *(2)*	FLHR
13	69201301	WIRE SEAL, 20-22 AWG (green) *(2)*	FLHR
14	69201390	HOUSING, two-way socket *(2)*	FLHR
15	69201391	TERMINAL, socket, 20 AWG *(4)*	FLHR
16	69201392	WIRE SEAL, 20 AWG (yellow) *(4)*	FLHR

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	69201393	HOUSING, two-way socket (black)	FLHR
18	69201394	HOUSING, six-way socket (black)	FLHR
19	69201395	SECONDARY LOCK, six-way socket	FLHR
20	69201396	TERMINAL, socket, 20 AWG *(4)*	FLHR
21	69201397	HOUSING, two-way pin (gray)	FLHR
22	69201398	TERMINAL, pin, 20 AWG *(2)*	FLHR
23	69201301	WIRE SEAL, 20-22 AWG (green) *(4)*	FLHR
24	69201416	SECONDARY LOCK, six-way socket	FLHR
25	69201441	HOUSING, four-way socket	FLHR
26	69201442	TERMINAL, socket, 18 AWG *(4)*	FLHR

WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8)

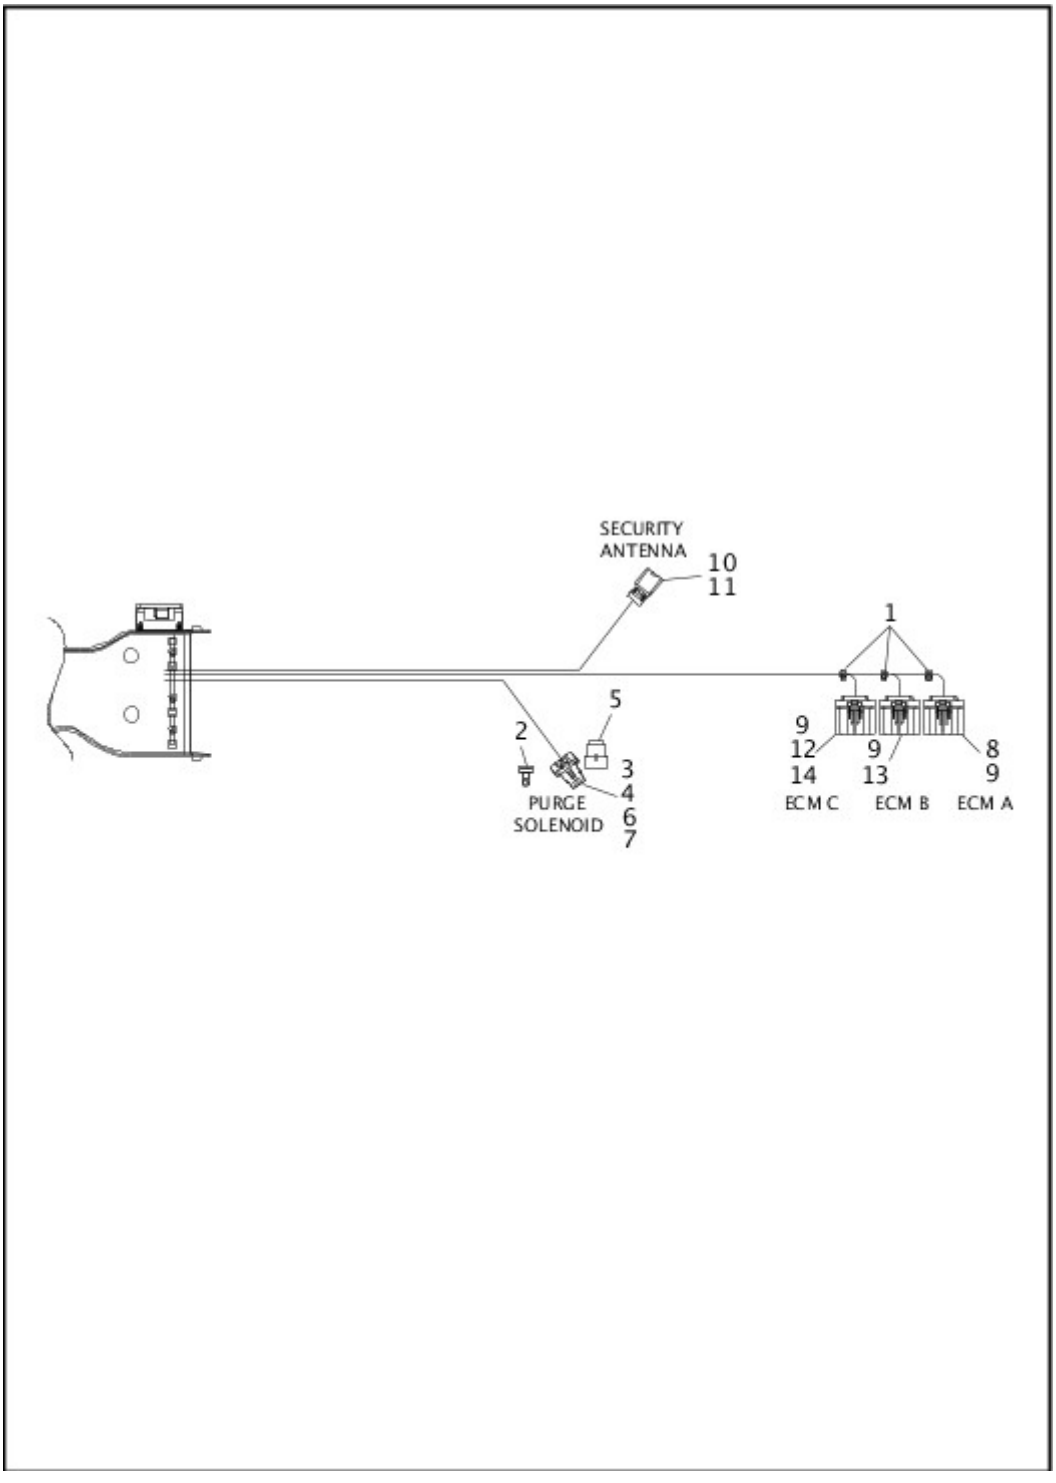


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201126	MAIN WIRING HARNESS - NON-ABS	FLHR
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHR
2	10147	CLIP, connector	FLHR
3	72213-94	TERMINAL, socket,16-20 AWG *(2)*	FLHR
4	72518-01	HOUSING, two-way socket (red)	FLHR
5	72533-06	PLUG, weather, two-way pin	FLHR
6	72609-08	SECONDARY LOCK, two-way socket	FLHR
7	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLHR
8	72664-12A	HOUSING, 18-way socket (black)	FLHR
9	72666-12	TERMINAL, socket, 18-20 AWG *(43)*	FLHR
10	72720-07	HOUSING, two-way socket (black)	FLHR
11	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLHR
12	69201415	HOUSING, 18-way socket (brown)	FLHR
13	69201440	HOUSING, 18-way socket (gray)	FLHR
14	69201168	TERMINAL, socket, 22 AWG *(2)*	FLHR

WIRING HARNESS, MAIN, NON-ABS - FLHR (5 OF 8)

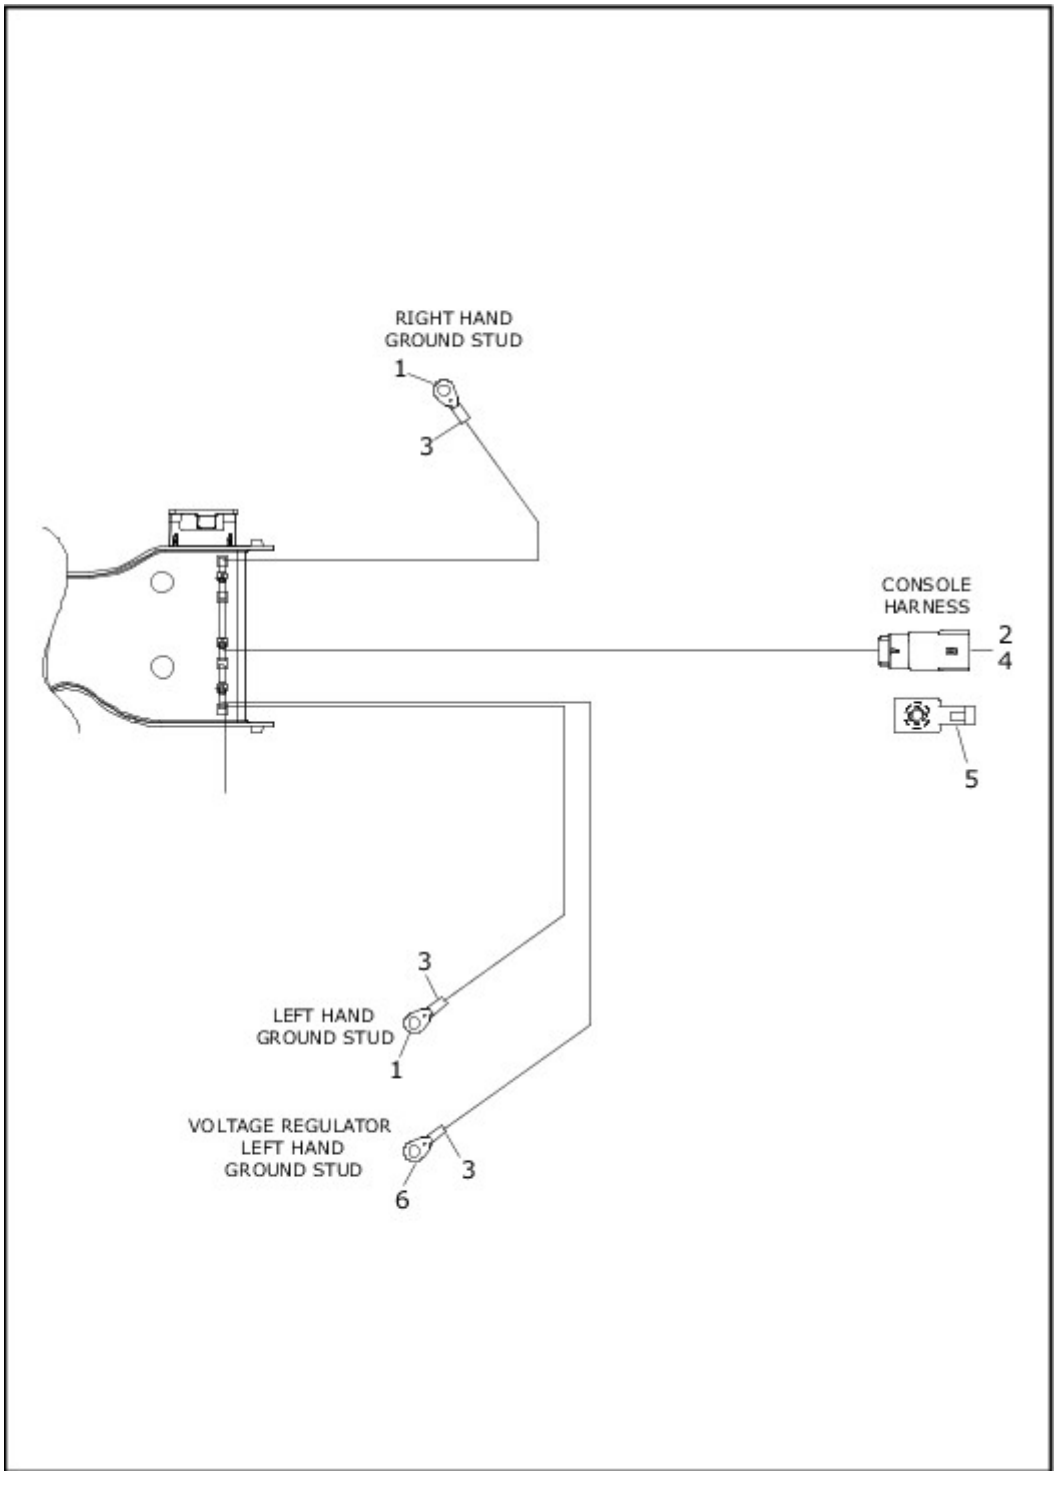


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201126	MAIN WIRING HARNESS - NON-ABS	FLHR
NOTE: Includes the following parts.			
1	9819	TERMINAL, ring, 12 AWG *(2)*	FLHR
2	72169-07	TERMINAL, pin, 16-20 AWG *(8)*	FLHR
3	72249-94	HEAT SHRINK TUBE, .415 x 1 in (black)	FLHR
4	72478-07BK	HOUSING, eight-way pin (black)	FLHR
5	73213-07	RETAINER, anchored	FLHR
6	69201596	TERMINAL, ring, 8-10 AWG	FLHR

WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8)

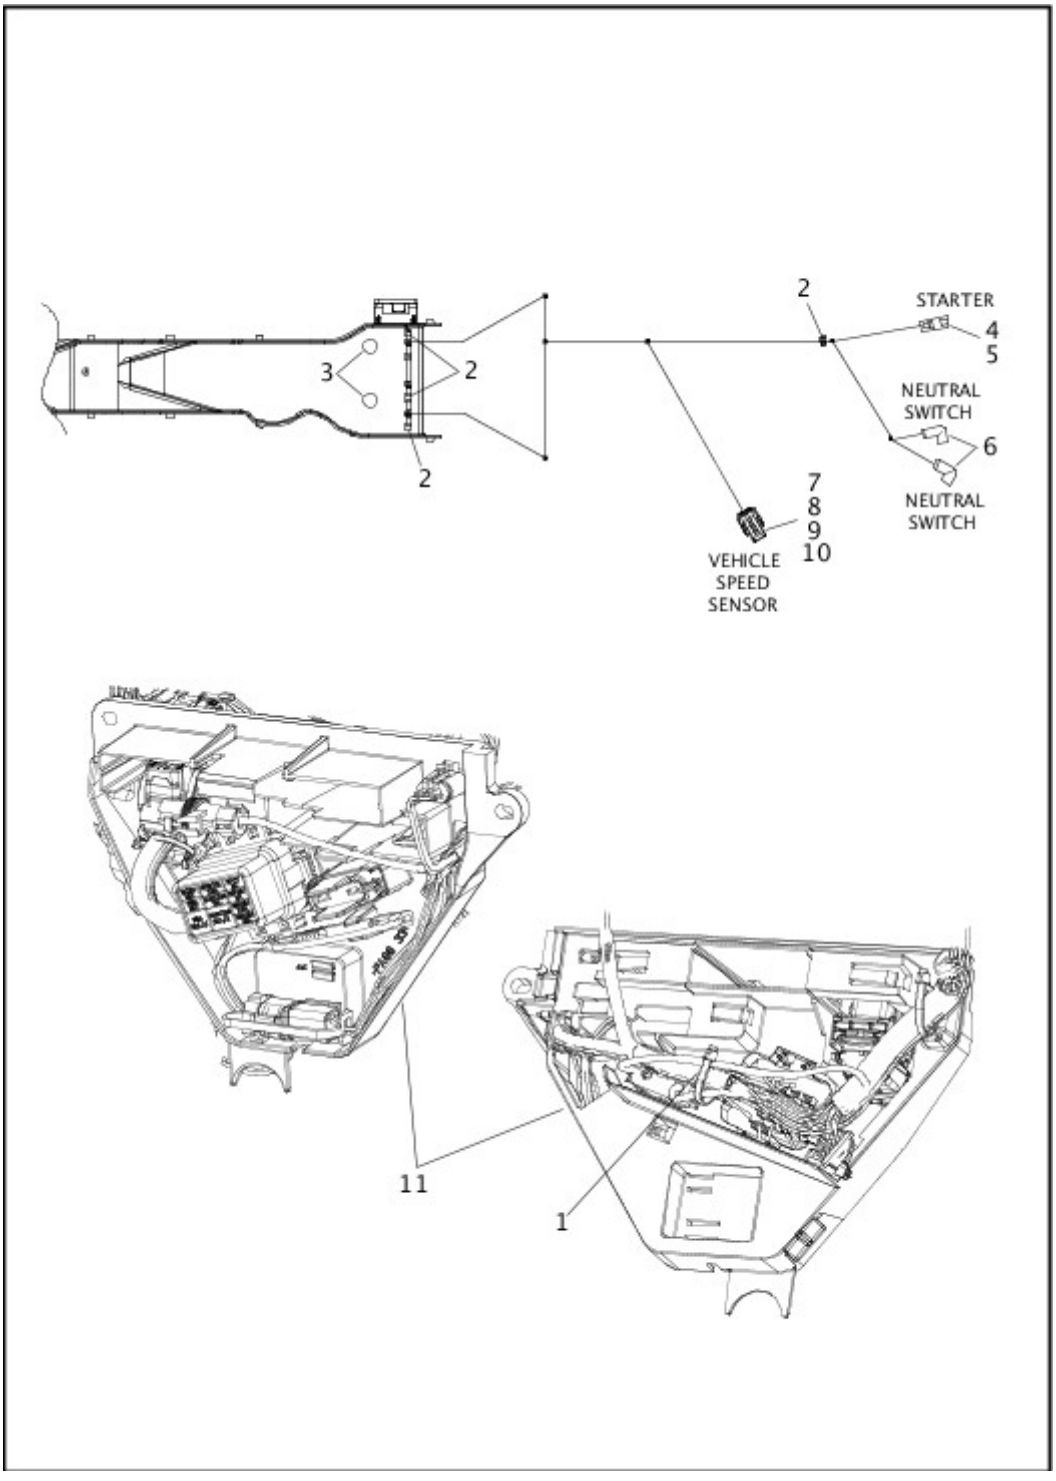


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201126	MAIN WIRING HARNESS - NON-ABS	FLHR
NOTE: Includes the following parts.			
1	10006	CABLE STRAP	FLHR
2	10065	CABLE STRAP *(4)*	FLHR
3	11779	FASTENER, push-in (black) *(2)*	FLHR
4	72291-94	TERMINAL, socket, 14-16 AWG	FLHR
5	72295-94	CONNECTOR, starter housing	FLHR
6	72405-98BK	WIRE ASSEMBLY, push-on, right angle molded, 65-1/2 in length *(2)*	FLHR
7	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHR
8	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHR
9	72543-07BK	HOUSING, three-way socket (black)	FLHR
10	72544-07	SECONDARY LOCK, three-way socket	FLHR
11	69200175	CADDY, fuse block, electrical panel	FLHR

WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8)

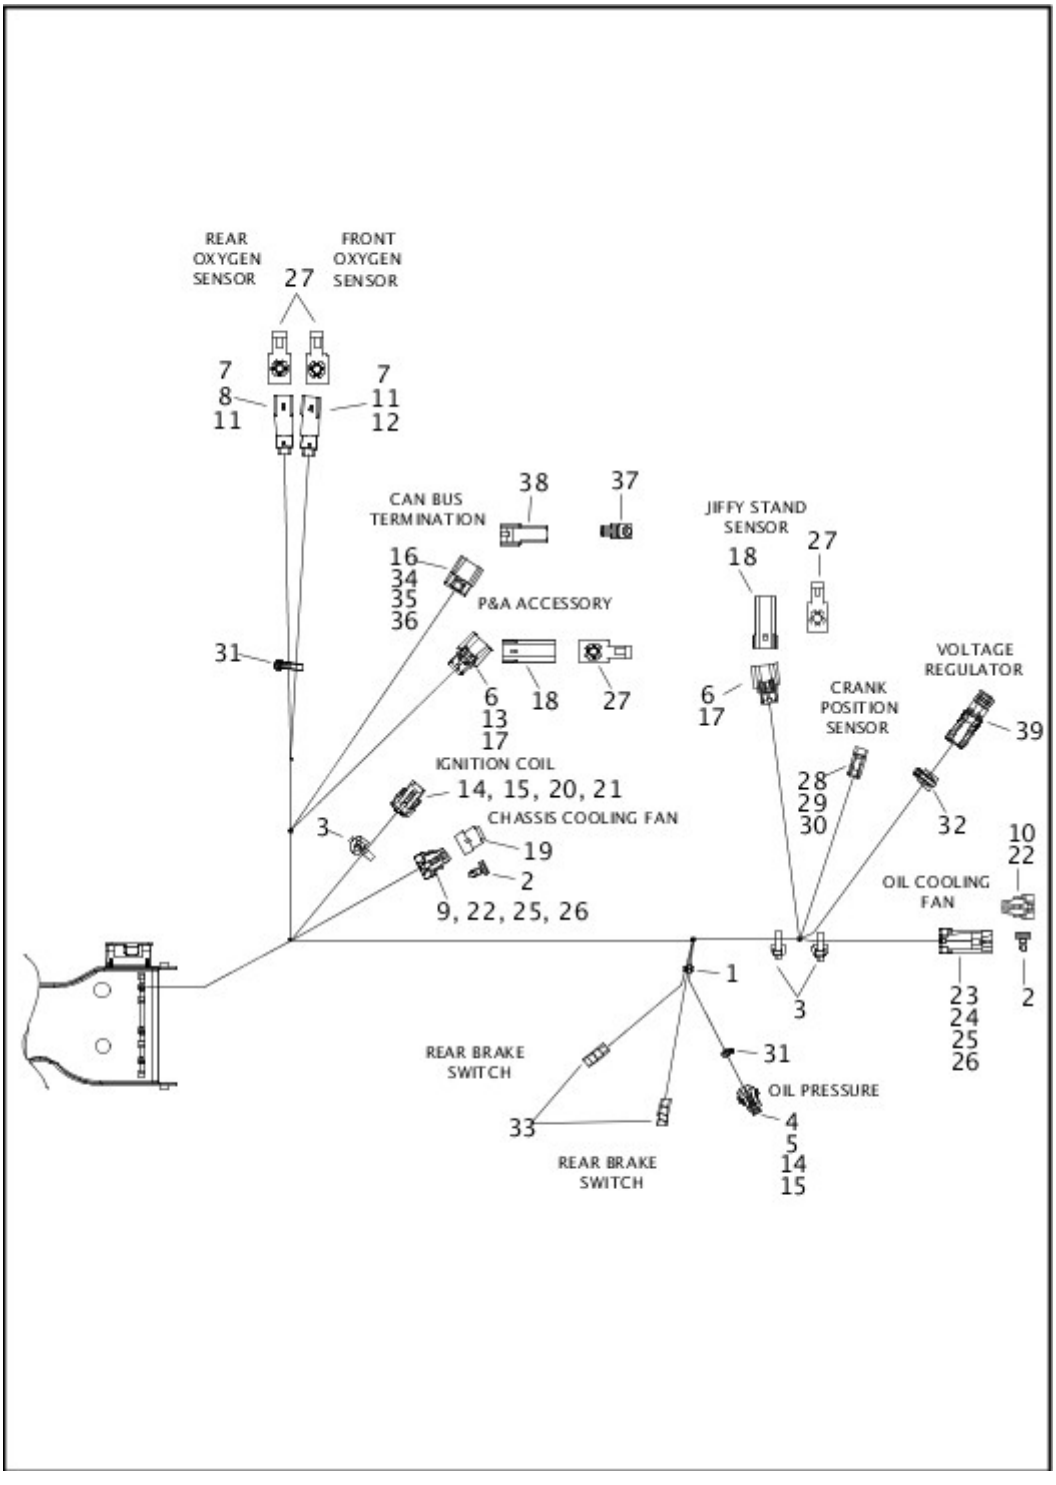

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201126	MAIN WIRING HARNESS - NON-ABS	FLHR
NOTE: Includes the following parts.			
1	10065	CABLE STRAP	FLHR
2	10147	CLIP, connector *(2)*	FLHR
3	10177	CABLE STRAP, anchored *(3)*	FLHR
4	72065-06A	HOUSING, three-way socket (black)	FLHR
5	72127-06	SECONDARY LOCK, three-way socket	FLHR
6	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLHR
7	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLHR
8	72175-07BK	HOUSING, four-way pin (black)	FLHR
9	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLHR
10	72232-96	SEAL PIN (red) *(2)*	FLHR
11	72343-10	TERMINAL, pin, 16-20 AWG *(4)*	FLHR
12	72415-07GY	HOUSING, four-way pin (gray)	FLHR
13	72473-07	SEAL PIN, natural	FLHR
14	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLHR
15	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLHR
16	72499-07	WIRE SEAL, 20-22 AWG (green) *(2)*	FLHR
17	72512-07BK	HOUSING, three-way socket (black) *(2)*	FLHR

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72519-09BK	PLUG, weather, three-way socket *(2)*	FLHR
19	72533-06	PLUG, weather, two-way pin	FLHR
20	72544-07	SECONDARY LOCK, three-way socket	FLHR
21	72589-09	HOUSING, three-way socket (black)	FLHR
22	72606-08	HOUSING, two-way socket (black) *(2)*	FLHR
23	72607-08	HOUSING, two-way pin (black)	FLHR
24	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	FLHR
25	72609-08	SECONDARY LOCK, two-way socket *(2)*	FLHR
26	72610-08	WIRE SEAL, 18-20 AWG (white) *(4)*	FLHR
27	73213-07	RETAINER, anchored *(4)*	FLHR
28	74112-98BK	HOUSING, two-way socket (black)	FLHR
29	74152-98	SECONDARY LOCK, two-way socket	FLHR
30	74191-98	TERMINAL, socket 16-20 AWG *(2)*	FLHR
31	12500014	CABLE STRAP *(2)*	FLHR
32	12500018	CABLE STRAP	FLHR
33	69200238	TERMINAL, socket, 20 AWG *(2)*	FLHR
34	69201396	TERMINAL, socket, 20 AWG *(2)*	FLHR
35	69201400	HOUSING, two-way socket, (black)	FLHR
36	69201401	SECONDARY LOCK, two-way socket	FLHR

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	69201404	RETAINER, anchored	FLHR
38	69201405	RESISTOR PACK	FLHR
39	69201423	DC LEAD ASSEMBLY, two-way socket	FLHR

WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8)

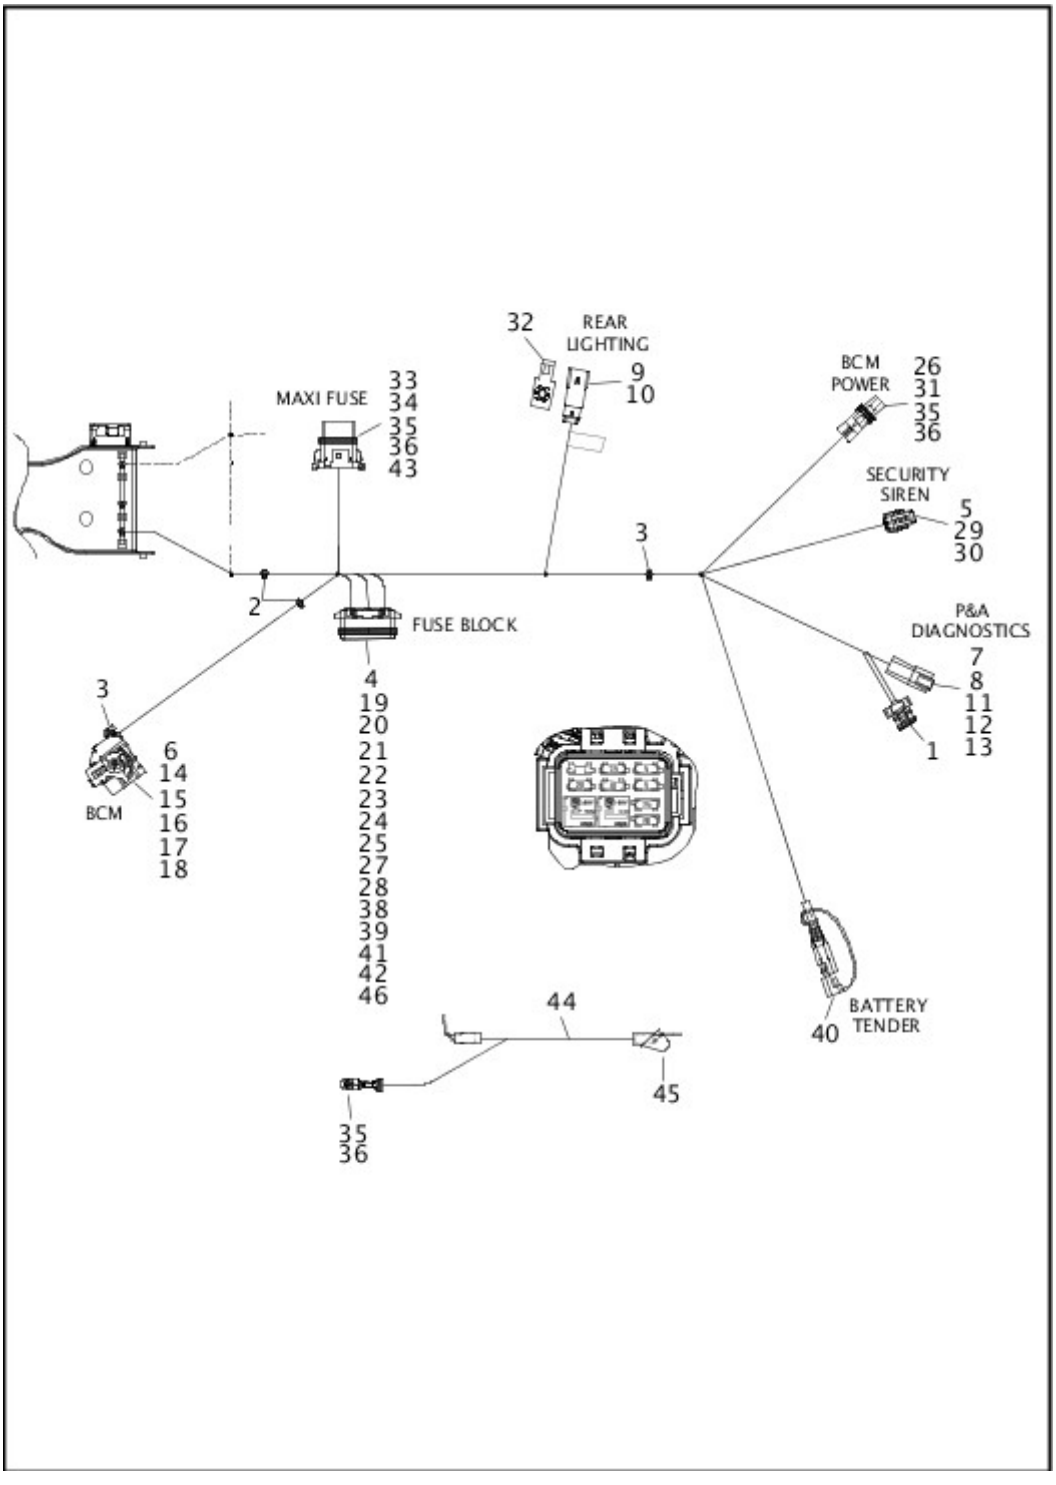

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201126	MAIN WIRING HARNESS - NON-ABS	FLHR
NOTE: Includes the following parts.			
1	6990	WEATHER PLUG, six-way pin	FLHR
2	10006	CABLE STRAP *(2)*	FLHR
3	10065	CABLE STRAP *(2)*	FLHR
4	31586-07	RELAY *(2)*	FLHR
5	72064-06	HOUSING, three-way socket (black)	FLHR
6	72081-11	HOUSING, 48-way socket (black)	FLHR
7	72106-94BK	HOUSING, six-way pin (black) (replaces gray connector)	FLHR
8	72146-94	SECONDARY LOCK, six-way pin	FLHR
9	72169-07	TERMINAL, pin, 16-20 AWG *(6)*	FLHR
10	72188-07BK	HOUSING, six-way pin (black)	FLHR
11	72190-94	TERMINAL, pin, 16-18 AWG *(2)*	FLHR
12	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLHR
13	72195-94	SEAL PIN	FLHR
14	72209-11	COVER, wire	FLHR
15	72222-11	TERMINAL, socket, 18-20 AWG *(21)*	FLHR
16	72226-11	TERMINAL, socket, 14-16 AWG *(3)*	FLHR
17	72227-11	TERMINAL, socket, 18-20 AWG *(3)*	FLHR

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72256-11	SEAL PIN, 0.6 mm (white) *(9)*	FLHR
19	72296-95	TERMINAL, socket, 14-16 AWG *(2)*	FLHR
20	72298-95	WIRE SEAL, 14-18 AWG (green) *(2)*	FLHR
21	72299-95	SEAL PIN, green *(4)*	FLHR
22	72308-97	TERMINAL, socket, 12-14 AWG *(3)*	FLHR
23	72330-95	FUSE, 15 A (blue)	FLHR
24	72331-95	FUSE, 5 A (tan) *(2)*	FLHR
25	72345-02	FUSE, 20 A (yellow) *(2)*	FLHR
26	72350-11	HOUSING, one-way socket (black)	FLHR
27	72356-95	TERMINAL, socket, 18-20 AWG *(15)*	FLHR
28	72412-97	WIRE SEAL, 12-14 AWG (gray) *(3)*	FLHR
29	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHR
30	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHR
31	72575-11	SECONDARY LOCK, one-way socket	FLHR
32	73213-07	RETAINER, anchored	FLHR
33	73301-04	HOUSING, two-way pin (black)	FLHR
34	73303-04	SECONDARY LOCK, two-way socket	FLHR
35	73304-04	TERMINAL, socket, 10 AWG *(3)*	FLHR
36	73305-04	WIRE SEAL, 10 AWG (blue) *(3)*	FLHR

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	11100115	CLOTH, HARNESS WRAP, 50 m (not shown)	FLHR
38	69200194	FUSE BLOCK, 24-way	FLHR
39	69200199	WIRE SEAL, 18-20 AWG (purple) *(15)*	FLHR
40	69200212	HARNESS, battery tender	FLHR
41	69200293	FUSE, 7.5 A (brown) *(2)*	FLHR
42	69200312	SECONDARY LOCK, fuse block *(3)*	FLHR
43	69200336	MAIN FUSE, 50 A (red), NOTE: Fuse is sold separately and is not part of main harness	FLHR
44	69201130	WIRE HARNESS, battery positive to starter, with 73304-04, 73305-04 and 69201307	FLHR
45	69201307	BOOT, battery positive	FLHR
46	69201411	COVER, fuse block	FLHR

WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8)

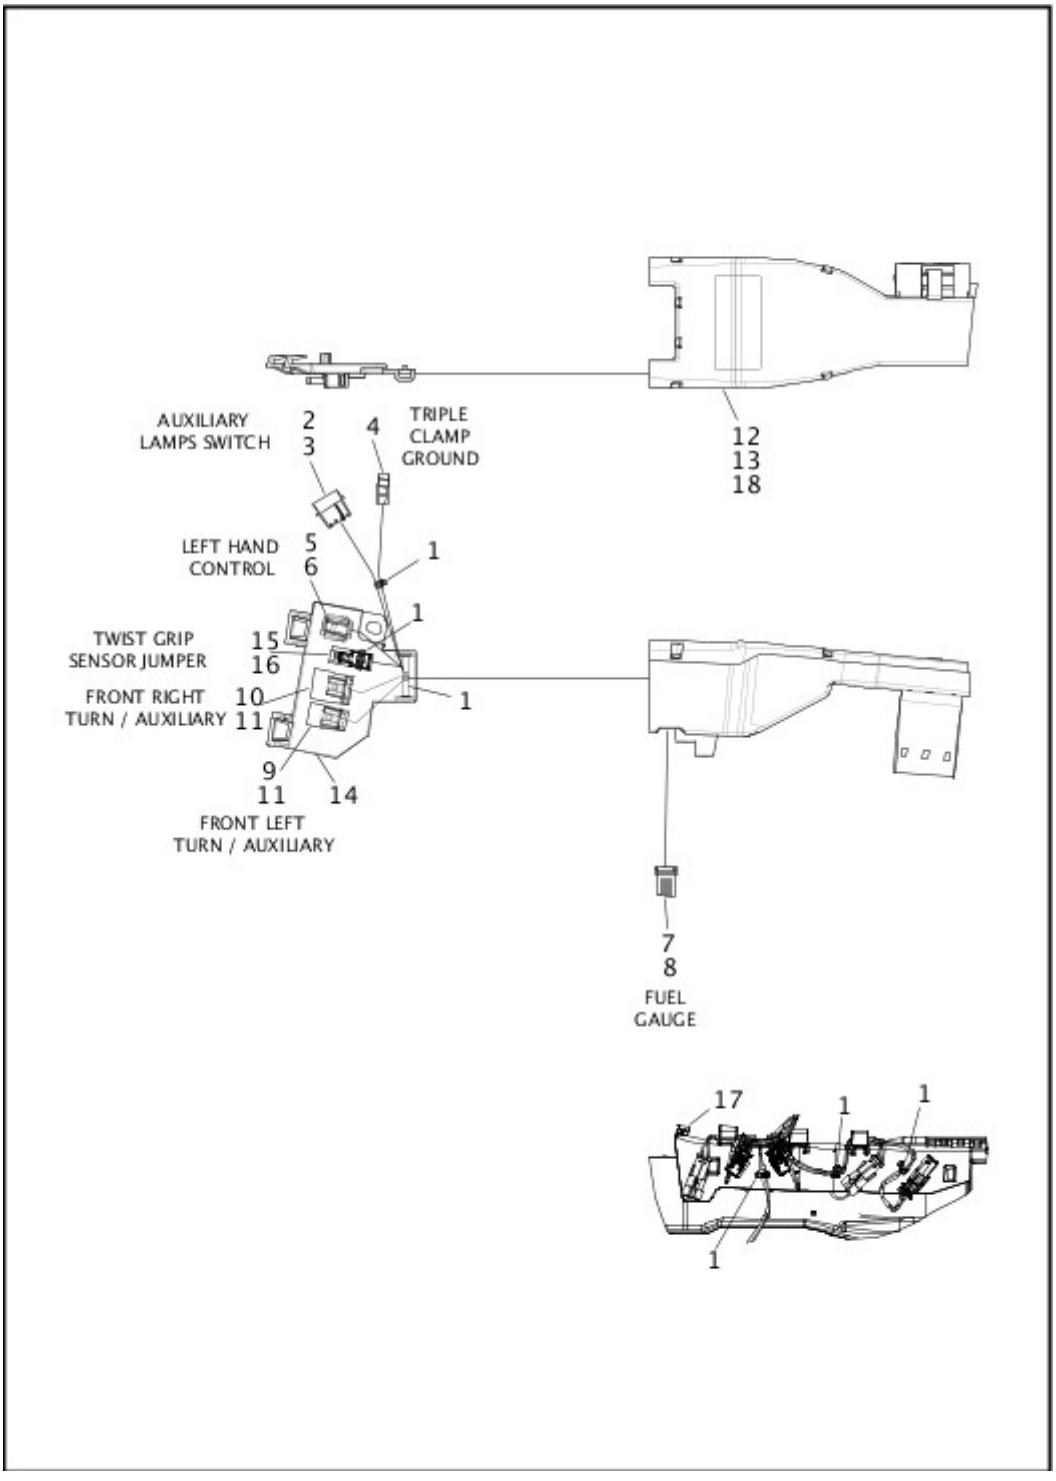


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201122	MAIN WIRING HARNESS - ABS	FLHR, FLHRC, FLHRXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(6)*	FLHR, FLHRC, FLHRXS
2	70291-89	HOUSING, four-way pin	FLHR, FLHRC, FLHRXS
3	72039-71A	TERMINAL, pin *(3)*	FLHR, FLHRC, FLHRXS
4	72364-06	TERMINAL, socket 10-14 AWG	FLHR, FLHRC, FLHRXS
5	72907-11	HOUSING, four-way pin (black)	FLHR, FLHRC, FLHRXS
6	72909-11	TERMINAL, pin, 20-22 AWG *(4)*	FLHR, FLHRC, FLHRXS
7	72914-01BK	HOUSING, four-way socket (black)	FLHR, FLHRC, FLHRXS
8	72991-01	TERMINAL, socket 18-22 AWG *(3)*	FLHR, FLHRC, FLHRXS
9	73104-96BK	HOUSING, four-way pin (black)	FLHR, FLHRC, FLHRXS
10	73106-96BK	HOUSING, six-way pin (black)	FLHR, FLHRC, FLHRXS
11	73190-96	TERMINAL, pin, 16-20 AWG *(8)*	FLHR, FLHRC, FLHRXS
12	69200202A	WIRE TROUGH	FLHR, FLHRC, FLHRXS
13	69200203A	COVER, wire trough, with 15368-01A and 69201459	FLHR, FLHRC, FLHRXS
14	69200284A	BRACKET, mounting	FLHR, FLHRC, FLHRXS
15	69201163	HOUSING, six-way pin (black)	FLHR, FLHRC, FLHRXS
16	69201164	TERMINAL, pin, 22 AWG *(6)*	FLHR, FLHRC, FLHRXS
17	69201287	BRACKET, mounting, electrical connector	FLHR, FLHRC, FLHRXS
18	69201459	BRACKET	FLHR, FLHRC, FLHRXS

WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)

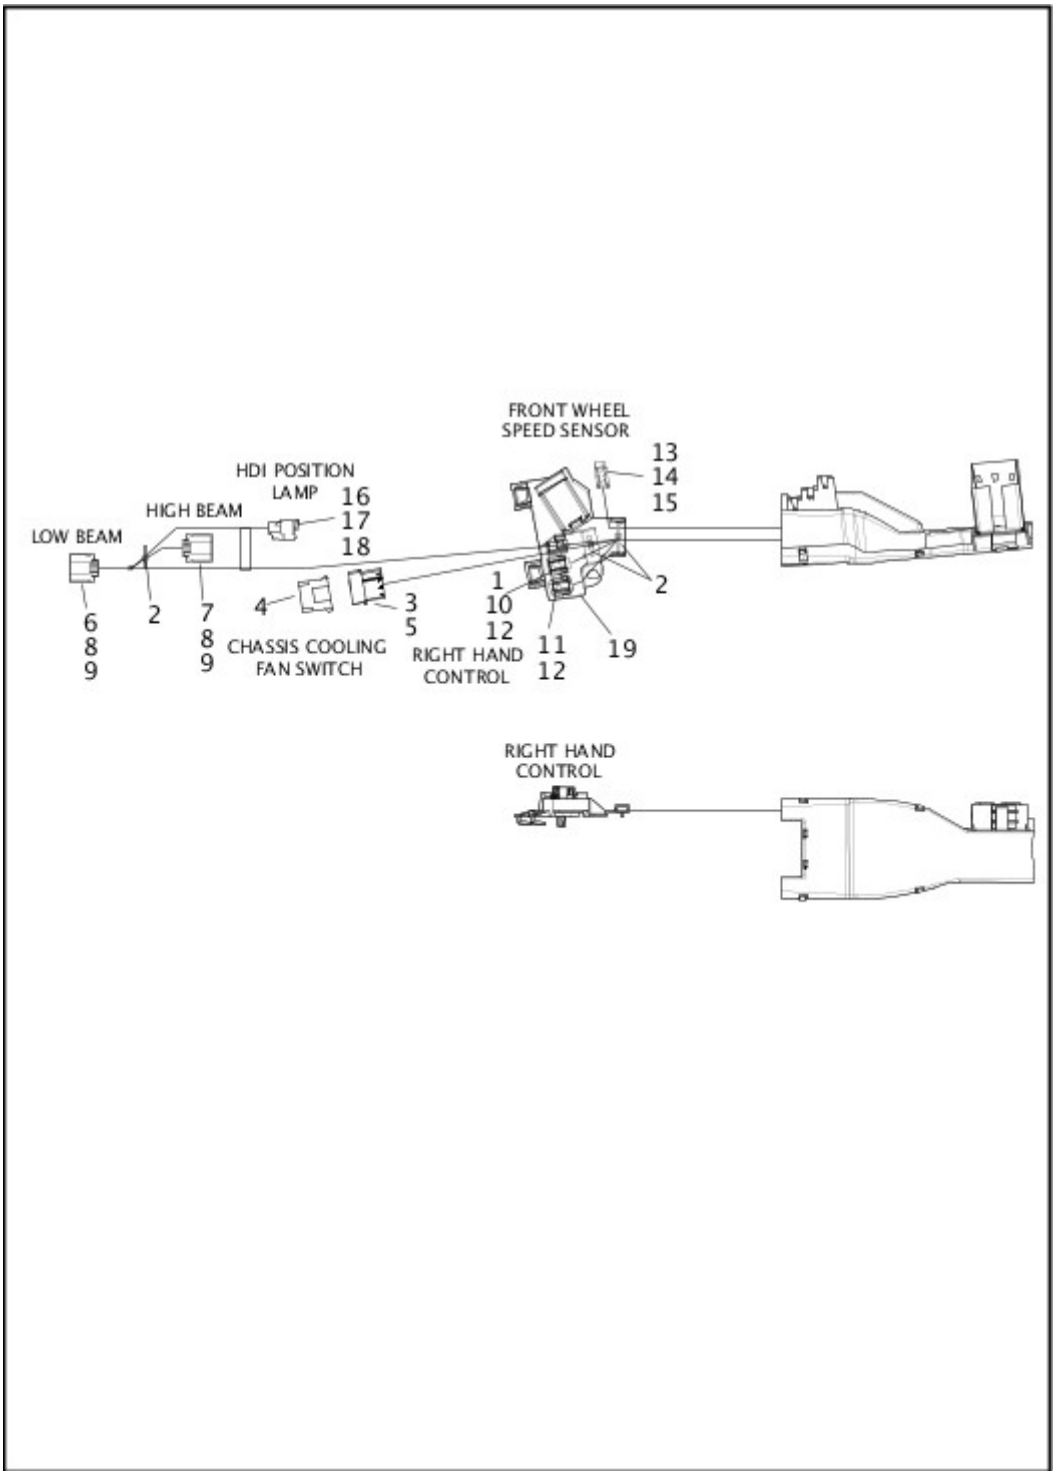

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201122	MAIN WIRING HARNESS - ABS	FLHR, FLHRC, FLHRXS
NOTE: Includes the following parts.			
1	5118	SEAL PIN	FLHR, FLHRC, FLHRXS
2	10065	CABLE STRAP *(3)*	FLHR, FLHRC, FLHRXS
3	70291-89	HOUSING, four-way pin	FLHR, FLHRC, FLHRXS
4	70292-89	HOUSING, four-way socket	FLHR, FLHRC, FLHRXS
5	72039-71A	TERMINAL, pin *(2)*	FLHR, FLHRC, FLHRXS
6	72449-01	HOUSING, two-way socket (black)	FLHR, FLHRC, FLHRXS
7	72450-01	HOUSING, two-way socket (gray)	FLHR, FLHRC, FLHRXS
8	72527-01	TERMINAL, socket, 18-20 AWG *(4)*	FLHR, FLHRC, FLHRXS
9	72633-02	WIRE SEAL, 14-16 AWG (white) *(4)*	FLHR, FLHRC, FLHRXS
10	72905-11	HOUSING, two-way pin (black)	FLHR, FLHRC, FLHRXS
11	72907-11	HOUSING, four-way pin (black)	FLHR, FLHRC, FLHRXS
12	72909-11	TERMINAL, pin, 20-22 AWG *(5)*	FLHR, FLHRC, FLHRXS
13	74112-98BK	HOUSING, two-way socket (black)	FLHR, FLHRC, FLHRXS
14	74152-98	SECONDARY LOCK, two-way socket	FLHR, FLHRC, FLHRXS
15	74191-98	TERMINAL, socket 16-20 AWG *(2)*	FLHR, FLHRC, FLHRXS
16	69200220	HOUSING, two-way socket (black)	FLHR, FLHRC, FLHRXS
17	69200221	TERMINAL, socket, 18-20 AWG *(2)*	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	69200222	WIRE SEAL, 16 AWG (green) *(2)*	FLHR, FLHRC, FLHRXS
19	69200285	BRACKET, mounting	FLHR, FLHRC, FLHRXS

WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8)

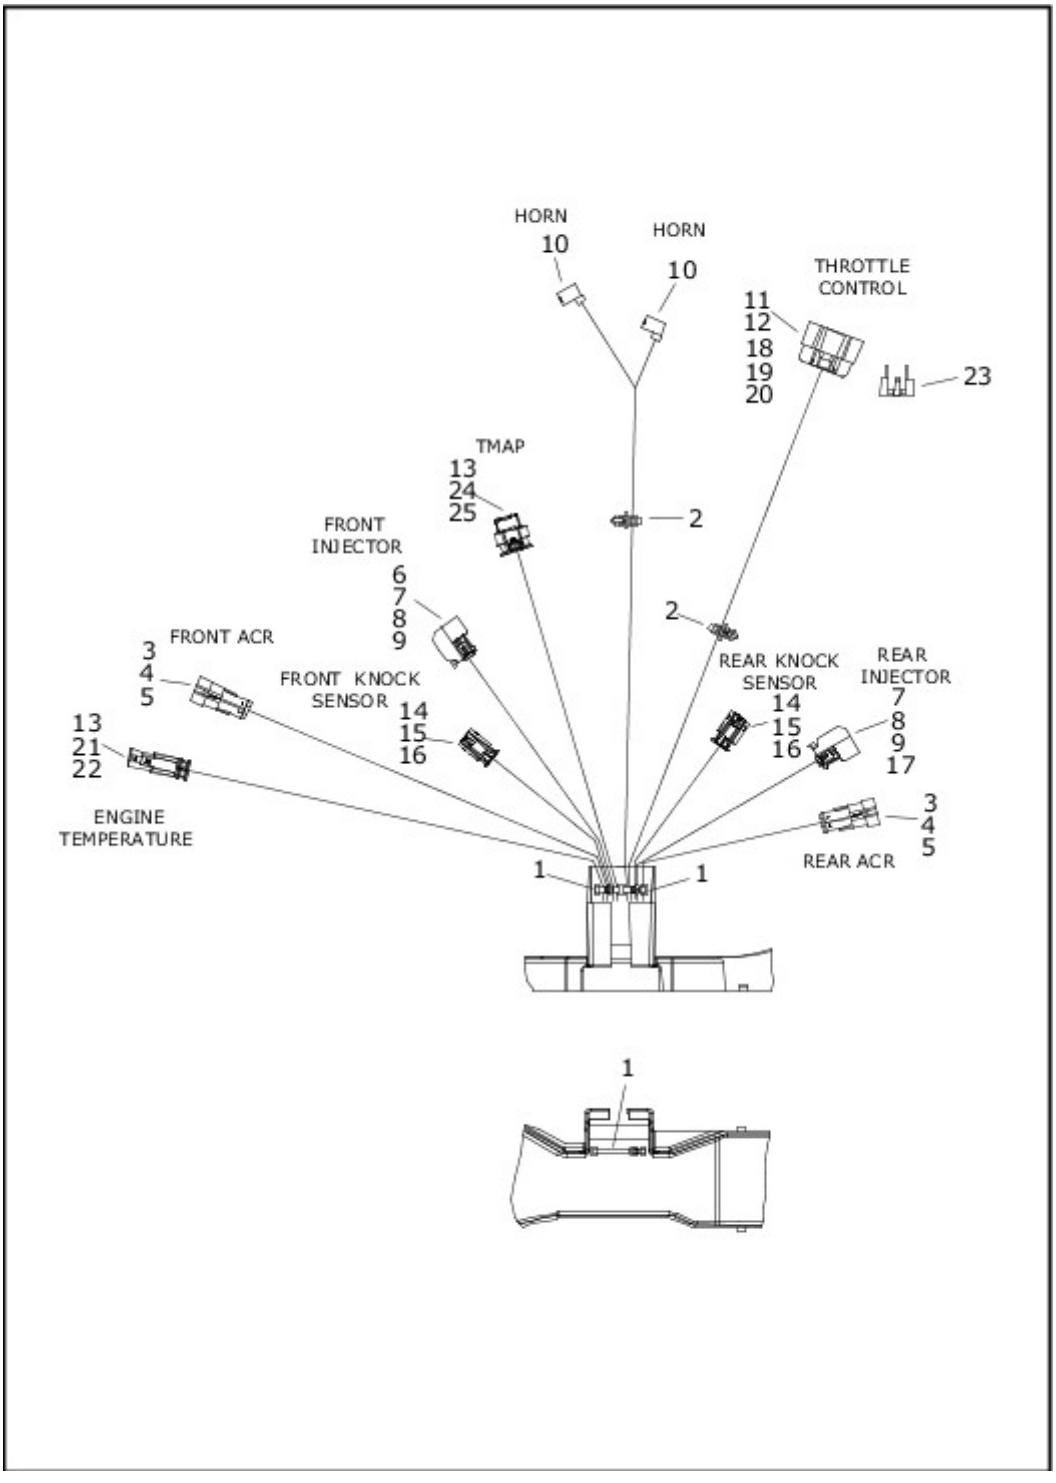

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201122	MAIN WIRING HARNESS - ABS	FLHR, FLHRC, FLHRXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHR, FLHRC, FLHRXS
2	10177	CABLE STRAP, anchored *(2)*	FLHR, FLHRC, FLHRXS
3	72008-05	TERMINAL, pin, 20-22 AWG *(4)*	FLHR, FLHRC, FLHRXS
4	72009-05	HOUSING, two-way pin (black) *(2)*	FLHR, FLHRC, FLHRXS
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLHR, FLHRC, FLHRXS
6	72098-06	HOUSING, two-way socket (gray)	FLHR, FLHRC, FLHRXS
7	72099-06	WIRE SEAL, 16-18 AWG (blue) *(4)*	FLHR, FLHRC, FLHRXS
8	72110-06	TERMINAL, socket, 16-18 AWG *(4)*	FLHR, FLHRC, FLHRXS
9	72145-06	SECONDARY LOCK, two-way socket *(2)*	FLHR, FLHRC, FLHRXS
10	72283-09	TERMINAL, socket, 14-16 AWG, 90 degree *(2)*	FLHR, FLHRC, FLHRXS
11	72499-07	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHR, FLHRC, FLHRXS
12	72569-08	TERMINAL, socket, 20-22 AWG *(2)*	FLHR, FLHRC, FLHRXS
13	69201301	WIRE SEAL, 20-22 AWG (green) *(6)*	FLHR, FLHRC, FLHRXS
14	69201390	HOUSING, two-way socket (black) *(2)*	FLHR, FLHRC, FLHRXS
15	69201391	TERMINAL, socket, 20 AWG *(4)*	FLHR, FLHRC, FLHRXS
16	69201392	WIRE SEAL, 20 AWG (yellow) *(4)*	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	69201393	HOUSING, two-way socket (black)	FLHR, FLHRC, FLHRXS
18	69201394	HOUSING, six-way socket (black)	FLHR, FLHRC, FLHRXS
19	69201395	SECONDARY LOCK, six-way socket	FLHR, FLHRC, FLHRXS
20	69201396	TERMINAL, socket, 20 AWG *(4)*	FLHR, FLHRC, FLHRXS
21	69201397	HOUSING, two-way pin (gray)	FLHR, FLHRC, FLHRXS
22	69201398	TERMINAL, pin, 20 AWG *(2)*	FLHR, FLHRC, FLHRXS
23	69201416	SECONDARY LOCK, six-way socket	FLHR, FLHRC, FLHRXS
24	69201441	HOUSING, four-way socket	FLHR, FLHRC, FLHRXS
25	69201442	TERMINAL, socket, 18 AWG *(4)*	FLHR, FLHRC, FLHRXS

WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8)

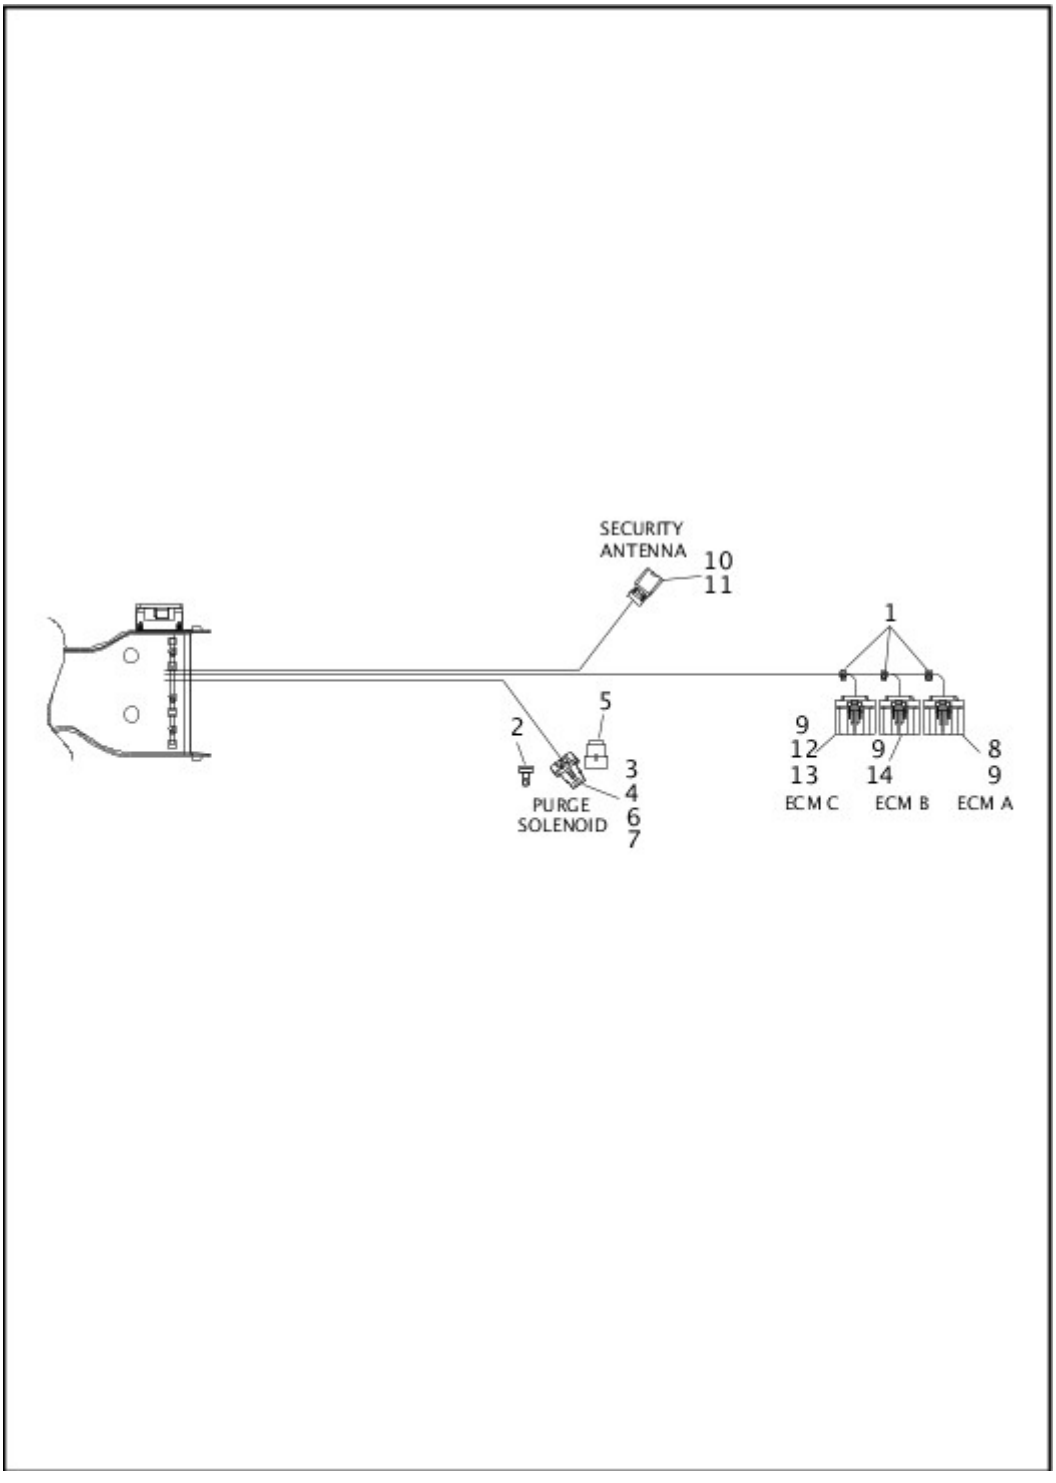


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201122	MAIN WIRING HARNESS - ABS	FLHR, FLHRC, FLHRXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHR, FLHRC, FLHRXS
2	10147	CLIP, connector	FLHR, FLHRC, FLHRXS
3	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLHR, FLHRC, FLHRXS
4	72518-01	HOUSING, two-way socket (red)	FLHR, FLHRC, FLHRXS
5	72533-06	PLUG, weather, two-way pin	FLHR, FLHRC, FLHRXS
6	72609-08	SECONDARY LOCK, two-way socket	FLHR, FLHRC, FLHRXS
7	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLHR, FLHRC, FLHRXS
8	72664-12A	HOUSING, 18-way socket (black)	FLHR, FLHRC, FLHRXS
9	72666-12	TERMINAL, socket, 18-20 AWG *(43)*	FLHR, FLHRC, FLHRXS
10	72720-07	HOUSING, two-way socket (black)	FLHR, FLHRC, FLHRXS
11	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLHR, FLHRC, FLHRXS
12	69201168	TERMINAL, socket, 22 AWG *(2)*	FLHR, FLHRC, FLHRXS
13	69201415	HOUSING, 18-way socket (brown)	FLHR, FLHRC, FLHRXS
14	69201440	HOUSING, 18-way socket (gray)	FLHR, FLHRC, FLHRXS

WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (5 OF 8)

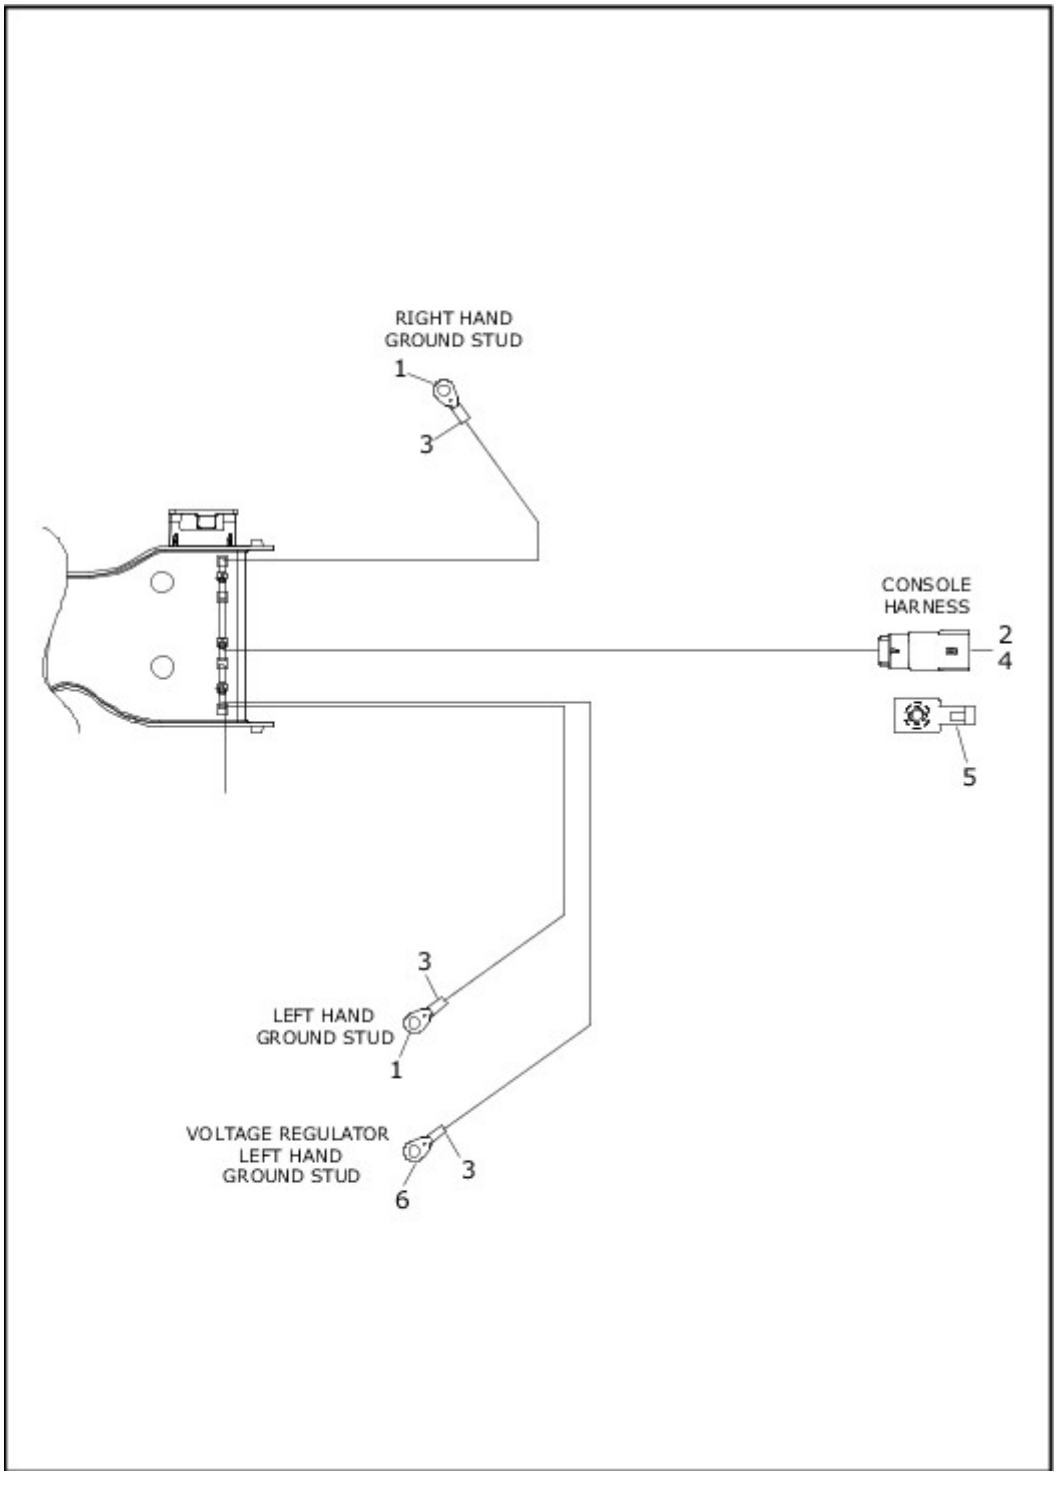


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201122	MAIN WIRING HARNESS - ABS	FLHR, FLHRC, FLHRXS
NOTE: Includes the following parts.			
1	9819	TERMINAL, ring, 12 AWG *(2)*	FLHR, FLHRC, FLHRXS
2	72169-07	TERMINAL, pin, 16-20 AWG *(8)*	FLHR, FLHRC, FLHRXS
3	72249-94	HEAT SHRINK TUBE, .415 x 1 in (black)	FLHR, FLHRC, FLHRXS
4	72478-07BK	HOUSING, eight-way pin (black)	FLHR, FLHRC, FLHRXS
5	73213-07	RETAINER, anchored	FLHR, FLHRC, FLHRXS
6	73213-07	TERMINAL, ring, 8-10 AWG	FLHR, FLHRC, FLHRXS

WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8)

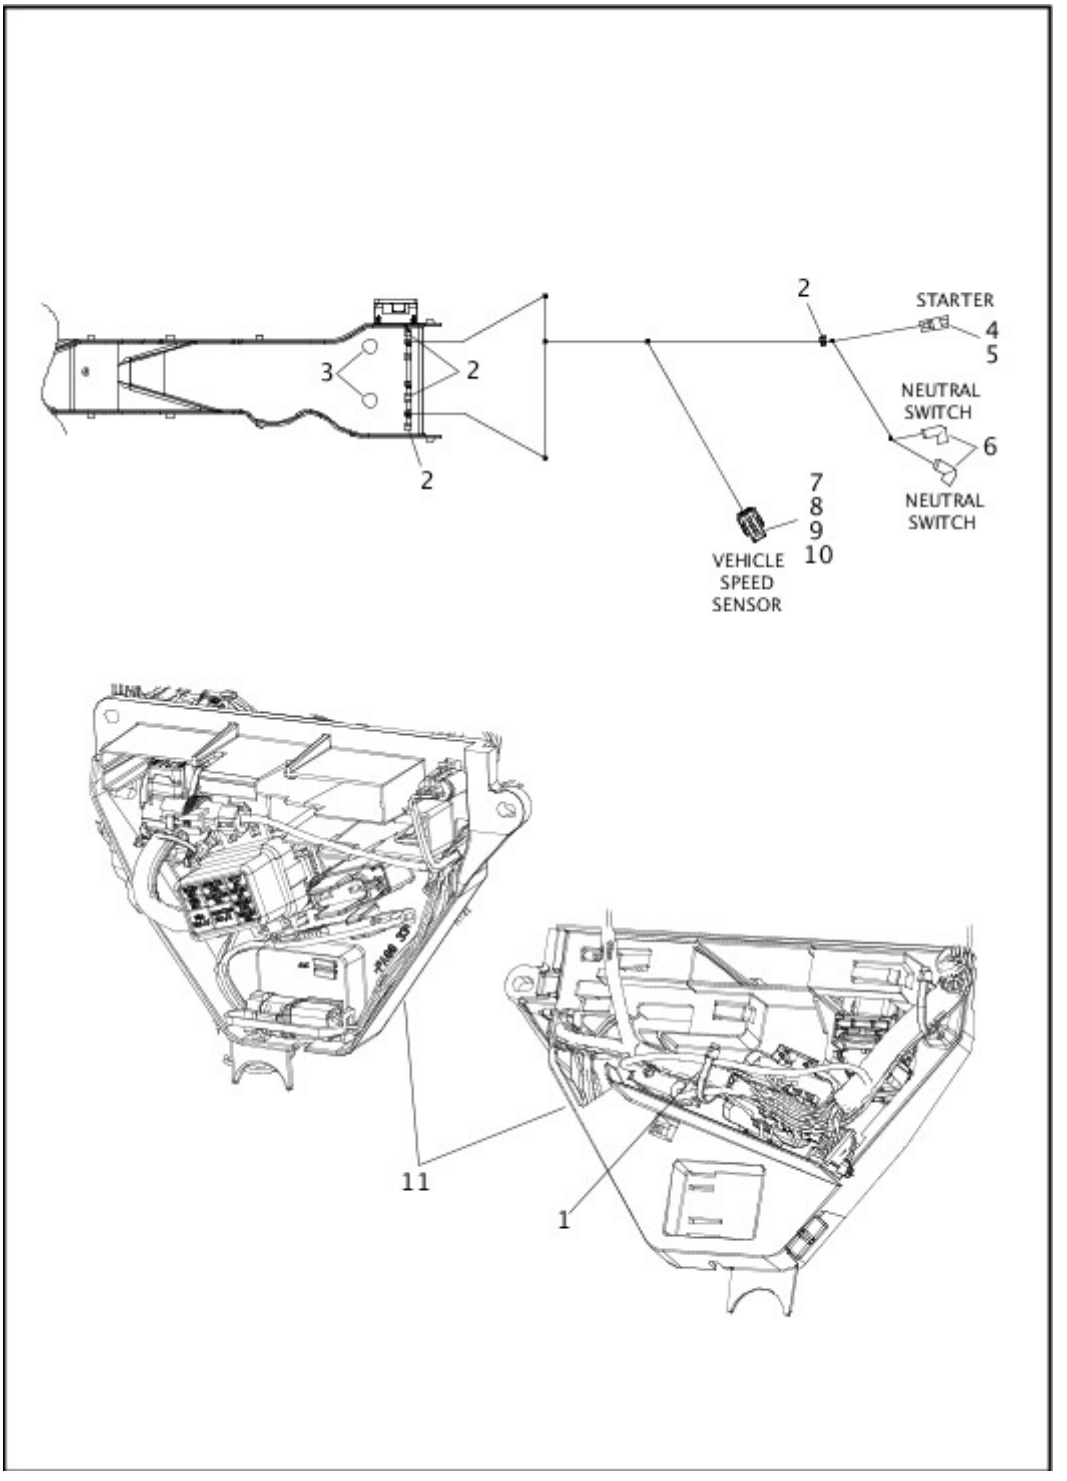


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201122	MAIN WIRING HARNESS - ABS	FLHR, FLHRC, FLHRXS
NOTE: Includes the following parts.			
1	10006	CABLE STRAP	FLHR, FLHRC, FLHRXS
2	10065	CABLE STRAP *(4)*	FLHR, FLHRC, FLHRXS
3	11779	FASTENER, push-in (black) *(2)*	FLHR, FLHRC, FLHRXS
4	72291-94	TERMINAL, socket, 14-16 AWG	FLHR, FLHRC, FLHRXS
5	72295-94	CONNECTOR, starter housing	FLHR, FLHRC, FLHRXS
6	72405-98BK	WIRE ASSEMBLY, push-on, right angle molded, 65-1/2 in length (black) *(3)*	FLHR, FLHRC, FLHRXS
7	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHR, FLHRC, FLHRXS
8	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHR, FLHRC, FLHRXS
9	72543-07BK	HOUSING, three-way socket (black)	FLHR, FLHRC, FLHRXS
10	72544-07	SECONDARY LOCK, three-way socket	FLHR, FLHRC, FLHRXS
11	69200175	CADDY, fuse block, electrical panel	FLHR, FLHRC, FLHRXS

WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8)

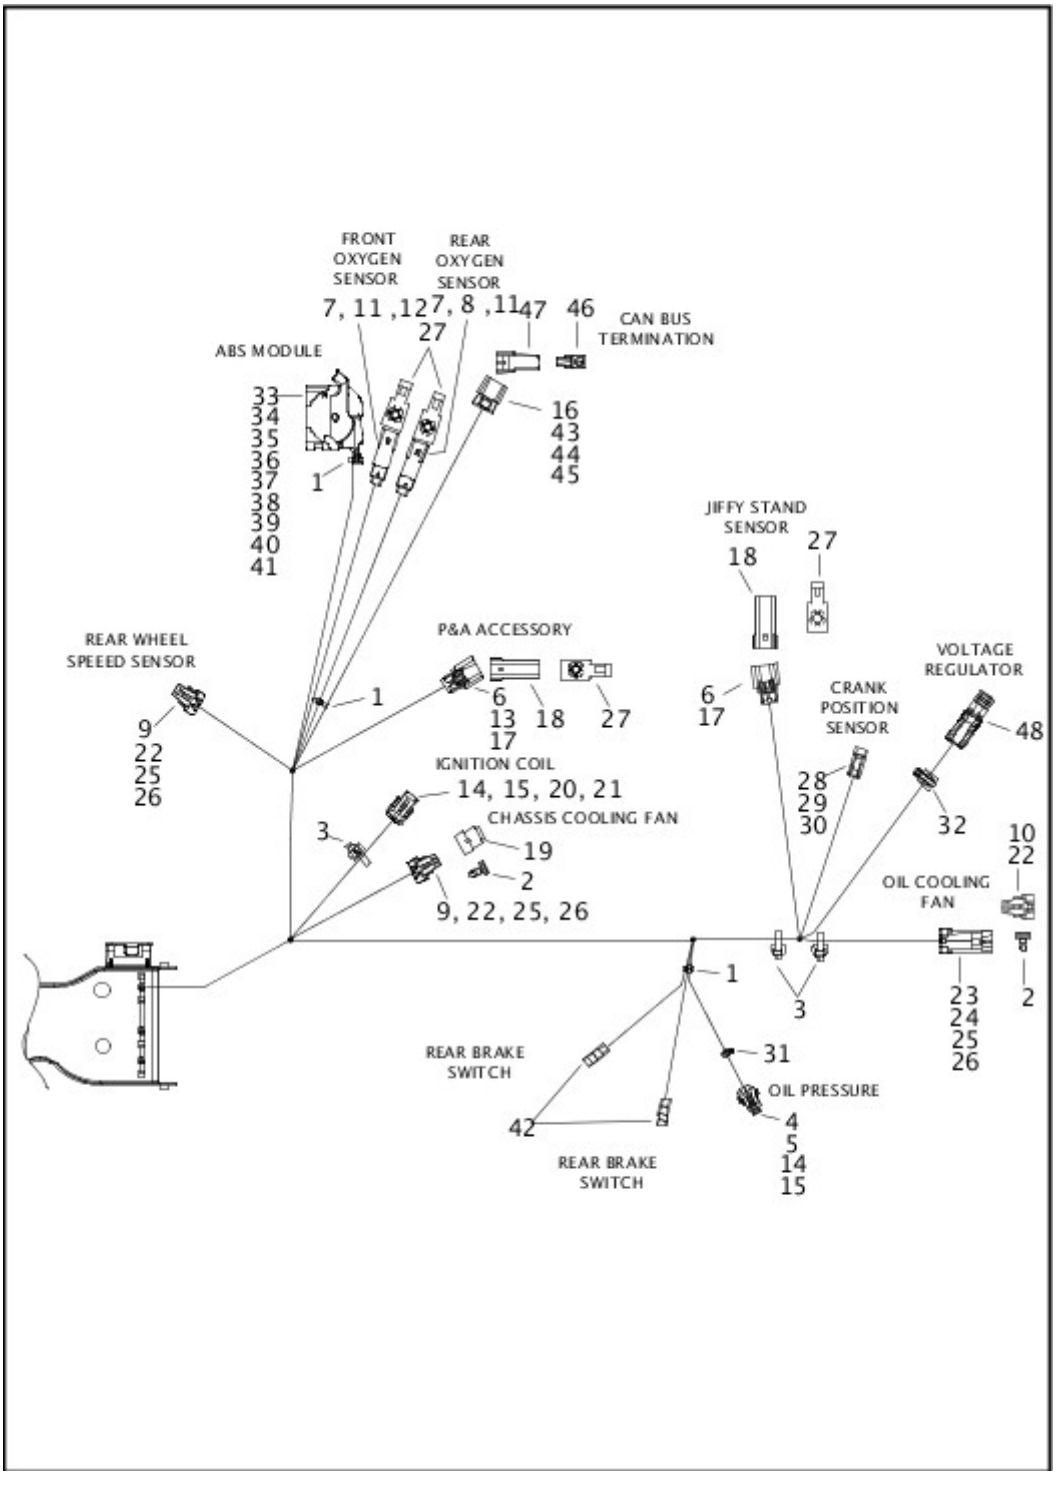

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201122	MAIN WIRING HARNESS - ABS	FLHR, FLHRC, FLHRXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLHR, FLHRC, FLHRXS
2	10147	CLIP, connector *(2)*	FLHR, FLHRC, FLHRXS
3	10177	CABLE STRAP, anchored *(3)*	FLHR, FLHRC, FLHRXS
4	72065-06A	HOUSING, three-way socket (black)	FLHR, FLHRC, FLHRXS
5	72127-06	SECONDARY LOCK, three-way socket	FLHR, FLHRC, FLHRXS
6	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLHR, FLHRC, FLHRXS
7	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLHR, FLHRC, FLHRXS
8	72175-07BK	HOUSING, four-way pin (black)	FLHR, FLHRC, FLHRXS
9	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLHR, FLHRC, FLHRXS
10	72232-96	SEAL PIN (red) *(2)*	FLHR, FLHRC, FLHRXS
11	72343-10	TERMINAL, pin, 16-20 AWG *(4)*	FLHR, FLHRC, FLHRXS
12	72415-07GY	HOUSING, four-way pin (gray)	FLHR, FLHRC, FLHRXS
13	72473-07	SEAL PIN, natural	FLHR, FLHRC, FLHRXS
14	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLHR, FLHRC, FLHRXS
15	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLHR, FLHRC, FLHRXS
16	72499-07	WIRE SEAL, 20-22 AWG (green) *(2)*	FLHR, FLHRC, FLHRXS
17	72512-07BK	HOUSING, three-way socket (black) *(2)*	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72519-09BK	PLUG, weather, three-way socket *(2)*	FLHR, FLHRC, FLHRXS
19	72533-06	PLUG, weather, two-way pin	FLHR, FLHRC, FLHRXS
20	72544-07	SECONDARY LOCK, three-way socket	FLHR, FLHRC, FLHRXS
21	72589-09	HOUSING, three-way socket (black)	FLHR, FLHRC, FLHRXS
22	72606-08	HOUSING, two-way socket (black) *(3)*	FLHR, FLHRC, FLHRXS
23	72607-08	HOUSING, two-way pin (black)	FLHR, FLHRC, FLHRXS
24	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	FLHR, FLHRC, FLHRXS
25	72609-08	SECONDARY LOCK, two-way socket *(3)*	FLHR, FLHRC, FLHRXS
26	72610-08	WIRE SEAL, 18-20 AWG (white) *(6)*	FLHR, FLHRC, FLHRXS
27	73213-07	RETAINER, anchored *(4)*	FLHR, FLHRC, FLHRXS
28	74112-98BK	HOUSING, two-way socket (black)	FLHR, FLHRC, FLHRXS
29	74152-98	SECONDARY LOCK, two-way socket	FLHR, FLHRC, FLHRXS
30	74191-98	TERMINAL, socket 16-20 AWG *(2)*	FLHR, FLHRC, FLHRXS
31	12500014	CABLE STRAP	FLHR, FLHRC, FLHRXS
32	12500018	CABLE STRAP	FLHR, FLHRC, FLHRXS
33	69200183	HOUSING, 26-way socket	FLHR, FLHRC, FLHRXS
34	69200184	COVER, wire	FLHR, FLHRC, FLHRXS
35	69200185	TERMINAL, socket, 20 AWG *(6)*	FLHR, FLHRC, FLHRXS
36	69200186	TERMINAL, socket, 14-16 AWG *(2)*	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	69200187	TERMINAL, socket, 12 AWG *(2)*	FLHR, FLHRC, FLHRXS
38	69200188	WIRE SEAL, 20 AWG *(6)*	FLHR, FLHRC, FLHRXS
39	69200189	WIRE SEAL, 14-16 AWG *(2)*	FLHR, FLHRC, FLHRXS
40	69200190	WIRE SEAL, 12 AWG *(2)*	FLHR, FLHRC, FLHRXS
41	69200191	SEAL PIN *(16)*	FLHR, FLHRC, FLHRXS
42	69200238	TERMINAL, socket, 20 AWG *(2)*	FLHR, FLHRC, FLHRXS
43	69201396	TERMINAL, socket, 20 AWG *(2)*	FLHR, FLHRC, FLHRXS
44	69201400	HOUSING, two-way socket, (black)	FLHR, FLHRC, FLHRXS
45	69201401	SECONDARY LOCK, two-way socket	FLHR, FLHRC, FLHRXS
46	69201404	CONNECTOR, anchored	FLHR, FLHRC, FLHRXS
47	69201405	RESISTOR PACK	FLHR, FLHRC, FLHRXS
48	69201423	DC LEAD ASSEMBLY, two-way socket	FLHR, FLHRC, FLHRXS

WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8)

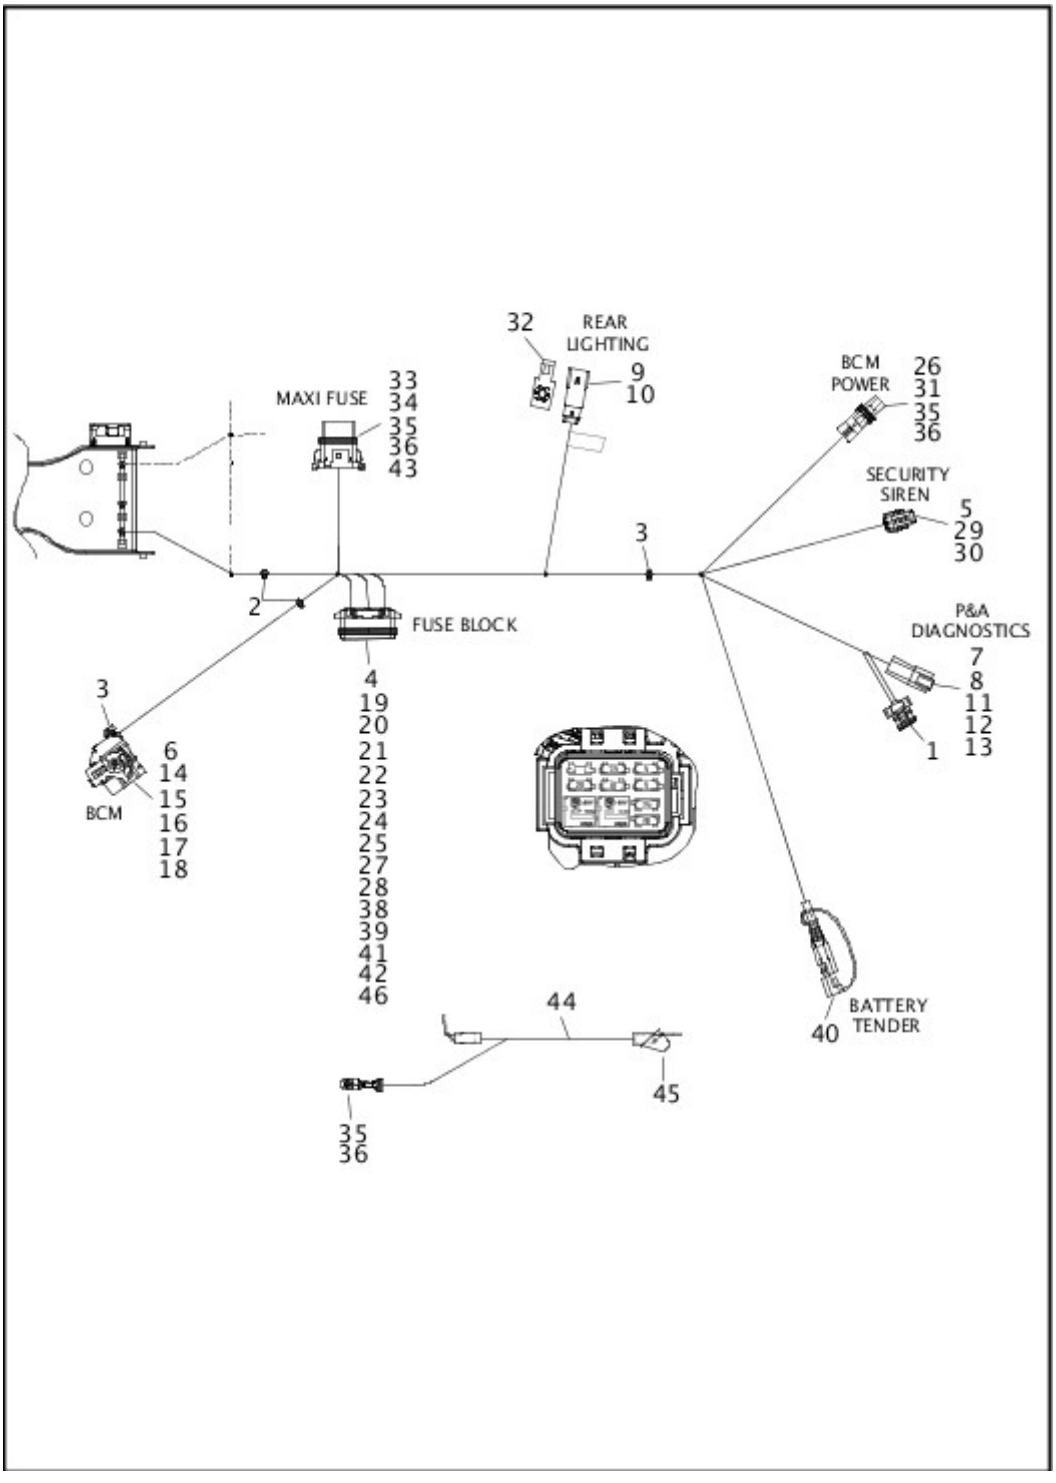

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201122	MAIN WIRING HARNESS - ABS	FLHR, FLHRC, FLHRXS
NOTE: Includes the following parts.			
1	6990	PLUG, weather, six-way pin	FLHR, FLHRC, FLHRXS
2	10006	CABLE STRAP *(2)*	FLHR, FLHRC, FLHRXS
3	10065	CABLE STRAP *(2)*	FLHR, FLHRC, FLHRXS
4	31586-07	RELAY *(2)*	FLHR, FLHRC, FLHRXS
5	72064-06	HOUSING, three-way socket (black)	FLHR, FLHRC, FLHRXS
6	72081-11	HOUSING, 48-way socket (black)	FLHR, FLHRC, FLHRXS
7	72106-94BK	HOUSING, six-way pin (black) (replaces gray connector)	FLHR, FLHRC, FLHRXS
8	72146-94	SECONDARY LOCK, six-way pin	FLHR, FLHRC, FLHRXS
9	72169-07	TERMINAL, pin, 16-20 AWG *(6)*	FLHR, FLHRC, FLHRXS
10	72188-07BK	HOUSING, six-way pin (black)	FLHR, FLHRC, FLHRXS
11	72190-94	TERMINAL, pin, 16-18 AWG *(2)*	FLHR, FLHRC, FLHRXS
12	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLHR, FLHRC, FLHRXS
13	72195-94	SEAL PIN	FLHR, FLHRC, FLHRXS
14	72209-11	COVER, wire	FLHR, FLHRC, FLHRXS
15	72222-11	TERMINAL, socket, 18-20 AWG *(21)*	FLHR, FLHRC, FLHRXS
16	72226-11	TERMINAL, socket, 14-16 AWG *(3)*	FLHR, FLHRC, FLHRXS
17	72227-11	TERMINAL, socket, 18-20 AWG *(3)*	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72256-11	SEAL PIN, 0.6 mm (white) *(9)*	FLHR, FLHRC, FLHRXS
19	72296-95	TERMINAL, socket, 14-16 AWG *(2)*	FLHR, FLHRC, FLHRXS
20	72298-95	WIRE SEAL, 14-18 AWG (green) *(2)*	FLHR, FLHRC, FLHRXS
21	72299-95	SEAL PIN (green) *(4)*	FLHR, FLHRC, FLHRXS
22	72308-97	TERMINAL, socket, 12-14 AWG *(3)*	FLHR, FLHRC, FLHRXS
23	72330-95	FUSE, 15 A (blue)	FLHR, FLHRC, FLHRXS
24	72331-95	FUSE, 5 A (tan) *(2)*	FLHR, FLHRC, FLHRXS
25	72345-02	FUSE, 20 A (yellow) *(2)*	FLHR, FLHRC, FLHRXS
26	72350-11	HOUSING, one-way socket (black)	FLHR, FLHRC, FLHRXS
27	72356-95	TERMINAL, socket, 18-20 AWG *(15)*	FLHR, FLHRC, FLHRXS
28	72412-97	WIRE SEAL, 12-14 AWG (gray) *(3)*	FLHR, FLHRC, FLHRXS
29	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLHR, FLHRC, FLHRXS
30	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLHR, FLHRC, FLHRXS
31	72575-11	SECONDARY LOCK, one-way socket	FLHR, FLHRC, FLHRXS
32	73213-07	RETAINER, anchored	FLHR, FLHRC, FLHRXS
33	73301-04	HOUSING, two-way pin (black)	FLHR, FLHRC, FLHRXS
34	73303-04	SECONDARY LOCK, two-way socket	FLHR, FLHRC, FLHRXS
35	73304-04	TERMINAL, socket, 10 AWG *(3)*	FLHR, FLHRXS
36	73305-04	WIRE SEAL, 10 AWG (blue) *(3)*	FLHR, FLHRC, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	11100115	CLOTH, HARNESS WRAP, 50 m (not shown)	FLHR, FLHRC, FLHRXS
38	69200194	FUSE BLOCK, 24-way	FLHR, FLHRC, FLHRXS
39	69200199	WIRE SEAL, 18-20 AWG (purple) *(15)*	FLHR, FLHRC, FLHRXS
40	69200212	HARNESS, battery tender	FLHR, FLHRC, FLHRXS
41	69200293	FUSE, 7.5 A (brown) *(2)*	FLHR, FLHRC, FLHRXS
42	69200312	SECONDARY LOCK, fuse block *(3)*	FLHR, FLHRC, FLHRXS
43	69200336	MAIN FUSE, 50 A (red), NOTE: Fuse is sold separately and is not part of main harness	FLHR, FLHRC, FLHRXS
44	69201130	WIRE HARNESS, battery positive to starter, with 73304-04, 73305-04 and 69201307	FLHR, FLHRC, FLHRXS
45	69201307	BOOT, battery positive	FLHR, FLHRC, FLHRXS
46	69201411	COVER, fuse block	FLHR, FLHRC, FLHRXS

WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8)

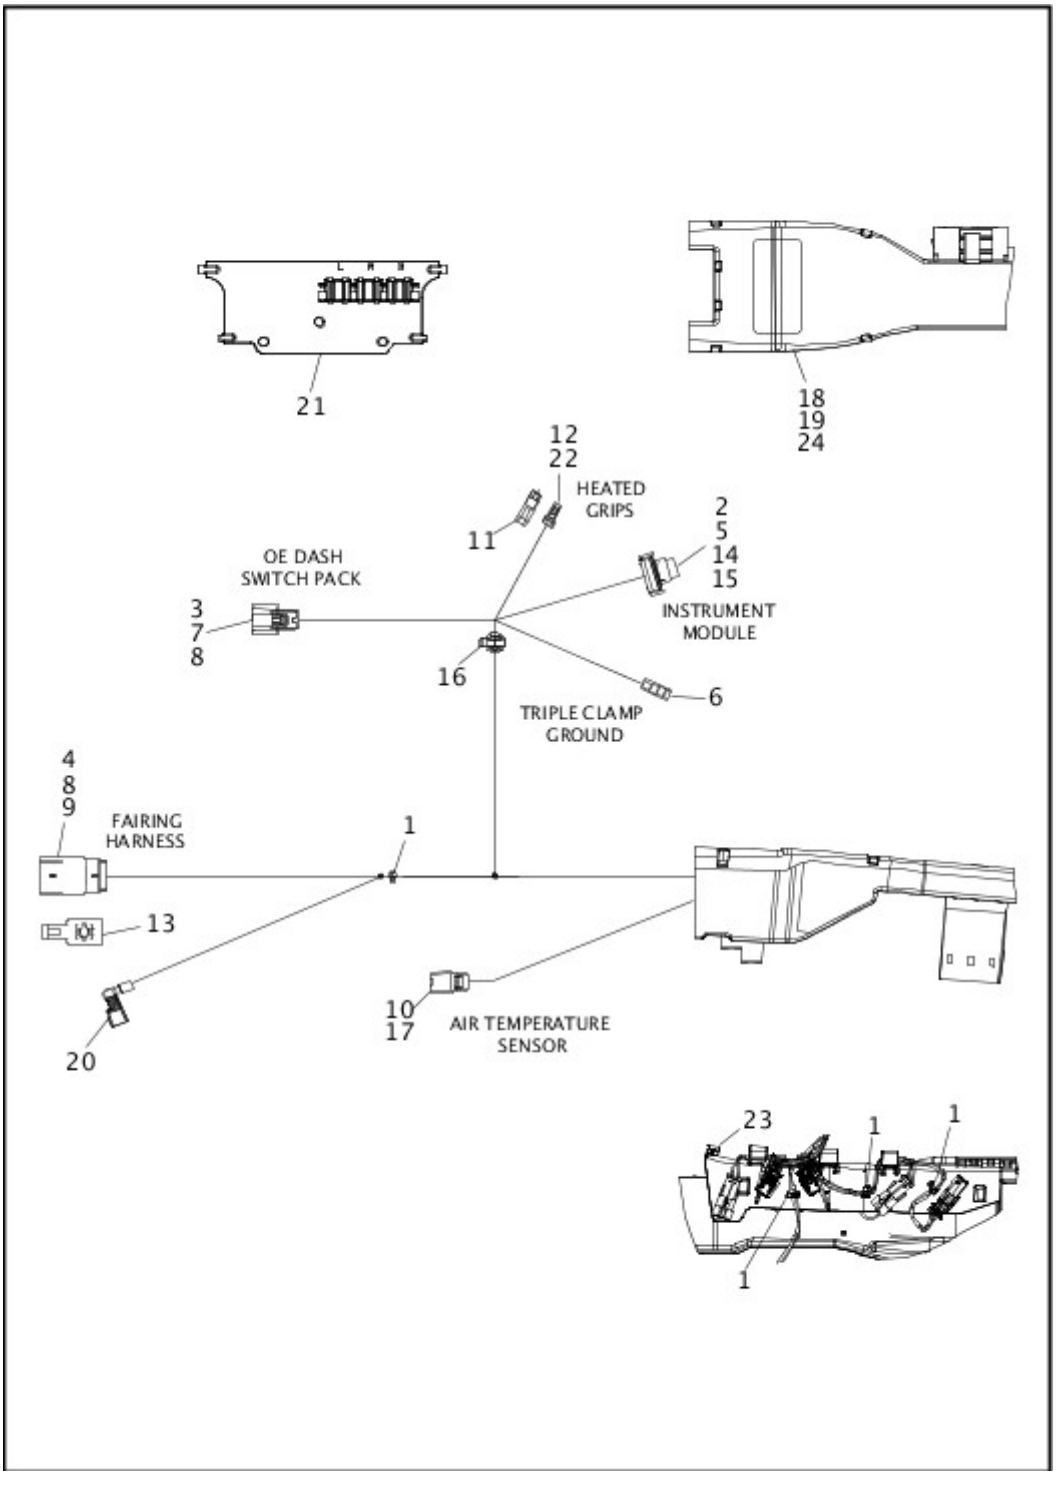

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201127A	MAIN WIRING HARNESS - NON-ABS	FLTRX
NOTE: Includes the following parts.			
1	10006	CABLE STRAP *(4)*	FLTRX
2	72130-04	HOUSING, 12-way socket (black)	FLTRX
3	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLTRX
4	72169-07	TERMINAL, pin, 16-20 AWG *(8)*	FLTRX
5	72189-04	SEAL PIN *(6)*	FLTRX
6	72364-06	TERMINAL, socket, 10-14 AWG	FLTRX
7	72414-07BK	HOUSING, six-way socket (black)	FLTRX
8	72473-07	SEAL PIN, natural *(5)*	FLTRX
9	72490-07GY	HOUSING, 12-way pin (gray)	FLTRX
10	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLTRX
11	72902-01BK	HOUSING, two-way pin (black)	FLTRX
12	72912-01BK	HOUSING, two-way socket (black)	FLTRX
13	73213-07	RETAINER, anchored	FLTRX
14	74196-04	TERMINAL, socket, 20 AWG *(6)*	FLTRX
15	74197-04	SECONDARY LOCK, 12-way socket	FLTRX
16	12500002	CABLE STRAP	FLTRX
17	69200201	HOUSING, two-way socket (black)	FLTRX
18	69200202A	WIRE TROUGH	FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	69200203A	COVER, wire trough, with 15368-01A and 69201459	FLTRX
20	69200629	WIRE HARNESS, AM/FM antenna	FLTRX
21	69200700	CADDY	FLTRX
22	69201240	TERMINAL, socket, 18 AWG *(2)*	FLTRX
23	69201287	BRACKET, mounting, electrical connector	FLTRX
24	69201459	BRACKET	FLTRX

WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8)

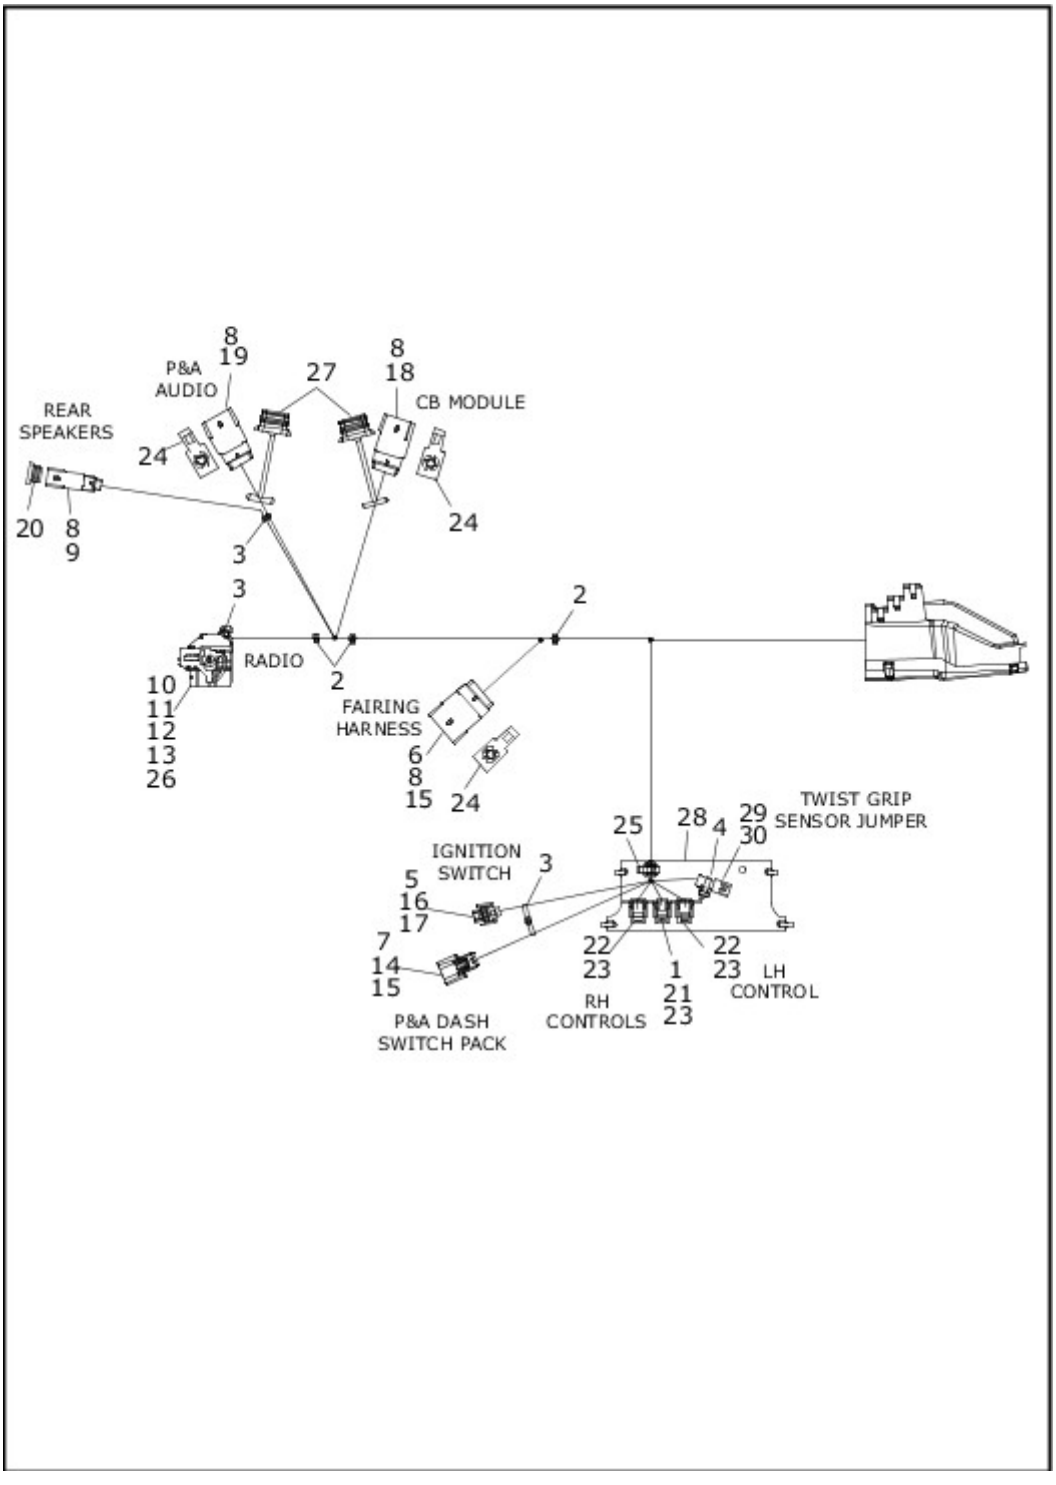

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201127A	MAIN WIRING HARNESS - NON-ABS	FLTRX
NOTE: Includes the following parts.			
1	5118	SEAL PIN	FLTRX
2	10006	CABLE STRAP *(3)*	FLTRX
3	10065	CABLE STRAP *(3)*	FLTRX
4	10177	CABLE STRAP, anchored	FLTRX
5	72062-06	HOUSING, two-way socket (gray)	FLTRX
6	72167-07BK	HOUSING, 16-way pin (black)	FLTRX
7	72168-07	TERMINAL, socket, 18-20 AWG *(4)*	FLTRX
8	72169-07	TERMINAL, pin, 16-20 AWG *(39)*	FLTRX
9	72175-07BK	HOUSING, four-way pin (black)	FLTRX
10	72209-11	COVER, wire	FLTRX
11	72222-11	TERMINAL, socket, 18-20 AWG *(26)*	FLTRX
12	72226-11	TERMINAL, socket, 14-16 AWG *(8)*	FLTRX
13	72256-11	SEAL PIN, 0.6 mm (white) *(14)*	FLTRX
14	72414-07BK	HOUSING, six-way socket (black)	FLTRX
15	72473-07	SEAL PIN, natural *(6)*	FLTRX
16	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLTRX
17	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLTRX
18	72488-07BK	HOUSING, 12-way pin (black)	FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	72490-07GY	HOUSING, 12-way pin (gray)	FLTRX
20	72632-10	PLUG, weather, four-way pin	FLTRX
21	72905-11	HOUSING, two-way pin (black)	FLTRX
22	72907-11	HOUSING, four-way pin (black) *(2)*	FLTRX
23	72909-11	TERMINAL, pin, 20-22 AWG *(9)*	FLTRX
24	73213-07	RETAINER, anchored *(3)*	FLTRX
25	12500002	CABLE STRAP	FLTRX
26	69200193	HOUSING, 48-way socket	FLTRX
27	69200205	PLUG WEATHER, 12-way pin *(2)*	FLTRX
28	69200700	CADDY	FLTRX
29	69201163	HOUSING, six-way pin (black)	FLTRX
30	69201164	TERMINAL, pin, 22 AWG *(6)*	FLTRX

WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8)

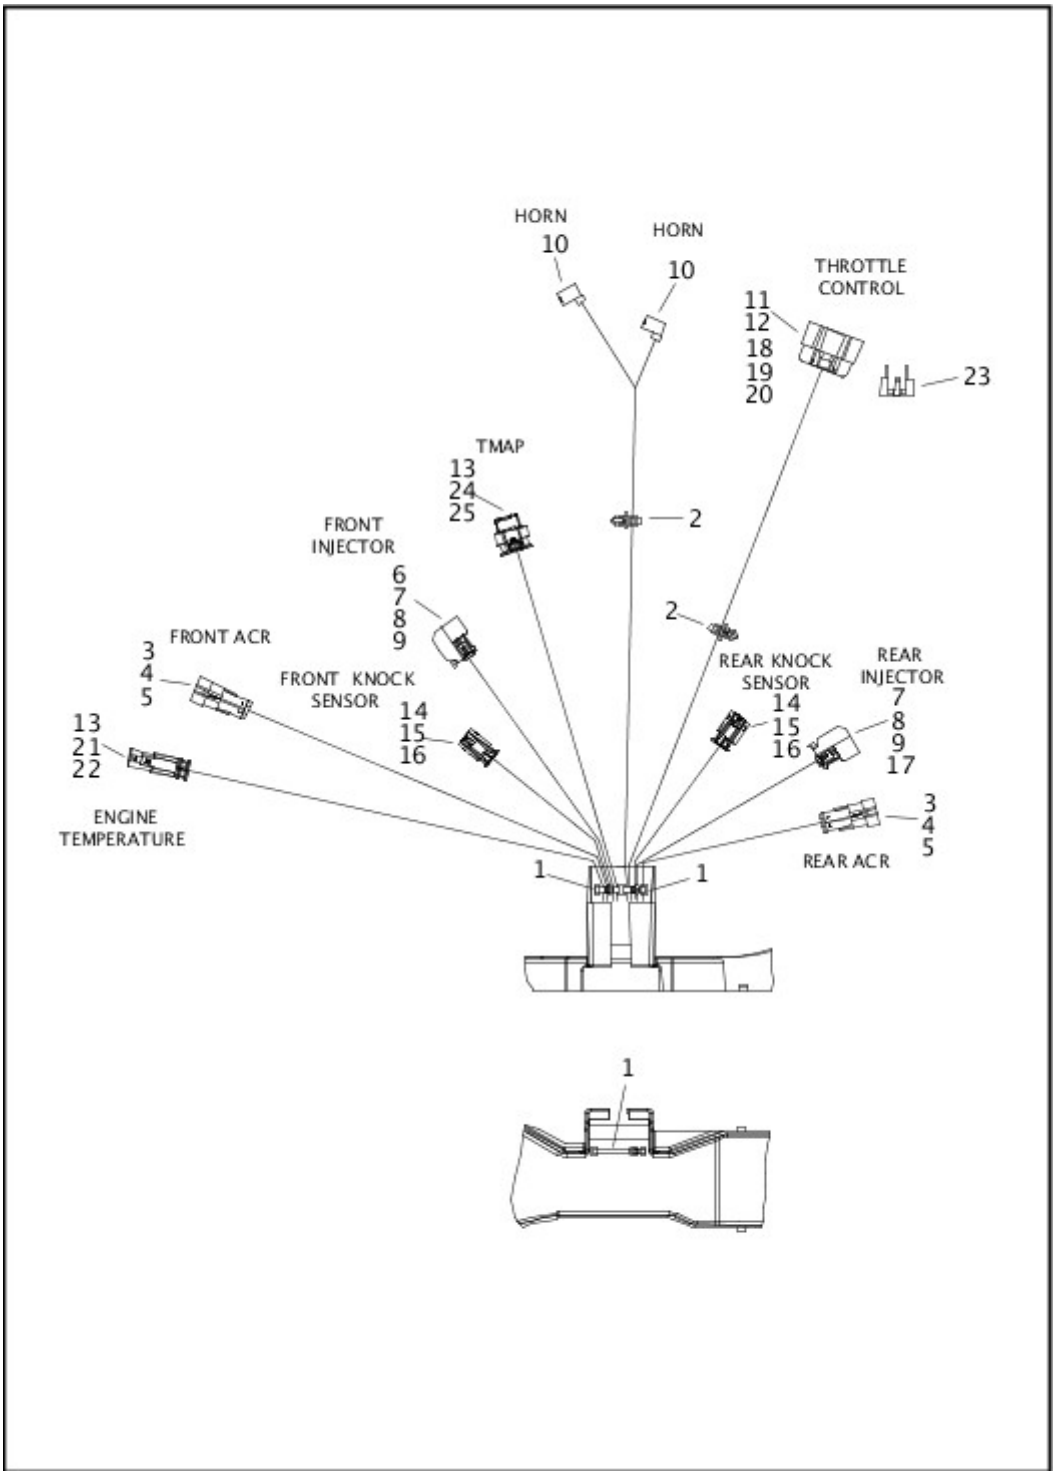

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201127A	MAIN WIRING HARNESS - NON-ABS	FLTRX
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLTRX
2	10177	CABLE STRAP, anchored *(2)*	FLTRX
3	72008-05	TERMINAL, socket, 20-22 AWG *(4)*	FLTRX
4	72009-05	HOUSING, two-way pin (black) *(2)*	FLTRX
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLTRX
6	72098-06	HOUSING, two-way socket (gray)	FLTRX
7	72099-06	WIRE SEAL, 16-18 AWG (blue) *(4)*	FLTRX
8	72110-06	TERMINAL, socket, 16-18 AWG *(4)*	FLTRX
9	72145-06	SECONDARY LOCK, two-way socket *(2)*	FLTRX
10	72283-09	TERMINAL, socket, 14-16 AWG, 90 degree *(2)*	FLTRX
11	72499-07	WIRE SEAL, 20-22 AWG (yellow) *(6)*	FLTRX
12	72569-08	TERMINAL, socket, 20-22 AWG *(2)*	FLTRX
13	69201301	WIRE SEAL, 20-22 AWG (green) *(6)*	FLTRX
14	69201390	HOUSING, two-way socket *(2)*	FLTRX
15	69201391	TERMINAL, socket, 20 AWG *(4)*	FLTRX
16	69201392	WIRE SEAL, 20 AWG (yellow) *(4)*	FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	69201393	HOUSING, two-way socket (black)	FLTRX
18	69201394	HOUSING, six-way socket (black)	FLTRX
19	69201395	SECONDARY LOCK, six-way socket	FLTRX
20	69201396	TERMINAL, socket, 20 AWG *(4)*	FLTRX
21	69201397	HOUSING, two-way pin (gray)	FLTRX
22	69201398	TERMINAL, pin, 20 AWG *(2)*	FLTRX
23	69201416	SECONDARY LOCK, six-way socket	FLTRX
24	69201441	HOUSING, four-way socket	FLTRX
25	69201442	TERMINAL, socket, 18 AWG *(4)*	FLTRX

WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8)

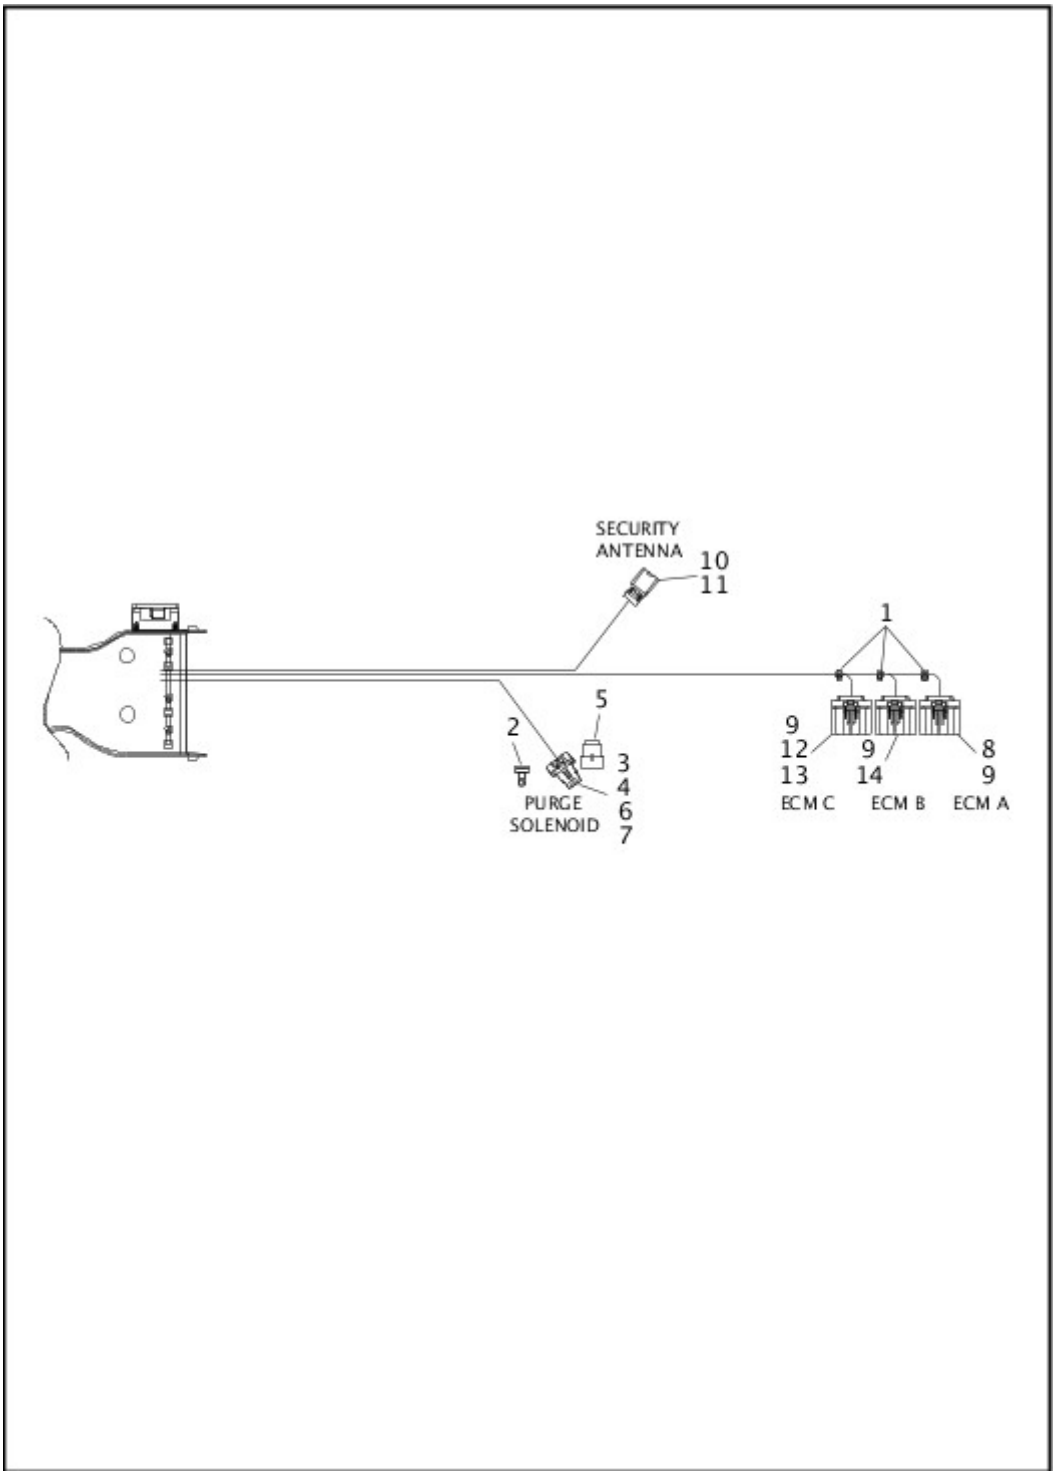


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201127A	MAIN WIRING HARNESS - NON-ABS	FLTRX
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLTRX
2	10147	CLIP, connector	FLTRX
3	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLTRX
4	72518-01	HOUSING, two-way socket (red)	FLTRX
5	72533-06	PLUG, weather, two-way pin	FLTRX
6	72609-08	SECONDARY LOCK, two-way socket	FLTRX
7	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLTRX
8	72664-12A	HOUSING, 18-way socket (black)	FLTRX
9	72666-12	TERMINAL, socket, 18-20 AWG *(43)*	FLTRX
10	72720-07	HOUSING, two-way socket (black)	FLTRX
11	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLTRX
12	69201168	TERMINAL, socket, 22 AWG *(2)*	FLTRX
13	69201415	HOUSING, 18-way socket (brown)	FLTRX
14	69201440	HOUSING, 18-way socket (gray)	FLTRX

WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8)

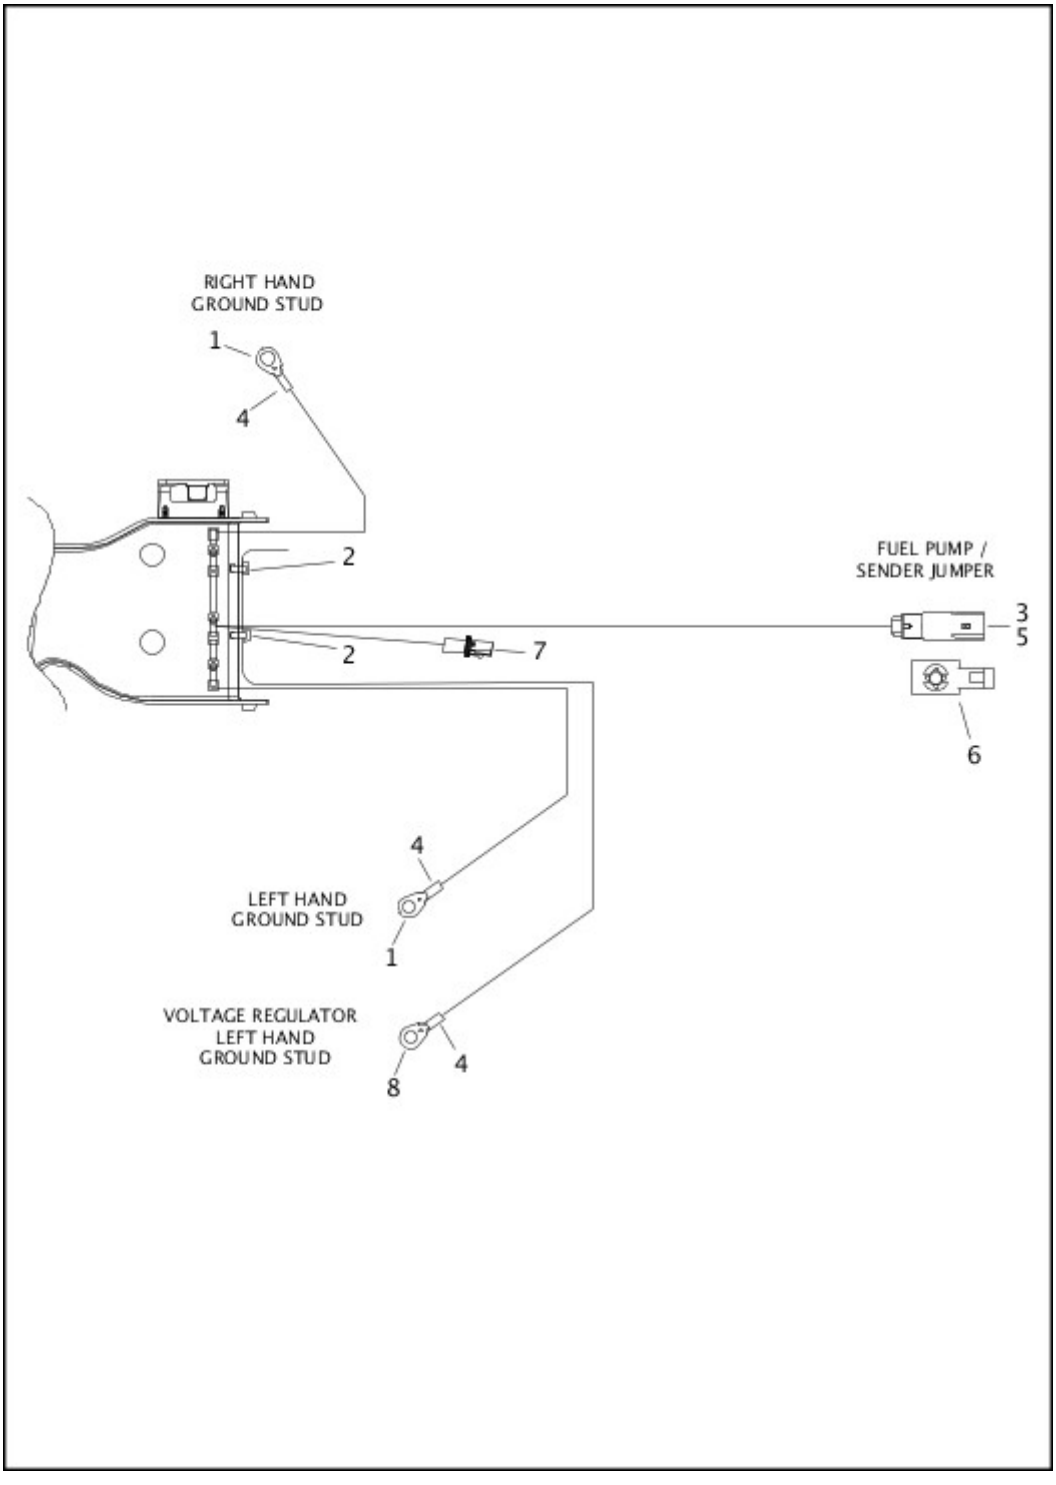


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201127A	MAIN WIRING HARNESS - NON-ABS	FLTRX
NOTE: Includes the following parts.			
1	9819	TERMINAL, ring, 12 AWG *(2)*	FLTRX
2	10065	CABLE STRAP *(2)*	FLTRX
3	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLTRX
4	72249-94	HEAT SHRINK TUBE, .415 x 1 in (black)	FLTRX
5	72415-07GY	HOUSING, four-way pin (gray)	FLTRX
6	73213-07	RETAINER, anchored	FLTRX
7	69200629	WIRE HARNESS, AM/FM antenna	FLTRX
8	69201596	TERMINAL, ring, 8-10 AWG	FLTRX

WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8)

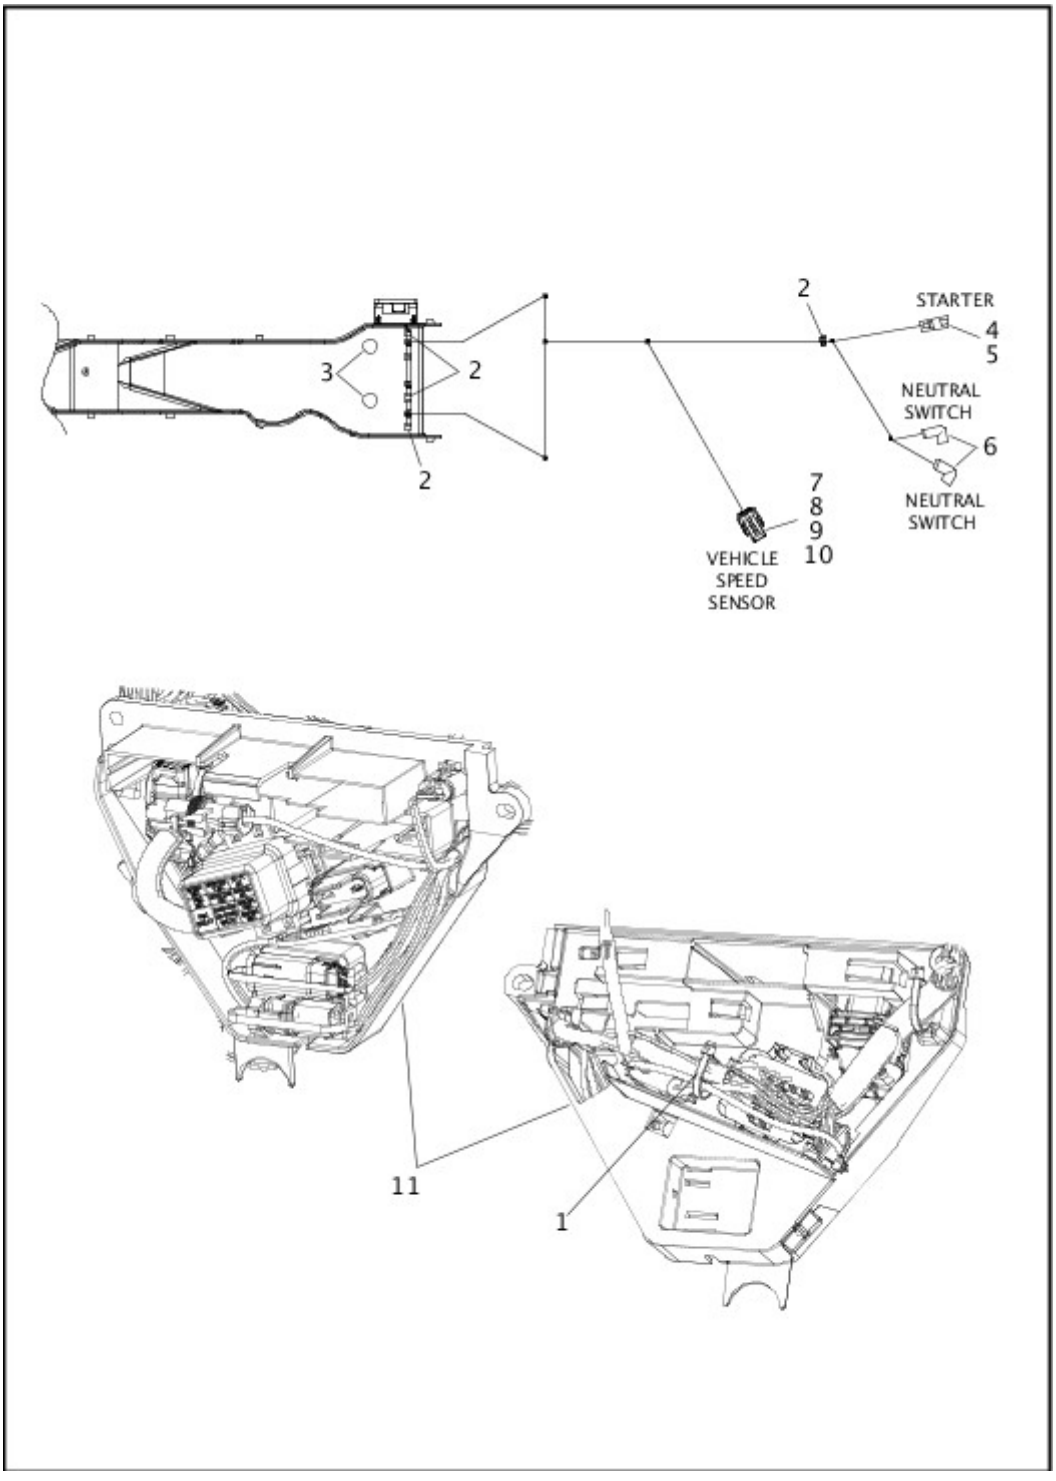


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201127A	MAIN WIRING HARNESS - NON-ABS	FLTRX
NOTE: Includes the following parts.			
1	10006	CABLE STRAP	FLTRX
2	10065	CABLE STRAP *(4)*	FLTRX
3	11779	FASTENER, push-in (black) *(2)*	FLTRX
4	72291-94	TERMINAL, socket, 14-16 AWG	FLTRX
5	72295-94	CONNECTOR, starter housing	FLTRX
6	72405-98BK	WIRE ASSEMBLY, push-on, right angle molded, 65-1/2 in length (black) *(2)*	FLTRX
7	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLTRX
8	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLTRX
9	72543-07BK	HOUSING, three-way socket (black)	FLTRX
10	72544-07	SECONDARY LOCK, three-way socket	FLTRX
11	69200175	CADDY, fuse block, electrical panel	FLTRX

WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8)

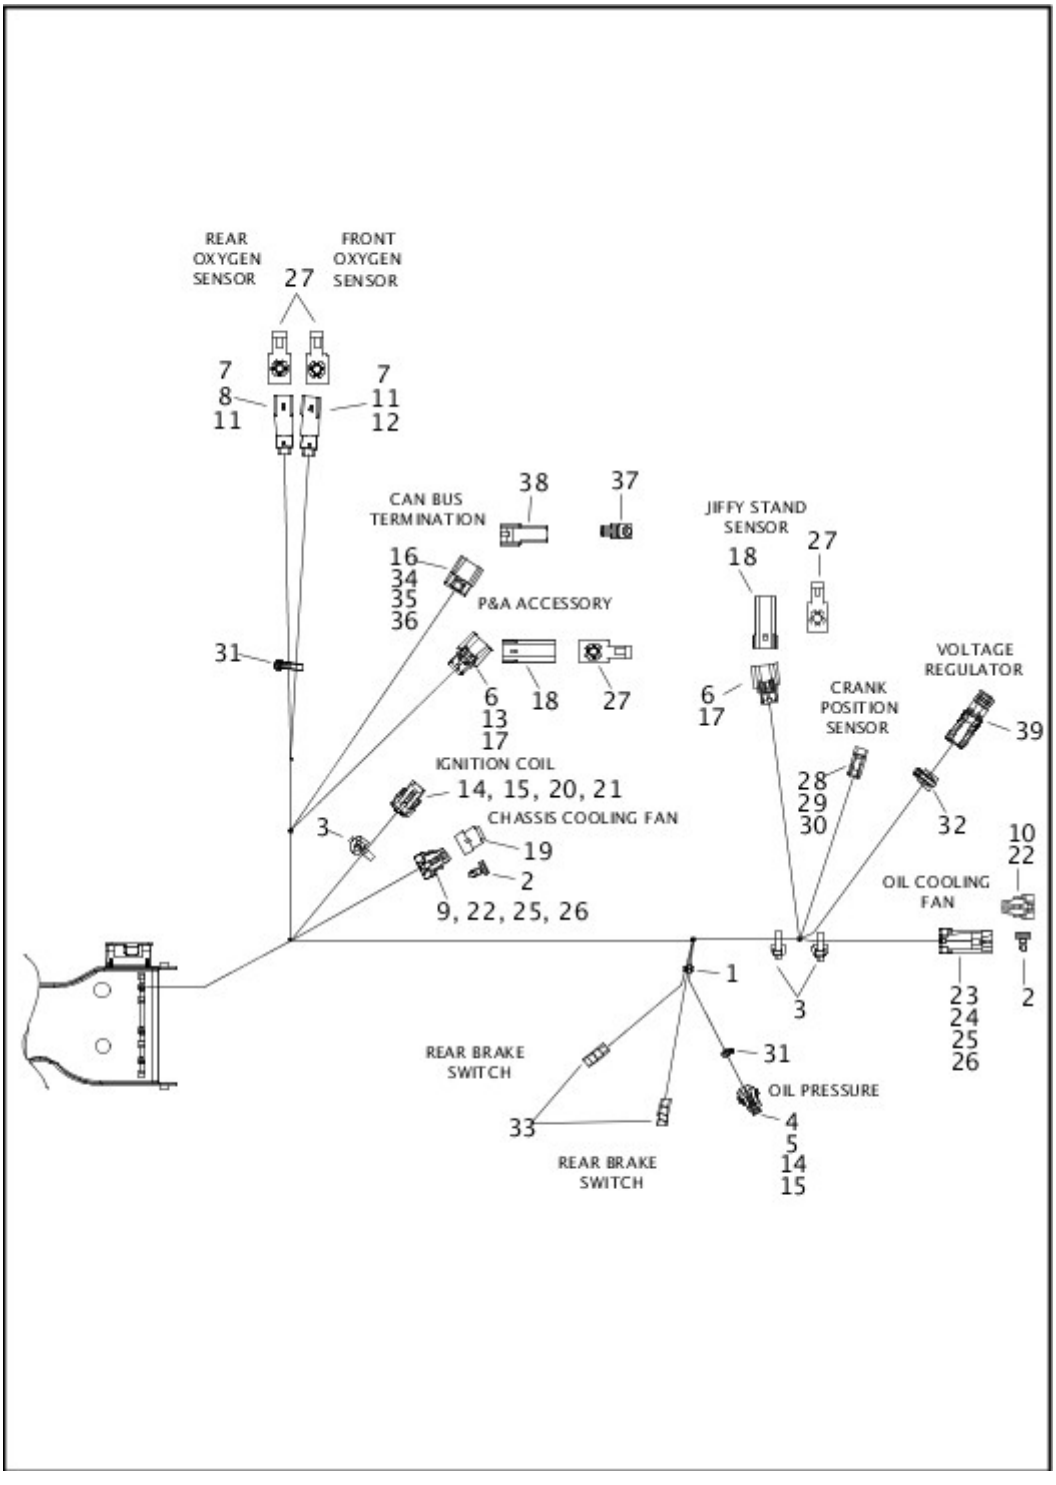

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201127A	MAIN WIRING HARNESS - NON-ABS	FLTRX
NOTE: Includes the following parts.			
1	10065	CABLE STRAP	FLTRX
2	10147	CLIP, connector *(2)*	FLTRX
3	10177	CABLE STRAP, anchored *(3)*	FLTRX
4	72065-06A	HOUSING, three-way socket	FLTRX
5	72127-06	SECONDARY LOCK, three-way (black)	FLTRX
6	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLTRX
7	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLTRX
8	72175-07BK	HOUSING, four-way pin (black)	FLTRX
9	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLTRX
10	72232-96	SEAL PIN (red) *(2)*	FLTRX
11	72343-10	TERMINAL, pin, 16-20 AWG *(4)*	FLTRX
12	72415-07GY	HOUSING, four-way pin (gray)	FLTRX
13	72473-07	SEAL PIN, natural	FLTRX
14	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLTRX
15	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLTRX
16	72499-07	WIRE SEAL, 20-22 AWG (green) *(2)*	FLTRX
17	72512-07BK	HOUSING, three-way socket (black) *(2)*	FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72519-09BK	PLUG, weather, three-way socket *(2)*	FLTRX
19	72533-06	PLUG, weather, two-way pin	FLTRX
20	72544-07	SECONDARY LOCK, three-way socket	FLTRX
21	72589-09	HOUSING, three-way socket (black)	FLTRX
22	72606-08	HOUSING, two-way socket (black) *(2)*	FLTRX
23	72607-08	HOUSING, two-way pin (black)	FLTRX
24	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	FLTRX
25	72609-08	SECONDARY LOCK, two-way socket *(2)*	FLTRX
26	72610-08	WIRE SEAL, 18-20 AWG (white) *(4)*	FLTRX
27	73213-07	RETAINER, anchored *(4)*	FLTRX
28	74112-98BK	HOUSING, two-way socket (black)	FLTRX
29	74152-98	SECONDARY LOCK, two-way socket	FLTRX
30	74191-98	TERMINAL, socket 16-20 AWG *(2)*	FLTRX
31	12500014	CABLE STRAP *(2)*	FLTRX
32	12500018	CABLE STRAP	FLTRX
33	69200238	TERMINAL, insulated, 20 AWG *(2)*	FLTRX
34	69201396	TERMINAL, socket, 20 AWG *(2)*	FLTRX
35	69201400	HOUSING, two-way socket, (black)	FLTRX
36	69201401	SECONDARY LOCK, two-way socket	FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	69201404	RETAINER, anchored	FLTRX
38	69201405	RESISTOR PACK	FLTRX
39	69201423	DC LEAD ASSEMBLY, two-way socket	FLTRX

WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8)

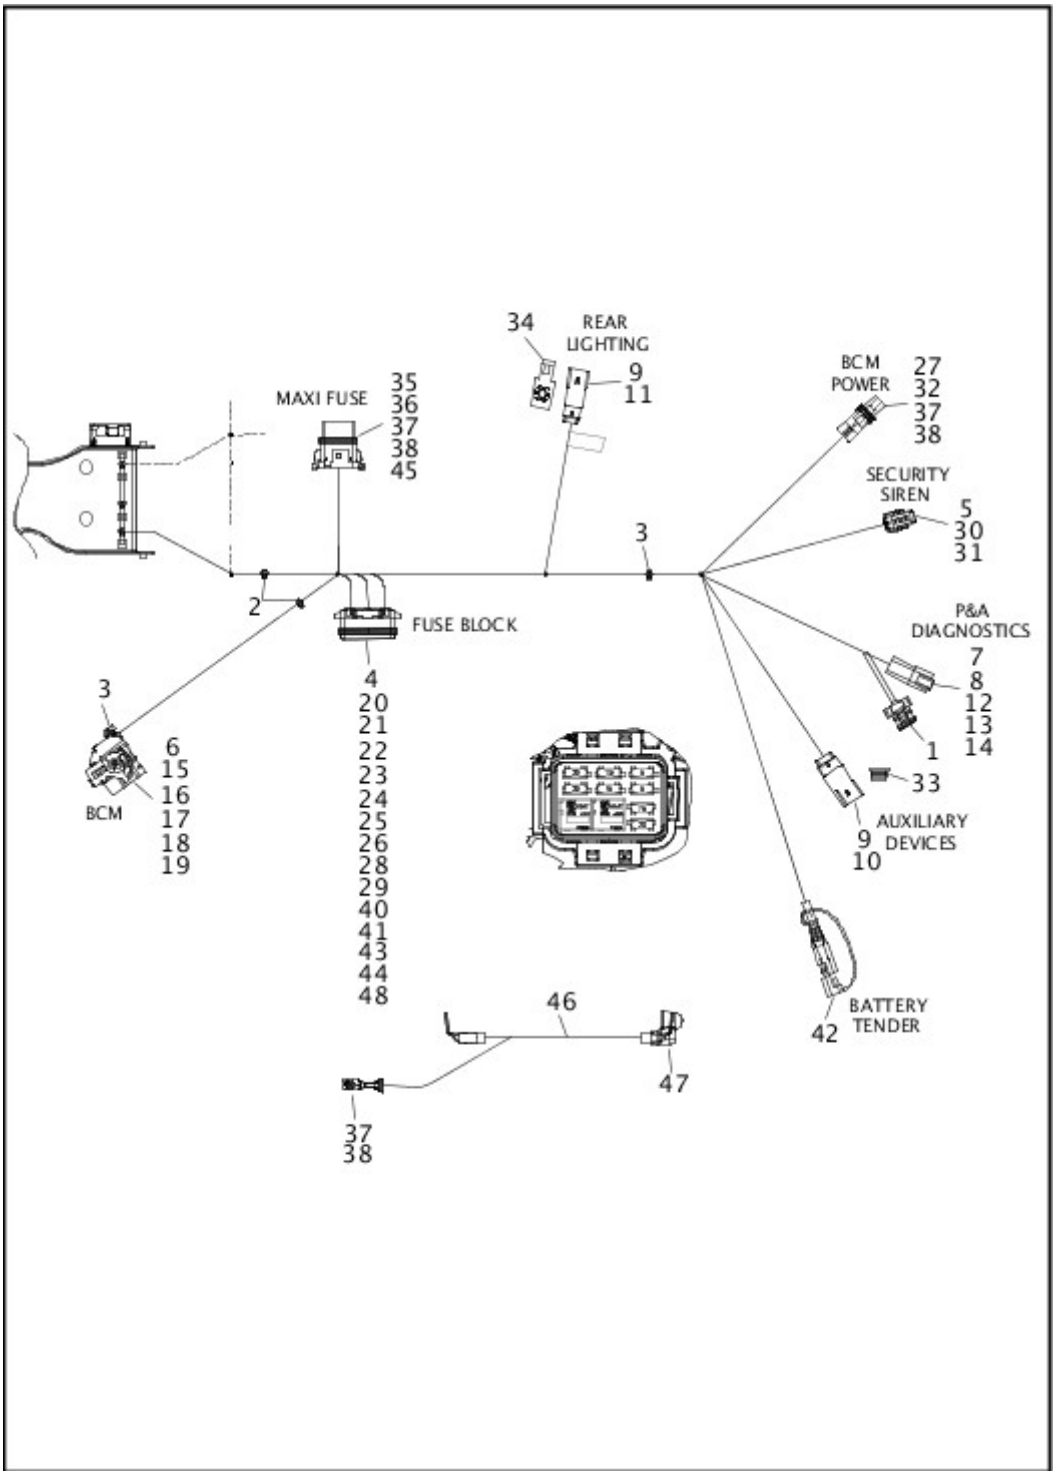

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201127A	MAIN WIRING HARNESS - NON-ABS	FLTRX
NOTE: Includes the following parts.			
1	6990	WEATHER PLUG, six-way pin	FLTRX
2	10006	CABLE STRAP *(2)*	FLTRX
3	10065	CABLE STRAP *(2)*	FLTRX
4	31586-07	RELAY *(2)*	FLTRX
5	72064-06	HOUSING, three-way socket (black)	FLTRX
6	72081-11	HOUSING, 48-way socket (black)	FLTRX
7	72106-94BK	HOUSING, six-way pin (black) (replaces gray connector)	FLTRX
8	72146-94	SECONDARY LOCK, six-way pin	FLTRX
9	72169-07	TERMINAL, pin, 16-20 AWG *(10)*	FLTRX
10	72175-07BK	HOUSING, four-way pin (black)	FLTRX
11	72188-07BK	HOUSING, six-way pin (black)	FLTRX
12	72190-94	TERMINAL, pin, 16-18 AWG *(2)*	FLTRX
13	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLTRX
14	72195-94	SEAL PIN	FLTRX
15	72209-11	COVER, wire	FLTRX
16	72222-11	TERMINAL, socket, 18-20 AWG *(21)*	FLTRX
17	72226-11	TERMINAL, socket, 14-16 AWG	FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLTRX
19	72256-11	SEAL PIN, 0.6 mm (white) *(9)*	FLTRX
20	72296-95	TERMINAL, socket, 14-16 AWG *(3)*	FLTRX
21	72298-95	WIRE SEAL, 14-18 AWG (green) *(3)*	FLTRX
22	72299-95	SEAL PIN, green *(2)*	FLTRX
23	72308-97	TERMINAL, socket, 12-14 AWG *(5)*	FLTRX
24	72330-95	FUSE, 15 A (blue)	FLTRX
25	72331-95	FUSE, 5 A (tan) *(2)*	FLTRX
26	72345-02	FUSE, 20 A (yellow) *(3)*	FLTRX
27	72350-11	HOUSING, one-way socket (black)	FLTRX
28	72356-95	TERMINAL, socket, 18-20 AWG *(14)*	FLTRX
29	72412-97	WIRE SEAL, 12-14 AWG (gray) *(5)*	FLTRX
30	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLTRX
31	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLTRX
32	72575-11	SECONDARY LOCK, one-way socket	FLTRX
33	72632-10	PLUG, weather, four-way pin	FLTRX
34	73213-07	RETAINER, anchored	FLTRX
35	73301-04	HOUSING, two-way pin (black)	FLTRX
36	73303-04	SECONDARY LOCK, two-way socket	FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	73304-04	TERMINAL, socket, 10 AWG *(3)*	FLTRX
38	73305-04	WIRE SEAL, 10 AWG (blue) *(3)*	FLTRX
39	11100115	CLOTH, HARNESS WRAP, 50 m (not shown)	FLTRX
40	69200194	FUSE BLOCK, 24-way	FLTRX
41	69200199	WIRE SEAL, 18-20 AWG (purple) *(14)*	FLTRX
42	69200212	HARNESS, battery tender	FLTRX
43	69200293	FUSE, 7.5 A (brown) *(2)*	FLTRX
44	69200312	SECONDARY LOCK, fuse block *(3)*	FLTRX
45	69200336	MAIN FUSE, 50 A (red), NOTE: Fuse is sold separately and is not part of main harness	FLTRX
46	69201130	WIRE HARNESS, battery positive to starter, with 73304-04, 73305-04 and 69201307	FLTRX
47	69201307	BOOT, battery positive	FLTRX
48	69201411	COVER, fuse block	FLTRX

WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8)

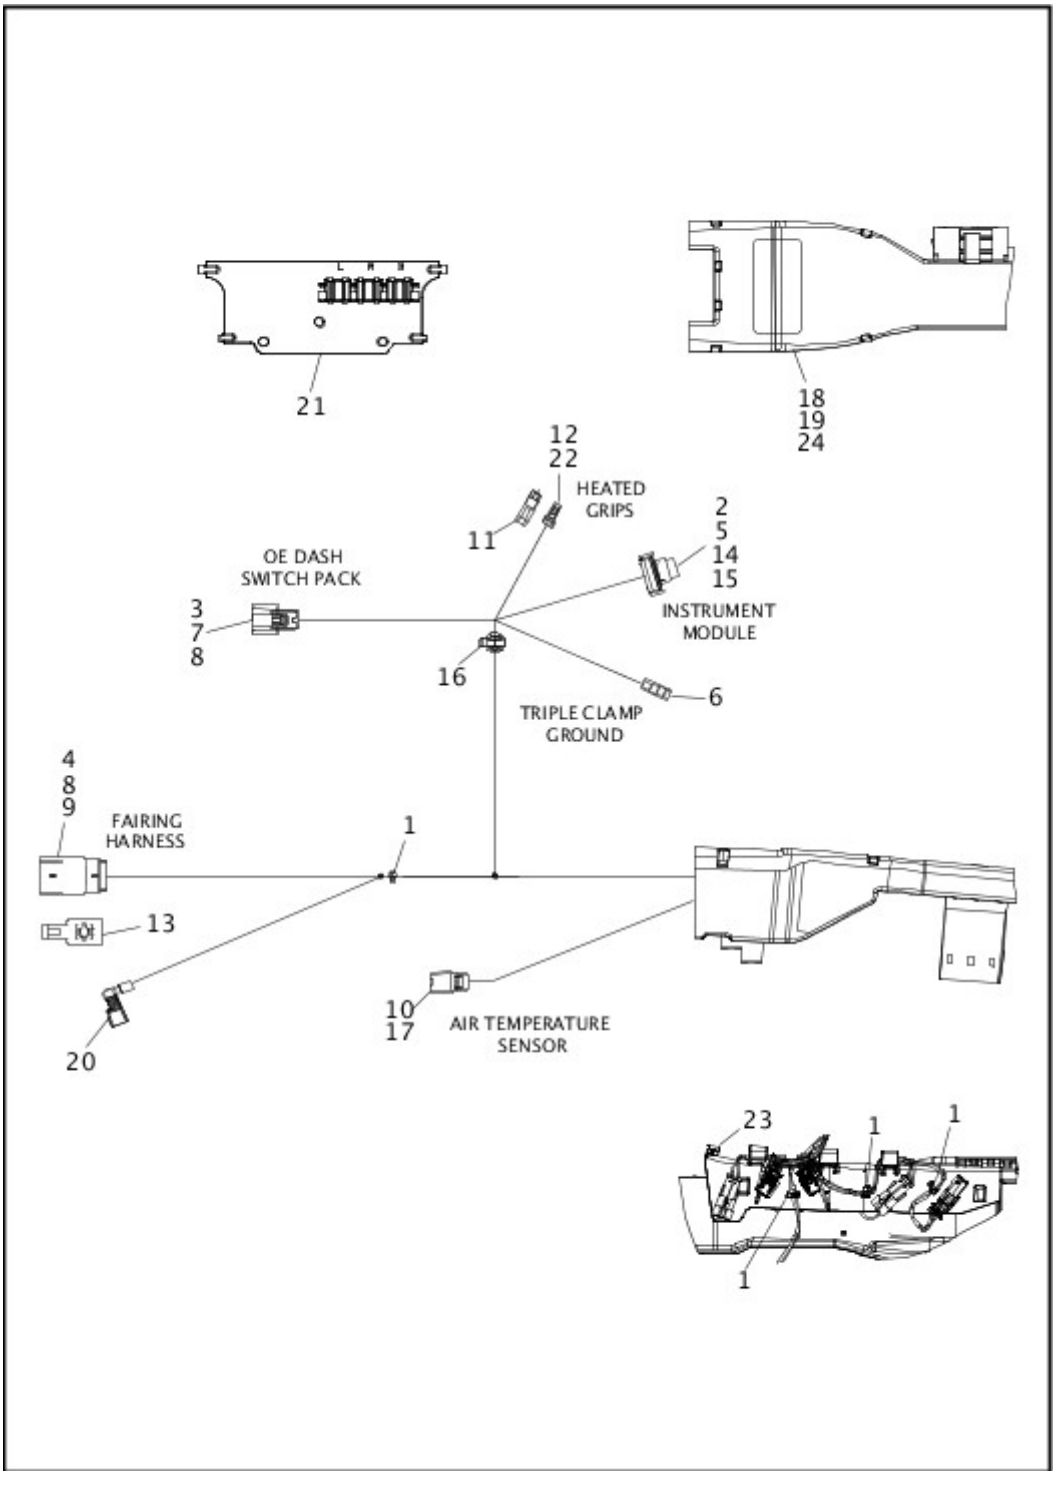

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201124A	MAIN WIRING HARNESS - ABS	FLTRX, FLTRXS
NOTE: Includes the following parts.			
1	10006	CABLE STRAP *(4)*	FLTRX, FLTRXS
2	72130-04	HOUSING, 12-way socket (black)	FLTRX, FLTRXS
3	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLTRX, FLTRXS
4	72169-07	TERMINAL, pin, 16-20 AWG *(8)*	FLTRX, FLTRXS
5	72189-04	SEAL PIN *(6)*	FLTRX, FLTRXS
6	72364-06	TERMINAL, socket 10-14 AWG	FLTRX, FLTRXS
7	72414-07BK	HOUSING, six-way socket (black)	FLTRX, FLTRXS
8	72473-07	SEAL PIN, natural *(5)*	FLTRX, FLTRXS
9	72490-07GY	HOUSING, 12-way pin (gray)	FLTRX, FLTRXS
10	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLTRX, FLTRXS
11	72902-01BK	HOUSING, two-way pin (black)	FLTRX, FLTRXS
12	72912-01BK	HOUSING, two-way socket (black)	FLTRX, FLTRXS
13	73213-07	RETAINER, anchored	FLTRX, FLTRXS
14	74196-04	TERMINAL, socket, 20 AWG *(6)*	FLTRX, FLTRXS
15	74197-04	SECONDARY LOCK, 12-way socket	FLTRX, FLTRXS
16	12500002	CABLE STRAP	FLTRX, FLTRXS
17	69200201	HOUSING, two-way socket (black)	FLTRX, FLTRXS
18	69200202A	WIRE TROUGH	FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	69200203A	COVER, wire trough, with 15368-01A and 69201459	FLTRX, FLTRXS
20	69200629	WIRE HARNESS, AM/FM antenna	FLTRX, FLTRXS
21	69200700	CADDY	FLTRX, FLTRXS
22	69201240	TERMINAL, socket, 18 AWG *(2)*	FLTRX, FLTRXS
23	69201287	BRACKET, mounting, electrical connector	FLTRX, FLTRXS
24	69201459	BRACKET	FLTRX, FLTRXS

WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8)

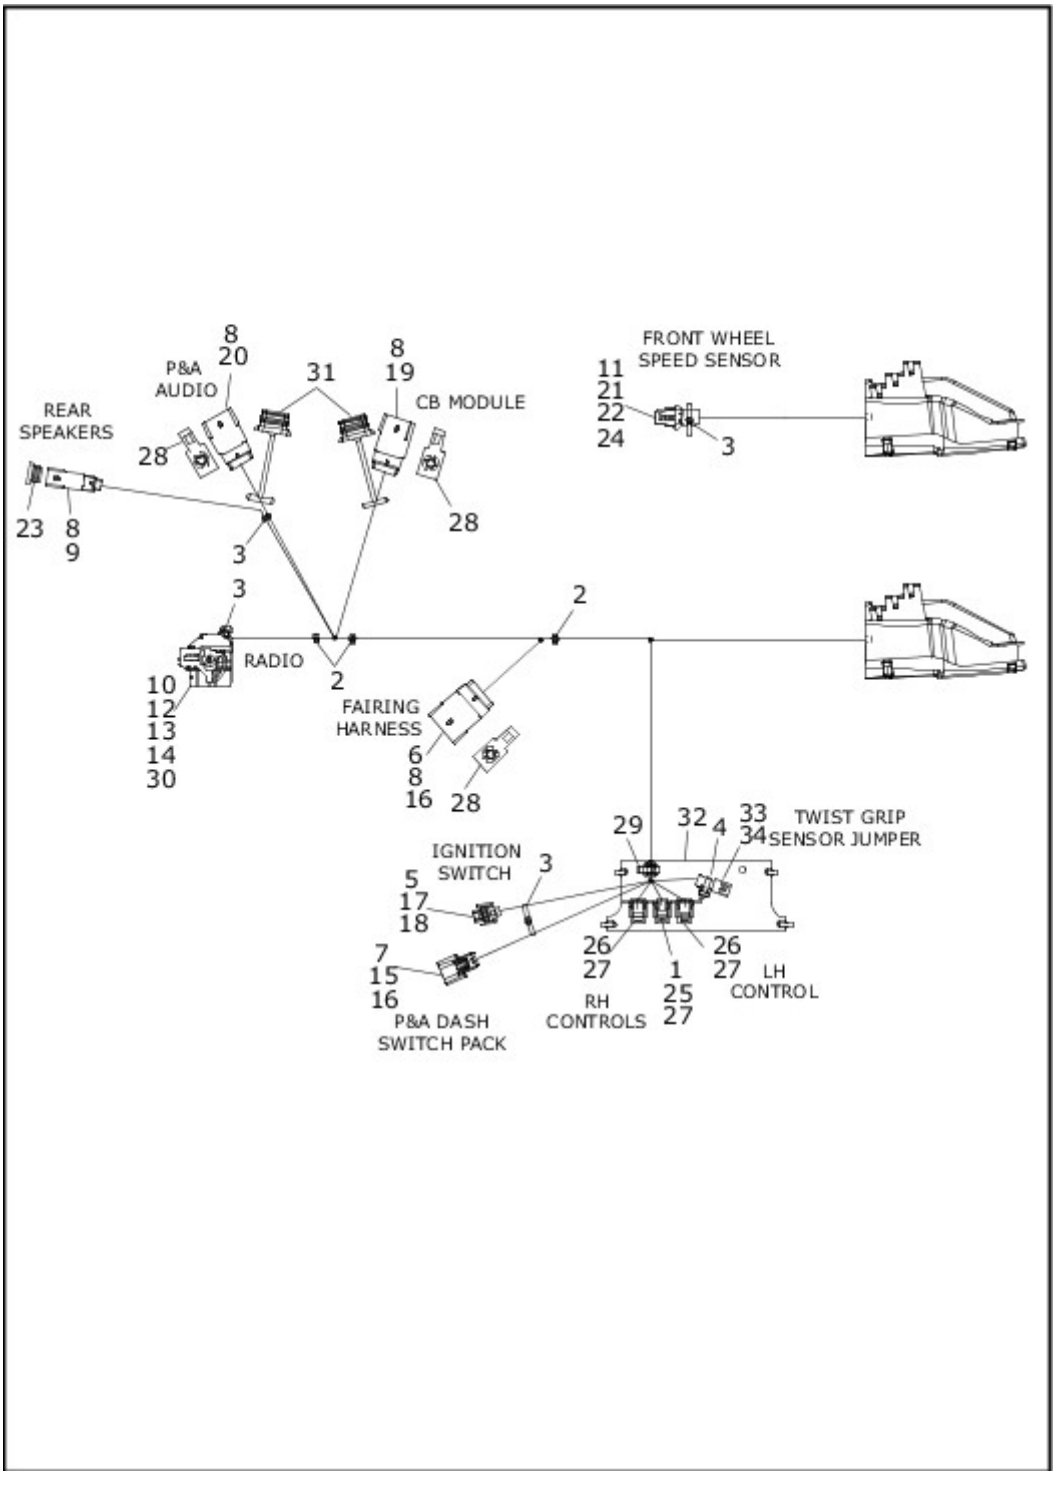

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201124A	MAIN WIRING HARNESS - ABS	FLTRX, FLTRXS
NOTE: Includes the following parts.			
1	5118	SEAL PIN	FLTRX, FLTRXS
2	10006	CABLE STRAP *(3)*	FLTRX, FLTRXS
3	10065	CABLE STRAP *(4)*	FLTRX, FLTRXS
4	10177	CABLE STRAP, anchored	FLTRX, FLTRXS
5	72062-06	HOUSING, two-way socket (gray)	FLTRX, FLTRXS
6	72167-07BK	HOUSING, 16-way pin (black)	FLTRX, FLTRXS
7	72168-07	TERMINAL, socket, 18-20 AWG *(4)*	FLTRX, FLTRXS
8	72169-07	TERMINAL, pin, 16-20 AWG *(39)*	FLTRX, FLTRXS
9	72175-07BK	HOUSING, four-way pin (black)	FLTRX, FLTRXS
10	72209-11	COVER, wire	FLTRX, FLTRXS
11	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLTRX, FLTRXS
12	72222-11	TERMINAL, socket, 18-20 AWG *(26)*	FLTRX, FLTRXS
13	72226-11	TERMINAL, socket, 14-16 AWG *(8)*	FLTRX, FLTRXS
14	72256-11	SEAL PIN, 0.6 mm (white) *(13)*	FLTRX, FLTRXS
15	72414-07BK	HOUSING, six-way socket (black)	FLTRX, FLTRXS
16	72473-07	SEAL PIN, natural *(6)*	FLTRX, FLTRXS
17	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLTRX, FLTRXS
18	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	72488-07BK	HOUSING, 12-way pin (black)	FLTRX, FLTRXS
20	72490-07GY	HOUSING, 12-way pin (gray)	FLTRX, FLTRXS
21	72606-08	HOUSING, two-way socket (black)	FLTRX, FLTRXS
22	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLTRX, FLTRXS
23	72632-10	PLUG, weather, four-way pin	FLTRX, FLTRXS
24	72639-10	SECONDARY LOCK, two-way socket	FLTRX, FLTRXS
25	72905-11	HOUSING, two-way pin (black)	FLTRX, FLTRXS
26	72907-11	HOUSING, four-way pin (black) *(2)*	FLTRX, FLTRXS
27	72909-11	TERMINAL, pin, 20-22 AWG *(9)*	FLTRX, FLTRXS
28	73213-07	RETAINER, anchored *(3)*	FLTRX, FLTRXS
29	12500002	CABLE STRAP	FLTRX, FLTRXS
30	69200193	HOUSING, 48-way socket	FLTRX, FLTRXS
31	69200205	PLUG, weather 12-way pin *(2)*	FLTRX, FLTRXS
32	69200700	CADDY	FLTRX, FLTRXS
33	69201163	HOUSING, six-way pin (black)	FLTRX, FLTRXS
34	69201164	TERMINAL, pin, 22 AWG *(6)*	FLTRX, FLTRXS

WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8)

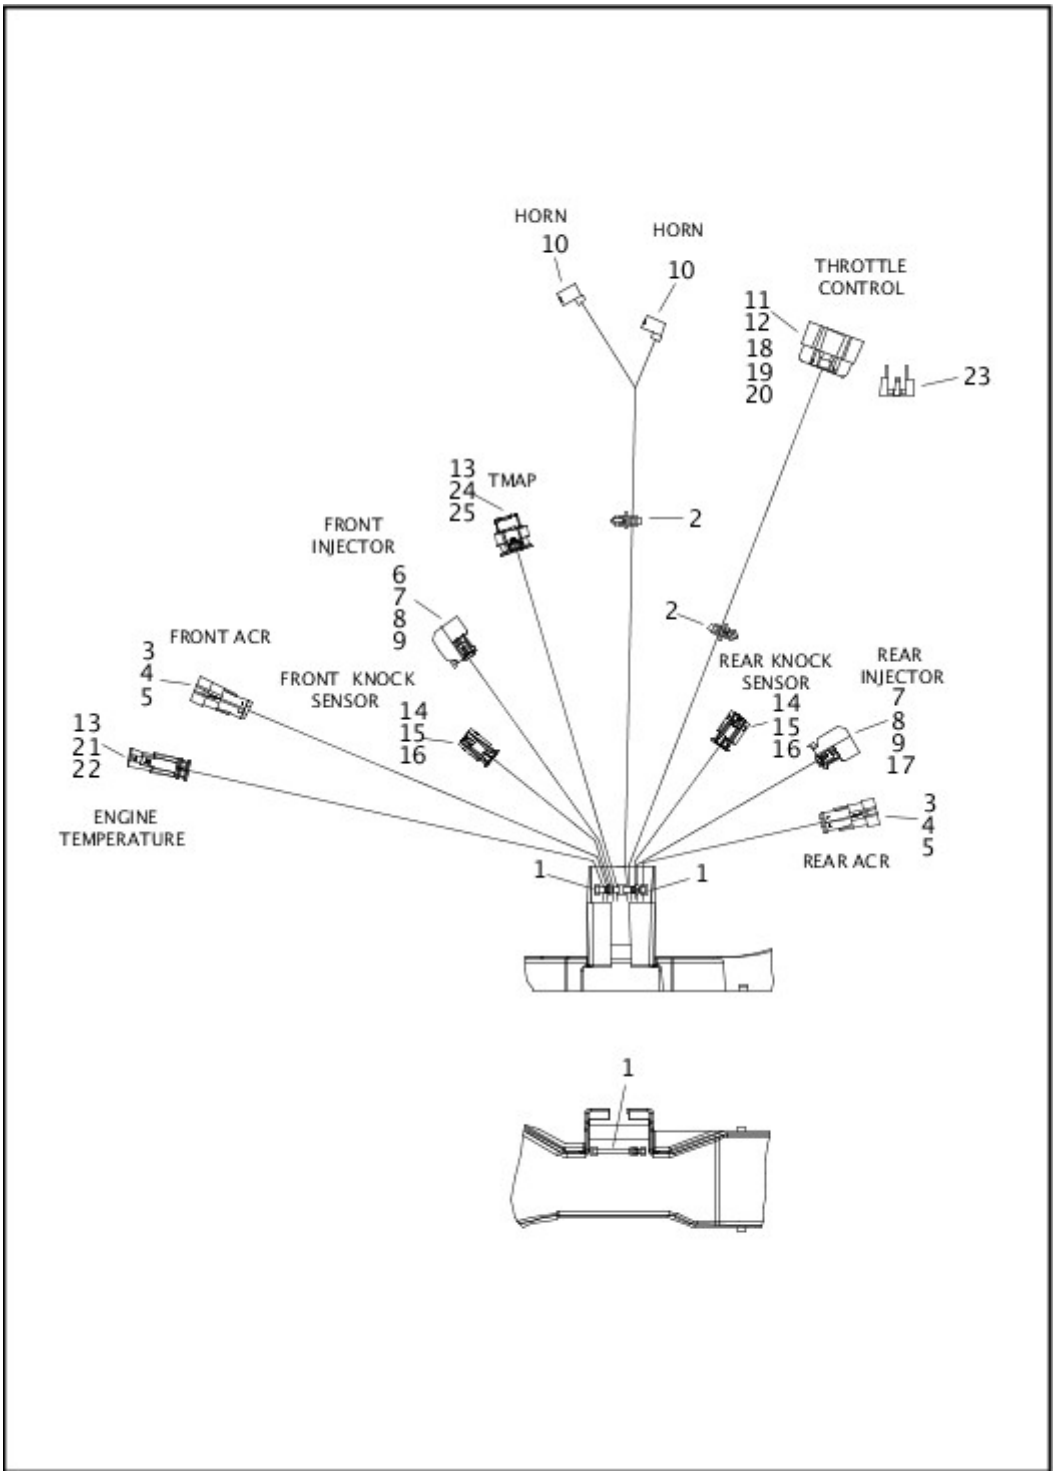

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201124A	MAIN WIRING HARNESS - ABS	FLTRX, FLTRXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLTRX, FLTRXS
2	10177	CABLE STRAP, anchored *(2)*	FLTRX, FLTRXS
3	72008-05	TERMINAL, pin, 20-22 AWG *(4)*	FLTRX, FLTRXS
4	72009-05	HOUSING, two-way pin (black) *(2)*	FLTRX, FLTRXS
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLTRX, FLTRXS
6	72098-06	HOUSING, two-way socket (gray)	FLTRX, FLTRXS
7	72099-06	WIRE SEAL, 16-18 AWG (blue) *(4)*	FLTRX, FLTRXS
8	72110-06	TERMINAL, socket, 16-18 AWG *(4)*	FLTRX, FLTRXS
9	72145-06	SECONDARY LOCK, two-way socket (blue) *(2)*	FLTRX, FLTRXS
10	72283-09	TERMINAL, socket, 14-16 AWG, 90 degree *(2)*	FLTRX, FLTRXS
11	72499-07	WIRE SEAL, 20-22 AWG (green) *(6)*	FLTRX, FLTRXS
12	72569-08	TERMINAL, socket, 20-22 AWG *(2)*	FLTRX, FLTRXS
13	69201301	WIRE SEAL, 20-22 AWG (green) *(6)*	FLTRX, FLTRXS
14	69201390	HOUSING, two-way socket (black) *(2)*	FLTRX, FLTRXS
15	69201391	TERMINAL, socket, 20 AWG *(4)*	FLTRX, FLTRXS
16	69201392	WIRE SEAL, 20 AWG (yellow) *(4)*	FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	69201393	HOUSING, two-way socket (black)	FLTRX, FLTRXS
18	69201394	HOUSING, six-way socket (black)	FLTRX, FLTRXS
19	69201395	SECONDARY LOCK, six-way socket	FLTRX, FLTRXS
20	69201396	TERMINAL, socket, 20 AWG *(4)*	FLTRX, FLTRXS
21	69201397	HOUSING, two-way pin (gray)	FLTRX, FLTRXS
22	69201398	TERMINAL, pin, 20 AWG *(2)*	FLTRX, FLTRXS
23	69201416	SECONDARY LOCK, six-way socket	FLTRX, FLTRXS
24	69201441	HOUSING, four-way socket	FLTRX, FLTRXS
25	69201442	TERMINAL, socket, 18 AWG *(4)*	FLTRX, FLTRXS

WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8)

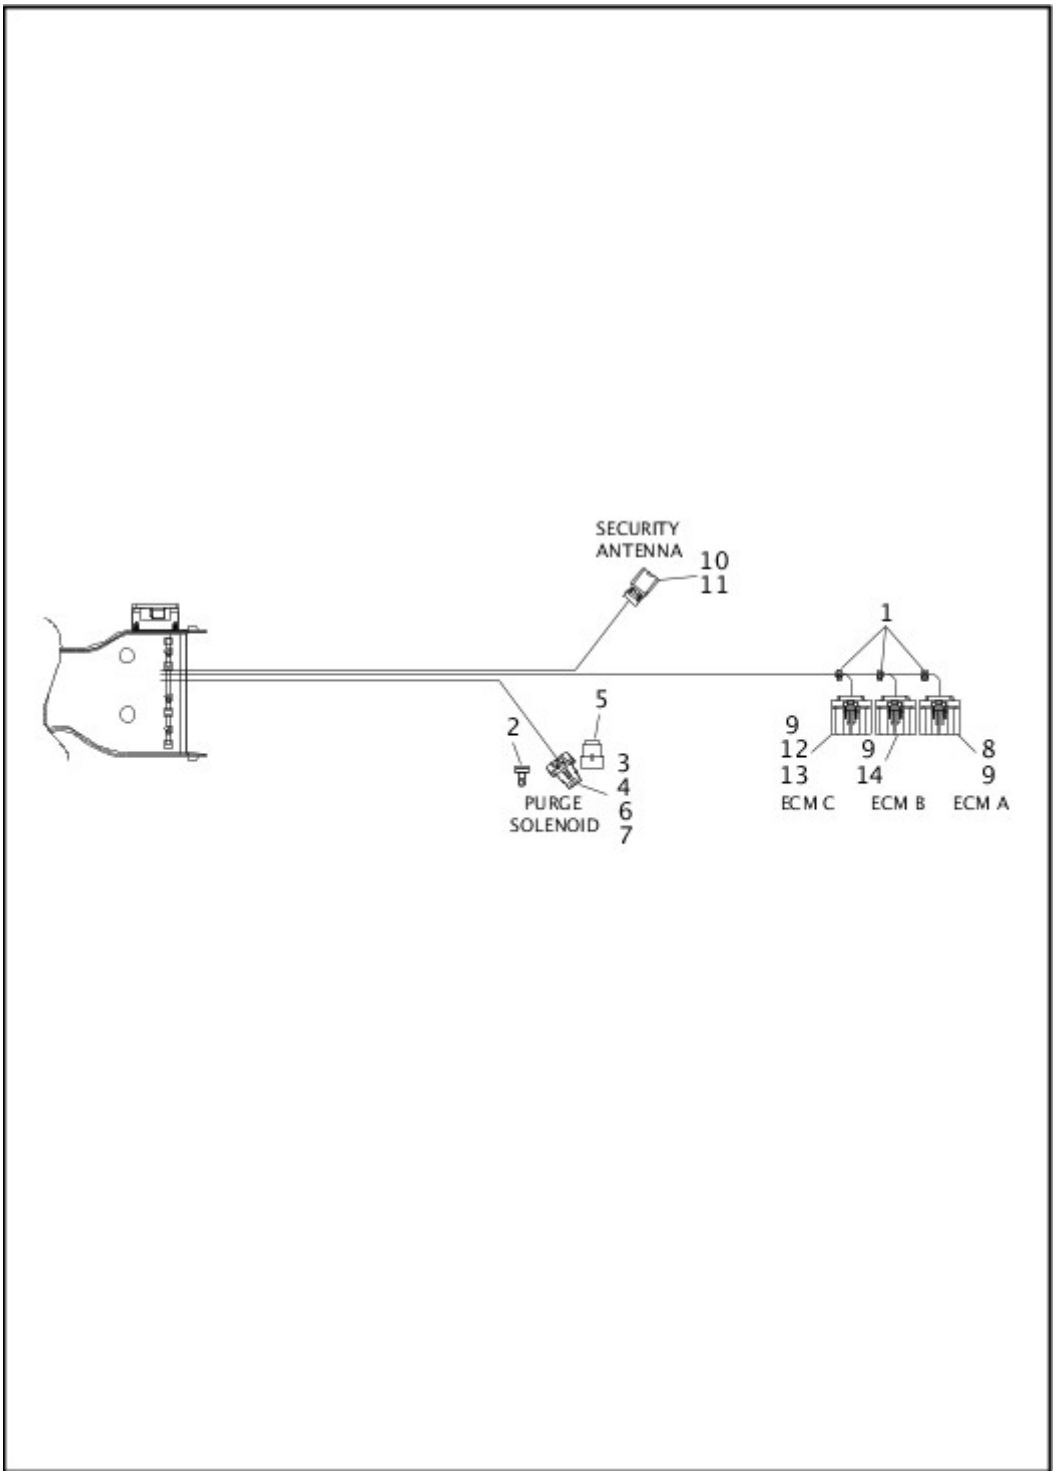


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201124A	MAIN WIRING HARNESS - ABS	FLTRX, FLTRXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLTRX, FLTRXS
2	10147	CLIP, connector	FLTRX, FLTRXS
3	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLTRX, FLTRXS
4	72518-01	HOUSING, two-way socket (red)	FLTRX, FLTRXS
5	72533-06	PLUG, weather, two-way pin	FLTRX, FLTRXS
6	72609-08	SECONDARY LOCK, two-way socket	FLTRX, FLTRXS
7	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLTRX, FLTRXS
8	72664-12A	HOUSING, 18-way socket (black)	FLTRX, FLTRXS
9	72666-12	TERMINAL, socket, 18-20 AWG *(43)*	FLTRX, FLTRXS
10	72720-07	HOUSING, two-way socket (black)	FLTRX, FLTRXS
11	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLTRX, FLTRXS
12	69201168	TERMINAL, socket, 22 AWG *(2)*	FLTRX, FLTRXS
13	69201415	HOUSING, 18-way socket (brown)	FLTRX, FLTRXS
14	69201440	HOUSING, 18-way socket (gray)	FLTRX, FLTRXS

WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8)

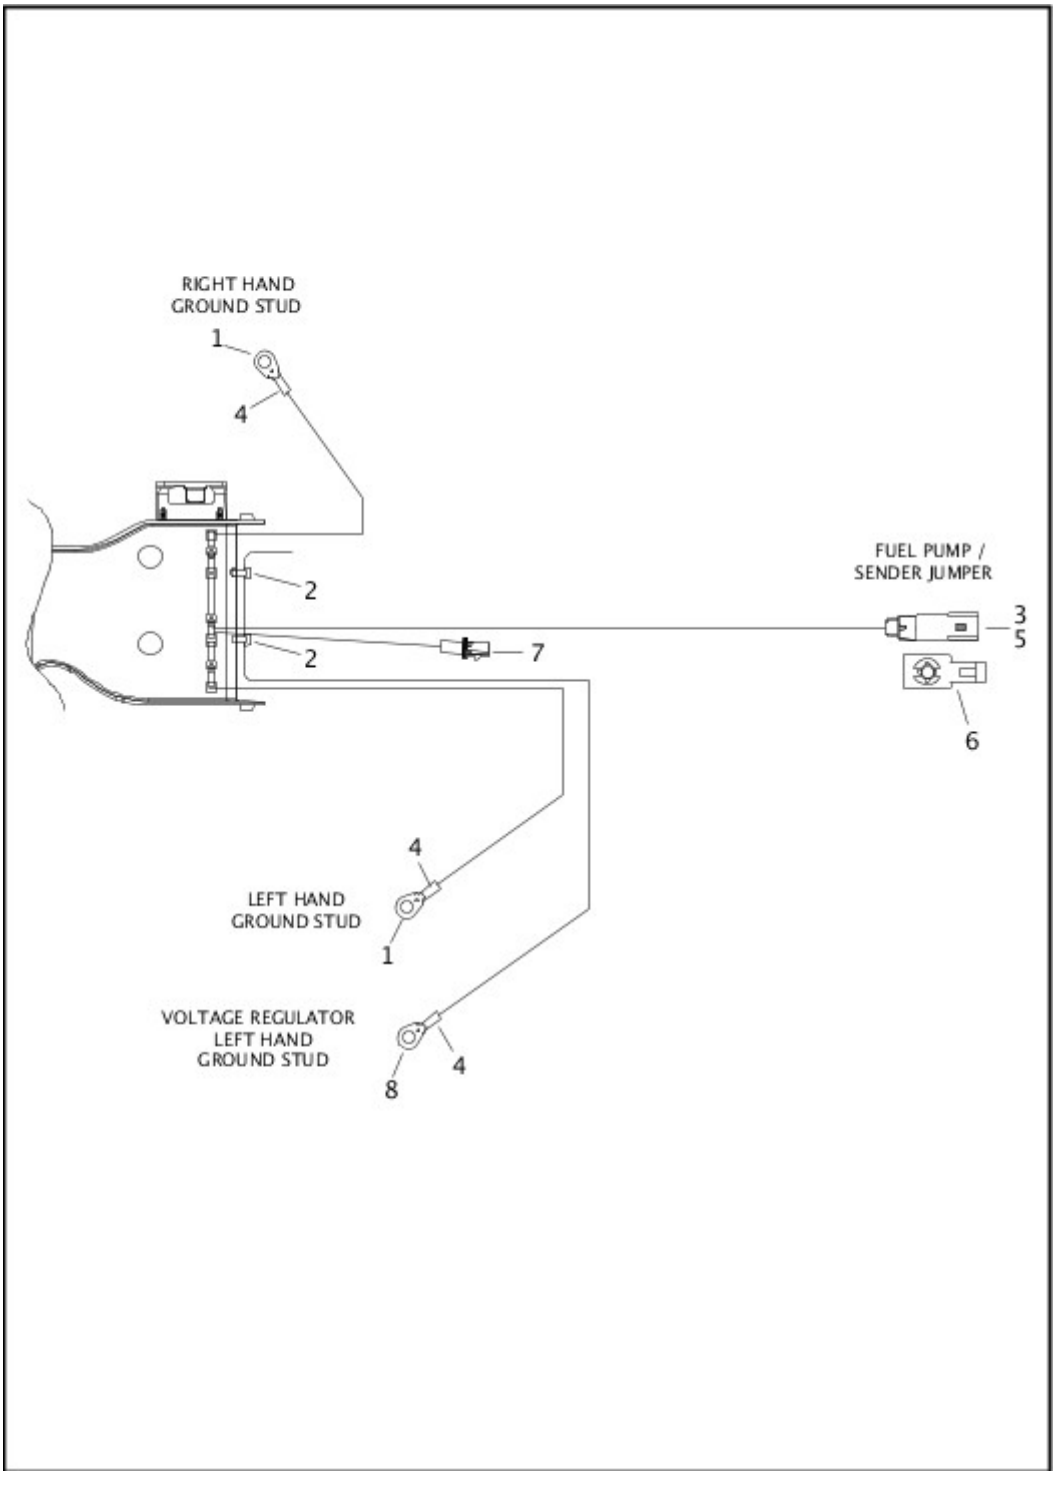


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201124A	MAIN WIRING HARNESS - ABS	FLTRX, FLTRXS
NOTE: Includes the following parts.			
1	9819	TERMINAL, ring, 12 AWG *(2)*	FLTRX, FLTRXS
2	10065	CABLE STRAP *(2)*	FLTRX, FLTRXS
3	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLTRX, FLTRXS
4	72249-94	HEAT SHRINK TUBE, .415 x 1 in (black)	FLTRX, FLTRXS
5	72415-07GY	HOUSING, four-way pin (gray) *(2)*	FLTRX, FLTRXS
6	73213-07	RETAINER, anchored	FLTRX, FLTRXS
7	69200629	WIRE HARNESS, AM/FM antenna	FLTRX, FLTRXS
8	69201596	TERMINAL, ring, 8-10 AWG	FLTRX, FLTRXS

WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8)

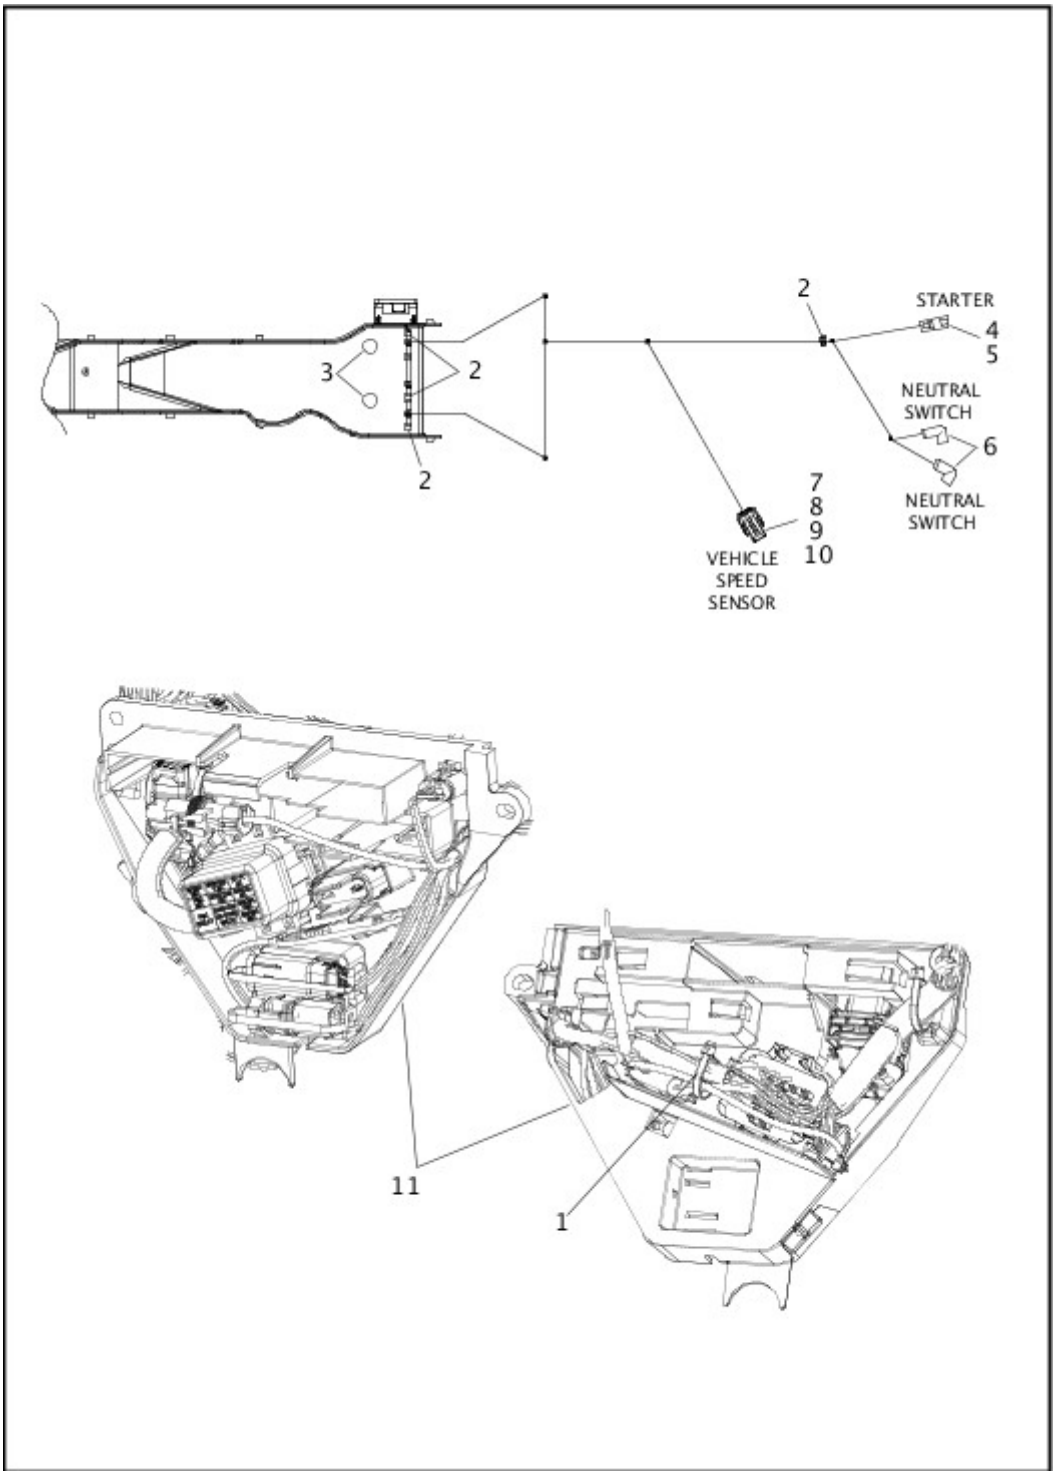


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201124A	MAIN WIRING HARNESS - ABS	FLTRX, FLTRXS
NOTE: Includes the following parts.			
1	10006	CABLE STRAP	FLTRX, FLTRXS
2	10065	CABLE STRAP *(4)*	FLTRX, FLTRXS
3	11779	FASTENER, push-in (black) *(2)*	FLTRX, FLTRXS
4	72291-94	TERMINAL, socket, 14-16 AWG	FLTRX, FLTRXS
5	72295-94	CONNECTOR, starter housing	FLTRX, FLTRXS
6	72405-98BK	WIRE ASSEMBLY, push-on, right angle molded, 65-1/2 in length *(2)*	FLTRX, FLTRXS
7	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLTRX, FLTRXS
8	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLTRX, FLTRXS
9	72543-07BK	HOUSING, three-way socket (black)	FLTRX, FLTRXS
10	72544-07	SECONDARY LOCK, three-way socket	FLTRX, FLTRXS
11	69200175	CADDY, fuse block, electrical panel	FLTRX, FLTRXS

WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8)

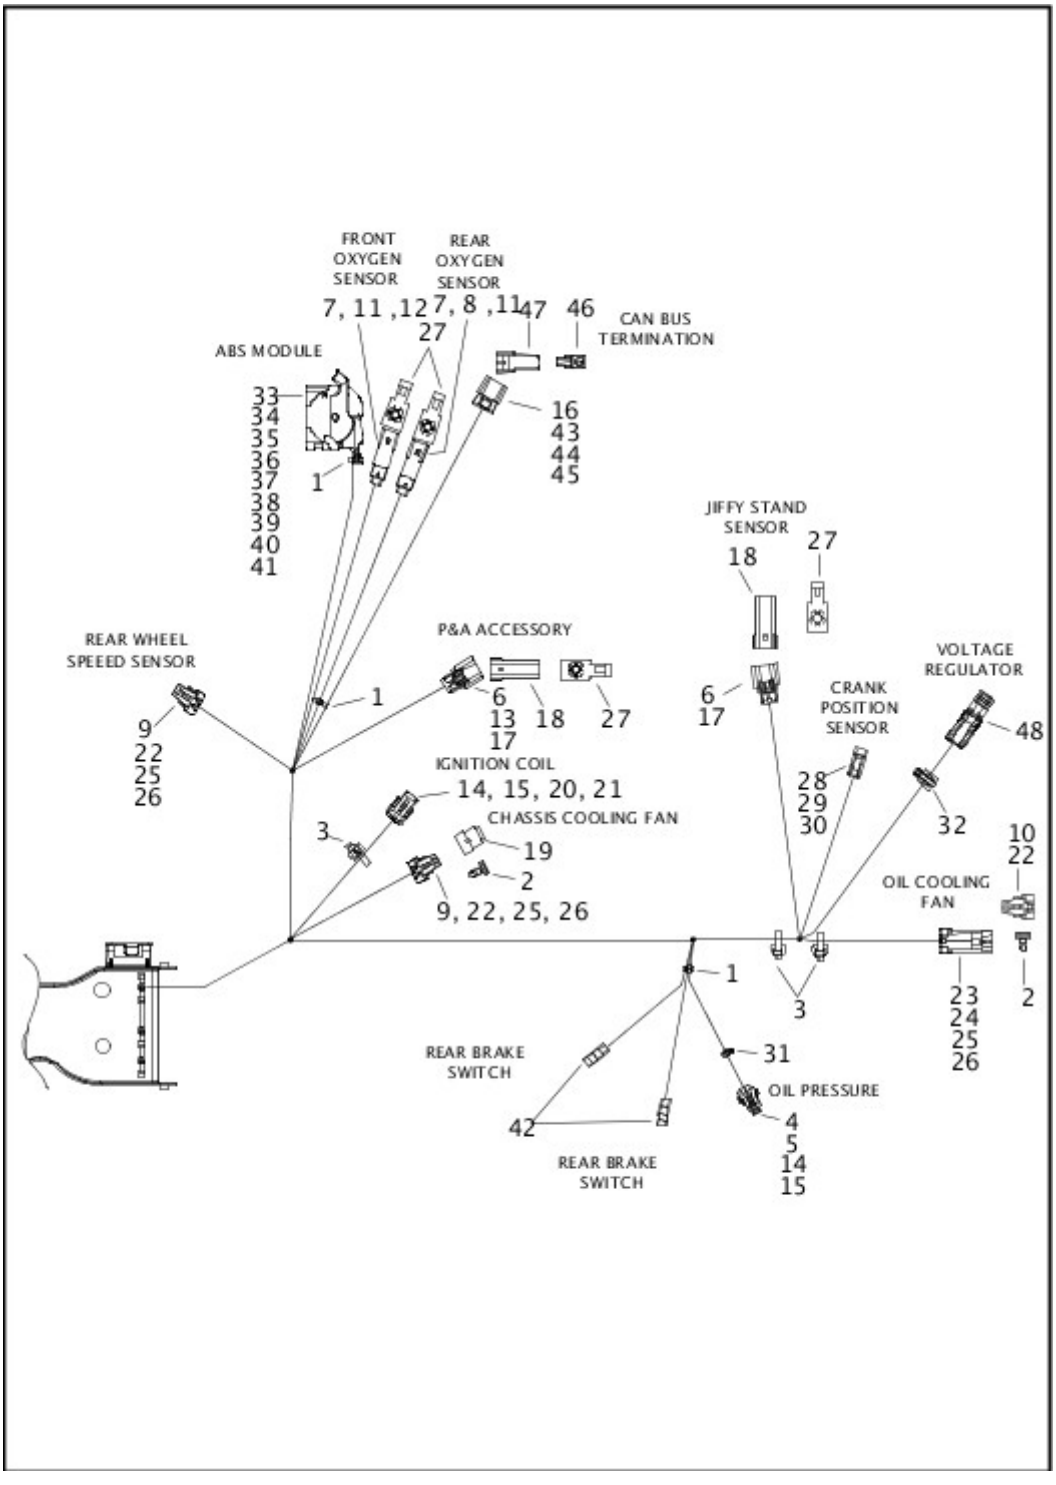

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201124A	MAIN WIRING HARNESS - ABS	FLTRX, FLTRXS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLTRX, FLTRXS
2	10147	CLIP, connector *(2)*	FLTRX, FLTRXS
3	10177	CABLE STRAP, anchored *(3)*	FLTRX, FLTRXS
4	72065-06A	HOUSING, three-way socket (black)	FLTRX, FLTRXS
5	72127-06	SECONDARY LOCK, three-way socket	FLTRX, FLTRXS
6	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLTRX, FLTRXS
7	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLTRX, FLTRXS
8	72175-07BK	HOUSING, four-way pin (black)	FLTRX, FLTRXS
9	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLTRX, FLTRXS
10	72232-96	SEAL PIN (red) *(2)*	FLTRX, FLTRXS
11	72343-10	TERMINAL, pin, 16-20 AWG *(4)*	FLTRX, FLTRXS
12	72415-07GY	HOUSING, four-way pin (gray)	FLTRX, FLTRXS
13	72473-07	SEAL PIN, natural	FLTRX, FLTRXS
14	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLTRX, FLTRXS
15	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLTRX, FLTRXS
16	72499-07	WIRE SEAL, 20-22 AWG (green) *(2)*	FLTRX, FLTRXS
17	72512-07BK	HOUSING, three-way socket (black) *(2)*	FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72519-09BK	PLUG, weather, three-way socket *(2)*	FLTRX, FLTRXS
19	72533-06	PLUG, weather, two-way pin	FLTRX, FLTRXS
20	72544-07	SECONDARY LOCK, three-way socket	FLTRX, FLTRXS
21	72589-09	HOUSING, three-way socket (black)	FLTRX, FLTRXS
22	72606-08	HOUSING, two-way socket (black) *(3)*	FLTRX, FLTRXS
23	72607-08	HOUSING, two-way pin (black)	FLTRX, FLTRXS
24	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	FLTRX, FLTRXS
25	72609-08	SECONDARY LOCK, two-way socket *(3)*	FLTRX, FLTRXS
26	72610-08	WIRE SEAL, 18-20 AWG (white) *(6)*	FLTRX, FLTRXS
27	73213-07	RETAINER, anchored *(4)*	FLTRX, FLTRXS
28	74112-98BK	HOUSING, two-way socket (black)	FLTRX, FLTRXS
29	74152-98	SECONDARY LOCK, two-way socket	FLTRX, FLTRXS
30	74191-98	TERMINAL, socket 16-20 AWG *(2)*	FLTRX, FLTRXS
31	12500014	CABLE STRAP	FLTRX, FLTRXS
32	12500018	CABLE STRAP	FLTRX, FLTRXS
33	69200183	HOUSING, 26-way socket	FLTRX, FLTRXS
34	69200184	COVER, wire	FLTRX, FLTRXS
35	69200185	TERMINAL, socket, 20 AWG *(6)*	FLTRX, FLTRXS
36	69200186	TERMINAL, socket, 14-16 AWG *(2)*	FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	69200187	TERMINAL, socket, 12 AWG *(2)*	FLTRX, FLTRXS
38	69200188	WIRE SEAL, 20 AWG *(6)*	FLTRX, FLTRXS
39	69200189	WIRE SEAL, 14-16 AWG *(2)*	FLTRX, FLTRXS
40	69200190	WIRE SEAL, 12 AWG *(2)*	FLTRX, FLTRXS
41	69200191	SEAL PIN *(16)*	FLTRX, FLTRXS
42	69200238	TERMINAL, socket, 20 AWG *(2)*	FLTRX, FLTRXS
43	69201396	TERMINAL, socket, 20 AWG *(2)*	FLTRX, FLTRXS
44	69201400	HOUSING, two-way socket, black)	FLTRX, FLTRXS
45	69201401	SECONDARY LOCK, two-way socket	FLTRX, FLTRXS
46	69201404	RETAINER, anchored	FLTRX, FLTRXS
47	69201405	RESISTOR PACK	FLTRX, FLTRXS
48	69201423	DC LEAD ASSEMBLY, two-way socket	FLTRX, FLTRXS

WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8)

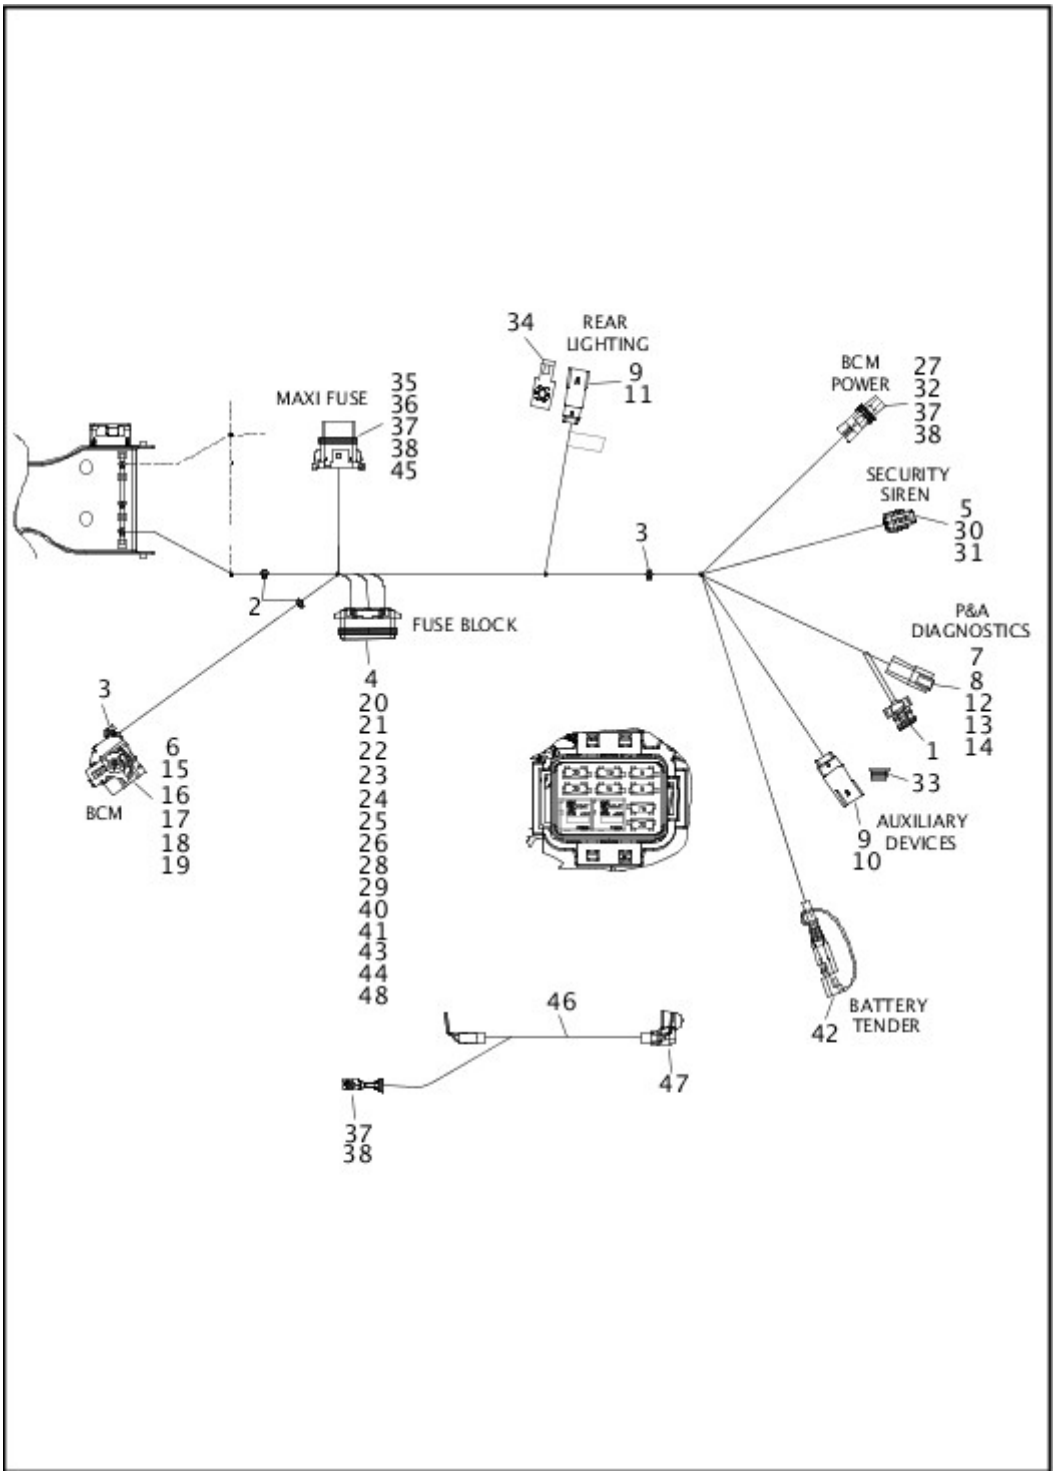

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201124A	MAIN WIRING HARNESS - ABS	FLTRX, FLTRXS
NOTE: Includes the following parts.			
1	6990	PLUG, weather, six-way pin	FLTRX, FLTRXS
2	10006	CABLE STRAP *(2)*	FLTRX, FLTRXS
3	10065	CABLE STRAP *(2)*	FLTRX, FLTRXS
4	31586-07	RELAY *(2)*	FLTRX, FLTRXS
5	72064-06	HOUSING, three-way socket (black)	FLTRX, FLTRXS
6	72081-11	HOUSING, 48-way socket (black)	FLTRX, FLTRXS
7	72106-94BK	HOUSING, six-way pin (black) (replaces gray connector)	FLTRX, FLTRXS
8	72146-94	SECONDARY LOCK, six-way pin	FLTRX, FLTRXS
9	72169-07	TERMINAL, pin, 16-20 AWG *(10)*	FLTRX, FLTRXS
10	72175-07BK	HOUSING, four-way pin (black)	FLTRX, FLTRXS
11	72188-07BK	HOUSING, six-way pin (black)	FLTRX, FLTRXS
12	72190-94	TERMINAL, pin, 16-18 AWG *(2)*	FLTRX, FLTRXS
13	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLTRX, FLTRXS
14	72195-94	SEAL PIN	FLTRX, FLTRXS
15	72209-11	COVER, wire	FLTRX, FLTRXS
16	72222-11	TERMINAL, socket, 18-20 AWG *(21)*	FLTRX, FLTRXS
17	72226-11	TERMINAL, socket, 14-16 AWG	FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLTRX, FLTRXS
19	72256-11	SEAL PIN, 0.6 mm (white) *(9)*	FLTRX, FLTRXS
20	72296-95	TERMINAL, socket, 14-16 AWG *(3)*	FLTRX, FLTRXS
21	72298-95	WIRE SEAL, 14-18 AWG (green) *(3)*	FLTRX, FLTRXS
22	72299-95	SEAL PIN, green *(2)*	FLTRX, FLTRXS
23	72308-97	TERMINAL, socket, 12-14 AWG *(5)*	FLTRX, FLTRXS
24	72330-95	FUSE, 15 A (blue)	FLTRX, FLTRXS
25	72331-95	FUSE, 5 A (tan) *(2)*	FLTRX, FLTRXS
26	72345-02	FUSE, 20 A (yellow) *(3)*	FLTRX, FLTRXS
27	72350-11	HOUSING, one-way socket (black)	FLTRX, FLTRXS
28	72356-95	TERMINAL, socket, 18-20 AWG *(14)*	FLTRX, FLTRXS
29	72412-97	WIRE SEAL, 12-14 AWG (gray) *(5)*	FLTRX, FLTRXS
30	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLTRX, FLTRXS
31	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLTRX, FLTRXS
32	72575-11	SECONDARY LOCK, one-way socket	FLTRX, FLTRXS
33	72632-10	PLUG, weather, four-way pin	FLTRX, FLTRXS
34	73213-07	RETAINER, anchored	FLTRX, FLTRXS
35	73301-04	HOUSING, two-way pin (black)	FLTRX, FLTRXS
36	73303-04	SECONDARY LOCK, two-way socket	FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	73304-04	TERMINAL, socket, 10 AWG *(3)*	FLTRX, FLTRXS
38	73305-04	WIRE SEAL, 10 AWG (blue) *(3)*	FLTRX, FLTRXS
39	11100115	CLOTH, HARNESS WRAP, 50 m (not shown)	FLTRX, FLTRXS
40	69200194	FUSE BLOCK, 24-way	FLTRX, FLTRXS
41	69200199	WIRE SEAL, 18-20 AWG (purple) *(14)*	FLTRX, FLTRXS
42	69200212	HARNESS, battery tender	FLTRX, FLTRXS
43	69200293	FUSE, 7.5 A (brown) *(2)*	FLTRX, FLTRXS
44	69200312	SECONDARY LOCK, fuse block *(3)*	FLTRX, FLTRXS
45	69200336	MAIN FUSE, 50 A (red), NOTE: Fuse is sold separately and is not part of main harness	FLTRX, FLTRXS
46	69201130	WIRE HARNESS, battery positive to starter, with 73304-04, 73305-04 and 69201307	FLTRX, FLTRXS
47	69201307	BOOT, battery positive	FLTRX, FLTRXS
48	69201411	COVER, fuse block	FLTRX, FLTRXS

WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8)

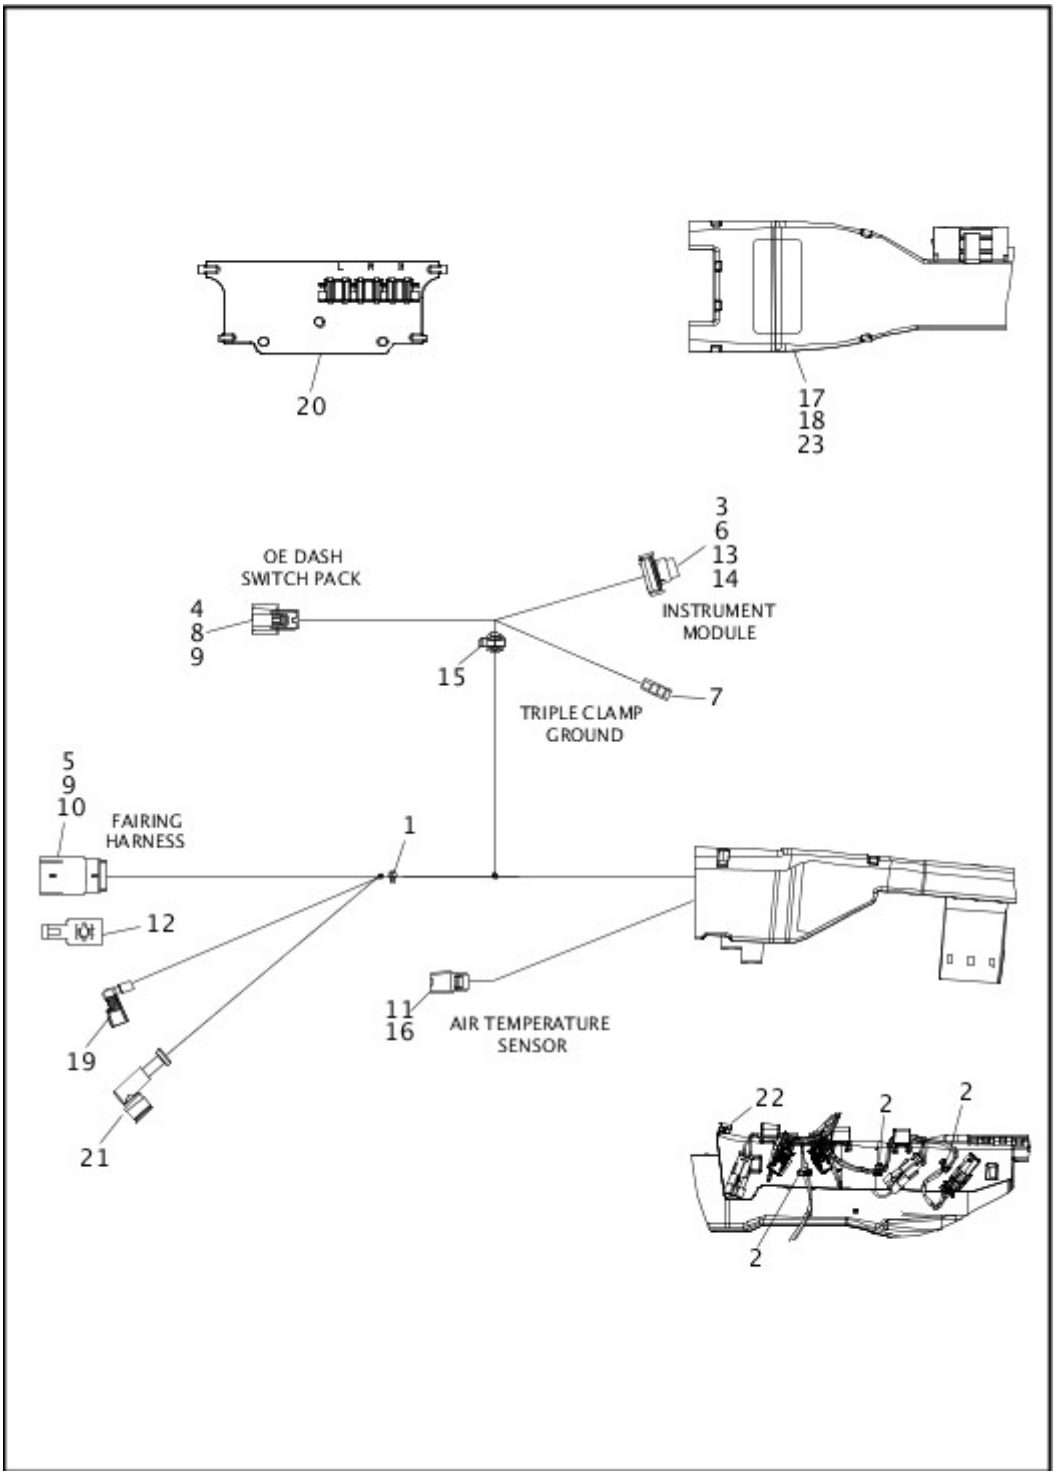

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201123A	MAIN WIRING HARNESS - ABS	FLTRU
NOTE: Includes the following parts.			
1	10006	CABLE STRAP	FLTRU
2	10065	CABLE STRAP *(3)*	FLTRU
3	72130-04	HOUSING, 12-way socket (black)	FLTRU
4	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLTRU
5	72169-07	TERMINAL, pin, 16-20 AWG *(8)*	FLTRU
6	72189-04	SEAL PIN *(6)*	FLTRU
7	72364-06	TERMINAL, socket, 10-14 AWG	FLTRU
8	72414-07BK	HOUSING, six-way socket (black)	FLTRU
9	72473-07	SEAL PIN, natural *(5)*	FLTRU
10	72490-07GY	HOUSING, 12-way pin (gray)	FLTRU
11	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLTRU
12	73213-07	RETAINER, anchored	FLTRU
13	74196-04	TERMINAL, socket, 20 AWG *(6)*	FLTRU
14	74197-04	SECONDARY LOCK, 12-way socket	FLTRU
15	12500002	CABLE STRAP	FLTRU
16	69200201	HOUSING, two-way socket (black)	FLTRU
17	69200202A	WIRE TROUGH	FLTRU
18	69200203A	COVER, wire trough, with 15368-01A and 69201459	FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	69201017	WIRE HARNESS, AM/FM antenna	FLTRU
20	69200700	CADDY	FLTRU
21	69201018A	WIRE HARNESS, CB antenna	FLTRU
22	69201287	BRACKET, mounting, electrical connector	FLTRU
23	69201459	BRACKET	FLTRU

WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)

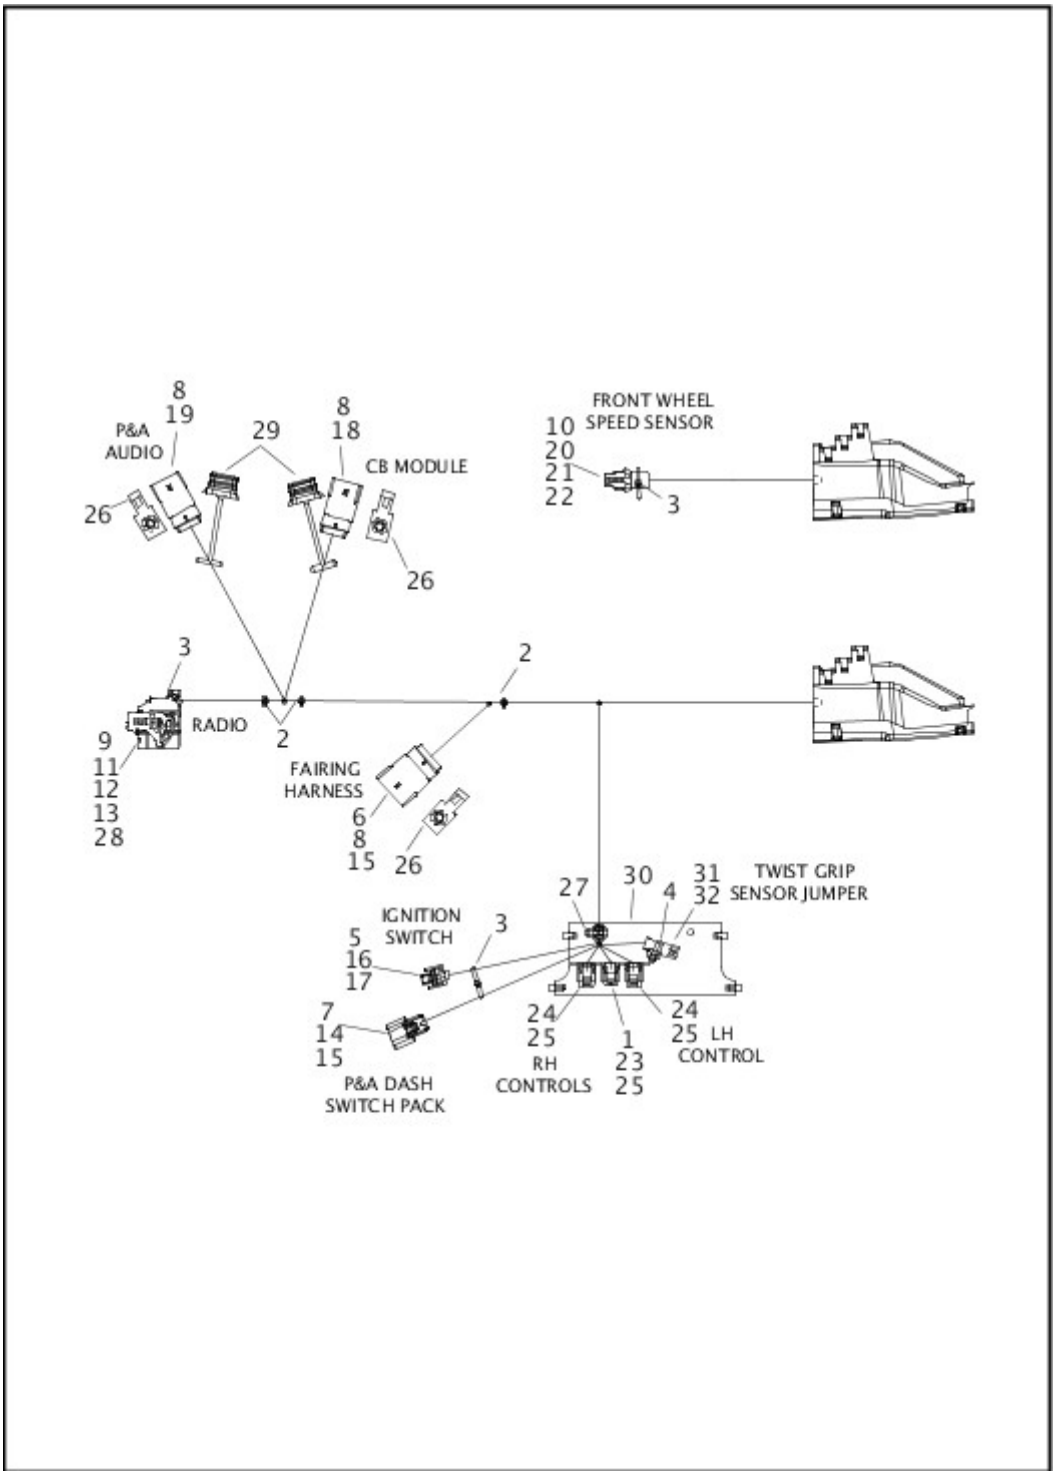

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201123A	MAIN WIRING HARNESS - ABS	FLTRU
NOTE: Includes the following parts.			
1	5118	SEAL PIN	FLTRU
2	10006	CABLE STRAP *(3)*	FLTRU
3	10065	CABLE STRAP *(3)*	FLTRU
4	10177	CABLE STRAP, anchored	FLTRU
5	72062-06	HOUSING, two-way socket (gray)	FLTRU
6	72167-07BK	HOUSING, 16-way pin (black)	FLTRU
7	72168-07	TERMINAL, socket, 18-20 AWG *(4)*	FLTRU
8	72169-07	TERMINAL, pin, 16-20 AWG *(36)*	FLTRU
9	72209-11	COVER, wire	FLTRU
10	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLTRU
11	72222-11	TERMINAL, socket, 18-20 AWG *(27)*	FLTRU
12	72226-11	TERMINAL, socket, 14-16 AWG *(8)*	FLTRU
13	72256-11	SEAL PIN, 0.6 mm (white) *(13)*	FLTRU
14	72414-07BK	HOUSING, six-way socket (black)	FLTRU
15	72473-07	SEAL PIN, natural *(6)*	FLTRU
16	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLTRU
17	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLTRU
18	72488-07BK	HOUSING, 12-way pin (black)	FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	72490-07GY	HOUSING, 12-way pin (gray)	FLTRU
20	72606-08	HOUSING, two-way socket (black)	FLTRU
21	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLTRU
22	72639-10	SECONDARY LOCK, two-way socket	FLTRU
23	72905-11	HOUSING, two-way pin (black)	FLTRU
24	72907-11	HOUSING, four-way pin (black) *(2)*	FLTRU
25	72909-11	TERMINAL, pin, 20-22 AWG *(9)*	FLTRU
26	73213-07	RETAINER, anchored *(3)*	FLTRU
27	12500002	CABLE STRAP	FLTRU
28	69200193	HOUSING, 48-way socket (black)	FLTRU
29	69200205	PLUG, weather, 12-way pin *(2)*	FLTRU
30	69200700	CADDY	FLTRU
31	69201163	HOUSING, six-way pin (black)	FLTRU
32	69201164	TERMINAL, pin, 22 AWG *(6)*	FLTRU

WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)

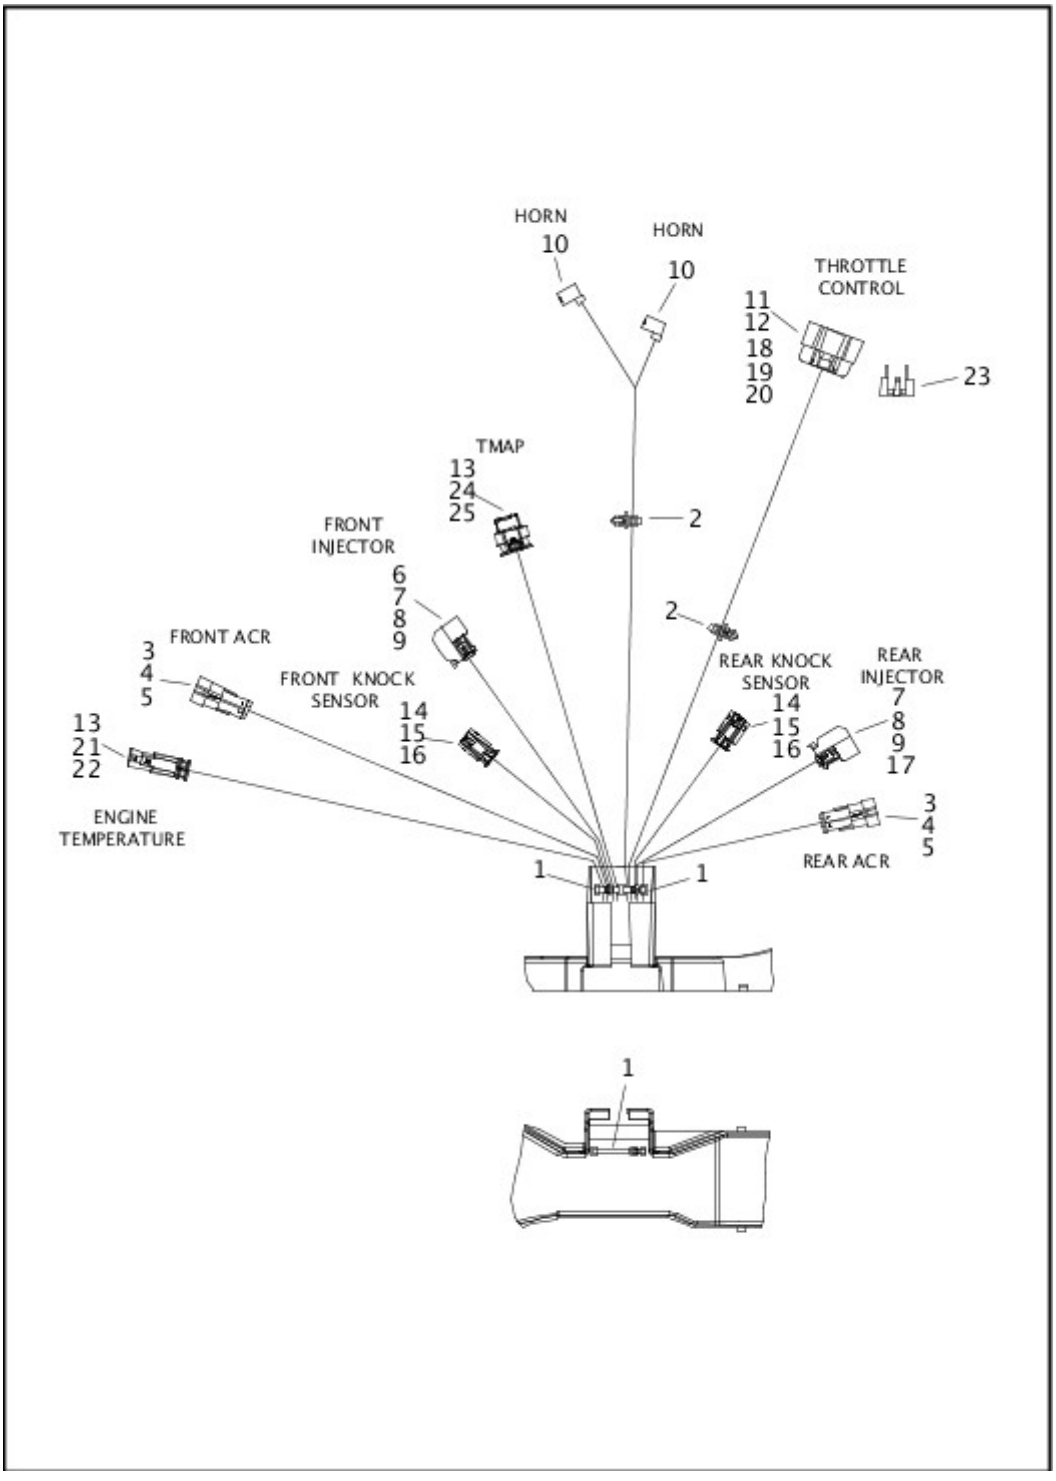

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201123A	MAIN WIRING HARNESS - ABS	FLTRU
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLTRU
2	10177	CABLE STRAP, anchored *(2)*	FLTRU
3	72008-05	TERMINAL, socket, 20-22 AWG *(4)*	FLTRU
4	72009-05	HOUSING, two-way pin (black) *(2)*	FLTRU
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLTRU
6	72098-06	HOUSING, two-way socket (gray)	FLTRU
7	72099-06	WIRE SEAL, 16-18 AWG (blue) *(4)*	FLTRU
8	72110-06	TERMINAL, socket, 16-18 AWG *(4)*	FLTRU
9	72145-06	SECONDARY LOCK, two-way socket *(2)*	FLTRU
10	72283-09	TERMINAL, socket, 14-16 AWG, 90 degree *(2)*	FLTRU
11	72499-07	WIRE SEAL, 20-22 AWG (green) *(6)*	FLTRU
12	72569-08	TERMINAL, socket, 20-22 AWG *(2)*	FLTRU
13	69201301	WIRE SEAL, 20-22 AWG (green) *(6)*	FLTRU
14	69201390	HOUSING, two-way socket (black) *(2)*	FLTRU
15	69201391	TERMINAL, socket, 20 AWG *(4)*	FLTRU
16	69201392	WIRE SEAL, 20 AWG (yellow) *(4)*	FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	69201393	HOUSING, two-way socket (black)	FLTRU
18	69201394	HOUSING, six-way socket (black)	FLTRU
19	69201395	SECONDARY LOCK, six-way socket	FLTRU
20	69201396	TERMINAL, socket, 20 AWG *(4)*	FLTRU
21	69201397	HOUSING, two-way pin (gray)	FLTRU
22	69201398	TERMINAL, pin, 20 AWG *(2)*	FLTRU
23	69201416	SECONDARY LOCK, six-way socket	FLTRU
24	69201441	HOUSING, four-way socket	FLTRU
25	69201442	TERMINAL, socket, 18 AWG *(4)*	FLTRU

WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)

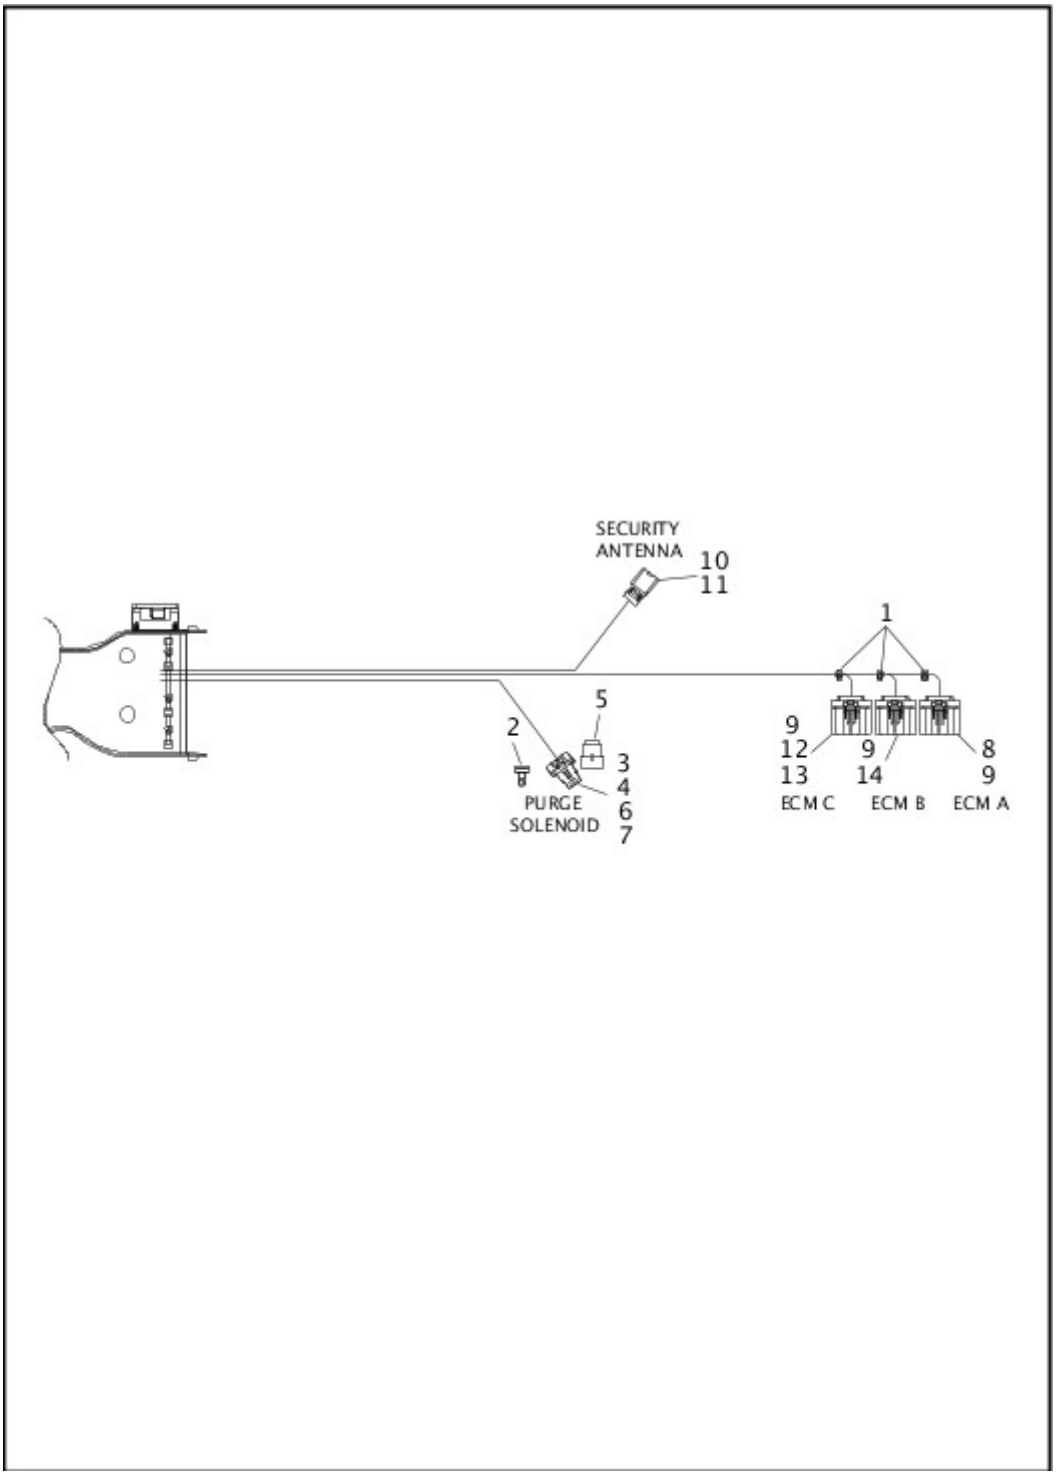


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201123A	MAIN WIRING HARNESS - ABS	FLTRU
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLTRU
2	10147	CLIP, connector	FLTRU
3	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLTRU
4	72518-01	HOUSING, two-way socket (red)	FLTRU
5	72533-06	PLUG, weather, two-way pin	FLTRU
6	72609-08	SECONDARY LOCK, two-way socket	FLTRU
7	72610-08	WIRE SEAL, 18-20 AWG (white) *(2)*	FLTRU
8	72664-12A	HOUSING, 18-way socket (black)	FLTRU
9	72666-12	TERMINAL, socket, 18-20 AWG *(46)*	FLTRU
10	72720-07	HOUSING, two-way socket (black)	FLTRU
11	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLTRU
12	69201168	TERMINAL, socket, 22 AWG *(2)*	FLTRU
13	69201410	HOUSING, 18-way socket (brown)	FLTRU
14	69201414	HOUSING, 18-way socket (gray)	FLTRU

WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8)

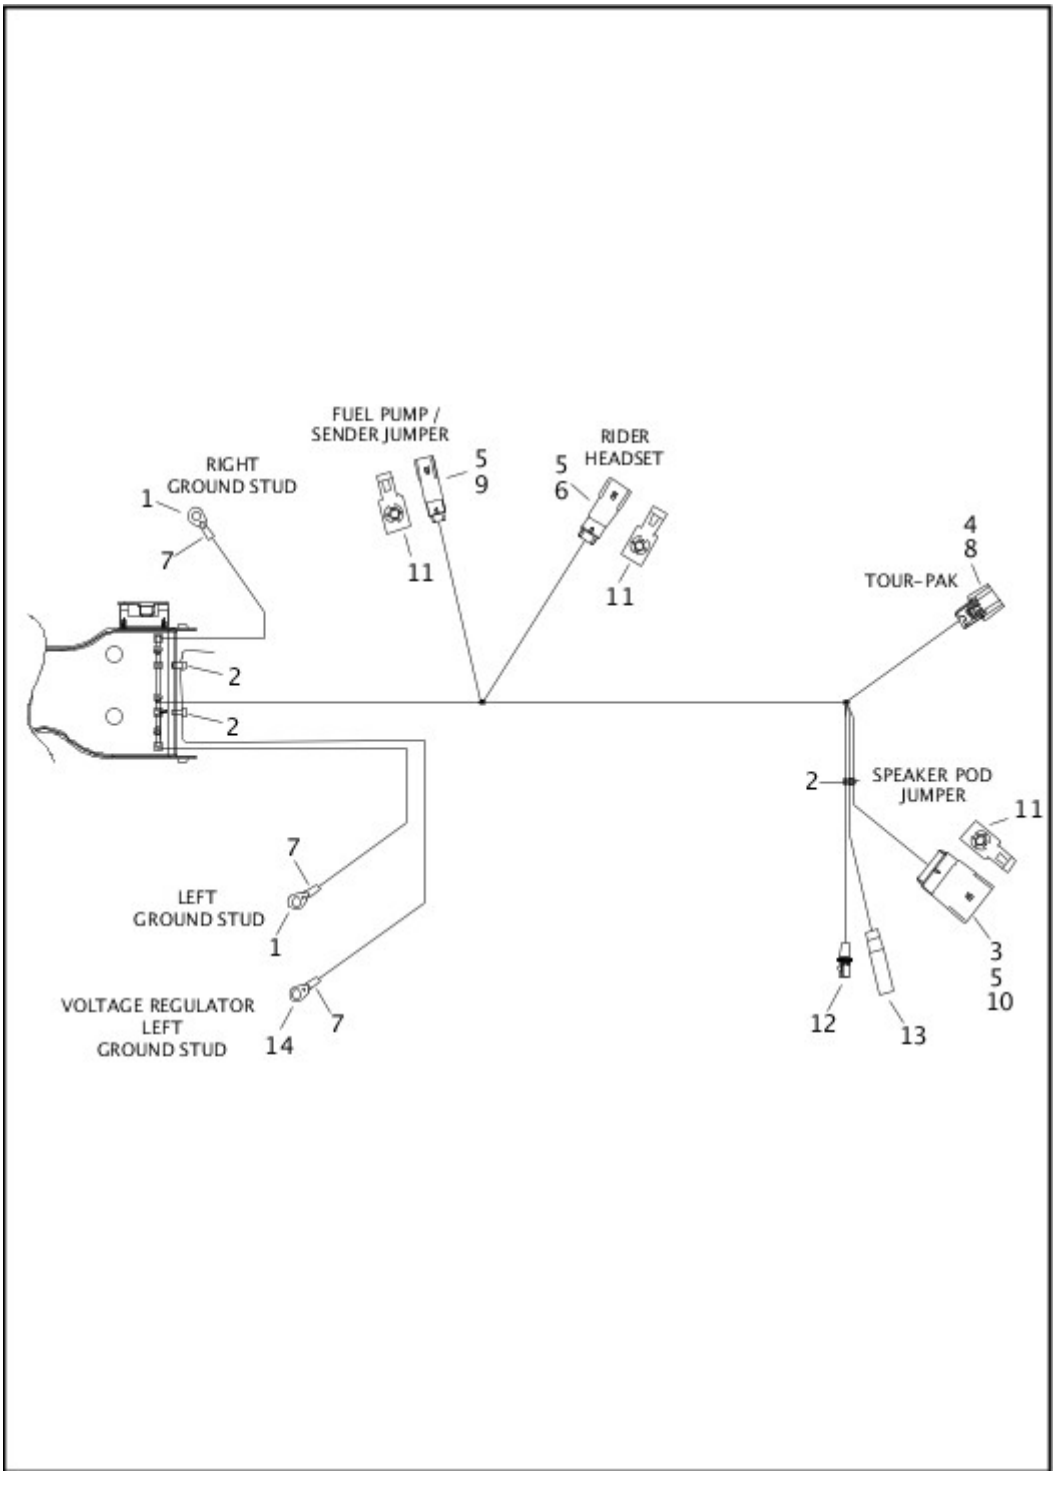


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201123A	MAIN WIRING HARNESS - ABS	FLTRU
NOTE: Includes the following parts.			
1	9819	TERMINAL, ring, 12 AWG *(2)*	FLTRU
2	10065	CABLE STRAP *(3)*	FLTRU
3	72167-07BK	HOUSING, 16-way pin (black)	FLTRU
4	72168-07	TERMINAL, socket, 18-20 AWG *(6)*	FLTRU
5	72169-07	TERMINAL, pin, 16-20 AWG *(23)*	FLTRU
6	72188-07BK	HOUSING, six-way pin (black)	FLTRU
7	72249-94	HEAT SHRINK TUBE, .415 x 1 in (black)	FLTRU
8	72414-07BK	HOUSING, six-way socket (black)	FLTRU
9	72415-07GY	HOUSING, four-way pin (gray)	FLTRU
10	72473-07	SEAL PIN, natural *(3)*	FLTRU
11	73213-07	RETAINER, anchored *(3)*	FLTRU
12	69201017	WIRE HARNESS, AM/FM antenna	FLTRU
13	69201018A	WIRE HARNESS, CB antenna	FLTRU
14	69201596	TERMINAL, ring, 8-10 AWG *(3)*	FLTRU

WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8)

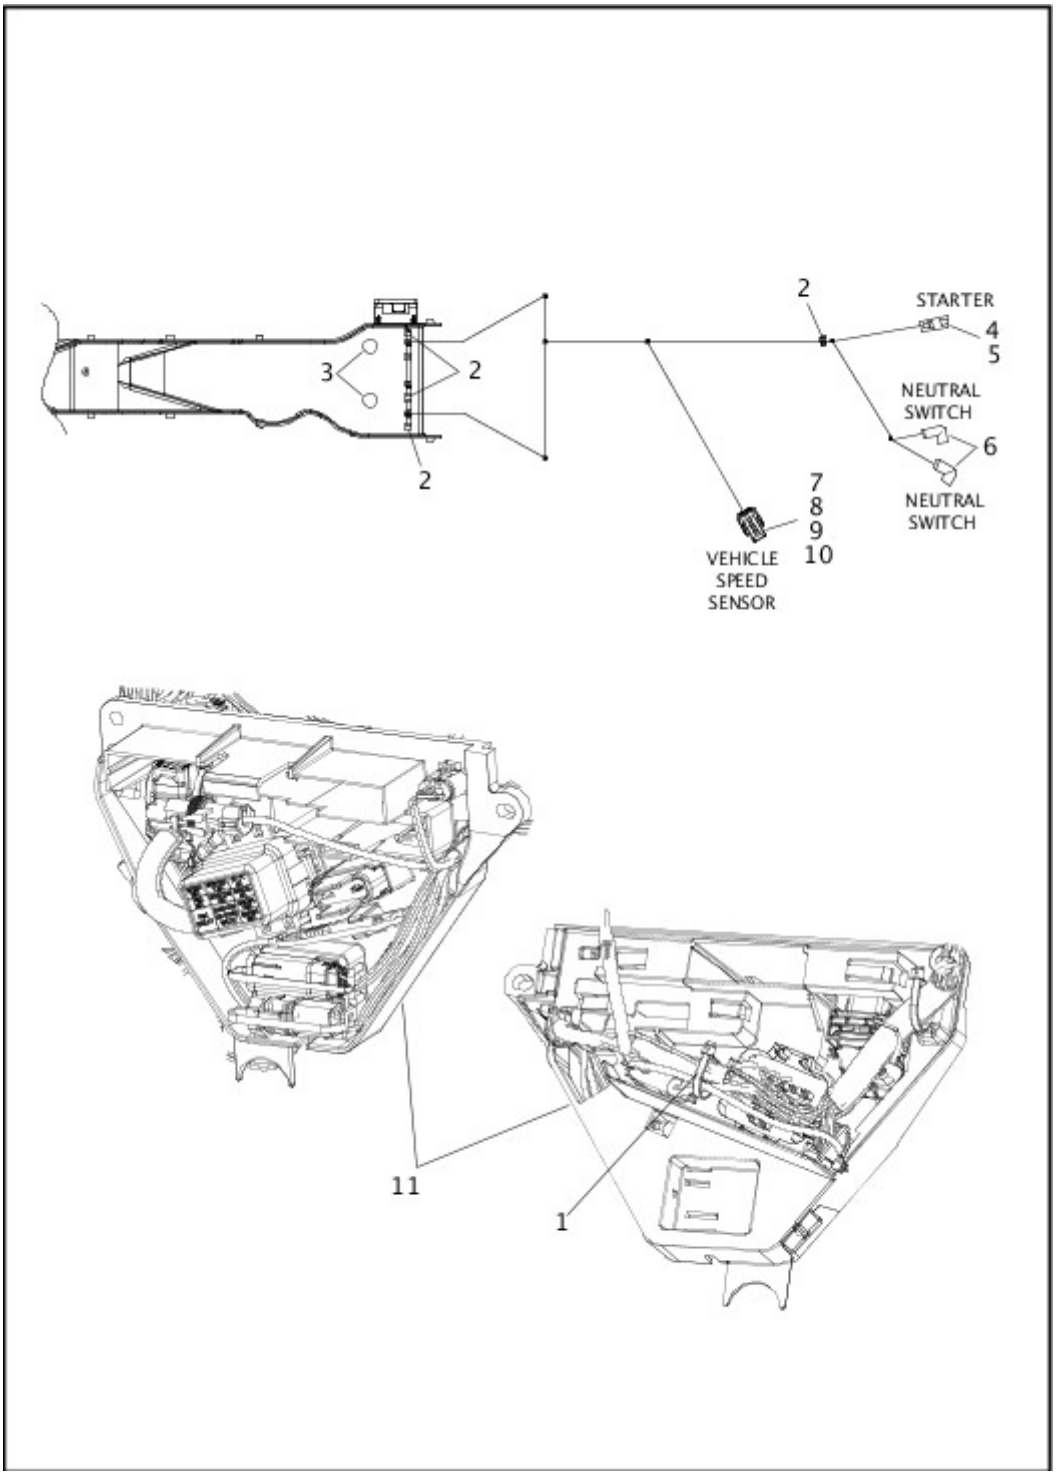


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201123A	MAIN WIRING HARNESS - ABS	FLTRU
NOTE: Includes the following parts.			
1	10006	CABLE STRAP	FLTRU
2	10065	CABLE STRAP *(4)*	FLTRU
3	11779	FASTENER, push-in (black) *(2)*	FLTRU
4	72291-94	TERMINAL, socket, 14-16 AWG	FLTRU
5	72295-94	CONNECTOR, starter housing	FLTRU
6	72405-98BK	WIRE ASSEMBLY, push-on, right angle molded, 65-1/2 in length (black) *(2)*	FLTRU
7	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLTRU
8	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLTRU
9	72543-07BK	HOUSING, three-way socket (black)	FLTRU
10	72544-07	SECONDARY LOCK, three-way socket	FLTRU
11	69200175	CADDY, fuse block, electrical panel	FLTRU

WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)

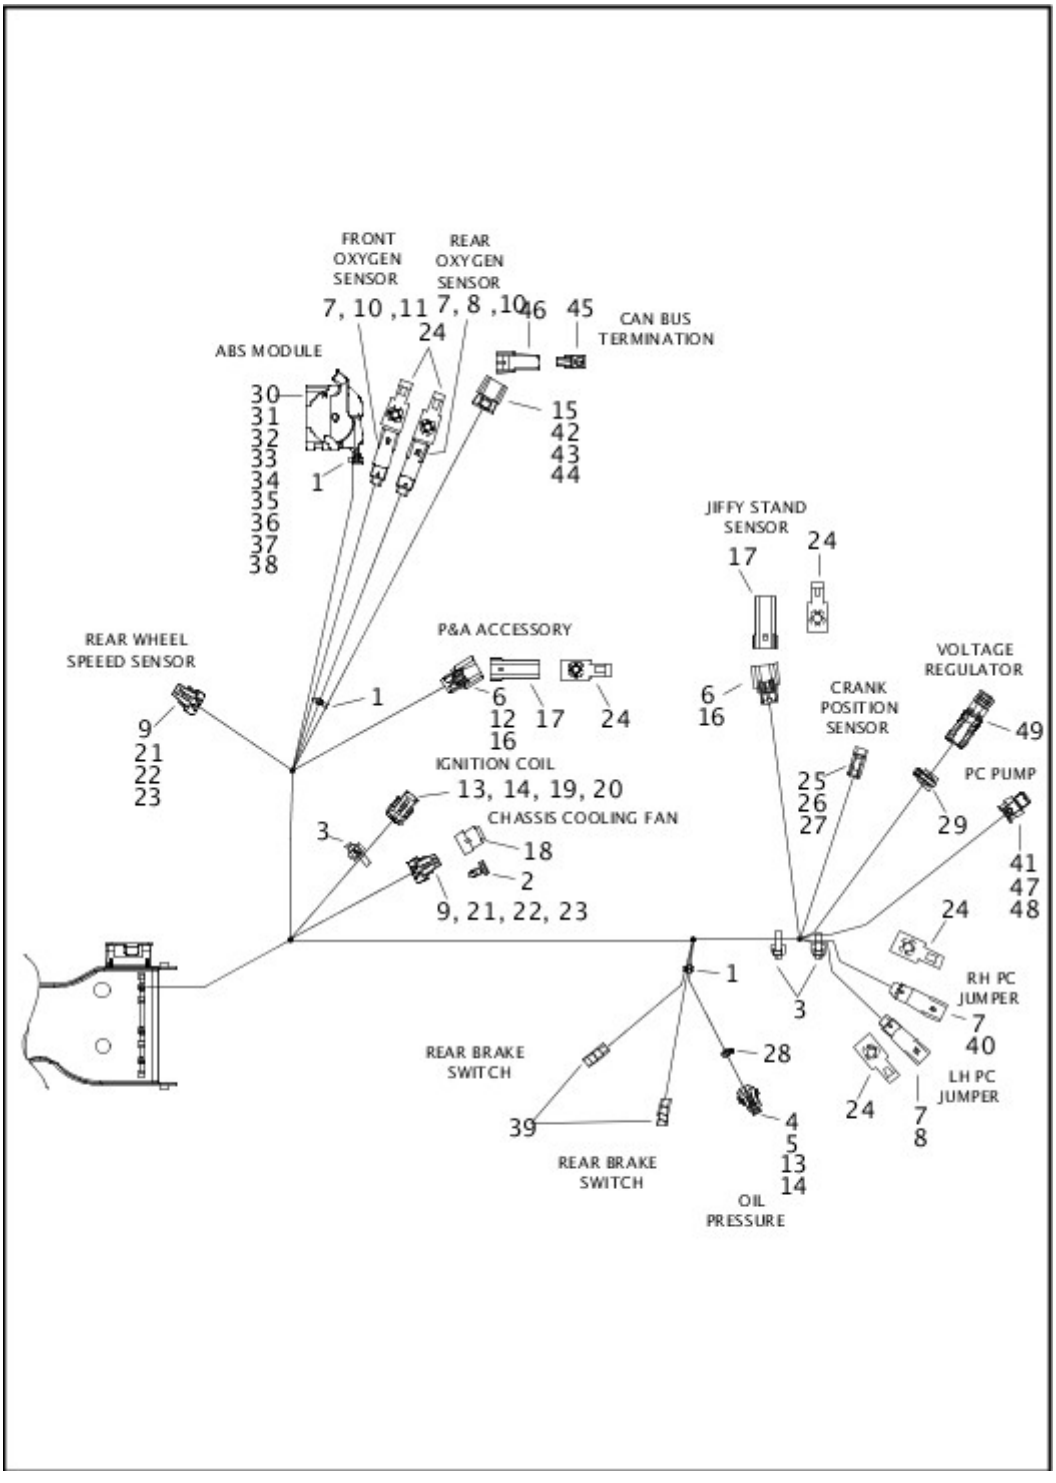

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201123A	MAIN WIRING HARNESS - ABS	FLTRU
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(3)*	FLTRU
2	10147	CLIP, connector	FLTRU
3	10177	CABLE STRAP, anchored *(3)*	FLTRU
4	72065-06A	HOUSING, three-way socket (black)	FLTRU
5	72127-06	SECONDARY LOCK, three-way socket	FLTRU
6	72168-07	TERMINAL, socket, 18-20 AWG *(5)*	FLTRU
7	72169-07	TERMINAL, pin, 16-20 AWG *(10)*	FLTRU
8	72175-07BK	HOUSING, four-way pin (black) *(2)*	FLTRU
9	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLTRU
10	72343-10	TERMINAL, pin, 16-20 AWG *(4)*	FLTRU
11	72415-07GY	HOUSING, four-way pin (gray)	FLTRU
12	72473-07	SEAL PIN (natural)	FLTRU
13	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLTRU
14	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLTRU
15	72499-07	WIRE SEAL, 20-22 AWG (green) *(2)*	FLTRU
16	72512-07BK	HOUSING, three-way socket (black) *(2)*	FLTRU
17	72519-09BK	PLUG, weather, three-way socket *(2)*	FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72533-06	PLUG, weather, two-way pin	FLTRU
19	72544-07	SECONDARY LOCK, three-way socket	FLTRU
20	72589-09	HOUSING, three-way socket (black)	FLTRU
21	72606-08	HOUSING, two-way socket (black) *(2)*	FLTRU
22	72609-08	SECONDARY LOCK, two-way socket *(2)*	FLTRU
23	72610-08	WIRE SEAL, 18-20 AWG (white) *(4)*	FLTRU
24	73213-07	RETAINER, anchored *(6)*	FLTRU
25	74112-98BK	HOUSING, two-way socket (black)	FLTRU
26	74152-98	SECONDARY LOCK, two-way socket	FLTRU
27	74191-98	TERMINAL, socket, 16-20 AWG *(2)*	FLTRU
28	12500014	CABLE STRAP *(2)*	FLTRU
29	12500018	CABLE STRAP	FLHX
30	69200183	HOUSING, 26-way socket	FLTRU
31	69200184	COVER, wire	FLTRU
32	69200185	TERMINAL, socket, 20 AWG *(6)*	FLTRU
33	69200186	TERMINAL, socket, 14-16 AWG *(2)*	FLTRU
34	69200187	TERMINAL, socket, 12 AWG *(2)*	FLTRU
35	69200188	WIRE SEAL, 20 AWG *(6)*	FLTRU
36	69200189	WIRE SEAL, 14-16 AWG *(2)*	FLTRU
37	69200190	WIRE SEAL, 12 AWG *(2)*	FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
38	69200191	SEAL PIN *(16)*	FLTRU
39	69200238	TERMINAL, socket, 20 AWG *(2)*	FLTRU
40	69200272	HOUSING, two-way pin (black)	FLTRU
41	69201301	WIRE SEAL, 20-22 AWG (green) *(3)*	FLHX
42	69201396	TERMINAL, socket, 20 AWG *(2)*	FLTRU
43	69201400	HOUSING, two-way socket, (black)	FLTRU
44	69201401	SECONDARY LOCK, two-way socket	FLTRU
45	69201404	RETAINER, anchored	FLTRU
46	69201405	RESISTOR PACK	FLTRU
47	69201406	HOUSING, three-way socket	FLTRU
48	69201407	TERMINAL, socket, 20 AWG *(3)*	FLTRU
49	69201423	DC LEAD ASSEMBLY, two-way socket	FLTRU

WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)

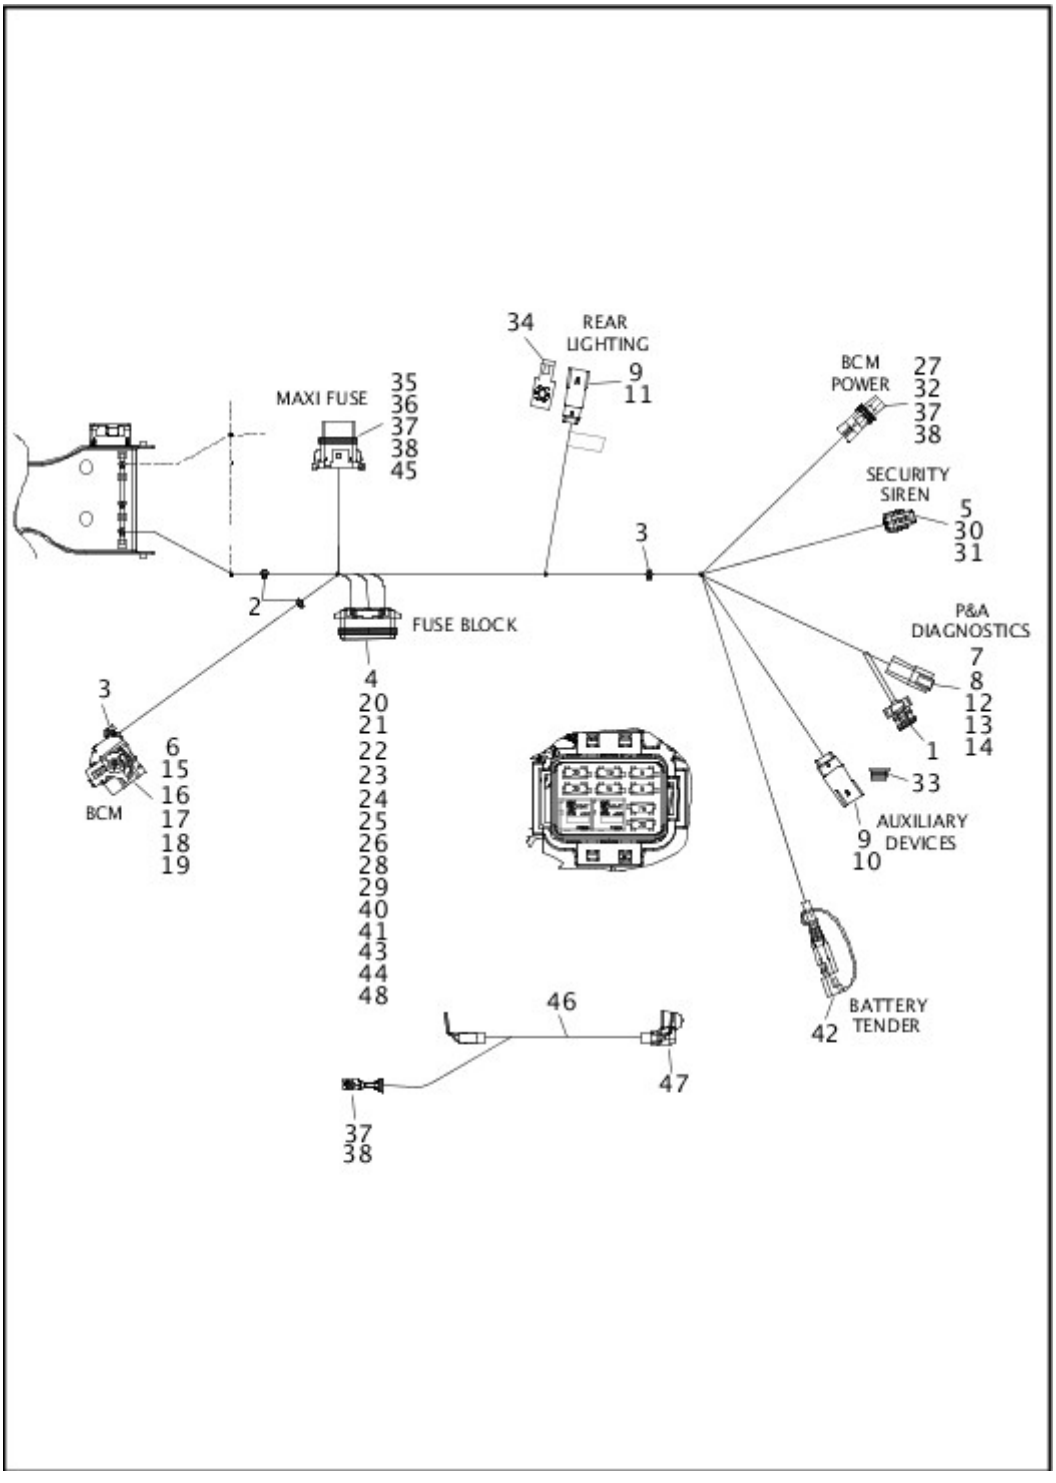

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69201123A	MAIN WIRING HARNESS - ABS	FLTRU
NOTE: Includes the following parts.			
1	6990	PLUG, weather, six-way pin	FLTRU
2	10006	CABLE STRAP *(2)*	FLTRU
3	10065	CABLE STRAP *(2)*	FLTRU
4	31586-07	RELAY *(2)*	FLTRU
5	72064-06	HOUSING, three-way socket (black)	FLTRU
6	72081-11	HOUSING, 48-way socket (black)	FLTRU
7	72106-94BK	HOUSING, six-way pin (black) (replaces gray connector)	FLTRU
8	72146-94	SECONDARY LOCK, six-way pin	FLTRU
9	72169-07	TERMINAL, pin, 16-20 AWG *(10)*	FLTRU
10	72175-07BK	HOUSING, four-way pin (black)	FLTRU
11	72188-07BK	HOUSING, six-way pin (black)	FLTRU
12	72190-94	TERMINAL, pin, 16-18 AWG *(2)*	FLTRU
13	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLTRU
14	72195-94	SEAL PIN	FLTRU
15	72209-11	COVER, wire	FLTRU
16	72222-11	TERMINAL, socket, 18-20 AWG *(21)*	FLTRU
17	72226-11	TERMINAL, socket, 14-16 AWG	FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLTRU
19	72256-11	SEAL PIN, 0.6 mm (white) *(9)*	FLTRU
20	72296-95	TERMINAL, socket, 14-16 AWG *(3)*	FLTRU
21	72298-95	WIRE SEAL, 14-18 AWG (green) *(3)*	FLTRU
22	72299-95	SEAL PIN, green *(2)*	FLTRU
23	72308-97	TERMINAL, socket, 12-14 AWG *(5)*	FLTRU
24	72330-95	FUSE, 15 A (blue)	FLTRU
25	72331-95	FUSE, 5 A (tan) *(2)*	FLTRU
26	72345-02	FUSE, 20 A (yellow) *(3)*	FLTRU
27	72350-11	HOUSING, one-way socket (black)	FLTRU
28	72356-95	TERMINAL, socket, 18-20 AWG *(14)*	FLTRU
29	72412-97	WIRE SEAL, 12-14 AWG (gray) *(5)*	FLTRU
30	72484-08	TERMINAL, socket, 20 AWG *(3)*	FLTRU
31	72486-08	WIRE SEAL, 20 AWG (green) *(3)*	FLTRU
32	72575-11	SECONDARY LOCK, one-way socket	FLTRU
33	72632-10	PLUG, weather, four-way pin	FLTRU
34	73213-07	RETAINER, anchored	FLTRU
35	73301-04	HOUSING, two-way pin (black)	FLTRU
36	73303-04	SECONDARY LOCK, two-way socket	FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	73304-04	TERMINAL, socket, 10 AWG *(3)*	FLTRU
38	73305-04	WIRE SEAL, 10 AWG (blue) *(3)*	FLTRU
39	11100115	CLOTH, HARNESS WRAP, 50 m (not shown)	FLTRU
40	69200194	FUSE BLOCK, 24-way	FLTRU
41	69200199	WIRE SEAL, 18-20 AWG (purple) *(14)*	FLTRU
42	69200212	HARNESS, battery tender	FLTRU
43	69200293	FUSE, 7.5 A (brown) *(2)*	FLTRU
44	69200312	SECONDARY LOCK, fuse block *(3)*	FLTRU
45	69200336	MAIN FUSE, 50 A (red), NOTE: Fuse is sold separately and is not part of main harness	FLTRU
46	69201130	WIRE HARNESS, battery positive to starter, with 73304-04, 73305-04 and 69201307	FLTRU
47	69201307	BOOT, battery positive	FLTRU
48	69201411	COVER, fuse block	FLTRU

WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)

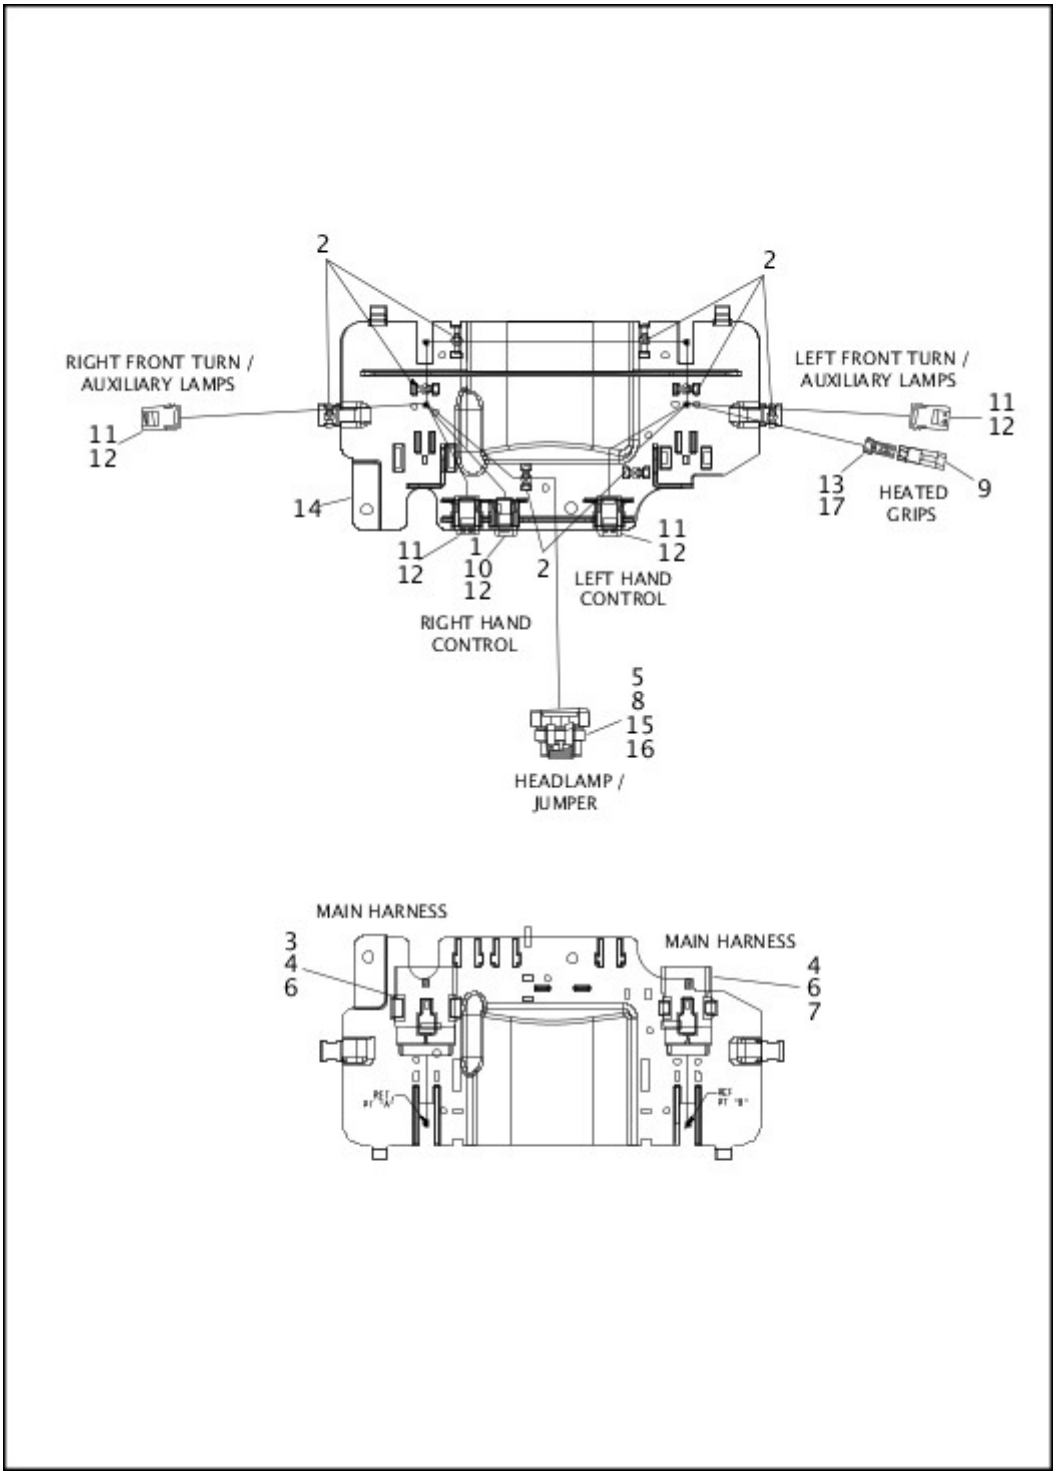

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69200121	WIRING HARNESS, fairing	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
NOTE: Includes the following parts.			
1	5118	SEAL PIN	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
2	10065	CABLE STRAP *(8)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
3	72167-07BK	HOUSING, 16-way pin (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
4	72169-07	TERMINAL, pin, 16-20 AWG *(19)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
5	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
6	72473-07	SEAL PIN, natural *(9)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
7	72490-07GY	HOUSING, 12-way pin (gray)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
8	72610-08	WIRE SEAL, 18-20 AWG (white) *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
9	72902-01BK	HOUSING, two-way pin (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
10	72905-11	HOUSING, two-way pin (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
11	72907-11	HOUSING, four-way pin (black) *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
12	72909-11	TERMINAL, pin, 20-22 AWG *(17)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	72912-01BK	HOUSING, two-way socket (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
14	69200109	CADDY, fairing harness	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
15	69200254	HOUSING, four-way socket	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
16	69200256	SECONDARY LOCK, four-way socket	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
17	69201240	TERMINAL, socket,18 AWG *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)

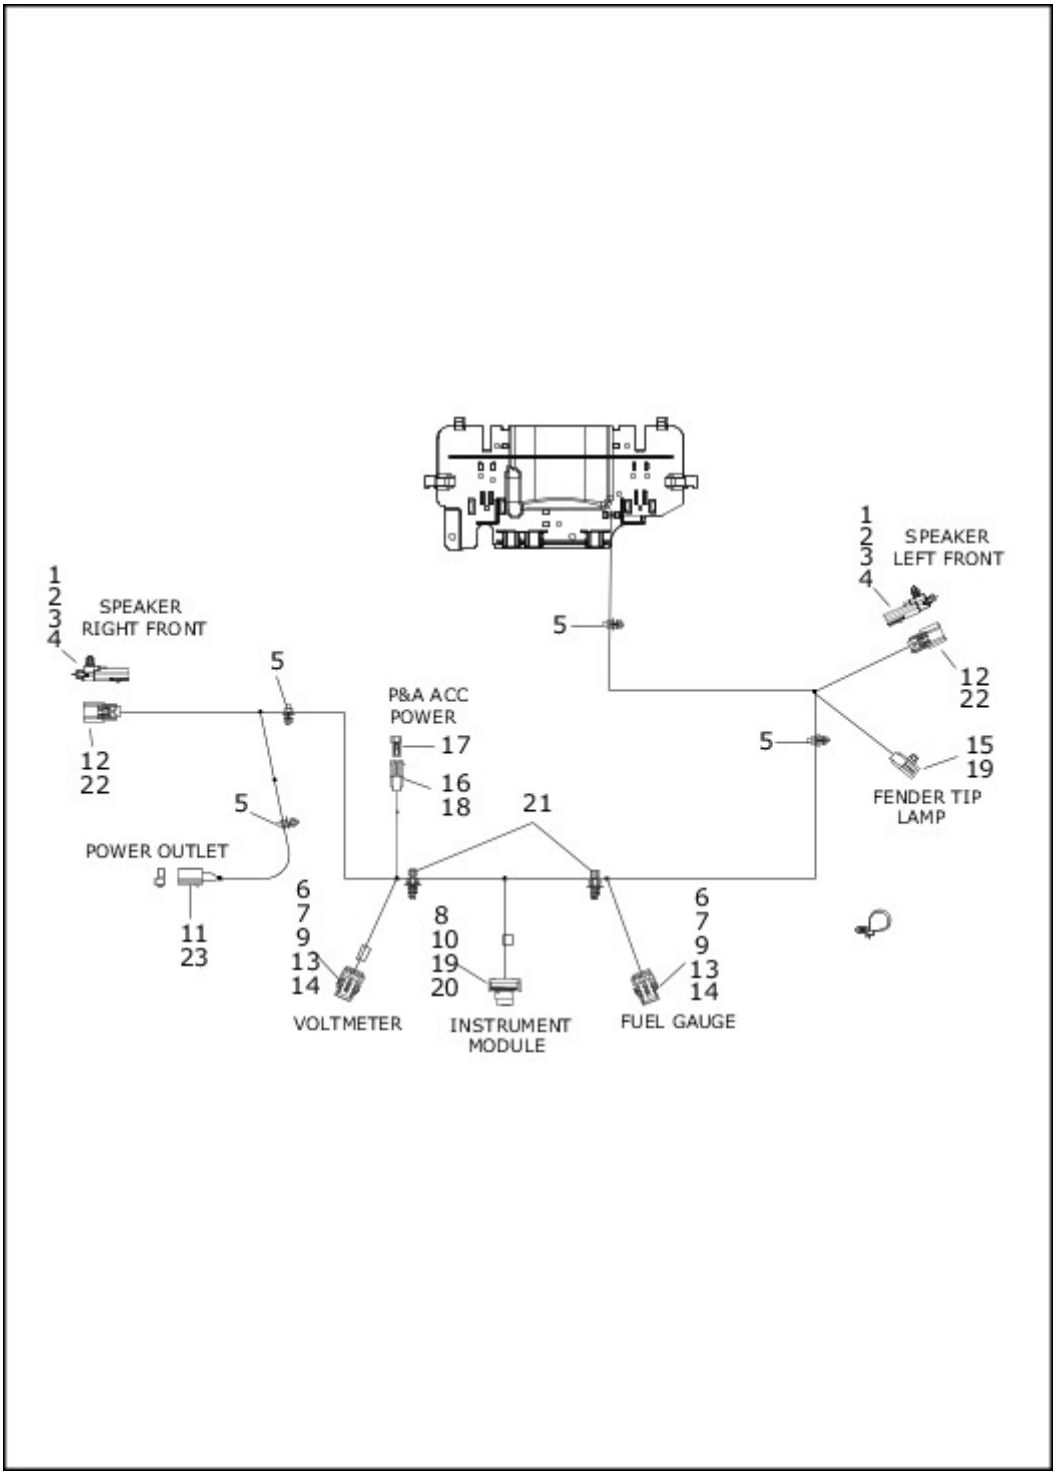

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	72473-07	SEAL PIN (natural) *(2)*	FLHT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	73213-07	RETAINER, anchored	FLHT
3	69200272	HOUSING, two-way pin (black)	FLHT
4	69202385	PLUG, weather, two-way pin	FLHT
	69200121	WIRING HARNESS, fairing	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
NOTE: Includes the following parts.			
5	10177	CABLE STRAP, anchored *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
6	72066-06A	HOUSING, four-way socket (black) *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
7	72097-06	SEAL PIN, orange *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
8	72130-04	HOUSING, 12-way socket (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
9	72135-06	SECONDARY LOCK, four-way socket *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
10	72189-04	SEAL PIN *(5)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
11	72264-94	TERMINAL, socket, 18-20 AWG *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
12	72272-07	TERMINAL, socket, 14-16 AWG *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
13	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
14	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	73101-96BK	HOUSING, two-way pin (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
16	73102-96BK	HOUSING, two-way pin (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
17	73152-96BK	HOUSING, two-way socket (black)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
18	73190-96	TERMINAL, pin, 16-20 AWG *(4)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
19	74196-04	TERMINAL, socket, 20 AWG *(7)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
20	74197-04	SECONDARY LOCK, 12-way socket	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
21	12500002	CABLE STRAP *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
22	69200271	HOUSING, two-way socket (black) *(2)*	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
23	69200337	HOUSING, two-way socket (gray)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS

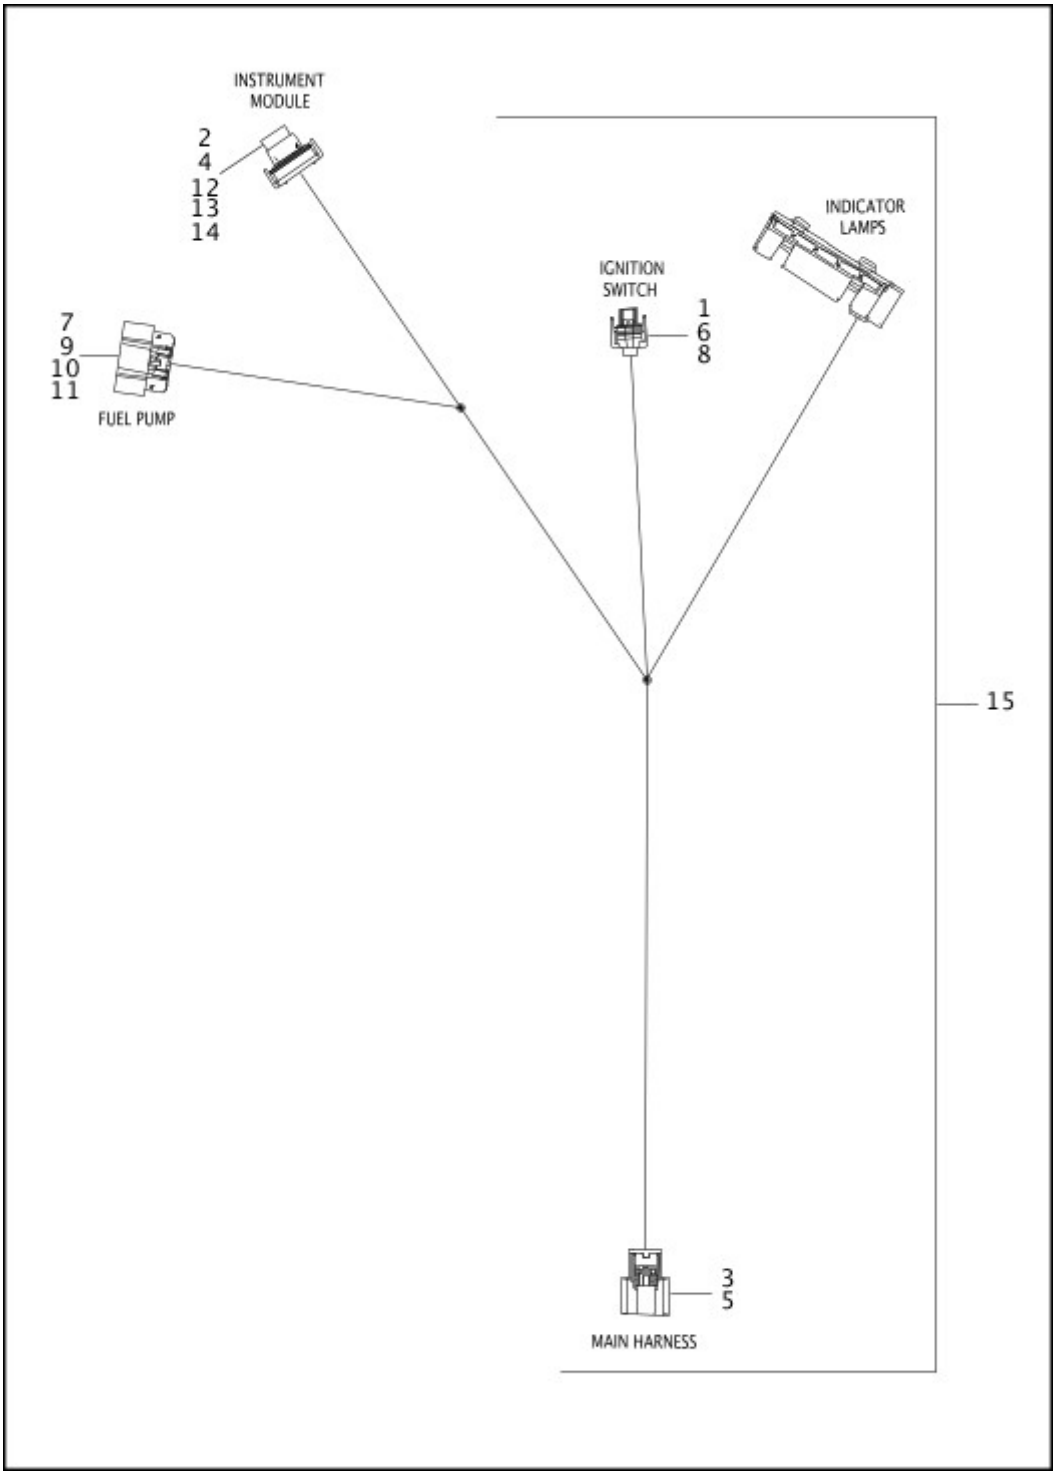


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	72062-06	HOUSING, two-way socket (gray)	FLHR, FLHRC, FLHRXS
2	72130-04	HOUSING, 12-way socket (black)	FLHR, FLHRC, FLHRXS
3	72168-07	TERMINAL, socket 18-20 AWG *(8)*	FLHR, FLHRC, FLHRXS
4	72189-04	SEAL PIN *(2)*	FLHR, FLHRC, FLHRXS
5	72479-07BK	HOUSING, eight-way socket (black)	FLHR, FLHRC, FLHRXS
6	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLHR, FLHRC, FLHRXS
7	72485-07	HOUSING, four-way socket (black)	FLHR, FLHRC, FLHRXS
8	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLHR, FLHRC, FLHRXS
9	72493-07	TERMINAL, socket, 16-18 AWG *(4)*	FLHR, FLHRC, FLHRXS
10	72494-07	WIRE SEAL, 16-18 AWG (yellow) *(4)*	FLHR, FLHRC, FLHRXS
11	72557-07	SECONDARY LOCK, four-way socket	FLHR, FLHRC, FLHRXS
12	72662-11	TERMINAL, socket, 22 AWG *(5)*	FLHR, FLHRC, FLHRXS
13	74196-04	TERMINAL, socket, 20 AWG *(5)*	FLHR, FLHRC, FLHRXS
14	74197-04	SECONDARY LOCK, 12-way socket	FLHR, FLHRC, FLHRXS
15	69200124	WIRE HARNESS, console	FLHR, FLHRC, FLHRXS

WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS

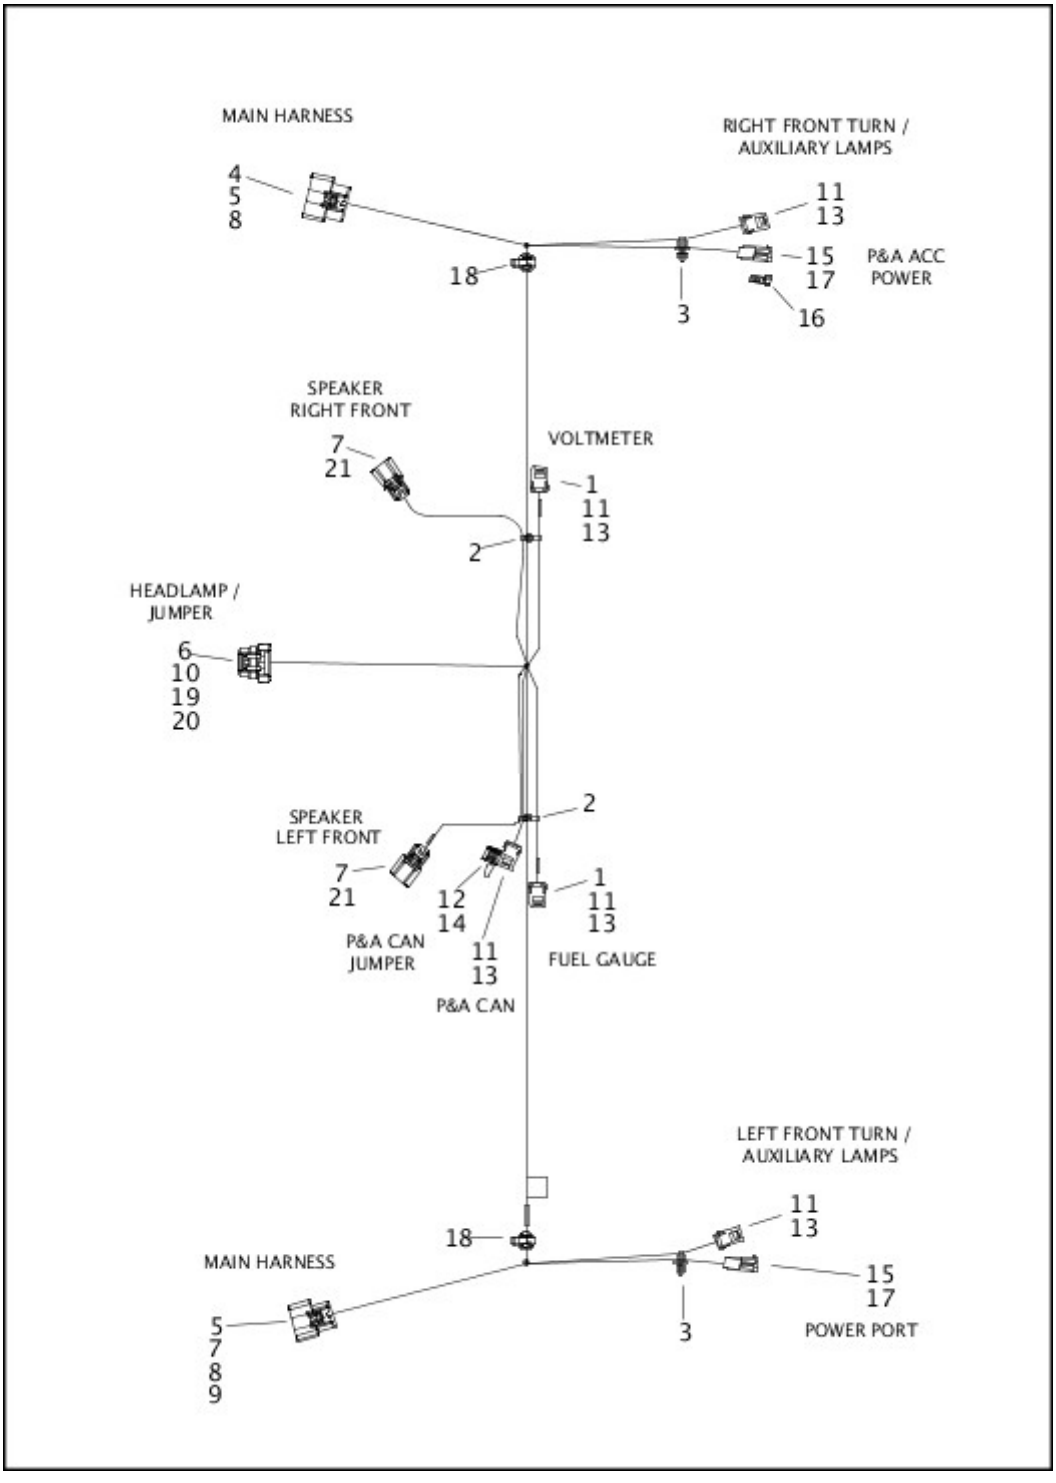

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	69200122	WIRING HARNESS - FAIRING	FLTRU, FLTRX, FLTRXS
NOTE: Includes the following parts.			
1	5118	SEAL PIN *(2)*	FLTRU, FLTRX, FLTRXS
2	10006	CABLE STRAP *(2)*	FLTRU, FLTRX, FLTRXS
3	10177	CABLE STRAP, anchored *(2)*	FLTRU, FLTRX, FLTRXS
4	72166-07BK	HOUSING, 16-way socket (black)	FLTRU, FLTRX, FLTRXS
5	72168-07	TERMINAL, socket, 18-20 AWG *(16)*	FLTRU, FLTRX, FLTRXS
6	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLTRU, FLTRX, FLTRXS
7	72272-07	TERMINAL, socket, 14-16 AWG *(8)*	FLTRU, FLTRX, FLTRXS
8	72473-07	SEAL PIN, natural *(8)*	FLTRU, FLTRX, FLTRXS
9	72489-07GY	HOUSING, 12-way socket (gray)	FLTRU, FLTRX, FLTRXS
10	72610-08	WIRE SEAL, 18-20 AWG (white) *(4)*	FLTRU, FLTRX, FLTRXS
11	72907-11	HOUSING, four-way pin (black) *(5)*	FLTRU, FLTRX, FLTRXS
12	72908-11	HOUSING, four-way socket (black)	FLTRU, FLTRX, FLTRXS
13	72909-11	TERMINAL, pin, 20-22 AWG *(18)*	FLTRU, FLTRX, FLTRXS
14	72910-11	TERMINAL, socket, 20-22 AWG *(4)*	FLTRU, FLTRX, FLTRXS
15	73102-96BK	HOUSING, two-way pin (black) *(2)*	FLTRU, FLTRX, FLTRXS
16	73152-96BK	HOUSING, two-way socket (black)	FLTRU, FLTRX, FLTRXS
17	73190-96	TERMINAL, pin, 16-20 AWG *(4)*	FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	12500002	CABLE STRAP *(2)*	FLTRU, FLTRX, FLTRXS
19	69200254	HOUSING, four-way socket	FLTRU, FLTRX, FLTRXS
20	69200256	SECONDARY LOCK, four-way socket	FLTRU, FLTRX, FLTRXS
21	69200271	HOUSING, two-way socket (black) *(2)*	FLTRU, FLTRX, FLTRXS

WIRING HARNESS, ON BOARD DIAGNOSTICS (OBD) JUMPER (CHINA ONLY)

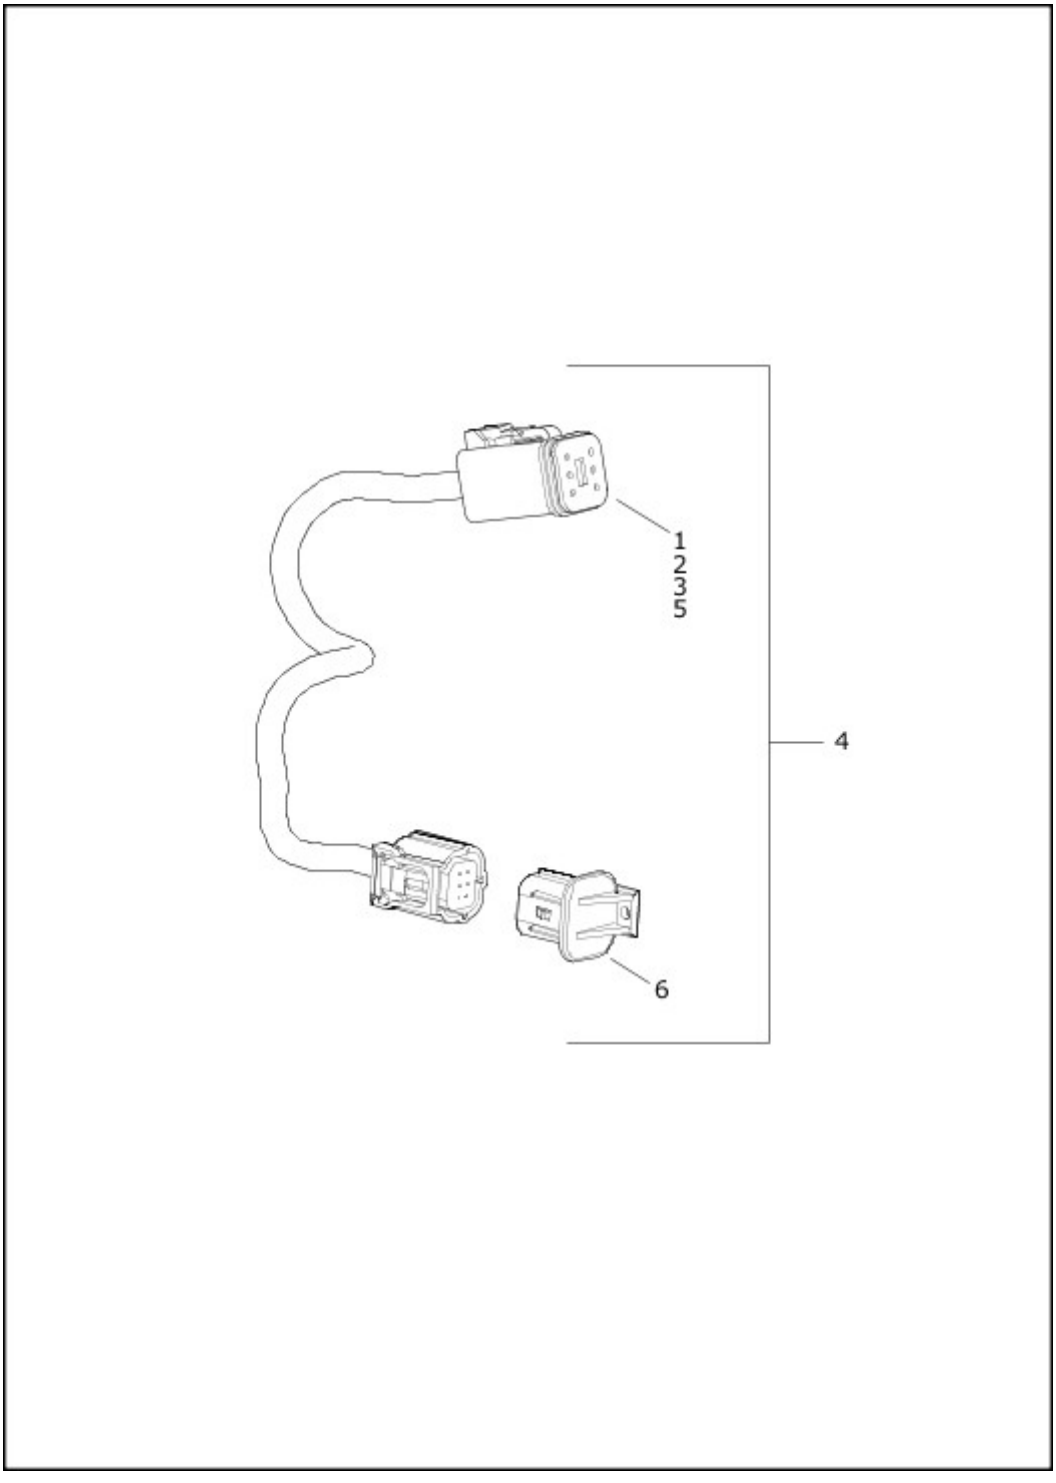


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	72116-94BK	HOUSING, six-way socket (black) (replaces gray connector)	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
2	72156-94	SECONDARY LOCK, six-way socket	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	72195-94	SEAL PIN *(2)*	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
4	69202097	WIRING HARNESS, OBD JUMPER	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
5	69202102	TERMINAL, socket, 22 AWG *(4)*	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	69202108	CAP *(2)*	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

BATTERY

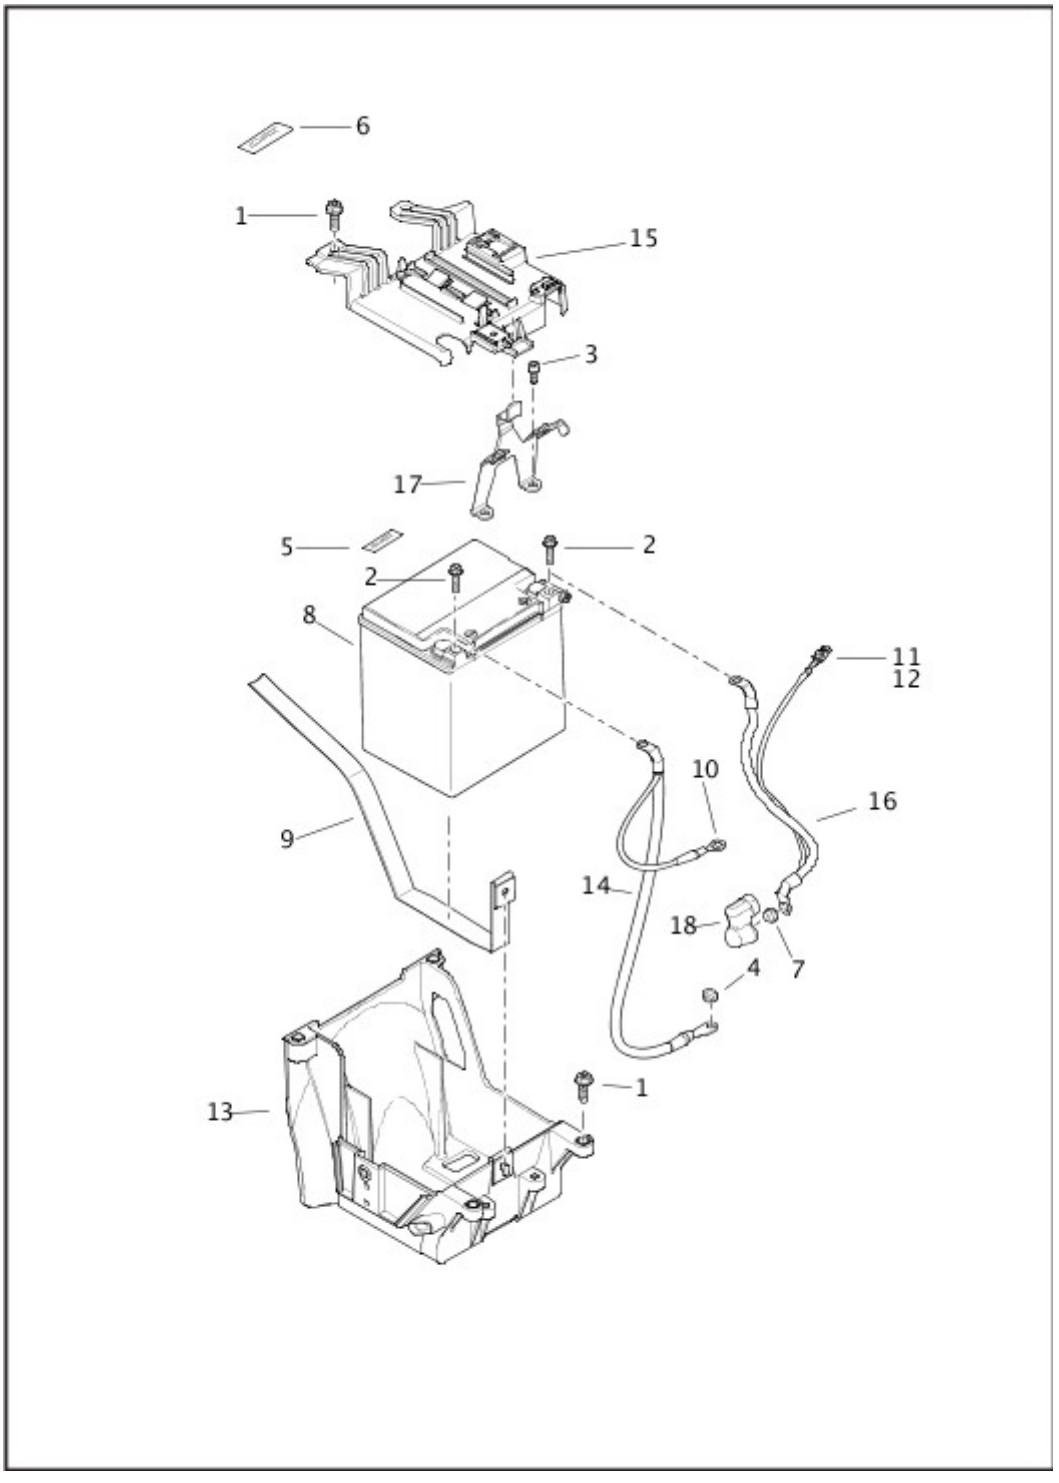


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3634	SCREW *(6)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	4312C	SCREW *(2)*	ALL
3	4705	SCREW *(2)*	ALL
4	7792	NUT	ALL
5	14001739	LABEL, battery warning (Brazil)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
6	15368-01A	LABEL, battery warning	ALL
7	31694-90	NUT	ALL
8	66010-97D	BATTERY, with 4312C (except Brazil)	ALL
8	66000066	BATTERY, with 4312C (Brazil)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
9	66051-08	STRAP, battery removal	ALL
10	9819	TERMINAL, ring, 12 AWG	ALL
11	73304-04	TERMINAL, socket, 10 AWG	ALL
12	73305-04	SEAL WIRE, 10 AWG (blue)	ALL
13	66000010A	BATTERY TRAY	ALL
14	66000116	CABLE ASSEMBLY, starter to ground, with 9819	ALL
15	69200174	CADDY, electronic control module (ECM)	ALL
16	69201130	WIRE HARNESS, battery positive to starter, with 73304-04, 73305-04 and 69201307	ALL
17	69201178	BRACKET, battery hold down	ALL
18	69201307	BOOT, battery positive	ALL

HORN

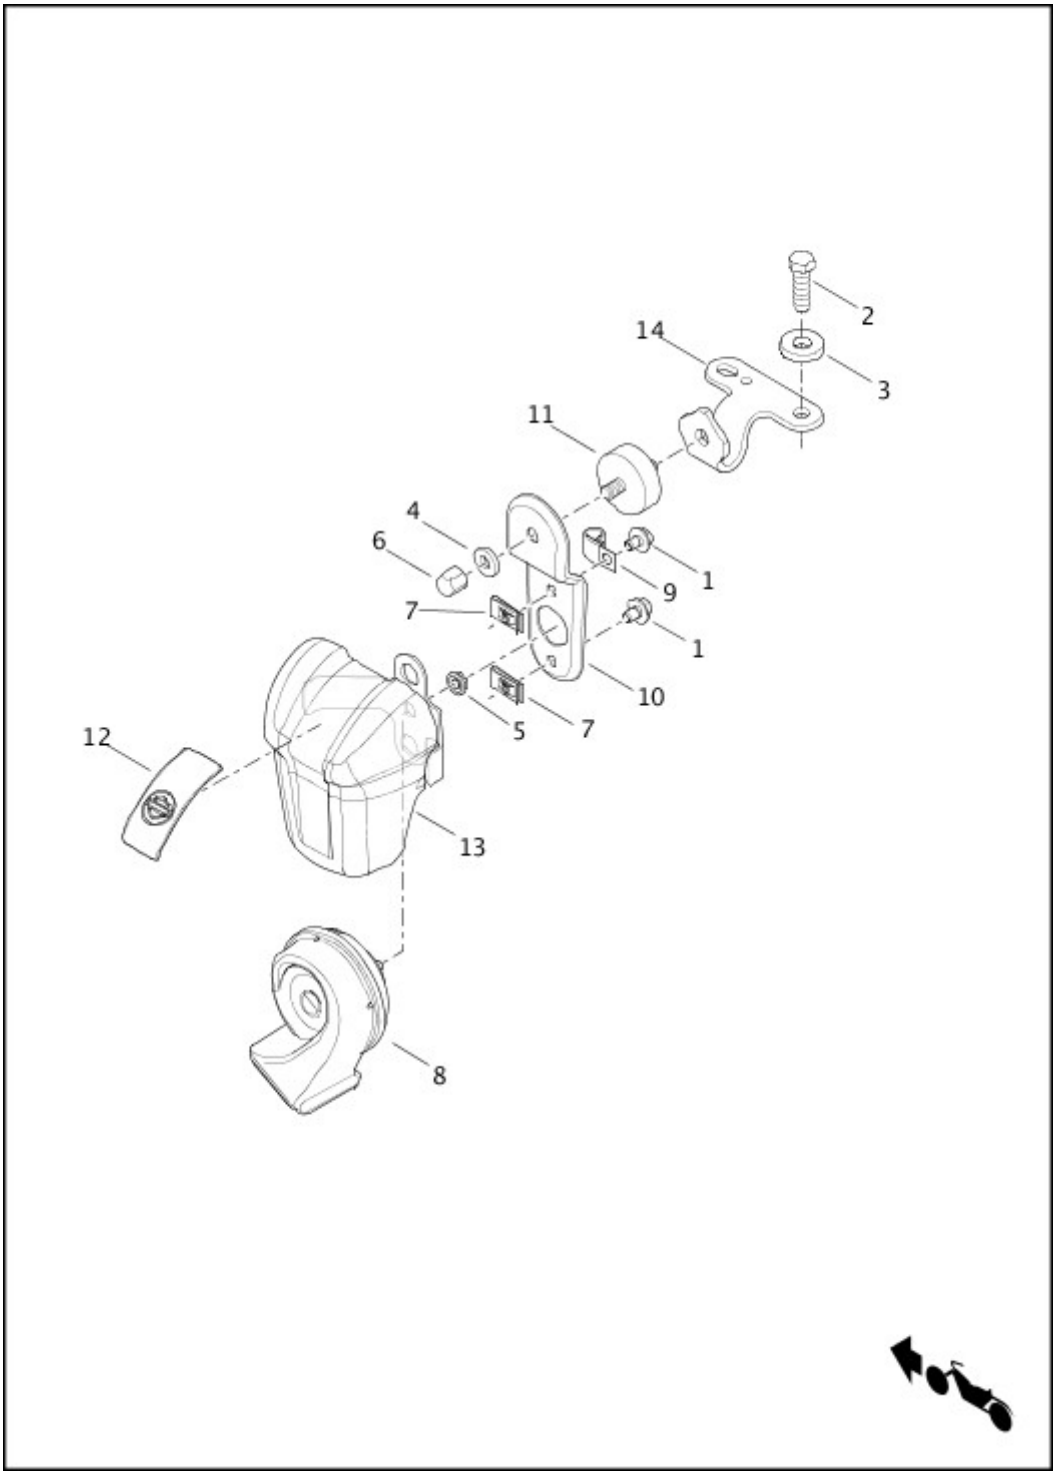


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3563	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	4775	SCREW *(2)*	ALL
3	6019	WASHER *(2)*	ALL
4	6109	WASHER	ALL
5	7495	NUT	ALL
6	7549A	ACORN NUT	ALL
7	8108	SPEEDNUT *(2)*	ALL
8	69060-90H	HORN ASSEMBLY	ALL
9	69062-91A	CLAMP	ALL
10	69120-91	BRACKET, horn	ALL
11	69123-92A	MOUNT, horn, rubber	ALL
12	14100764	INSERT, horn	ALL
13	61300523A	COVER, horn (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
13	61300626A	COVER, horn (gloss black)	FLHRXS, FLHXS, FLTRXS
14	69000083	BRACKET ASSEMBLY, horn mount	ALL

SWITCHES (1 OF 2)

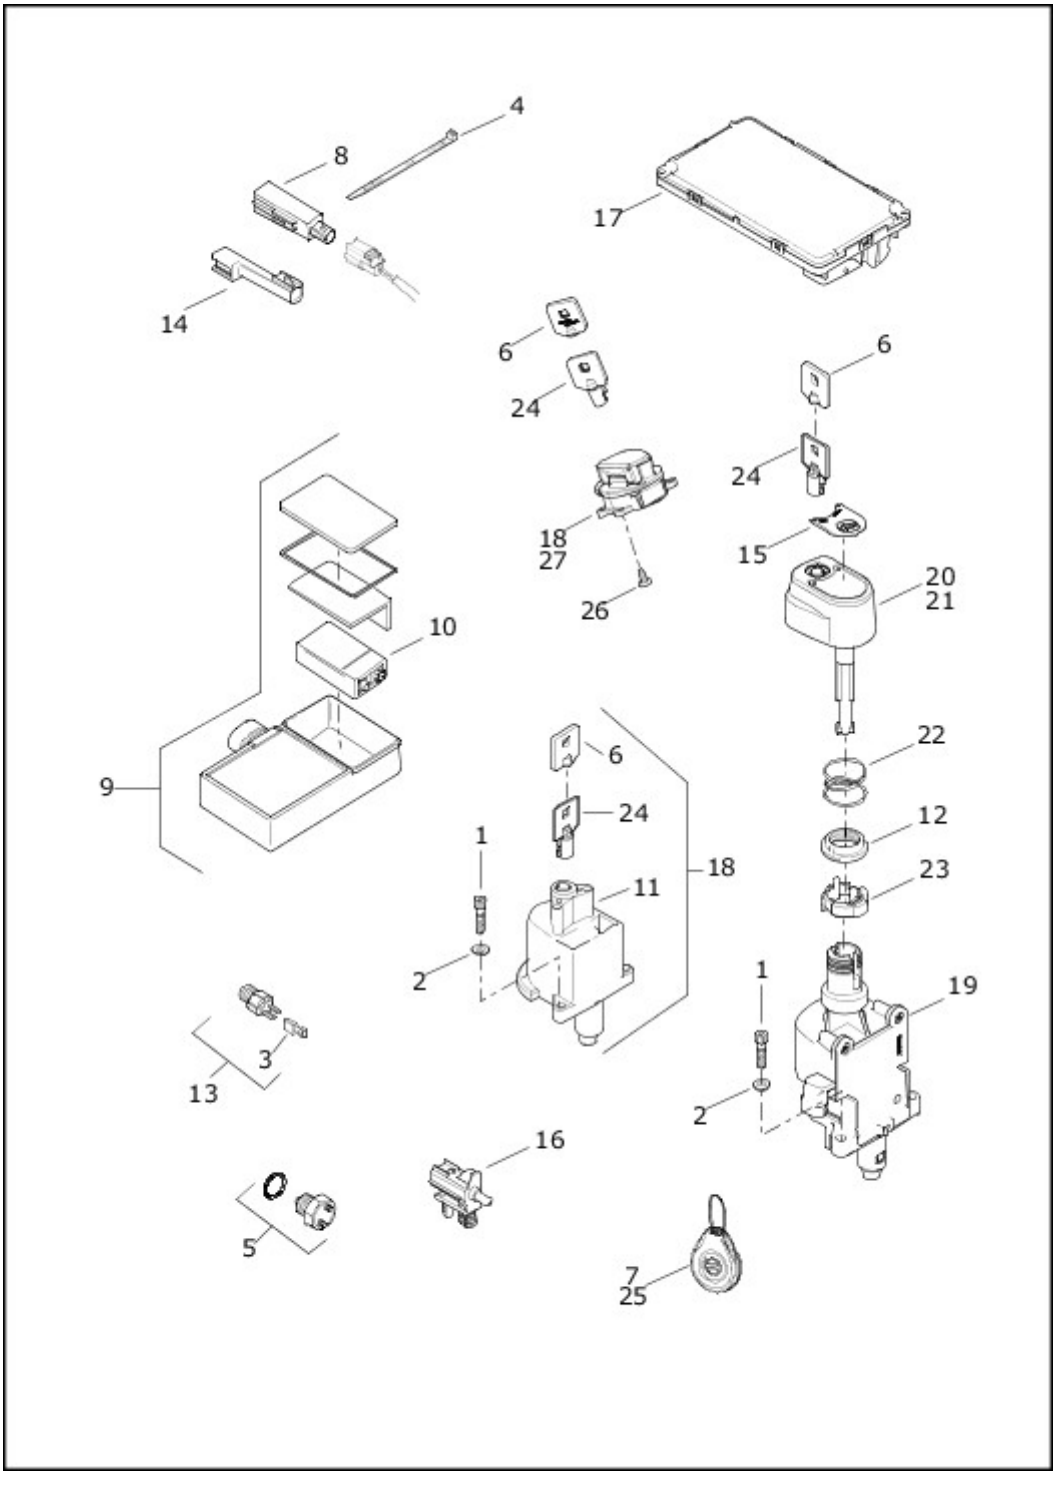

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

NOTE: For additional fuse and relay part number information see wiring harness pages.


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2647B	SCREW *(2)*	ALL
2	6150W	WASHER *(2)*	ALL
3	9907	WIRE TERMINAL *(2)*	ALL
4	10065	CABLE STRAP *(2)*	ALL
5	33926-06B	SWITCH, neutral indicator, with O-ring	ALL
6	61081-92	COVER, key head (set of 2)	ALL
7	66373-06	BATTERY, 3V, CR2032 *(2)*	ALL
8	68956-07	ANTENNA MODULE, security system	ALL
9	68958-07C	SIREN ALARM, with 68309-10 (Australia, England, HDI, Japan and Asia-Pacific)	FLHR, FLHRC, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
10	69309-10	BATTERY, siren alarm (Australia, England, HDI, Japan and Asia-Pacific)	FLHR, FLHRC, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	71540-94B	FORK LOCK (specify key number)	FLHR, FLHRC, FLHRXS
12	71660-03A	NUT, ignition switch	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
13	72023-51E	KIT, SWITCH, rear brakelite, with 9907	ALL
14	72594-11	PLUG, weather, two-way socket (without security)	FLHR, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
15	14100158	DECAL, ignition switch knob	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX

NOTE: For additional fuse and relay part number information see wiring harness pages.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	32700010	SENSOR, ambient temperature	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
17	41000341E	BODY CONTROL MODULE (BCM) with security (Except Japan)	ALL
17	41000342E	BODY CONTROL MODULE (BCM) with security (Japan)	FLHR, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRX, FLTRXS
17	41000351E	BODY CONTROL MODULE (BCM) without security	FLHR, FLHTCU, FLHX, FLTRX

NOTE: For additional fuse and relay part number information see wiring harness pages.

SWITCHES (2 OF 2)

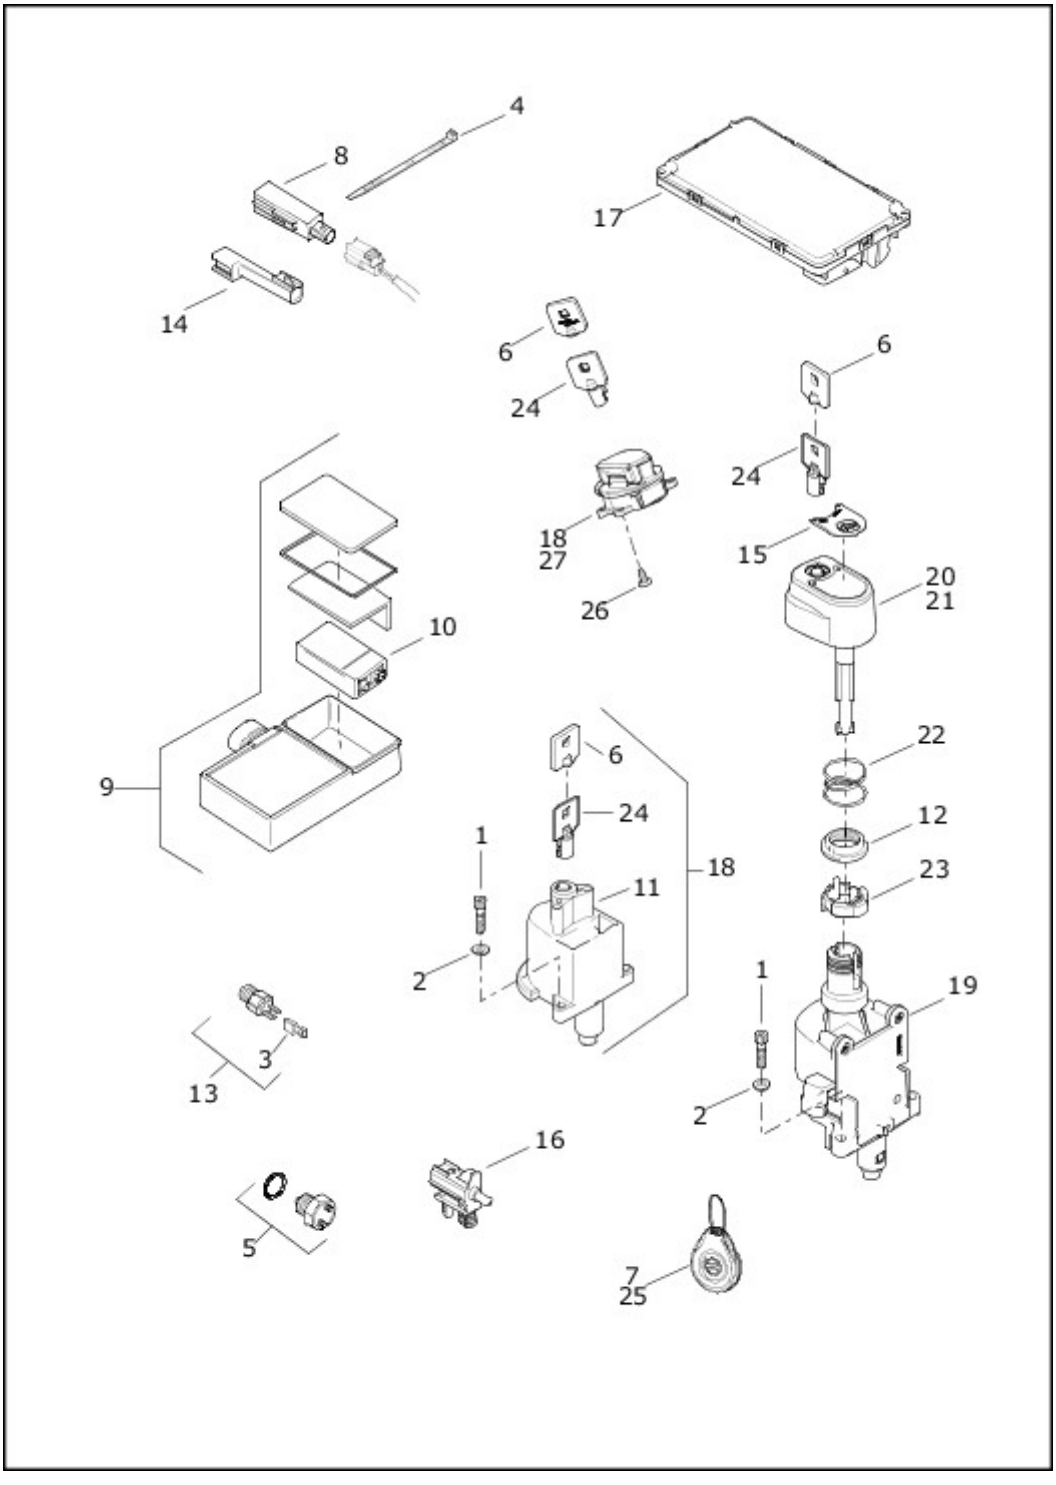

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

NOTE: For additional fuse and relay part number information see wiring harness pages.


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	71400010A	LOCKSET, complete, with keys, ignition switch, fork lock and saddle bag lock	FLHR, FLHRXS
18	71400011A	LOCKSET, complete, with keys, ignition switch, cover and fork lock	FLHRC
19	71400012B	HOUSING, ignition switch, with 71660-03A and 71400081 (Domestic)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
19	71400013B	HOUSING, ignition switch, with 71660-03 and 71400081 (HDI)	FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
20	71400015B	LOCKSET, complete, with keys, ignition knob, saddlebag and Tour-Pak locks	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
20	71400016B	LOCKSET, complete, with keys, ignition knob and saddlebag lock	FLHT, FLHX, FLHXS, FLTRX
21	71400017B	KNOB, ignition switch, with 14100158 (specify key number)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX
21	71400126B	KNOB, ignition switch (specify key number)	FLHXS, FLTRXS
22	71400073	SPRING, ignition knob	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
23	71400081	COLLAR, ignition switch, top	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
24	90300043	KEY, with 61081-92 (set of 2) (specify key number)	ALL
25	90300111	REMOTE CONTROL FOB, with 66373-06 (except Japan) *(2)*	ALL

NOTE: For additional fuse and relay part number information see wiring harness pages.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
25	90300112	REMOTE CONTROL FOB, with 66373-06 (Japan) *(2)*	ALL
26	3622	SCREW *(4)*	FLHR, FLHRC, FLHRXS
27	71517-11	IGNITION SWITCH (specify key number)	FLHR, FLHRC, FLHRXS

NOTE: For additional fuse and relay part number information see wiring harness pages.

SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)

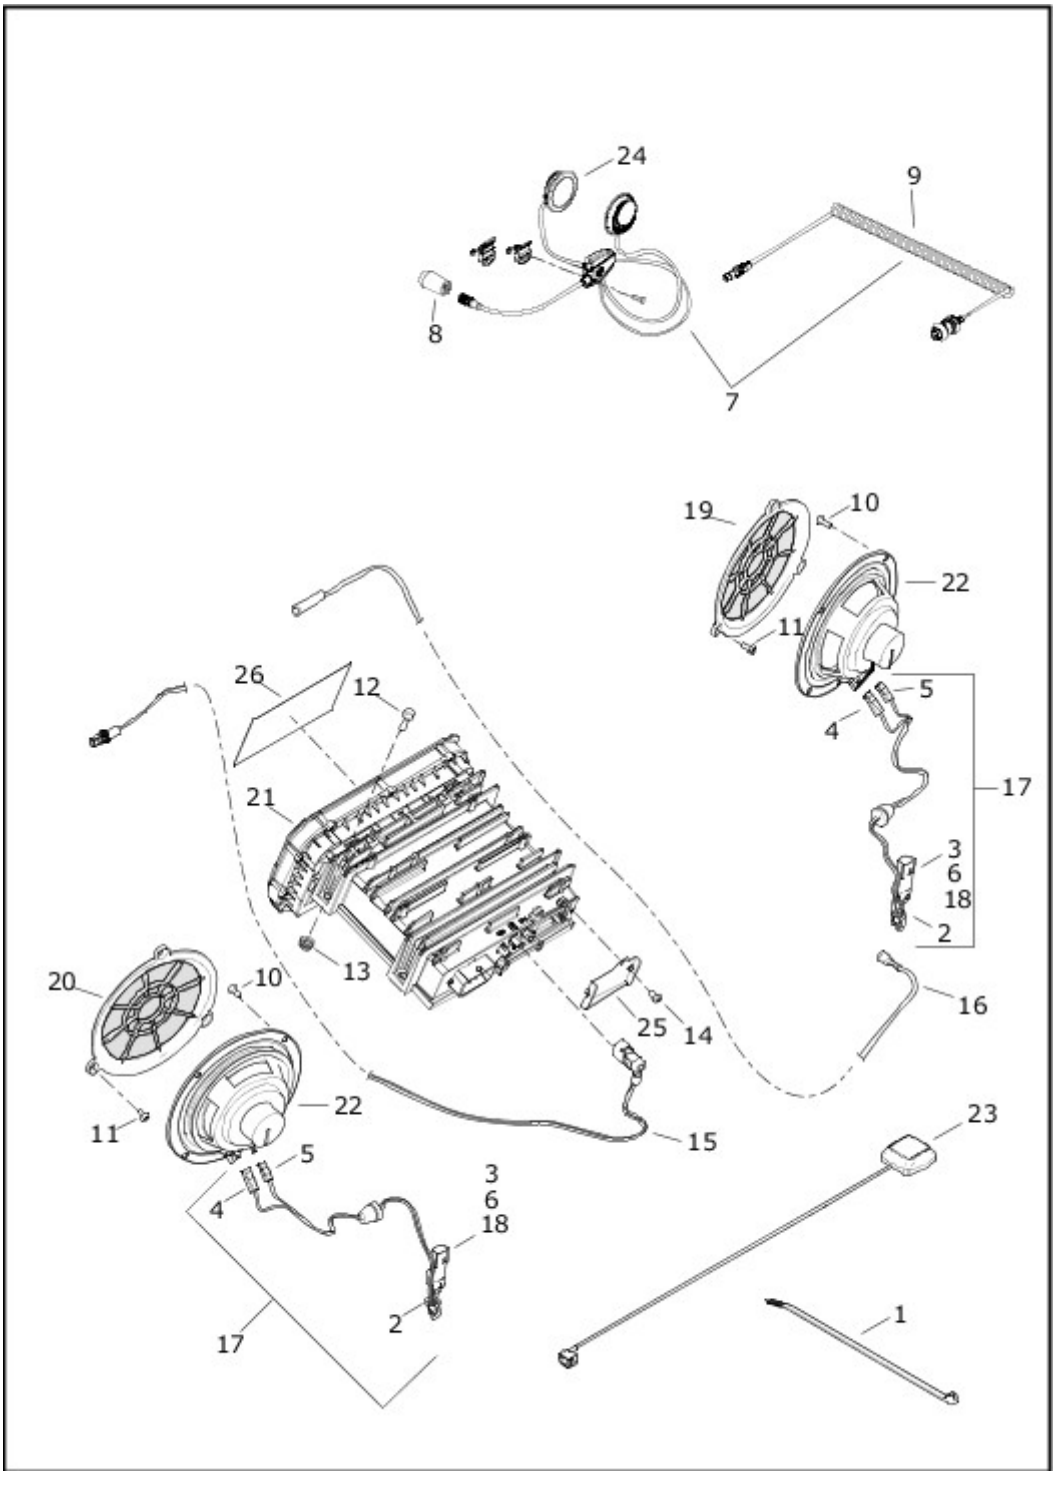

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	10006	CABLE STRAP	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
2	10065	CABLE STRAP *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
3	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
4	72290-94	TERMINAL, insulated *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
5	72294-94	TERMINAL, insulated *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
6	73213-07	RETAINER, anchored *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
7	77117-10	HEADSET ASSEMBLY, with 77126-10, 77148-10 and 76000243 (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
7	77117-10	HEADSET ASSEMBLY, with 77126-10, 77148-10 and 76000243 (HDI) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
8	77126-10	WIND SOCK, microphone (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
8	77126-10	WIND SOCK, microphone (HDI) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
9	77148-10	COILED CORD, headset (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
9	77148-10	COILED CORD, headset (HDI) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
10	10200205	SCREW *(8)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

NOTE: For all service and warranty claims on Boom!™ Audio System components please refer to the latest Warranty Bulletin revision of the Boom!™ Audio Systems Warranty Procedures located on h-dnet.com.Customer: For all service and warranty claims on Boom!™ Audio System components please contact your Harley-Davidson dealership.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	12600070	BOLT *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
13	12600071	RETAINER, bolt *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
14	12600073	SCREW, accessory module *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS
15	69200032	WIRE HARNESS, AM/FM antenna	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
	69200294	CABLE, AM/FM antenna	FLHX, FLHXS
16	69200136	WIRE HARNESS, C.B. antenna	FLHTK, FLHTK SHRINE, FLHTKL
17	69200247	WIRE HARNESS, speaker jumper, with 10065, 72169-07, 72290-94, 72294-94, 73213-07 and 69200072 *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
18	69200272	HOUSING, two-way pin (black) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

NOTE: For all service and warranty claims on Boom!™ Audio System components please refer to the latest Warranty Bulletin revision of the Boom!™ Audio Systems Warranty Procedures located on h-dnet.com.Customer: For all service and warranty claims on Boom!™ Audio System components please contact your Harley-Davidson dealership.

SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)

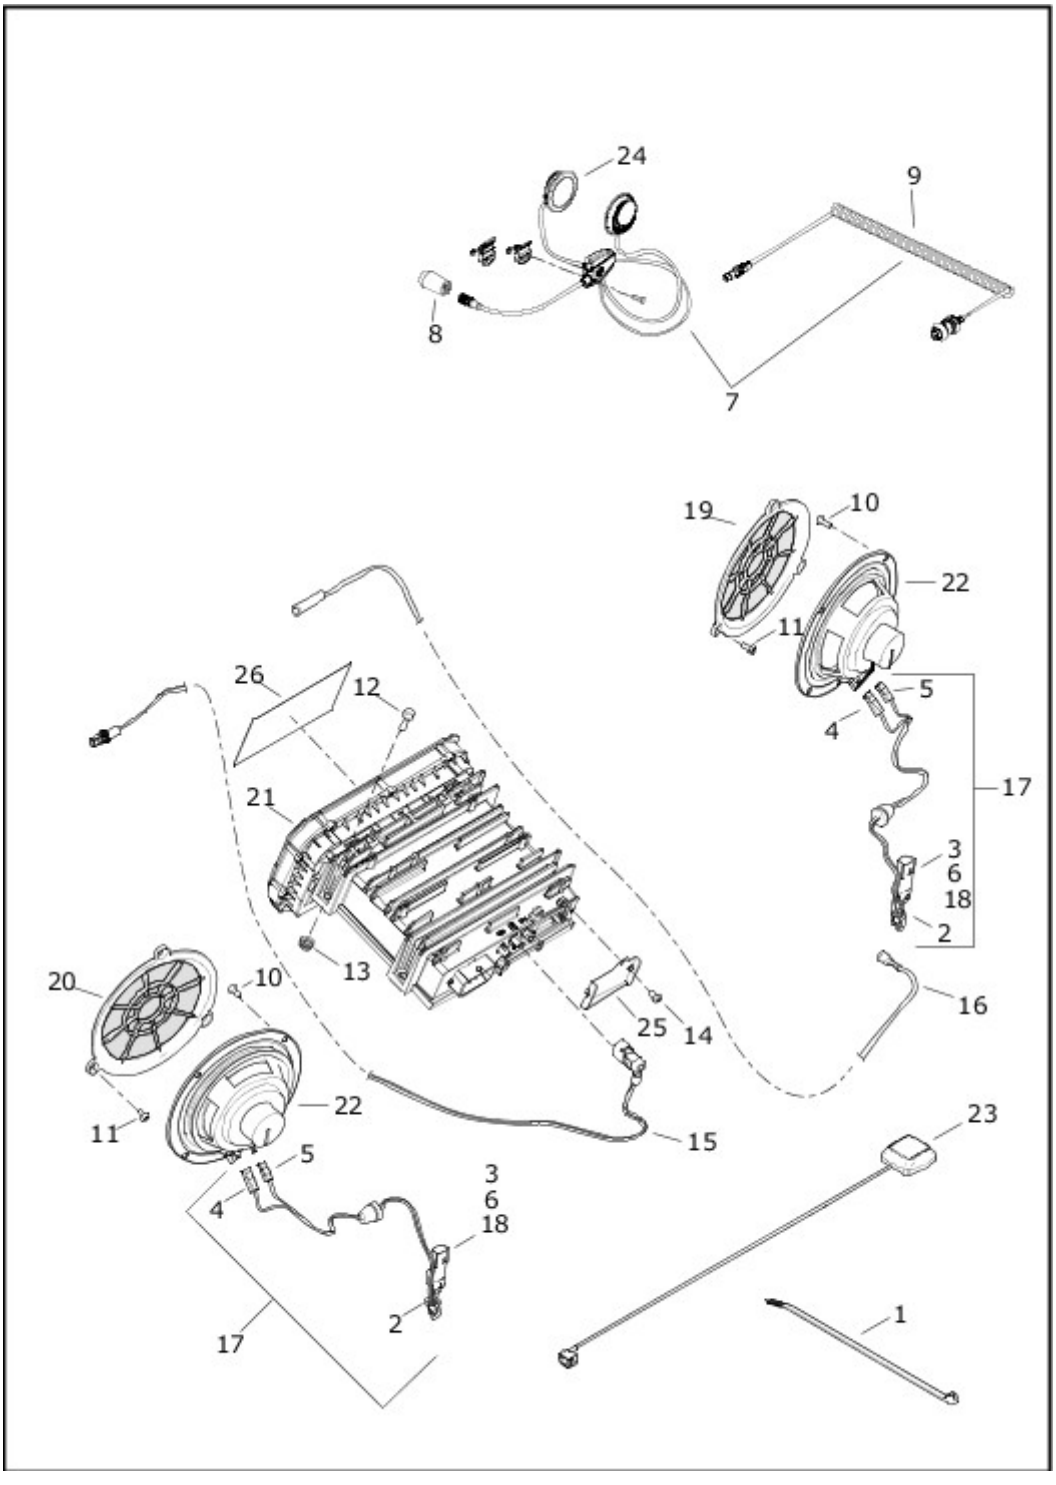

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	76000783	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (Domestic, California, Canada) (See NOTE 1)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
21	76000784	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, England) (See NOTE 2)	FLHTK, FLHTKL, FLHX, FLHXS
21	76000785	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, Australia, Japan, Asia-Pacific, Brazil, China) (See NOTE 3)	FLHTK, FLHX, FLHXS
21	76000785	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, Japan, Asia-Pacific, China) (See NOTE 3)	FLHTKL
21	76000075D	RADIO, BOOM!™ BOX 4.3, with 12600070 and 12600071 (Domestic, California)	FLHTCU, FLHX
22	76000096	SPEAKER, 5-1/4 in *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX
22	76000320	SPEAKER, 6-1/2 in *(2)*	FLHXS

NOTE 1: 76000783 radio with the North America mapset is used in these countries/regions: Bahamas, Canada, Cayman Islands, Mexico, Puerto Rico and United States.NOTE 2: 76000784 radio with the European mapset is used in these countries/regions: Albania, Andorra, Austria, Belarus, Belgium, Bosnia Herzegovina, Bulgaria, Croatia, Czech Republic, Denmark, Estonia, Finland, France, Germany, Gibralter, Greece, Hungary, Iceland, Ireland, Italy, Kosovo, Latvia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Malta, Moldova, Monaco, Montenegro, Netherlands, Norway, Poland, Portugal, Romania, San Marino, Serbia, Slovakia, Slovenia, Spain, Sweden, Switzerland, Turkey, Ukraine, Ukraine (Crimea), United Kingdom (Great Britain) and Vatican City.NOTE 3: 76000785 radio with the Rest of World mapset is used in these countries/regions: Argentina, Australia, Azerbaijan, Bahrain, Botswana, Brazil, Brunei, Chile, Columbia, Costa Rica, Egypt, India, Indonesia, Jordan, Kazakhstan, Kenya, Kuwait, Lebanon, Lesotho, Malaysia, Morocco, Namibia, New Zealand, Nigeria, Oman, Peru, Qatar, Reunion, Russia, Saudi Arabia, Singapore, South Africa, Swaziland, Thailand, United Arab Emirates, Uruguay, Venezuela, Vietnam and the Rest of the World.NOTE: For all service and warranty claims on Boom!™ Audio System components please refer to the latest Warranty Bulletin revision of the Boom!™ Audio Systems Warranty Procedures located on h-dnet.com.Customer: For all service and warranty claims on Boom!™ Audio System components please contact your Harley-Davidson dealership.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	76000789	ANTENNA, GPS	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
24	76000243	EAR PAD, foam (Domestic) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
24	76000243	EAR PAD, foam (HDI) *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
25	76000252	PLATE, accessory module	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS
26	91700034	KIT, RADIO TOUCH SCREEN PROTECTOR	FLHTCU, FLHX

NOTE 1: 76000783 radio with the North America mapset is used in these countries/regions: Bahamas, Canada, Cayman Islands, Mexico, Puerto Rico and United States.NOTE 2: 76000784 radio with the European mapset is used in these countries/regions: Albania, Andorra, Austria, Belarus, Belgium, Bosnia Herzegovina, Bulgaria, Croatia, Czech Republic, Denmark, Estonia, Finland, France, Germany, Gibralter, Greece, Hungary, Iceland, Ireland, Italy, Kosovo, Latvia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Malta, Moldova, Monaco, Montenegro, Netherlands, Norway, Poland, Portugal, Romania, San Marino, Serbia, Slovakia, Slovenia, Spain, Sweden, Switzerland, Turkey, Ukraine, Ukraine (Crimea), United Kingdom (Great Britain) and Vatican City.NOTE 3: 76000785 radio with the Rest of World mapset is used in these countries/regions: Argentina, Australia, Azerbaijan, Bahrain, Botswana, Brazil, Brunei, Chile, Columbia, Costa Rica, Egypt, India, Indonesia, Jordan, Kazakhstan, Kenya, Kuwait, Lebanon, Lesotho, Malaysia, Morocco, Namibia, New Zealand, Nigeria, Oman, Peru, Qatar, Reunion, Russia, Saudi Arabia, Singapore, South Africa, Swaziland, Thailand, United Arab Emirates, Uruguay, Venezuela, Vietnam and the Rest of the World.NOTE: For all service and warranty claims on Boom!™ Audio System components please refer to the latest Warranty Bulletin revision of the Boom!™ Audio Systems Warranty Procedures located on h-dnet.com.Customer: For all service and warranty claims on Boom!™ Audio System components please contact your Harley-Davidson dealership.

SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)

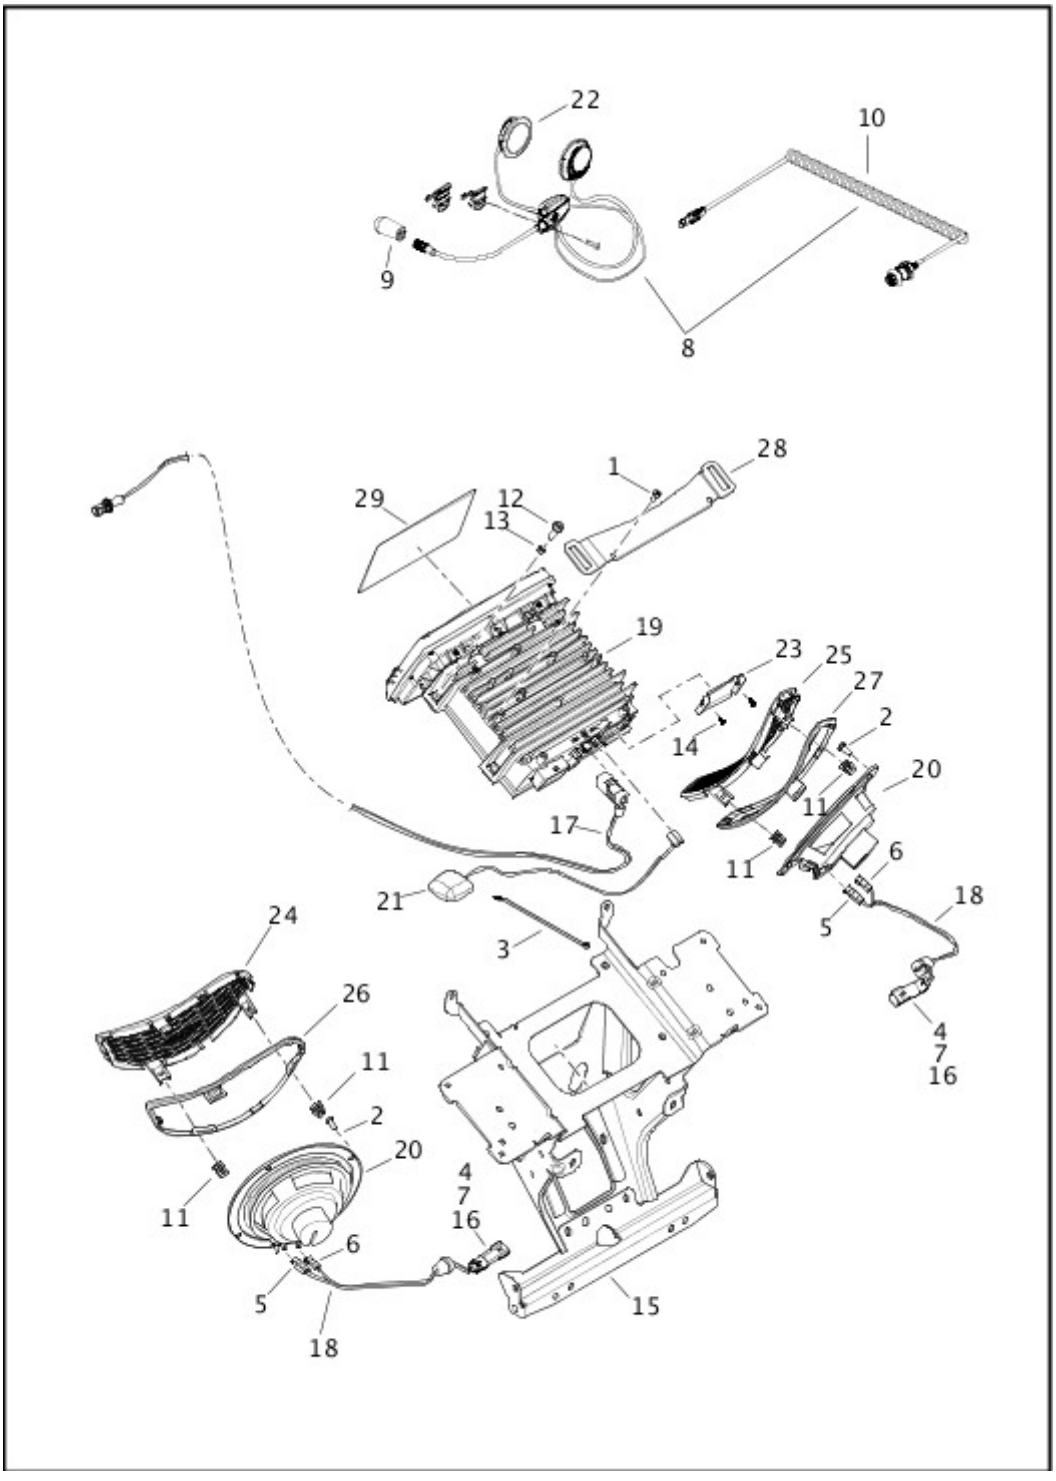

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2478	SCREW *(2)*	FLTRU, FLTRX, FLTRXS


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3152	SCREW *(8)*	FLTRU, FLTRX, FLTRXS
3	10065	CABLE STRAP	FLTRU, FLTRX, FLTRXS
4	72169-07	TERMINAL, pin, 16-20 AWG *(4)*	FLTRU, FLTRX, FLTRXS
5	72290-94	TERMINAL, insulated *(2)*	FLTRU, FLTRX, FLTRXS
6	72294-94	TERMINAL, insulated *(2)*	FLTRU, FLTRX, FLTRXS
7	73213-07	RETAINER, anchored *(2)*	FLTRU, FLTRX, FLTRXS
8	77117-10	HEADSET ASSEMBLY, with 77126-10, 77148-10 and 76000243 (Domestic)	FLTRU
8	77117-10	HEADSET ASSEMBLY, with 77126-10, 77148-10 and 76000243 (HDI) *(2)*	FLTRU
9	77126-10	WIND SOCK, microphone (Domestic)	FLTRU
9	77126-10	WIND SOCK, microphone (HDI) *(2)*	FLTRU
10	77148-10	COILED CORD, headset (Domestic)	FLTRU
10	77148-10	COILED CORD, headset (HDI) *(2)*	FLTRU
11	12200025	CLIP *(4)*	FLTRU, FLTRX, FLTRXS
12	12600070	BOLT *(4)*	FLTRU, FLTRX, FLTRXS
13	12600071	RETAINER, bolt *(4)*	FLTRU, FLTRX, FLTRXS
14	12600073	SCREW, accessory module *(2)*	FLTRU, FLTRX, FLTRXS
15	47200217	BRACKET	FLTRU, FLTRX, FLTRXS
16	69200272	HOUSING, two-way pin (black) *(2)*	FLTRU, FLTRX, FLTRXS
17	69200629	WIRE HARNESS, AM/FM antenna	FLTRX, FLTRXS
	69201017	WIRE HARNESS, AM/FM antenna	FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	69200752	WIRE HARNESS, speaker jumper, with 72169-07, 72290-94, 72294-94, 73213-07 and 69200272 *(2)*	FLTRU, FLTRX, FLTRXS
19	76000779	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (Domestic, California, Canada) (See NOTE 1)	FLTRU, FLTRX, FLTRXS
19	76000780	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, England) (See NOTE 2)	FLTRU, FLTRX, FLTRXS
19	76000781	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, Australia, Japan, Asia-Pacific, China) (See NOTE 3)	FLTRX
19	76000781	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, Australia, Japan, Asia-Pacific, Brazil, China) (See NOTE 3)	FLTRXS
19	76000781	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, Japan, Asia-Pacific, Brazil, China) (See NOTE 3)	FLTRU
19	76000075D	RADIO, BOOM!™ BOX 4.3, with 12600070 and 12600071 (Domestic, California)	FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

NOTE 1: 76000796 radio with the North America mapset is used in these countries/regions: Bahamas, Canada, Cayman Islands, Mexico, Puerto Rico and United States.NOTE 2: 76000797 radio with the European mapset is used in these countries/regions: Albania, Andorra, Austria, Belarus, Belgium, Bosnia Herzegovina, Bulgaria, Croatia, Czech Republic, Denmark, Estonia, Finland, France, Germany, Gibraltar, Greece, Hungary, Iceland, Ireland, Italy, Kosovo, Latvia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Malta, Moldova, Monaco, Montenegro, Netherlands, Norway, Poland, Portugal, Romania, San Marino, Serbia, Slovakia, Slovenia, Spain, Sweden, Switzerland, Turkey, Ukraine, Ukraine (Crimea), United Kingdom (Great Britain) and Vatican City.NOTE 3: 76000781 radio with the Rest of World mapset is used in these countries/regions: Argentina, Australia, Azerbaijan, Bahrain, Botswana, Brazil, Brunei, Chile, Columbia, Costa Rica, Egypt, India, Indonesia, Jordan, Kazakhstan, Kenya, Kuwait, Lebanon, Lesotho, Malaysia, Morocco, Namibia, New Zealand, Nigeria, Oman, Peru, Qatar, Reunion, Russia, Saudi Arabia, Singapore, South Africa, Swaziland, Thailand, United Arab Emirates, Uruguay, Venezuela, Vietnam and the Rest Of the World.

SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)

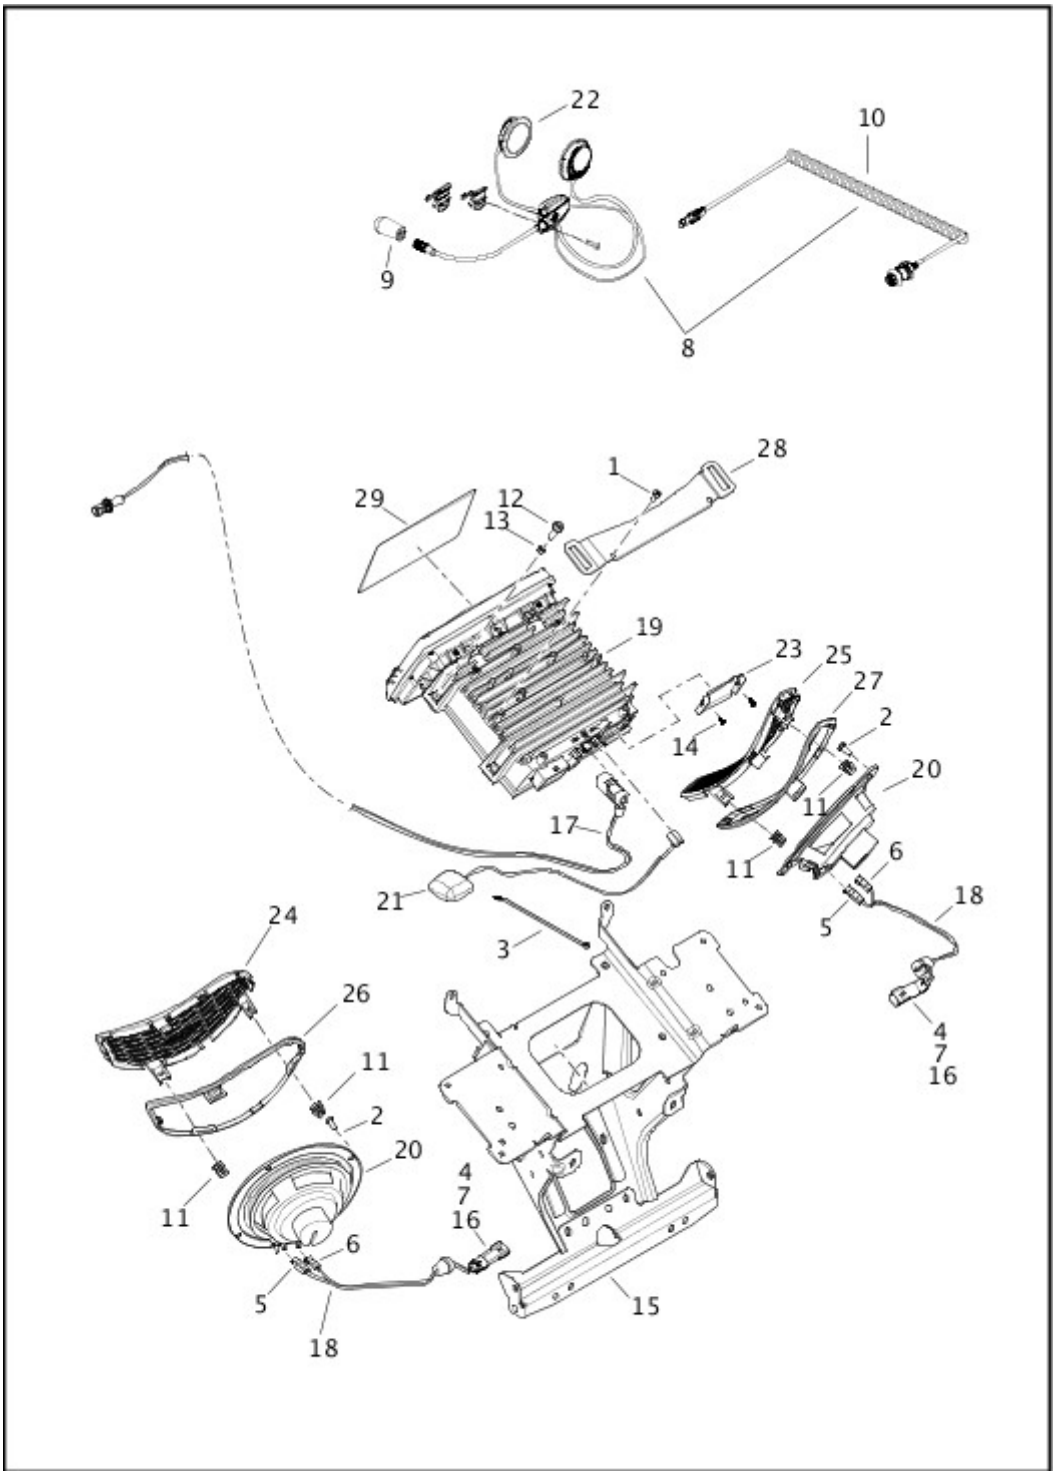

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	76000096	SPEAKER, 5-1/4 in *(2)*	FLTRU, FLTRX
20	76000320	SPEAKER, 6-1/2 in *(2)*	FLTRXS
21	76000789	ANTENNA, GPS	FLTRU, FLTRX, FLTRXS
22	76000243	EAR PAD, foam (Domestic) *(2)*	FLTRU
22	76000243	EAR PAD, foam (HDI) *(4)*	FLTRU
23	76000252	PLATE	FLTRU, FLTRX, FLTRXS
24	76000453	SPEAKER GRILLE (right)	FLTRU, FLTRX
24	76000593	SPEAKER GRILLE, with 12200025, 76000455 (right)	FLTRXS
25	76000454	SPEAKER GRILLE (left)	FLTRU, FLTRX
25	76000592	SPEAKER GRILLE, with 12200025, 76000456 (left)	FLTRXS
26	76000455	GASKET (right)	FLTRU, FLTRX, FLTRXS
27	76000456	GASKET (left)	FLTRU, FLTRX, FLTRXS
28	76000468	BRACKET, radio	FLTRU, FLTRX, FLTRXS
29	91700034	KIT, RADIO TOUCH SCREEN PROTECTOR	FLTRX

NOTE: For all service and warranty claims on Boom!™ Audio System components please refer to the latest Warranty Bulletin revision of the Boom!™ Audio Systems Warranty Procedures located on h-dnet.com.Customer: For all service and warranty claims on Boom!™ Audio System components please contact your Harley-Davidson dealership.

ANTENNAS

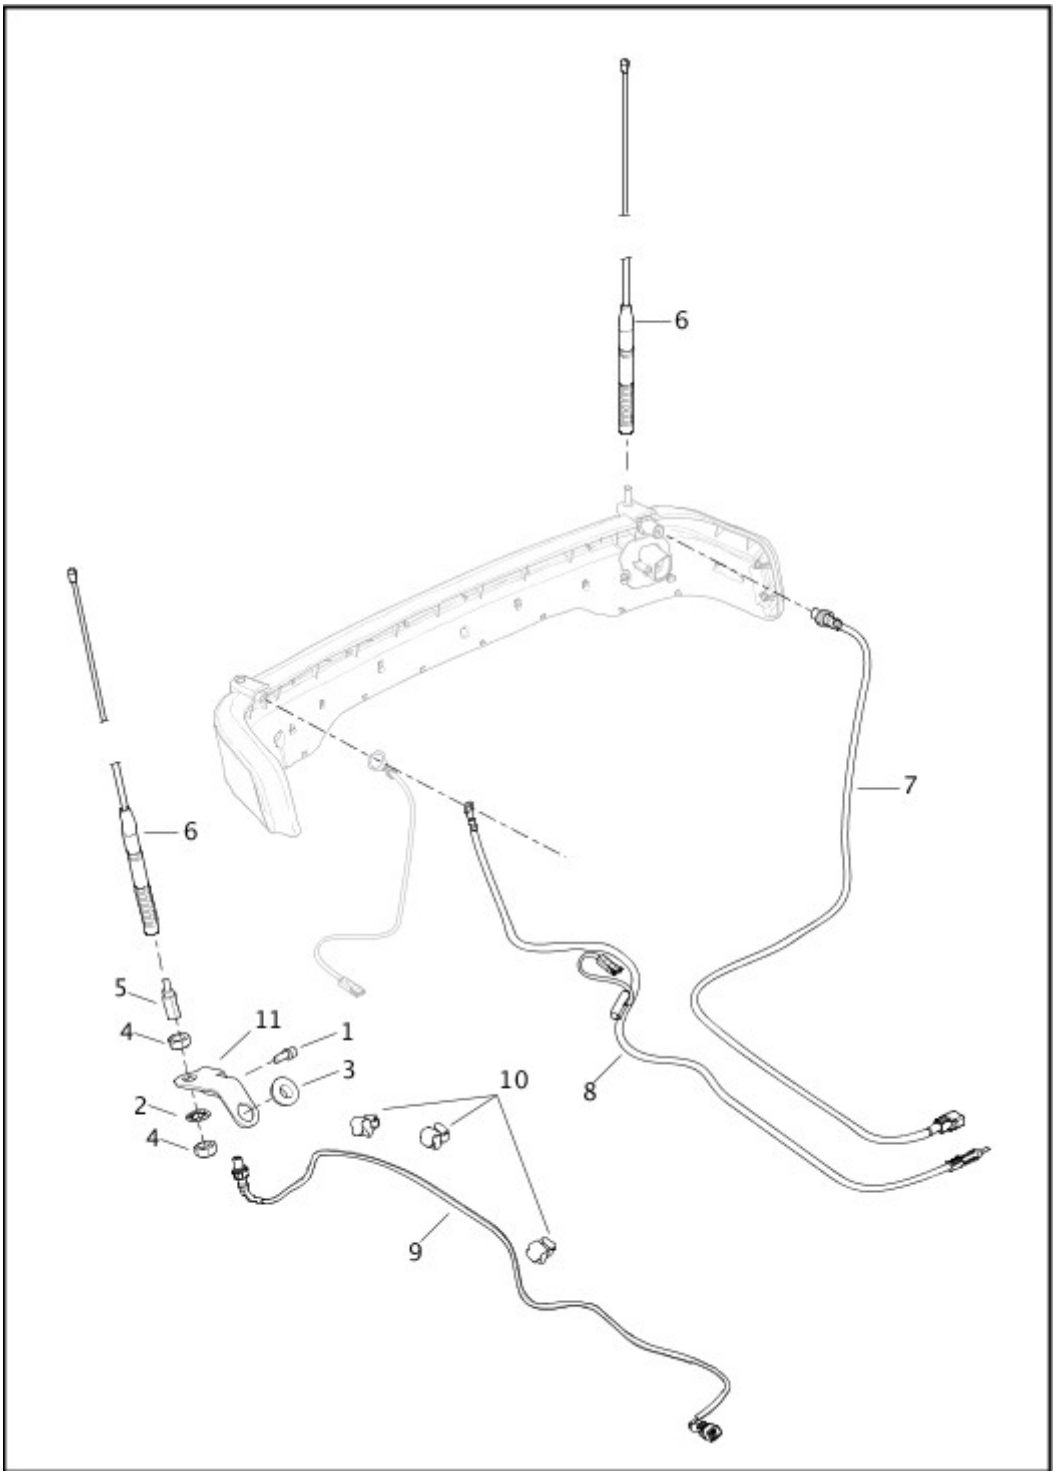


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4867	SCREW	FLHX, FLHXS, FLTRX, FLTRXS
2	7129	LOCKWASHER	FLHX, FLHXS, FLTRX, FLTRXS
3	11543	GROMMET	FLHX, FLHXS, FLTRX, FLTRXS
4	76259-86	NUT *(2)*	FLHX, FLHXS, FLTRX, FLTRXS
5	76335-87	ANTENNA BASE ASSEMBLY, with 7129 and 76259-86	FLHX, FLHXS, FLTRX, FLTRXS
6	76000799	ANTENNA MAST, AM/FM/WB/LW	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	69200210	CABLE EXTENSION, AM/FM antenna	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	69200211	CABLE EXTENSION, CB antenna	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	69200295	CABLE EXTENSION, AM/FM antenna	FLHX, FLHXS, FLTRX, FLTRXS
10	69200313	CLIP, harness *(3)*	FLHX, FLHXS, FLTRX, FLTRXS
11	76000183	BRACKET, antenna mounting	FLHX, FLHXS, FLTRX, FLTRXS

INTERCOM CONTROL POD

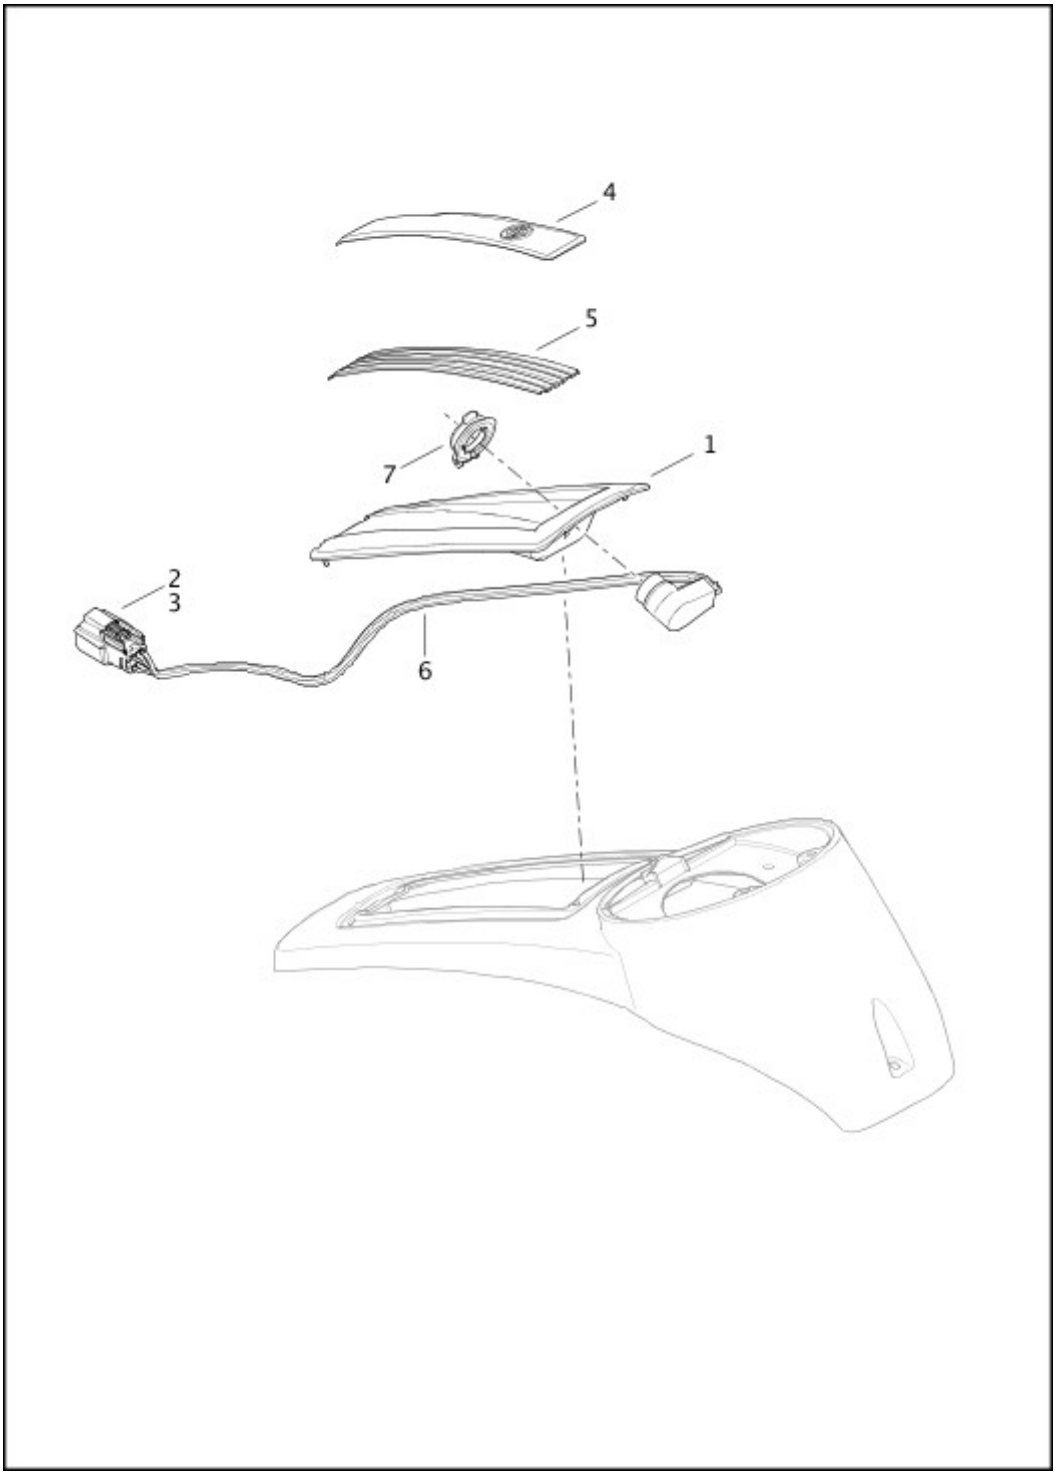


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	15341-08	HOUSING, pod	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	72168-07	TERMINAL, socket, 18-20 AWG *(6)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
3	72414-07BK	HOUSING, six-way socket (black)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
4	14100083	INSERT, console pod	FLHTCU, FLTRU
5	14100085	INSERT, console pod	FLHTK, FLHTK SHRINE, FLHTKL
6	69200127	HARNESS, console audio, DIN, with 72168-07 and 72414-07BK	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	76266-98A	CAP ASSEMBLY, weather	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

TOUR-PAK (BOTTOM) (1 OF 2)

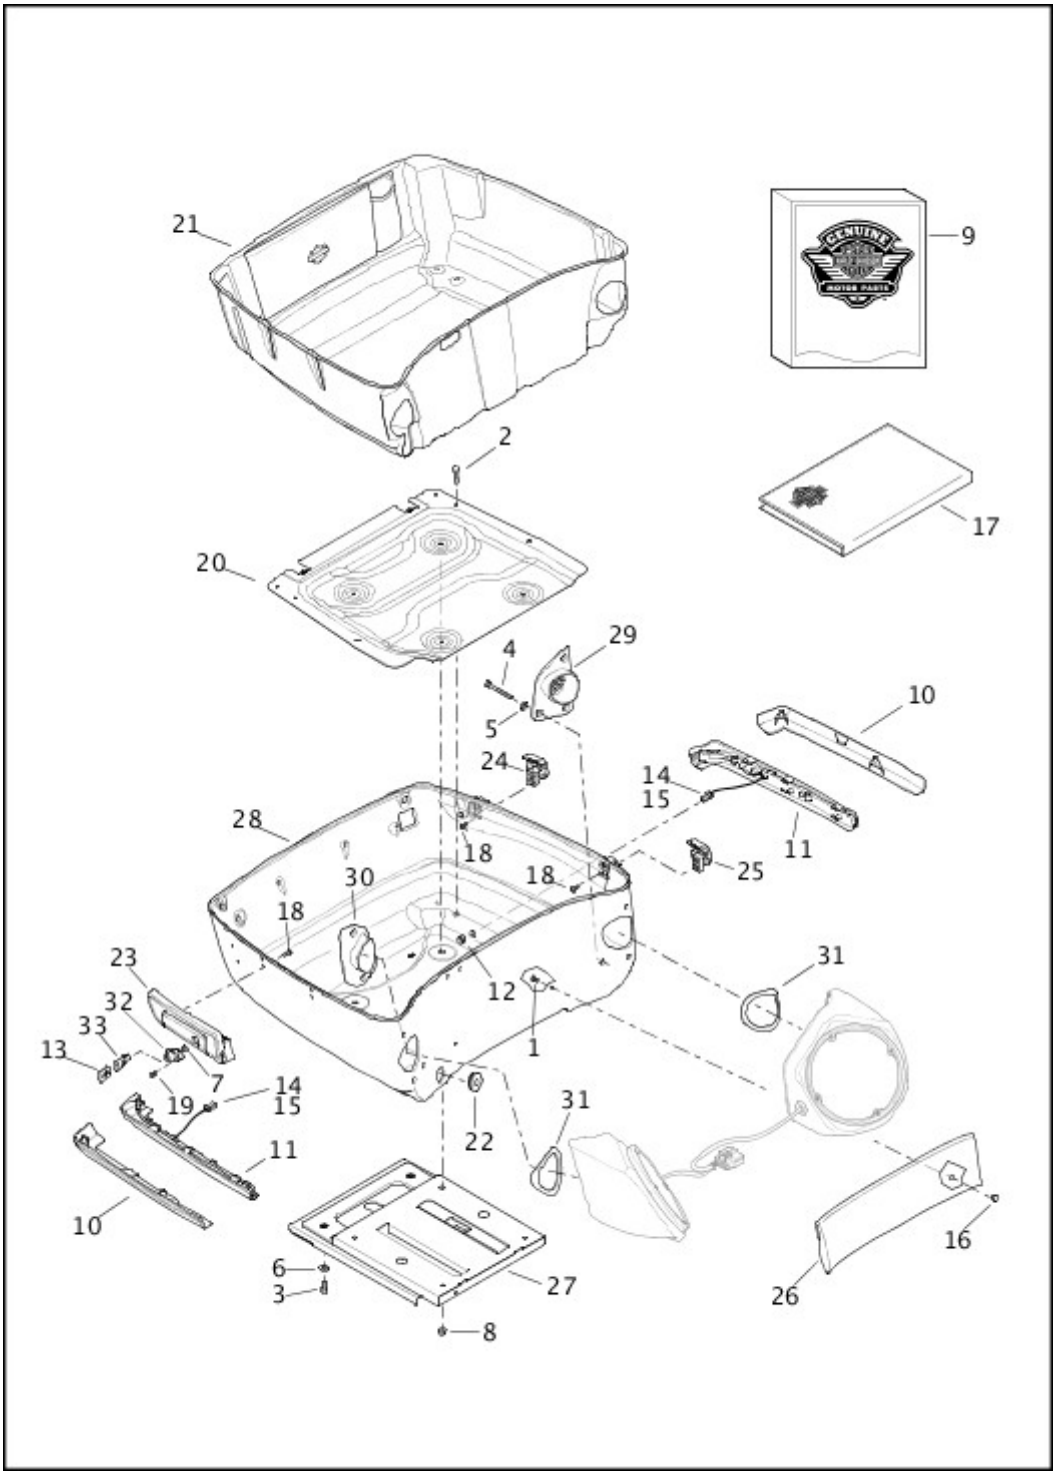

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2724	SCREW *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	2968	SCREW *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
3	3767B	BOLT (Asia-Pacific) *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
4	3910	SCREW *(6)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
5	6703	WASHER *(6)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	6703	WASHER (Asia-Pacific) *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	7586	JAMNUT	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	7716	LOCKNUT *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	53598-88A	LINER, removable	FLHTCU, FLTRU
9	92038-10	LINER, removable	FLHTK, FLHTK SHRINE, FLHTKL
10	53734-06	TRIM, left-bottom, Tour-Pak (chrome) (HDI, Japan, Asia-Pacific)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
10	53735-06	TRIM, right-bottom, Tour-Pak (chrome) (HDI, Japan, Asia-Pacific)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
11	53788-06	LIGHT, right-bottom, Tour-Pak, sidemarker, with 73152-96BK and 73191-96 (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
11	53789-06	LIGHT, left-bottom, Tour-Pak, sidemarker, with 73152-96BK and 73191-96 (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
12	57978-00	GROMMET *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
13	61081-92	COVER, key-head (set of 2)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	73152-96BK	HOUSING, two-way socket (Domestic) (black) *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
15	73191-96	TERMINAL, socket, 16-20 AWG (Domestic) *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
16	90844-80	ACORN NUT *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
17	99461-89	COVER, owner manual (Domestic, California, Canada, Australia)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
18	10200061	SCREW *(12)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
19	10200062	SCREW *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
20	53000091	PLATE, Tour-Pak reinforcing	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

TOUR-PAK (BOTTOM) (2 OF 2)

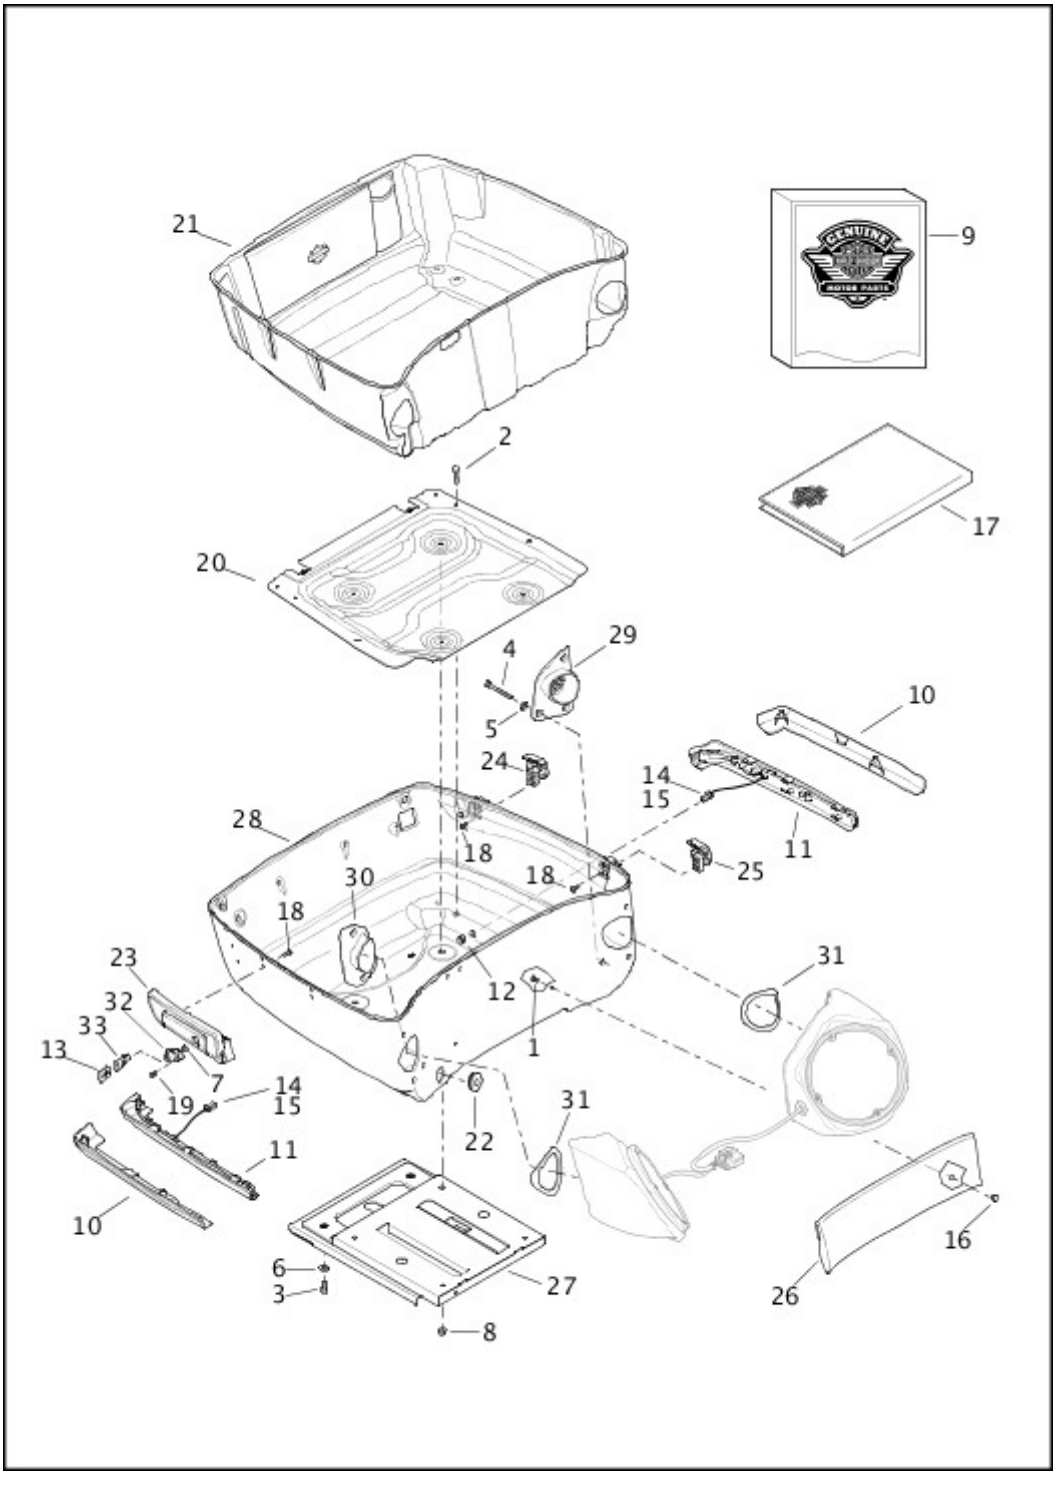


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	53000123	LINER, molded, with pouch	FLHTCU
21	53000124	LINER, molded, with pouch	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
22	53000132	GROMMET	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
23	53000138	HASP ASSEMBLY, bottom	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
24	53000139	HINGE ASSEMBLY, rear	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
25	53000140	HINGE ASSEMBLY, front	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
26	53000308	COVER, TOUR-PAK wiring	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
27	53000311	ADAPTER PLATE, TOUR-PAK (China)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
28	53000346	BOTTOM, Tour-Pak (unpainted)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
29	76000172	MOUNTING BRACKET, speaker (left)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
30	76000173	MOUNTING BRACKET, speaker (right)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
31	76000174	GASKET, speaker pod *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
32	90300030	LOCK, with 7586 (specify key number)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
33	90300043	KEY, with 61081-92 (set of 2) (specify key number)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

TOUR-PAK (COVER)

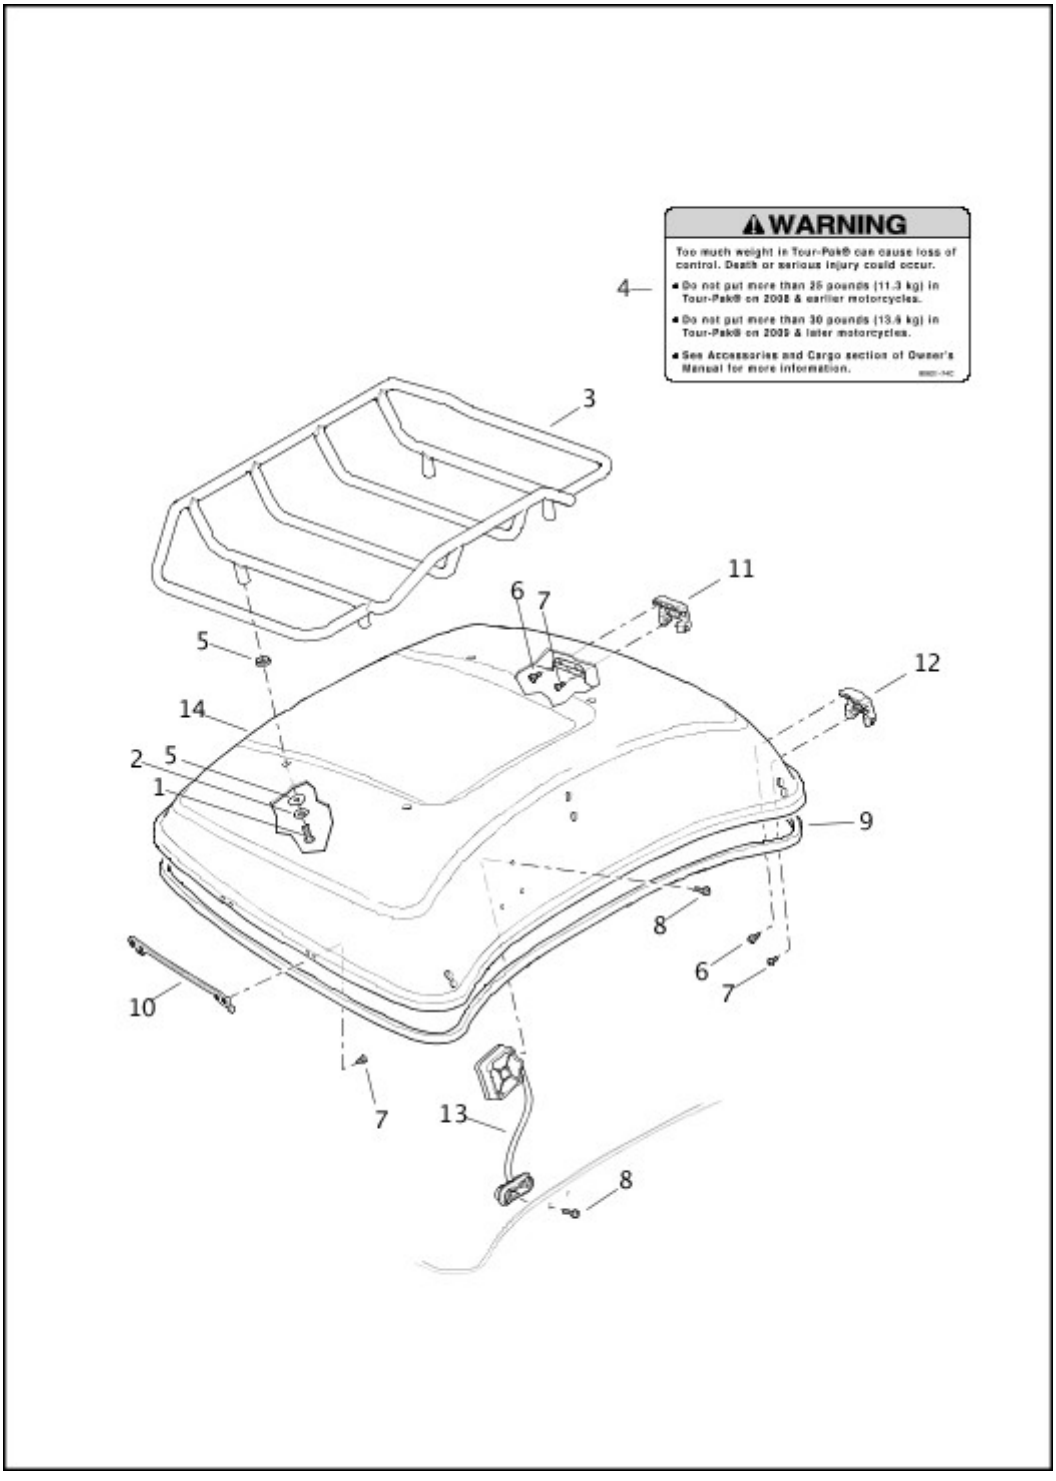


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	923	SCREW *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	6703	WASHER *(4)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
3	53665-87	LUGGAGE RACK, Tour-Pak, with hardware, with 6703 and 90869-85A (chrome)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
4	90821-74C	LABEL, TOUR-PAK, load limit	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
5	90869-85A	MOUNTING PAD AND WASHER SET, luggage rack	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	10200061	SCREW *(4)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	10200062	SCREW *(8)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	10200154	SCREW *(5)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	53000090	GASKET, cover	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
10	53000137	HASP, Tour-Pak lid	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
11	53000139	HINGE ASSEMBLY, rear	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
12	53000140	HINGE ASSEMBLY, front	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
13	53000141A	TETHER, retractable	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
14	53000347	COVER, Tour-Pak (unpainted)	FLHTCU
14	53000370	COVER, Tour-Pak (unpainted)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)

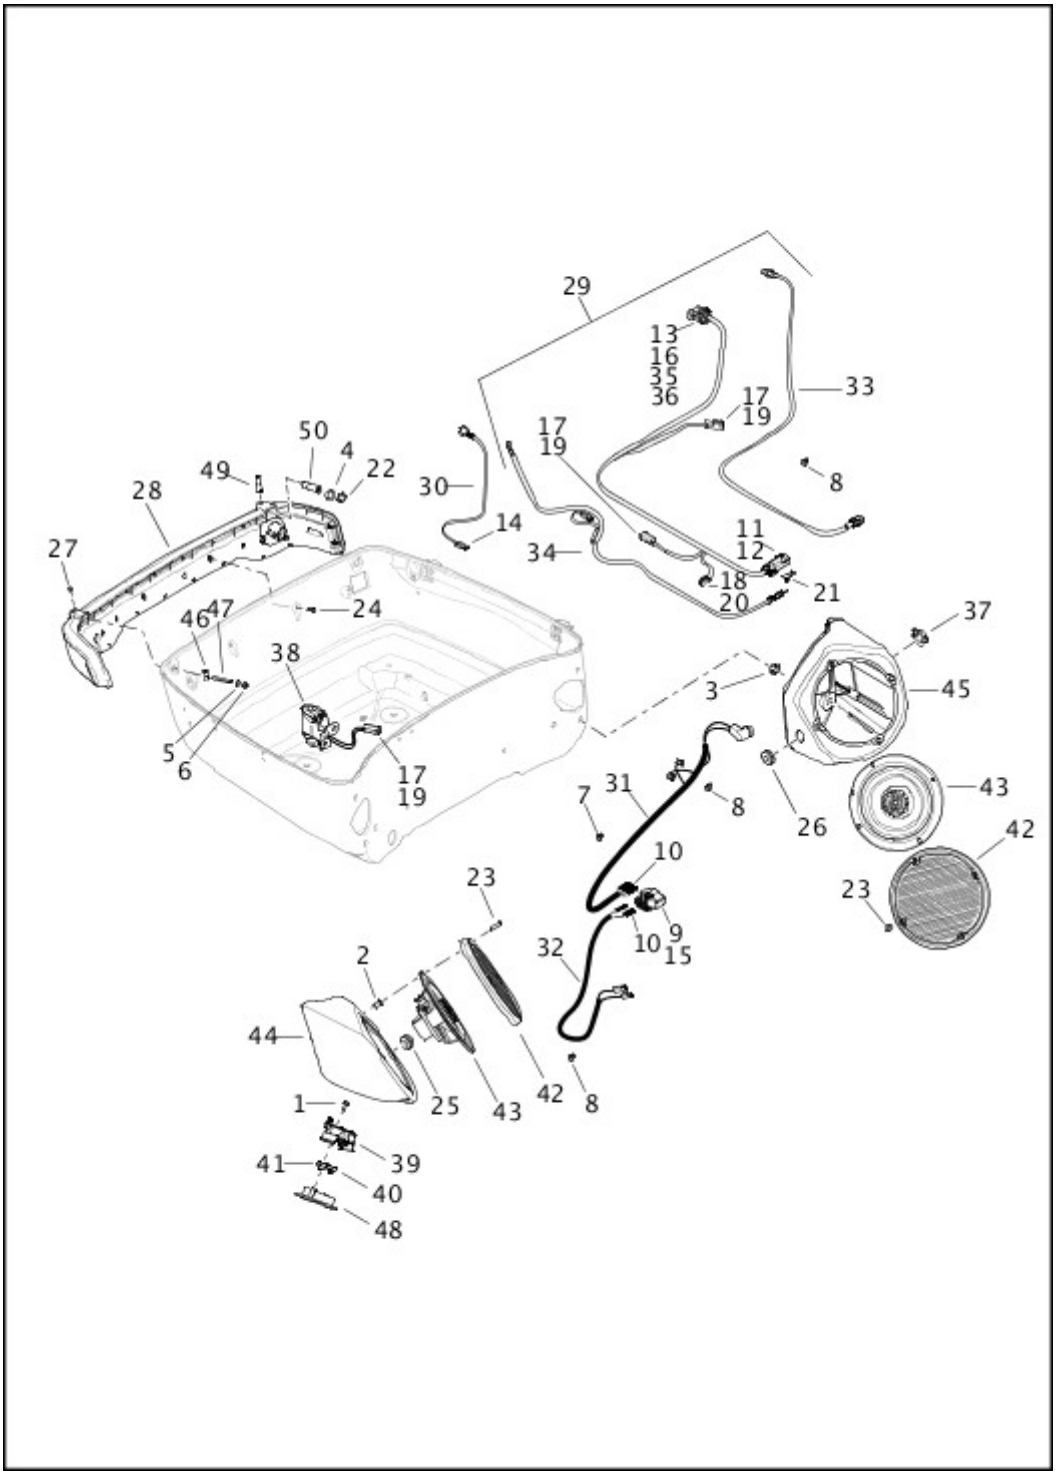

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3612	SCREW *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
2	5210	WELL NUT *(8)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
3	5211	CRIMP NUT *(6)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
4	6113	WASHER	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
5	6220W	WASHER	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	7492	NUT, with lockwasher	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	10006	CABLE STRAP	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	10065	CABLE STRAP *(3)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	72166-07BK	HOUSING, 16-way socket (black)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
10	72168-07	TERMINAL, socket, 18-20 AWG *(13)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
11	72169-07	TERMINAL, pin, 16-20 AWG *(6)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
12	72188-07BK	HOUSING, six-way pin (black)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
13	72213-94	TERMINAL, socket, 16-20 AWG *(5)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
14	72290-94	TERMINAL, insulated	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
15	72473-07	SEAL PIN, natural *(3)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
16	72610-08	WIRE SEAL, 18-20 AWG (white) *(5)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
17	73102-96BK	HOUSING, two-way pin (black) *(2)*	FLHTCU
17	73102-96BK	HOUSING, two-way pin (black) *(3)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	73152-96WE	SOCKET HOUSING, two-way (white)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
19	73190-96	TERMINAL, pin, 16-20 AWG *(4)*	FLHTCU
19	73190-96	TERMINAL, pin, 16-20 AWG *(6)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
20	73191-96	TERMINAL, socket, 16-20 AWG *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
21	73213-07	RETAINER, anchored	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
22	76353-00	NUT	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
23	10200105	SCREW *(8)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
24	10200133	SCREW *(8)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
25	12100017	GROMMET, speaker (right)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
26	12100018	GROMMET, speaker (left)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
27	12100023	PLUG	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)

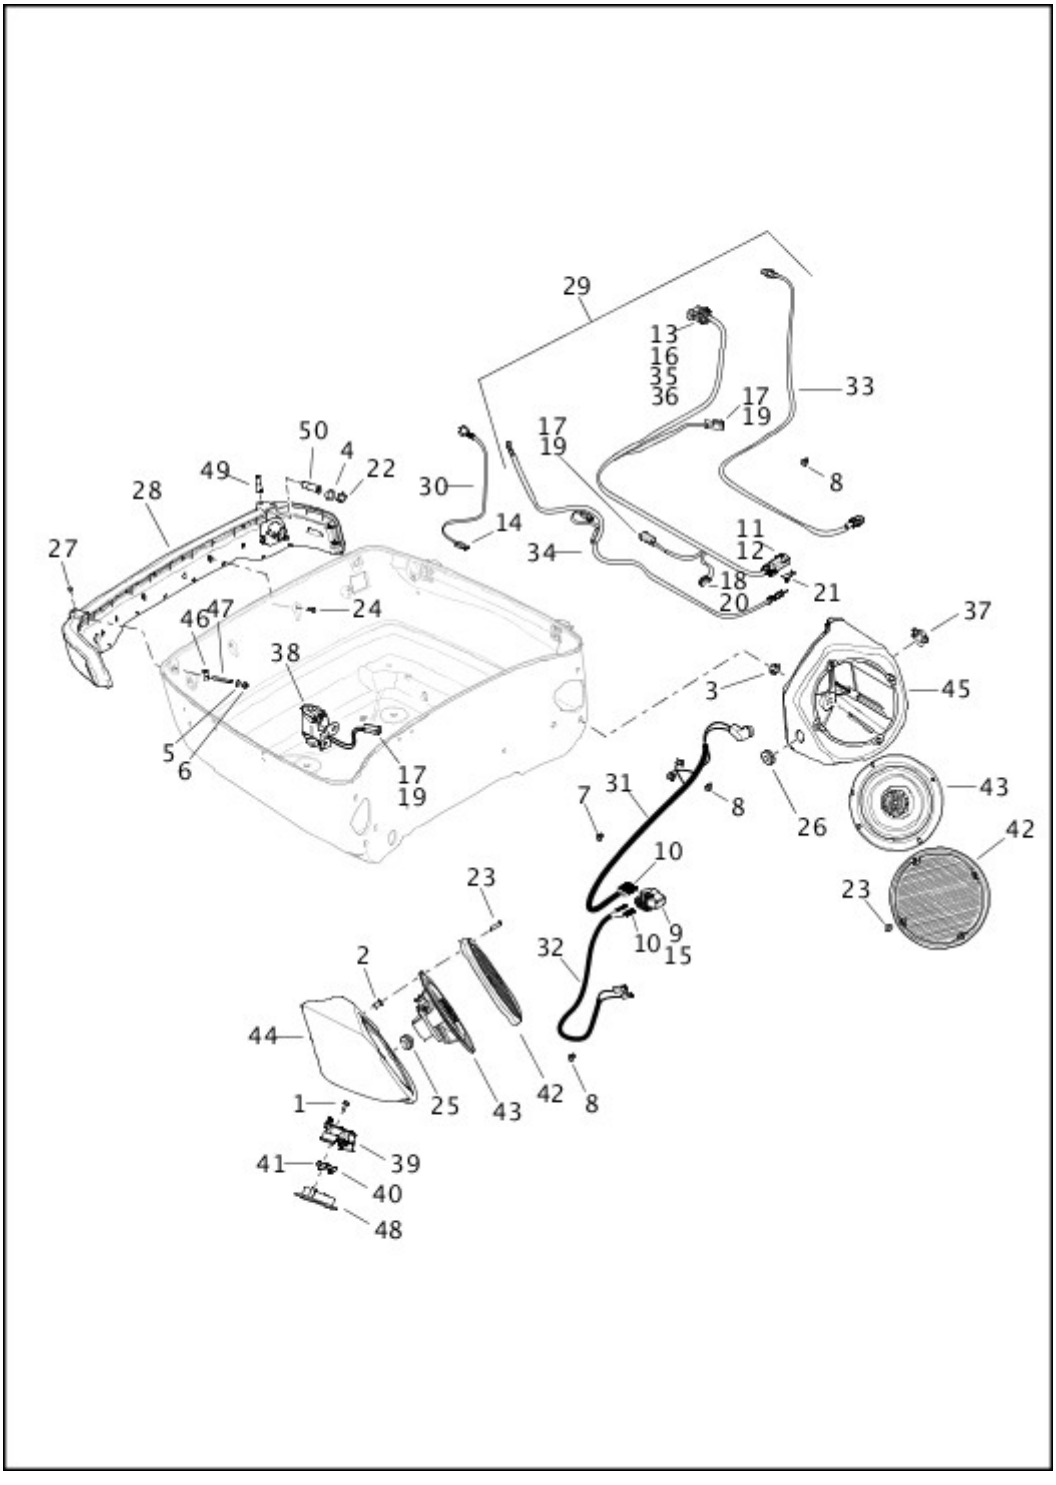

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	67800093	LAMP, Tour-Pak, with 76000164, 76000165, 76000186 and 76000208 (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
28	67800101	LAMP, Tour-Pak, with 76000164, 76000165, 76000186 and 76000208 (HDI)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
29	69200131	WIRING HARNESS, Tour-Pak, with 10065, 72169-07, 72188-07BK, 72213-94, 72610-08, 73102-96BK, 73152-96WE, 73190-96, 73191-96, 69200210, 69200211, 69200225 and 69200226	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
30	69200135	WIRING HARNESS, AM/FM ground jumper, with 72290-94	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
31	69200138	WIRING HARNESS, speaker, with 10065 and 72168-07 (left)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
32	69200139	WIRING HARNESS, speaker, with 10065, 72168-07 and 71400005 (right)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
33	69200210	CABLE EXTENSION, AM/FM antenna	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
34	69200211	CABLE EXTENSION, CB antenna	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
35	69200225	HOUSING, five-way socket (black)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
36	69200226	SECONDARY LOCK, five-way (black)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
37	69200237	WEATHER CAP ASSEMBLY	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
38	69200826	KIT, AUXILIARY POWER OUTLET, Tour-Pak, with 73102-96BK and 73190-96	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
39	71400005	SWITCH ASSEMBLY, rear speaker, with 71400006 and 71400007	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
40	71400006	KNOB, push to talk (ptt) vol-/vol+ rear control switch	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
41	71400007	KNOB, mode select up/down rear control switch	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
42	76000092	GRILLE, rear speaker *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
43	76000096	SPEAKER, 5.25 inch *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
44	76000160	SPEAKER BOX ENCLOSURE, right rear	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
45	76000161	SPEAKER BOX ENCLOSURE, left rear	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
46	76000164	STUD, antenna	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
47	76000165	SET SCREW, antenna, M5 X 43mm	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
48	76000177	BEZEL, speaker switch	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
49	76000186	STUD, antenna	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
50	76000208	PLUG ASSEMBLY, antenna	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

SADDLEBAGS - EXCEPT FLHRC (1 OF 4)

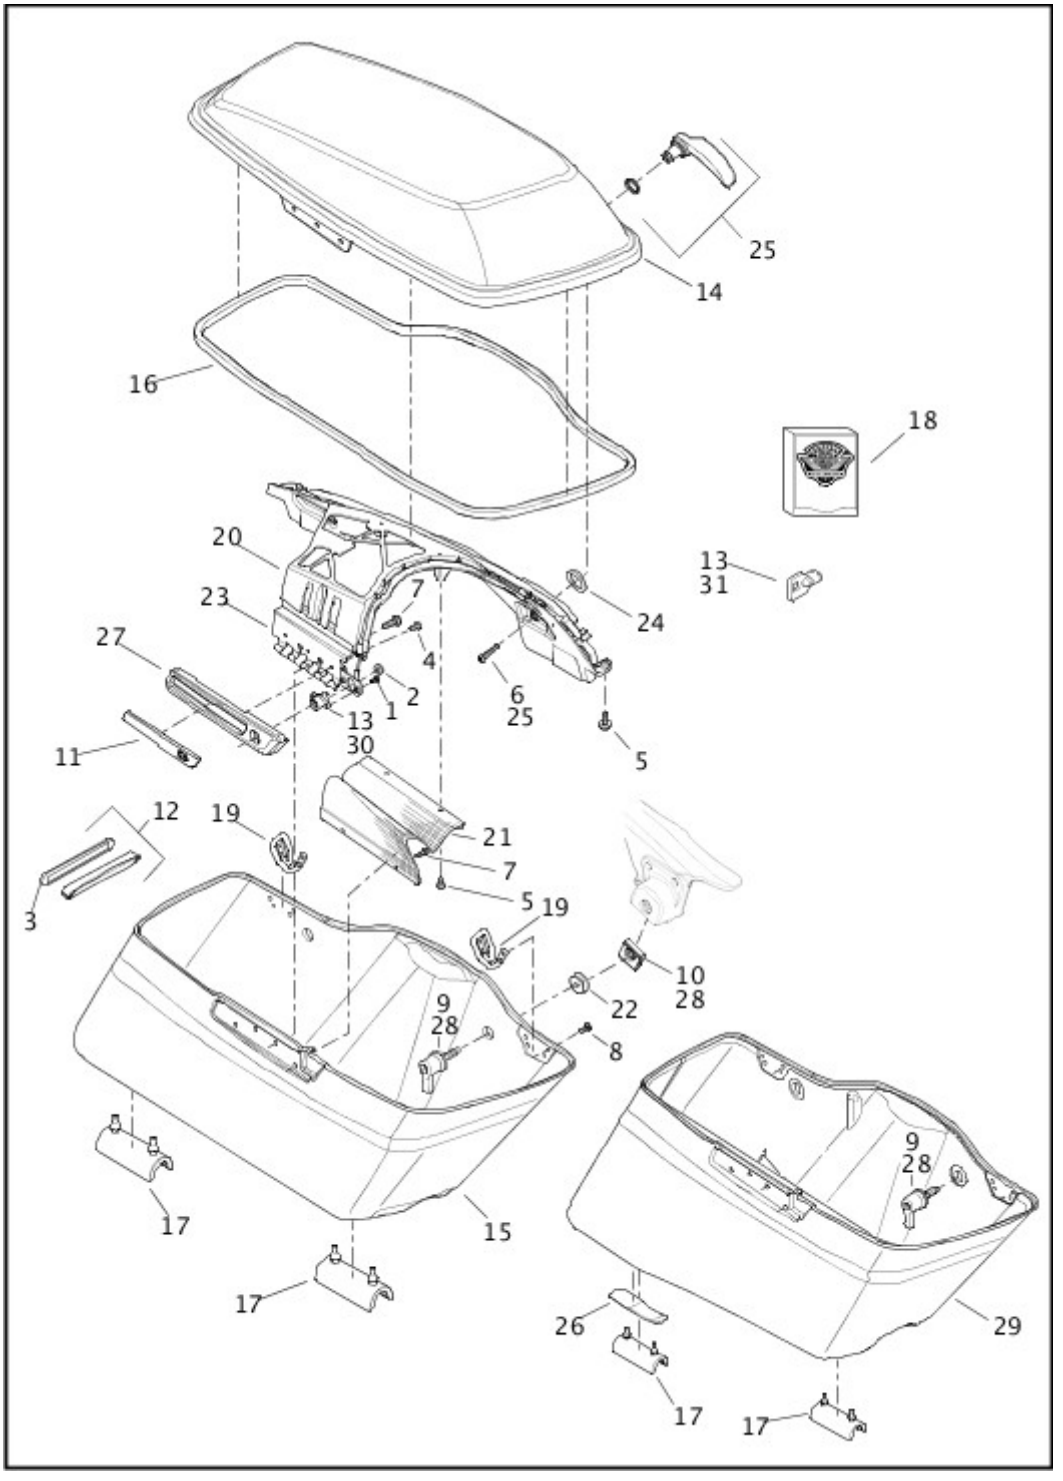

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3656	SCREW *(4)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
2	7586	JAMNUT *(2)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	69490-07	REFLECTOR (red) (Canada) *(2)*	FLHRXS, FLHT, FLHX, FLHXS, FLTRX, FLTRXS
4	10200062	SCREW *(6)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
5	10200063	SCREW *(12)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	10200064	SCREW *(2)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	10200065	SCREW *(8)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
8	10200103	SCREW *(16)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
9	10200533	SCREW, single sided lever *(4)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	10400034	NUT, clip *(4)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

SADDLEBAGS - EXCEPT FLHRC (2 OF 4)

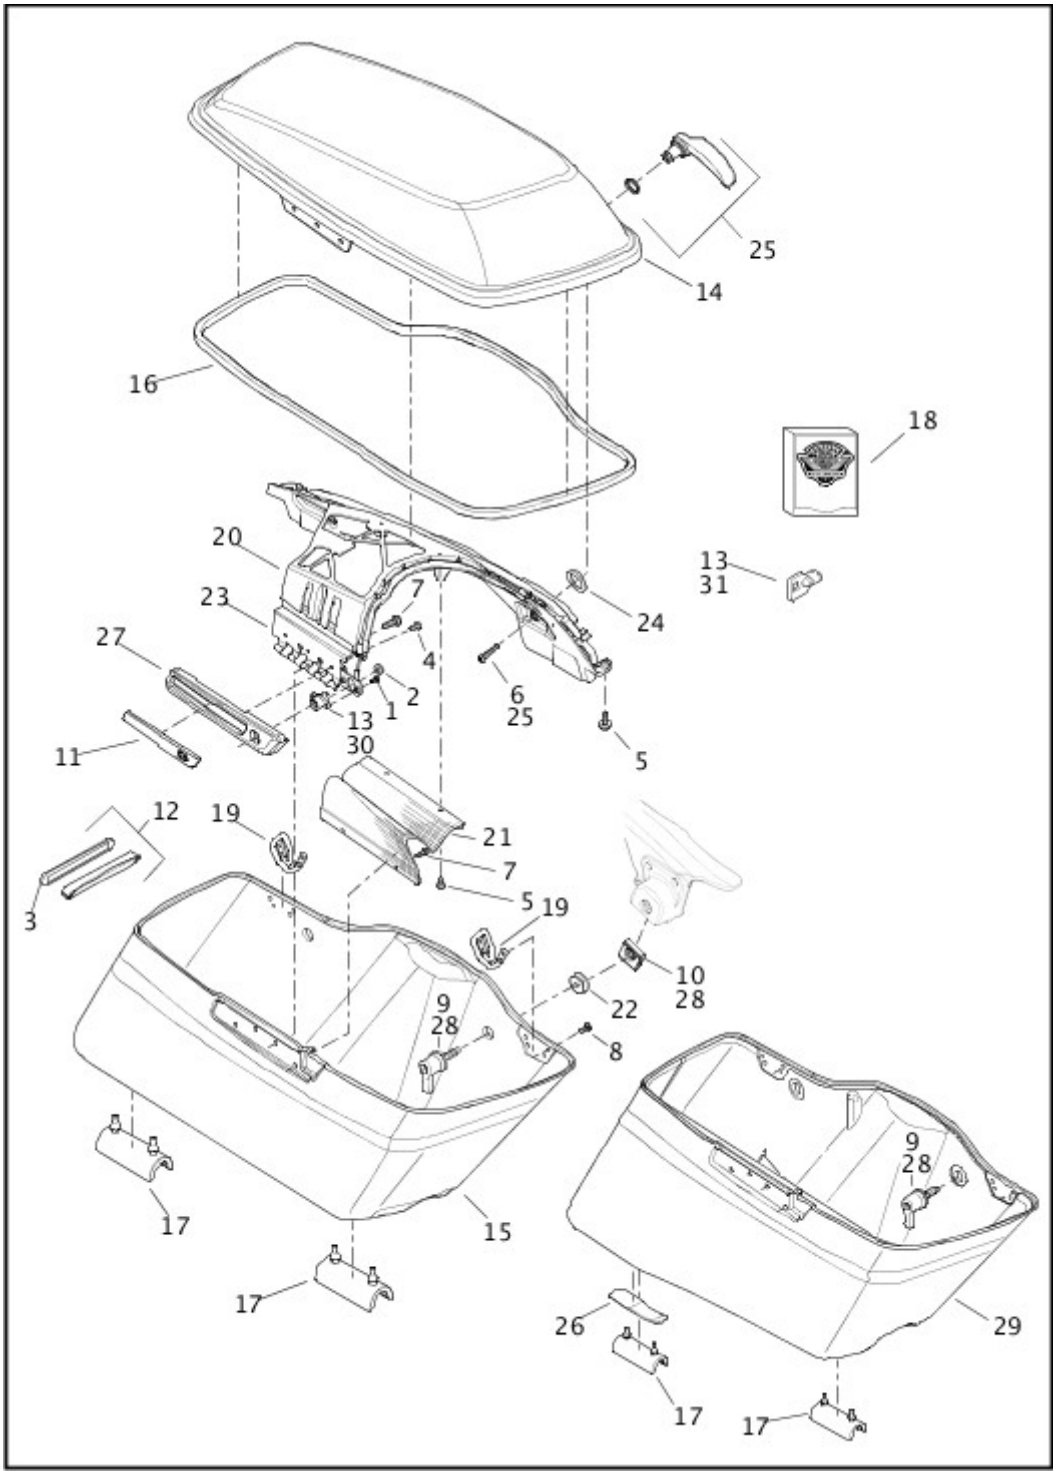

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	67900065	REFLECTOR (left) (red) (Domestic, Canada)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	67900066	REFLECTOR (left) (amber) (HDI)	FLHR, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	67900067	REFLECTOR (right) (red) (Domestic, Canada)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	67900068	REFLECTOR (right) (amber) (HDI)	FLHR, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
12	67900256	REFLECTOR ASSEMBLY, with 69490-07 (red) (Domestic) *(2)*	FLHT
12	67900256	REFLECTOR ASSEMBLY, with 69490-07 (red) (Canada) *(2)*	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
13	71400010A	LOCKSET, complete, with keys, ignition knob, fork lock and saddlebag locks	FLHR, FLHRXS
13	71400015B	LOCKSET, complete, with keys, ignition knob, saddlebag and Tour-Pak locks	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
13	71400016B	LOCKSET, complete, with keys, ignition knob and saddlebag lock	FLHT, FLHX, FLHXS, FLTRX, FLTRXS
14	90200411	SADDLEBAG COVER (right) (unpainted)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	90200413	SADDLEBAG COVER (left) (unpainted)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
15	90200412	SADDLEBAG BOTTOM (right) (unpainted)	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
15	90200414	SADDLEBAG BOTTOM (left) (unpainted)	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
16	90200415	GASKET, cover *(2)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

SADDLEBAGS - EXCEPT FLHRC (3 OF 4)

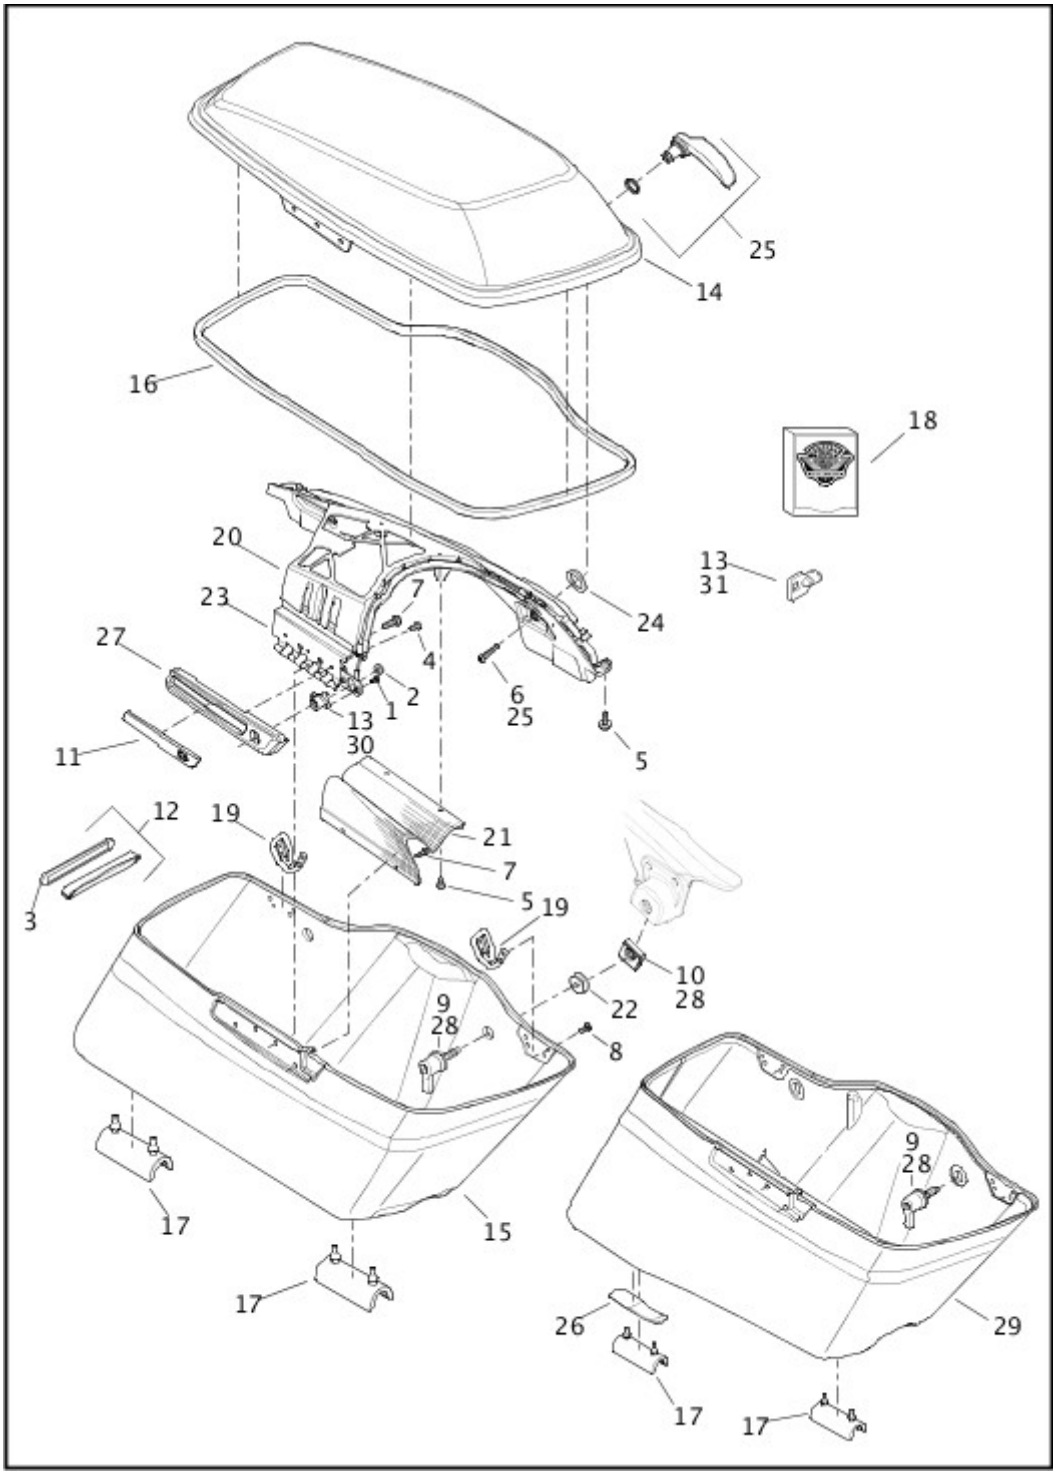

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	90200467	CUSHION, saddlebag support *(4)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
18	90200488	LINER, removable *(2)*	FLHTCU, FLTRU
18	90200489	LINER, removable *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
19	90200519	STRIKE, saddlebag *(4)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
20	90200520	LATCH ASSEMBLY (right)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
20	90200521	LATCH ASSEMBLY (left)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
21	90200522	TETHER, saddlebag *(2)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
22	90200611	ISOLATOR, saddlebag *(4)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
23	90200899	HINGE ASSEMBLY (right)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
23	90200900	HINGE ASSEMBLY (left)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
24	90200901	SEAL *(2)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
25	90200902	HANDLE KIT, saddlebag, with 10200064 and grommet (right)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
25	90200903	HANDLE KIT, saddlebag, with 10200064 and grommet (left)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
26	90200963	WEAR STRIP (left)	FLHRXS, FLHXS, FLTRXS
26	90200964	WEAR STRIP (right)	FLHRXS, FLHXS, FLTRXS

SADDLEBAGS - EXCEPT FLHRC (4 OF 4)

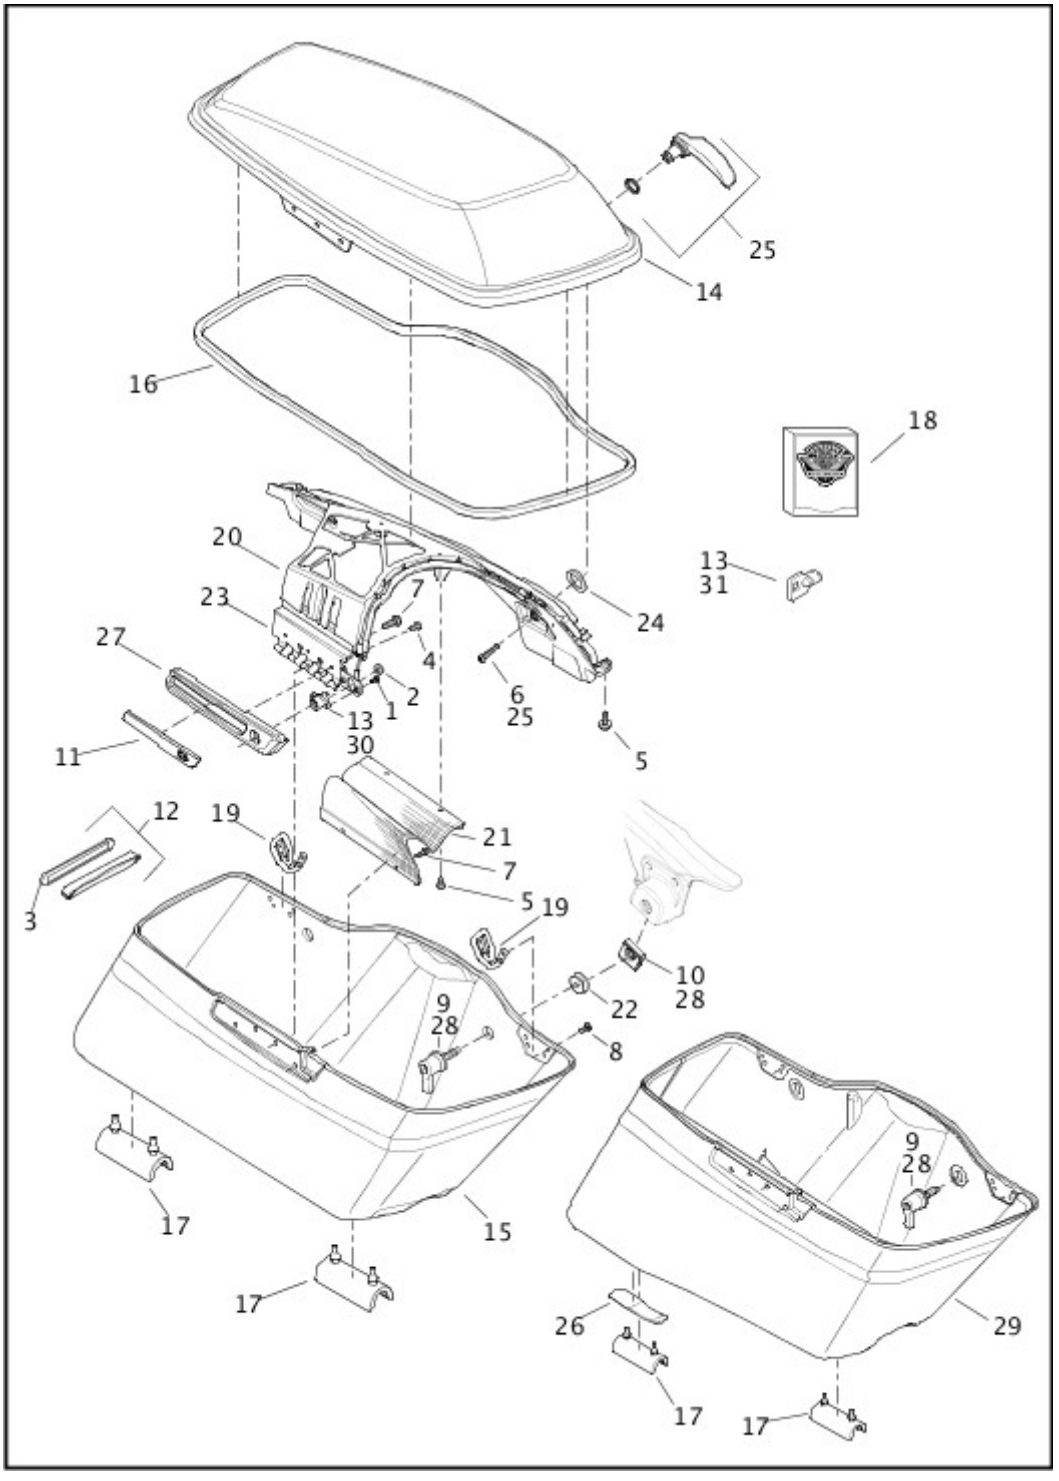

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	90201295	FACEPLATE (left) (chrome)	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU
27	90200983EKA	FACEPLATE (left) (midnight blue)	FLHRXS, FLHX
27	90200983DH	FACEPLATE (left) (vivid black)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
27	90200983ELD	FACEPLATE (left) (kinetic green)	FLHX, FLTRX
27	90200983ELE	FACEPLATE (left) (blue max)	FLHX, FLTRX
27	90200983EKG	FACEPLATE (left) (wicked red denim)	FLHXS, FLTRXS
27	90200983EKR	FACEPLATE (left) (barracuda silver)	FLHXS
27	90200983ELG	FACEPLATE (left) (scorched orange)	FLHRXS, FLHXS, FLTRXS
27	90200983EFF	FACEPLATE (left) (wicked red)	FLHX, FLTRX
27	90200983EFC	FACEPLATE (left) (industrial gray denim)	FLHXS, FLTRXS
27	90200983EFH	FACEPLATE (left) (twisted cherry)	FLHRXS, FLTRX
27	90200983EKP	FACEPLATE (left) (billiard blue)	FLHXS, FLTRXS
27	90200983ELI	FACEPLATE (left) (silver flux)	FLHXS, FLTRXS
27	90200983EEZ	FACEPLATE (left) (industrial gray)	FLTRX
27	90200983EFW	FACEPLATE (left) (bonneville salt denim)	FLHRXS
27	90201296	FACEPLATE (right) (chrome)	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
27	90200984EKA	FACEPLATE (right) (midnight blue)	FLHRXS, FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	90200984DH	FACEPLATE (right) (vivid black)	FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
27	90200984ELD	FACEPLATE (right) (kinetic green)	FLHX, FLTRX
27	90200984ELE	FACEPLATE (right) (blue max)	FLHX, FLTRX
27	90200984EKG	FACEPLATE (right) (wicked red denim)	FLHXS, FLTRXS
27	90200984EKR	FACEPLATE (right) (barracuda silver)	FLHXS
27	90200984ELG	FACEPLATE (right) (scorched orange)	FLHRXS, FLHXS, FLTRXS
27	90200984EFF	FACEPLATE (right) (wicked red)	FLHX, FLTRX
27	90200984EFC	FACEPLATE (right) (industrial gray denim)	FLHXS, FLTRXS
27	90200984EFH	FACEPLATE (right) (twisted cherry)	FLHRXS, FLTRX
27	90200984EKP	FACEPLATE (right) (billiard blue)	FLHXS, FLTRXS
27	90200984ELI	FACEPLATE (right) (silver flux)	FLHXS, FLTRXS
27	90200984EEZ	FACEPLATE (right) (industrial gray)	FLTRX
27	90200984EFW	FACEPLATE (right) (bonneville salt denim)	FLHRXS
28	90201540	KIT, SADDLEBAG MOUNT, with 10200533 and 10400034 (set of 4)	FLHR, FLHRXS, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
29	90201743	SADDLEBAG BOTTOM, with 90820-93D, 90200467 and 90200964 (right) (prime)	FLHRXS, FLHXS, FLTRXS
29	90201742	SADDLEBAG BOTTOM, with 90820-93D, 90200467 and 90200963 (left) (prime)	FLHRXS, FLHXS, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
30	90300024	LOCK, with 7586 (specify key number) *(2)*	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
31	90300043	KEY, with 61081-92 (set of 2) (specify key number)	FLHR, FLHRXS, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

SADDLEBAGS - FLHRC

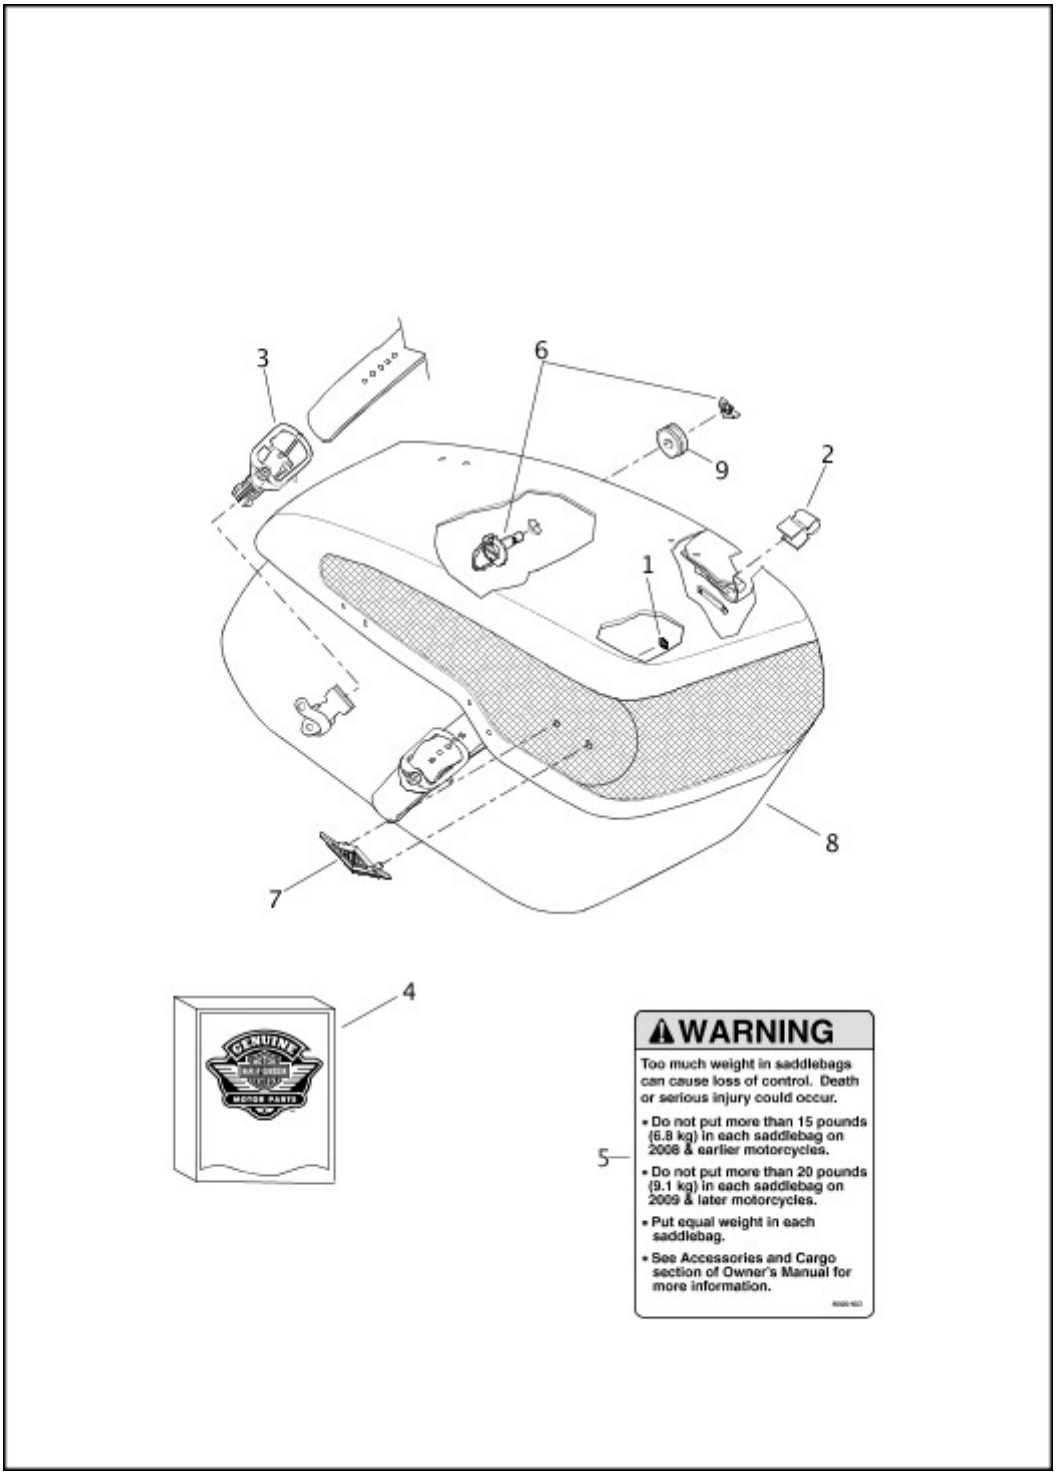


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	8126A	PUSH NUT, eight prong *(4)*	FLHRC
2	90382-98	SPRING KIT, hinge, with two springs *(2)*	FLHRC
3	90425-98	BUCKLE *(4)*	FLHRC
4	90439-10	SADDLEBAG STRAP REPAIR KIT (left)	FLHRC
4	90482-10	SADDLEBAG STRAP REPAIR KIT (right)	FLHRC
5	90820-93D	LABEL, saddlebag load limits	FLHRC
6	10900037	STUD KIT, saddlebag, with studs and receptacles (set of 2) *(2)*	FLHRC
7	14100254	MEDALLION, saddlebag lid *(2)*	FLHRC
8	90200684	SADDLEBAG, with 8126A, 90382-98, 90425-98, 90820-93D, 14100254 and 90200905 (right)	FLHRC
8	90200685	SADDLEBAG, with 8126A, 90382-98, 90425-98, 90820-93D,14100254 and 90200905 (left)	FLHRC
9	90200905	ISOLATOR, saddlebag *(4)*	FLHRC

GUARDS, SADDLEBAG

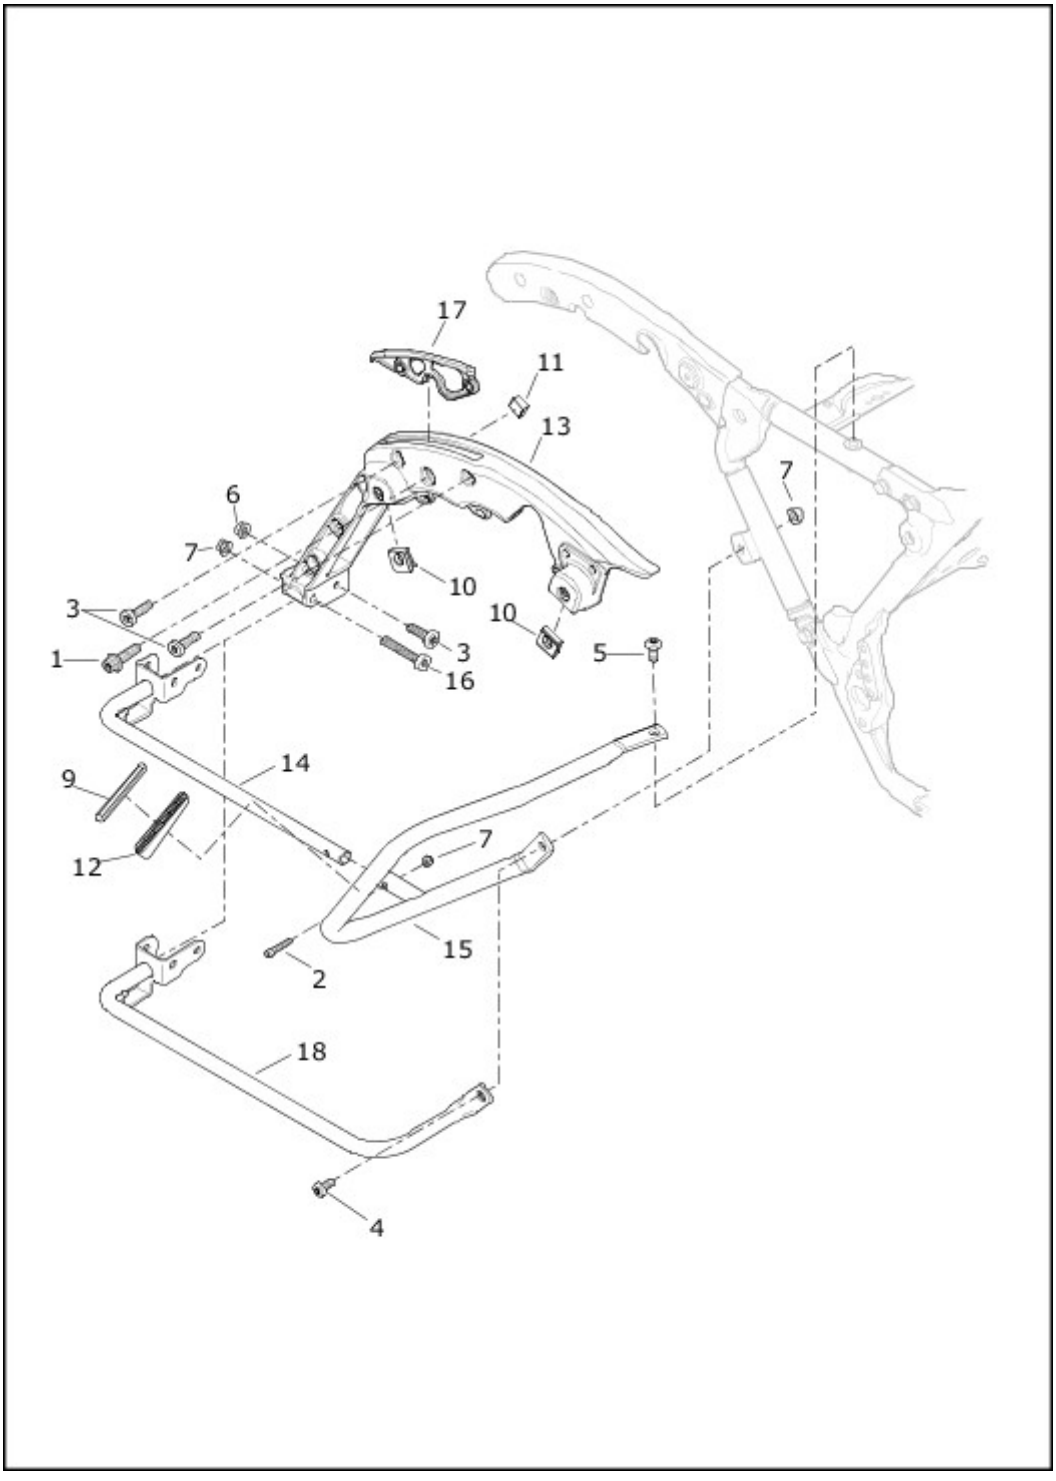

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	10200217	SCREW *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3601	SCREW *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
3	3684	SCREW *(6)*	ALL
4	4924	SCREW *(2)*	FLHRXS, FLHT, FLHX, FLHXS, FLTRX, FLTRXS
5	4924	SCREW *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
6	7531	LOCKNUT *(2)*	ALL
7	7601	LOCKNUT *(4)*	ALL
8	7686	LOCKNUT *(2)*	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	60254-07	REFLECTOR (amber) *(2)*	FLHRC
10	10400034	NUT, clip *(4)*	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	11100068	CUSHION *(2)*	ALL
12	67900120	BRACKET, reflector *(2)*	FLHRC
13	90200499	SUPPORT, saddlebag, with 11100068 (right) (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
13	90201319	SUPPORT, saddlebag, with 11100068 (right) (black)	FLHRXS
13	90200501	SUPPORT, saddlebag, with 11100068 (left) (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
13	90201320	SUPPORT, saddlebag, with 11100068 (left) (black)	FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	90200504	SUPPORT, saddlebag (right) (black)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
14	90200505	SUPPORT, saddlebag (left) (black)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
15	90200506	GUARD (left) (chrome)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
15	90200507	GUARD (right) (chrome)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
16	90200543	SCREW *(2)*	ALL
17	90200547	INSERT ASSEMBLY, saddlebag support *(2)*	FLHR, FLHRC, FLHT, FLHX, FLHXS, FLTRX, FLTRXS
17	90201754DH	INSERT ASSEMBLY, saddlebag support (black) *(2)*	FLHRXS
18	90200549	SUPPORT (left) (black)	FLHRXS, FLHT, FLHX, FLHXS, FLTRX, FLTRXS
18	90200550	SUPPORT (right) (black)	FLHRXS, FLHT, FLHX, FLHXS, FLTRX, FLTRXS

LABELS

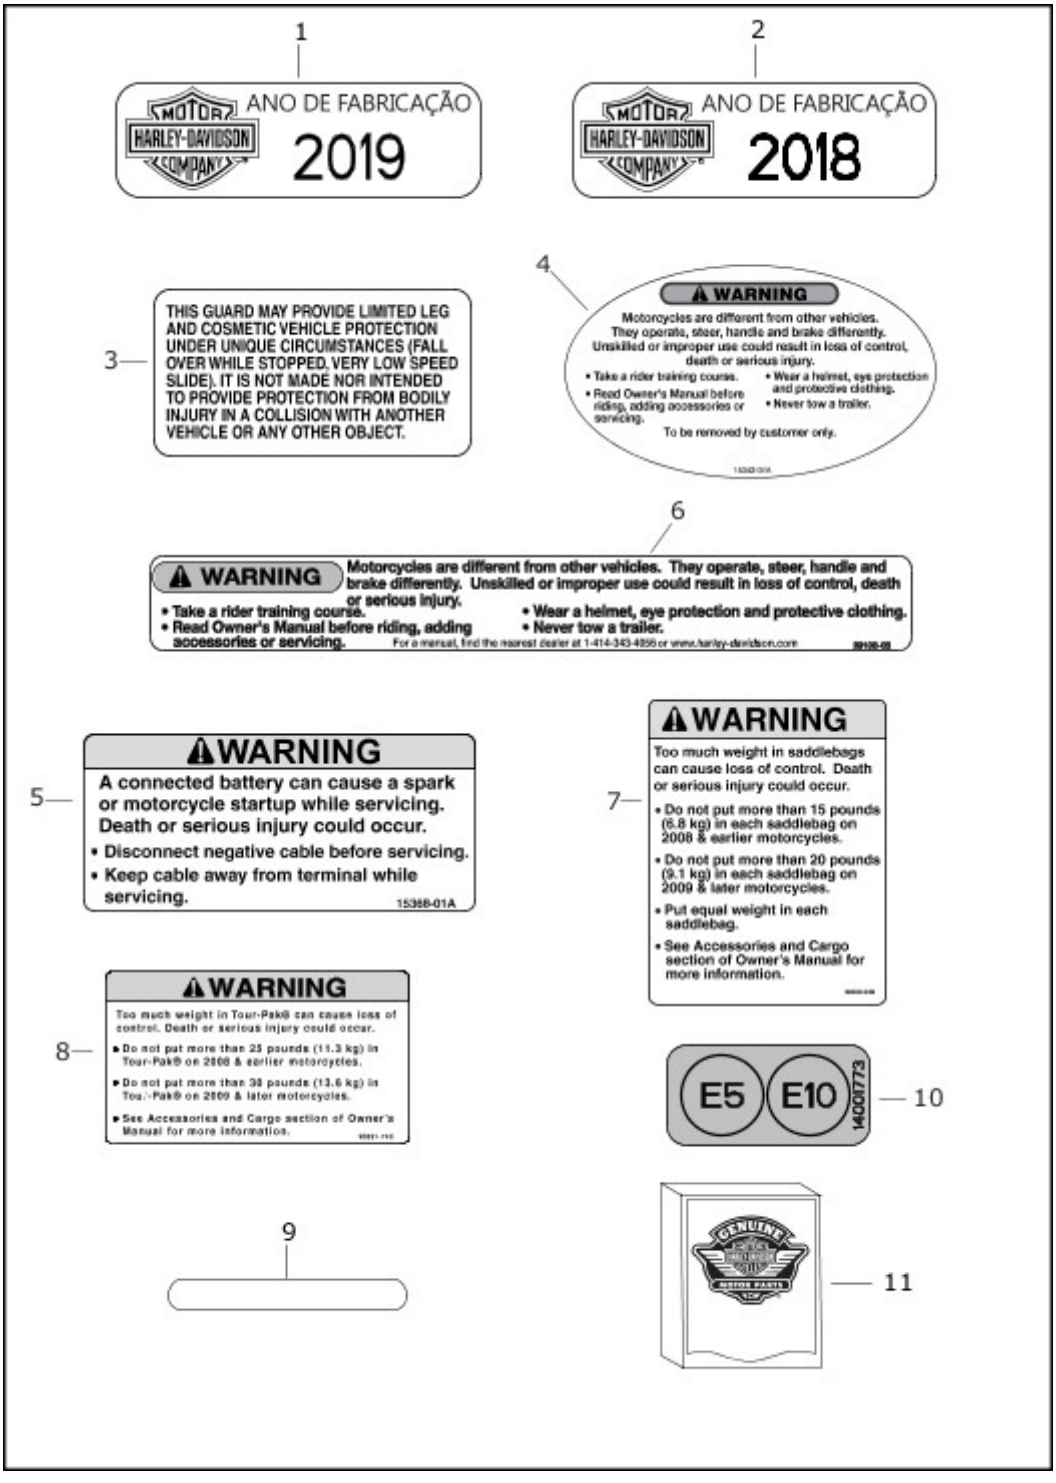

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	14001593	LABEL, year of manufacturing (Brazil)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
2	14001396	LABEL, year of manufacturing (Brazil)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
3	14148-86	LABEL, engine guard warning	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX
3	14151-02	LABEL, engine guard warning	FLHRXS, FLTRXS
3	14001735	LABEL, engine guard warning (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
4	15342-06A	LABEL, mirror warning	FLHX, FLHXS
4	15370-01A	LABEL, mirror warning	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU
4	15385-08	LABEL, mirror warning (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
5	15368-01A	LABEL, battery warning	ALL
5	14001739	LABEL, battery warning (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
6	29108-08	LABEL, air cleaner warning (Domestic)	FLHR, FLHRXS, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	14001734	LABEL, air cleaner warning (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
6	14001799	LABEL, air cleaner warning (China) (not shown)	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

NOTE: When ordering any V.I.N., Emissions, or Noise Labels you must contact your local dealer with the V.I.N. number and model year of your motorcycle and the label type needed. Replacement V.I.N. and Emissions labels can only be ordered for warranty purposes through h-dnet Service eForm.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
7	90820-93D	LABEL, saddlebag load limits *(2)*	ALL
7	14001738	LABEL, saddlebag load limits (Brazil) (not shown) *(2)*	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
8	90821-74C	LABEL, tour-pak load limit	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	14001737	LABEL, tour-pak load limit (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
9	14000827	CLEAR OVERLAY, VIN label (Japan)	FLHR, FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
10	14001773	LABEL, fuel (England, HDI)	ALL
11	14001736	LABEL, primary cover (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
11	14001800	LABEL, fuel tank (Asia-Pacific) (not shown)	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	14001859	LABEL, front brake lever (China) (not shown)	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

NOTE: When ordering any V.I.N., Emissions, or Noise Labels you must contact your local dealer with the V.I.N. number and model year of your motorcycle and the label type needed. Replacement V.I.N. and Emissions labels can only be ordered for warranty purposes through h-dnet Service eForm.

LOOSE PARTS (1 OF 3)

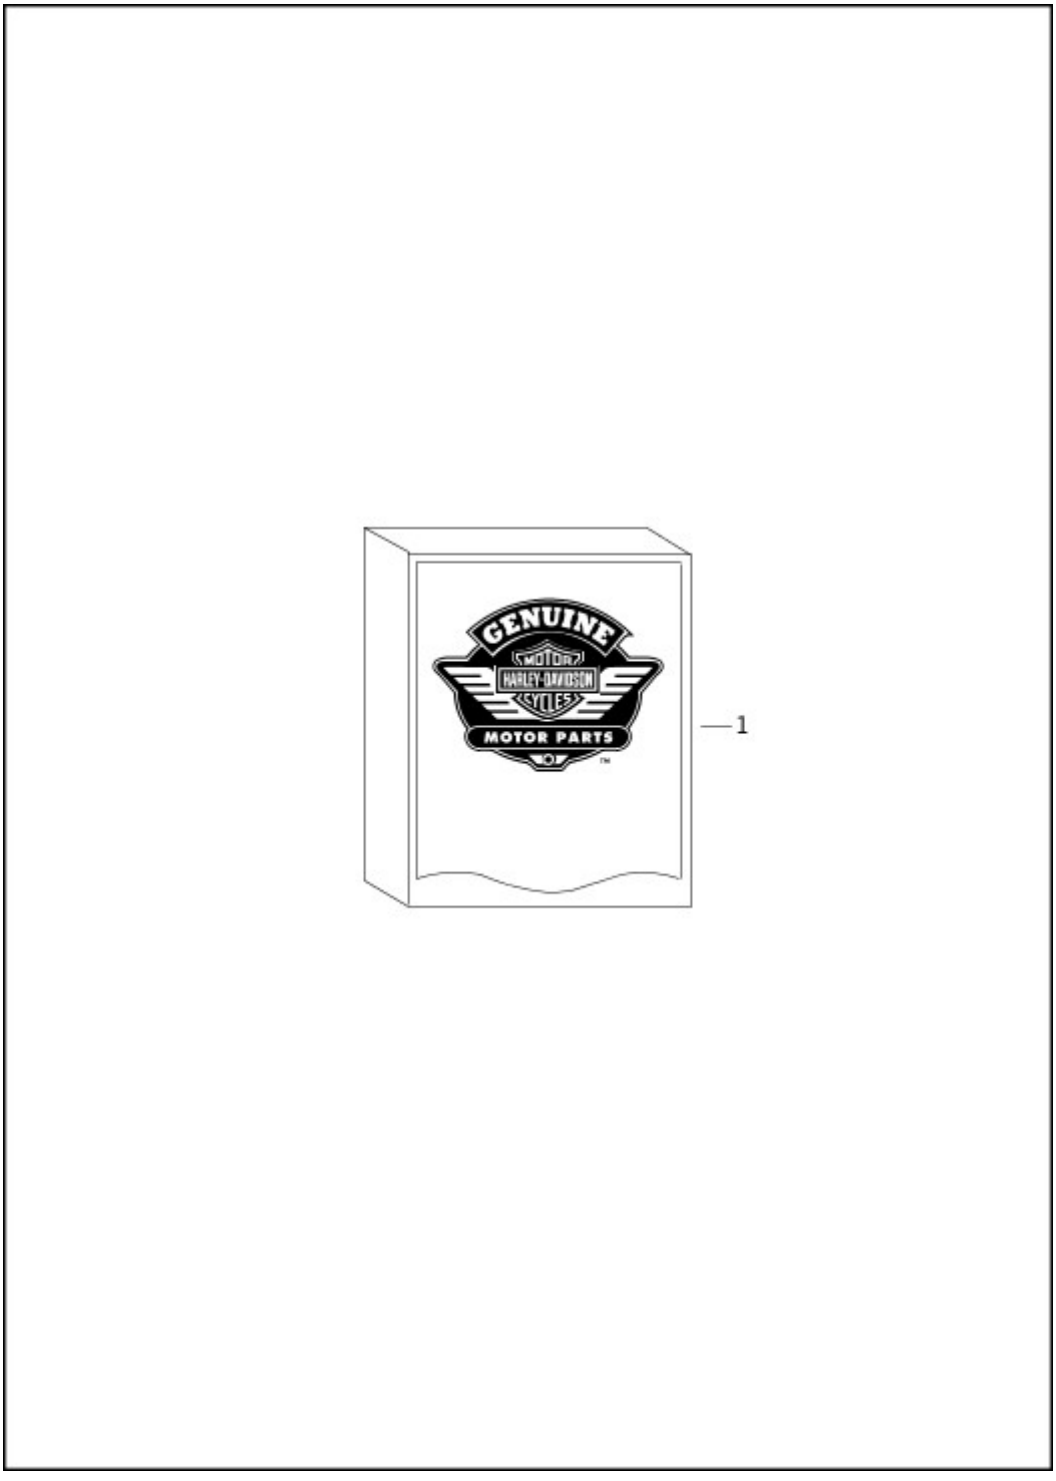

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	66250-09	SIDE COVER (left) (unpainted) (See NOTE 1)	ALL
1	94000687	OWNER'S MANUAL (Domestic, Australia, England)	ALL
1	69200336	MAIN FUSE, 50 A (red)	ALL
1	90300043	KEY (set of 2) (specify key number)	ALL
1	90300111	REMOTE CONTROL FOB (except Japan) *(2)*	ALL
1	90300112	REMOTE CONTROL FOB (Japan) *(2)*	ALL
1	94000326	OWNER'S KIT CONTENT (Domestic)	ALL
1	53598-88A	LINER, Tour-Pak, removable	FLHTCU
1	58002-09A	AIR DEFLECTOR KIT, MID-FRAME (See NOTE 2)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	62152-08	MEDALLION, fuel tank (left) ****RESTRICTED SALES PART****	FLHTK
1	62153-08	MEDALLION, fuel tank (right) ****RESTRICTED SALES PART****	FLHTK
1	62241-08	INSERT, PEACE OFFICER *(2)* ****RESTRICTED SALES PART****	FLHTK, FLHTK SHRINE, FLHTKL
1	62242-08	INSERT, FIREFIGHTER *(2)* ****RESTRICTED SALES PART****	FLHTK, FLHTK SHRINE, FLHTKL

ALL TOURINGFLHTCU, FLHTK, FLHTKLNOTE 1: Left side cover is shipped loose. Refer to the Service Section of h-dnet.com for painted part numbers.NOTE 2: Order 58002-09A only if missing complete kit. Otherwise order individual components as needed. Refer to the COVERS AND AIR DEFLECTORS section in this parts manual.NOTE 3: The BOOM!™ BOX GTS Owners Manual (94000601 and BOOM!™ BOX 4.3 Owners Manual (94000585) are not included in the loose parts. Only available online or for separate order.


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	62243-08	INSERT, SPECIAL EDITION *(2)* ****RESTRICTED SALES PART****	FLHTK, FLHTK SHRINE, FLHTKL
1	76000799	ANTENNA MAST, AM/FM/WB/LW	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	77117-10	HEADSET ASSEMBLY (Domestic, California, Canada)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	77117-10	HEADSET ASSEMBLY (HDI, Australia, Japan, Asia-Pacific, Brazil, England) *(2)*	FLHTK, FLHTK SHRINE, FLHTKL
1	92038-10	LINER, Tour-Pak, removable	FLHTK, FLHTK SHRINE, FLHTKL
1	99461-89	COVER, owner manual (Domestic, California, Canada, Australia)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	94000634	BOOM!™ BOX GTS, quick start guide (English)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	97011-16	BOOM!™ BOX 4.3, quick start guide (English)	FLHTCU
1	94000601	BOOM!™ BOX GTS, owners manual (See NOTE 3)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	94000585	BOOM!™ BOX 4.3, owners manual (See NOTE 3)	FLHTCU
1	52300053	BACKREST ASSEMBLY, passenger (black)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	57400001	WINDSHIELD (clear) (Domestic)	FLHTCU, FLHTK, FLHTK SHRINE
1	57400001	WINDSHIELD (clear) (Brazil, Australia)	FLHTK, FLHTK SHRINE

ALL TOURINGFLHTCU, FLHTK, FLHTKLNOTE 1: Left side cover is shipped loose. Refer to the Service Section of h-dnet.com for painted part numbers.NOTE 2: Order 58002-09A only if missing complete kit. Otherwise order individual components as needed. Refer to the COVERS AND AIR DEFLECTORS section in this parts manual.NOTE 3: The BOOM!™ BOX GTS Owners Manual (94000601 and BOOM!™ BOX 4.3 Owners Manual (94000585) are not included in the loose parts. Only available online or for separate order.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	57400002	WINDSHIELD (clear) (HDI, England, Japan)	FLHTK, FLHTK SHRINE
1	57400058	WIND DEFLECTOR (clear) (Asia-Pacific)	FLHTK, FLHTK SHRINE, FLHTKL
1	57400250	WINDSHIELD (clear) (Domestic, HDI, Australia, England, Japan)	FLHTKL
1	90200488	LINER, saddlebag, removable *(2)*	FLHTCU
1	90200489	LINER, saddlebag, removable *(2)*	FLHTK, FLHTK SHRINE, FLHTKL

ALL TOURINGFLHTCU, FLHTK, FLHTKLNOTE 1: Left side cover is shipped loose. Refer to the Service Section of h-dnet.com for painted part numbers.NOTE 2: Order 58002-09A only if missing complete kit. Otherwise order individual components as needed. Refer to the COVERS AND AIR DEFLECTORS section in this parts manual.NOTE 3: The BOOM!™ BOX GTS Owners Manual (94000601 and BOOM!™ BOX 4.3 Owners Manual (94000585) are not included in the loose parts. Only available online or for separate order.

LOOSE PARTS (2 OF 3)

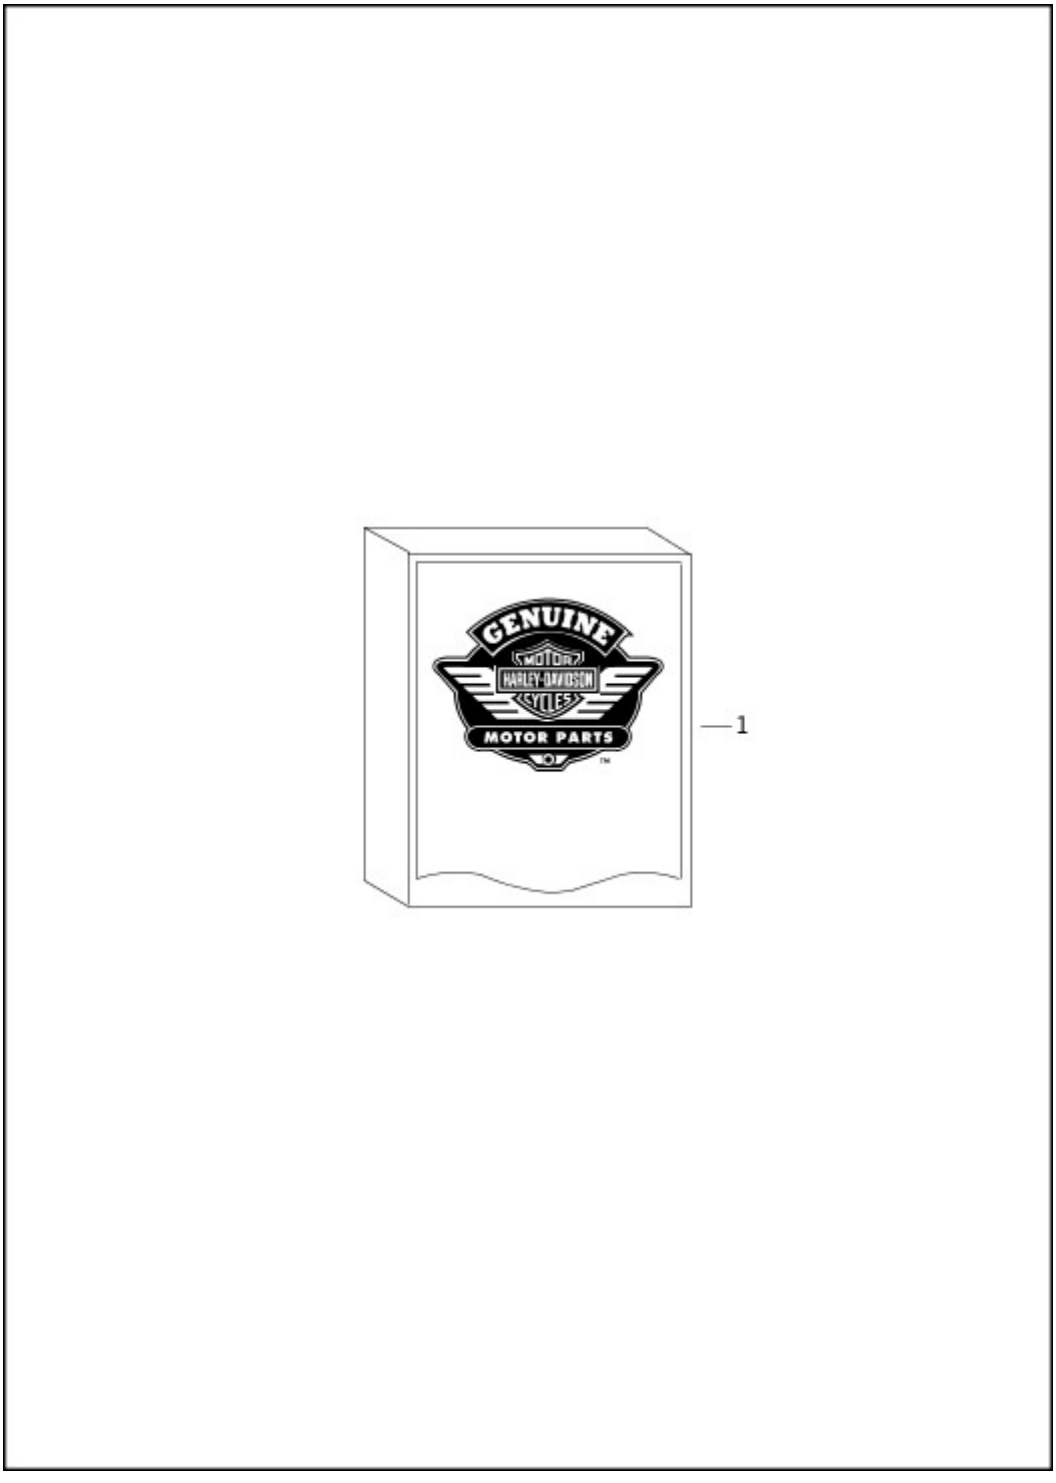

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3767B	BOLT *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
1	6703	WASHER *(4)*	FLHTK, FLHTK SHRINE, FLHTKL
1	53000311	ADAPTER PLATE, Tour-Pak	FLHTK, FLHTK SHRINE, FLHTKL, FLHTKL
1	2731W	SCREW *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	59292-94	NUT, plastic *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	76000799	ANTENNA MAST, AM/FM/WB/LW	FLTRX, FLTRXS
1	94000634	BOOM!™ BOX GTS, quick start guide (English)	FLTRX, FLTRXS
1	97011-16	BOOM!™ BOX 4.3, quick start guide (English)	FLTRX
1	94000601	BOOM!™ BOX GTS, owners manual (See NOTE 3)	FLTRX, FLTRXS
1	94000585	BOOM!™ BOX 4.3, owners manual (See NOTE 3)	FLTRX
1	57400302	WINDSHIELD (Domestic, Australia)	FLTRX, FLTRXS
1	57400303	WINDSHIELD (HDI, England, Japan, Asia-Pacific)	FLTRXS
1	933	SCREW *(4)*	FLTRX, FLTRXS
1	6054	WASHER *(4)*	FLTRX, FLTRXS
1	53598-88A	LINER, Tour-Pak, removable	FLTRU

FLHTCU, FLHTK, FLHTKLTOUR-PAK ADAPTER KIT (China)LICENSE PLATE MOUNTING KIT HARDWAREFLTRX, FLTRXSWINDSHIELD HARWAREFLTRUTOUR-PAK ADAPTER KIT (China)NOTE 1: Left side cover is shipped loose. Refer to the Service Section of h-dnet.com for painted part numbers.NOTE 2: Order 58002-09A only if missing complete kit. Otherwise order individual components as needed. Refer to the COVERS AND AIR DEFLECTORS section in this parts manual.NOTE 3: The BOOM!™ BOX GTS Owners Manual (94000601 and BOOM!™ BOX 4.3 Owners Manual (94000585) are not included in the loose parts. Only available online or for separate order.


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	58002-09A	AIR DEFLECTOR KIT, MID-FRAME (See NOTE 2)	FLTRU
1	76000799	ANTENNA MAST, AM/FM/WB/LW	FLTRU
1	77117-10	HEADSET ASSEMBLY (Domestic, California, Canada)	FLTRU
1	77117-10	HEADSET ASSEMBLY (HDI, Japan, Asia-Pacific, England) *(2)*	FLTRU
1	99461-89	COVER, owner manual (Domestic, California, Canada)	FLTRU
1	94000634	BOOM!™ BOX GTS, quick start guide (English)	FLTRU
1	94000601	BOOM!™ BOX GTS, owners manual (See NOTE 3)	FLTRU
1	52300053	BACKREST ASSEMBLY, passenger (black)	FLTRU
1	57200065	WIND DEFLECTOR (right)	FLTRU
1	57200066	WIND DEFLECTOR (left)	FLTRU
1	57400260	WINDSHIELD (clear) (Asia-Pacific)	FLTRU
1	57400262	WINDSHIELD (clear) (HDI, England, Japan)	FLTRU
1	57400305	WINDSHIELD (clear) (Domestic)	FLTRU
1	90200488	LINER, saddlebag, removable *(2)*	FLTRU
1	3767B	BOLT *(4)*	FLTRU

FLHTCU, FLHTK, FLHTKLTOUR-PAK ADAPTER KIT (China)LICENSE PLATE MOUNTING KIT HARDWAREFLTRX, FLTRXSWINDSHIELD HARWAREFLTRUTOUR-PAK ADAPTER KIT (China)NOTE 1: Left side cover is shipped loose. Refer to the Service Section of h-dnet.com for painted part numbers.NOTE 2: Order 58002-09A only if missing complete kit. Otherwise order individual components as needed. Refer to the COVERS AND AIR DEFLECTORS section in this parts manual.NOTE 3: The BOOM!™ BOX GTS Owners Manual (94000601 and BOOM!™ BOX 4.3 Owners Manual (94000585) are not included in the loose parts. Only available online or for separate order.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	6703	WASHER *(4)*	FLTRU
1	53000311	ADAPTER PLATE, Tour-Pak	FLTRU

FLHTCU, FLHTK, FLHTKLTOUR-PAK ADAPTER KIT (China)LICENSE PLATE MOUNTING KIT HARDWAREFLTRX, FLTRXSWINDSHIELD HARWAREFLTRUTOUR-PAK ADAPTER KIT (China)NOTE 1: Left side cover is shipped loose. Refer to the Service Section of h-dnet.com for painted part numbers.NOTE 2: Order 58002-09A only if missing complete kit. Otherwise order individual components as needed. Refer to the COVERS AND AIR DEFLECTORS section in this parts manual.NOTE 3: The BOOM!™ BOX GTS Owners Manual (94000601 and BOOM!™ BOX 4.3 Owners Manual (94000585) are not included in the loose parts. Only available online or for separate order.

LOOSE PARTS (3 OF 3)

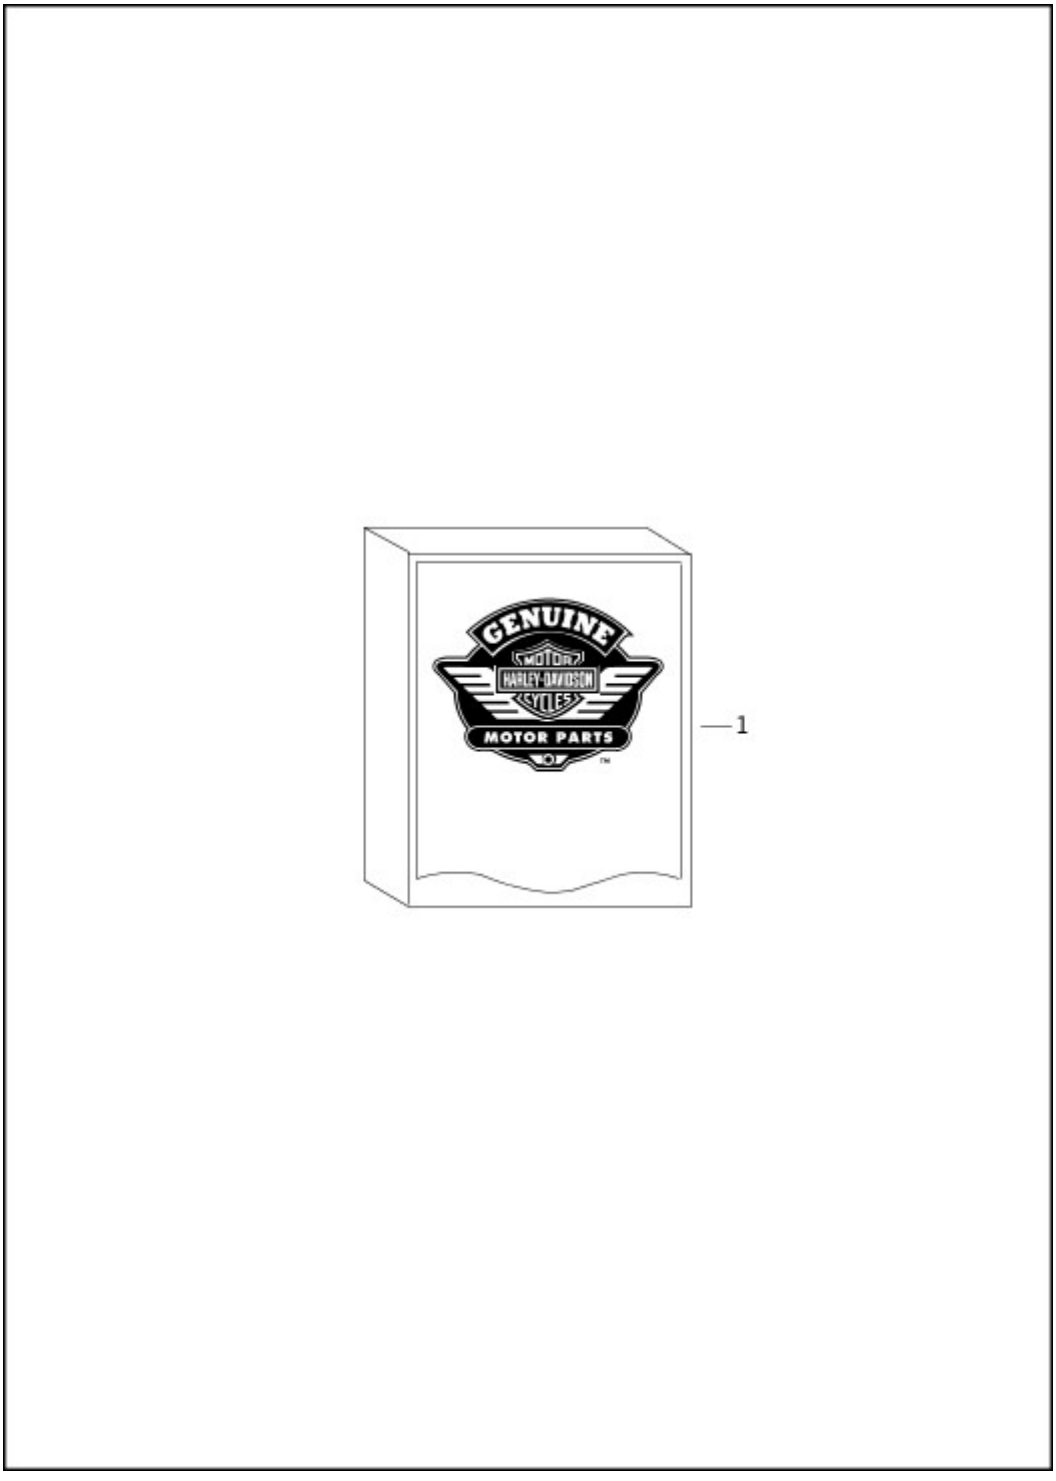

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2731W	SCREW *(2)*	FLTRU
1	59292-94	NUT, plastic *(2)*	FLTRU
1	10200400	SCREW *(4)*	FLTRU
1	57400308	TRIM, right (black)	FLTRU
1	57400309	TRIM, left (black)	FLTRU
1	57668-10	WINDSHIELD ASSEMBLY, complete, low (clear) (Asia-Pacific)	FLHR
1	57994-94	WINDSHIELD ASSEMBLY, complete (Domestic, Canada, California)	FLHR
1	57994-94	WINDSHIELD ASSEMBLY, complete (Australia, Brazil)	FLHR, FLHRC
1	58002-09A	AIR DEFLECTOR KIT, MID-FRAME (Brazil) (See NOTE 2)	FLHRC
1	58325-06	WINDSHIELD ASSEMBLY, complete (HDI, England, Japan)	FLHR, FLHRC
1	61400159	INSERT, handlebar cover	FLHR, FLHRC
1	58002-09A	AIR DEFLECTOR KIT, MID-FRAME (Brazil) (See NOTE 2)	FLHXS
1	76000799	ANTENNA MAST, AM/FM/WB/LW	FLHX, FLHXS
1	94000634	BOOM!™ BOX GTS, quick start guide (English)	FLHX, FLHXS
1	97011-16	BOOM!™ BOX 4.3, quick start guide (English)	FLHX

FLTRULICENSE PLATE MOUNTING KIT HARDWAREWINDSHIELD TRIM KITFLHR, FLHRCFLHX, FLHXSFLHRXSNOTE 1: Left side cover is shipped loose. Refer to the Service Section of h-dnet.com for painted part numbers.NOTE 2: Order 58002-09A only if missing complete kit. Otherwise order individual components as needed. Refer to the COVERS AND AIR DEFLECTORS section in this parts manual.NOTE 3: The BOOM!™ BOX GTS Owners Manual (94000601 and BOOM!™ BOX 4.3 Owners Manual (94000585) are not included in the loose parts. Only available online or for separate order.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	94000601	BOOM!™ BOX GTS, owners manual (See NOTE 3)	FLHX, FLHXS
1	94000585	BOOM!™ BOX 4.3, owners manual (See NOTE 3)	FLHX
1	57400003	WIND DEFLECTOR (smoked) (Domestic)	FLHX, FLHXS
1	57400003	WIND DEFLECTOR (smoked) (Brazil, Australia)	FLHXS
1	57400004	WIND DEFLECTOR (smoked) (HDI, England, Japan)	FLHXS
1	57400058	WIND DEFLECTOR (clear) (Asia-Pacific)	FLHXS
1	61400159	INSERT, handlebar cover	FLHRXS

FLTRULICENSE PLATE MOUNTING KIT HARDWAREWINDSHIELD TRIM KITFLHR, FLHRCFLHX, FLHXSFLHRXSNOTE 1: Left side cover is shipped loose. Refer to the Service Section of h-dnet.com for painted part numbers.NOTE 2: Order 58002-09A only if missing complete kit. Otherwise order individual components as needed. Refer to the COVERS AND AIR DEFLECTORS section in this parts manual.NOTE 3: The BOOM!™ BOX GTS Owners Manual (94000601 and BOOM!™ BOX 4.3 Owners Manual (94000585) are not included in the loose parts. Only available online or for separate order.

Hardware List

View interactive table

PART NO.	DESCRIPTION
10100062	LOCKNUT 7/16-20 flange (Grade F) (zinc)
10200042	SCREW No. 10-24 X 1-5/8 hex flange head full thread (Grade 5) (zinc)
10200052	SCREW 1/4-20 X 39/64 TORX SEMS socket button head , with lockpatch
10200059	SCREW 1/4-20 X 1-11/16 TORX socket button head matpoint (Grade 5) (black)
10200060	SCREW 1/4-20 X 2-5/8 TORX socket button head matpoint (Grade 5) (black)
10200061	SCREW No. 8-32 X 1/2 TORX SEMS pan head (zinc)
10200062	SCREW No. 8-32 X 3/8 TORX pan head (zinc)

PART NO.	DESCRIPTION
10200063	SCREW No. 8 X 1/2 TORX SEMS pan head (stainless)
10200064	SCREW No. 8-32 X 1 TORX pan head (zinc)
10200065	SCREW No. 8-32 X 5/8 TORX SEMS pan head, with lockpatch (stainless)
10200103	SCREW No. 8-32 X 1/2 TORX SEMS pan head, with lockpatch (stainless)
10200105	SCREW No. 6-32 X 3/4 TORX pan head (black zinc)
10200112	SCREW 1/4-20 X 2 TORX button head SEMS (Grade 5) (black)
10200120	SCREW 1/8 X 18 X 1.00 hex cap
10200133	SCREW No. 8-16 X 9/16 TORX pan head (zinc)
10200134	SCREW 1/4-20 X 3/4 hex socket head (Grade 8) (zinc)
10200141	SCREW 1/4-20 X 1/2 hex socket button head (zinc)
10200142	SCREW 5/16-18 X 3/4 hex flange with internal hex SEMS, hardened (zinc)
10200147	SCREW No. 10-24 X 3/4 TORX socket button head SEMS (black)
10200154	SCREW No. 8 X 3/4 TORX SEMS pan head (stainless)
10200155	SCREW No. 8-16 X 1 TORX pan head (zinc)
10200156	SCREW No. 8-32 X 3/8 phillips round head (stainless steel)
10200205	SCREW No. 10 X 1/2 pan head TORX, hardened (zinc)
10200217	SCREW 5/16-18 X 1-1/4 TORX SEMS, with lockpatch (zinc)
10200223	SCREW No. 10-24 UNRC X 3/4 TORX truss head (zinc)
10200257	SCREW No. 8-32 X 1/2 TORX pan head T-20 (zinc)
10200258	SCREW 1/4-20 X 1-1/4 SEMS hex socket head (Grade 8) (zinc)
10200343	SCREW 5/16-18 X 3-1/4 flange (zinc)
10200349	SCREW
10200350	SCREW 1/4-20 X 1-1/8 SEMS hex socket head (Grade 8) (zinc)

PART NO.	DESCRIPTION
10200365	SCREW 1/4-20 X 1-1/16 TORX socket head SEMS (Grade 8) (zinc)
10200373	SCREW M6 X 1 X 18mm hex head (Grade 10.9) (zinc)
10200400	SCREW No. 10-32 X 1 socket button head (black zinc)
10200408A	SCREW 3/8-16 X 2 hex head, with washer (Grade 8) (zinc)
10200414	SCREW 5/16-18 X 5/8 button head SEMS TORX T-40, with lockpatch (Grade 8) (zinc)
10200422	SCREW 1/4-20 X 5/8 button head SEMS TORX T-27, with lockpatch (zinc)
10200429	SCREW 3/8-16 X 2-1/2 hex socket head with scotch grip (Grade 8) (zinc)
10200442	SCREW No. 8-32 X 5/16 tri-lobe thread forming (zinc)
10200446	SCREW 1/4-20 X 1 hex flange, with adhesive
10200463	SCREW 3/8-16 X 1-3/8 hex head with lockpatch (Grade 8) (zinc)
10200503	SCREW 5/16-18 X 1-1/4 12 pt. head (Grade 8)
10200546	SCREW No. 10-24 X 5/8 hex serrated flange, with scotch grip (zinc-nickel plate and seal)
10200569	SCREW 5/16-18 x 1/2 hex flange head, serrated
10500015	SCREW 5/16-18 X 1-7/8 SEMS hex socket head
10500017	SCREW No. 10 X 3/8 pan head, TORX, plastite, hardened (zinc)
10500022	SCREW 5/16-18 X 1-1/2 SEMS hex socket head (Grade 8) (zinc)
10500036	SCREW 3/8-16 X 2 SEMS socket head (Grade 8.8) (black)
10500053	SCREW 1/4-20 X 3/8 TORX button head, with lockpatch (zinc)
1062	SCREW 1/4-20 X 5/8 TORX head (Grade 8)
12600031	SCREW 5/16-18 X 1 hex socket head cap (Grade 8) (black)
12600032	SCREW 1/2-13 X 2 hex head cap lock patch(Grade 5)

PART NO.	DESCRIPTION
12600049	SCREW No. 10-24 X 3/4 pan head torx, with lockpatch (Grade 8) (zinc)
1332	SCREW No. 5/16 X 2-1/4 socket button head with lock patch (Grade 8)
1775	SCREW 1/4-20 X 4 hex socket head (Grade 8)
2445	SCREW 1/4-20 X 9/16 button head
2446	SCREW 1/4-20 X 5/8 TORX socket button head
2452	SCREW No. 12-24 X 13/16 pan head, with lockpatch
2478	SCREW No. 10-24 X 1/2 TORX button head
2479	SCREW 5/16-18 X 1-1/8 SEMS socket head
2482	SCREW 6-32 X 5/16 socket button head (stainless)
2531	SCREW No. 4-40 X 5/16 Pozidriv pan head (Grade 2)
2563	SCREW No. 10-24 X 5/8 TORX button head
2647B	SCREW No. 10-24 X 3/4 socket head, self-locking
2692WB	SCREW No. 10-24 X 1/2 socket fillister head (Grade 8)
2708A	SCREW 5/16-18 X 1 socket head
2724	SCREW No. 10-16 X 1/2 (Grade 2) (chrome)
2731W	SCREW No. 10 X 3/8 Phillips truss head, self-tapping
2921A	SCREW 12-24 X 5/8 TORX pan head, T27
29269-83A	SCREW 15/16-18 X 5/8 hex button head, with lockpatch
2933	SCREW No. 10-24 X 1/2
2952A	SCREW 1/4-20 X 1/2 SEMS truss head
2968	SCREW No. 8-32 X 3/4 TORX pan head
2995	SCREW No. 10-16 X 3/4 pan head
3022A	SCREW 1/4-20 X 5/8 socket fillister head, with lockpatch
3050	SCREW No. 10-24 X 1-3/8 TORX head
3057	SCREW 7/16-14 X 1-1/4 hex head with washer, with lock patch

PART NO.	DESCRIPTION
3061	SCREW 1/4-20 X 5/8 SEMS hex head
3088	SCREW 1/4-20 X 1-1/2 socket button head (chrome)
3143	SCREW 3/8-16 X 1 hex socket head, with lock patch
3152	SCREW #10 X 1/2 TORX pan head
3225	BOLT No. 6 X 5/8 long phillips pan head (zinc)
3249	SCREW 5/16-18 X 1-3/16 socket head (Grade 8)
3275	SCREW 5/16-18 X 3/4 socket head (Grade 8)
3514	SCREW No. 8-32 X 1 fillister head (Grade 5)
35241-06	NUT 1-3/4-20 X .350 X 2-1/4 hex head
35244-06	SCREW 5/16-18 X 1-1/4 hex flange head
35259-06	SCREW No. 10-24 X 1/2 hex head (Grade 8)
3536	BOLT 3/8-16 X 1-1/4 hex head (Grade 8)
3560WA	BOLT No. 10-24 X 3/8
3561WC	BOLT No. 10-24 X 3/8
3563	SCREW 1/4-20 X 3/8 hex flange head (Grade 5)
3576	SCREW 5/16-18 X 1/2 hex head, with washer.
3588	SCREW 1/4-20 X 1/2 hex flange head
3594	SCREW 1/4-20 X 5/8 knurled head (Grade 8)
3601	SCREW 1/4-20 X 1-1/4 knurled head (Grade 8)
3607	BOLT 1/2-13 X 2 hex head (Grade 5)
3612	SCREW No. 10-16 X 1/2 TORX pan head, self-tapping
3622	SCREW No. 10-16 X 3/8 pan head, self-tapping
3634	SCREW 5/16-18 X 1.0 self-tapping
3655A	SCREW 5/16-18 X 7/8 TORX pan head, with lockpatch (Grade 8)
3656	SCREW No. 8-32 X 3/8 TORX pan head (Grade 5)
36706-01K	BOLT M6 X 1.0 X 30 hex flange head
3676	SCREW 5/16-18 X 5/8 TORX pan head

PART NO.	DESCRIPTION
3684	SCREW 5/16-18 X 1 TORX pan head
3699D	SCREW 3/8-16 X 2.0 hex flange head (Grade 8)
3767B	BOLT 1/4-20 X 5/8 hex head (Grade 5)
3787	BOLT 1/4-20 X 3/4 hex head (Grade 5)
3892	SCREW 1/4 X 5/8 self-tapping
3901	SCREW 1/4-20 X 1.0 hex flange head (Grade 5)
3910	SCREW 1/2-20 X 2-1/4 hex head full thread (Grade 5) (zinc)
3929	SCREW 5/16-18 X 1/2 hex head
3976	SCREW 1/4-20 X 1 hex flange head (Grade 5)
3983	SCREW 3/8-16 X 1-5/8 hex flange head, with washer (Grade 8)
3987	BOLT 5/16-18 X 3/4 hex head (Grade 5)
4132	SCREW 1/4-20 X 1-1/8 TORX button head (Grade 5) (black)
4194	SCREW No. 10-24 X 5/16 TORX pan head (Grade 5)
4240	SCREW No. 10-24 X 3/16 hex head, with washer
4312C	SCREW M6 X 1.0 X 14mm, SEMS flange head (stainless)
43567-92	SCREW 3/8-16 X 1 TORX pan head, with lockpatch
4419	SCREW 5/16-18 X 1-3/4 SEMS hex head
45500118	SCREW M14 X 1.25 X 25 hex socket cap (zinc)
45500132	SCREW M8 X 1.25 X 45 hex socket cap (Grade 8.8)
4597M	SCREW M10 X 1.5 X 30 hex socket head
4612	SCREW 10-24 X 3/4 TORX pan head
46509-01	WASHER 30 X 43 X 2.3
4688	SCREW 3/8-16 X 1-1/4 SEMS hex socket head, with lock patch
4694	SCREW No. 8-32 X 3/8 TORX pan head, with lockpatch

PART NO.	DESCRIPTION
4705	SCREW 1/4-20 X 11/16 SEMS socket head, with lockpatch
4706	SCREW 3/8-16 X 4 hex head
4718A	SCREW 1/4-20 X 1-1/2 knurled head, with lockpatch
4740A	SCREW 1/4-20 X 1-1/4 knurled head, with lockpatch (Grade 8)
4741A	SCREW 1/4-20 X 1 socket head, with lockpatch
4775	SCREW 3/8-16 X 1-1/4 hex head (Grade 5)
4790	SCREW No. 10-16 X 3/4 TORX head, self-tapping
4813A	SCREW 1/4-20 X 1-3/8 knurled head, with lockpatch
4816A	SCREW 5/16-18 X 1-1/2 socket head
4820A	SCREW 1/4-20 X 2 socket head
4822A	SCREW 1/4-20 X 2-3/4 knurled head, with lockpatch
4856	SCREW No. 10-24 X 1/2 socket head (stainless)
4867	SCREW hex head, socket
4916	SCREW 5/16-18 X 1.0 hex socket head shoulder
4924	SCREW 3/8-16 X 7/8 TORX button head (zinc plate) (Grade 5)
54321-85	NUT No. 8-32 X 1/2 X 1/8 (brass)
6019	WASHER 3/8 X 29/32 X 1/16
6026	WASHER 3/8 X 7/8 X 7/64
6036	WASHER 17/64 X 1 X 1/16
6054	WASHER 3/16 X 9/16 X 1/16 nylon (black)
6072	WASHER 3/8 X 1 1/4 X 5/64
6101	WASHER 17/64 X 27/64 X 1/16
6109	WASHER 5/16 X 11/16 X 1/8
6113	WASHER 1/2 X 13/16 X 1/32
6116	WASHER 5/16 X 16/16 X 1/8
6119	WASHER 1/4 X 9/16 X 1/16


PART NO.	DESCRIPTION
6127	WASHER 13/32 X 13/16 X 5/64
6150W	WASHER 3/16 X 3/8 X 1/16
6220W	WASHER 1/4 X 7/16 X 1/32
6235	WASHER 1/4 X 23/32 X 1/16
6294	WASHER 3/8 X 1-1/8 X 7/32
6333	WASHER 5/16 X 7/8 X 5/64
6416	WASHER 3/8 X 1 X 5/64
6421	WASHER 21/64 X 1-1/2 X 1/16 offset 7/32
6497HW	WASHER 29/64 X 1-1/8 X 1/16
6532	WASHER 3/8 X 3/4 X 1/8
6590HW	WASHER 1/2 X 1-1/8 X 3/32
6594	WASHER 5/8 X 1-1/8 X 3/32
6702	WASHER 5/16 X 11/16 X 1/16
6703	WASHER 1/4 X 5/8 X 1/16
67721-48	SCREW 8-32 X 1/4 phillips head self-tapping
6789	WASHER No. 6 X 7/8 X .05
68026-99	SCREW No. 8-32 X 1 Phillips pan head (stainless)
68042-99	SCREW No. 8-32 X 3/8 TORX head
68120-00	SCREW No. 8-32 x 1-2 TORX head, self-tapping
7036	WASHER 1/4 X 31/64 X 1/16
7038	LOCKWASHER 3/8
703B	SCREW 1/4-20 X 7/16 TORX socket button head
7041	LOCKWASHER 5/16
7129	LOCKWASHER 1/2 internal tooth
7130W	LOCKWASHER 3/8 internal tooth
7155	LOCKWASHER 5/16 internal tooth (black)
7330	ACORN NUT 5/16-24 (chrome)
7331	ACORN NUT 5/16-24

PART NO.	DESCRIPTION
7352	ACORN NUT 5/16-24 (black)
7415A	WASHER 11/32 X 7/8 X 1/8 rubber
7434	WASHER 1/4 X 1-29/64 X 1/16 nylon
7495	NUT M6 flange
7499	NUT 1/4-20 large flange
7531	LOCKNUT 5/16-18 X 9/32 X 1/2 flange
7549A	ACORN NUT 5/16-18 X 9/16 X 1/2
7576	NUT 5/16-18 UNC keps flange
7586	JAMNUT 9/32-28 X 1/4
7593	NUT 5/16-24 flange
7600	NUT No. 4-40 keps
7601	LOCKNUT 3/8-16 flange
7606	LOCKNUT No. 8-32 X 1/4 X 1/4 hex (chrome)
7624	LOCKNUT No. 10-24 X 1/4 X 3/8
76259-86	NUT hex jam
7629	NUT No. 10-32 X 3/8 keps
7651A	ACORN NUT No. 12-24 (Grade 2) (chrome)
7667	NUT 3/8-16 X 9/32 X 9/16 nylon insert
7686	LOCKNUT 1/4-20 X 5/16 X 7/16
7687	NUT 3/8-16 X 25/64 (Grade 2)
7716	LOCKNUT 1/4-20 X 7/16 flange
7744	JAMNUT 5/16-24 X 3/16 X 1/2 (Grade 2)
7792	NUT 1/4-20 X 1/4 (Grade 2)
780	SCREW 1/4-20 X 7/8 SEMS hex head (Grade 8)
7813A	NUT 5/8-18 X 9/16 X 15/16 (Grade 2)
7825	LOCKNUT 7/16-20 X 7/16 X 5/8
786A	BOLT 5/16-18 X 2-1/4 hex head (Grade 5)
7880	NUT 1/2-13 X 7/16 X 3/4 (Grade 2)

PART NO.	DESCRIPTION
7888A	NUT No. 6-32 flange head
7889	NUT No. 6-32 keps
7900	CLIP NUT 1/4-20
791A	SCREW 3/8-18 X 2-1/4 hex flange head (Grade 5)
7992	ACORN NUT 5/16-18
8020	NUT M24 X 2.0 X 15
8108	SPEEDNUT 1/4-20
84850-92	NUT 3/4-24 X 5/32
856A	SCREW 5/16-24 X 1 socket head (Grade 8)
882	SCREW 1/4-20 X 7/8 knurled head, with washer (Grade 8)
8972	WASHER 1-1/4 X 1-53/64 X 1/8
90200543	SCREW 3/8-16 X 2-1/2 TORX button head (zinc)
90844-80	ACORN NUT No. 10 X 3/8 flange (Grade 2)
923	SCREW 1/4-20 X 3/4 socket pan head
933	SCREW No. 10-32 X 15/16 Pozidriv truss head (Grade 2)
942	SCREW 1/4-20 X 3/4 TORX button head, with lockpatch (Grade 8)
946	SCREW 1/4-20 X 2-1/4 socket button head, with lockpatch (Grade 8)

New Parts List


ENGINE ASSEMBLY - Milwaukee-eight™ 107

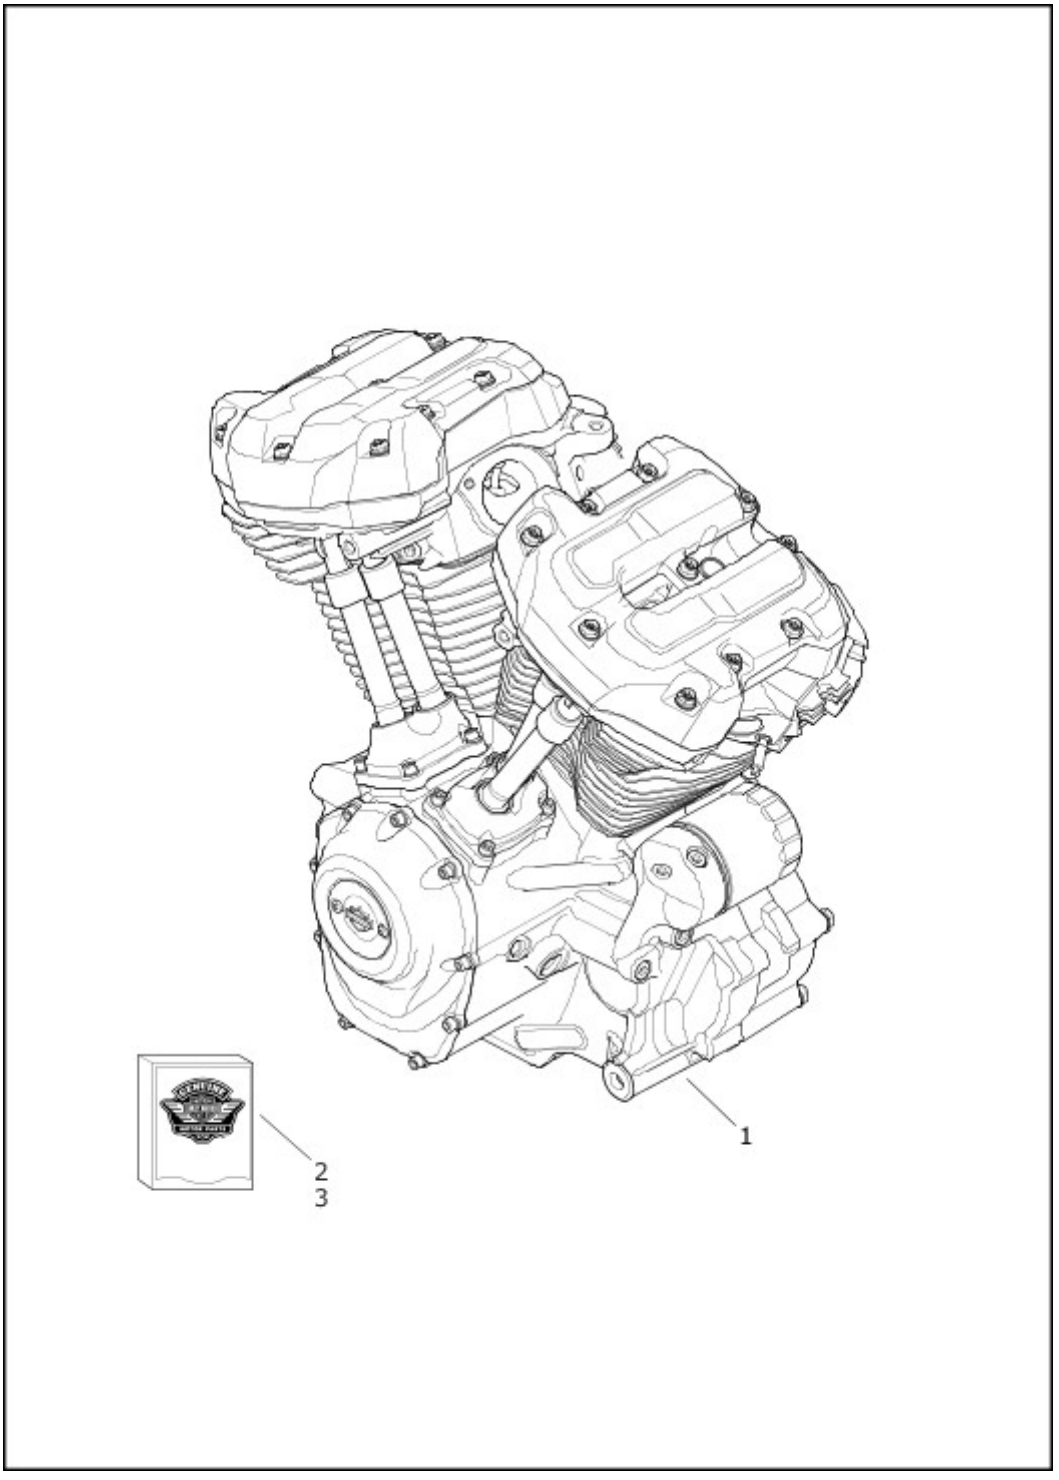

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	16200362	ENGINE ASSEMBLY, complete (Air-Cooled) (Milwaukee-eight™ 107) (chrome)	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX

ENGINE ASSEMBLY - Milwaukee-eight™ 114

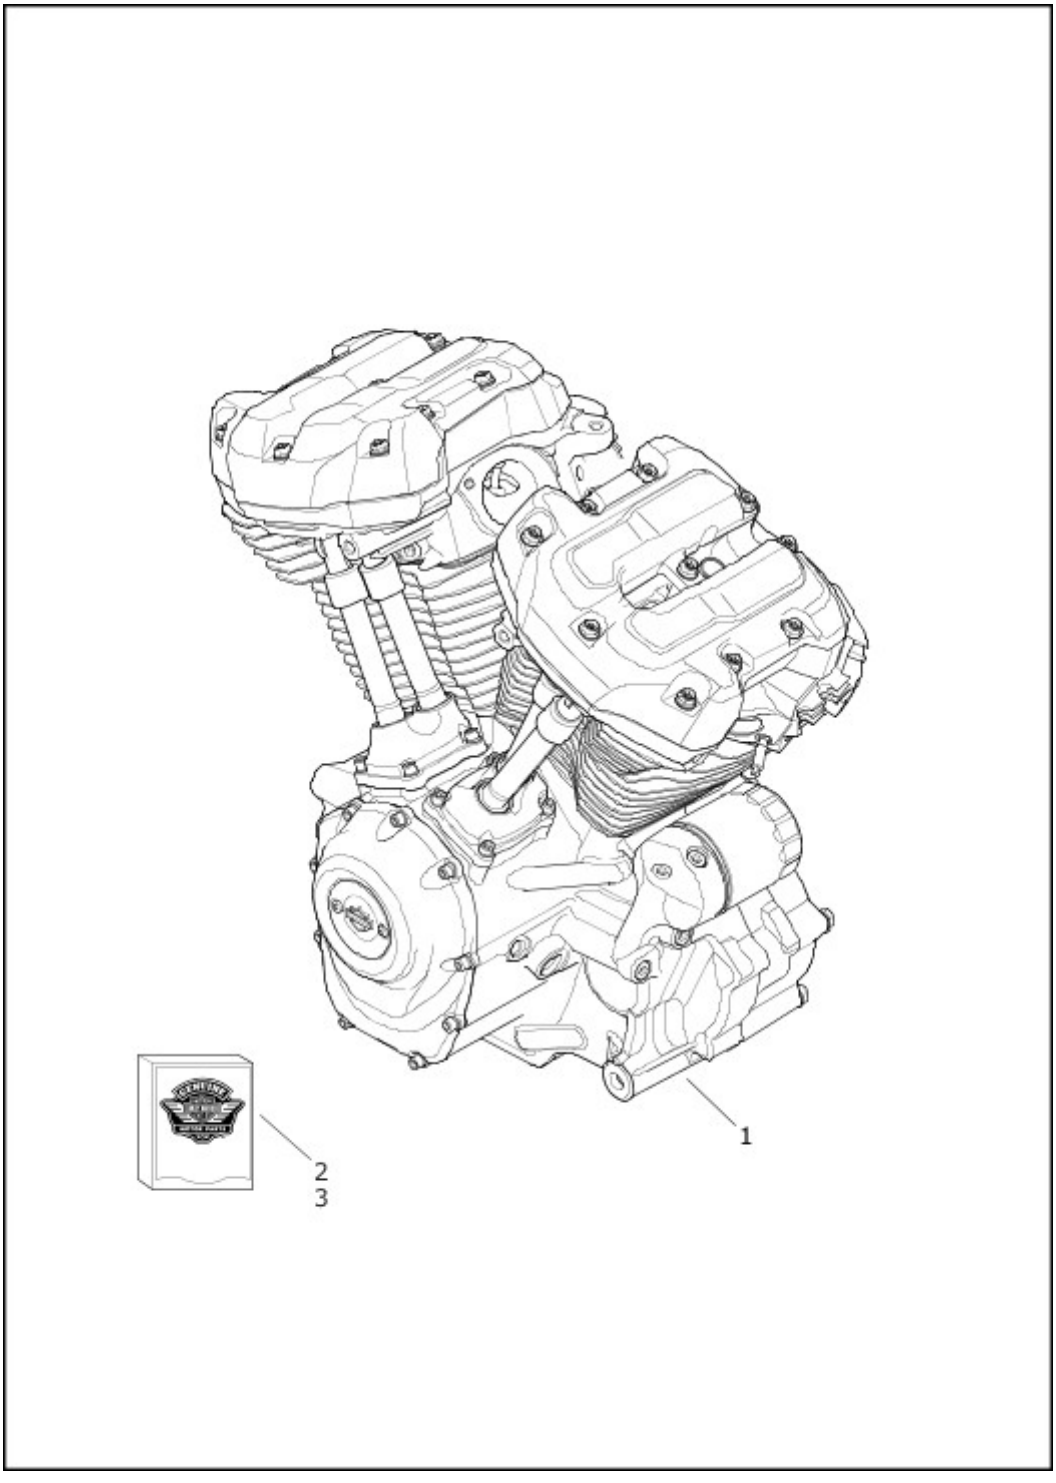


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	16200364	ENGINE ASSEMBLY, complete (Twin-Cooled) (Milwaukee-eight™ 114) (chrome)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
1	16200365	ENGINE ASSEMBLY, complete (Air-Cooled) (Milwaukee-eight™ 114) (black)	FLHRXS, FLHXS, FLTRXS
2	16200582	ENGINE ASSEMBLY, shortblock, with 91800064, crankcase, flywheel assembly, camshaft support plate assembly, balancer and cylinder studs (See Note)	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS

CYLINDERS, HEADS AND VALVES

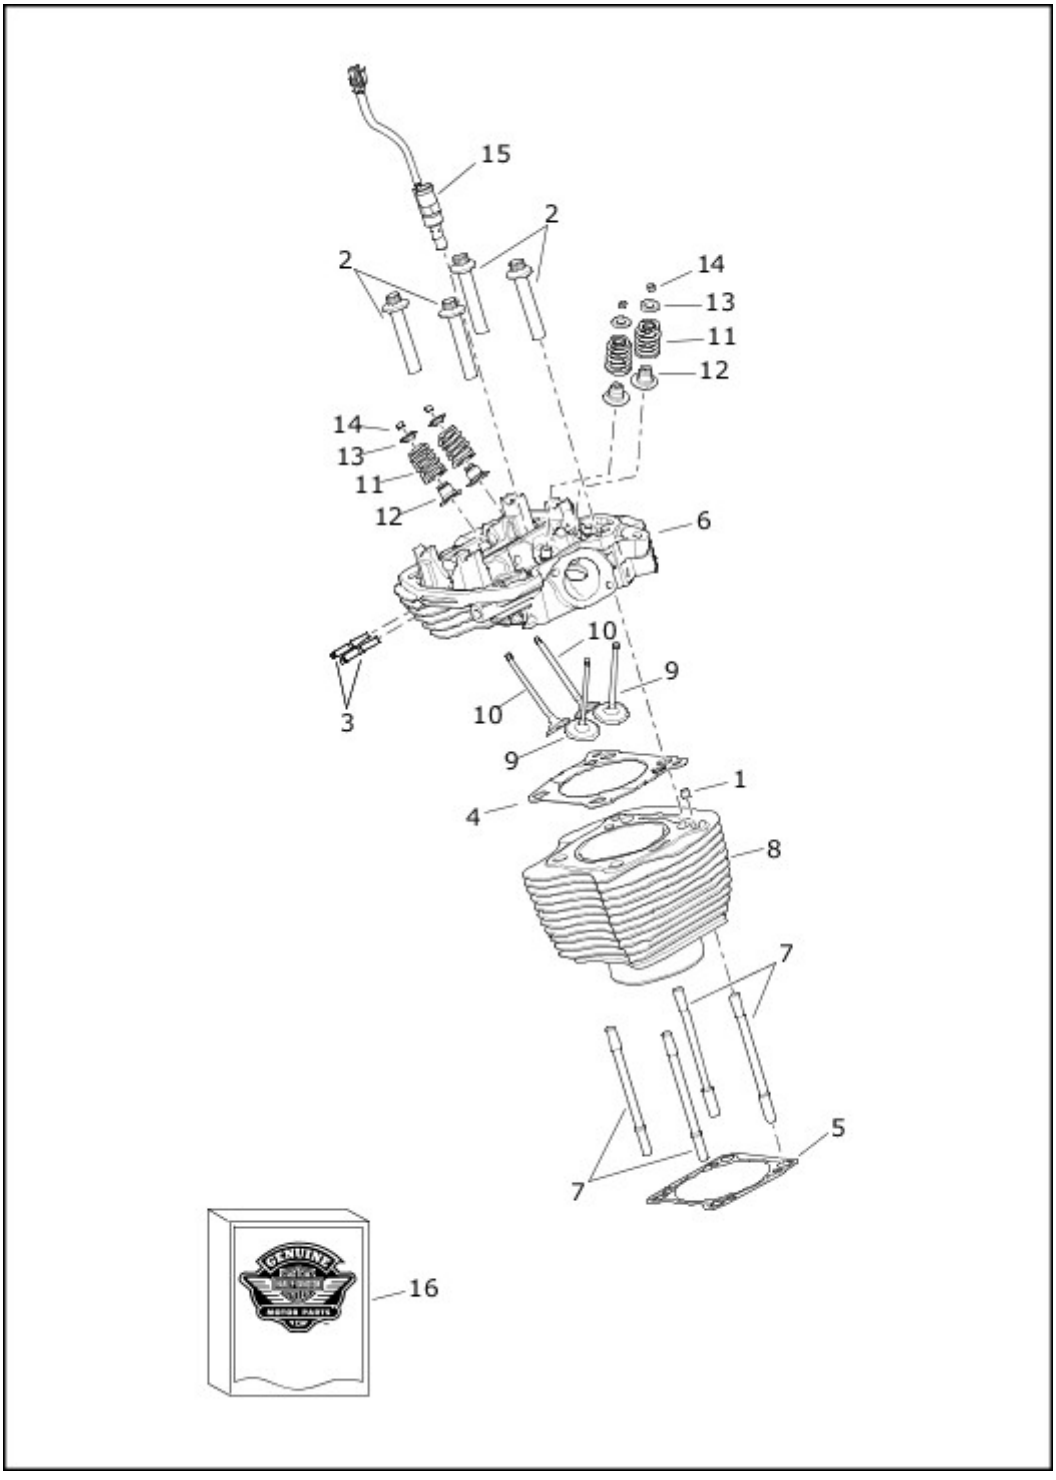


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
4	16500305	GASKET, cylinder head (4.016 in) *(2)*	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	16800075	CYLINDER, front, with 16589-99A (4.016 in) (black)	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
8	16800080	CYLINDER, rear, with 16589-99A (4.016 in) (black)	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
15	18400073B	SOLENOID, auto compression release (ACR) *(2)*	ALL

ROCKER ARM ASSEMBLY AND PUSHRODS

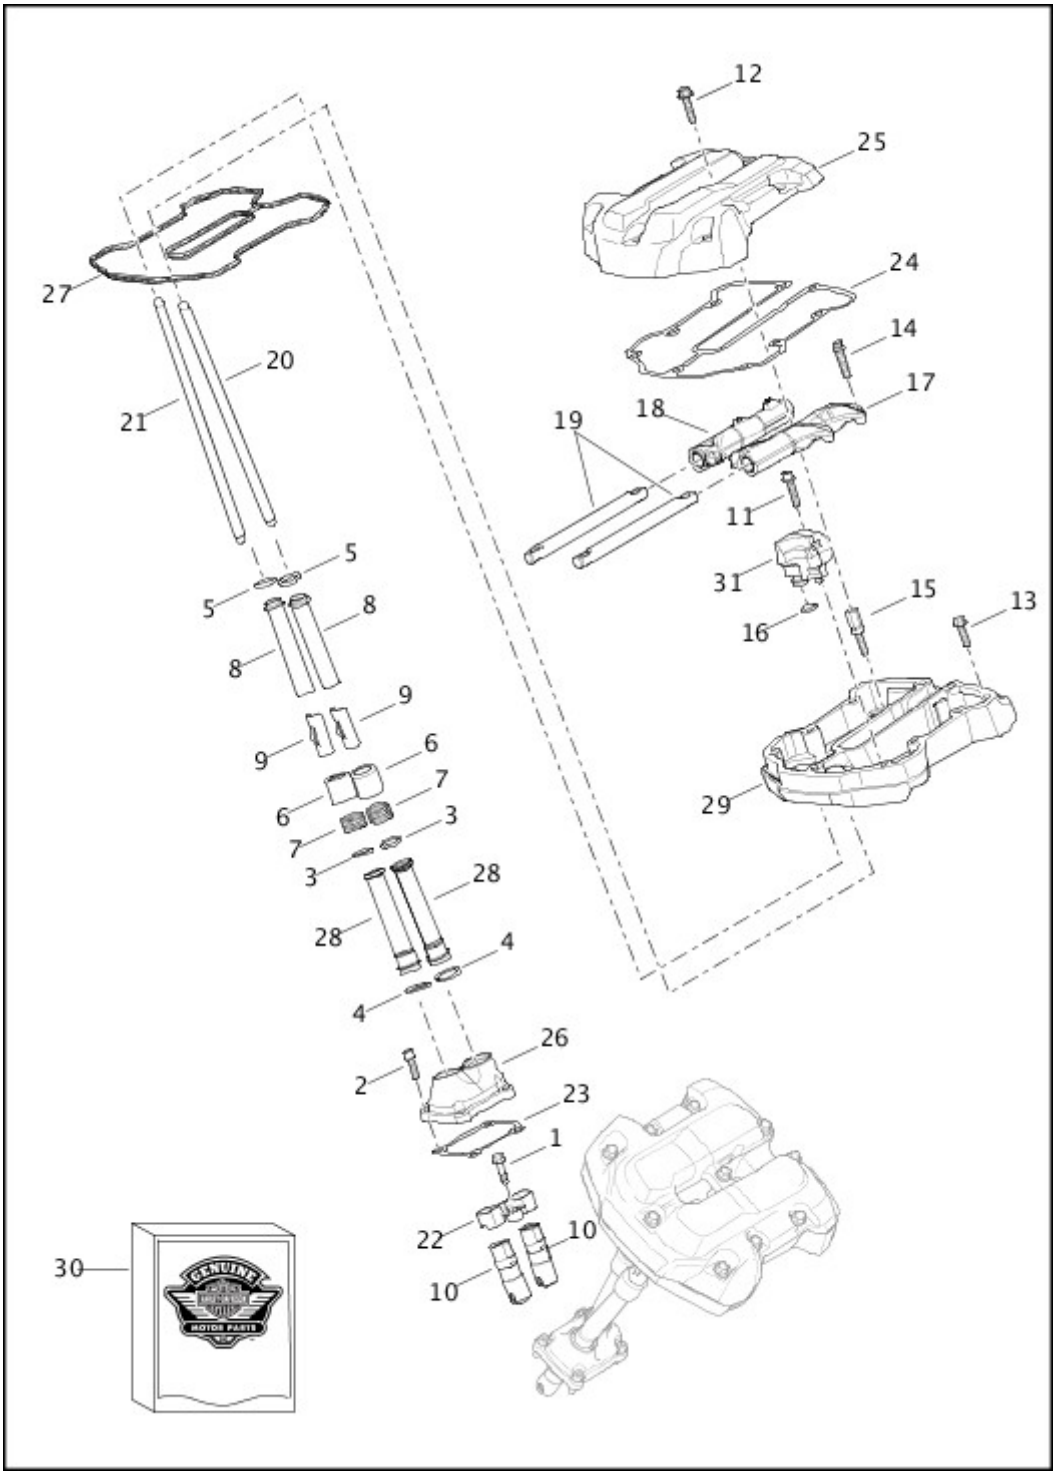


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
24	25700372B	GASKET, rocker arm cover *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
25	25700693	ROCKER COVER (polished) *(2)*	FLHT
29	25700691	ROCKER COVER, lower (polished) *(2)*	FLHT


COOLING SYSTEM, ENGINE, TWIN-COOLED™

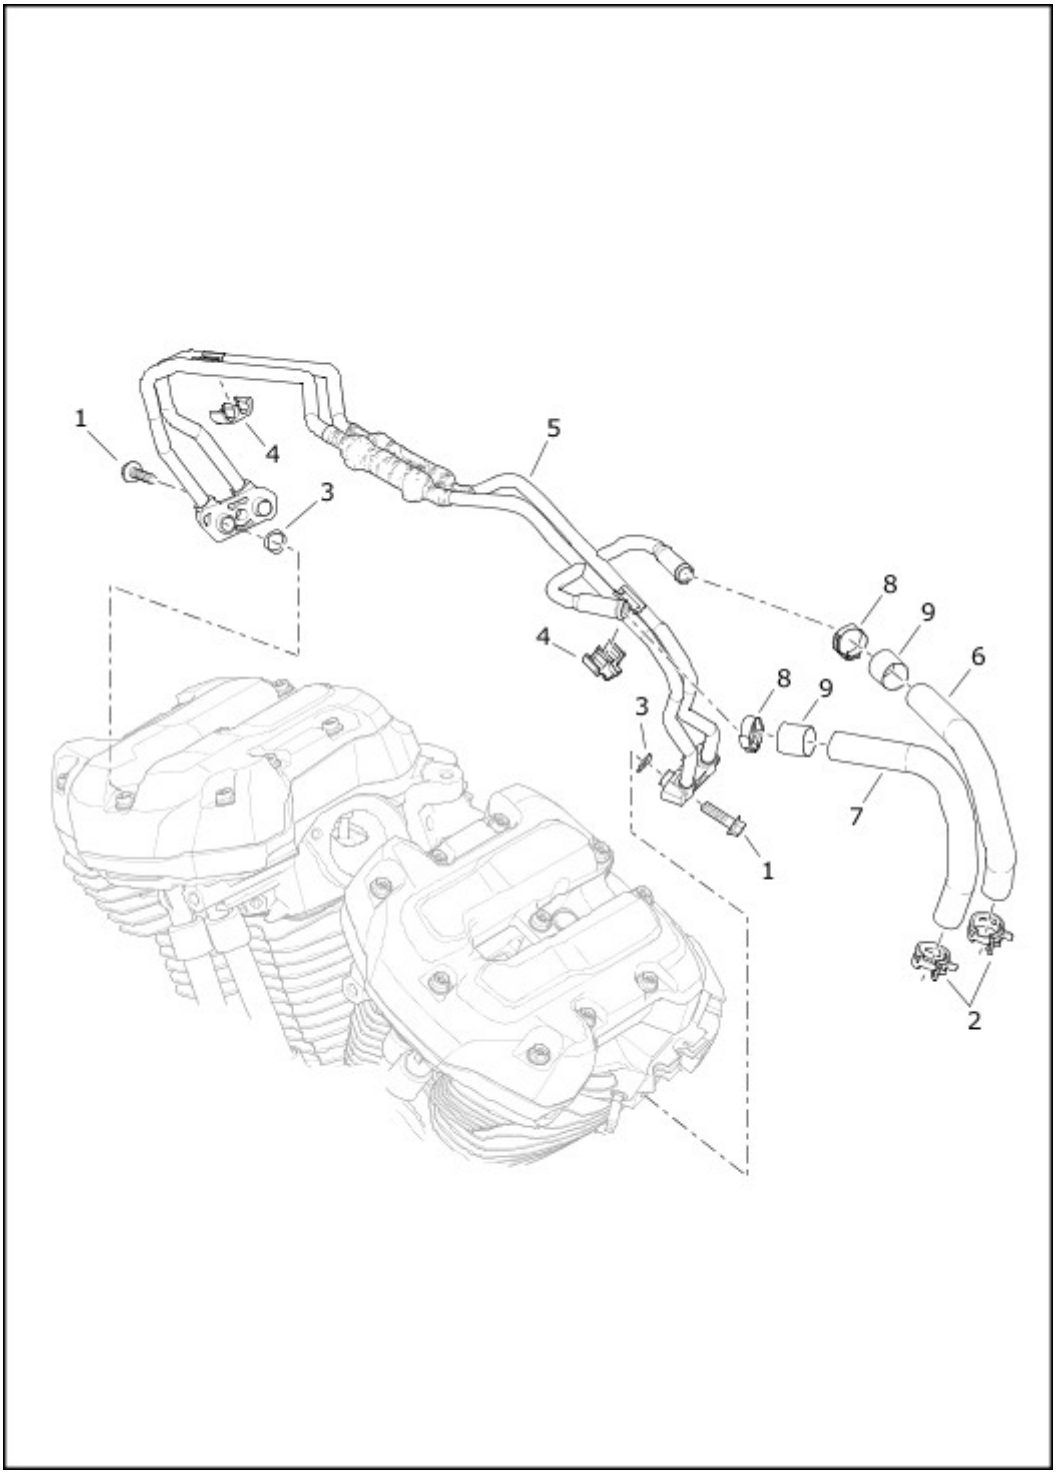

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	26900144	HOSE	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
7	26900145	HOSE	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
8	10800109	CLAMP *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
9	10800111	SLEEVE *(2)*	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

COOLING SYSTEM, ENGINE, AIR-COOLED

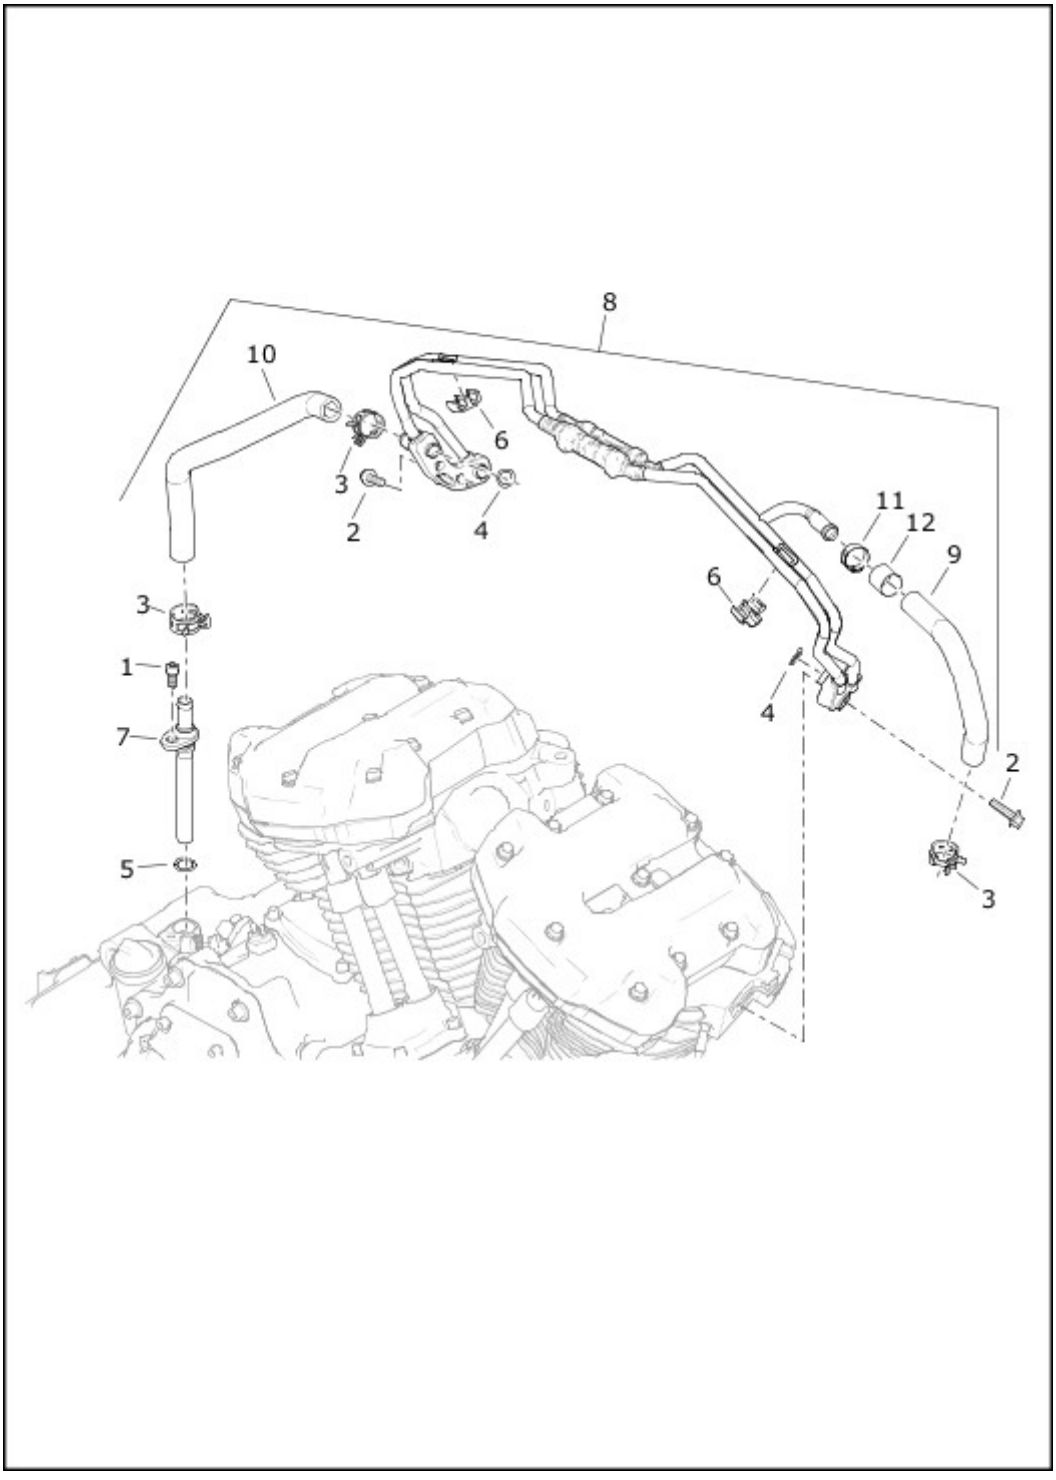


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	26900144	HOSE	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	62700161	HOSE	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
11	10800109	CLAMP	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS
12	10800111	SLEEVE	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRX, FLTRXS


PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107

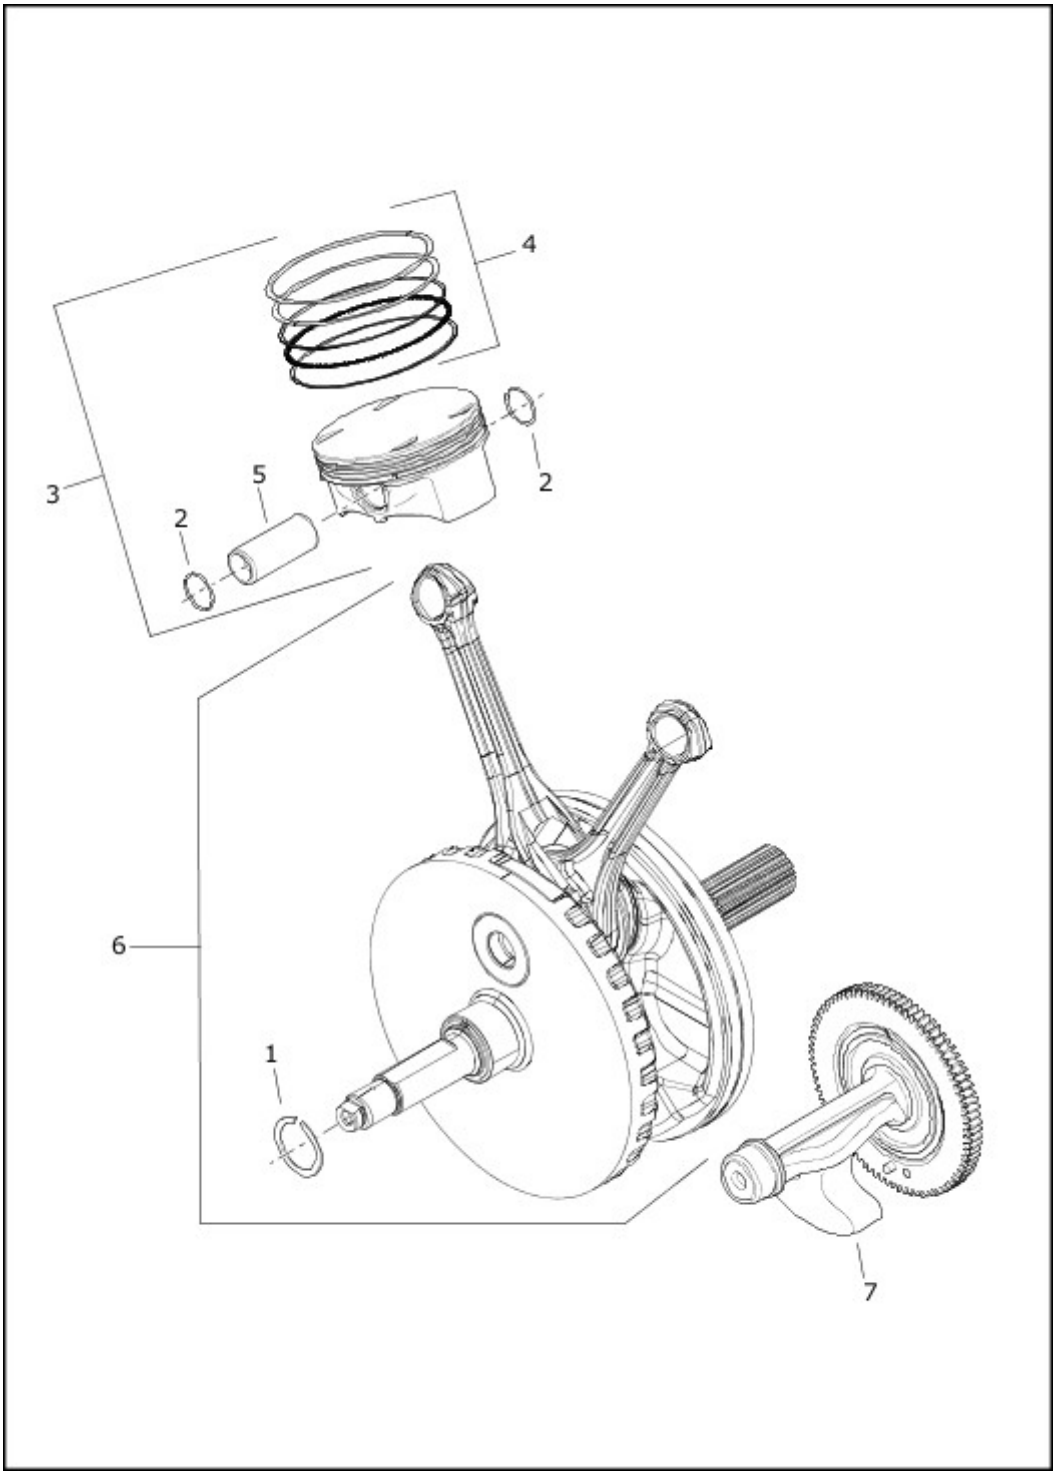

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	24100057A	FLYWHEEL ASSEMBLY KIT, with 11177A	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX

PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 114

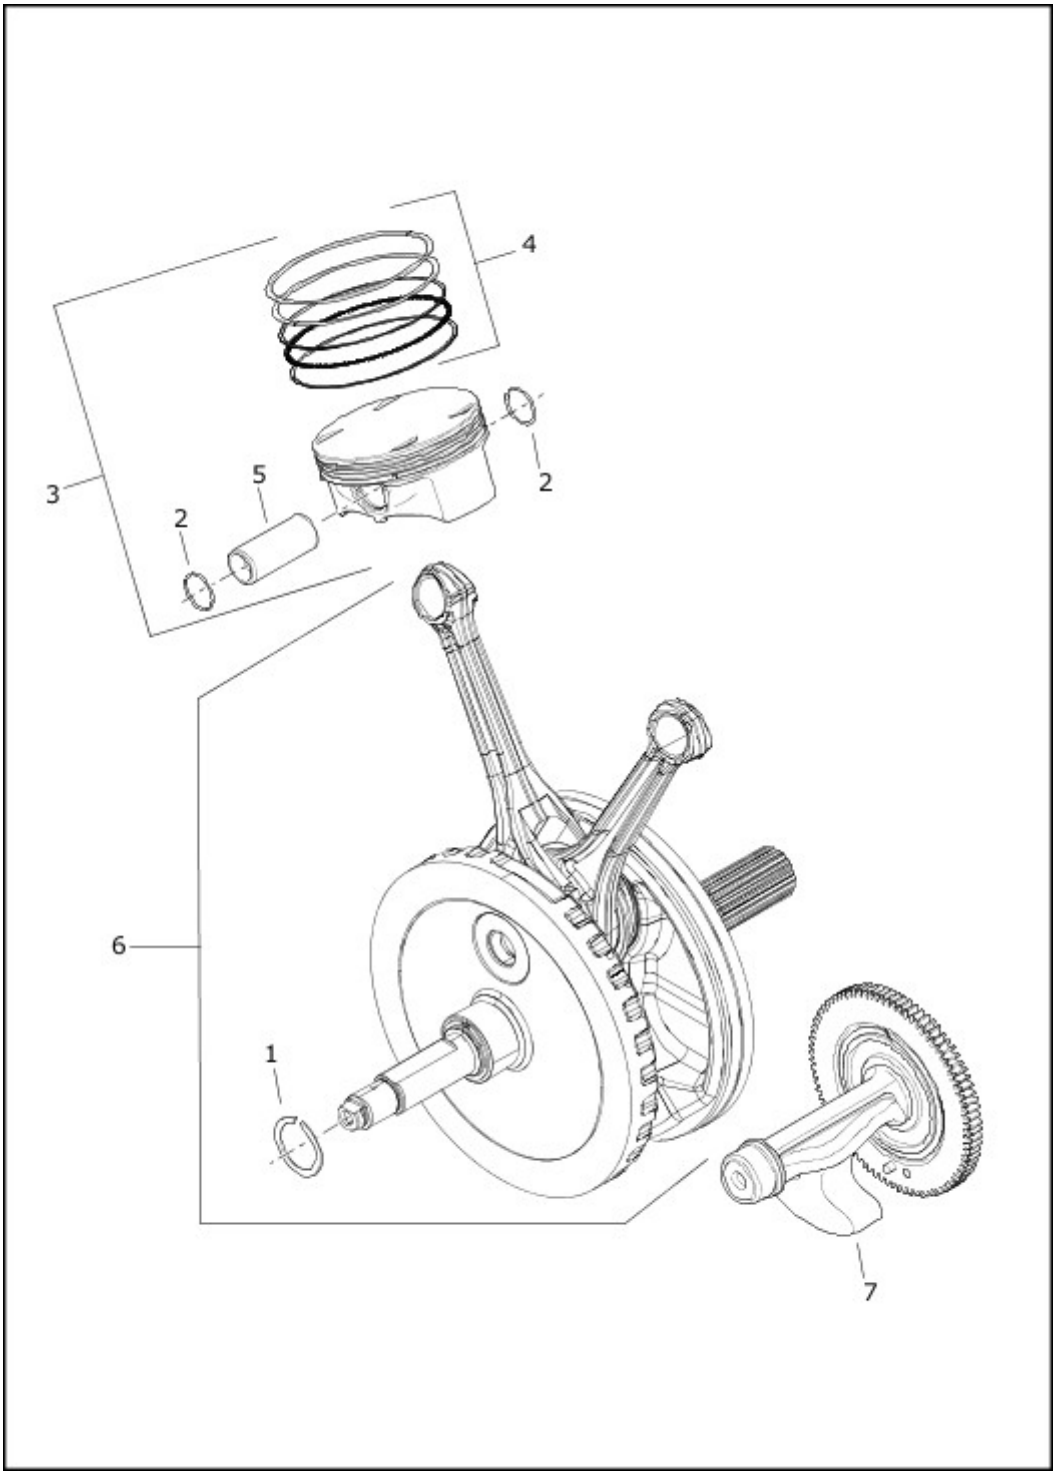


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	21900048	PISTON AND RINGS ASSEMBLY, with 22097-99, 22000061 and 22100006 (4.016 in) *(2)*	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
4	22000061	PISTON RING SET (4.016 in) *(2)*	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
6	24100045A	FLYWHEEL ASSEMBLY KIT, with 11177A	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS

CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)

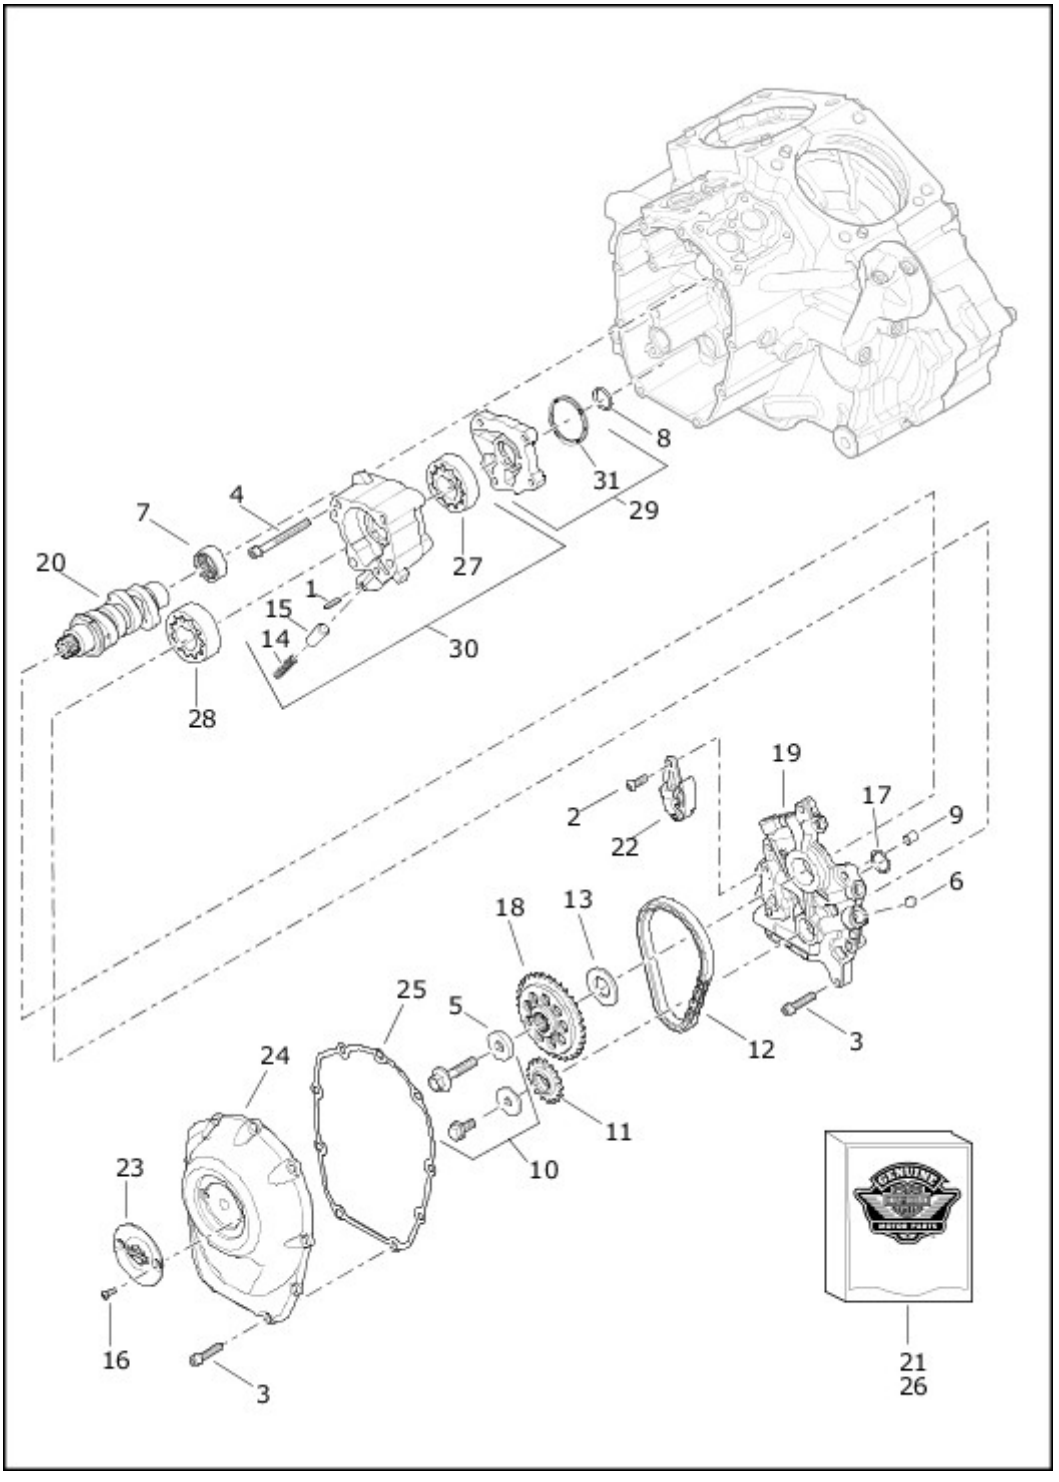


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	25600078	COVER, timer cover (black)	FLHR, FLHRC, FLHRXS, FLHT, FLHTCU, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	25600110	COVER, timer cover	FLHTK, FLHTK SHRINE, FLHTKL
24	25700698	CAMSHAFT COVER (polished)	FLHT
29	62400206	COVER, oil pump assembly, with 62400205	ALL
31	62400205	OIL SEAL	ALL

AIR CLEANER

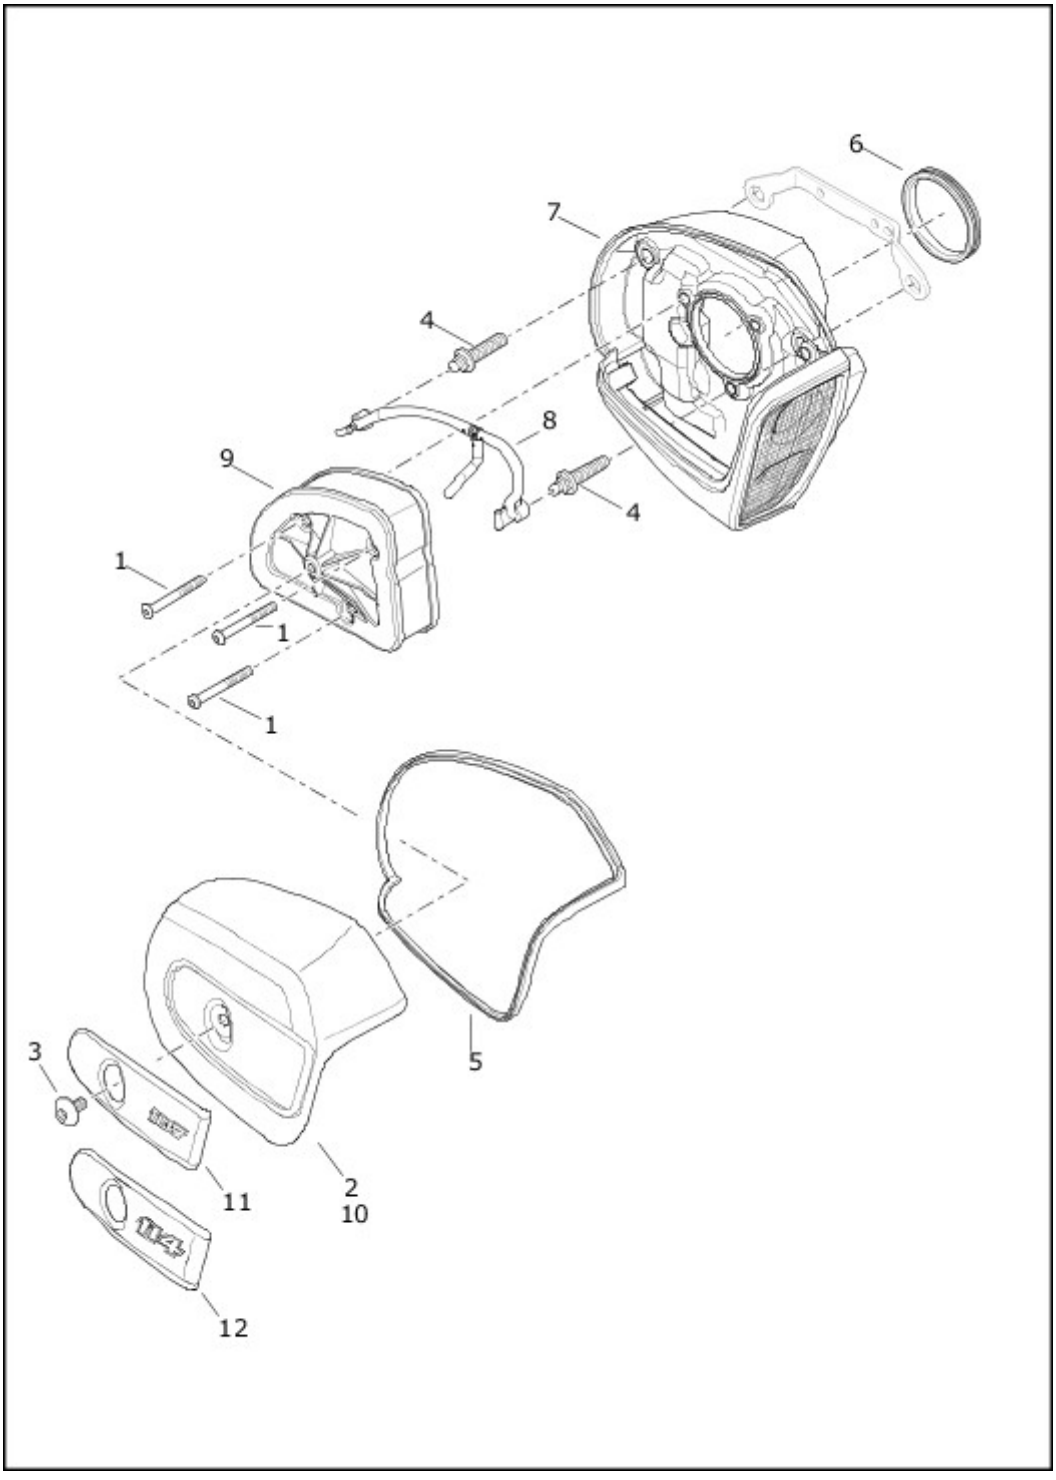


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	14001799	LABEL, air cleaner warning (China)	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	29000301	COVER KIT, with 14001799 (chrome) (China)	FLHR, FLHRC, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
10	29000302	COVER KIT, with 14001799 (gloss black) (China)	FLHRXS, FLHXS, FLTRXS
12	61300934	INSERT, cover	FLTRU
12	61300935	INSERT, cover	FLHTK, FLHTK SHRINE, FLHTKL
12	61300936	INSERT, cover	FLHRXS, FLHXS, FLTRXS

ELECTRONIC CONTROL MODULE (ECM) AND COIL

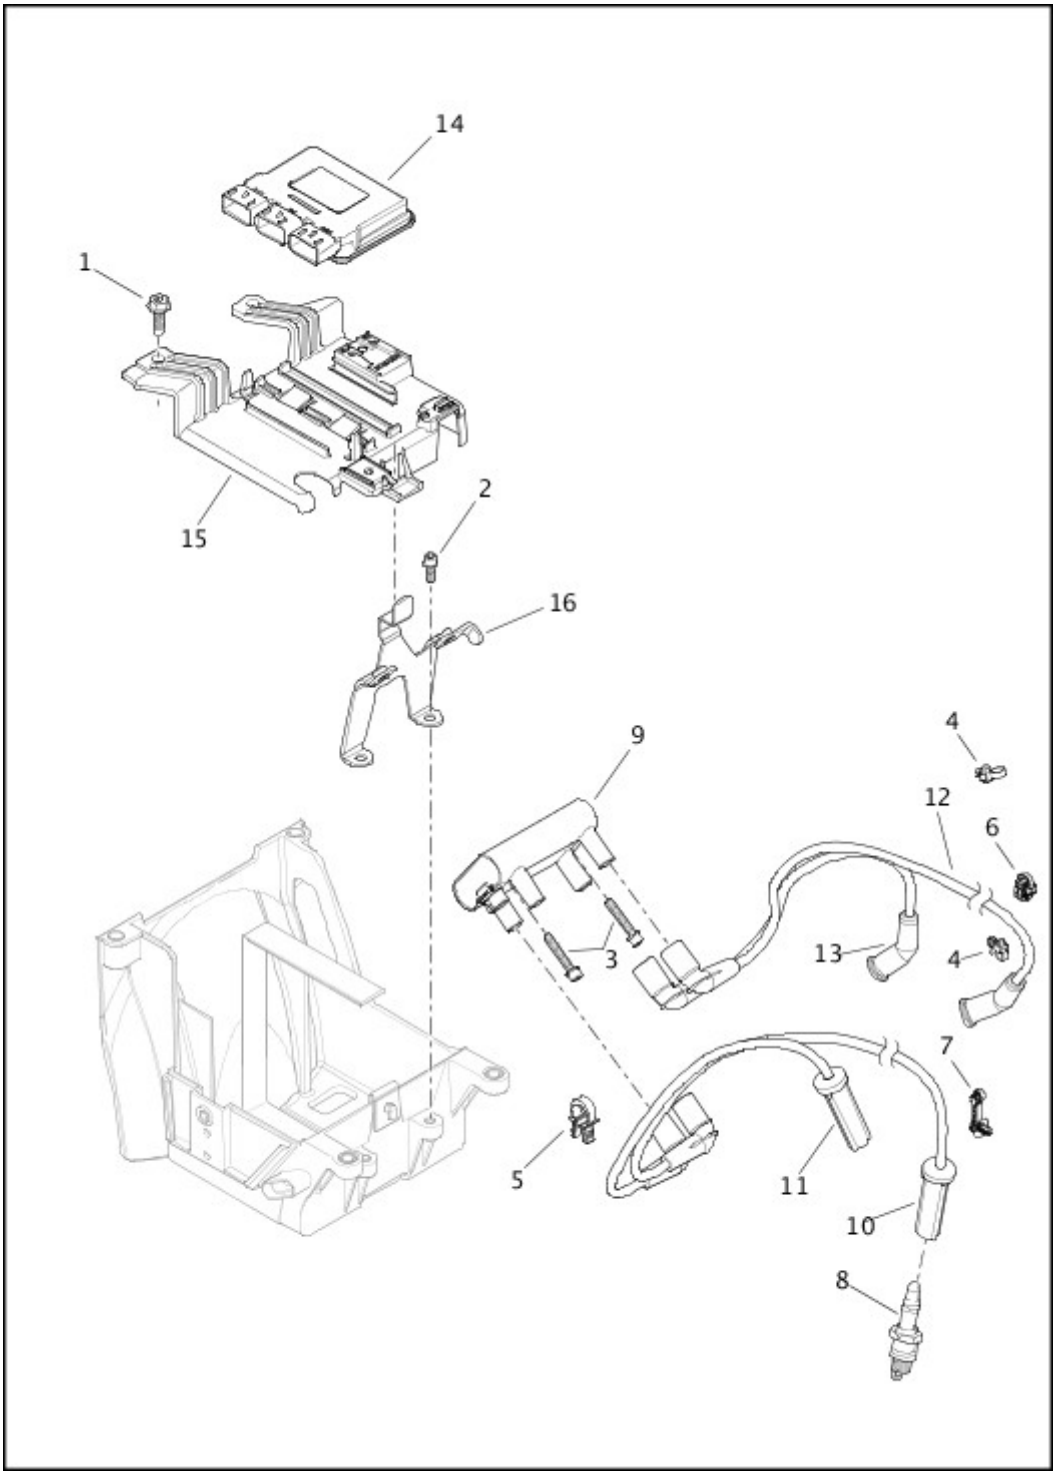


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	31600018B	SPARK PLUG CABLE, right front cylinder, with 10177 and 12200172	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	41000599	ELECTRONIC CONTROL MODULE (ECM), Requires Digital Technician II programming.	FLHRXS, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
14	41000668	ELECTRONIC CONTROL MODULE (ECM), Requires Digital Technician II programming.	FLHR, FLHRC, FLHT, FLHTCU, FLHX, FLTRX


SHIFTER, GEAR

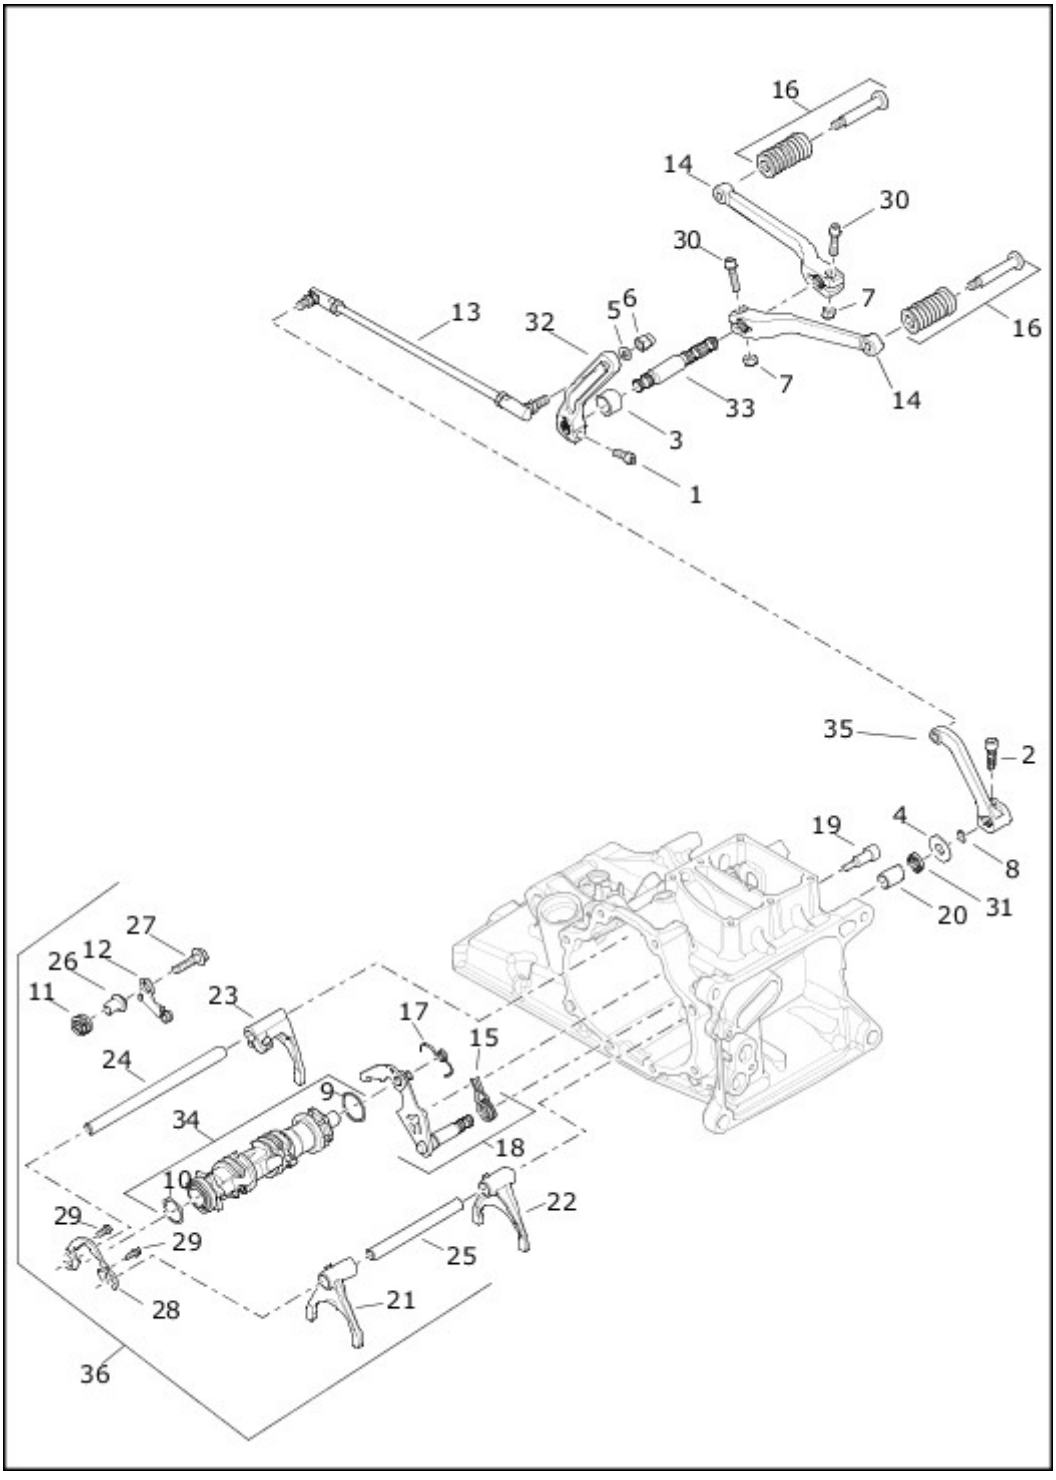

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	33600304	SPACER	FLHT


TRANSMISSION BEARINGS AND COVERS

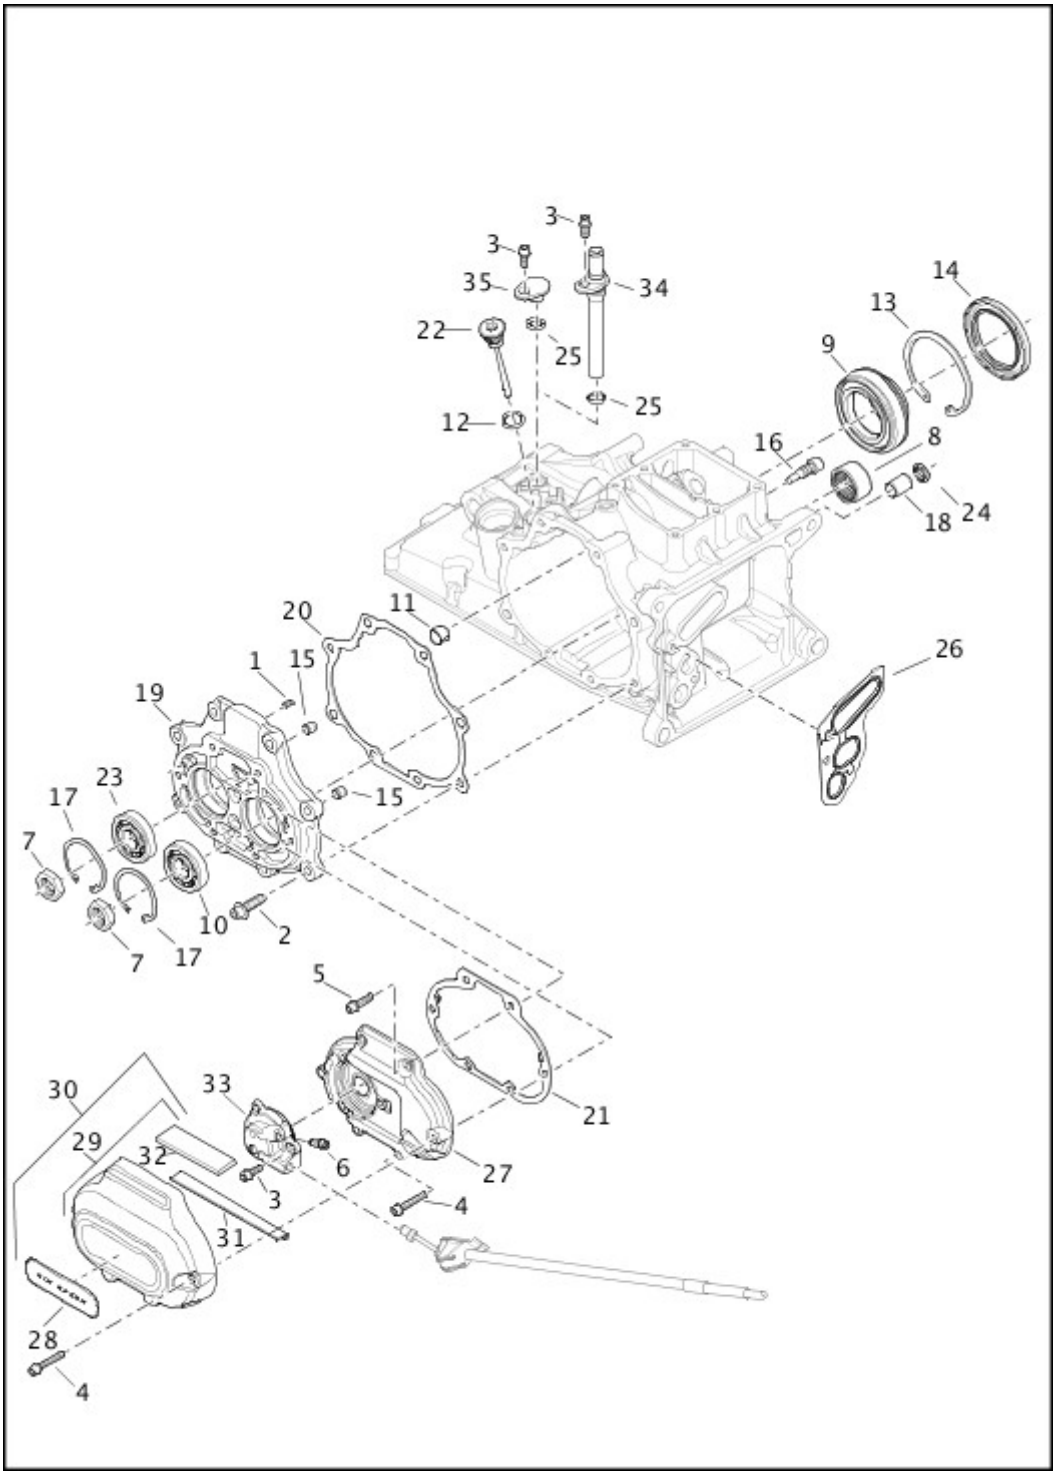

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	37200131B	SECONDARY CLUTCH ACTUATOR, with 4890	ALL

TRANSMISSION GEARS

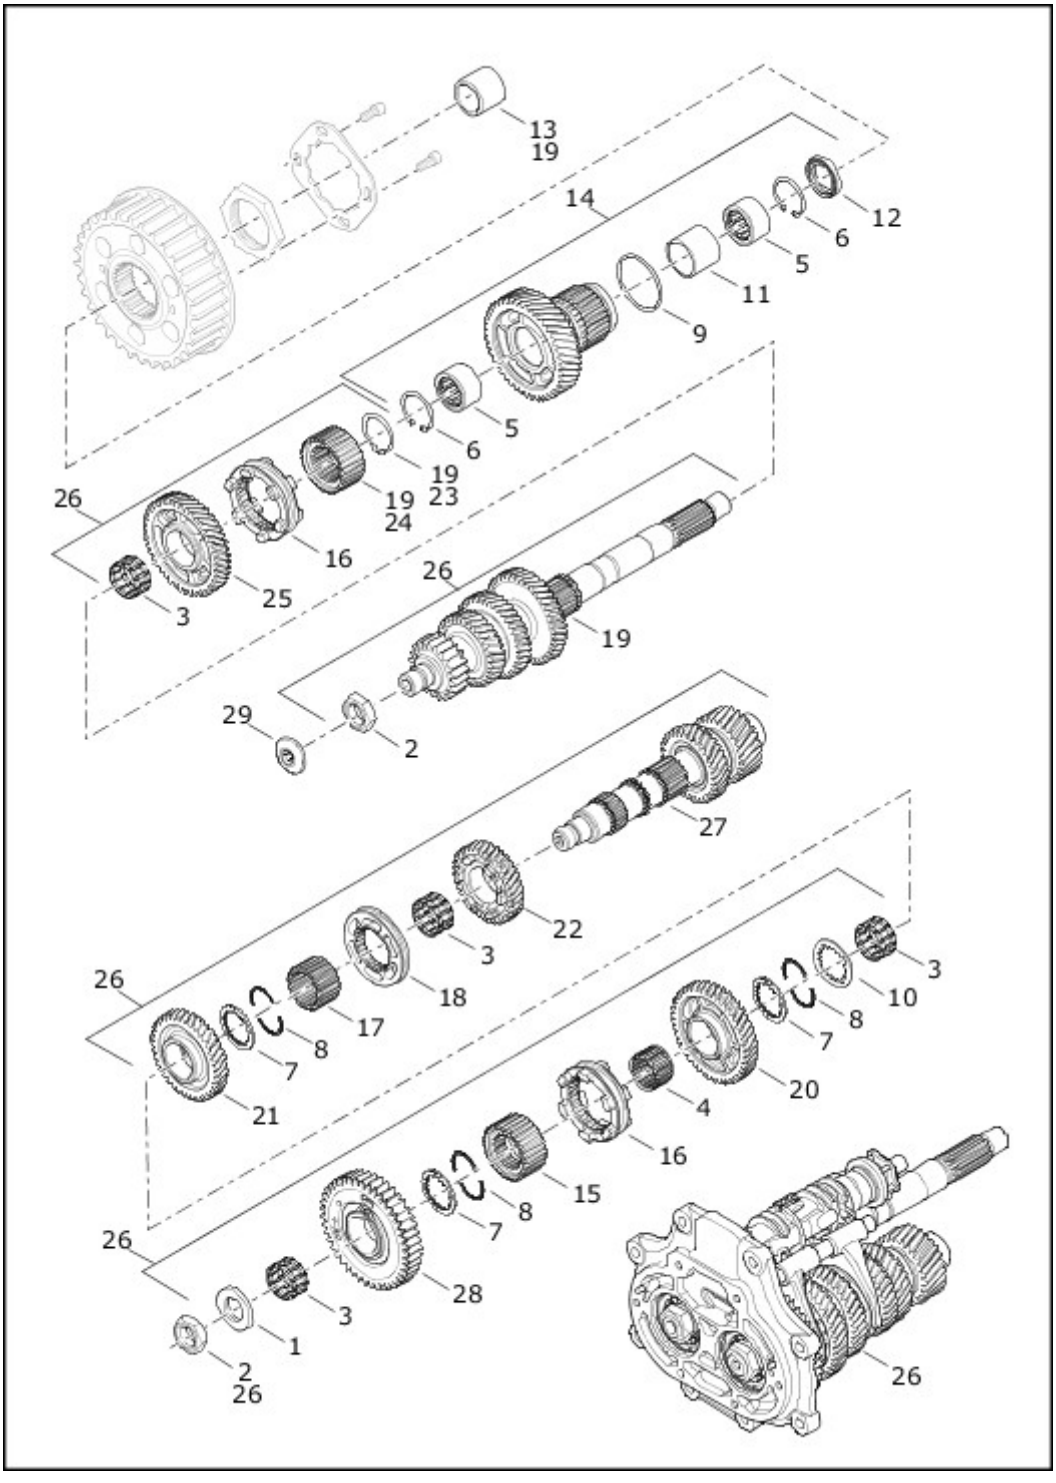


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
5	8042A	BEARING, needle *(2)*	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	35122-06A	GEAR ASSEMBLY, driven output, with 8042, 10991A, 11201, 11599A and 12077	ALL
29	36300026	OIL DEFLECTOR	ALL

CLUTCH

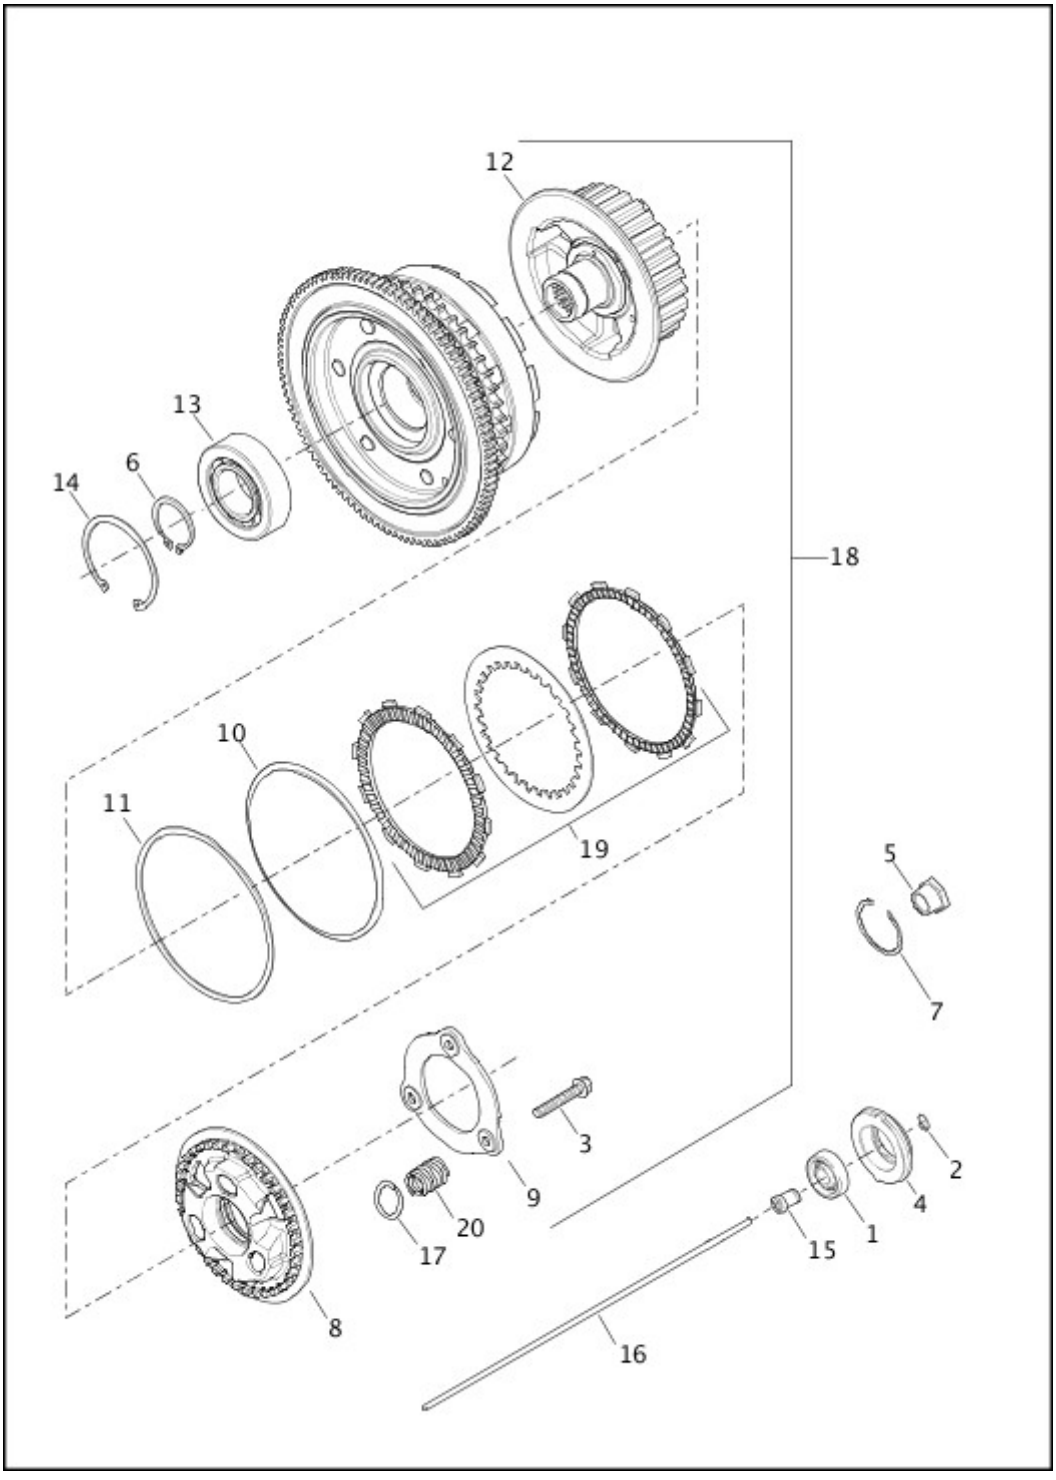


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	37000295	SEAT, damper-spring	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	37000254A	CLUTCH ASSEMBLY, complete, with 3, 6, 8, 9, 10, 11, 12, 13, 14, 17, 19 and 20	ALL
20	37000270A	COIL SPRING *(3)*	ALL

PRIMARY HOUSING

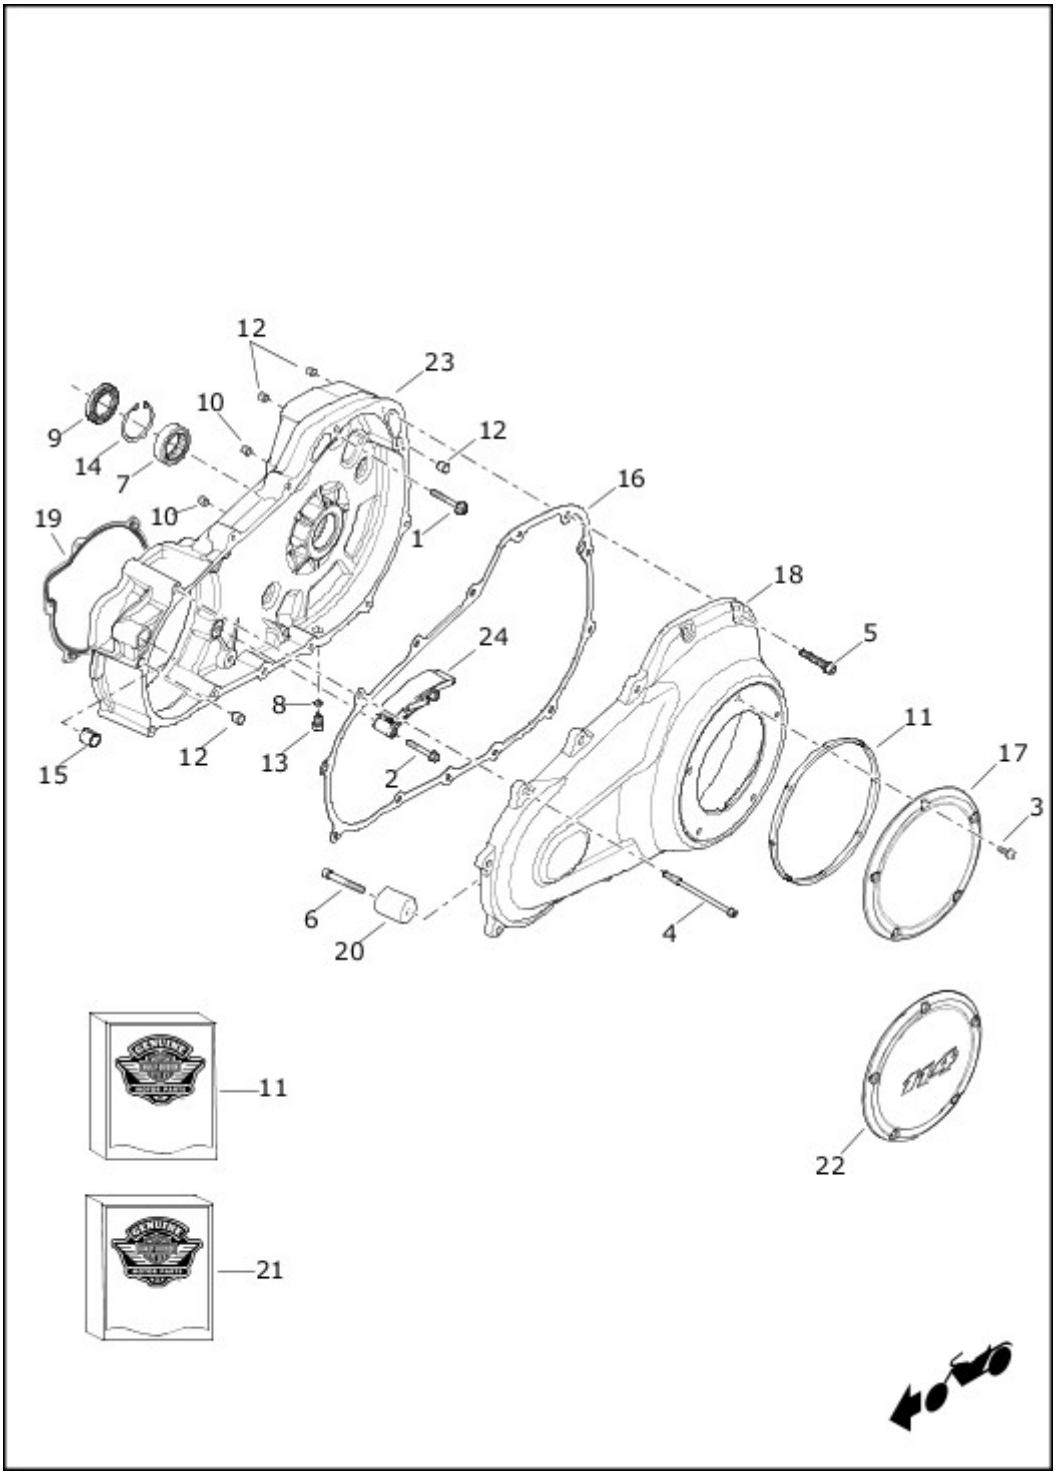


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	25701145	COVER, clutch (polished)	FLHT
18	25701144	COVER, primary (polished)	FLHT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	25700902	COVER, clutch (chrome)	FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
22	25700904	COVER, clutch (gloss black)	FLHRXS, FLHXS, FLTRXS


CLUTCH CONTROL

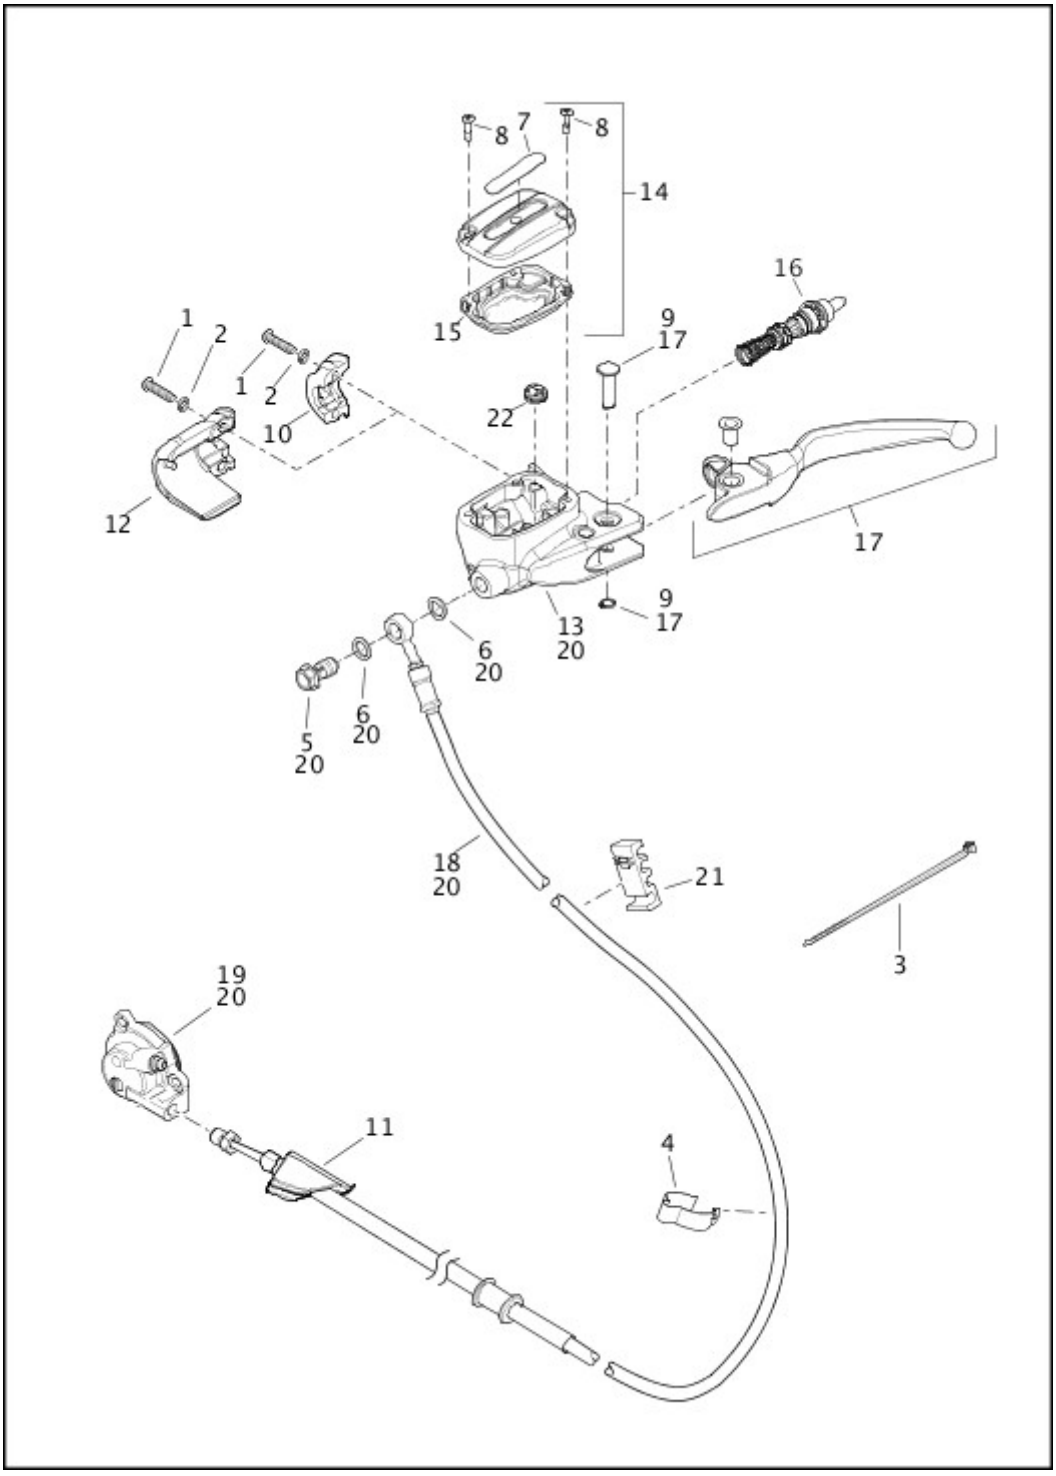

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	36700128A	MASTER CYLINDER ASSEMBLY, clutch, with 36700130, 36700132, 36700133 and 41700367 (black)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
13	36700169A	MASTER CYLINDER ASSEMBLY, clutch, with 36700130, 36700132, 36700171 and 41700367 (black)	FLHRXS, FLHXS, FLTRXS
17	36700133A	LEVER ASSEMBLY, hand, with 42860-06B and bushing (polished)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
17	36700171A	LEVER ASSEMBLY, hand, with 42860-06B and bushing (black)	FLHRXS, FLHXS, FLTRXS
19	37200131B	SECONDARY CLUTCH ACTUATOR	ALL
20	37200347B	CLUTCH ACTUATION KIT, with 5, 6, 13, 18 and 19	FLTRX, FLTRXS
20	37200348B	CLUTCH ACTUATION KIT, with 5, 6, 13, 18 and 19	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX
20	37200349B	CLUTCH ACTUATION KIT, with 5, 6, 13, 18 and 19	FLTRU
20	37200352B	CLUTCH ACTUATION KIT, with 5, 6, 13, 18 and 19	FLHRXS, FLHXS

BRAKE CONTROL, FRONT

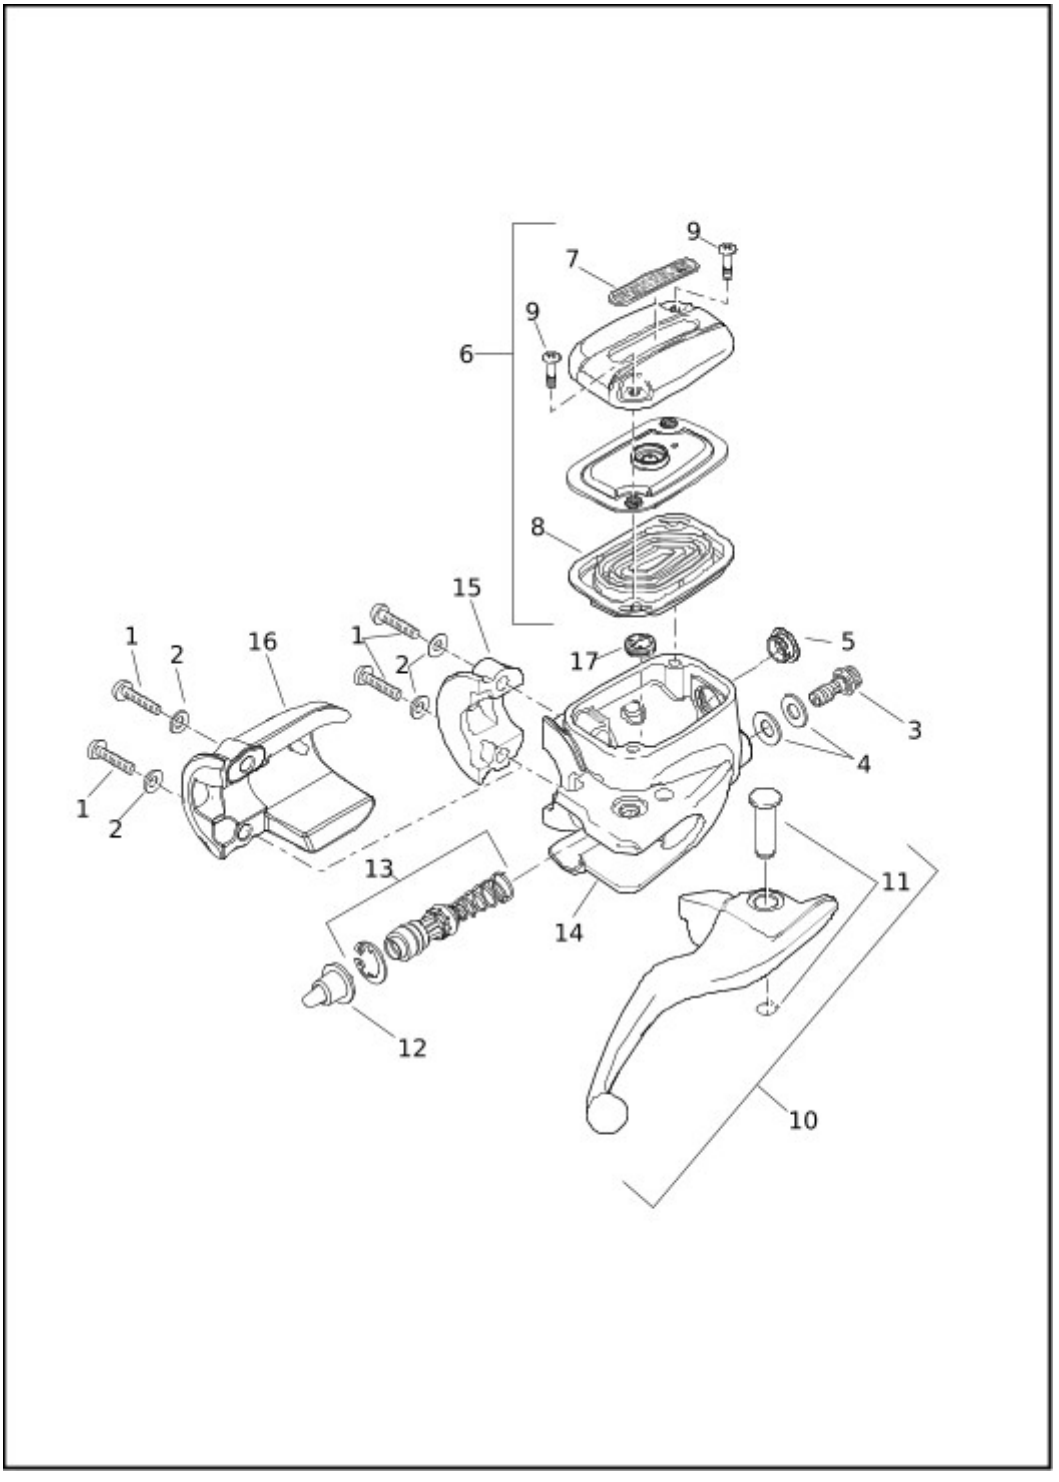


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	44551-08F	MASTER CYLINDER ASSEMBLY, front, with 5, 6, 7, 8, 9, 10, 11, 12, 13 and 17 (black)	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	44985-10D	MASTER CYLINDER ASSEMBLY, front, with 5, 6, 7, 8, 9, 10, 11, 12, 13 and 17 (black)	FLHRXS, FLHXS, FLTRXS


BRAKE CONTROL, REAR

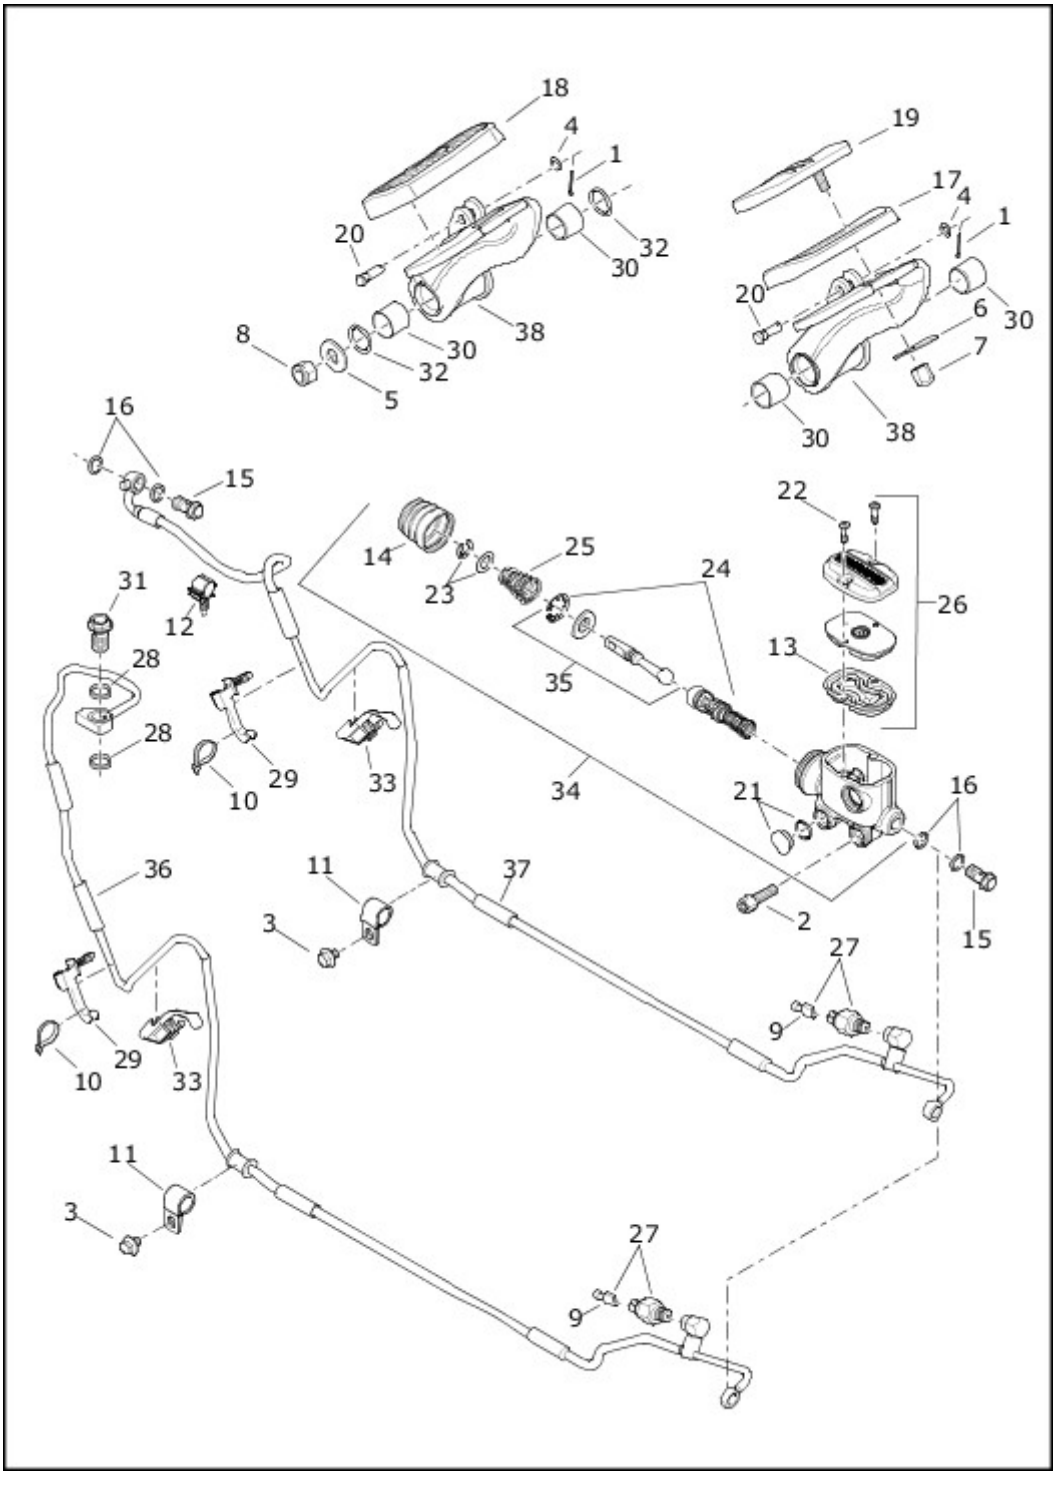

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	42937-08C	MASTER CYLINDER COVER KIT, rear, with 11902 and 42858-06A	ALL


BRAKE LINES AND MODULE, REAR - ABS

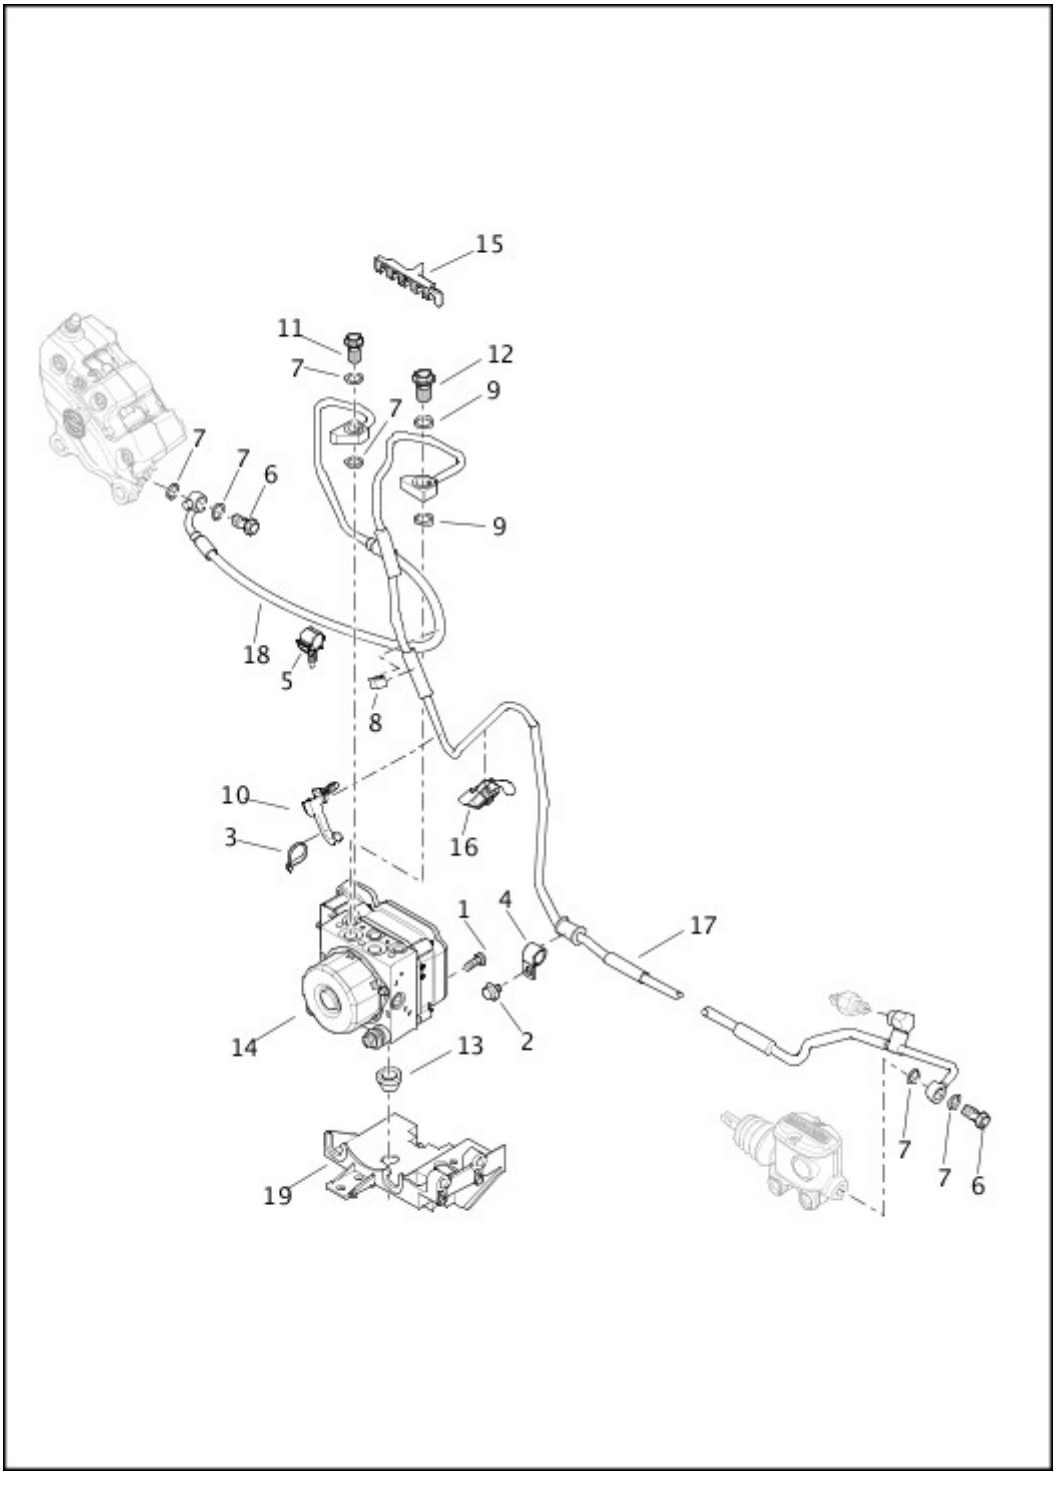

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	41100061B	ABS MODULE (EHCU)	ALL


SEATS

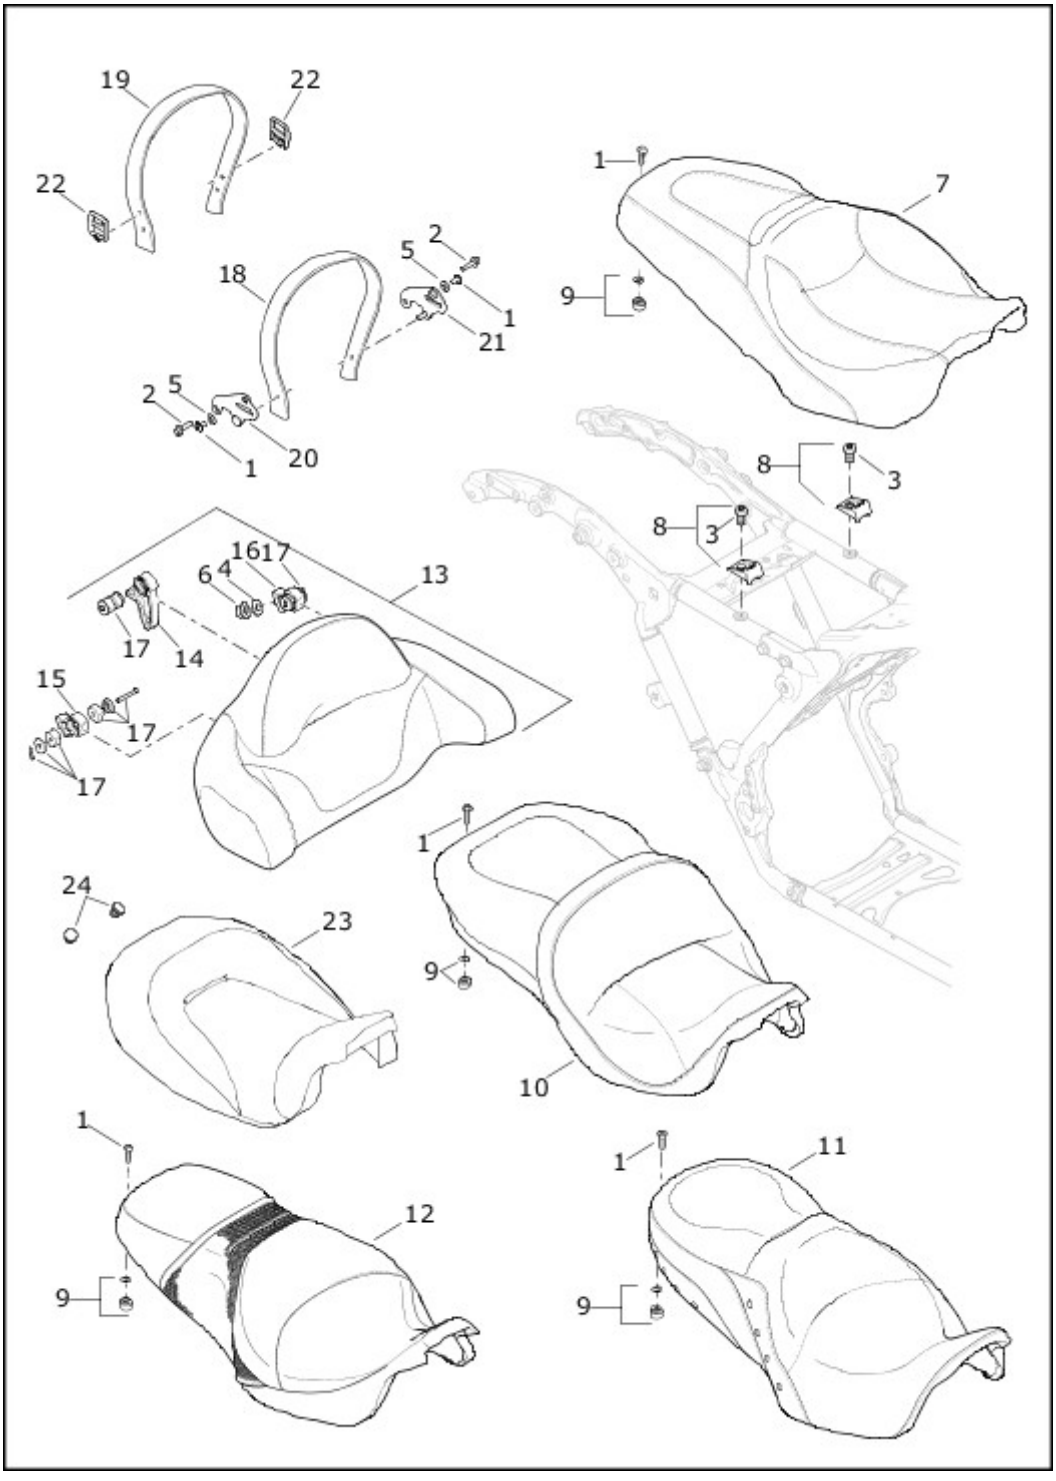

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	52000464	SEAT	FLHT
24	3633	NUT *(2)*	FLHT


FENDERS, REAR (1 OF 2)

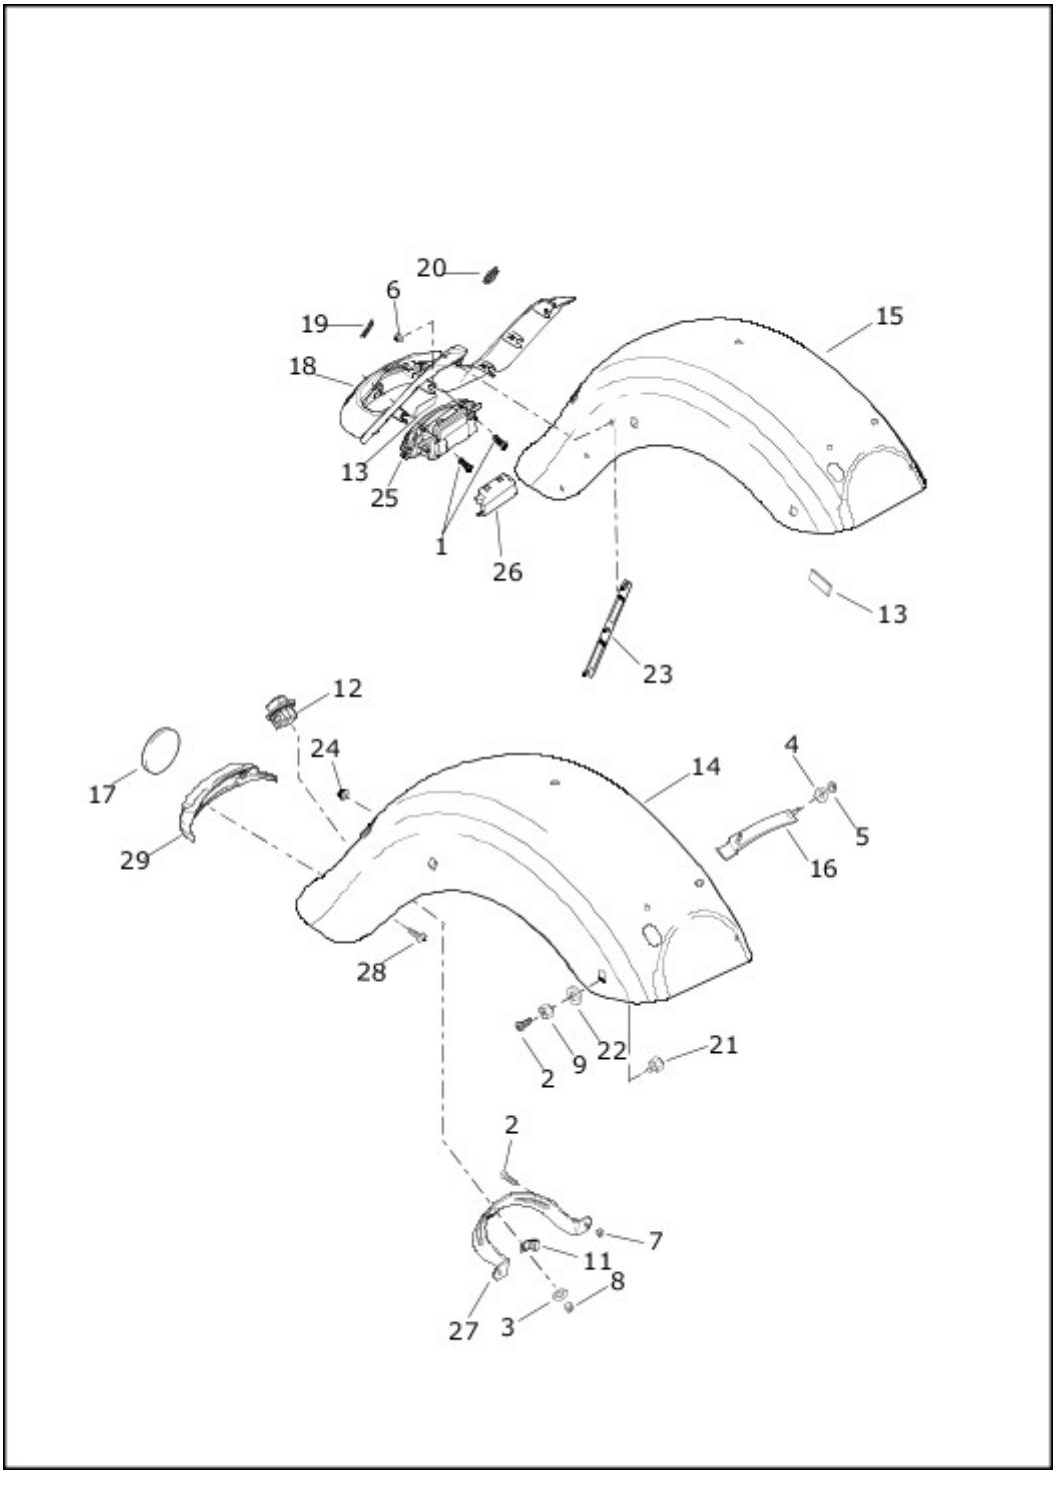

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	58702-09A	FENDER, rear (prime)	FLHR, FLHT
14	58702-09A	FENDER, rear (prime) (HDI)	FLHRC, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU


LICENSE PLATE BRACKETS

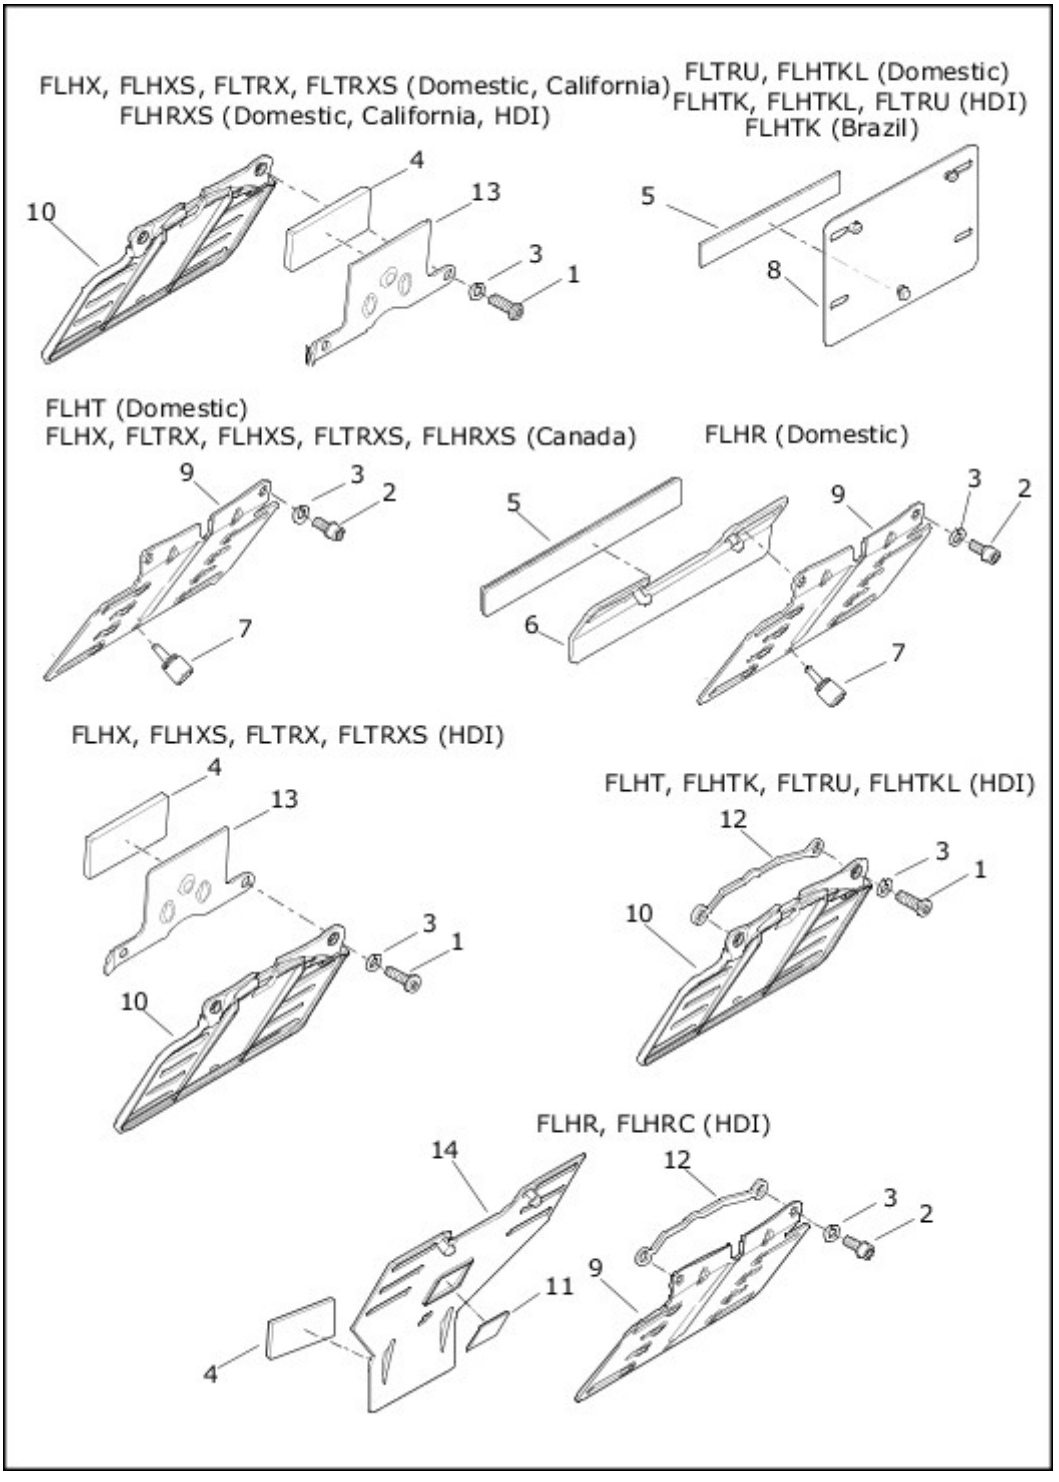

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
7	67900009	BUMPER, license plate bracket	FLHT

FUEL TANK - FLHR, FLHRC AND FLHRXS

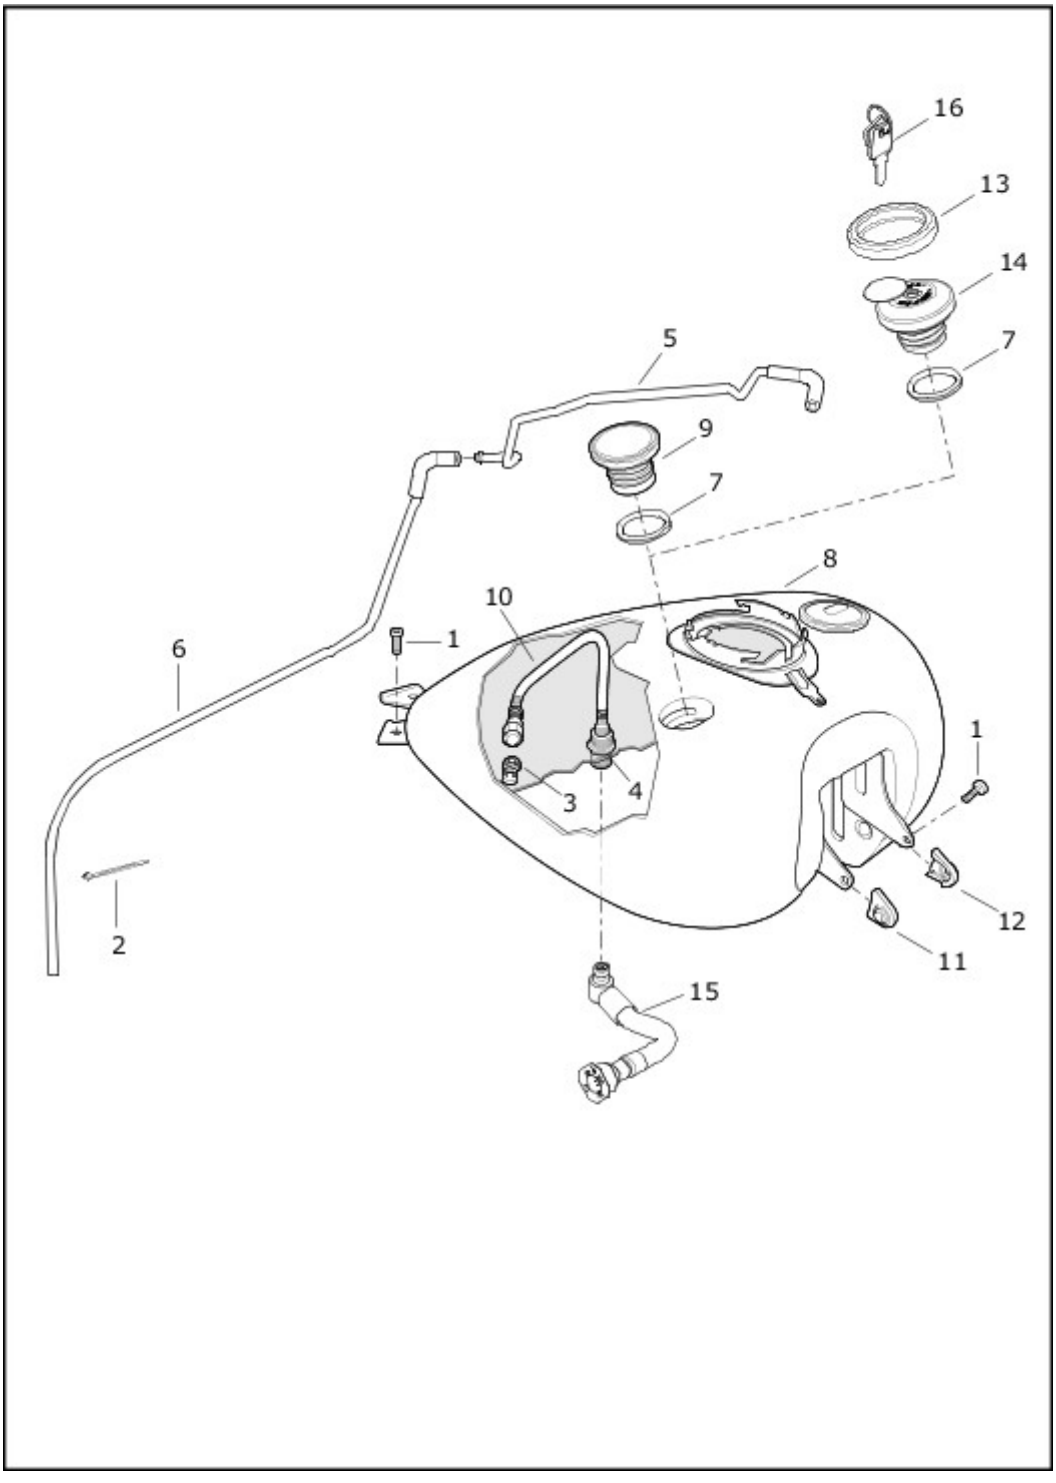


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	61100065	BUMPER, filler cap (China)	FLHR, FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	61100120	FILLER CAP KIT, locking, with 61109-85D and 90300093 (Asia-Pacific)	FLHR, FLHRXS
14	61100123	FILLER CAP KIT, locking, with 61109-85D, 61100065 and 90300093 (China)	FLHR, FLHRXS

CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3)

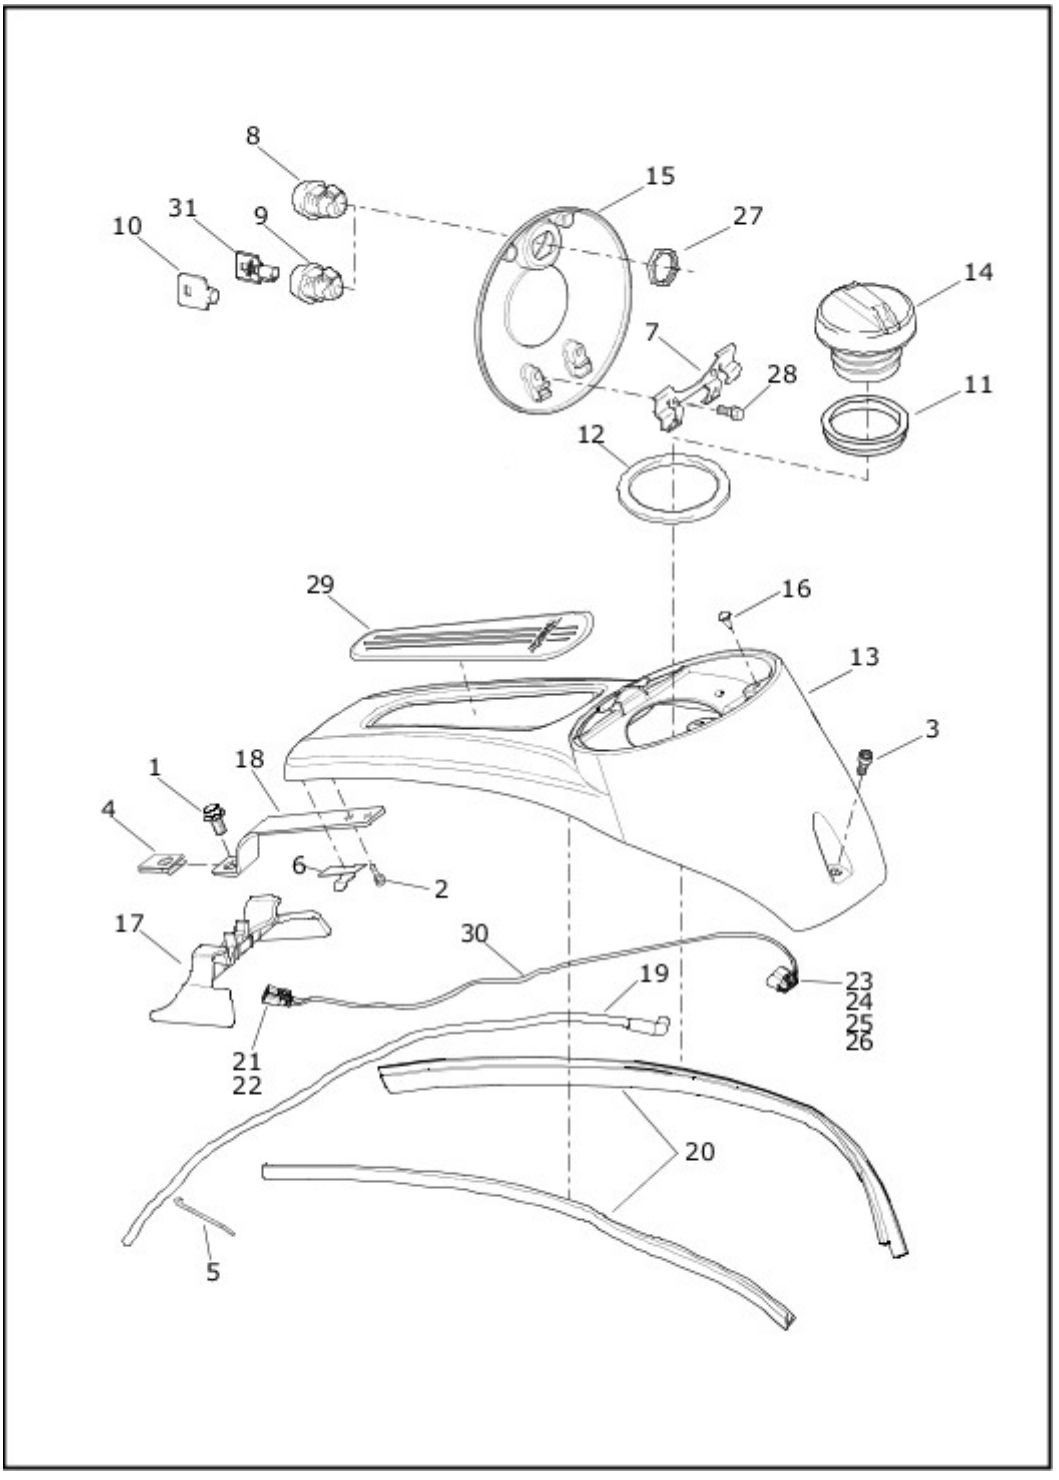


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	53919-04B	PUSH BUTTON KIT, fuel tank, with 84850-92 (chrome) (Domestic)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	90300096A	PUSH BUTTON KIT, fuel tank, with 84850-92 (black) (Domestic)	FLHXS, FLTRXS


CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)

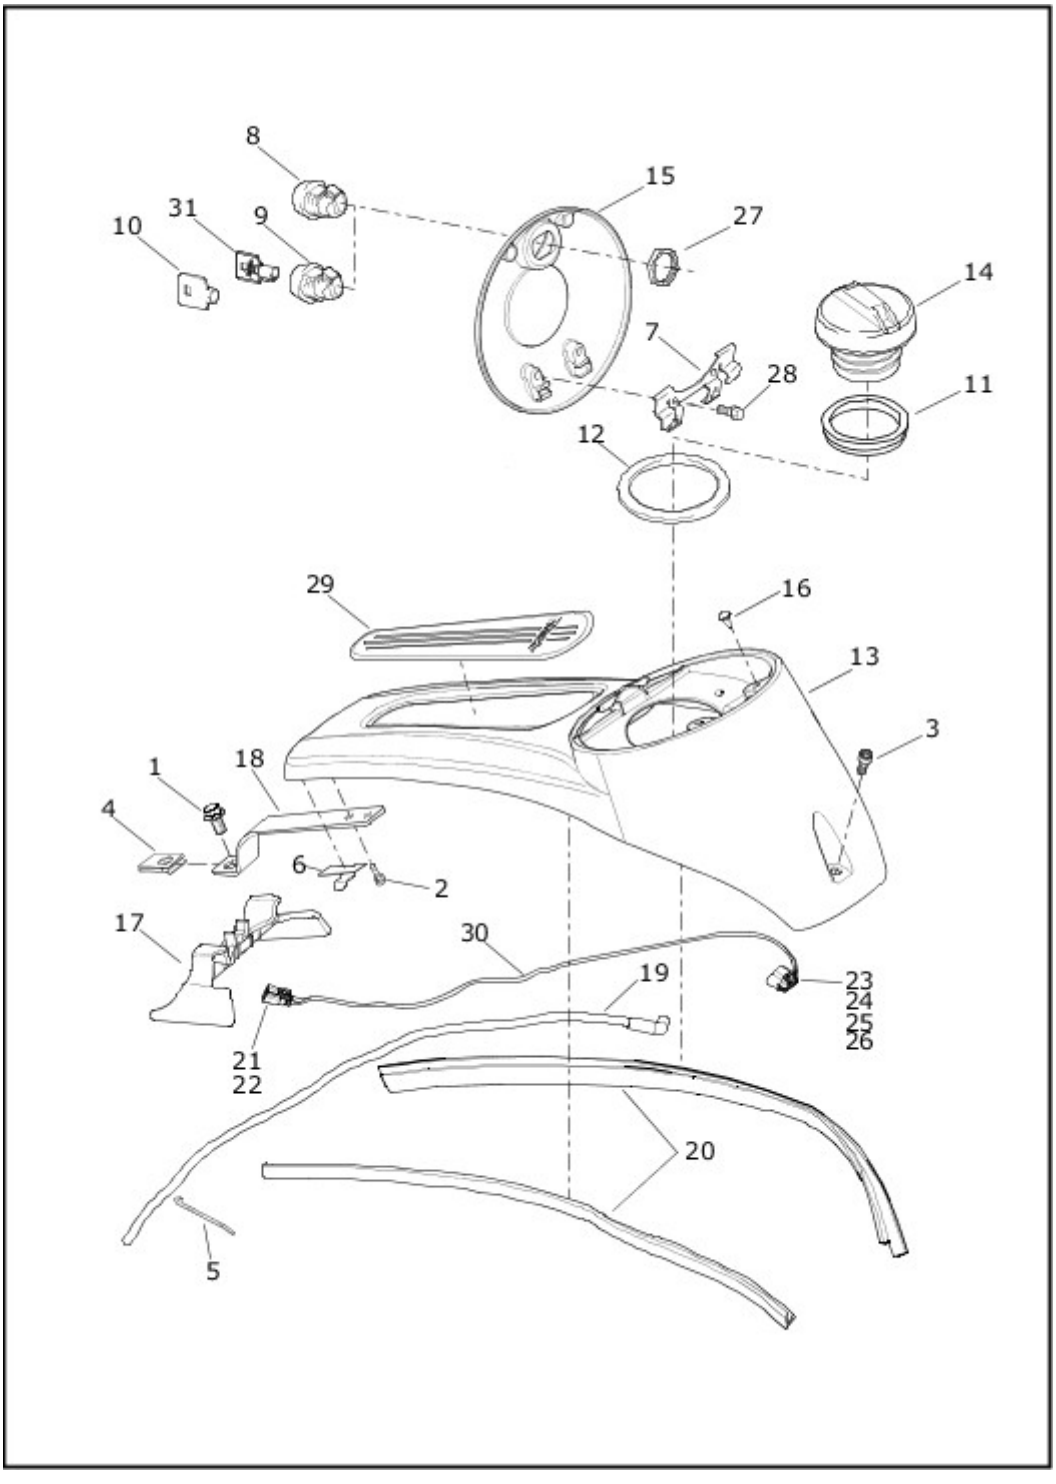

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
29	14101371	INSERT, console panel (not illustrated)	FLHT


INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS

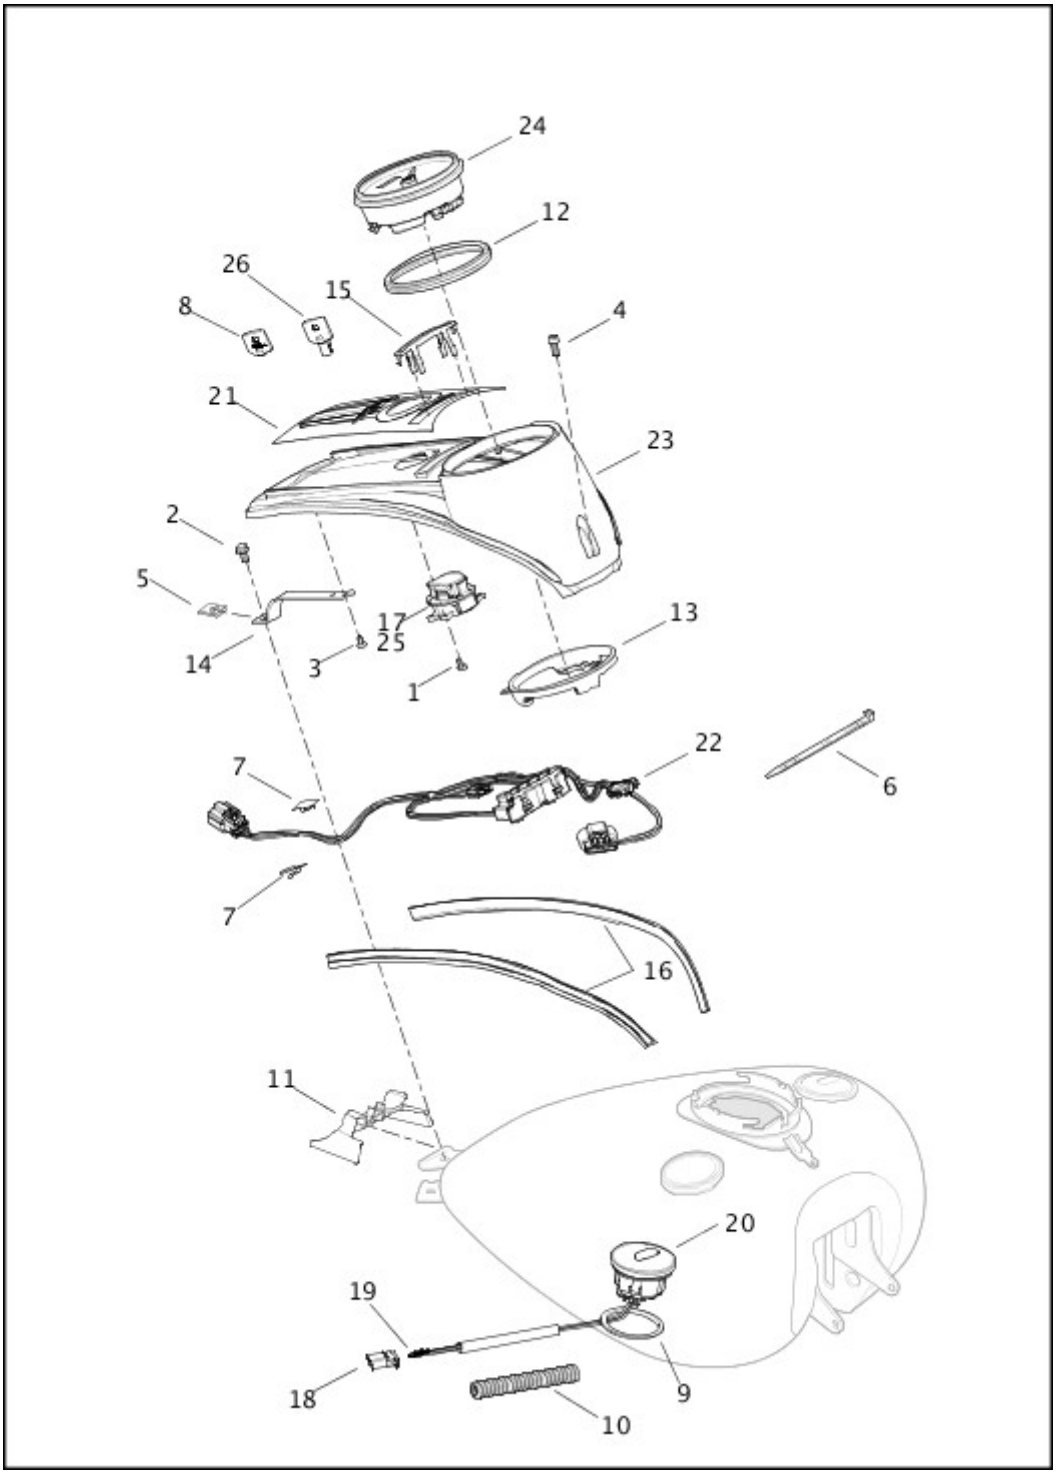

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	71517-11A	IGNITION SWITCH (keyed-to-match)	FLHR, FLHRC, FLHRXS


INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS

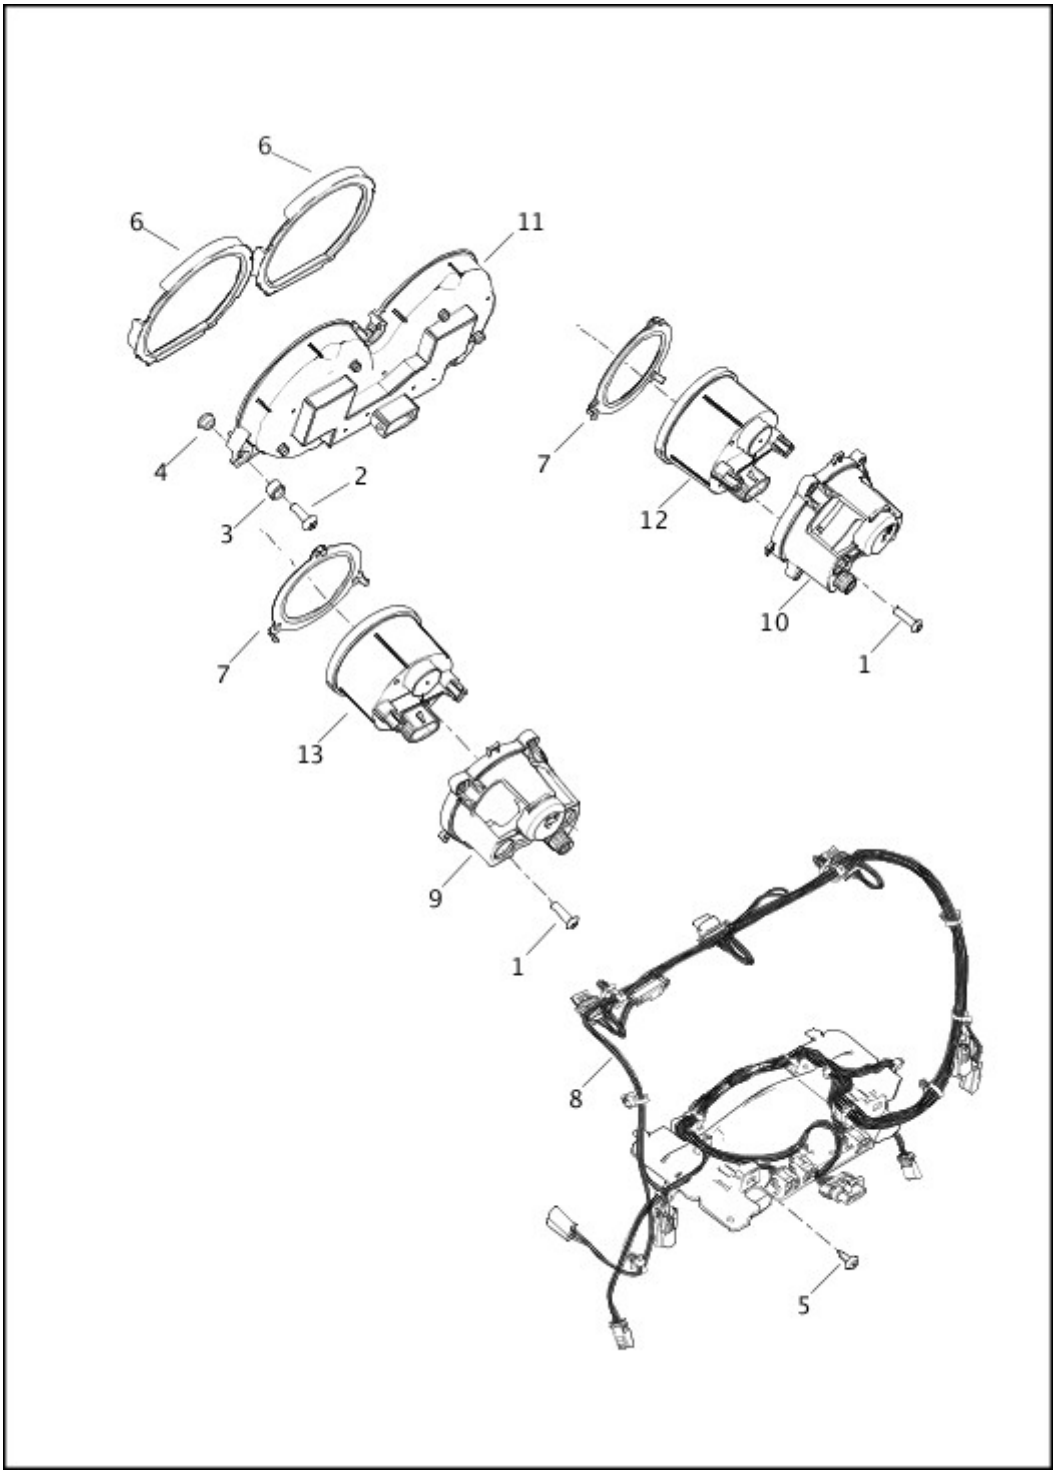

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	70900118C	INSTRUMENT MODULE, mph, with 12100020 and 12400034 (Domestic, California)	FLHTK, FLHTK SHRINE, FLHTKL
11	70900119B	INSTRUMENT MODULE, km/h, with 12100020 and 12400034 (Brazil, Canada, HDI, Australia, Japan, Asia-Pacific)	FLHTK, FLHTK SHRINE, FLHTKL
11	70900120B	INSTRUMENT MODULE, dual - mph/km/h, with 12100020 and 12400034 (England)	FLHTK, FLHTK SHRINE, FLHTKL
11	70900121C	INSTRUMENT MODULE, mph, with 12100020 and 12400034 (Domestic, California) (black)	FLHT, FLHTCU, FLHXS
11	70900122B	INSTRUMENT MODULE, km/h, with 12100020 and 12400034 (Canada, HDI, Australia, Japan, Asia-Pacific) (black)	FLHT, FLHTCU, FLHXS
11	70900123B	INSTRUMENT MODULE, dual - mph/km/h, with 12100020 and 12400034 (England) (black)	FLHT, FLHXS
11	70900124C	INSTRUMENT MODULE, mph, with 12100020 and 12400034 (Domestic, California) (silver)	FLHX
11	70900125B	INSTRUMENT MODULE, km/h, with 12100020 and 12400034 (Brazil, Canada, HDI, Australia, Japan, Asia-Pacific) (silver)	FLHX
11	70900126B	INSTRUMENT MODULE, dual - mph/km/h, with 12100020 and 12400034 (England) (silver)	FLHX

INSTRUMENTS - FLTRU, FLTRX AND FLTRXS

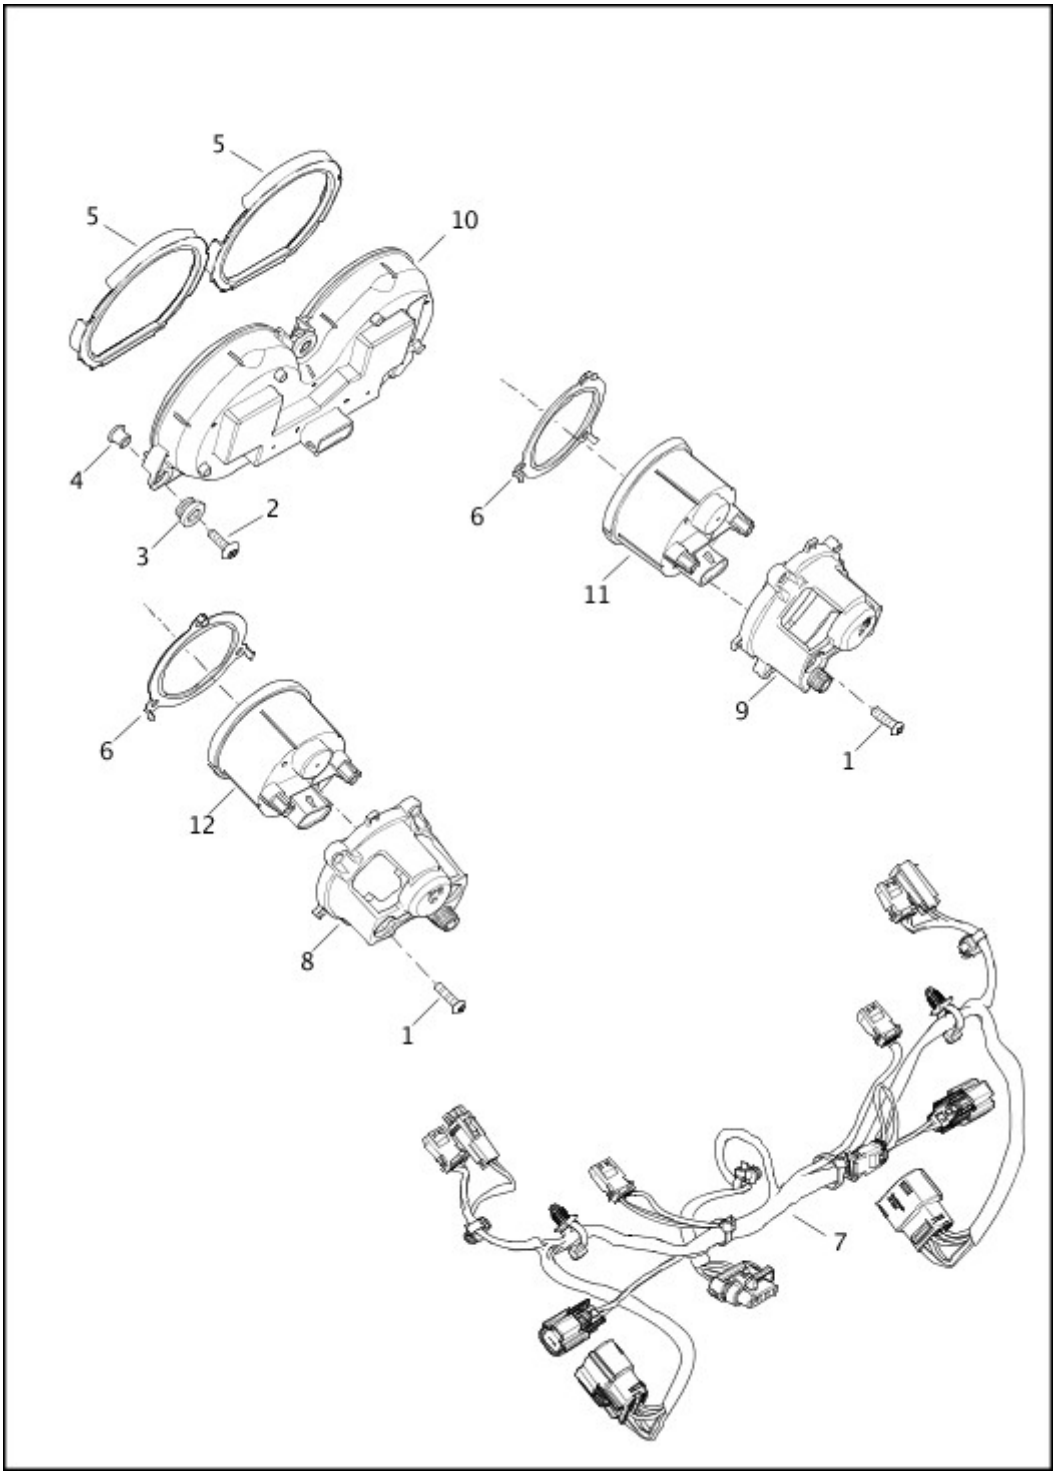


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	70900121C	INSTRUMENT MODULE, mph, with 12100020 and 12400034 (Domestic, California) (black)	FLTRU, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	70900122B	INSTRUMENT MODULE, km/h, with 12100020 and 12400034 (Canada, HDI, Japan, Asia-Pacific) (black)	FLTRU, FLTRXS
10	70900123B	INSTRUMENT MODULE, dual - mph/km/h, with 12100020 and 12400034 (England) (black)	FLTRU, FLTRXS
10	70900124C	INSTRUMENT MODULE, mph, with 12100020 and 12400034 (Domestic, California) (silver)	FLTRX
10	70900125B	INSTRUMENT MODULE, km/h, with 12100020 and 12400034 (Canada, HDI, Australia, Japan, Asia-Pacific) (silver)	FLTRX


INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS

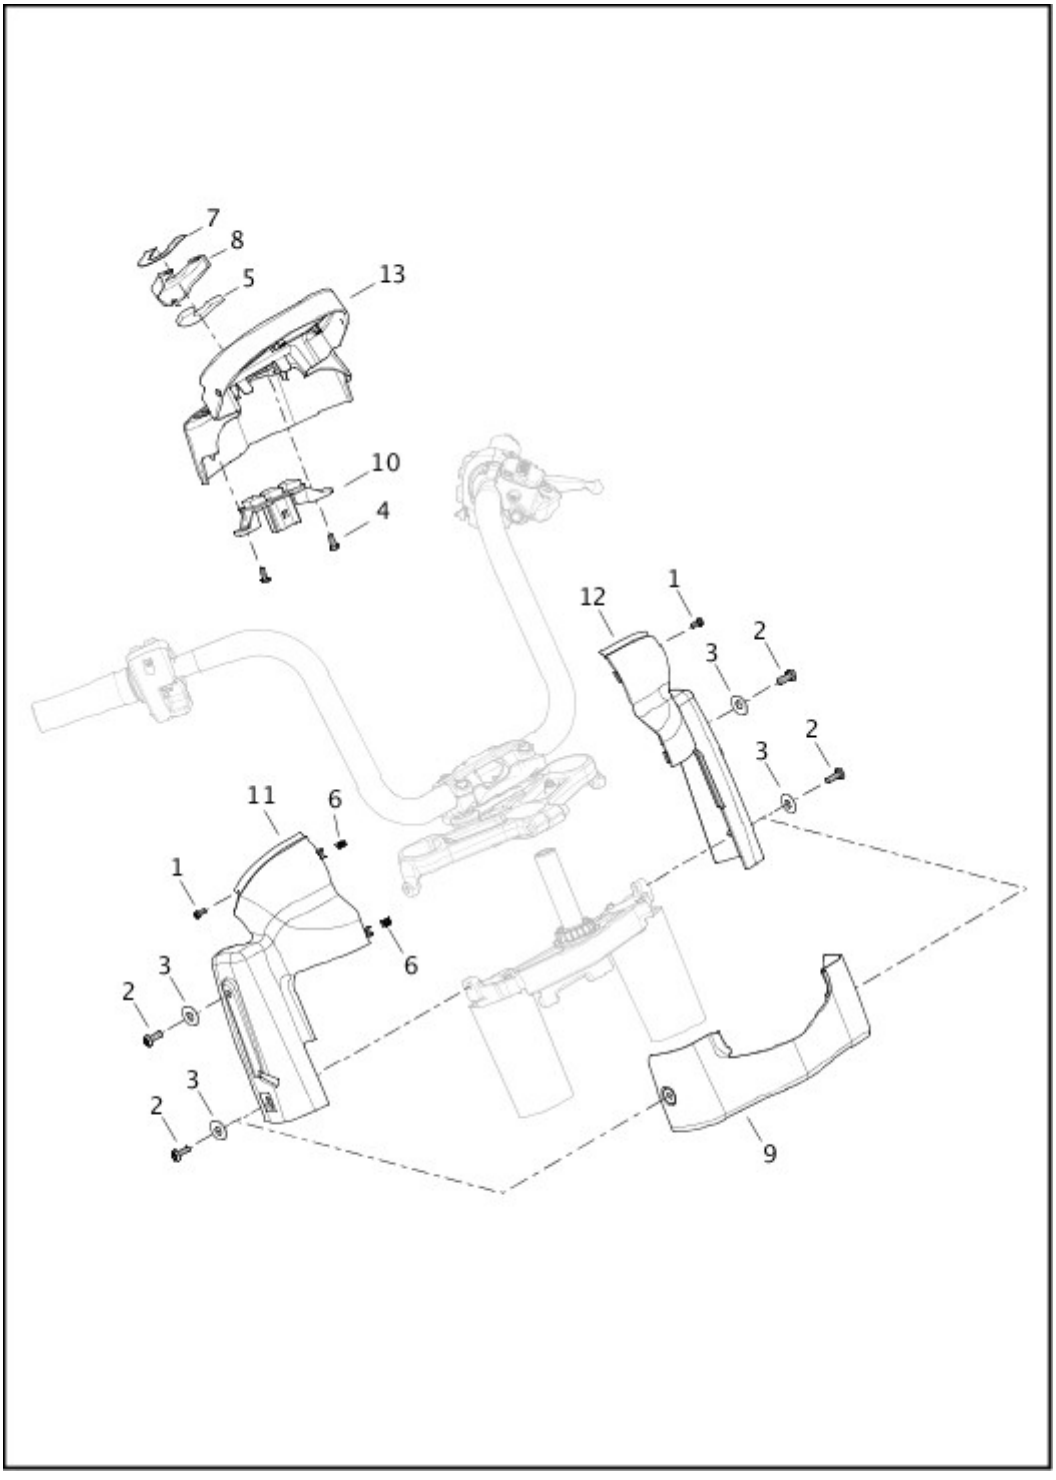

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	25700870	COVER ASSEMBLY, ignition switch, with 11100152	FLTRXS

FUEL TANK TRIM (2 OF 2)

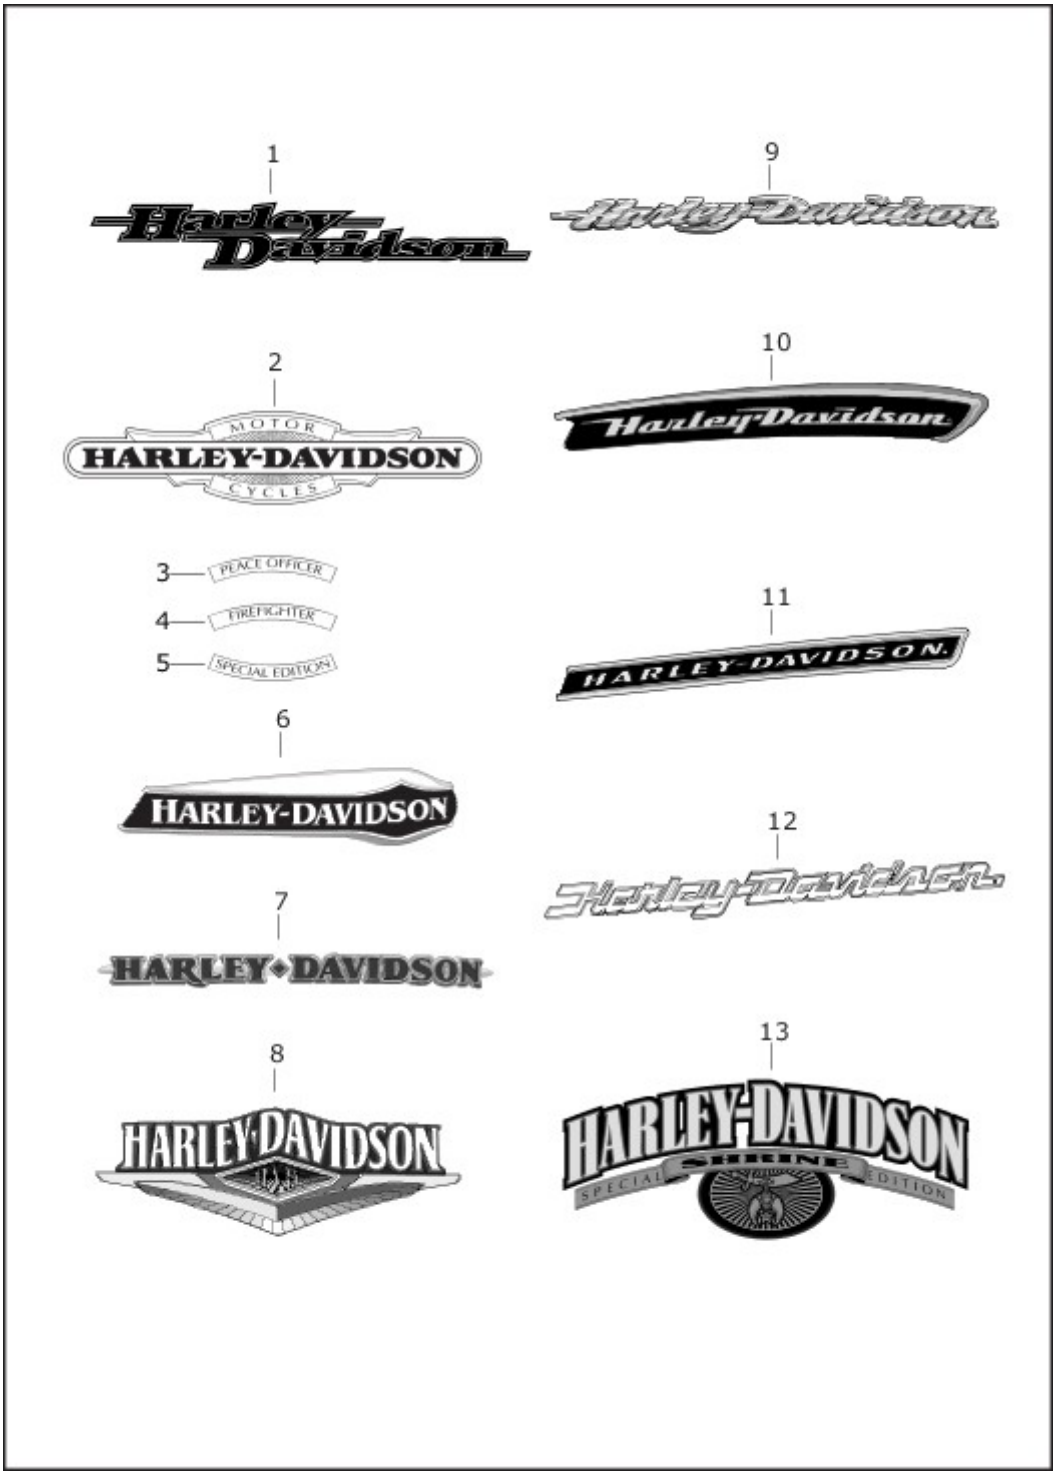


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	14100079	MEDALLION (right) (for vivid black, bonnevile salt pearl, billiard blue, 2-tone wicked red/twisted cherry tanks)	FLHRC
8	14100080	MEDALLION (left) (for vivid black, bonnevile salt pearl, billiard blue, 2-tone wicked red/twisted cherry tanks)	FLHRC
11	14100835	MEDALLION (left) (for vivid black, twisted cherry, bonneville salt denim, midnight blue tanks)	FLHRXS
11	14100836	MEDALLION (right) (for vivid black, twisted cherry, bonneville salt denim, midnight blue tanks)	FLHRXS
12	14101144BAGI	MEDALLION (left) (for 2-tone scorched orange/silver flux tanks)	FLHRXS, FLHXS, FLTRXS
12	14101145BAGI	MEDALLION (right) (for 2-tone scorched orange/silver flux tanks)	FLHRXS, FLHXS, FLTRXS
12	14101144BAGH	MEDALLION (left) (for 2-tone scorched orange/silver flux tanks)	FLHTK, FLTRU
12	14101145BAGH	MEDALLION (right) (for 2-tone scorched orange/silver flux tanks)	FLHTK, FLTRU


AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)

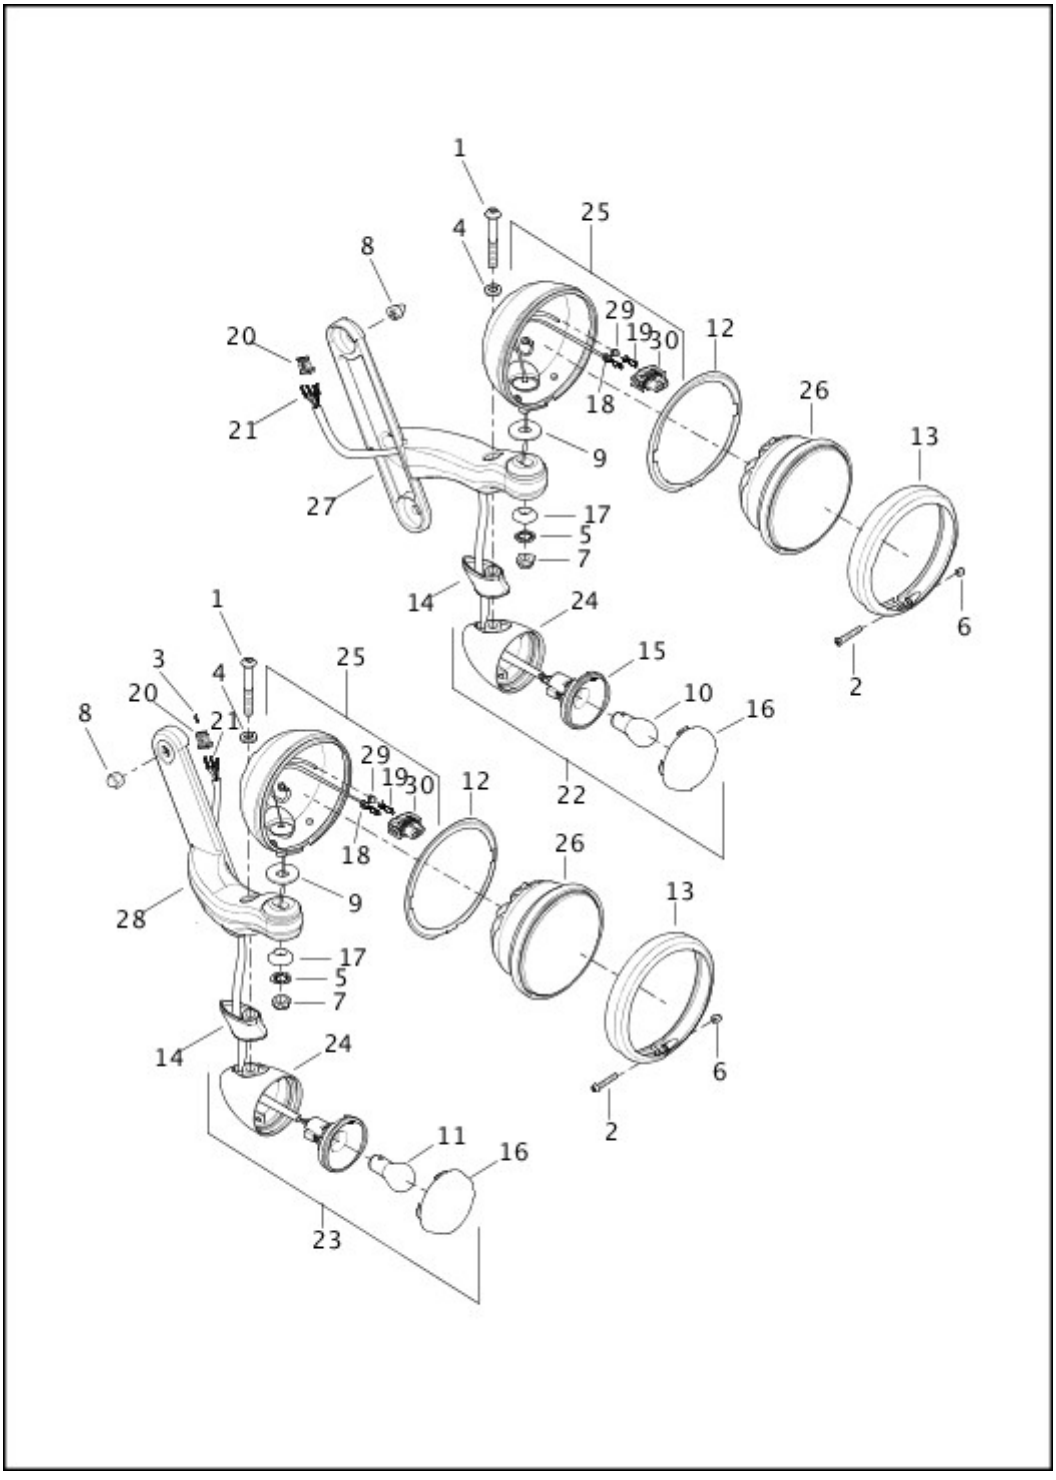

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
25	67800254A	HOUSING, auxiliary/fog lamp, with 72298-95, 72356-95, 72910-11, 69200199 and 69200259 *(2)*	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL

WINDSHIELD - FLHR AND FLHRC

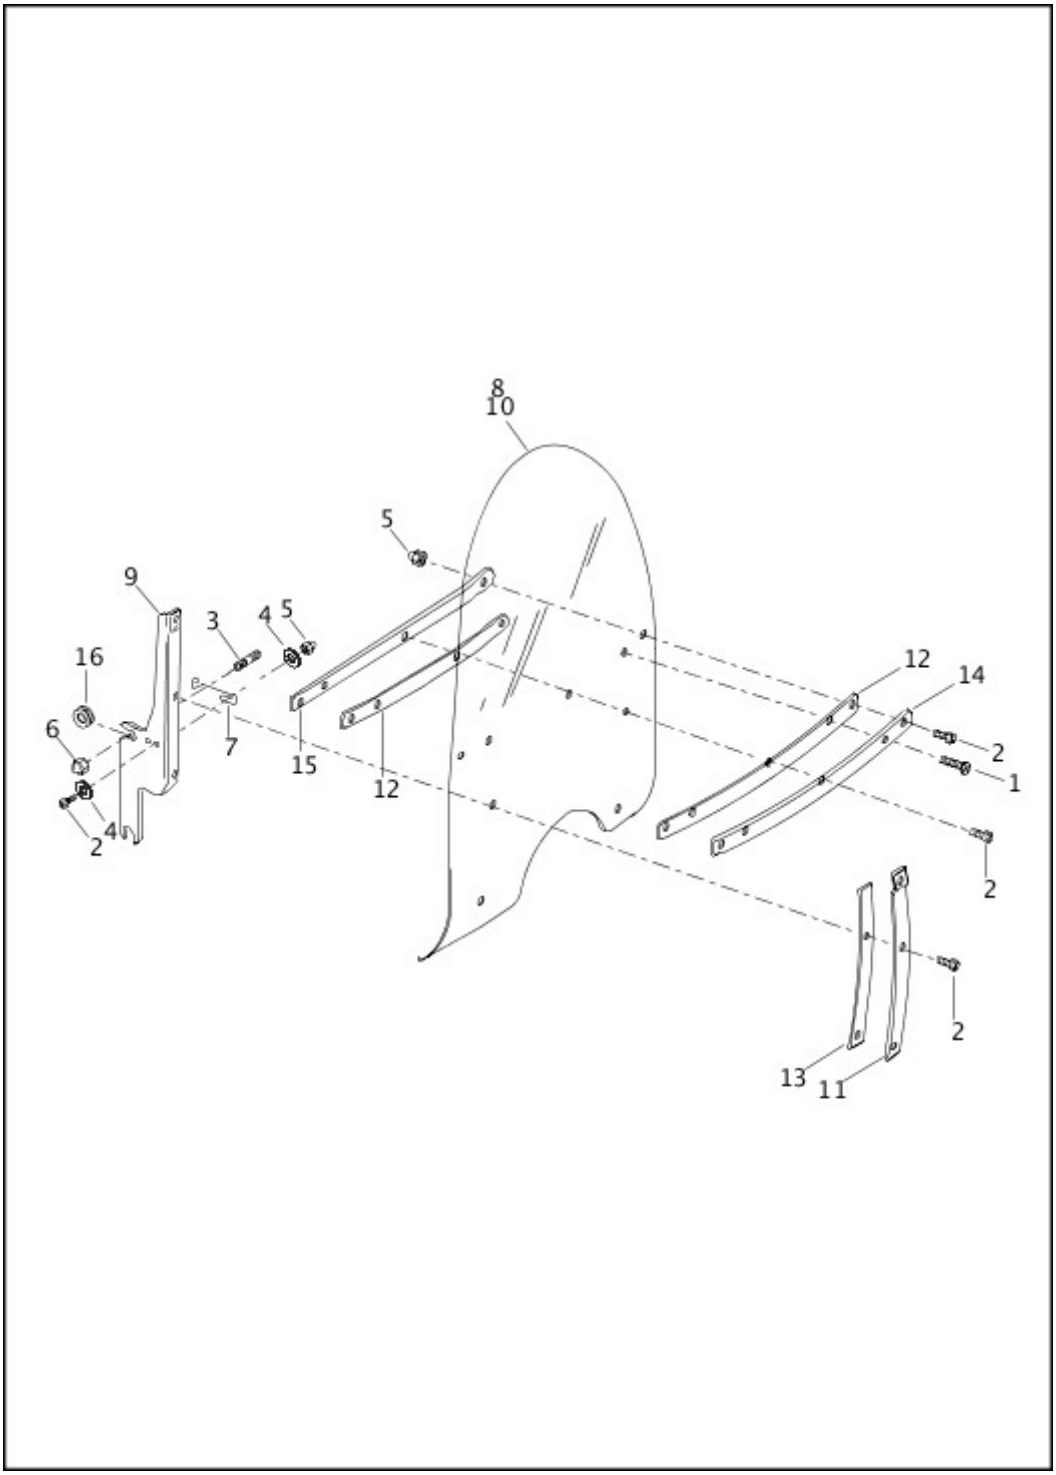


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	2921A	SCREW *(11)*	FLHR, FLHRC


WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)

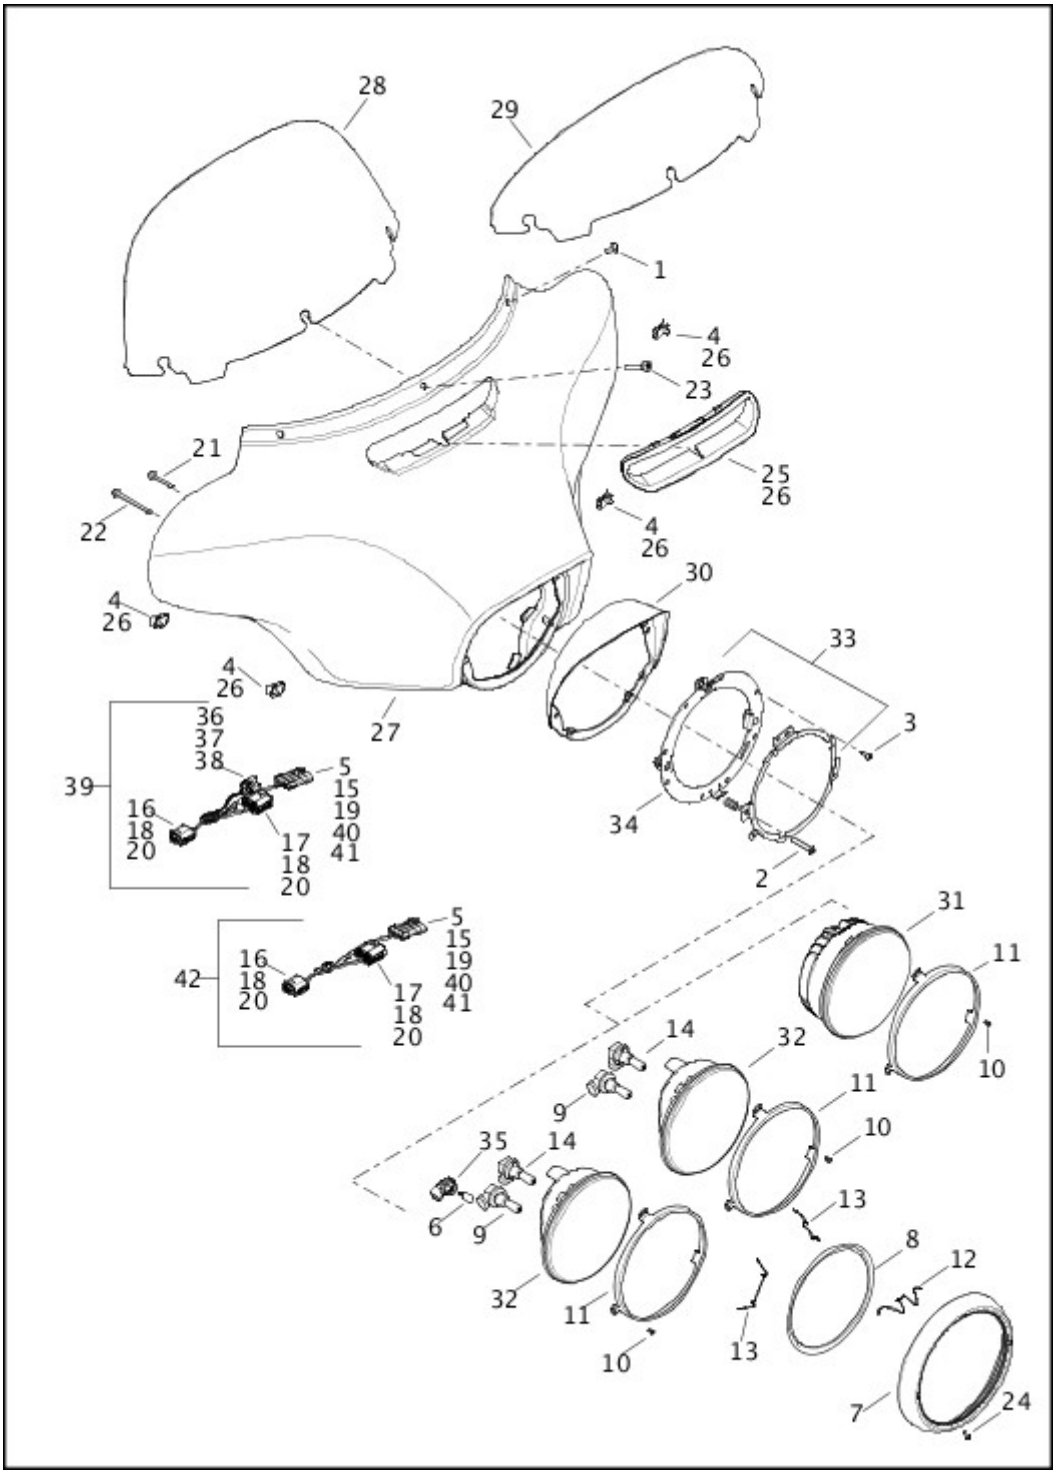

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	57400441	WINDSHIELD (clear) (Domestic, Australia)	FLHT


FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)

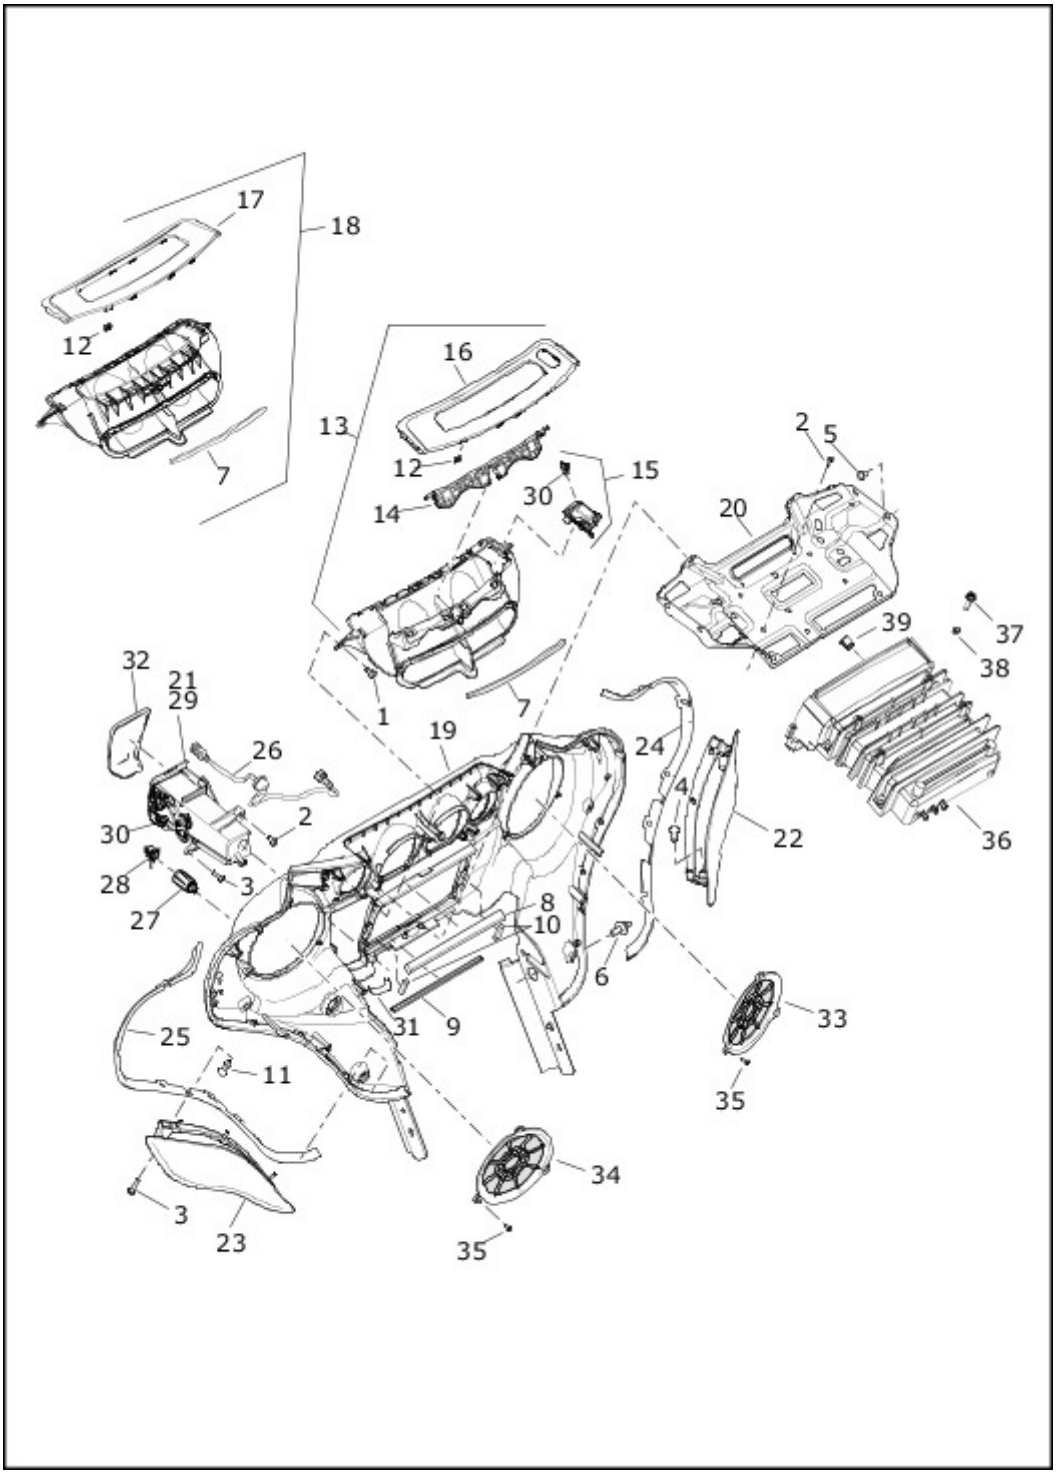

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	29200087	BEZEL, air duct, inner fairing, with 12200064	FLHT
18	29200088	AIR DUCT, inner fairing, with 11100038 and 29200087	FLHT

FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)

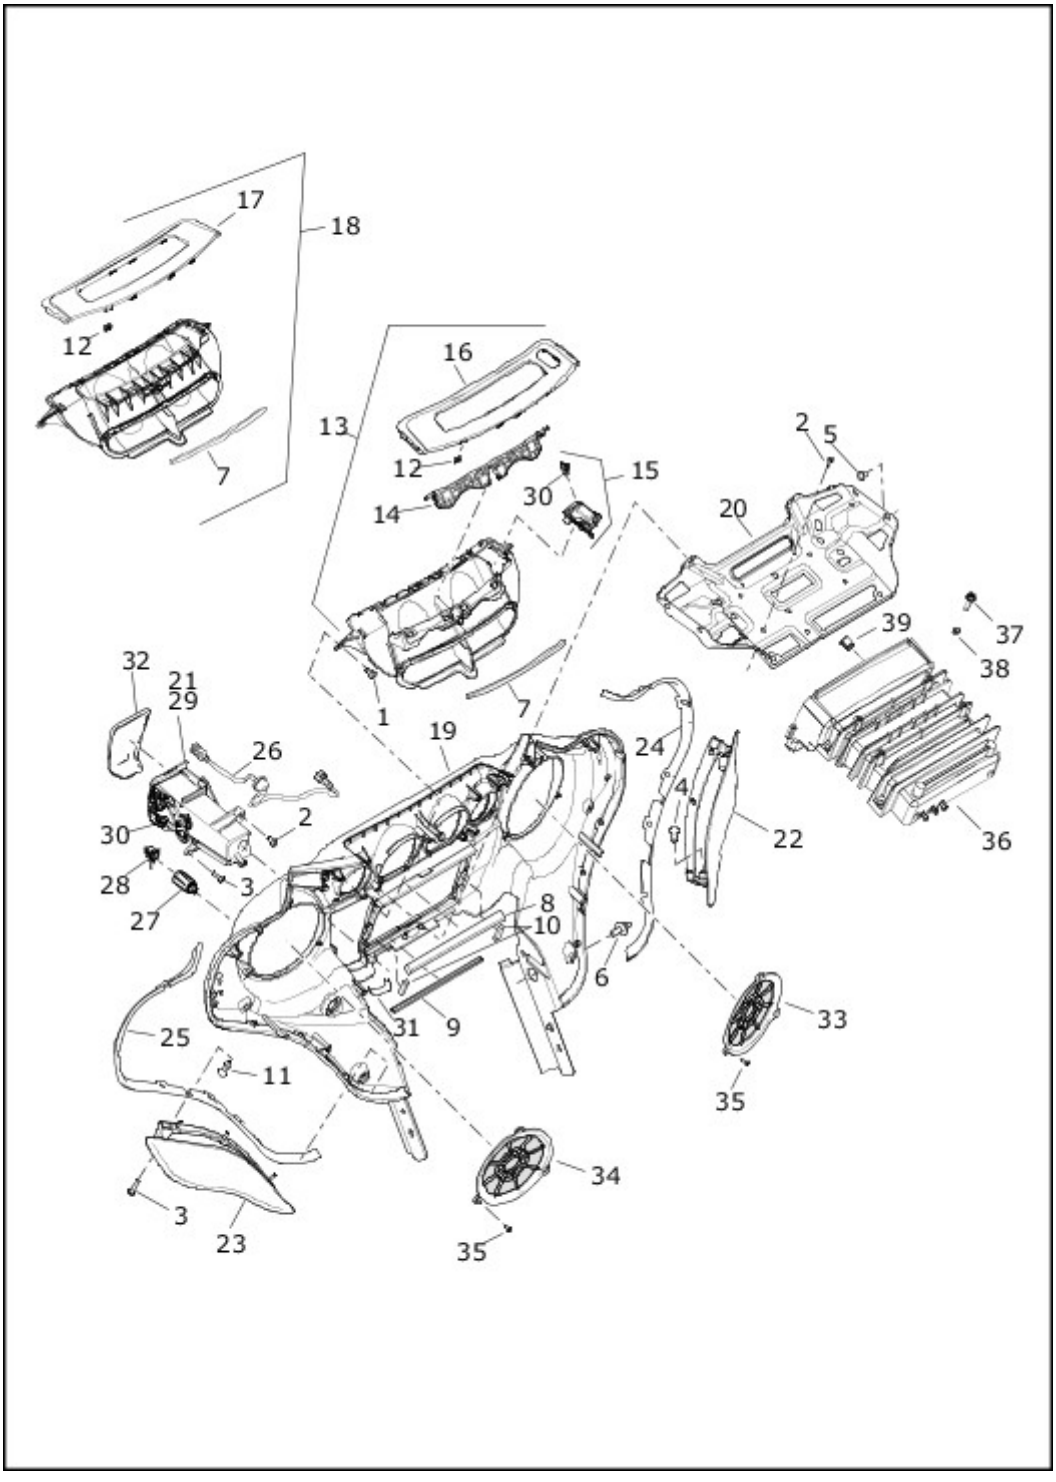


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	69200031A	WIRE HARNESS, USB jumper	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
29	76000107A	MEDIA COMPARTMENT ASSEMBLY, with 57000299, 69200031A and 76000127	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
29	76000944	MEDIA COMPARTMENT ASSEMBLY, with 76000127	FLHT
36	76000187	GLOVEBOX, with 12600070 and 12600071	FLHT
37	12600070	BOLT *(4)*	FLHT
38	12600071	RETAINER *(4)*	FLHT
39	12100154	PLUG	FLHT

FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)

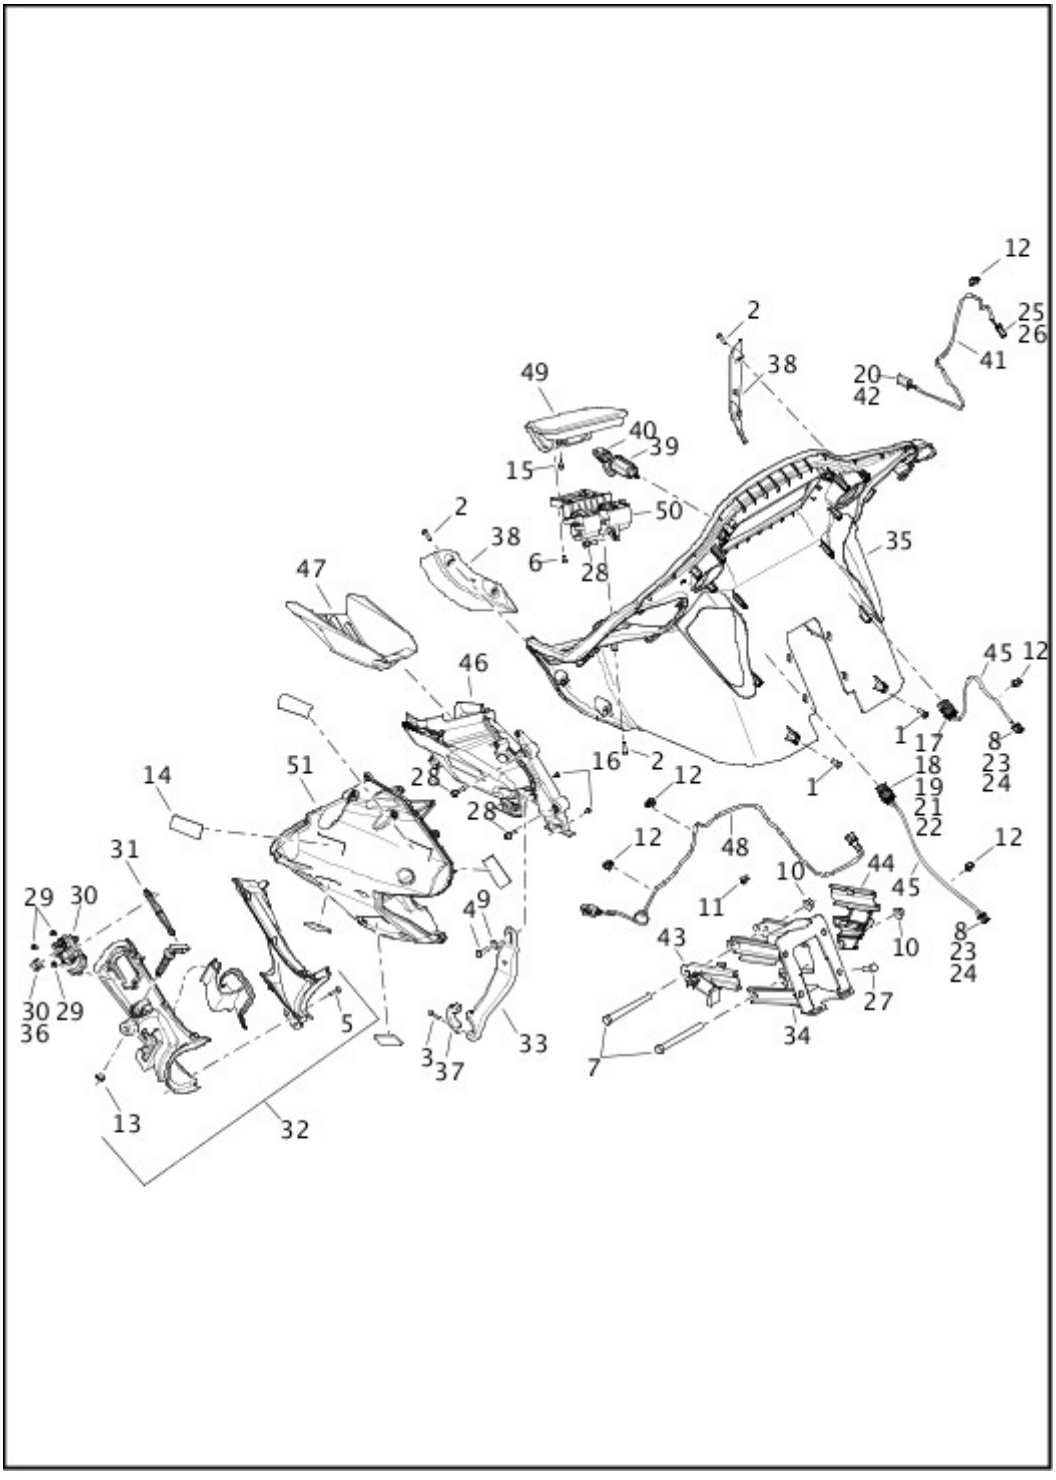


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
35	57000374DH	INNER FAIRING (vivid denim)	FLTRU, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
46	76000370A	MEDIA STORAGE COMPARTMENT, with 16, 47 and 48 (right)	FLTRU, FLTRX, FLTRXS
48	76000374A	USB CABLE ASSEMBLY	FLTRU, FLTRX, FLTRXS


SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS

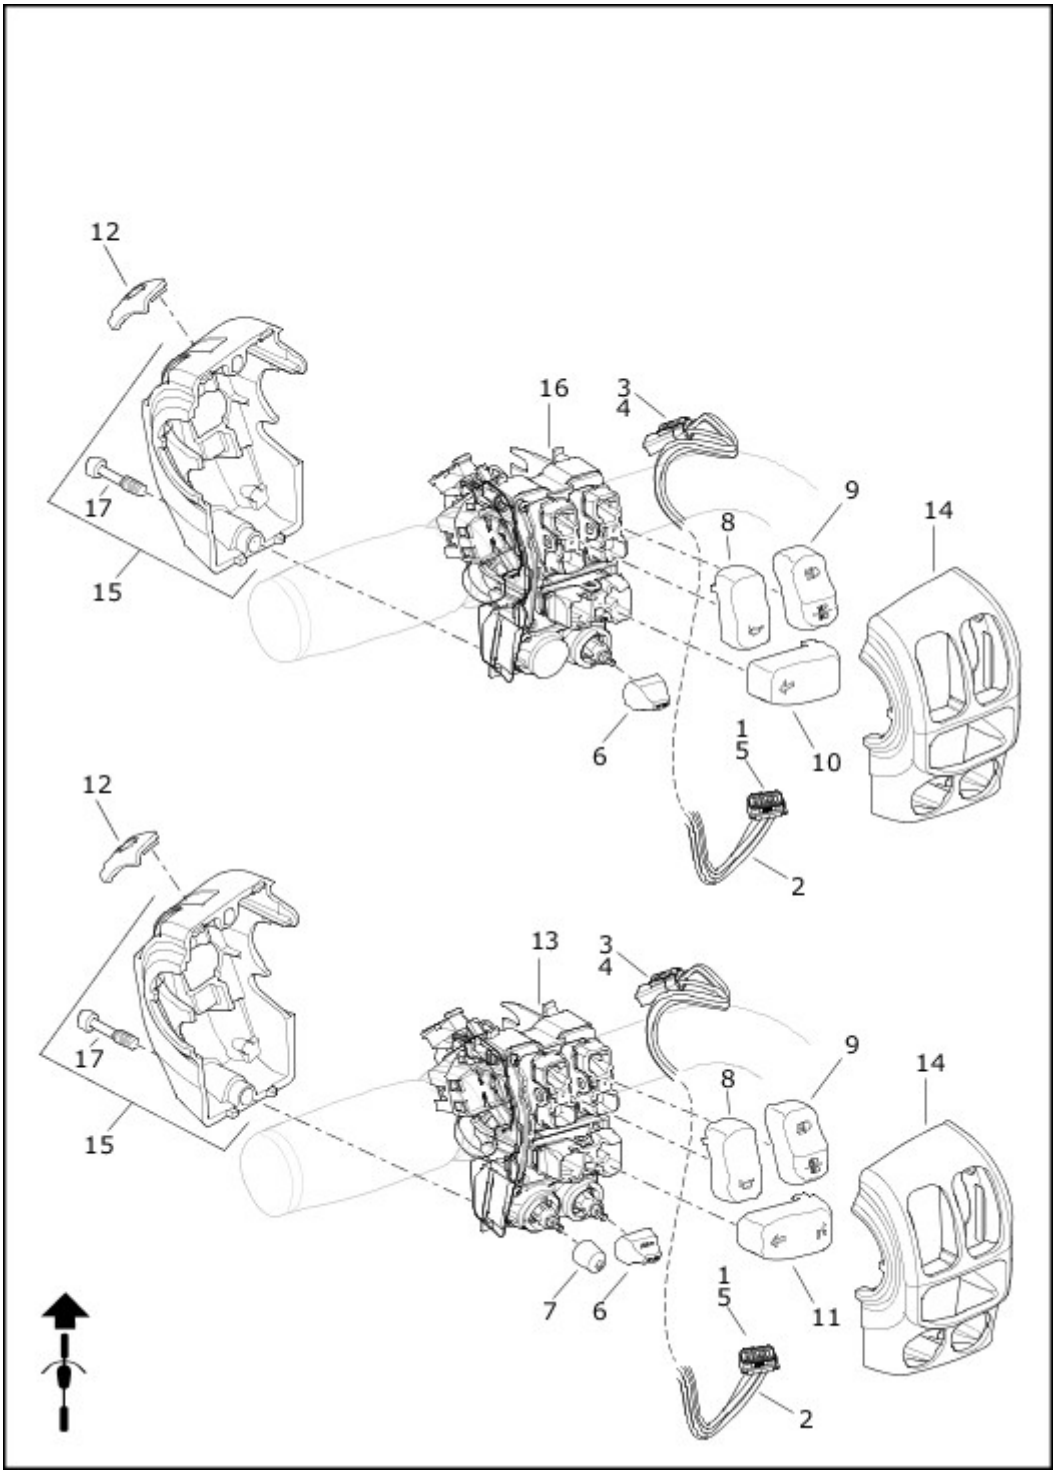

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	71500128B	SWITCH PACK, left hand control, with 71500044, 71500045, 71500047, 71500048 and 71500055	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
16	71500419A	SWITCH PACK, left hand control, with 71500044, 71500047, 71500048 and 71500053	FLHR, FLHRC, FLHT
17	10500008	SCREW *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

SWITCHES, HANDLEBAR, LEFT - FLHRXS

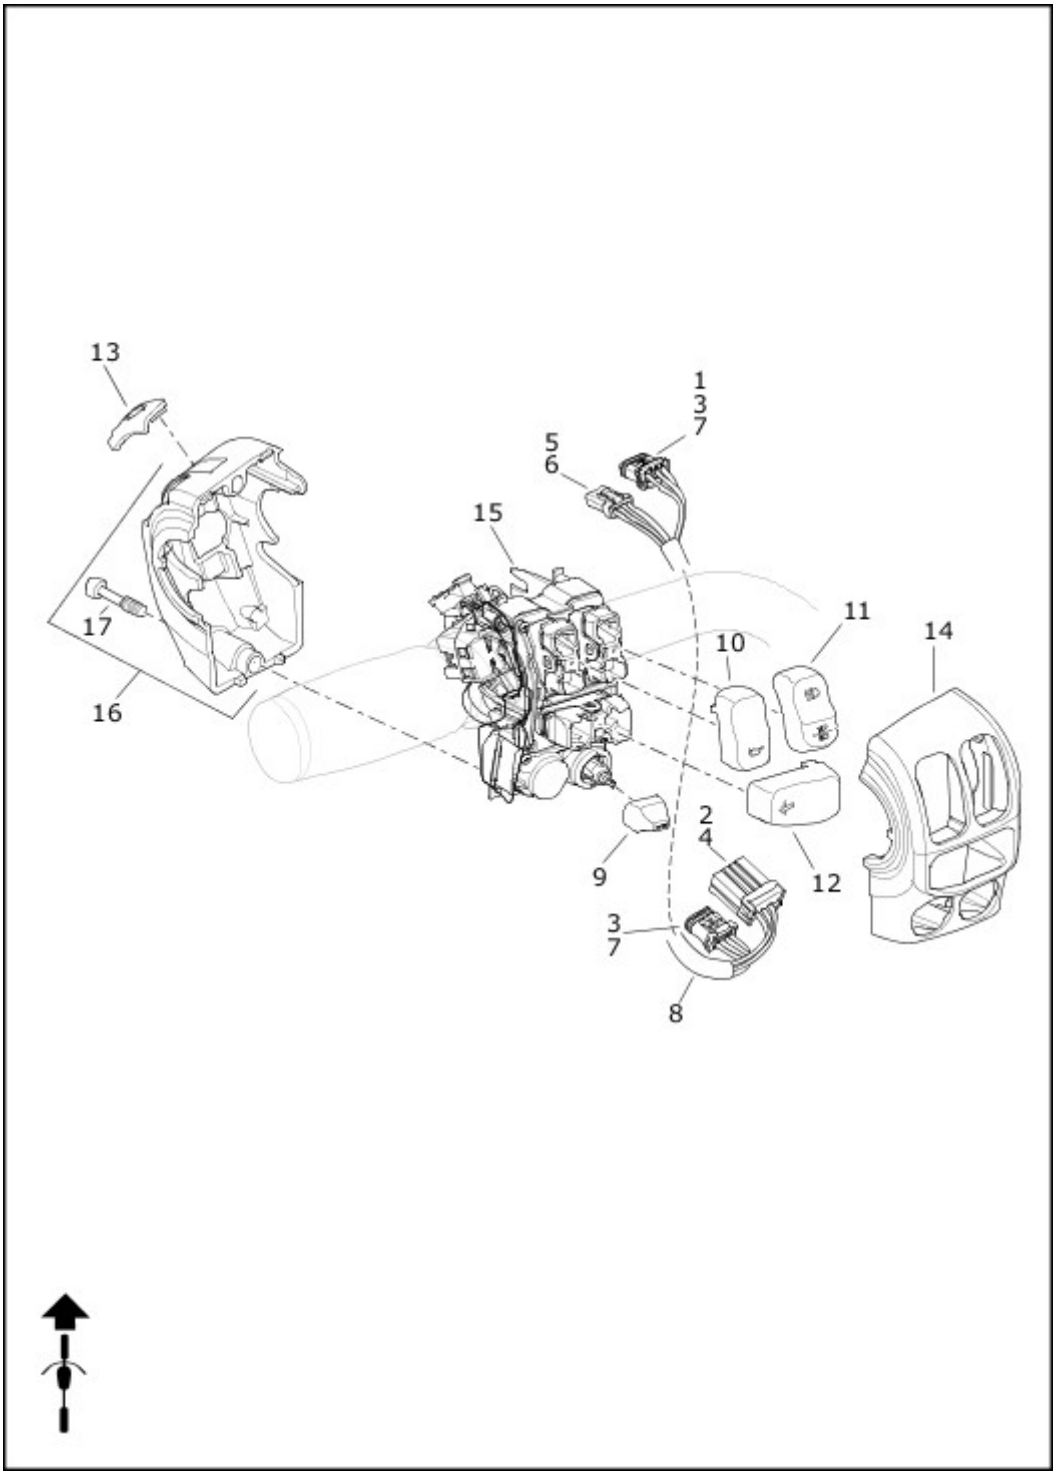


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	71500419A	SWITCH PACK, left hand control, with 71500044, 71500047, 71500048 and 71500053	FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	10500008	SCREW *(2)*	FLHRXS


SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2)

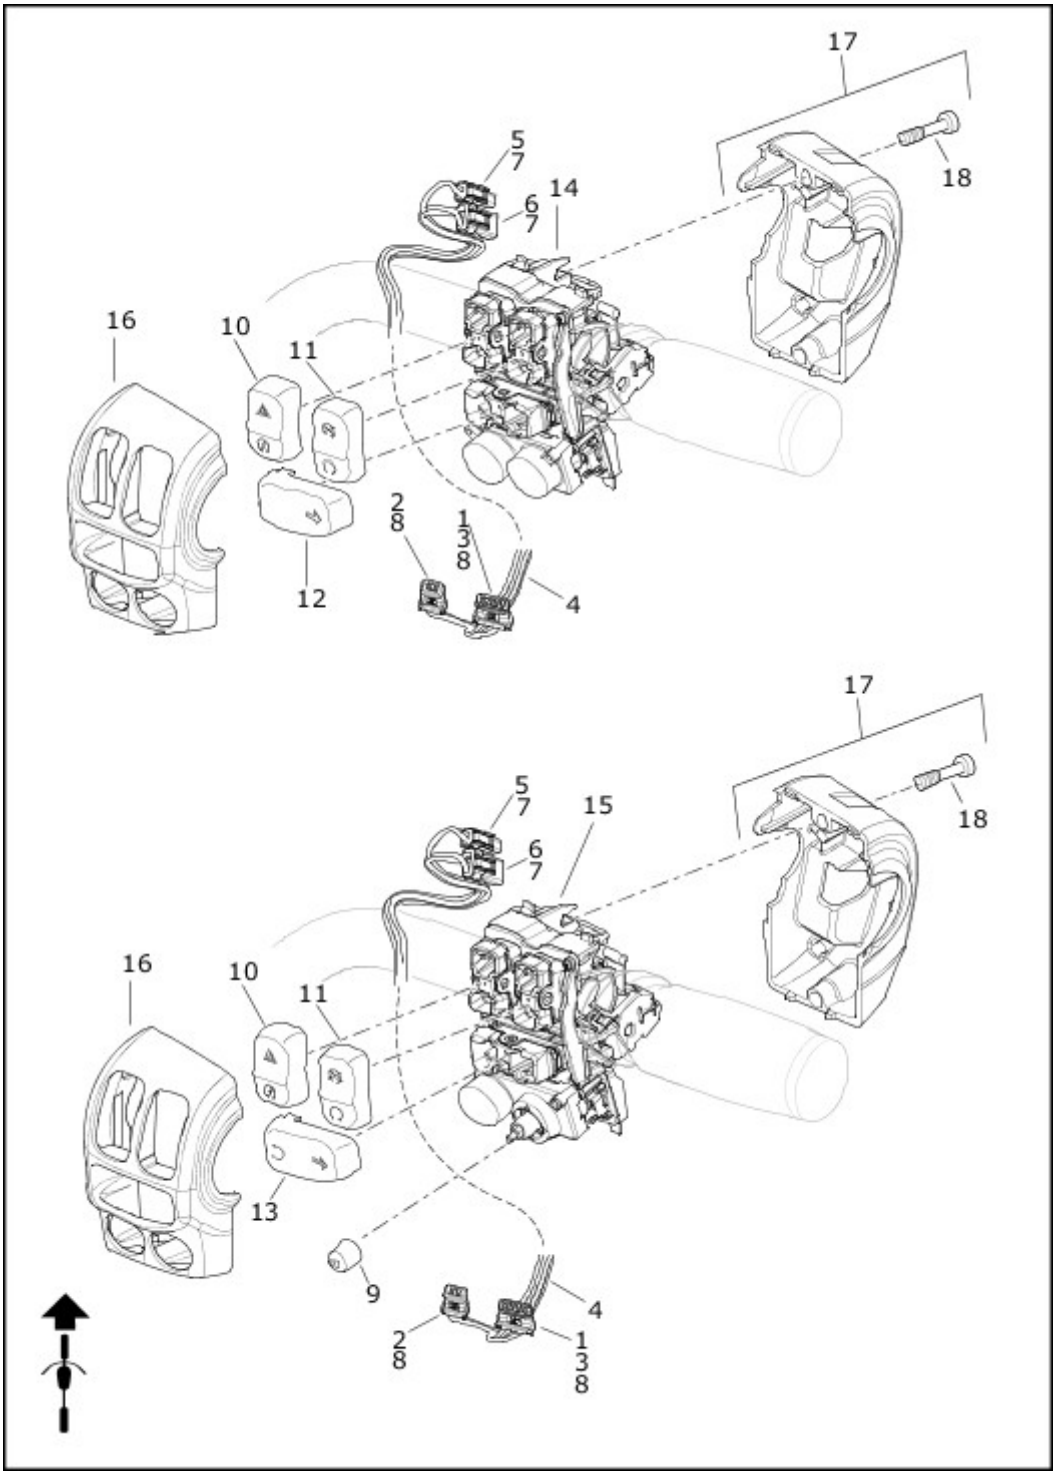

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	71500478	SWITCH CAP, right turn signal and back	FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
13	71500478	SWITCH CAP, right turn signal and back (used with BOOM!™ BOX GTS)	FLHTCU, FLHX, FLTRX
14	71500127C	SWITCH PACK, right hand control, with 71500049, 71500050 and 71500057	FLHR, FLHRC, FLHT
15	71500501	SWITCH PACK, right hand control, with 71500046, 71500049, 71500050 and 71500478	FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRXS
15	71500501	SWITCH PACK, right hand control, with 71500046, 71500049, 71500050 and 71500478 (used with BOOM!™ BOX GTS)	FLHTCU, FLHX, FLTRX
15	71500129C	SWITCH PACK, right hand control, with 71500046, 71500049, 71500050 and 71500063 (used with BOOM!™ BOX 4.3)	FLHTCU, FLHX, FLTRX
18	10500008	SCREW *(2)*	FLHR, FLHRC, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

SWITCHES, HANDLEBAR, RIGHT - FLHRXS

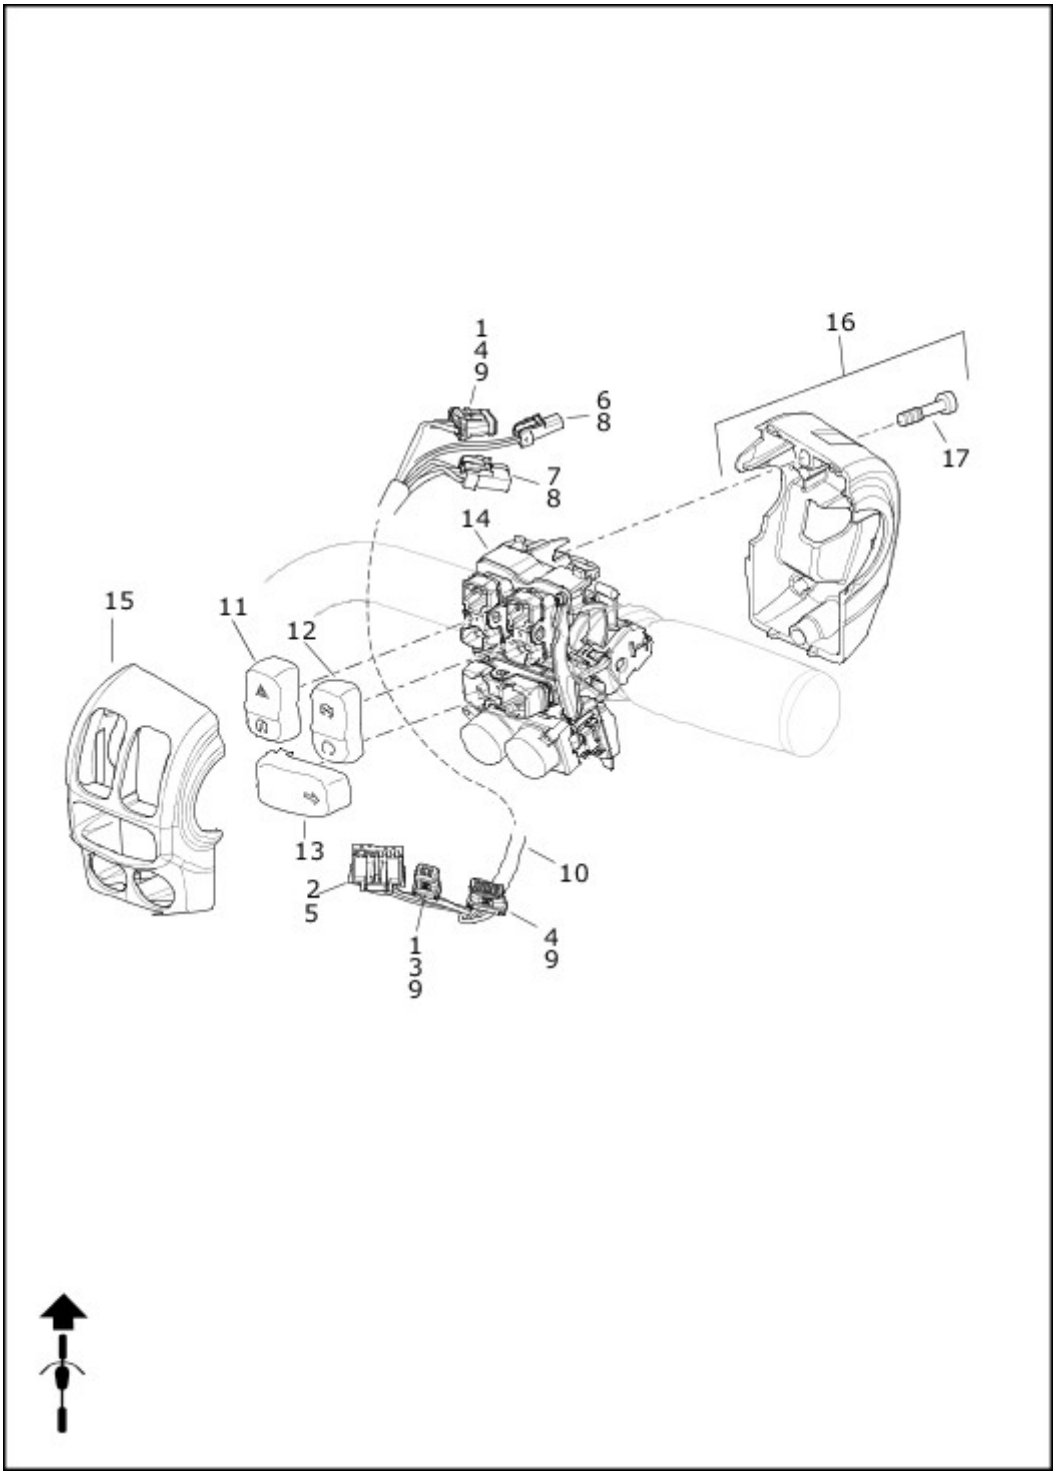


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	71500127C	SWITCH PACK, right hand control, with 71500049, 71500050 and 71500057	FLHRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	10500008	SCREW *(2)*	FLHRXS


THROTTLE CONTROL

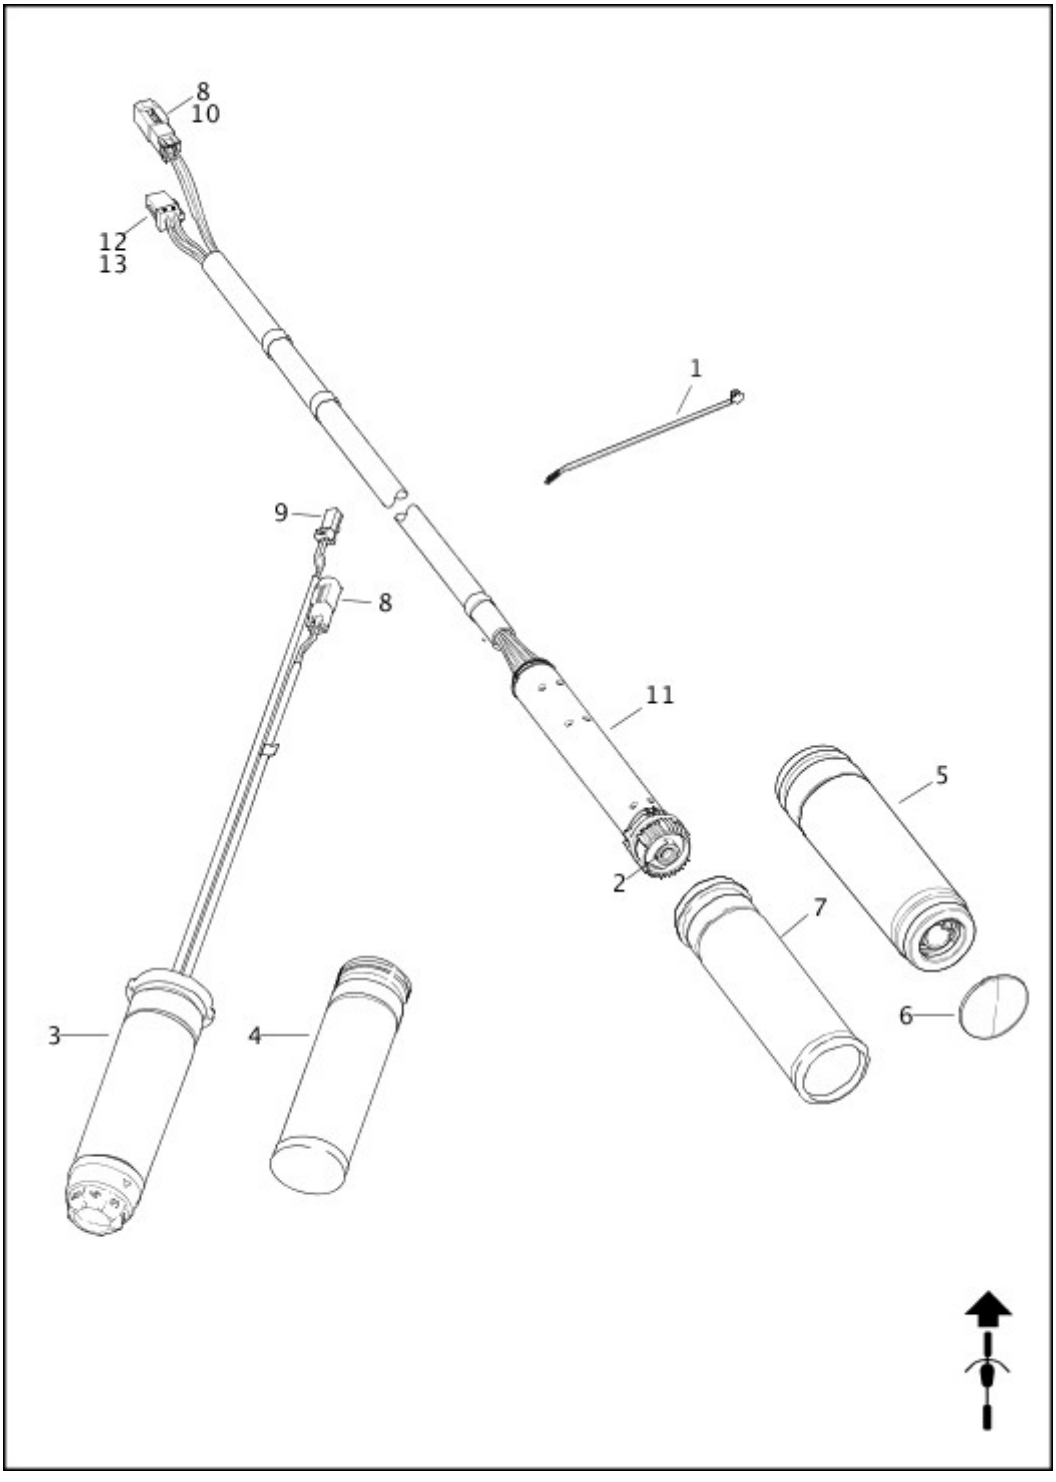

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	32700050A	SENSOR, twist grip, with 32306-08, 72902-01BK, 72990-01, 69200307 and 69201162	ALL

EXHAUST SYSTEM (1 OF 2)

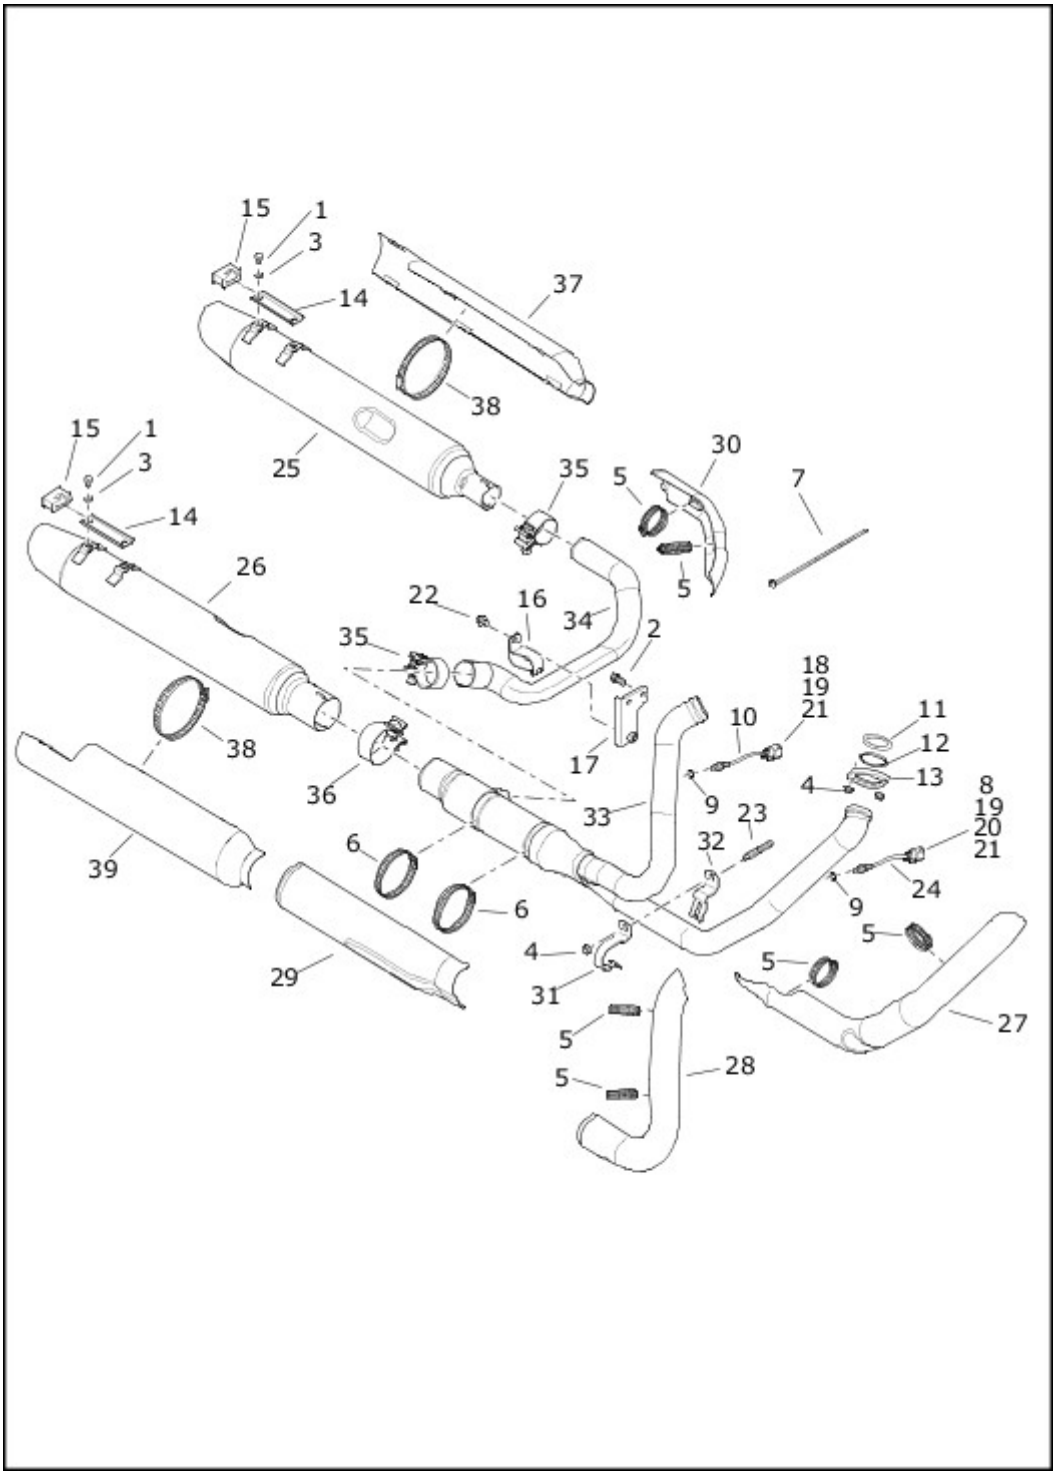


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	66861-09B	CLAMP, exhaust pipe, hinged	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
25	64900235A	MUFFLER (left) (chrome) (Domestic, Canada, California)	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
25	64900765A	MUFFLER (left) (black) (Domestic, Canada, California)	FLHRXS, FLHXS, FLTRXS
25	64900815	MUFFLER (left) (chrome) (China)	FLHR, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
25	64900817	MUFFLER (left) (black) (China)	FLHRXS, FLHXS, FLTRXS

EXHAUST SYSTEM (2 OF 2)

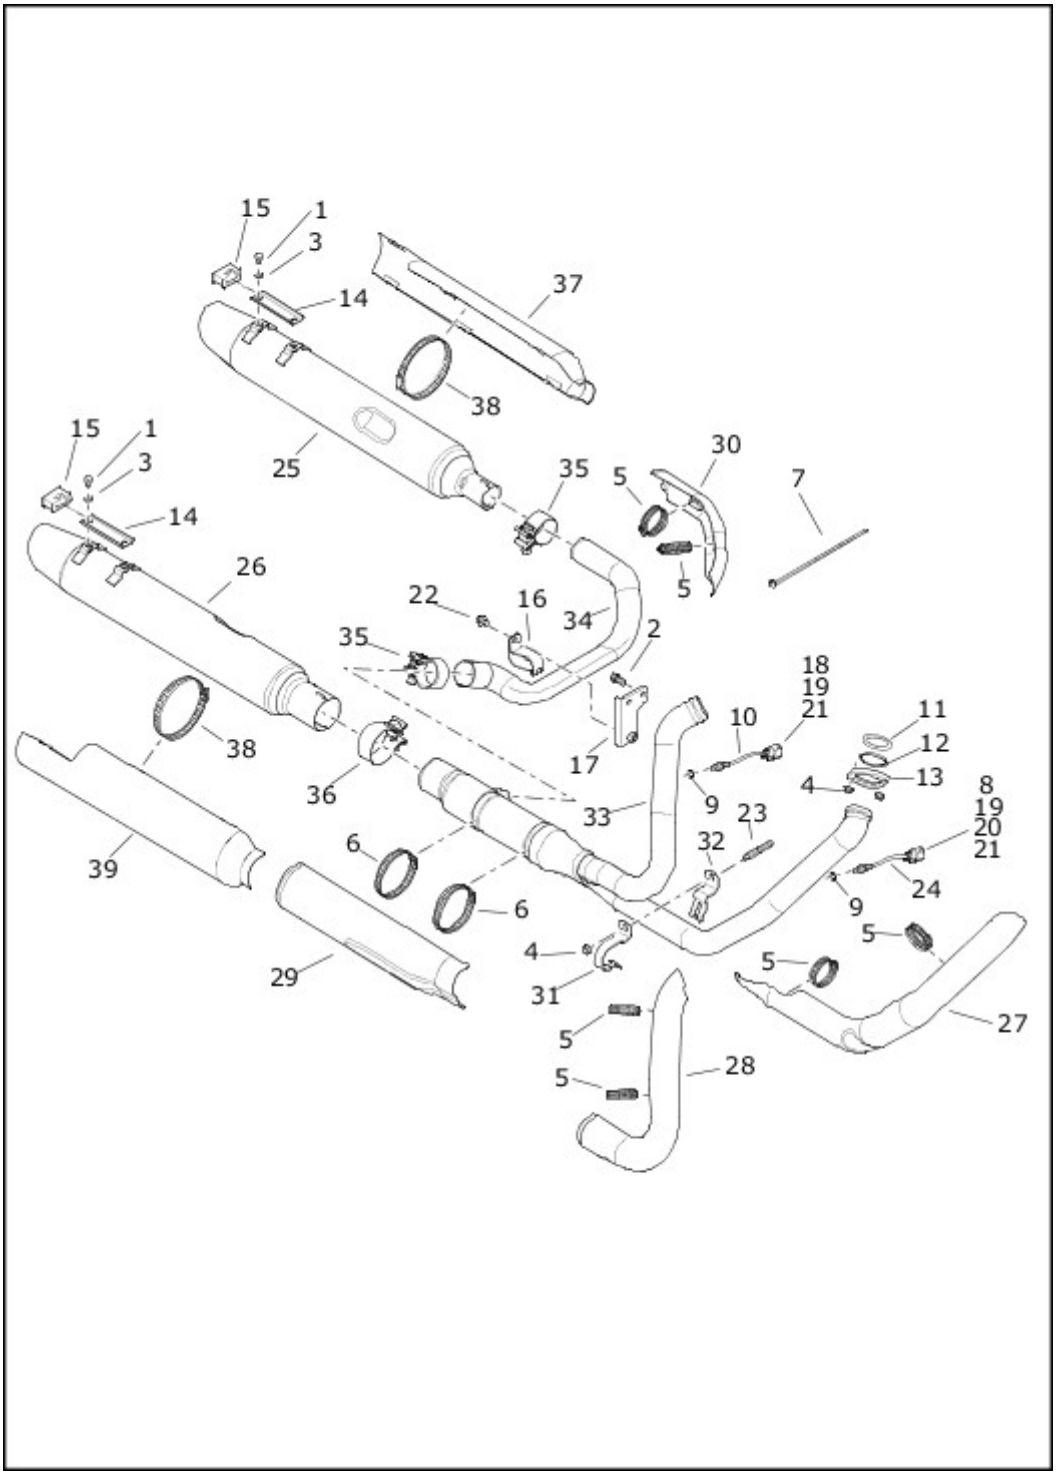


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	64900236A	MUFFLER (right) (chrome) (Domestic, Canada, California)	FLHR, FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	64900766A	MUFFLER (right) (black) (Domestic, Canada, California)	FLHRXS, FLHXS, FLTRXS
26	64900814	MUFFLER (right) (chrome) (China)	FLHR, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
26	64900816	MUFFLER (right) (black) (China)	FLHRXS, FLHXS, FLTRXS
37	65400545	SHIELD, muffler (left) (chrome) (China)	FLHR, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
37	65400546	SHIELD, muffler (left) (black) (China)	FLHRXS, FLHXS, FLTRXS
38	66047-05	CLAMP (China) *(6)*	ALL
39	65400547	SHIELD, muffler (right) (chrome) (China)	FLHR, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLTRU, FLTRX
39	65400548	SHIELD, muffler (right) (black) (China)	FLHRXS, FLHXS, FLTRXS


WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8)

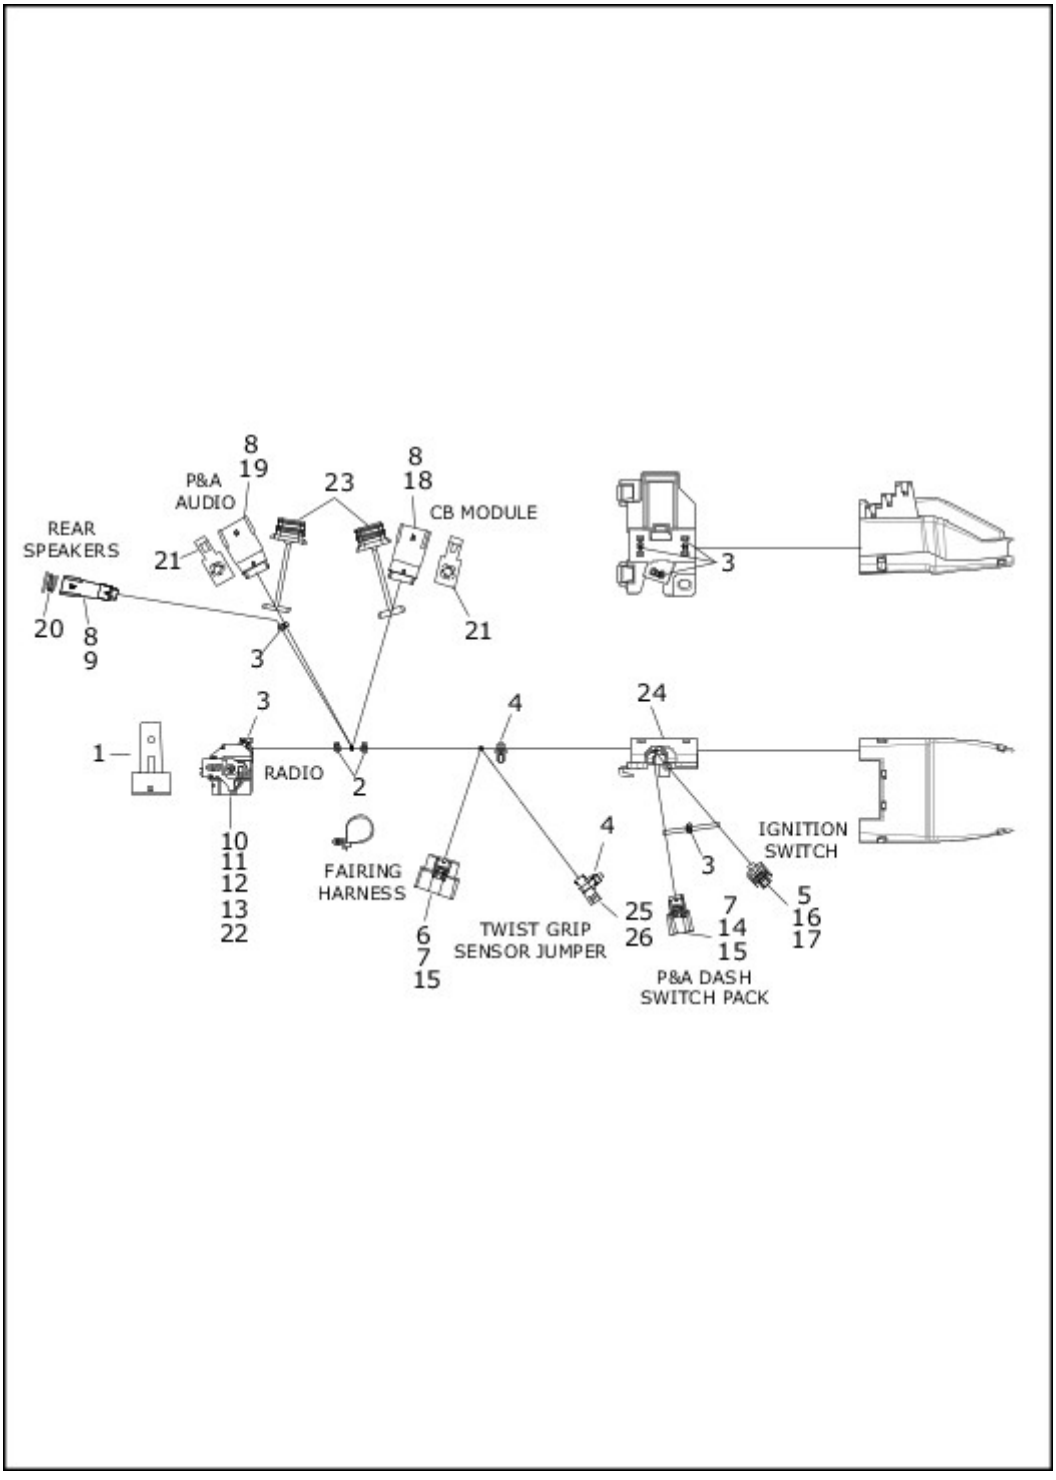

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	69202354	PLUG, weather	FLHT


WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8)

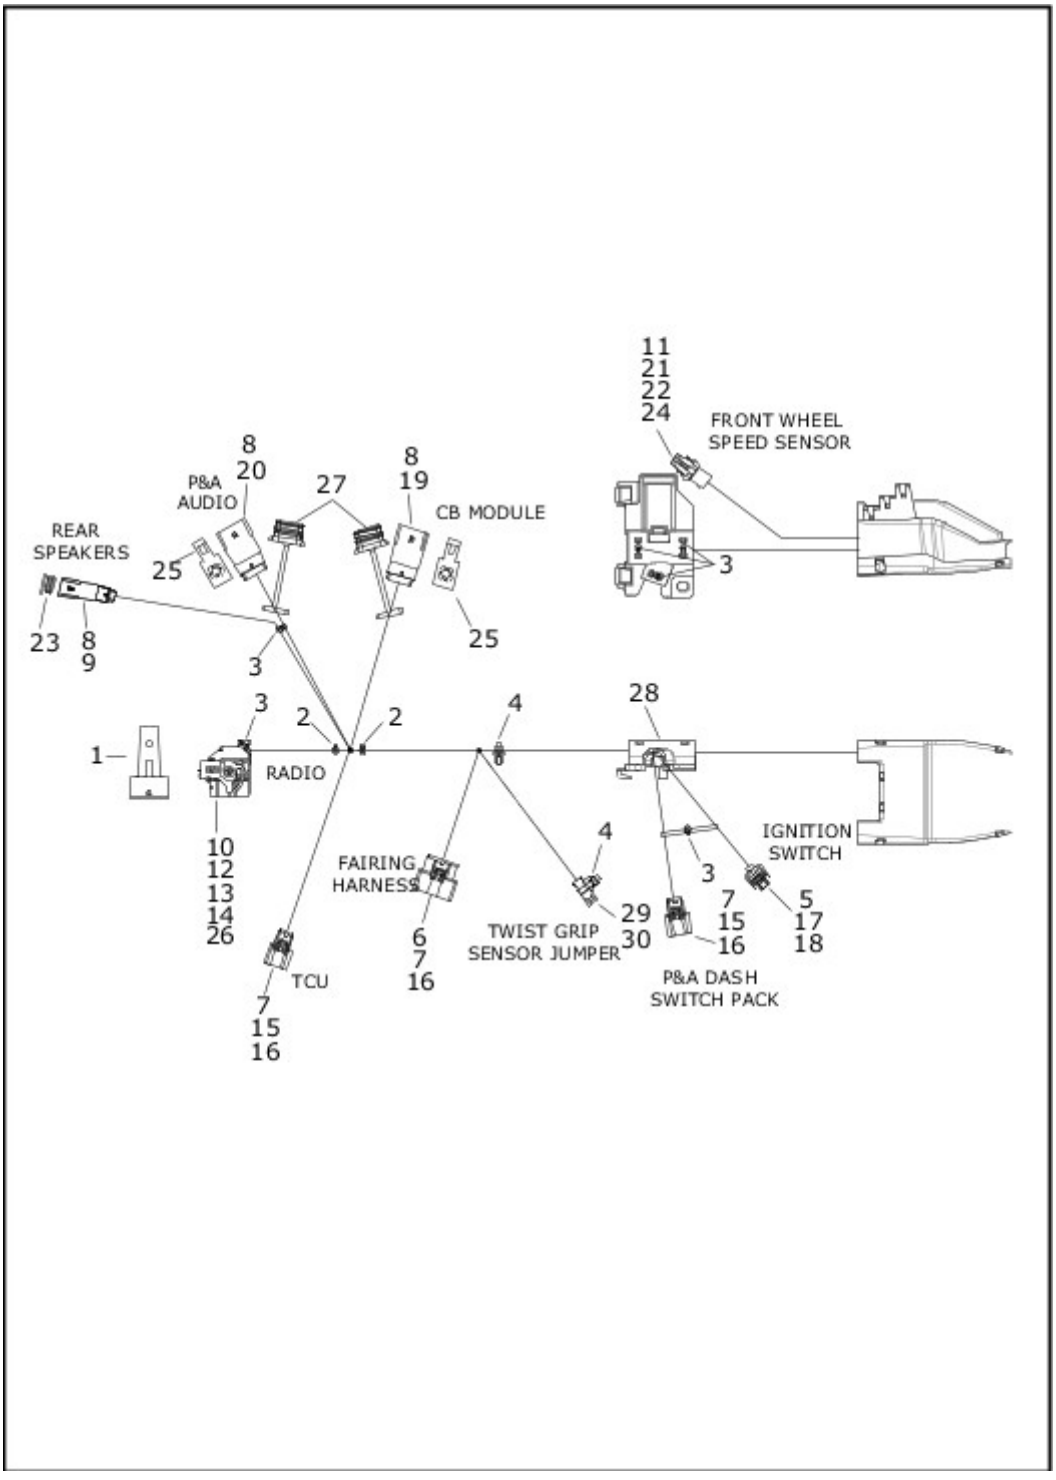

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	69202354	PLUG, weather	FLHT


WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8)

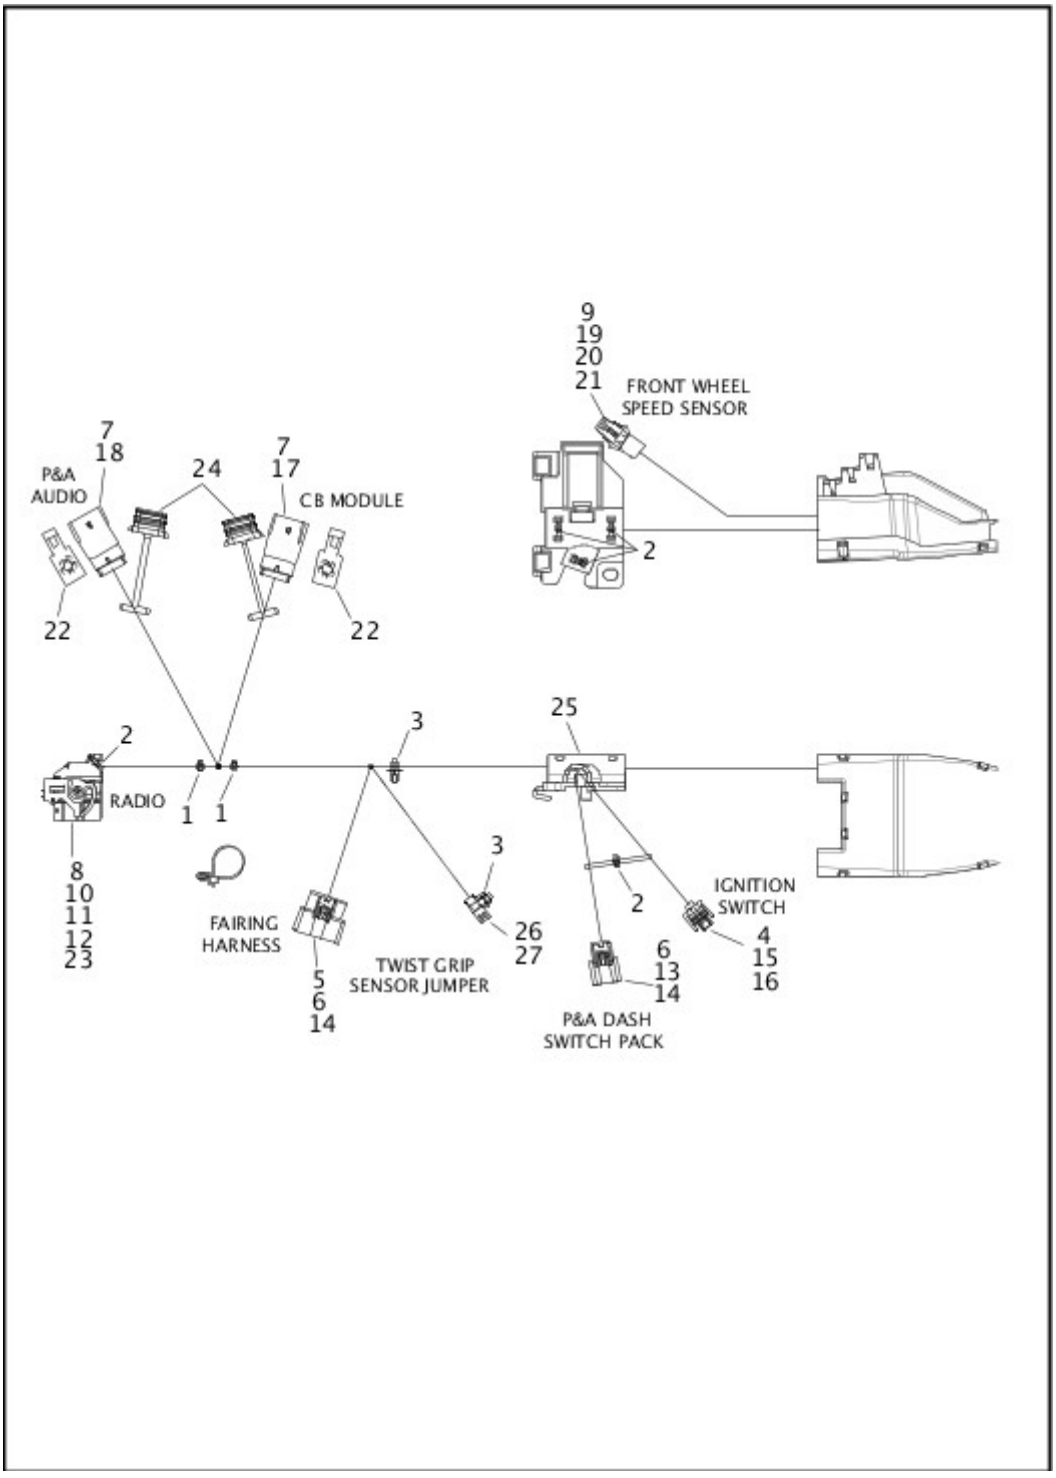

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	72639-10	SECONDARY LOCK, two-way socket	FLHTCU

WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)

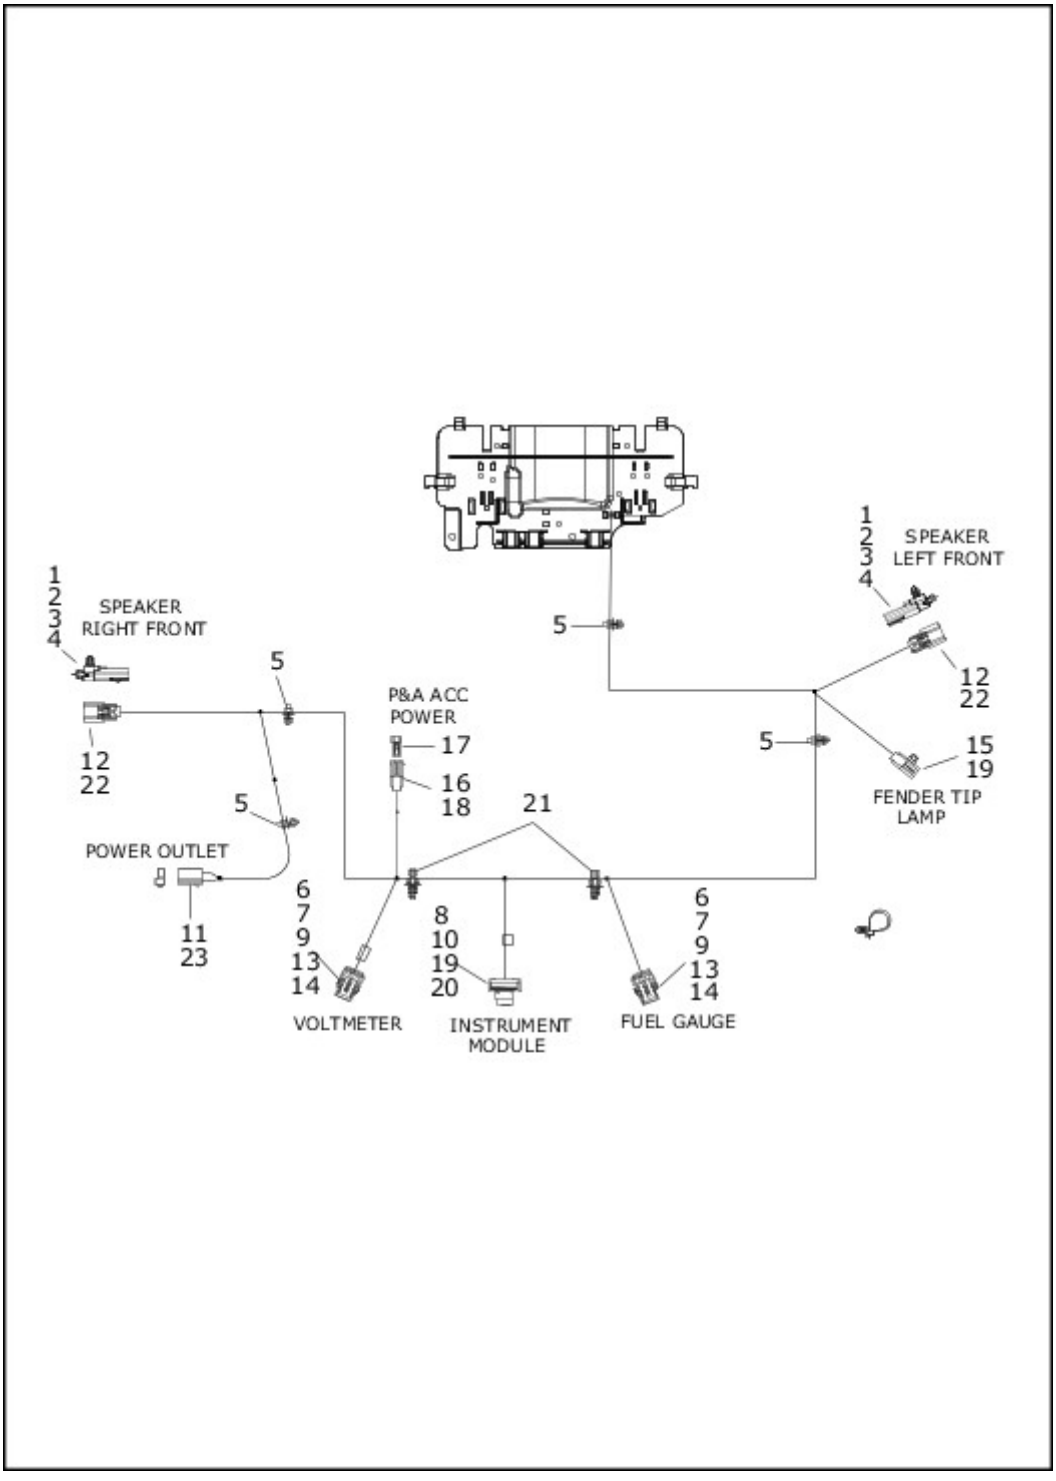


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	72473-07	SEAL PIN (natural) *(2)*	FLHT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	73213-07	RETAINER, anchored	FLHT
3	69200272	HOUSING, two-way pin (black)	FLHT
4	69202385	PLUG, weather, two-way pin	FLHT

WIRING HARNESS, ON BOARD DIAGNOSTICS (OBD) JUMPER (CHINA ONLY)

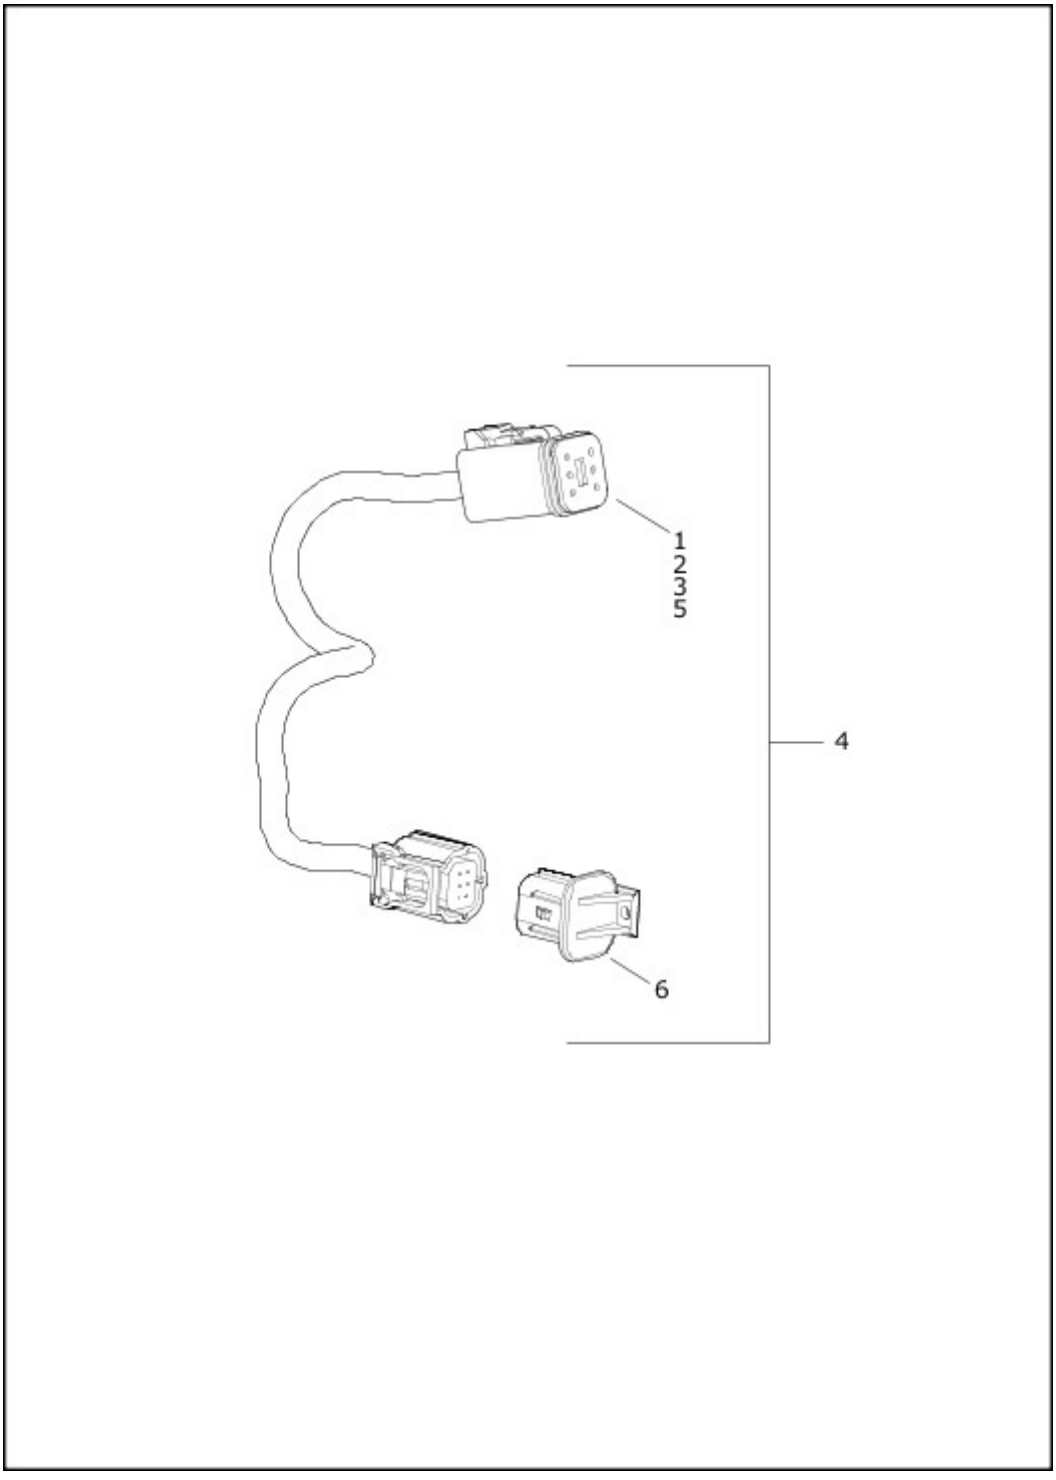


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	72116-94BK	HOUSING, six-way socket (black) (replaces gray connector)	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	72156-94	SECONDARY LOCK, six-way socket	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
3	72195-94	SEAL PIN *(2)*	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
4	69202097	WIRING HARNESS, OBD JUMPER	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
5	69202102	TERMINAL, socket, 22 AWG *(4)*	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
6	69202108	CAP *(2)*	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

BATTERY

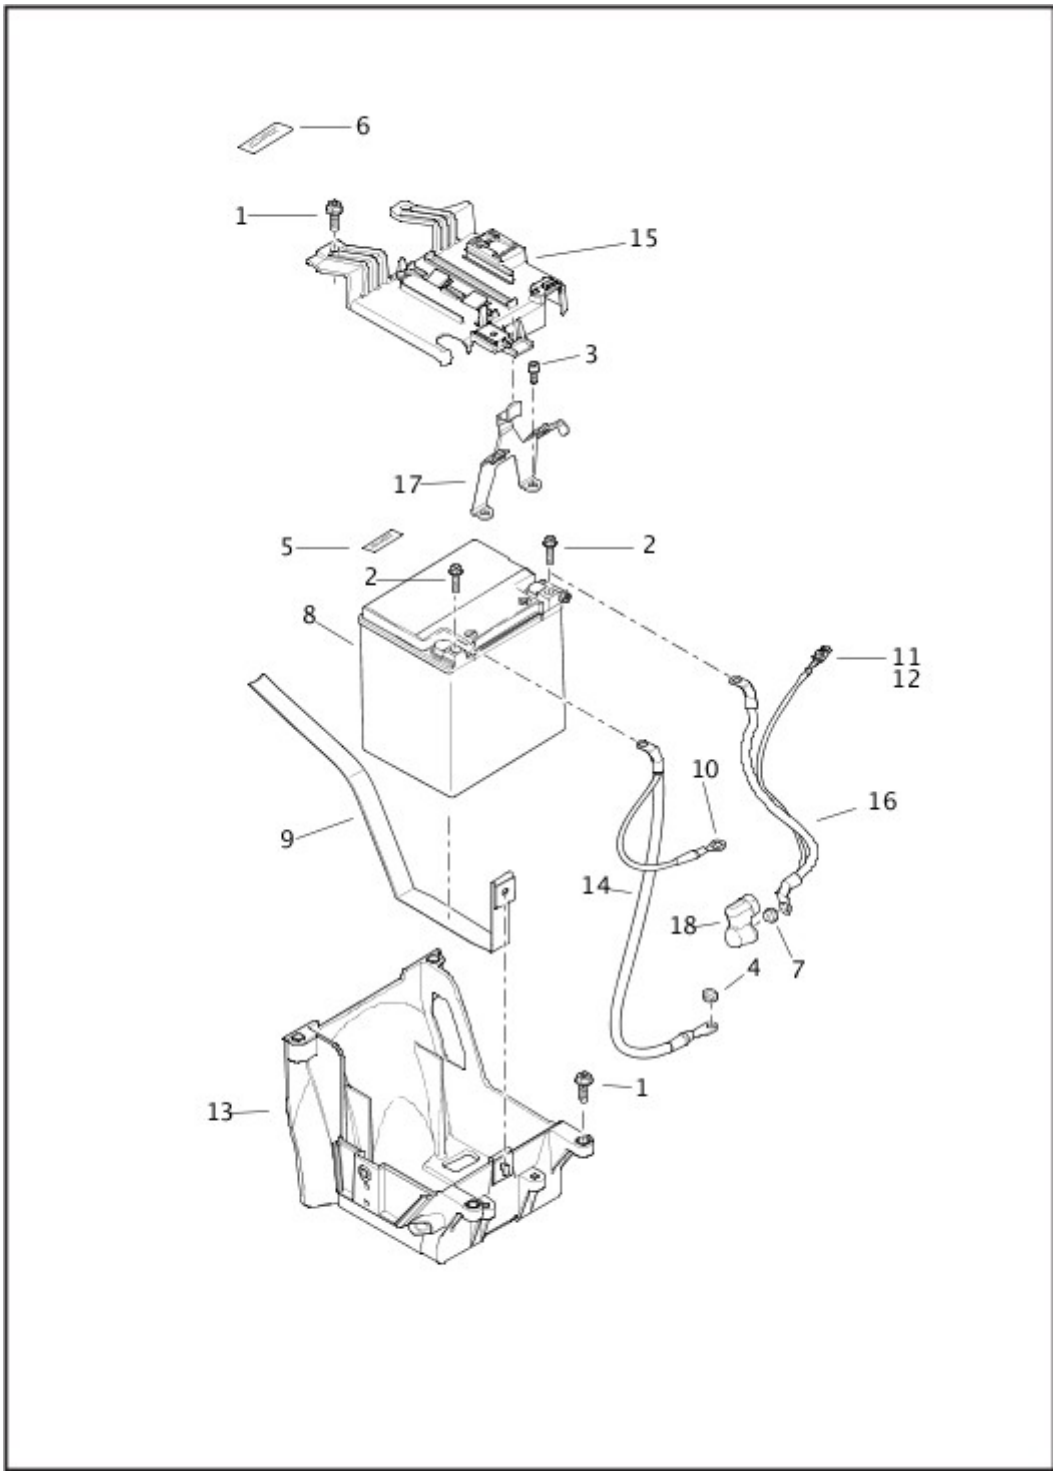


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
5	14001739	LABEL, battery warning (Brazil)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	9819	TERMINAL, ring, 12 AWG	ALL
13	66000010A	BATTERY TRAY	ALL


SWITCHES (1 OF 2)

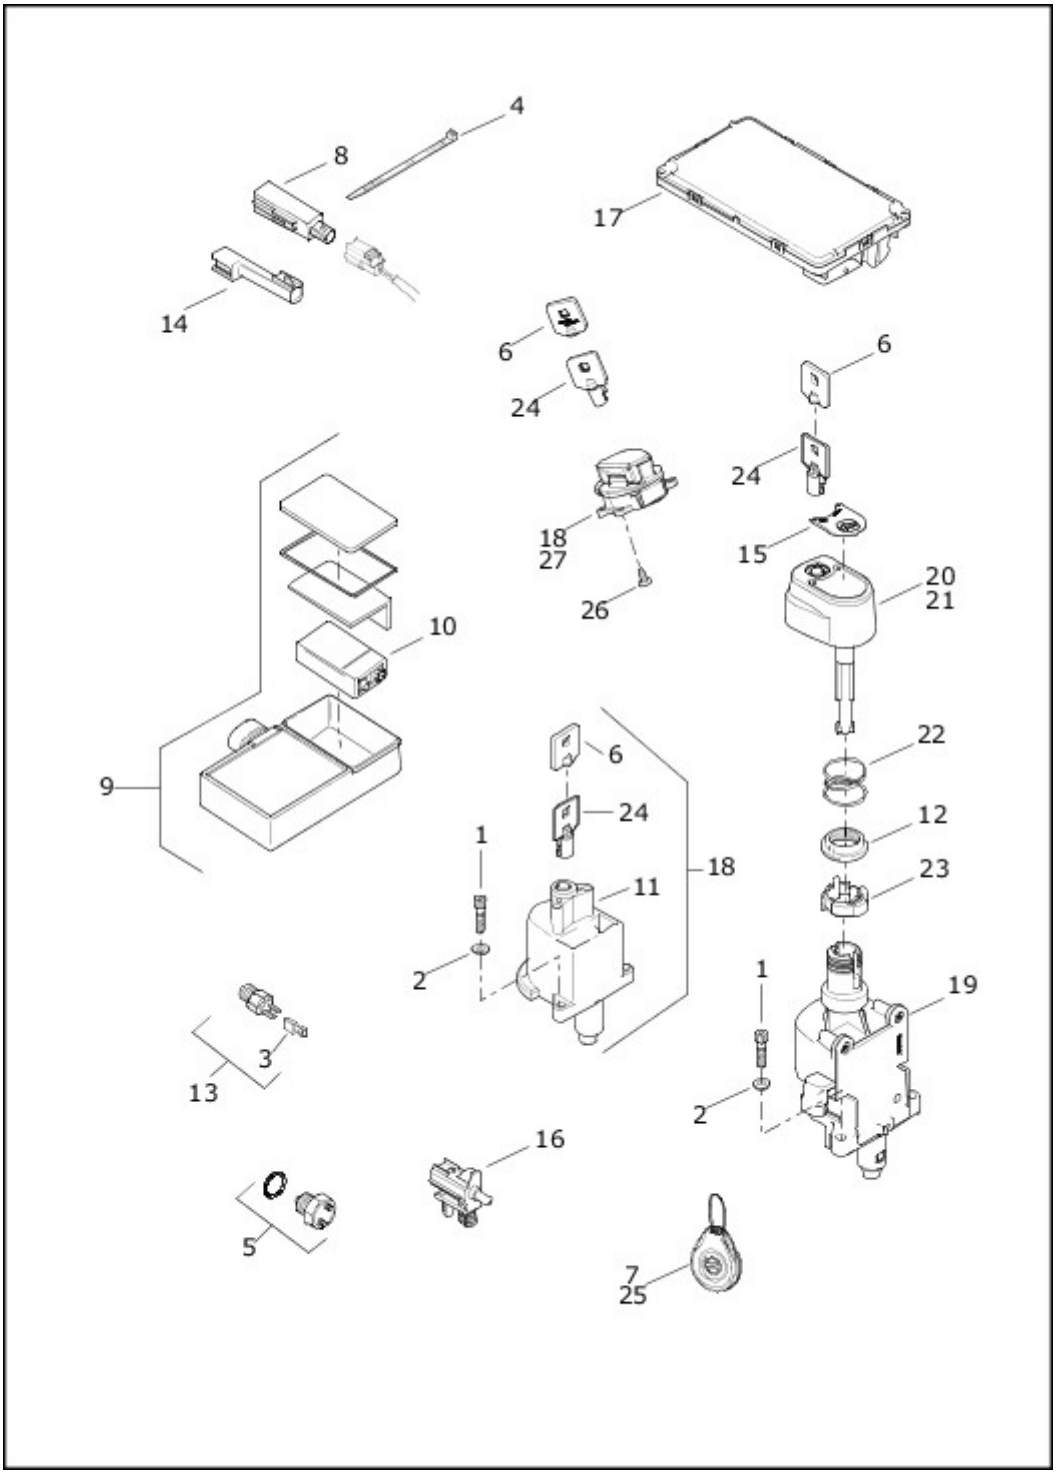

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	71660-03A	NUT, ignition switch	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
17	41000341E	BODY CONTROL MODULE (BCM) with security (Except Japan)	ALL
17	41000342E	BODY CONTROL MODULE (BCM) with security (Japan)	FLHR, FLHRXS, FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHXS, FLTRU, FLTRX, FLTRXS
17	41000351E	BODY CONTROL MODULE (BCM) without security	FLHR, FLHTCU, FLHX, FLTRX

SWITCHES (2 OF 2)

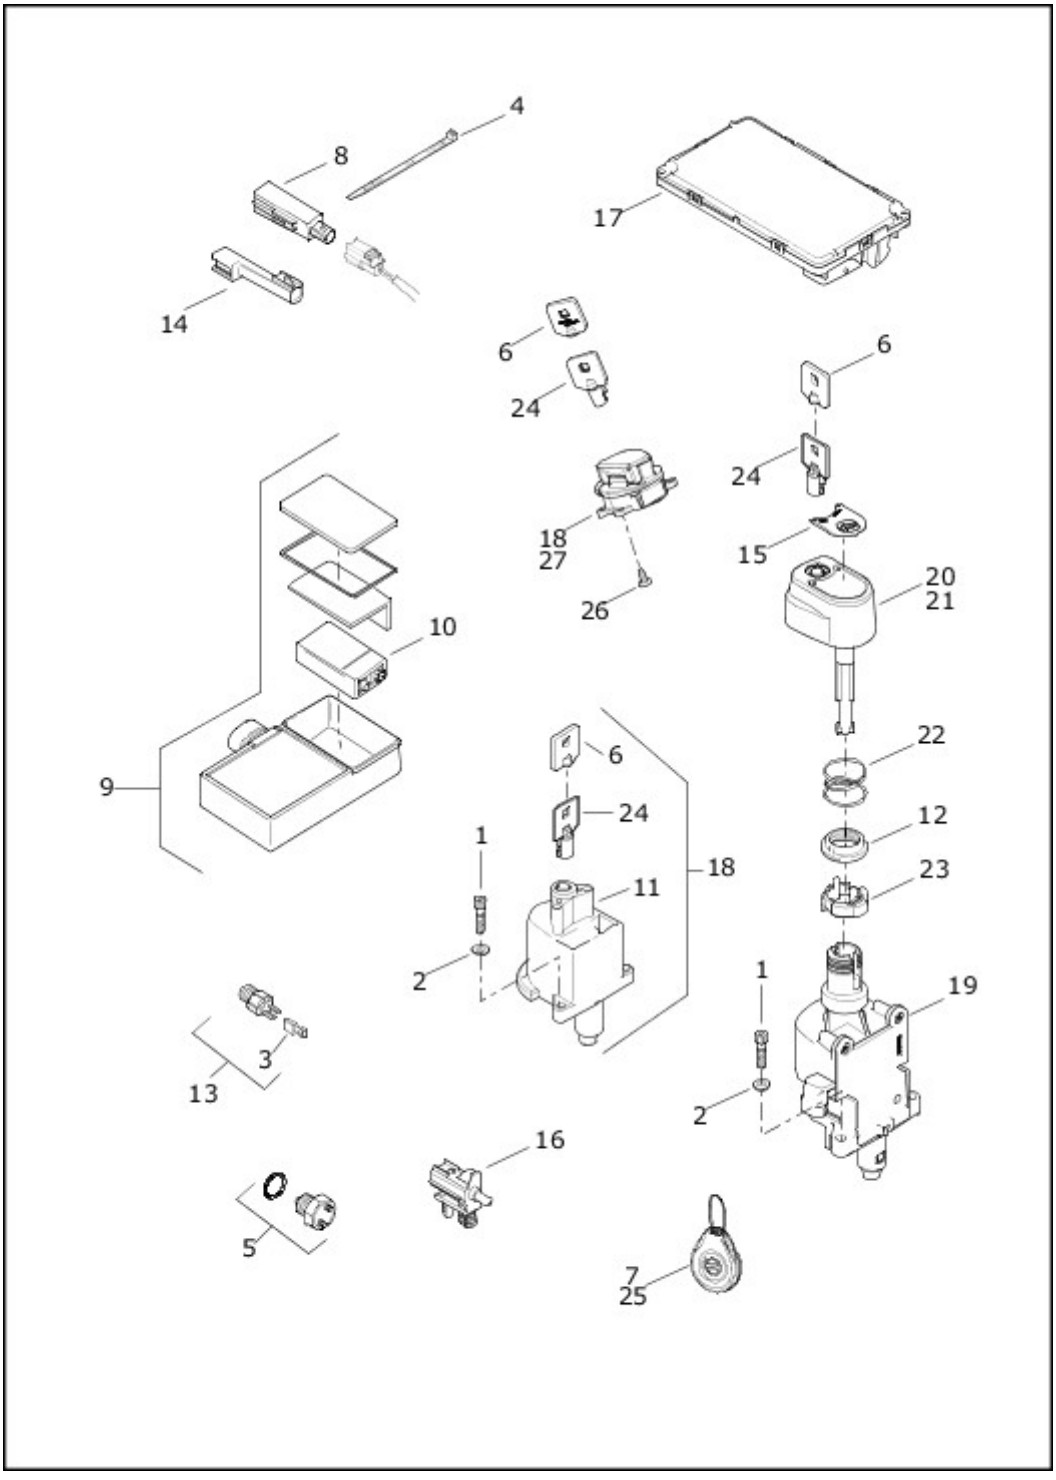


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	71400013B	HOUSING, ignition switch, with 71660-03 and 71400081 (HDI)	FLHT, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	71400015B	LOCKSET, complete, with keys, ignition knob, saddlebag and Tour-Pak locks	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
20	71400016B	LOCKSET, complete, with keys, ignition knob and saddlebag lock	FLHT, FLHX, FLHXS, FLTRX
21	71400017B	KNOB, ignition switch, with 14100158 (specify key number)	FLHT, FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX
21	71400126B	KNOB, ignition switch (specify key number)	FLHXS, FLTRXS

SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)

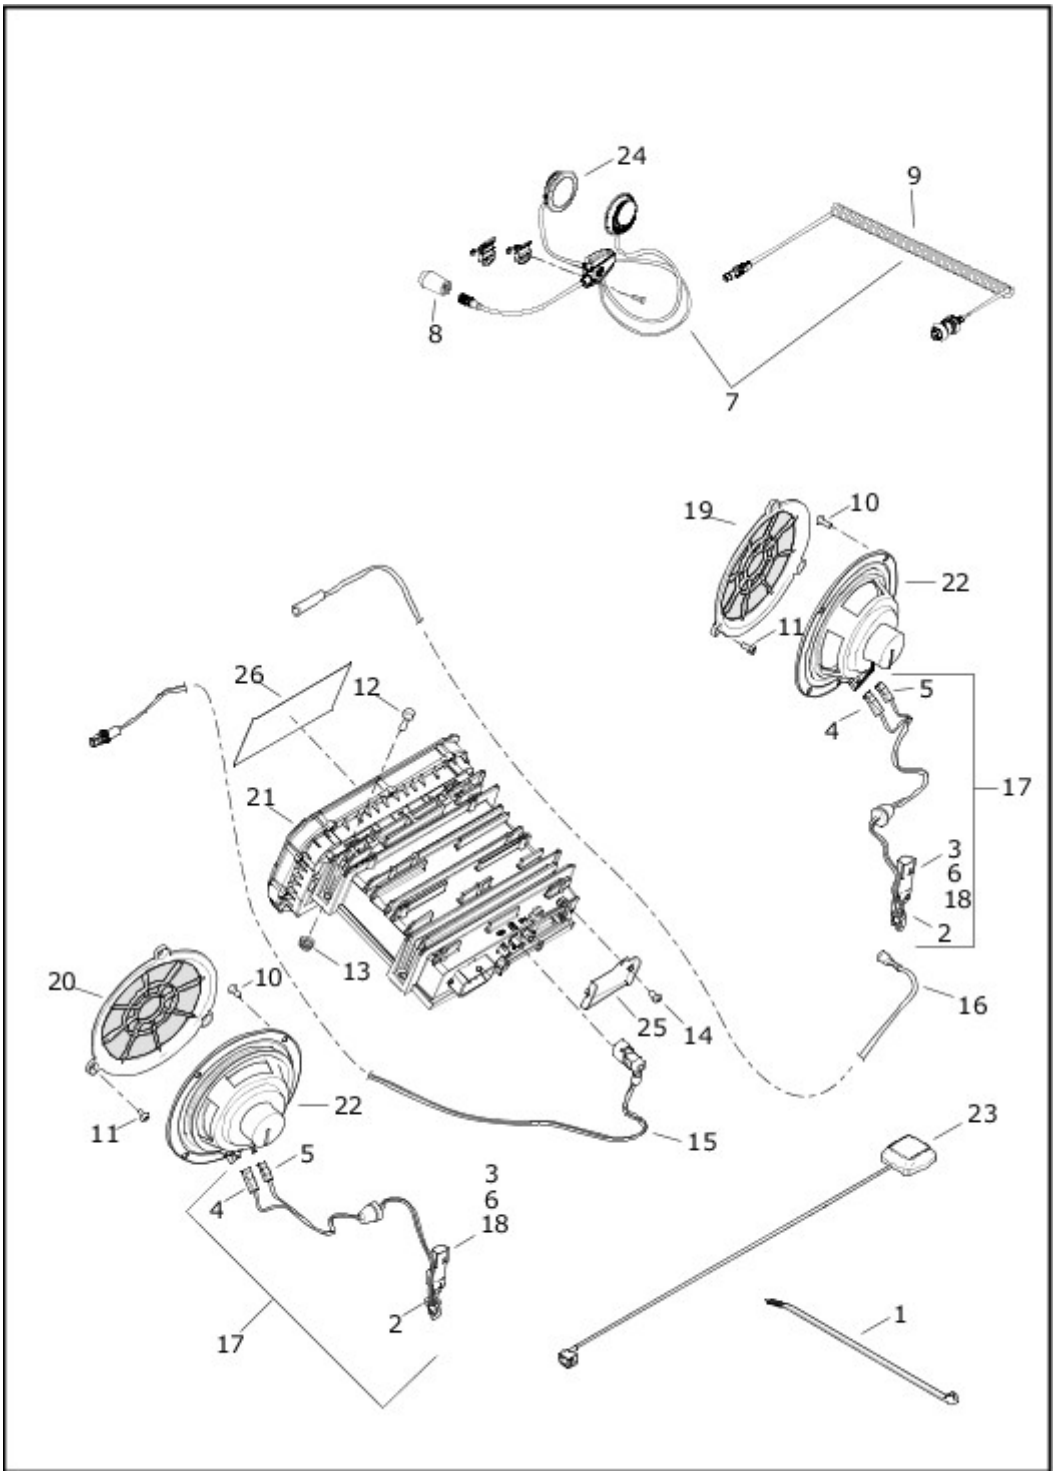


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	76000783	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (Domestic, California, Canada) (See NOTE 1)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS
21	76000784	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, England) (See NOTE 2)	FLHTK, FLHTKL, FLHX, FLHXS
21	76000785	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, Australia, Japan, Asia-Pacific, Brazil, China) (See NOTE 3)	FLHTK, FLHX, FLHXS
21	76000785	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, Japan, Asia-Pacific, China) (See NOTE 3)	FLHTKL
21	76000075D	RADIO, BOOM!™ BOX 4.3, with 12600070 and 12600071 (Domestic, California)	FLHTCU, FLHX
23	76000789	ANTENNA, GPS	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS

SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)

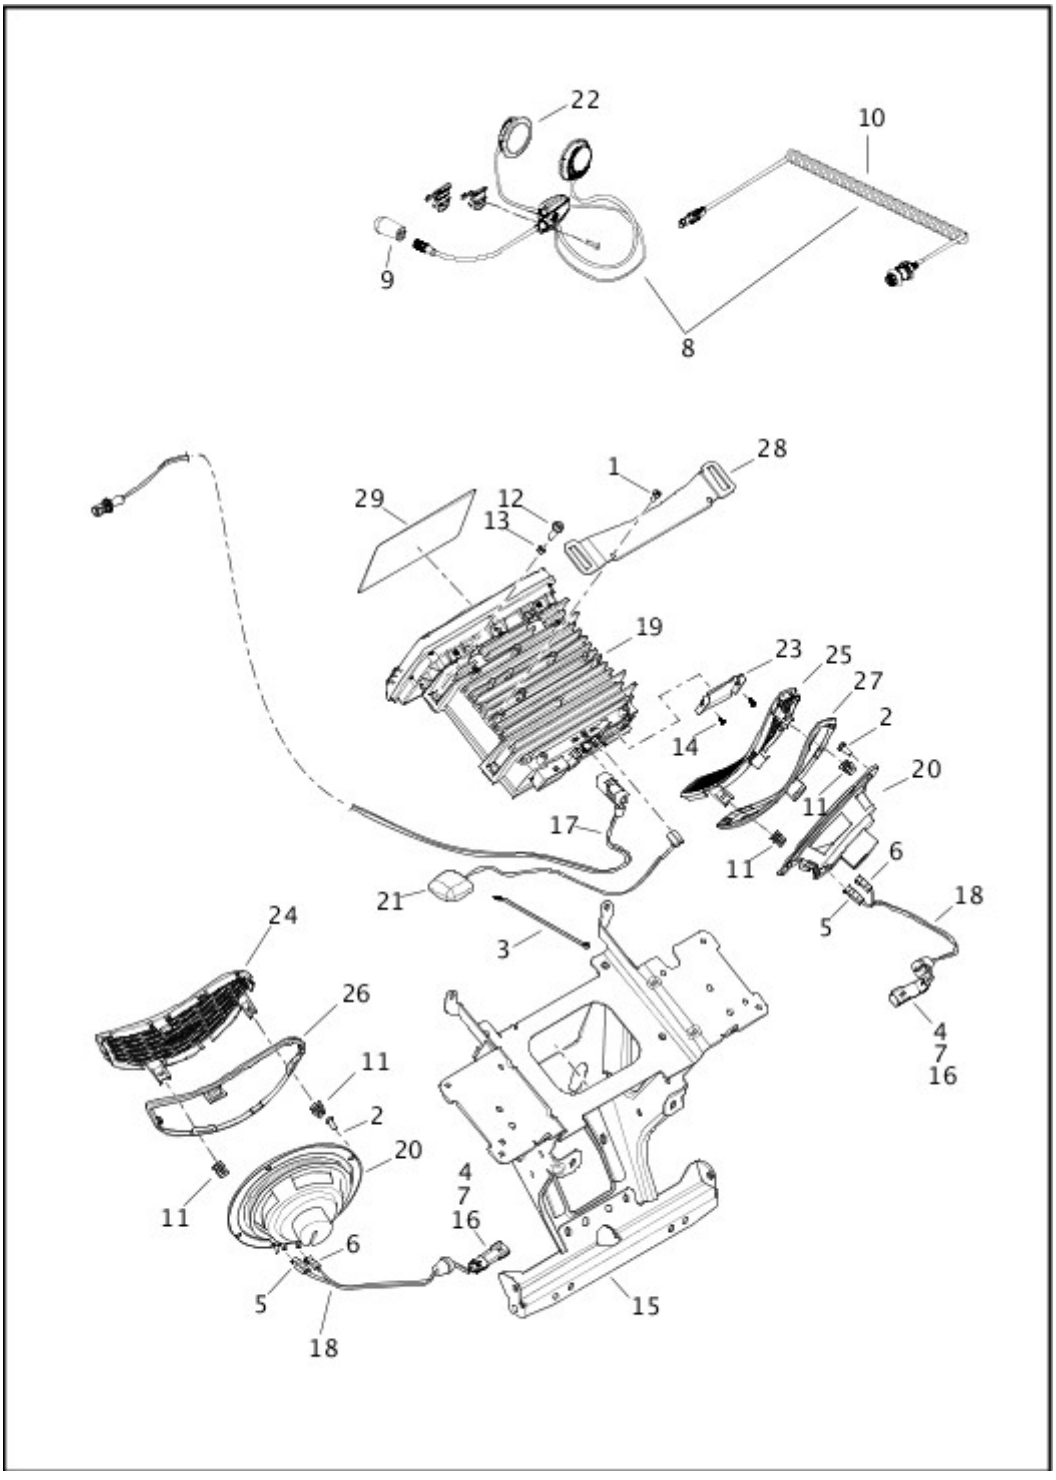


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	3152	SCREW *(8)*	FLTRU, FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	76000779	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (Domestic, California, Canada) (See NOTE 1)	FLTRU, FLTRX, FLTRXS
19	76000780	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, England) (See NOTE 2)	FLTRU, FLTRX, FLTRXS
19	76000781	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, Australia, Japan, Asia-Pacific, China) (See NOTE 3)	FLTRX
19	76000781	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, Australia, Japan, Asia-Pacific, Brazil, China) (See NOTE 3)	FLTRXS
19	76000781	RADIO, BOOM!™ BOX GTS, with 12600070, 12600071, 12600073 and 76000252 (HDI, Japan, Asia-Pacific, Brazil, China) (See NOTE 3)	FLTRU
19	76000075D	RADIO, BOOM!™ BOX 4.3, with 12600070 and 12600071 (Domestic, California)	FLTRX


SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)

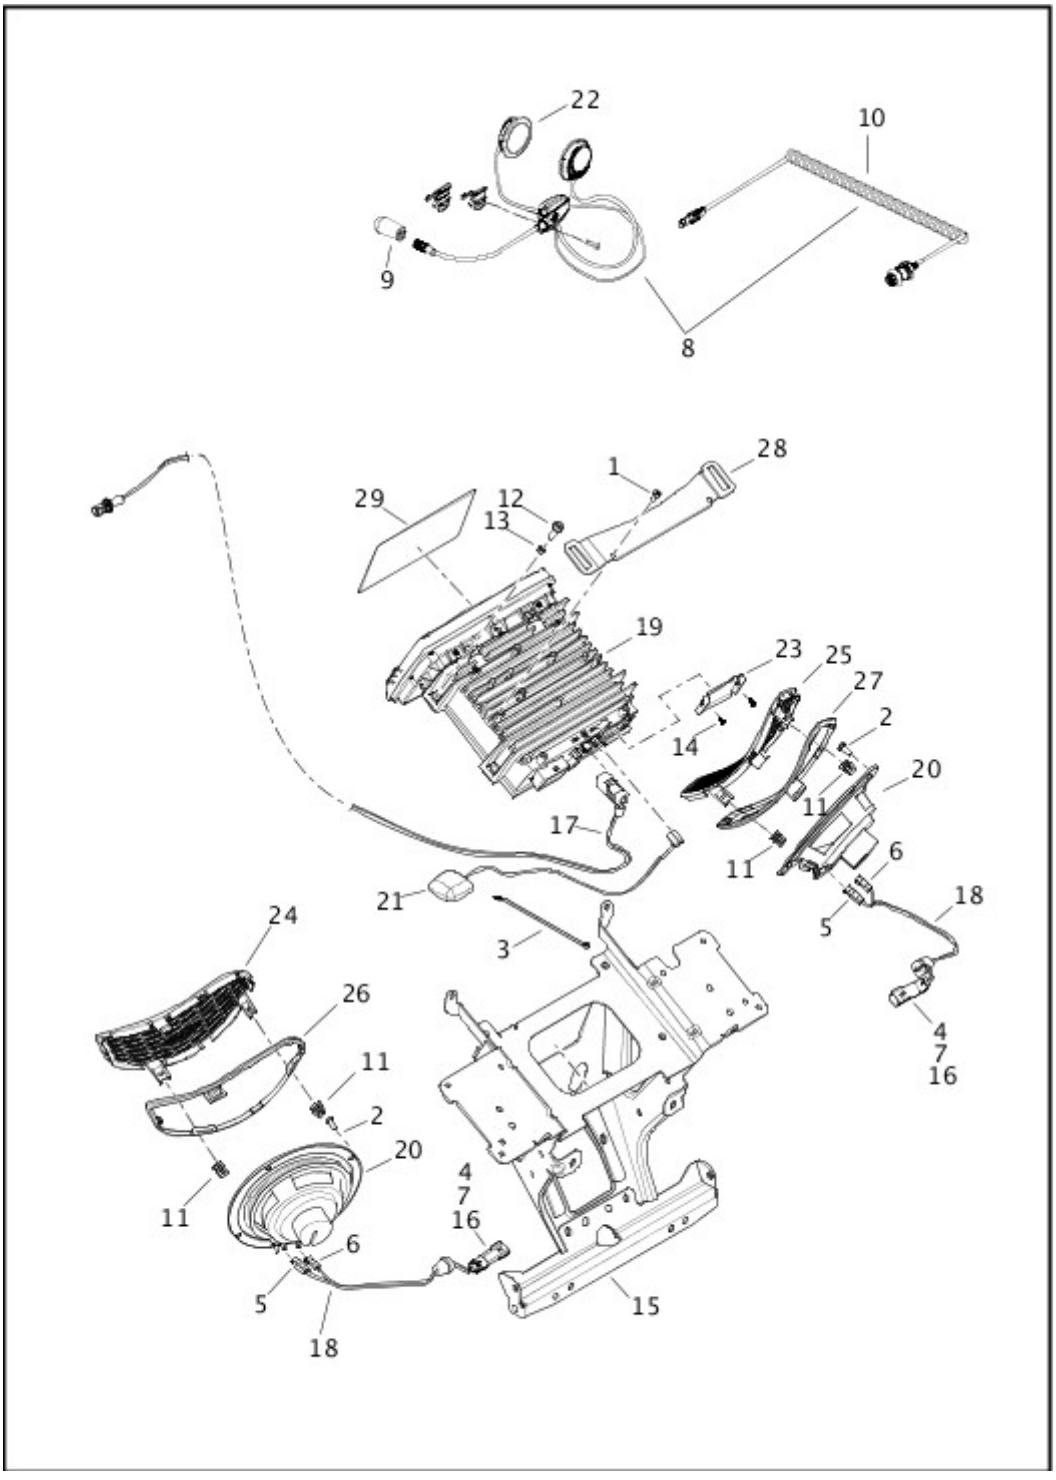

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	76000789	ANTENNA, GPS	FLTRU, FLTRX, FLTRXS


ANTENNAS

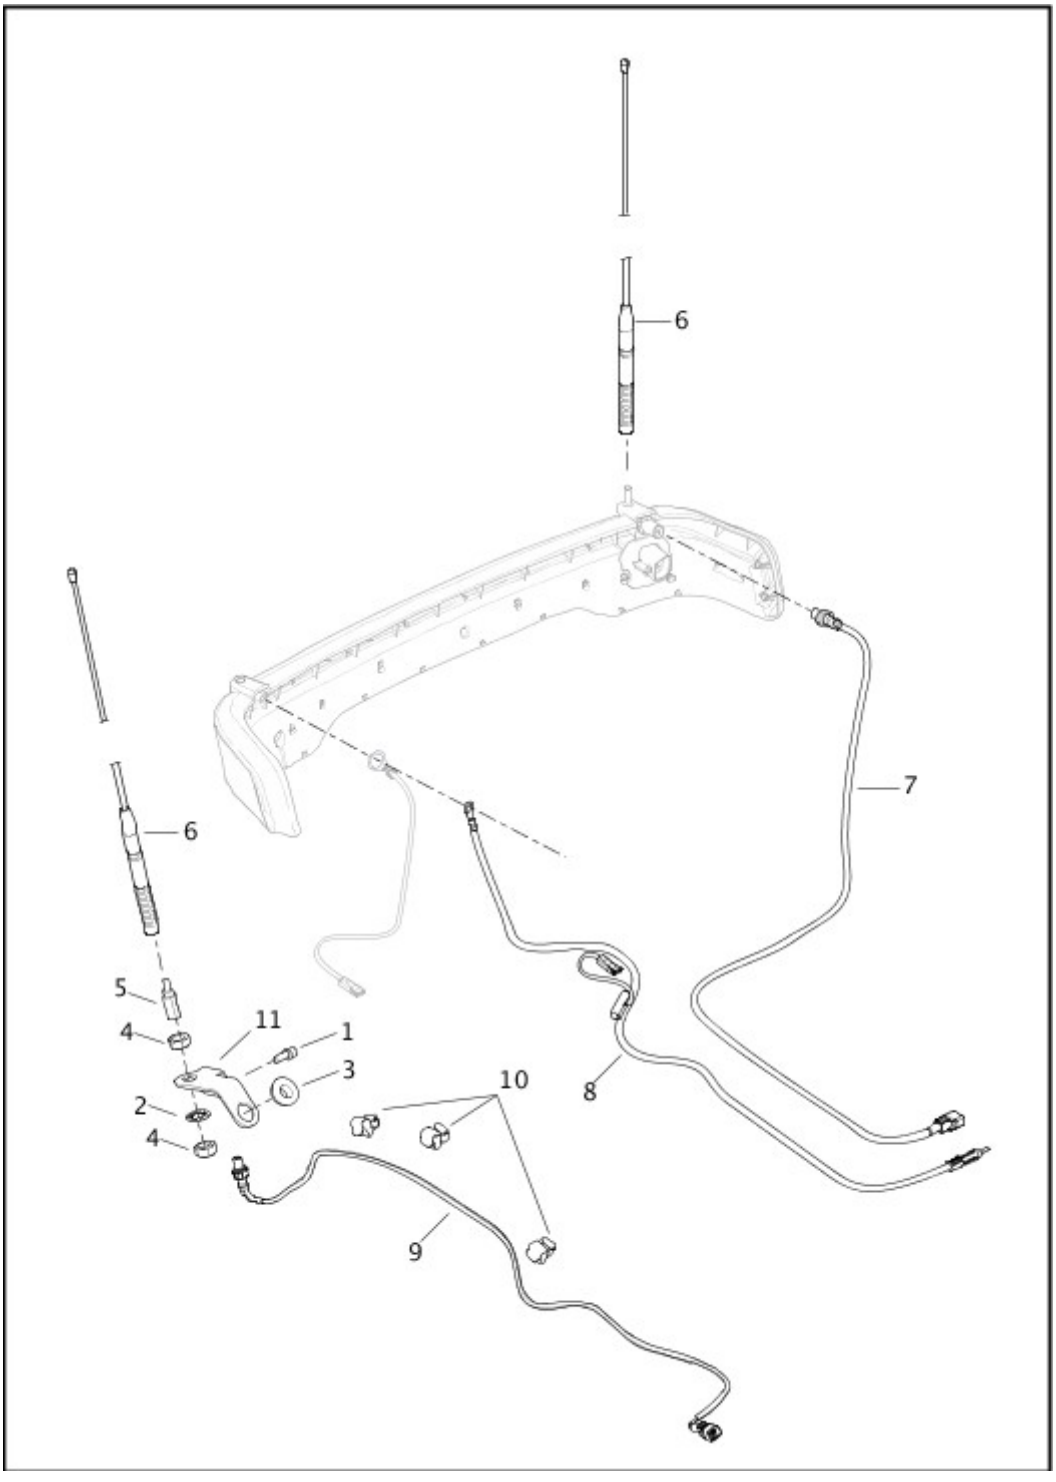

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	76000799	ANTENNA MAST, AM/FM/WB/LW	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS


TOUR-PAK (COVER)

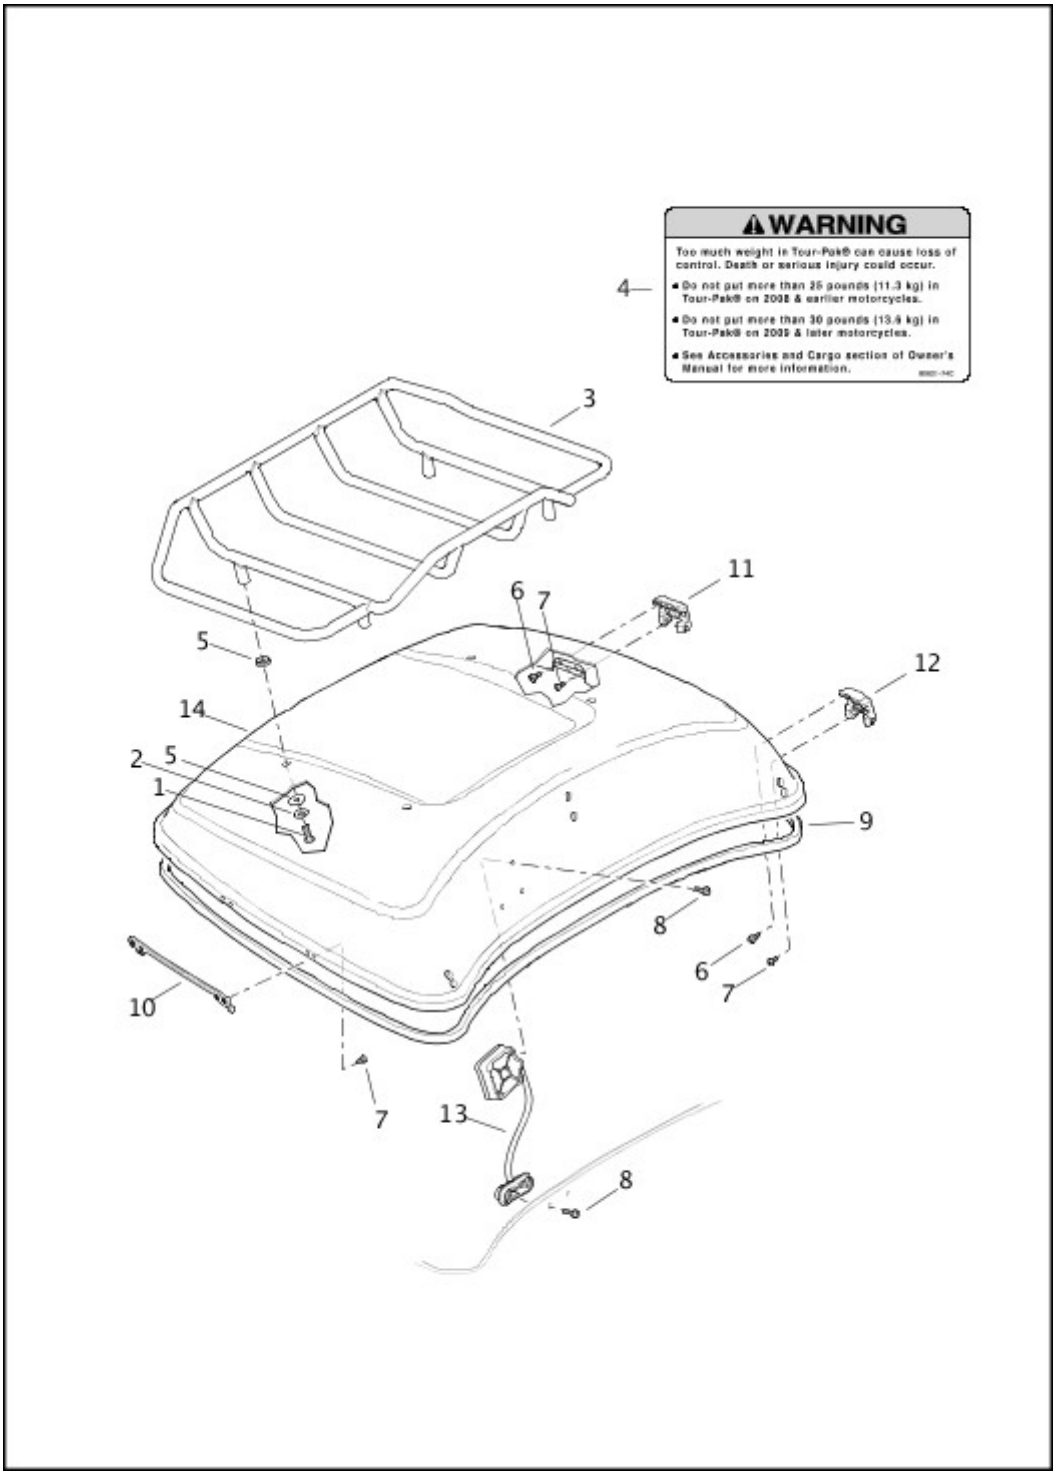

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	53000141A	TETHER, retractable	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU

SADDLEBAGS - EXCEPT FLHRC (2 OF 4)

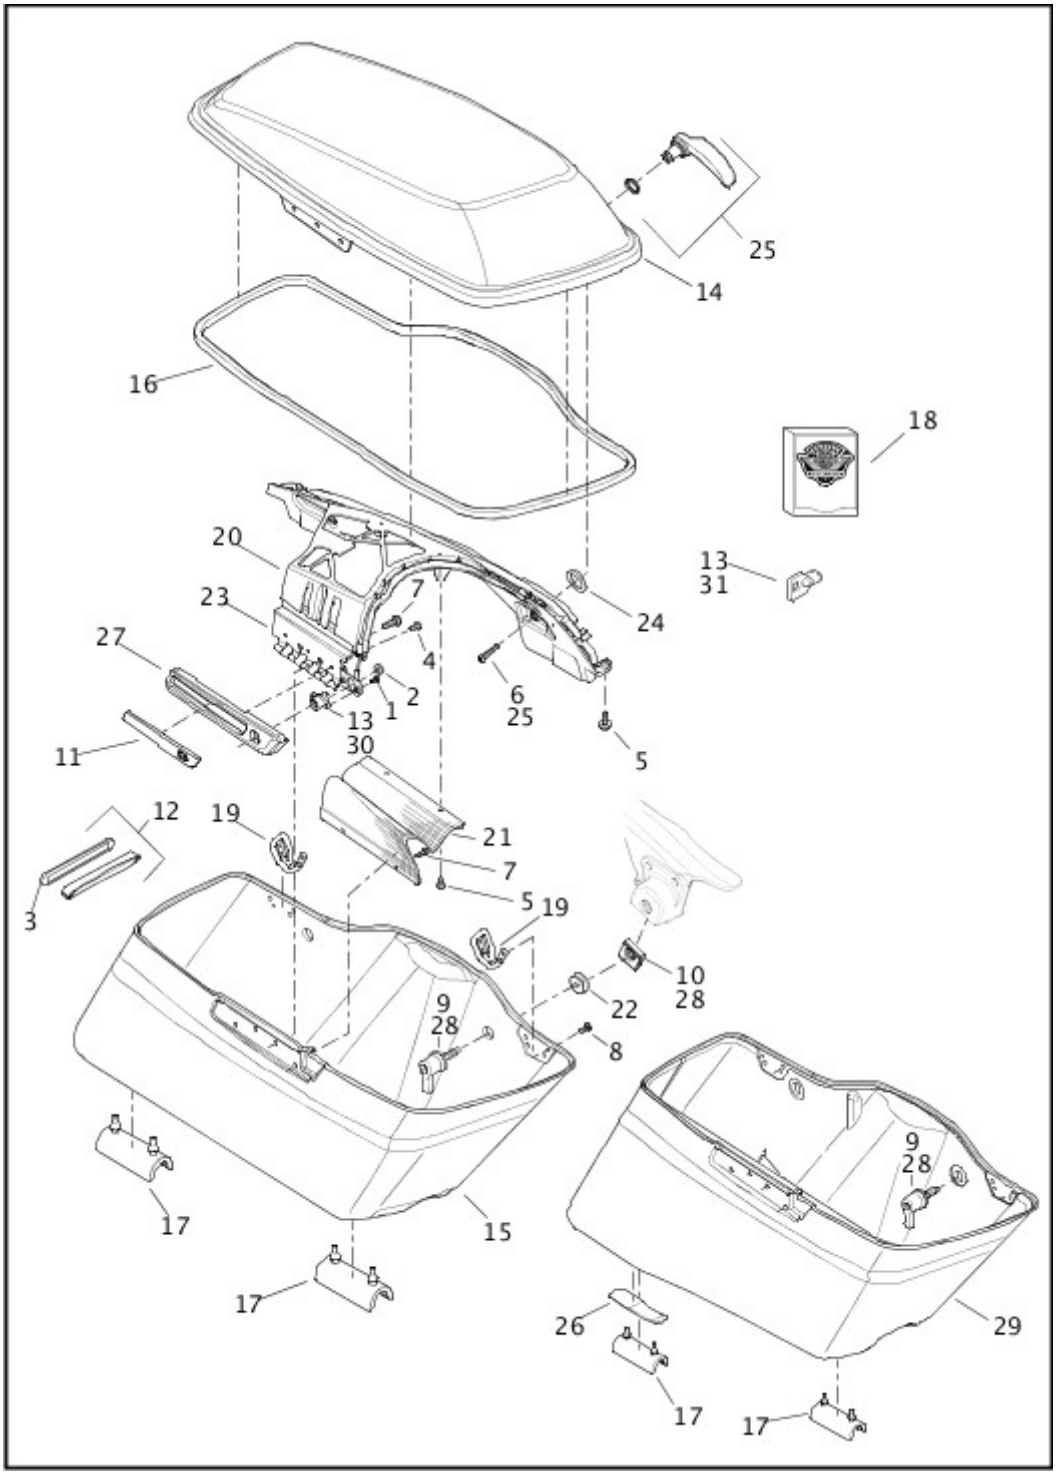


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	71400015B	LOCKSET, complete, with keys, ignition knob, saddlebag and Tour-Pak locks	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL, FLTRU
13	71400016B	LOCKSET, complete, with keys, ignition knob and saddlebag lock	FLHT, FLHX, FLHXS, FLTRX, FLTRXS

SADDLEBAGS - EXCEPT FLHRC (4 OF 4)

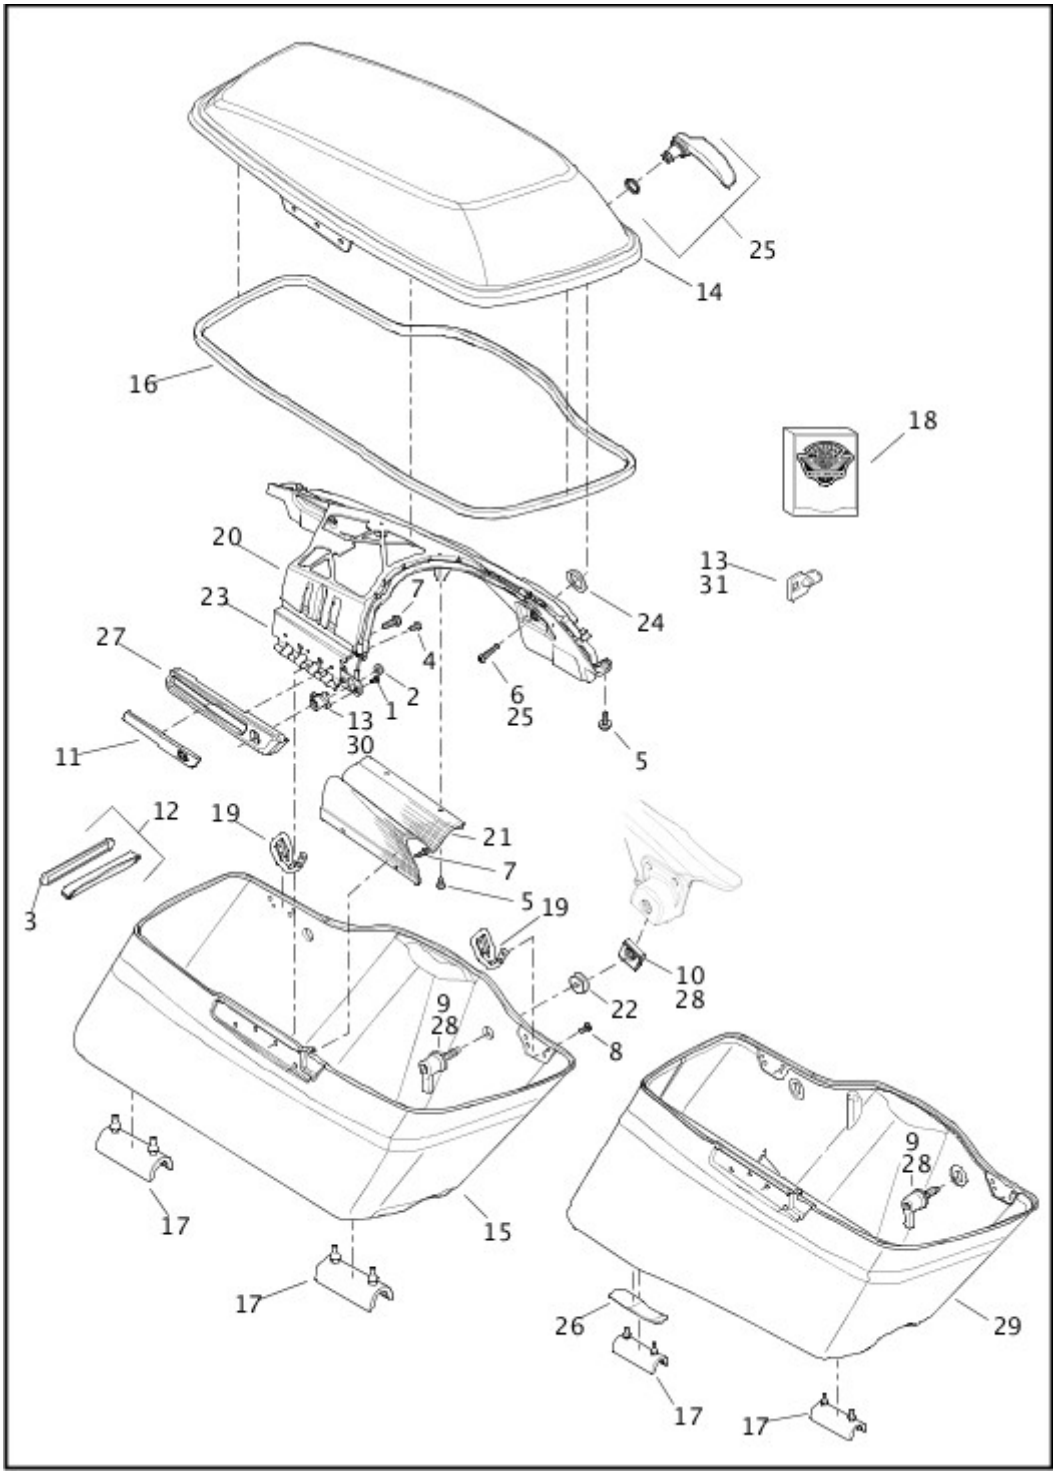


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	90200983EKA	FACEPLATE (left) (midnight blue)	FLHRXS, FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	90200983ELD	FACEPLATE (left) (kinetic green)	FLHX, FLTRX
27	90200983ELE	FACEPLATE (left) (blue max)	FLHX, FLTRX
27	90200983EKG	FACEPLATE (left) (wicked red denim)	FLHXS, FLTRXS
27	90200983EKR	FACEPLATE (left) (barracuda silver)	FLHXS
27	90200983ELG	FACEPLATE (left) (scorched orange)	FLHRXS, FLHXS, FLTRXS
27	90200983EKP	FACEPLATE (left) (billiard blue)	FLHXS, FLTRXS
27	90200983ELI	FACEPLATE (left) (silver flux)	FLHXS, FLTRXS
27	90200983EEZ	FACEPLATE (left) (industrial gray)	FLTRX
27	90200984EKA	FACEPLATE (right) (midnight blue)	FLHRXS, FLHX
27	90200984ELD	FACEPLATE (right) (kinetic green)	FLHX, FLTRX
27	90200984ELE	FACEPLATE (right) (blue max)	FLHX, FLTRX
27	90200984EKG	FACEPLATE (right) (wicked red denim)	FLHXS, FLTRXS
27	90200984EKR	FACEPLATE (right) (barracuda silver)	FLHXS
27	90200984ELG	FACEPLATE (right) (scorched orange)	FLHRXS, FLHXS, FLTRXS
27	90200984EKP	FACEPLATE (right) (billiard blue)	FLHXS, FLTRXS
27	90200984ELI	FACEPLATE (right) (silver flux)	FLHXS, FLTRXS
27	90200984EEZ	FACEPLATE (right) (industrial gray)	FLTRX

LABELS

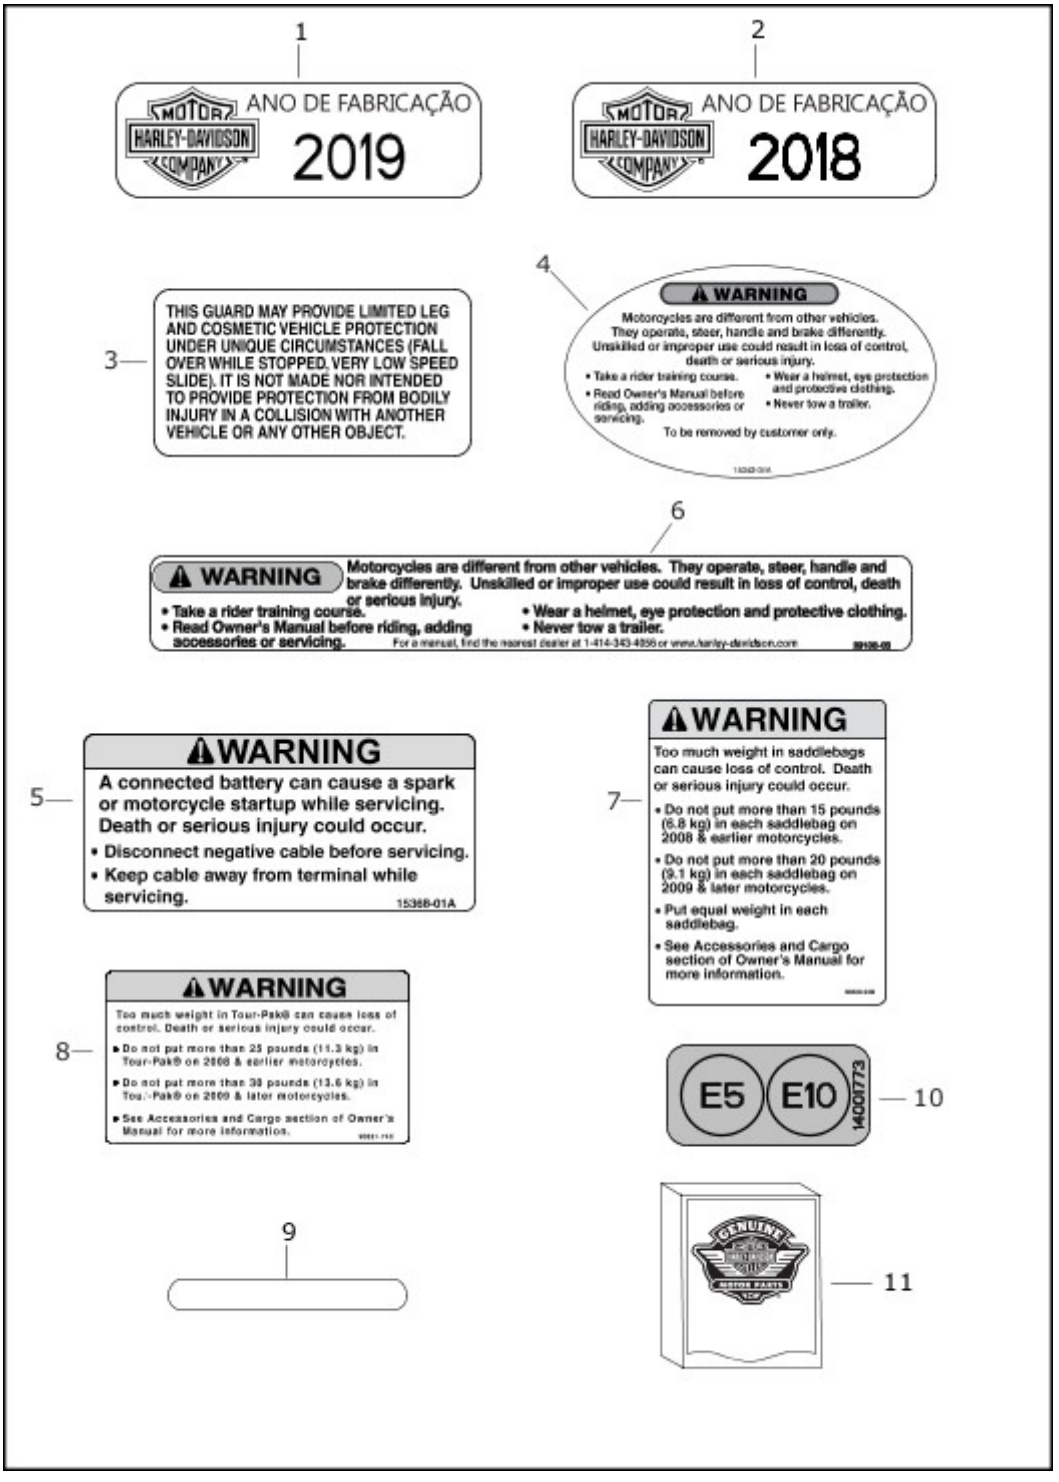


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	14001593	LABEL, year of manufacturing (Brazil)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	14001735	LABEL, engine guard warning (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
5	14001739	LABEL, battery warning (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
6	14001734	LABEL, air cleaner warning (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
6	14001799	LABEL, air cleaner warning (China) (not shown)	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
7	14001738	LABEL, saddlebag load limits (Brazil) (not shown) *(2)*	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
8	14001737	LABEL, tour-pak load limit (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
10	14001773	LABEL, fuel (England, HDI)	ALL
11	14001736	LABEL, primary cover (Brazil) (not shown)	FLHRC, FLHRXS, FLHTK, FLHTK SHRINE, FLHX, FLHXS, FLTRU, FLTRXS
11	14001800	LABEL, fuel tank (Asia-Pacific) (not shown)	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS
11	14001859	LABEL, front brake lever (China) (not shown)	FLHR, FLHRXS, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX, FLTRXS

LOOSE PARTS (1 OF 3)

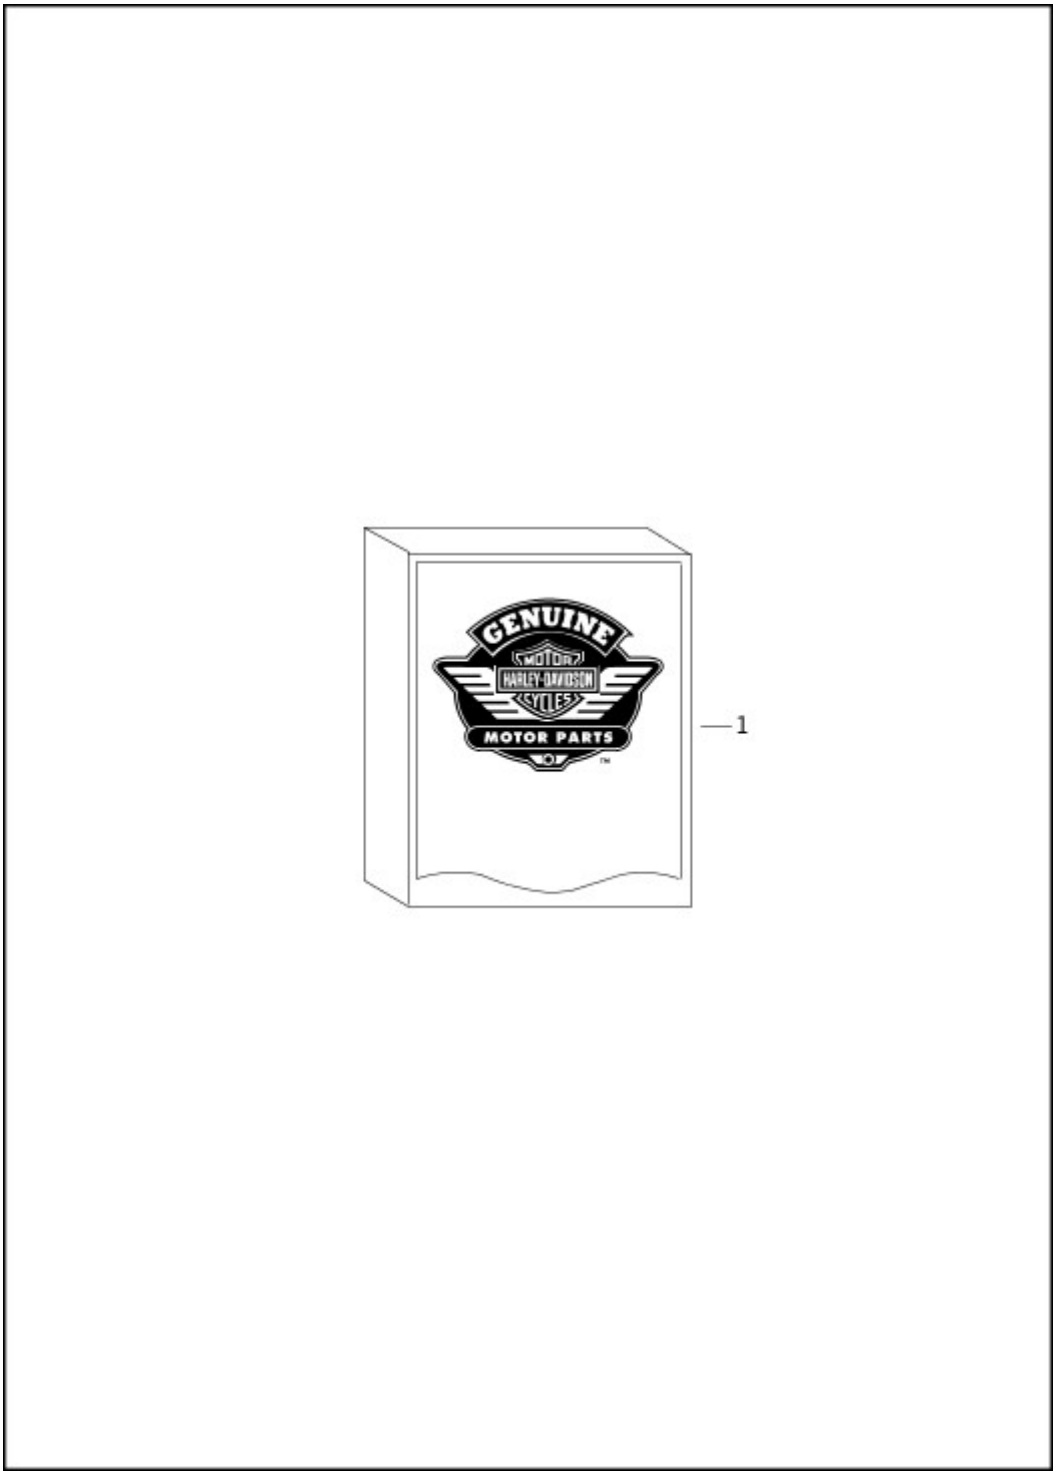


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	94000687	OWNER'S MANUAL (Domestic, Australia, England)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	76000799	ANTENNA MAST, AM/FM/WB/LW	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	94000634	BOOM!™ BOX GTS, quick start guide (English)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	97011-16	BOOM!™ BOX 4.3, quick start guide (English)	FLHTCU
1	94000601	BOOM!™ BOX GTS, owners manual (See NOTE 3)	FLHTCU, FLHTK, FLHTK SHRINE, FLHTKL
1	94000585	BOOM!™ BOX 4.3, owners manual (See NOTE 3)	FLHTCU

LOOSE PARTS (2 OF 3)

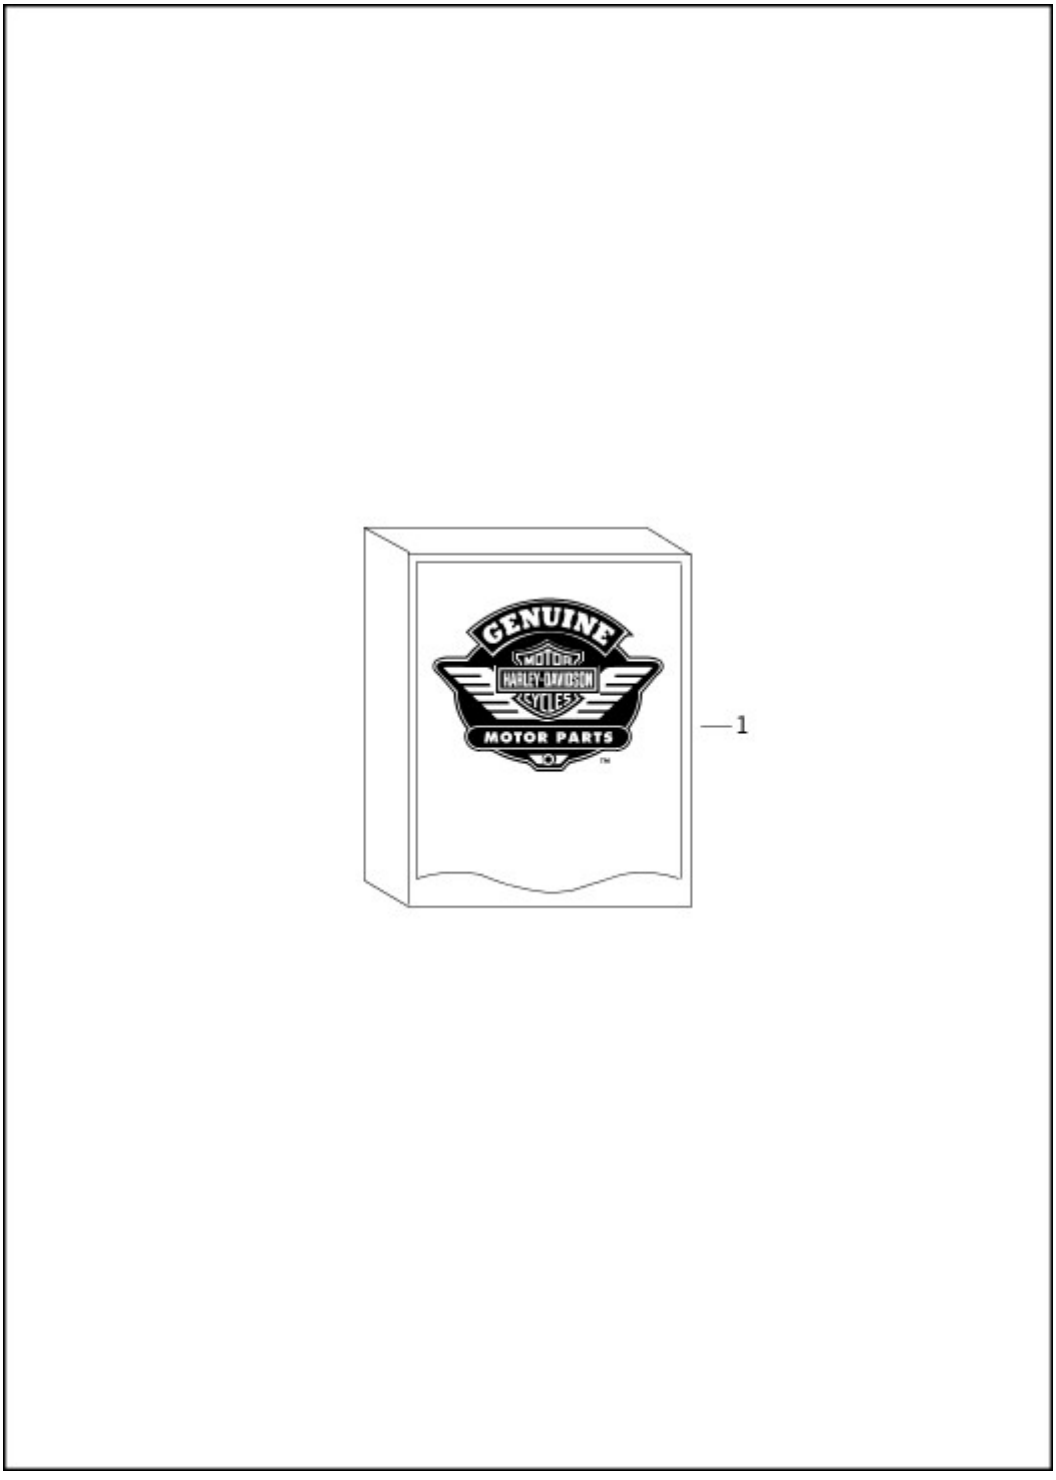


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	76000799	ANTENNA MAST, AM/FM/WB/LW	FLTRX, FLTRXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	94000634	BOOM!™ BOX GTS, quick start guide (English)	FLTRX, FLTRXS
1	97011-16	BOOM!™ BOX 4.3, quick start guide (English)	FLTRX
1	94000601	BOOM!™ BOX GTS, owners manual (See NOTE 3)	FLTRX, FLTRXS
1	94000585	BOOM!™ BOX 4.3, owners manual (See NOTE 3)	FLTRX
1	76000799	ANTENNA MAST, AM/FM/WB/LW	FLTRU
1	94000634	BOOM!™ BOX GTS, quick start guide (English)	FLTRU
1	94000601	BOOM!™ BOX GTS, owners manual (See NOTE 3)	FLTRU

LOOSE PARTS (3 OF 3)

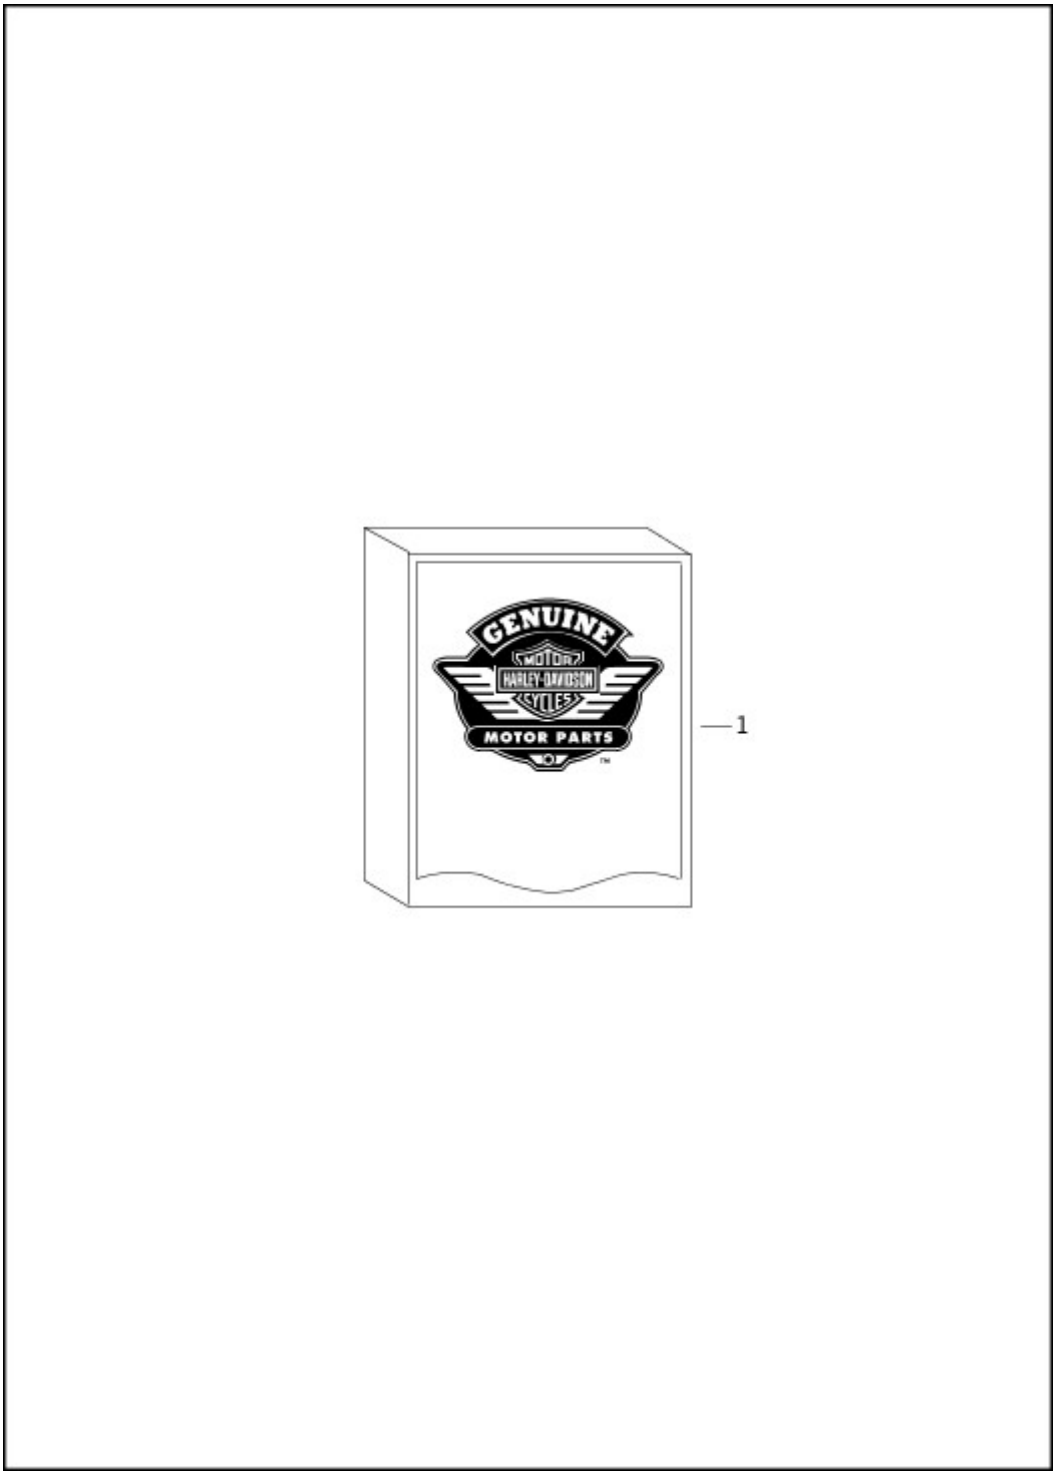

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	76000799	ANTENNA MAST, AM/FM/WB/LW	FLHX, FLHXS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	94000634	BOOM!™ BOX GTS, quick start guide (English)	FLHX, FLHXS
1	97011-16	BOOM!™ BOX 4.3, quick start guide (English)	FLHX
1	94000601	BOOM!™ BOX GTS, owners manual (See NOTE 3)	FLHX, FLHXS
1	94000585	BOOM!™ BOX 4.3, owners manual (See NOTE 3)	FLHX

Numerical Index

View interactive table

10006	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ BRAKE LINES, FRONT - NON-ABS BRAKE LINES, FRONT - ABS FENDERS, REAR (1 OF 2) HANDLEBAR HANDLEBAR THROTTLE CONTROL TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI) TAIL LAMP (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10)

	WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
10039	ALTERNATOR AND REGULATOR CLUTCH CONTROL FRAME AND JIFFY STAND (1 OF 2) FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS FUEL TANK - FLHR, FLHRC AND FLHRXS AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC EXHAUST SYSTEM (1 OF 2)
10053	FENDERS, REAR (1 OF 2)
10065	BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS FENDERS, FRONT CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC

WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10)
WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8)

WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)

	WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SWITCHES (1 OF 2) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
10076	BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS
10080	COOLANT DISTRIBUTION - AIR-COOLED
10100033	FAIRING, LOWERS, AIR COOLED - FLHTCU
10100062	ENGINE MOUNTS AND STABILIZER LINK
10103	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
10147	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ WHEELS, REAR WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8)

	WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
10177	ALTERNATOR AND REGULATOR ELECTRONIC CONTROL MODULE (ECM) AND COIL SENSORS AND SWITCHES, ENGINE FRAME AND JIFFY STAND (1 OF 2) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) EXHAUST SYSTEM (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8)

	WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
10183	TAIL LAMP (1 OF 2)
10200042	FORK BRACKETS, FRONT
10200052	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
10200059	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
10200060	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
10200061	TOUR-PAK (BOTTOM) (1 OF 2) TOUR-PAK (COVER)
10200062	TOUR-PAK (BOTTOM) (1 OF 2) TOUR-PAK (COVER) SADDLEBAGS - EXCEPT FLHRC (1 OF 4)
10200063	SADDLEBAGS - EXCEPT FLHRC (1 OF 4)
10200064	SADDLEBAGS - EXCEPT FLHRC (1 OF 4)
10200065	SADDLEBAGS - EXCEPT FLHRC (1 OF 4)
10200103	SADDLEBAGS - EXCEPT FLHRC (1 OF 4)
10200105	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
10200112	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
10200120	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
10200133	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)

10200134	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
10200141	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3) FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
10200142	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
10200147	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
10200154	TOUR-PAK (COVER)
10200155	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
10200156	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
10200205	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
10200217	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT GUARDS, SADDLEBAG
10200223	BRAKE LINES, FRONT - NON-ABS BRAKE LINES, FRONT - ABS FORK BRACKETS, FRONT
10200257	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
10200258	ROCKER ARM ASSEMBLY AND PUSHRODS
10200303	CYLINDERS, HEADS AND VALVES
10200308	ROCKER ARM ASSEMBLY AND PUSHRODS
10200343	CRANKCASE
10200349	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)

10200350	SHIFTER, GEAR WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
10200365	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
10200373	INDUCTION MODULE, FUEL
10200393	ENGINE MOUNTS AND STABILIZER LINK
10200400	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) LOOSE PARTS (3 OF 3)
10200408A	ENGINE MOUNTS AND STABILIZER LINK
10200414	COOLANT DISTRIBUTION - TWIN-COOLED™ COOLANT DISTRIBUTION - AIR-COOLED
10200422	COOLANT DISTRIBUTION - AIR-COOLED ALTERNATOR AND REGULATOR
10200429	FOOTBOARDS, OPERATOR
10200442	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)
10200446	ROCKER ARM ASSEMBLY AND PUSHRODS COOLING SYSTEM, ENGINE, TWIN-COOLED™ COOLING SYSTEM, ENGINE, AIR-COOLED
10200463	ENGINE MOUNTS AND STABILIZER LINK
10200503	ROCKER ARM ASSEMBLY AND PUSHRODS
10200533	SADDLEBAGS - EXCEPT FLHRC (1 OF 4)
10200546	FRAME AND JIFFY STAND (2 OF 2)
10200569	EXHAUST SYSTEM (1 OF 2)
10264	CLUTCH CONTROL FRAME AND JIFFY STAND (1 OF 2)
10334	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3)
10340B	BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS
10344	COOLANT DISTRIBUTION - TWIN-COOLED™ COOLANT DISTRIBUTION - AIR-COOLED

	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
10395	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
10396	FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS FUEL TANK - FLHR, FLHRC AND FLHRXS
10400034	SADDLEBAGS - EXCEPT FLHRC (1 OF 4) GUARDS, SADDLEBAG
10500008	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS
10500015	FENDERS, FRONT
10500017	FENDERS, REAR (2 OF 2) FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
10500022	FORK BRACKETS, FRONT
10500031	BELT, CHAIN AND SPROCKETS
10500036	FORK BRACKETS, FRONT
10500053	FOOTBOARDS, OPERATOR
10500069	ROCKER ARM ASSEMBLY AND PUSHRODS
10600007	BRAKE LINES, FRONT - ABS BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS
1062	PRIMARY HOUSING BRAKE LINES AND MODULE, REAR - ABS FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
10800023	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
10800025A	FRAME AND JIFFY STAND (2 OF 2)
10800028	BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS
10800052	COOLING SYSTEM, ENGINE, TWIN-COOLED™ COOLING SYSTEM, ENGINE, AIR-COOLED

	COOLANT DISTRIBUTION - TWIN-COOLED™ COOLANT DISTRIBUTION - AIR-COOLED RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
10800078	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
10800109	COOLING SYSTEM, ENGINE, TWIN-COOLED™ COOLING SYSTEM, ENGINE, AIR-COOLED
10800111	COOLING SYSTEM, ENGINE, TWIN-COOLED™ COOLING SYSTEM, ENGINE, AIR-COOLED
10900005	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3) FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
10900015A	CYLINDERS, HEADS AND VALVES EXHAUST SYSTEM (1 OF 2)
10900037	SADDLEBAGS - FLHRC
10991A	TRANSMISSION GEARS
11000010	TRANSMISSION BEARINGS AND COVERS
11000050	BRAKE CONTROL, REAR
11000101	SHIFTER, GEAR TRANSMISSION BEARINGS AND COVERS
11000134	CRANKCASE
11000139	PRIMARY HOUSING
11036	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
11081A	TRANSMISSION GEARS
11082A	TRANSMISSION GEARS
11100038	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
11100050	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
11100051	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
11100057	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
11100066	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU,

	FLTRX AND FLTRXS (1 OF 2)
11100068	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT GUARDS, SADDLEBAG
11100115	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
11100152	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS
11100195	LICENSE PLATE BRACKETS
11105	TRANSMISSION HOUSING, COVER AND OIL PAN PRIMARY HOUSING
11120	TRANSMISSION HOUSING, COVER AND OIL PAN
11132A	ROCKER ARM ASSEMBLY AND PUSHRODS TRANSMISSION BEARINGS AND COVERS
11143	CLUTCH
11145A	ROCKER ARM ASSEMBLY AND PUSHRODS
11150	SHIFTER, GEAR
11161	TRANSMISSION BEARINGS AND COVERS
11177A	PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107 PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 114
11201	TRANSMISSION GEARS
11207A	TRANSMISSION GEARS
11289A	SENSORS AND SWITCHES, ENGINE TRANSMISSION HOUSING, COVER AND OIL PAN
11293	ROCKER ARM ASSEMBLY AND PUSHRODS

	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
11304	FOOTBOARDS AND FOOTPEGS, PASSENGER
11323A	FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS FUEL TANK - FLHR, FLHRC AND FLHRXS
11389	SHIFTER, GEAR
11437	FENDERS, FRONT
11519	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
11543	ANTENNAS
11575	SHIFTER, GEAR
11599A	TRANSMISSION GEARS
11600001	BRAKE LINES, FRONT - ABS BRAKE LINES AND MODULE, REAR - ABS
11600009	BRAKE LINES, FRONT - ABS BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS
11650	COVERS AND AIR DEFLECTORS
11668	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
11686	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
11687	FENDERS, REAR (1 OF 2)
11692	COOLANT DISTRIBUTION - TWIN-COOLED™ COOLANT DISTRIBUTION - AIR-COOLED
11700005	FAIRING, LOWERS, AIR COOLED - FLHTCU
11779	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8)

	WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8)
11843	BELT, CHAIN AND SPROCKETS WHEELS, REAR
11848	WHEELS, REAR
11891	FENDERS, REAR (1 OF 2)
11900010	CRANKCASE SENSORS AND SWITCHES, ENGINE
11900021	BRAKE CONTROL, REAR
11900090	COOLING SYSTEM, ENGINE, TWIN-COOLED™ COOLING SYSTEM, ENGINE, AIR-COOLED
11900092	COOLING SYSTEM, ENGINE, AIR-COOLED TRANSMISSION BEARINGS AND COVERS
11900103	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
11900116	ROCKER ARM ASSEMBLY AND PUSHRODS
11902	BRAKE CONTROL, REAR
11936	EXHAUST SYSTEM (1 OF 2)
12000005	FAIRING, LOWERS, AIR COOLED - FLHTCU
12052A	PRIMARY HOUSING
12074	TRANSMISSION BEARINGS AND COVERS
12077	TRANSMISSION GEARS
12100007	BRAKE LINES AND MODULE, REAR - ABS
12100017	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
12100018	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
12100020	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
12100023	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
12100034	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)

12100043	TURN SIGNALS, FRONT - FLHRXS
12100069	INDUCTION MODULE, FUEL
12100077	CLUTCH CONTROL
12100113	COOLANT DISTRIBUTION - AIR-COOLED
12100154	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
12102	BRAKE CONTROL, REAR
12200025	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
12200064	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
12200092	FENDERS, FRONT
12200144	TRANSMISSION GEARS
12200147A	FRAME AND JIFFY STAND (2 OF 2)
12200170	ELECTRONIC CONTROL MODULE (ECM) AND COIL
12200172	ELECTRONIC CONTROL MODULE (ECM) AND COIL
12400034	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
12400099	CRANKCASE
12400100	LICENSE PLATE BRACKETS
12500002	WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)

	WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
12500014	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
12500018	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
12600016	COOLANT DISTRIBUTION - AIR-COOLED
12600031	FOOTBOARDS AND FOOTPEGS, PASSENGER
12600032	HANDLEBAR
12600049	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
12600067	FRAME AND JIFFY STAND (2 OF 2) INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
12600070	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)

12600071	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
12600073	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
12600197	FRAME AND JIFFY STAND (2 OF 2)
12700090	COOLANT DISTRIBUTION - AIR-COOLED
12700091	COOLANT DISTRIBUTION - TWIN-COOLED™
1332	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)
14000827	FRAME AND JIFFY STAND (2 OF 2) LABELS
14001396	LABELS
14001593	LABELS
14001734	LABELS
14001735	LABELS
14001736	LABELS
14001737	LABELS
14001738	LABELS
14001739	BATTERY LABELS
14001773	LABELS
14001799	AIR CLEANER LABELS
14001800	LABELS
14001859	LABELS
14100073	FUEL TANK TRIM (1 OF 2)
14100074	FUEL TANK TRIM (1 OF 2)
14100075	FUEL TANK TRIM (1 OF 2)

14100076	FUEL TANK TRIM (1 OF 2)
14100079	FUEL TANK TRIM (1 OF 2) FUEL TANK TRIM (2 OF 2)
14100080	FUEL TANK TRIM (1 OF 2) FUEL TANK TRIM (2 OF 2)
14100083	INTERCOM CONTROL POD
14100085	INTERCOM CONTROL POD
14100087	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
14100158	SWITCHES (1 OF 2)
14100230	FENDERS, FRONT
14100231	FENDERS, FRONT
14100232	FENDERS, FRONT
14100254	SADDLEBAGS - FLHRC
14100279	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)
14100587	FUEL TANK TRIM (2 OF 2)
14100588	FUEL TANK TRIM (2 OF 2)
14100615	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)
14100764	HORN
14100765	FUEL TANK TRIM (2 OF 2)
14100766	FUEL TANK TRIM (2 OF 2)
14100835	FUEL TANK TRIM (2 OF 2) FUEL TANK TRIM (2 OF 2) FUEL TANK TRIM (2 OF 2)
14100836	FUEL TANK TRIM (2 OF 2) FUEL TANK TRIM (2 OF 2) FUEL TANK TRIM (2 OF 2)
14100855	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)
14101013	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS

14101018	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)
14101019	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)
14101073	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS
14101144BAGH	FUEL TANK TRIM (2 OF 2)
14101144BAGI	FUEL TANK TRIM (2 OF 2)
14101145BAGH	FUEL TANK TRIM (2 OF 2)
14101145BAGI	FUEL TANK TRIM (2 OF 2)
14101371	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)
14148-86	LABELS
14151-02	LABELS
15341-08	INTERCOM CONTROL POD
15342-06A	LABELS
15346-98A	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
15368-01A	BATTERY LABELS
15370-01A	LABELS
15385-08	LABELS
16200265	ENGINE ASSEMBLY - Milwaukee-eight™ 107
16200362	ENGINE ASSEMBLY - Milwaukee-eight™ 107
16200364	ENGINE ASSEMBLY - Milwaukee-eight™ 114
16200365	ENGINE ASSEMBLY - Milwaukee-eight™ 114
16200582	ENGINE ASSEMBLY - Milwaukee-eight™ 114
16219-09	ENGINE MOUNTS AND STABILIZER LINK
16300005	ENGINE MOUNTS AND STABILIZER LINK

16400005	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
16400041	ENGINE MOUNTS AND STABILIZER LINK
16400042	ENGINE MOUNTS AND STABILIZER LINK
16400049	INDUCTION MODULE, FUEL
16500305	CYLINDERS, HEADS AND VALVES
16500326	CYLINDERS, HEADS AND VALVES
16500332	CYLINDERS, HEADS AND VALVES
16500388	CYLINDERS, HEADS AND VALVES
16500393	CYLINDERS, HEADS AND VALVES
16500498	CYLINDERS, HEADS AND VALVES
16500508	CYLINDERS, HEADS AND VALVES
16574-99A	CRANKCASE TRANSMISSION HOUSING, COVER AND OIL PAN
16583-00A	TRANSMISSION BEARINGS AND COVERS PRIMARY HOUSING
16589-99A	CYLINDERS, HEADS AND VALVES CRANKCASE CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
16800063	CYLINDERS, HEADS AND VALVES
16800075	CYLINDERS, HEADS AND VALVES
16800080	CYLINDERS, HEADS AND VALVES
16800095	CYLINDERS, HEADS AND VALVES
16800100	CYLINDERS, HEADS AND VALVES
17300053	ROCKER ARM ASSEMBLY AND PUSHRODS
17300055	ROCKER ARM ASSEMBLY AND PUSHRODS
17300059A	ROCKER ARM ASSEMBLY AND PUSHRODS
17369-06	PRIMARY HOUSING
1775	PRIMARY HOUSING
17900030	ROCKER ARM ASSEMBLY AND PUSHRODS
17900031	ROCKER ARM ASSEMBLY AND PUSHRODS

17900034	ROCKER ARM ASSEMBLY AND PUSHRODS
17900035	ROCKER ARM ASSEMBLY AND PUSHRODS
17945-36B	ROCKER ARM ASSEMBLY AND PUSHRODS
17947-36	ROCKER ARM ASSEMBLY AND PUSHRODS
17948-99A	ROCKER ARM ASSEMBLY AND PUSHRODS
17968-99	ROCKER ARM ASSEMBLY AND PUSHRODS
18000016	CYLINDERS, HEADS AND VALVES
18000034	CYLINDERS, HEADS AND VALVES
18100043	CYLINDERS, HEADS AND VALVES
18100044	CYLINDERS, HEADS AND VALVES
18100045	CYLINDERS, HEADS AND VALVES
18100060	CYLINDERS, HEADS AND VALVES
18400073B	CYLINDERS, HEADS AND VALVES
18538-99C	ROCKER ARM ASSEMBLY AND PUSHRODS
21900048	PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 114
21900049	PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107
22000031	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
22000060	PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107
22000061	PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 114
22097-99	PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107 PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 114
221	TRANSMISSION BEARINGS AND COVERS
22100006	PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107 PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 114
24100045A	PISTONS AND FLYWHEEL ASSEMBLY -

	Milwaukee-eight™ 114
24100057A	PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107
24100080	CRANKCASE
24400120	CRANKCASE
24400180	TRANSMISSION HOUSING, COVER AND OIL PAN
24400215	TRANSMISSION BEARINGS AND COVERS
2445	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
2446	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS
2452	WINDSHIELD - FLHR AND FLHRC
24605-07	CRANKCASE
24754-75A	PRIMARY HOUSING
2478	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
2479	BRAKE CONTROL, REAR
2482	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)
2531	FENDERS, FRONT
25400103	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25400133	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25400190	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25400257	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25500013	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25566-06	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)

25600078	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
25600110	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
2563	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3) FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
25673-06	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25675-06	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25700178	TRANSMISSION BEARINGS AND COVERS
25700362	ROCKER ARM ASSEMBLY AND PUSHRODS
25700367	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
25700370	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
25700372B	ROCKER ARM ASSEMBLY AND PUSHRODS
25700378	PRIMARY HOUSING
25700388	PRIMARY HOUSING
25700409	ROCKER ARM ASSEMBLY AND PUSHRODS
25700410	ROCKER ARM ASSEMBLY AND PUSHRODS
25700411	ROCKER ARM ASSEMBLY AND PUSHRODS
25700418	PRIMARY HOUSING
25700425	ROCKER ARM ASSEMBLY AND PUSHRODS
25700433	CRANKCASE
25700452	TRANSMISSION HOUSING, COVER AND OIL PAN
25700453	TRANSMISSION HOUSING, COVER AND OIL PAN
25700455	PRIMARY HOUSING
25700467	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
25700489	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS

25700491	PRIMARY HOUSING
25700520	ROCKER ARM ASSEMBLY AND PUSHRODS
25700637	ROCKER ARM ASSEMBLY AND PUSHRODS
25700650	PRIMARY HOUSING
25700679	PRIMARY HOUSING
25700691	ROCKER ARM ASSEMBLY AND PUSHRODS
25700693	ROCKER ARM ASSEMBLY AND PUSHRODS
25700698	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
25700729	CYLINDERS, HEADS AND VALVES
25700730	CYLINDERS, HEADS AND VALVES
25700731	ROCKER ARM ASSEMBLY AND PUSHRODS CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
25700746	PRIMARY HOUSING
25700830	PRIMARY HOUSING
25700870	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS
25700902	PRIMARY HOUSING
25700904	PRIMARY HOUSING
25701000	ROCKER ARM ASSEMBLY AND PUSHRODS
25701144	PRIMARY HOUSING
25701145	PRIMARY HOUSING
25729-06	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25731-06	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25734-06	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25736-06	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25737-06	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25738-06	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
25800048	TRANSMISSION BEARINGS AND COVERS
25800049	TRANSMISSION BEARINGS AND COVERS

25800054	TRANSMISSION BEARINGS AND COVERS
25800055	TRANSMISSION BEARINGS AND COVERS
25800056	TRANSMISSION BEARINGS AND COVERS
25800057	TRANSMISSION BEARINGS AND COVERS
25800109	TRANSMISSION BEARINGS AND COVERS
25800110	TRANSMISSION BEARINGS AND COVERS
26210-99	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
26352-95A	CRANKCASE
26400-82B	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
2647B	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) SWITCHES (1 OF 2)
26600048	COOLANT DISTRIBUTION - TWIN-COOLED™
26780-05A	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26800005	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26800006	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26800007A	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26800008	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
26800009	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
26800019A	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26800020A	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26800021	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26800077	COOLANT DISTRIBUTION - TWIN-COOLED™

26800092	COOLANT DISTRIBUTION - AIR-COOLED
26900008	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26900009	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26900010	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26900014	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26900016	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26900017	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26900018	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26900088	COOLANT DISTRIBUTION - TWIN-COOLED™
26900114	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26900115	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
26900117	COOLING SYSTEM, ENGINE, TWIN-COOLED™ COOLING SYSTEM, ENGINE, AIR-COOLED
26900133	COOLING SYSTEM, ENGINE, TWIN-COOLED™
26900144	COOLING SYSTEM, ENGINE, TWIN-COOLED™ COOLING SYSTEM, ENGINE, AIR-COOLED
26900145	COOLING SYSTEM, ENGINE, TWIN-COOLED™
2692WB	TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC
2708A	FRAME AND JIFFY STAND (1 OF 2) FOOTBOARDS AND FOOTPEGS, PASSENGER HANDLEBAR
27200025	INDUCTION MODULE, FUEL
2724	TOUR-PAK (BOTTOM) (1 OF 2)
27291-09A	FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS FUEL TANK - FLHR, FLHRC AND FLHRXS EVAPORATIVE EMISSIONS COMPONENTS

27297-09A	EVAPORATIVE EMISSIONS COMPONENTS
27298-09A	EVAPORATIVE EMISSIONS COMPONENTS
27300082	INDUCTION MODULE, FUEL
27300086	INDUCTION MODULE, FUEL
27300087	INDUCTION MODULE, FUEL
27300121	INDUCTION MODULE, FUEL
27300122	INDUCTION MODULE, FUEL
2731W	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT LOOSE PARTS (2 OF 3) LOOSE PARTS (3 OF 3)
27400015	INDUCTION MODULE, FUEL
27400019	INDUCTION MODULE, FUEL
27440-09A	FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS FUEL TANK - FLHR, FLHRC AND FLHRXS
27444-00Y	STARTER MOTOR
27715-07	EVAPORATIVE EMISSIONS COMPONENTS
27809-10	EXHAUST SYSTEM (1 OF 2)
29000106	AIR CLEANER
29000108	AIR CLEANER
29000120	AIR CLEANER
29000121	AIR CLEANER
29000216	AIR CLEANER
29000301	AIR CLEANER
29000302	AIR CLEANER
29108-08	AIR CLEANER LABELS
29200003	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
29200007	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)

29200034	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
29200035	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
29200039	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
29200041BYM	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200041DH	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200061	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200062	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200063	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200071	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200072	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200073	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200075	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200078	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200080	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200081	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
29200087	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
29200088	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
2921A	WINDSHIELD - FLHR AND FLHRC
29269-83A	AIR CLEANER
2933	NACELLE AND HEADLAMP - FLHR, FLHRC AND

	FLHRXS (1 OF 2)
29400183	ROCKER ARM ASSEMBLY AND PUSHRODS
29400210	ROCKER ARM ASSEMBLY AND PUSHRODS
29400211	AIR CLEANER
29400212	AIR CLEANER
29465-08B	INDUCTION MODULE, FUEL AIR CLEANER
2952A	SEATS
2968	TOUR-PAK (BOTTOM) (1 OF 2)
29900038	ALTERNATOR AND REGULATOR
29900041	CRANKCASE ALTERNATOR AND REGULATOR
29900042A	ALTERNATOR AND REGULATOR
2995	FENDERS, REAR (1 OF 2) FAIRING, LOWERS, AIR COOLED - FLHTCU
3022A	TAIL LAMP (1 OF 2) TAIL LAMP (1 OF 2)
3050	ALTERNATOR AND REGULATOR
3057	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
3061	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS TAIL LAMP AND TURN SIGNALS, REAR - FLHT
3088	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
31400053	STARTER MOTOR
3143	FOOTBOARDS AND FOOTPEGS, PASSENGER
3152	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
31586-07	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
31600012	ELECTRONIC CONTROL MODULE (ECM) AND COIL
31600017	ELECTRONIC CONTROL MODULE (ECM) AND COIL
31600018B	ELECTRONIC CONTROL MODULE (ECM) AND COIL
31600023A	ELECTRONIC CONTROL MODULE (ECM) AND COIL
31600078A	ELECTRONIC CONTROL MODULE (ECM) AND COIL
31600079	ELECTRONIC CONTROL MODULE (ECM) AND COIL
31694-90	STARTER MOTOR BATTERY
3225	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
32306-08	THROTTLE CONTROL
3249	TRANSMISSION BEARINGS AND COVERS
3265A	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC WINDSHIELD - FLHR AND FLHRC
32700010	SWITCHES (1 OF 2)
32700015	WHEELS, FRONT, CAST (1 OF 2)
32700017	WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, LACED
32700046	EXHAUST SYSTEM (1 OF 2)

32700048	SENSORS AND SWITCHES, ENGINE
32700050A	THROTTLE CONTROL
32700054	SENSORS AND SWITCHES, ENGINE
32700065	INDUCTION MODULE, FUEL SENSORS AND SWITCHES, ENGINE
32700066	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
3275	INDUCTION MODULE, FUEL SENSORS AND SWITCHES, ENGINE
33085-74	FOOTBOARDS AND FOOTPEGS, PASSENGER
33389-07	SHIFTER, GEAR
33409-06B	SHIFTER, GEAR
33600088	SHIFTER, GEAR
33600091	SHIFTER, GEAR
33600188	SHIFTER, GEAR
33600243	SHIFTER, GEAR
33600304	SHIFTER, GEAR
33719-79B	SHIFTER, GEAR
33895-82E	SHIFTER, GEAR
33900172	SHIFTER, GEAR
33900175	SHIFTER, GEAR
33926-06B	TRANSMISSION HOUSING, COVER AND OIL PAN SWITCHES (1 OF 2)
34064-00C	SHIFTER, GEAR
34091-08	TRANSMISSION GEARS
34611-65A	SHIFTER, GEAR
34700084	TRANSMISSION HOUSING, COVER AND OIL PAN
34800025	TRANSMISSION HOUSING, COVER AND OIL PAN
34800031	TRANSMISSION HOUSING, COVER AND OIL PAN
34800038	TRANSMISSION HOUSING, COVER AND OIL PAN

34987-06	SHIFTER, GEAR
35000152	BELT, CHAIN AND SPROCKETS
35000178	TRANSMISSION GEARS
35000179	TRANSMISSION GEARS
35000198A	SHIFTER, GEAR TRANSMISSION GEARS
35081-06	SHIFTER, GEAR
35082-07	SHIFTER, GEAR TRANSMISSION BEARINGS AND COVERS
35087-99A	TRANSMISSION BEARINGS AND COVERS
35114-02	CRANKCASE
35122-06A	TRANSMISSION GEARS
35124-06	TRANSMISSION GEARS
35126-06	TRANSMISSION GEARS
3514	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)
35186-06	SHIFTER, GEAR TRANSMISSION BEARINGS AND COVERS
35187-06	SHIFTER, GEAR
35200021	CRANKCASE
35200057	PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 107 PISTONS AND FLYWHEEL ASSEMBLY - Milwaukee-eight™ 114
35202-06	TRANSMISSION GEARS
35204-06	TRANSMISSION GEARS
35210-06	SHIFTER, GEAR
35217-06	SHIFTER, GEAR
35222-06	SHIFTER, GEAR
35223-06	SHIFTER, GEAR
35241-06	BELT, CHAIN AND SPROCKETS

35242-06	BELT, CHAIN AND SPROCKETS
35243-06	SHIFTER, GEAR
35244-06	SHIFTER, GEAR
35249-06A	SHIFTER, GEAR
35259-06	SHIFTER, GEAR
35260-06B	TRANSMISSION BEARINGS AND COVERS
3536	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
35467-06C	TRANSMISSION GEARS
35600094	TRANSMISSION GEARS
35600103	TRANSMISSION GEARS
3560WA	FENDERS, FRONT
3561WC	FENDERS, FRONT
3563	BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS HORN
35654-06	TRANSMISSION BEARINGS AND COVERS
3576	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)
35807-06	TRANSMISSION GEARS
35811-06	TRANSMISSION GEARS
35814-06	TRANSMISSION GEARS
3588	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
3594	BELT, CHAIN AND SPROCKETS FRAME AND JIFFY STAND (1 OF 2)
3601	GUARDS, SADDLEBAG
3607	SHOCK ABSORBERS, REAR

3612	FENDERS, FRONT LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
3622	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS SWITCHES (2 OF 2)
36300026	TRANSMISSION GEARS
3633	SEATS
3634	ELECTRONIC CONTROL MODULE (ECM) AND COIL FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS FUEL TANK - FLHR, FLHRC AND FLHRXS WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) BATTERY
36500052	PRIMARY HOUSING
36500075	PRIMARY HOUSING
3655A	WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, LACED FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
3656	SADDLEBAGS - EXCEPT FLHRC (1 OF 4)
36700113	CLUTCH CONTROL
36700128A	CLUTCH CONTROL
36700130	CLUTCH CONTROL
36700131	CLUTCH CONTROL
36700132	CLUTCH CONTROL
36700133A	CLUTCH CONTROL
36700169A	CLUTCH CONTROL
36700171A	CLUTCH CONTROL
36706-01K	CLUTCH
36731-91	CLUTCH
3676	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS

	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
36805-06	TRANSMISSION BEARINGS AND COVERS
3684	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT FENDERS, REAR (1 OF 2) GUARDS, SADDLEBAG
3699D	TRANSMISSION HOUSING, COVER AND OIL PAN
37000032A	CLUTCH
37000033	CLUTCH
37000034	CLUTCH
37000083	CLUTCH
37000168	CLUTCH
37000169	CLUTCH
37000217	CLUTCH
37000218	CLUTCH
37000219	CLUTCH
37000254A	CLUTCH
37000258	CLUTCH
37000270A	CLUTCH
37000295	CLUTCH
37065-06A	TRANSMISSION BEARINGS AND COVERS
37200128	CLUTCH CONTROL
37200129	CLUTCH CONTROL
37200131B	TRANSMISSION BEARINGS AND COVERS CLUTCH CONTROL
37200146	CLUTCH CONTROL
37200347B	CLUTCH CONTROL
37200348B	CLUTCH CONTROL
37200349B	CLUTCH CONTROL
37200352B	CLUTCH CONTROL

37496-90A	CLUTCH
3767B	TOUR-PAK (BOTTOM) (1 OF 2) LOOSE PARTS (2 OF 3) LOOSE PARTS (2 OF 3)
3787	COVERS AND AIR DEFLECTORS FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
37904-90	CLUTCH
37909-90	CLUTCH
38722-94	WINDSHIELD - FLHR AND FLHRC
3892	BELT, CHAIN AND SPROCKETS
3901	SEATS
3910	TOUR-PAK (BOTTOM) (1 OF 2)
3929	EXHAUST SYSTEM (1 OF 2)
3976	ROCKER ARM ASSEMBLY AND PUSHRODS
3983	TRANSMISSION HOUSING, COVER AND OIL PAN
3987	FRAME AND JIFFY STAND (1 OF 2) TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS
40024-09A	BELT, CHAIN AND SPROCKETS
40037-07	BELT, CHAIN AND SPROCKETS
40100041	BELT, CHAIN AND SPROCKETS
40100064	BELT, CHAIN AND SPROCKETS
40100076	BELT, CHAIN AND SPROCKETS
40217-09	BELT, CHAIN AND SPROCKETS WHEELS, REAR
40278-09	BELT, CHAIN AND SPROCKETS WHEELS, REAR
40558-82	WHEELS, FRONT, LACED
40592-09	WHEELS, REAR
40615-08	WHEELS, REAR
40900026	WHEELS, REAR
40900033	WHEELS, REAR

40900391	WHEELS, REAR
40900484A	WHEELS, REAR
40900503	WHEELS, REAR
40901-05	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)
40960-09	WHEELS, FRONT, LACED
40999-87	WHEELS, FRONT, CAST (1 OF 2) WHEELS, REAR
41000341E	SWITCHES (1 OF 2)
41000342E	SWITCHES (1 OF 2)
41000351E	SWITCHES (1 OF 2)
41000599	ELECTRONIC CONTROL MODULE (ECM) AND COIL
41000668	ELECTRONIC CONTROL MODULE (ECM) AND COIL
41052-09	WHEELS, REAR
41100061B	BRAKE LINES AND MODULE, REAR - ABS
41123-79	WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, LACED WHEELS, REAR
41229-08	WHEELS, REAR
41242-08	WHEELS, REAR
4132	CLUTCH CONTROL BRAKE CONTROL, FRONT
41349-07	WHEELS, REAR
41445-09	WHEELS, REAR
41500017	WHEELS, FRONT, CAST (2 OF 2)
41500018	WHEELS, FRONT, CAST (2 OF 2)
41500019	WHEELS, FRONT, CAST (2 OF 2)
41500020	WHEELS, FRONT, CAST (2 OF 2)
41500146	WHEELS, FRONT, CAST (2 OF 2)
41547-07A	WHEELS, FRONT, CAST (1 OF 2)

	WHEELS, FRONT, LACED
41600029A	BRAKE LINES, FRONT - NON-ABS BRAKE LINES, FRONT - ABS FORK BRACKETS, FRONT
41600031	CLUTCH CONTROL BRAKE LINES, FRONT - ABS
41600032	BRAKE LINES, FRONT - ABS
41600078	BRAKE LINES AND MODULE, REAR - ABS
41600091	BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS
41700028A	BRAKE CONTROL, REAR
41700195	BRAKE CONTROL, REAR
41700321	BRAKE CONTROL, FRONT
41700367	CLUTCH CONTROL BRAKE CONTROL, FRONT
41746-09	WHEELS, REAR
41750-06B	CLUTCH CONTROL BRAKE CONTROL, FRONT BRAKE LINES, FRONT - NON-ABS BRAKE LINES, FRONT - ABS BRAKE CONTROL, REAR BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS
41751-06A	CLUTCH CONTROL BRAKE CONTROL, FRONT BRAKE LINES, FRONT - NON-ABS BRAKE LINES, FRONT - ABS BRAKE CONTROL, REAR BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS
41783-08	BRAKE LINES, FRONT - NON-ABS BRAKE LINES, FRONT - ABS
41800011	BRAKE LINES, FRONT - ABS
41800012	BRAKE CONTROL, REAR BRAKE LINES AND MODULE, REAR - ABS
41800174	BRAKE LINES, FRONT - NON-ABS
41800175	BRAKE CONTROL, REAR
41800314	BRAKE LINES, FRONT - ABS

41800340	BRAKE LINES, FRONT - NON-ABS
41800510	BRAKE LINES, FRONT - ABS
41800541	BRAKE LINES AND MODULE, REAR - ABS
41800542	BRAKE LINES, FRONT - ABS
41800543	BRAKE LINES, FRONT - ABS
41800544	BRAKE LINES, FRONT - ABS
41800545	BRAKE LINES, FRONT - ABS
41800546	BRAKE LINES, FRONT - ABS
41800547	BRAKE LINES, FRONT - ABS
41808-08A	WHEELS, FRONT, LACED
41809-08A	WHEELS, FRONT, LACED
41810-08B	WHEELS, REAR
41819-02	WHEELS, REAR
41852-08B	BRAKE CALIPER, REAR
41854-08	BRAKE CALIPER, FRONT
41900-08	WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, LACED
41901-08	WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, LACED
4194	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
42018-09	WHEELS, REAR
42276-06A	BRAKE CONTROL, FRONT
42300001	WHEELS, FRONT, CAST (1 OF 2)
4240	FORK BRACKETS, FRONT HANDLEBAR
42410-04	BRAKE CONTROL, REAR
42416-06	BRAKE CONTROL, REAR

42444-04	BRAKE CONTROL, REAR
42460-80B	BRAKE CONTROL, REAR
42849-08	BRAKE CALIPER, FRONT
42851-06	BRAKE CALIPER, FRONT
42852-06A	BRAKE CALIPER, FRONT
42853-06	BRAKE LINES, FRONT - NON-ABS BRAKE LINES, FRONT - ABS BRAKE CALIPER, REAR
42854-06	BRAKE CONTROL, FRONT BRAKE CONTROL, REAR
42855-06D	BRAKE CONTROL, FRONT
42856-06	CLUTCH CONTROL BRAKE CONTROL, FRONT
42857-06B	BRAKE CONTROL, FRONT
42858-06A	CLUTCH CONTROL BRAKE CONTROL, FRONT BRAKE CONTROL, REAR
42859-06B	BRAKE CONTROL, FRONT
42860-06B	CLUTCH CONTROL BRAKE CONTROL, FRONT
42861-06B	BRAKE CONTROL, FRONT
42862-06B	BRAKE CONTROL, FRONT
42863-06	BRAKE CALIPER, REAR
42865-06B	BRAKE CALIPER, REAR
42867-06A	BRAKE CALIPER, REAR
42889-06	BRAKE CONTROL, REAR
42932-08A	BRAKE CONTROL, REAR
42934-08	BRAKE CONTROL, REAR
42937-08C	BRAKE CONTROL, REAR
43000002	WHEELS, REAR
43027-08	BRAKE CALIPER, FRONT
43085-97	WHEELS, FRONT, LACED

43099-09	WHEELS, REAR
43100013	WHEELS, FRONT, CAST (1 OF 2)
43109-09A	WHEELS, FRONT, CAST (1 OF 2)
43118-92A	WHEELS, FRONT, LACED
4312C	BATTERY
43147-40	WHEELS, FRONT, LACED
43200027	WHEELS, REAR
43230-09	WHEELS, REAR
43241-05	WHEELS, FRONT, LACED
43300019	WHEELS, FRONT, CAST (2 OF 2)
43300027	WHEELS, FRONT, CAST (2 OF 2)
43300386	WHEELS, FRONT, CAST (2 OF 2)
43300484	WHEELS, FRONT, CAST (2 OF 2)
43300508	WHEELS, FRONT, CAST (2 OF 2)
43567-92	WHEELS, REAR
44006-09	WHEELS, REAR
44023-08	BRAKE CALIPER, FRONT
44080-08C	BRAKE CALIPER, REAR
44089-08	BRAKE CALIPER, REAR
44160-00	BRAKE CALIPER, FRONT
4419	STARTER MOTOR
44341-08	BRAKE CALIPER, FRONT
44551-08F	BRAKE CONTROL, FRONT
44854-05	FORK BRACKETS, FRONT
44985-10D	BRAKE CONTROL, FRONT
45041-01A	FOOTBOARDS AND FOOTPEGS, PASSENGER
45138-08A	CLUTCH CONTROL BRAKE CONTROL, FRONT
45400102	FORK, FRONT - STANDARD (1 OF 2)

45400103	FORK, FRONT - STANDARD (1 OF 2)
45400104	FORK, FRONT - LOW
45400105	FORK, FRONT - LOW
45400181	FORK, FRONT - STANDARD (1 OF 2)
45400182	FORK, FRONT - STANDARD (1 OF 2)
45400195	FORK, FRONT - STANDARD (1 OF 2)
45400196	FORK, FRONT - STANDARD (1 OF 2)
45400197	FORK, FRONT - STANDARD (1 OF 2)
45400198	FORK, FRONT - STANDARD (1 OF 2)
45500109	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
45500111	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
45500117	FORK, FRONT - STANDARD (2 OF 2) FORK, FRONT - LOW
45500118	FORK, FRONT - STANDARD (2 OF 2) FORK, FRONT - LOW
45500132	FORK, FRONT - STANDARD (2 OF 2) FORK, FRONT - LOW
45500175B	FORK, FRONT - STANDARD (1 OF 2)
45500176B	FORK, FRONT - STANDARD (1 OF 2)
45500337	FORK, FRONT - STANDARD (2 OF 2)
45500338	FORK, FRONT - LOW
45500339	FORK, FRONT - STANDARD (2 OF 2)
45500340	FORK, FRONT - LOW
45500341	FORK, FRONT - STANDARD (2 OF 2) FORK, FRONT - LOW
45500396	FORK, FRONT - STANDARD (2 OF 2) FORK, FRONT - LOW
45500397	FORK, FRONT - STANDARD (2 OF 2) FORK, FRONT - LOW
45500398	FORK, FRONT - STANDARD (2 OF 2) FORK, FRONT - LOW

45500421	FORK, FRONT - STANDARD (2 OF 2) FORK, FRONT - LOW
45500424	FORK, FRONT - STANDARD (2 OF 2) FORK, FRONT - LOW
45500456	FORK, FRONT - STANDARD (2 OF 2)
45600003	FORK BRACKETS, FRONT
45600054	FORK BRACKETS, FRONT
45600055	FORK BRACKETS, FRONT
45700009	FORK BRACKETS, FRONT FRAME AND JIFFY STAND (2 OF 2)
45700020A	FORK BRACKETS, FRONT
45800023	FORK BRACKETS, FRONT
45900024	FORK BRACKETS, FRONT
45900091A	FORK BRACKETS, FRONT
4597M	BRAKE CALIPER, REAR
4612	EVAPORATIVE EMISSIONS COMPONENTS FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
46508-01	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
46509-01	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
46513-01	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
46514-01A	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
46515-01	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
46555-03B	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
46615-06	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
4688	ENGINE MOUNTS AND STABILIZER LINK

	FRAME AND JIFFY STAND (1 OF 2) FOOTBOARDS, OPERATOR
4694	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
47000088BHP	FRAME AND JIFFY STAND (2 OF 2)
4705	COOLING SYSTEM, ENGINE, AIR-COOLED ELECTRONIC CONTROL MODULE (ECM) AND COIL TRANSMISSION BEARINGS AND COVERS TRANSMISSION HOUSING, COVER AND OIL PAN EXHAUST SYSTEM (1 OF 2) BATTERY
4706	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
4718A	TRANSMISSION BEARINGS AND COVERS
47200080	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
47200081	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
47200217	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
47200261	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
47200262	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
47200266	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
47200275	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
47200278	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
47200281	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
47200302A	FOOTBOARDS, OPERATOR
4740A	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
4741A	ROCKER ARM ASSEMBLY AND PUSHRODS TRANSMISSION BEARINGS AND COVERS TRANSMISSION HOUSING, COVER AND OIL PAN

	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
47540-11	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
47549-09A	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
47584-09	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
4775	HORN
4790	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
48079-09BHP	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
4813A	ELECTRONIC CONTROL MODULE (ECM) AND COIL PRIMARY HOUSING
4816A	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
4820A	PRIMARY HOUSING
4822A	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
48487-02	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
48489-02	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
4856	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
4867	ANTENNAS
4890	TRANSMISSION BEARINGS AND COVERS BRAKE LINES, FRONT - NON-ABS BRAKE LINES, FRONT - ABS BRAKE CALIPER, REAR
49050-09A	FRAME AND JIFFY STAND (1 OF 2)
4916	FOOTBOARDS AND FOOTPEGS, PASSENGER
49184-09A	FRAME AND JIFFY STAND (1 OF 2)

4924	FRAME AND JIFFY STAND (1 OF 2) SEATS GUARDS, SADDLEBAG GUARDS, SADDLEBAG
49725-07A	FRAME AND JIFFY STAND (1 OF 2)
50000083	FRAME AND JIFFY STAND (2 OF 2)
50000097	FRAME AND JIFFY STAND (2 OF 2)
50000141A	FRAME AND JIFFY STAND (2 OF 2)
50015-74A	FRAME AND JIFFY STAND (1 OF 2)
50075-07A	FRAME AND JIFFY STAND (1 OF 2)
50126-08B	FRAME AND JIFFY STAND (1 OF 2)
50208-04	FOOTBOARDS AND FOOTPEGS, PASSENGER
50245-07	FRAME AND JIFFY STAND (1 OF 2)
50345-04	FOOTBOARDS AND FOOTPEGS, PASSENGER
50350-04	FOOTBOARDS AND FOOTPEGS, PASSENGER
50500143	FOOTBOARDS AND FOOTPEGS, PASSENGER
50500145	FOOTBOARDS AND FOOTPEGS, PASSENGER
50500146	FOOTBOARDS AND FOOTPEGS, PASSENGER
50500332A	FOOTBOARDS AND FOOTPEGS, PASSENGER FOOTBOARDS AND FOOTPEGS, PASSENGER
50500334A	FOOTBOARDS AND FOOTPEGS, PASSENGER FOOTBOARDS AND FOOTPEGS, PASSENGER
50500339	FOOTBOARDS, OPERATOR
50500360	FOOTBOARDS, OPERATOR
50500460A	FOOTBOARDS AND FOOTPEGS, PASSENGER
50500462A	FOOTBOARDS AND FOOTPEGS, PASSENGER
50500876	FOOTBOARDS AND FOOTPEGS, PASSENGER
50518-09	FOOTBOARDS, OPERATOR
50600067	BRAKE CONTROL, REAR
50600244	BRAKE CONTROL, REAR
50600245	BRAKE CONTROL, REAR

50606-06	FOOTBOARDS AND FOOTPEGS, PASSENGER
50613-91A	FOOTBOARDS AND FOOTPEGS, PASSENGER
50614-06	FOOTBOARDS, OPERATOR
50621-06	FOOTBOARDS, OPERATOR
50622-09A	FOOTBOARDS, OPERATOR
50674-05	FOOTBOARDS, OPERATOR
50683-04	FOOTBOARDS, OPERATOR
50684-11	FOOTBOARDS, OPERATOR
50688-04	FOOTBOARDS, OPERATOR
50689-11	FOOTBOARDS, OPERATOR
50899-99A	FOOTBOARDS AND FOOTPEGS, PASSENGER
50912-72	FOOTBOARDS AND FOOTPEGS, PASSENGER
50933-86A	FOOTBOARDS AND FOOTPEGS, PASSENGER
51068-08	FOOTBOARDS, OPERATOR
51070-08	FOOTBOARDS, OPERATOR
5118	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2) TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS TURN SIGNALS, FRONT - FLHRXS TURN SIGNALS, FRONT - FLHRXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) SWITCHES, HANDLEBAR, LEFT - FLHRXS SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS

515	BRAKE CONTROL, REAR
52000033	SEATS
52000038	SEATS
52000060	SEATS
52000122	SEATS
52000142	SEATS
52000174	SEATS
52000334	SEATS
52000464	SEATS
5210	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
5211	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
52300053	SEATS LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3)
52300121	SEATS
52300122	SEATS
52300123	SEATS
52300127	SEATS
52320-11	SEATS
52400015	SEATS
52400016	SEATS
52400017	SEATS
52400018	SEATS
52400021	SEATS
52400054	SEATS
52400067	SEATS
52400099	SEATS

52400116	SEATS
52441-95	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
52719-10	FOOTBOARDS AND FOOTPEGS, PASSENGER
53000090	TOUR-PAK (COVER)
53000091	TOUR-PAK (BOTTOM) (1 OF 2)
53000123	TOUR-PAK (BOTTOM) (2 OF 2)
53000124	TOUR-PAK (BOTTOM) (2 OF 2)
53000125	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
53000132	TOUR-PAK (BOTTOM) (2 OF 2)
53000137	TOUR-PAK (COVER)
53000138	TOUR-PAK (BOTTOM) (2 OF 2)
53000139	TOUR-PAK (BOTTOM) (2 OF 2) TOUR-PAK (COVER)
53000140	TOUR-PAK (BOTTOM) (2 OF 2) TOUR-PAK (COVER)
53000141A	TOUR-PAK (COVER)
53000308	TOUR-PAK (BOTTOM) (2 OF 2)
53000311	TOUR-PAK (BOTTOM) (2 OF 2) LOOSE PARTS (2 OF 3) LOOSE PARTS (2 OF 3)
53000346	TOUR-PAK (BOTTOM) (2 OF 2)
53000347	TOUR-PAK (COVER)
53000370	TOUR-PAK (COVER)
53436-97	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
53598-88A	TOUR-PAK (BOTTOM) (1 OF 2) LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3)
53665-87	TOUR-PAK (COVER)

53734-06	TOUR-PAK (BOTTOM) (1 OF 2)
53735-06	TOUR-PAK (BOTTOM) (1 OF 2)
53788-06	TOUR-PAK (BOTTOM) (1 OF 2)
53789-06	TOUR-PAK (BOTTOM) (1 OF 2)
53919-04B	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3)
54000093	SHOCK ABSORBERS, REAR
54000094	SHOCK ABSORBERS, REAR
54000095	SHOCK ABSORBERS, REAR
54000096	SHOCK ABSORBERS, REAR
54000113	SHOCK ABSORBERS, REAR
54000114	SHOCK ABSORBERS, REAR
54000141	SHOCK ABSORBERS, REAR
54321-85	WHEELS, FRONT, LACED WHEELS, REAR
54395-10	SEATS
55800091	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
55800099	HANDLEBAR
55800305	HANDLEBAR
55800332	HANDLEBAR
55800378	HANDLEBAR
55800436	HANDLEBAR
55800734	HANDLEBAR
55800761	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
55800767	HANDLEBAR
55900050	HANDLEBAR
55900051	HANDLEBAR
55900052	HANDLEBAR

55900071	HANDLEBAR
55900078	HANDLEBAR
55900079	HANDLEBAR
55918-08	HANDLEBAR
55924-14	HANDLEBAR
56000011	MIRRORS
56000012	MIRRORS
56000015	MIRRORS
56000016	MIRRORS
56100075	THROTTLE CONTROL
56159-73	HANDLEBAR
56161-83A	HANDLEBAR
56163-93	HANDLEBAR
56209-10	THROTTLE CONTROL
56248-08	THROTTLE CONTROL
56249-10	THROTTLE CONTROL
56250-10	THROTTLE CONTROL
56304-08	THROTTLE CONTROL
56667-04	THROTTLE CONTROL
57000017	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
57000064BYM	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
57000064DH	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
57000065BYM	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
57000065DH	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
57000169A	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)

57000170	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
57000172	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
57000175	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
57000186	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
57000299	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
57000302	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS
57000305	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
57000374BYM	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
57000374DH	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
57000377	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
57000383	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
57000412	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS
57000501	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
57000504	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
57000508	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS
57100098	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100099	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
57100101	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100102A	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100103	FAIRING, LOWERS, AIR COOLED - FLHTCU

57100104	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100107	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
57100108A	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100109	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
57100110A	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100111	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
57100112	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
57100113	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
57100114	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
57100147	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100148	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100149	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100150	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100151	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100152	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100153	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100154	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100155	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100161	FAIRING, LOWERS, AIR COOLED - FLHTCU

57100162	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100164	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100165	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100166	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100167	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2) FAIRING, LOWERS, AIR COOLED - FLHTCU
57100170	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100171	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100172	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100187	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100188	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100200	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100208	FAIRING, LOWERS, AIR COOLED - FLHTCU
57100225	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57100227	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
57100247	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
57100256	FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (2 OF 2)
57200012	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)

57200017	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
57200063	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
57200064	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
57200065	COVERS AND AIR DEFLECTORS LOOSE PARTS (2 OF 3)
57200066	COVERS AND AIR DEFLECTORS LOOSE PARTS (2 OF 3)
57300063	MIRRORS
57400001	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) LOOSE PARTS (1 OF 3) LOOSE PARTS (1 OF 3)
57400002	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) LOOSE PARTS (1 OF 3)
57400003	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) LOOSE PARTS (3 OF 3) LOOSE PARTS (3 OF 3)
57400004	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) LOOSE PARTS (3 OF 3)
57400005	WINDSHIELD - FLHR AND FLHRC
57400058	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) LOOSE PARTS (1 OF 3) LOOSE PARTS (3 OF 3)
57400187	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)

57400191	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
57400250	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) LOOSE PARTS (1 OF 3)
57400260	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2) LOOSE PARTS (2 OF 3)
57400262	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2) LOOSE PARTS (2 OF 3)
57400302	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2) LOOSE PARTS (2 OF 3)
57400303	LOOSE PARTS (2 OF 3)
57400305	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2) LOOSE PARTS (2 OF 3)
57400308	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2) LOOSE PARTS (3 OF 3)
57400309	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2) LOOSE PARTS (3 OF 3)
57400441	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
57450-14	HANDLEBAR
57451-14	HANDLEBAR
57638-08	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3)
57668-10	WINDSHIELD - FLHR AND FLHRC LOOSE PARTS (3 OF 3)
57978-00	TOUR-PAK (BOTTOM) (1 OF 2)
57994-94	WINDSHIELD - FLHR AND FLHRC WINDSHIELD - FLHR AND FLHRC LOOSE PARTS (3 OF 3) LOOSE PARTS (3 OF 3)

58002-09A	LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3) LOOSE PARTS (3 OF 3) LOOSE PARTS (3 OF 3)
58084-94	WINDSHIELD - FLHR AND FLHRC
58088-94	WINDSHIELD - FLHR AND FLHRC
58167-09A	COVERS AND AIR DEFLECTORS
58169-09	COVERS AND AIR DEFLECTORS
5817	SHIFTER, GEAR
58193-94	WINDSHIELD - FLHR AND FLHRC WINDSHIELD - FLHR AND FLHRC
58325-06	WINDSHIELD - FLHR AND FLHRC LOOSE PARTS (3 OF 3)
58327-06	WINDSHIELD - FLHR AND FLHRC
5837A	TRANSMISSION GEARS
58406-75A	WINDSHIELD - FLHR AND FLHRC
58408-75A	WINDSHIELD - FLHR AND FLHRC
58416-77A	WINDSHIELD - FLHR AND FLHRC
58417-77	WINDSHIELD - FLHR AND FLHRC
58428-94	WINDSHIELD - FLHR AND FLHRC
58431-94	WINDSHIELD - FLHR AND FLHRC
58702-09A	FENDERS, REAR (1 OF 2) FENDERS, REAR (1 OF 2)
58888-98A	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
58900009	FENDERS, FRONT
58900032	FENDERS, FRONT
59174-99	FENDERS, REAR (2 OF 2)
59211-74A	FENDERS, FRONT
59259-90	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS
59292-94	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT

	LOOSE PARTS (2 OF 3) LOOSE PARTS (3 OF 3)
59481-00	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
59482-00	FORK, FRONT - STANDARD (1 OF 2) FORK, FRONT - LOW
59500046	FENDERS, REAR (1 OF 2)
59581-05	FENDERS, REAR (2 OF 2) FENDERS, REAR (2 OF 2) FENDERS, REAR (2 OF 2)
59600003	FENDERS, FRONT
59600006	FENDERS, FRONT
59600008	FENDERS, REAR (2 OF 2)
59600009	FENDERS, FRONT
59600011	FENDERS, FRONT
59600029	FENDERS, REAR (2 OF 2)
59731-09A	FENDERS, REAR (1 OF 2)
59739-09	FENDERS, REAR (2 OF 2)
59749-06	FENDERS, REAR (2 OF 2)
59768-97	SEATS
59778-06	FENDERS, REAR (2 OF 2)
59786-01	FENDERS, REAR (2 OF 2)
59788-01	FENDERS, REAR (2 OF 2)
59818-09	FENDERS, REAR (2 OF 2)
59988-72A	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS
601	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
6019	HORN
60254-07	GUARDS, SADDLEBAG
6026	SEATS
60328-98B	TRANSMISSION HOUSING, COVER AND OIL PAN PRIMARY HOUSING

6036	COVERS AND AIR DEFLECTORS
60386-09	BELT, CHAIN AND SPROCKETS
6054	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) LOOSE PARTS (2 OF 3)
60575-10A	FENDERS, REAR (1 OF 2)
60678-85	PRIMARY HOUSING
6072	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
60800006	EVAPORATIVE EMISSIONS COMPONENTS
60800026	EVAPORATIVE EMISSIONS COMPONENTS
60900036	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2)
60907-09	LICENSE PLATE BRACKETS
60909-09	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS
60918-10A	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS
6101	CLUTCH CONTROL BRAKE CONTROL, FRONT
61011-04A	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
61012-04A	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
61015-04A	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
61029-92A	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3)
61081-92	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) SWITCHES (1 OF 2)

	TOUR-PAK (BOTTOM) (1 OF 2)
6109	HORN
61100065	FUEL TANK - FLHR, FLHRC AND FLHRXS
61100099	FUEL TANK - FLHR, FLHRC AND FLHRXS
61100120	FUEL TANK - FLHR, FLHRC AND FLHRXS
61100123	FUEL TANK - FLHR, FLHRC AND FLHRXS
61109-85D	FUEL TANK - FLHR, FLHRC AND FLHRXS CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3)
61112-08	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3)
6113	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
6116	FRAME AND JIFFY STAND (1 OF 2)
6119	WINDSHIELD - FLHR AND FLHRC
61192-96A	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
61200022	INDUCTION MODULE, FUEL FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS FUEL TANK - FLHR, FLHRC AND FLHRXS
61213-04A	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
61268-08	FUEL TANK - FLHR, FLHRC AND FLHRXS
6127	ENGINE MOUNTS AND STABILIZER LINK
61270-08	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3)
61272-92C	FUEL TANK - FLHR, FLHRC AND FLHRXS
61274-92	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3)
61278-08A	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3)

61300095	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
61300096	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
61300097	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
61300098	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
61300467	AIR CLEANER
61300523A	HORN
61300626A	HORN
61300922	AIR CLEANER
61300934	AIR CLEANER
61300935	AIR CLEANER
61300936	AIR CLEANER
61313-88	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2)
61356-08	FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS
61400057	FENDERS, FRONT
61400063	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
61400064	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
61400077	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
61400080	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
61400081	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
61400135	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF

	2)
61400159	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2) LOOSE PARTS (3 OF 3) LOOSE PARTS (3 OF 3)
61400173	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
61400198	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
61400498	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
61402-08	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
6150W	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) SWITCHES (1 OF 2)
62152-08	FUEL TANK TRIM (1 OF 2) LOOSE PARTS (1 OF 3)
62153-08	FUEL TANK TRIM (1 OF 2) LOOSE PARTS (1 OF 3)
6220W	BRAKE CONTROL, REAR LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
62228-08C	FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS FUEL TANK - FLHR, FLHRC AND FLHRXS
62229-08B	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
62241-08	FUEL TANK TRIM (1 OF 2) LOOSE PARTS (1 OF 3)
62242-08	FUEL TANK TRIM (1 OF 2) LOOSE PARTS (1 OF 3)
62243-08	FUEL TANK TRIM (1 OF 2) LOOSE PARTS (1 OF 3)
6235	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
62372-09	TRANSMISSION HOUSING, COVER AND OIL PAN

62400052	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
62400055	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
62400126	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
62400178	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
62400182	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
62400205	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
62400206	CAMSHAFTS AND CAMSHAFT COVER (2 OF 2)
62435-11	FUEL TANK TRIM (1 OF 2)
62437-11	FUEL TANK TRIM (1 OF 2)
62519-03	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
62700089	CRANKCASE
62700117	CRANKCASE
62700136	TRANSMISSION HOUSING, COVER AND OIL PAN
62700141	SENSORS AND SWITCHES, ENGINE
62700143	COOLANT DISTRIBUTION - AIR-COOLED
62700144	COOLANT DISTRIBUTION - AIR-COOLED
62700146	COOLING SYSTEM, ENGINE, AIR-COOLED TRANSMISSION BEARINGS AND COVERS
62700150	TRANSMISSION BEARINGS AND COVERS
62700161	COOLING SYSTEM, ENGINE, AIR-COOLED
62700196	COOLANT DISTRIBUTION - AIR-COOLED
62775-08	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
62800004	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
62800013	CRANKCASE SENSORS AND SWITCHES, ENGINE
62800028	COOLING SYSTEM, ENGINE, AIR-COOLED

62908-08	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
6294	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
6333	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
63731-99A	CRANKCASE
6416	BRAKE CONTROL, REAR
6421	BRAKE CONTROL, REAR
64900235A	EXHAUST SYSTEM (1 OF 2)
64900236A	EXHAUST SYSTEM (2 OF 2)
64900237	EXHAUST SYSTEM (1 OF 2) EXHAUST SYSTEM (1 OF 2)
64900238	EXHAUST SYSTEM (2 OF 2) EXHAUST SYSTEM (2 OF 2)
64900239	EXHAUST SYSTEM (1 OF 2)
64900240	EXHAUST SYSTEM (2 OF 2)
64900765A	EXHAUST SYSTEM (1 OF 2)
64900766A	EXHAUST SYSTEM (2 OF 2)
64900767	EXHAUST SYSTEM (1 OF 2)
64900768	EXHAUST SYSTEM (2 OF 2)
64900769	EXHAUST SYSTEM (1 OF 2)
64900770	EXHAUST SYSTEM (2 OF 2)
64900814	EXHAUST SYSTEM (2 OF 2)
64900815	EXHAUST SYSTEM (1 OF 2)
64900816	EXHAUST SYSTEM (2 OF 2)
64900817	EXHAUST SYSTEM (1 OF 2)
6497HW	SHIFTER, GEAR
6532	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT

65324-83B	EXHAUST SYSTEM (1 OF 2)
65325-83A	EXHAUST SYSTEM (1 OF 2)
65328-83A	EXHAUST SYSTEM (1 OF 2)
65400176	EXHAUST SYSTEM (2 OF 2)
65400177	EXHAUST SYSTEM (2 OF 2)
65400178	EXHAUST SYSTEM (2 OF 2)
65400179	EXHAUST SYSTEM (2 OF 2)
65400483	EXHAUST SYSTEM (2 OF 2)
65400484	EXHAUST SYSTEM (2 OF 2)
65400485	EXHAUST SYSTEM (2 OF 2)
65400486	EXHAUST SYSTEM (2 OF 2)
65400545	EXHAUST SYSTEM (2 OF 2)
65400546	EXHAUST SYSTEM (2 OF 2)
65400547	EXHAUST SYSTEM (2 OF 2)
65400548	EXHAUST SYSTEM (2 OF 2)
65500042	EXHAUST SYSTEM (2 OF 2)
65500043	EXHAUST SYSTEM (2 OF 2)
65600176	EXHAUST SYSTEM (2 OF 2)
65600177	EXHAUST SYSTEM (2 OF 2)
65600178	EXHAUST SYSTEM (2 OF 2)
65723-85	EXHAUST SYSTEM (1 OF 2)
65724-85A	EXHAUST SYSTEM (1 OF 2)
65900012	EXHAUST SYSTEM (2 OF 2)
65900015	EXHAUST SYSTEM (2 OF 2)
6590HW	SHOCK ABSORBERS, REAR
6594	WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, LACED
66000010A	BATTERY
66000066	BATTERY

66000116	BATTERY
66010-97D	BATTERY
66047-05	EXHAUST SYSTEM (2 OF 2)
66048-09A	COVERS AND AIR DEFLECTORS
66051-08	BATTERY
66250-09	COVERS AND AIR DEFLECTORS LOOSE PARTS (1 OF 3)
66290-06	TRANSMISSION HOUSING, COVER AND OIL PAN
66373-06	SWITCHES (1 OF 2)
66861-09B	EXHAUST SYSTEM (1 OF 2)
66881-09	EXHAUST SYSTEM (1 OF 2)
67015-02	TURN SIGNALS, FRONT - FLHRXS
6702	SHIFTER, GEAR FRAME AND JIFFY STAND (1 OF 2)
6703	SEATS FENDERS, REAR (1 OF 2) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) TOUR-PAK (BOTTOM) (1 OF 2) TOUR-PAK (BOTTOM) (1 OF 2) TOUR-PAK (COVER) LOOSE PARTS (2 OF 3) LOOSE PARTS (2 OF 3)
67208-08	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
67266-94	FENDERS, REAR (2 OF 2) FENDERS, REAR (2 OF 2) FENDERS, REAR (2 OF 2) TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
67341-04B	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
67493-08	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
67621-94	AUXILIARY/FOG LAMPS AND TURN SIGNALS,

	FRONT - FLHR AND FLHRC WINDSHIELD - FLHR AND FLHRC
67700060	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
67700062	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
67700065	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
67700105	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2)
67700199	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67700204	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
67700205	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
67712-83B	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
67716-60C	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
67717-01	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
67721-48	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)

	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
67726-08	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
67778-60A	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
67780-60A	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
67800093	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
67800101	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
67800103	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)
67800104	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)
67800109	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)
67800132	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
67800147	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800148	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800254A	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)
67800299	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800300	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800301	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)

67800302	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800303	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800471	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800483	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
67800484	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
67800485	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
67800512	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800513	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800703	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800704	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800708	TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS
67800709	TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS
67800847	TAIL LAMP (1 OF 2)
67800900	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
67800906	TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800908	TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
67800938	TURN SIGNALS, FRONT - FLHRXS
67822-88	TURN SIGNALS, FRONT - FLHRXS
67875-11	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
6789	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)

67900009	LICENSE PLATE BRACKETS
67900065	SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
67900066	SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
67900067	SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
67900068	SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
67900120	GUARDS, SADDLEBAG
67900213A	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS
67900256	SADDLEBAGS - EXCEPT FLHRC (2 OF 4) SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
67900445	LICENSE PLATE BRACKETS
68000020	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)
68000021	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)
68000022	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)
68000036	TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS
68000037	TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS
68000038	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
68000056	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68026-99	TAIL LAMP (1 OF 2) TAIL LAMP (1 OF 2)
68042-99	CRANKCASE
68066-99A	TAIL LAMP (1 OF 2) TAIL LAMP (1 OF 2)
68120-00	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
68140-04	TAIL LAMP (1 OF 2)
68142-04	TAIL LAMP (1 OF 2)

68163-84	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2) TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS TURN SIGNALS, FRONT - FLHRXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)
68167-04	TAIL LAMP (1 OF 2) TAIL LAMP (1 OF 2)
68168-89A	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2) TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
68245-03	TAIL LAMP (1 OF 2) TAIL LAMP (1 OF 2)
68253-08A	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
68296-99A	TAIL LAMP (2 OF 2) TAIL LAMP (2 OF 2)
68331-02	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)
68369-03	TAIL LAMP (2 OF 2)
68370-03A	TAIL LAMP (2 OF 2) TAIL LAMP (2 OF 2) TAIL LAMP (2 OF 2)
68414-05A	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68440-86	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC
68452-86	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC

	TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC
68497-07	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
68505-90	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68506-92	TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC
68519-68A	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68550-09	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)
68558-03	TAIL LAMP (2 OF 2)
68559-07	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
68572-64B	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC
68629-05	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
68712-94A	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68713-94A	TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC
68720-62	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68721-62	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68725-62A	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)
68742-09	TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC
68765-94A	TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC

68766-94	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68767-94	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68776-06	TURN SIGNALS, FRONT - FLHRXS
68821-00	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)
68830-99A	TAIL LAMP (2 OF 2) TAIL LAMP (2 OF 2)
68838-06	TURN SIGNALS, FRONT - FLHRXS
68846-09	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68847-09	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
68881-01	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
68904-00	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2) TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS TURN SIGNALS, FRONT - FLHRXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (2 OF 2)
68905-00	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
68956-07	SWITCHES (1 OF 2)
68958-07C	SWITCHES (1 OF 2)
68973-00	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2) TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS TURN SIGNALS, FRONT - FLHRXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)

68997-09	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)
69000083	HORN
69060-90H	HORN
69062-91A	HORN
69120-91	HORN
69123-92A	HORN
69187-03A	TAIL LAMP (2 OF 2)
69200031A	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
69200032	WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
69200109	WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
69200121	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
69200122	INSTRUMENTS - FLTRU, FLTRX AND FLTRXS WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
69200124	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
69200125	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3) FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2)
69200127	INTERCOM CONTROL POD
69200128	TAIL LAMP AND TURN SIGNALS, REAR - FLHT

	TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI) TAIL LAMP (2 OF 2)
69200129	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
69200130	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
69200131	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
69200135	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
69200136	WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
69200138	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
69200139	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
69200170	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
69200171	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
69200172	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
69200173	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
69200174	ELECTRONIC CONTROL MODULE (ECM) AND COIL BATTERY
69200175	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8)
69200178	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS
69200179	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2)
69200183	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69200184	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69200185	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69200186	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69200187	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69200188	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69200189	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69200190	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69200191	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10)

	WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69200193	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)
69200194	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
69200199	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
69200201	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8)
69200202A	COVERS AND AIR DEFLECTORS WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8)
69200203A	COVERS AND AIR DEFLECTORS WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8)
69200205	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8)

	WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)
69200210	ANTENNAS LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
69200211	ANTENNAS LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
69200212	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
69200214	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10)
69200215	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10)
69200220	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
69200221	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
69200222	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
69200223	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
69200224	FORK BRACKETS, FRONT HANDLEBAR
69200225	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
69200226	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
69200237	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
69200238	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69200247	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
69200248	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
69200254	WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
69200255	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF

	2)
69200256	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
69200257	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
69200258	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
69200271	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
69200272	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
69200284A	WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8)
69200285	WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
69200293	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8)

	WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
69200294	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (5 OF 8) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
69200295	ANTENNAS
69200298	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
69200305	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS
69200306	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS
69200307	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS THROTTLE CONTROL
69200308	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS
69200311	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
69200312	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10)

	WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
69200313	ANTENNAS
69200336	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) LOOSE PARTS (1 OF 3)
69200337	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
69200529	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)
69200536	HANDLEBAR
69200629	WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
69200630	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS
69200631	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2)
69200700	WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF

	8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)
69200701	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
69200702	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
69200752	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
69200753	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
69200826	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
69200840	SENSORS AND SWITCHES, ENGINE
69201017	WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
69201018A	WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8)
69201119A	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10)
69201120A	WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8)
69201121A	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8)
69201122	WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8)
69201123A	WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
69201124A	WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8)

	WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8)
69201125A	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8)
69201126	WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8)
69201127A	WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8)

	WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8)
69201130	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) BATTERY
69201162	THROTTLE CONTROL
69201163	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)
69201164	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)

69201168	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)
69201178	ELECTRONIC CONTROL MODULE (ECM) AND COIL BATTERY
69201240	WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
69201286A	COOLANT DISTRIBUTION - AIR-COOLED
69201287	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8)
69201299	SENSORS AND SWITCHES, ENGINE
69201300	SENSORS AND SWITCHES, ENGINE
69201301	SENSORS AND SWITCHES, ENGINE WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69201302	SENSORS AND SWITCHES, ENGINE
69201307	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) BATTERY
69201390	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201391	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201392	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201393	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201394	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201395	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201396	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)

69201397	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201398	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201400	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69201401	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10)

	WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69201404	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69201405	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69201406	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69201407	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69201410	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)
69201411	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX

	(8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
69201414	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)
69201415	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8)
69201416	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201417	BRAKE LINES AND MODULE, REAR - ABS
69201423	ALTERNATOR AND REGULATOR WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
69201440	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8)
69201441	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201442	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8)

	WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
69201459	COVERS AND AIR DEFLECTORS WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8)
69201548	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
69201596	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8)
69201723	SWITCHES, HANDLEBAR, LEFT - FLHRXS
69201724	SWITCHES, HANDLEBAR, RIGHT - FLHRXS
69202097	WIRING HARNESS, ON BOARD DIAGNOSTICS (OBD) JUMPER (CHINA ONLY)
69202102	WIRING HARNESS, ON BOARD DIAGNOSTICS (OBD) JUMPER (CHINA ONLY)
69202108	WIRING HARNESS, ON BOARD DIAGNOSTICS (OBD) JUMPER (CHINA ONLY)
69202354	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8)

69202385	WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
69214-08	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3)
69241-08	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3)
69292-06	TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS
69293-06	TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS
69309-10	SWITCHES (1 OF 2)
69325-02	TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS TURN SIGNALS, FRONT - FLHRXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
69331-02	TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS TURN SIGNALS, FRONT - FLHRXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
69353-05	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
69377-10	FENDERS, REAR (2 OF 2)
69378-09	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)
69380-09BHP	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS
69490-07	SADDLEBAGS - EXCEPT FLHRC (1 OF 4)
69563-06	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2)
69587-07	TURN SIGNALS, FRONT - FLHRXS
69615-10	FENDERS, REAR (2 OF 2)
6982	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
69861-07	FORK, FRONT - STANDARD (1 OF 2)

69862-07	FORK, FRONT - STANDARD (1 OF 2)
6990	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
70291-89	WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
70292-89	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
70345-84	HANDLEBAR
7036	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS
7038	FOOTBOARDS, OPERATOR FOOTBOARDS AND FOOTPEGS, PASSENGER
703B	CRANKCASE
7041	FRAME AND JIFFY STAND (1 OF 2) AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2) EXHAUST SYSTEM (1 OF 2)
70493-08	WHEELS, FRONT, CAST (1 OF 2)
70494-08	WHEELS, FRONT, CAST (1 OF 2)
70522-06B	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC

	TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI) TAIL LAMP (2 OF 2)
70554-69	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
70631-08	BRAKE LINES AND MODULE, REAR - ABS WHEELS, FRONT, CAST (1 OF 2)
70681-09	COOLANT DISTRIBUTION - TWIN-COOLED™ COOLANT DISTRIBUTION - AIR-COOLED ELECTRONIC CONTROL MODULE (ECM) AND COIL EVAPORATIVE EMISSIONS COMPONENTS
70900117	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
70900118C	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
70900119B	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
70900120B	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
70900121C	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
70900122B	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
70900123B	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
70900124C	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
70900125B	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
70900126B	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
70900138	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3) FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)

70900161	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
70900162	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
70900163	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
70900164	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS
70900165	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
70900166	INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS INSTRUMENTS - FLTRU, FLTRX AND FLTRXS
70900167B	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
70900168A	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
70900169A	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
70900372	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS
70900373	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS
70900374	INSTRUMENT HOUSING - FLTRU, FLTRX AND FLTRXS
70900392BYM	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
70900392DH	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
70900465A	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3)
70900466	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND

	FLTRXS (2 OF 3)
70900744	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
70901-09	FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS FUEL TANK - FLHR, FLHRC AND FLHRXS
70999-09	FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS FUEL TANK - FLHR, FLHRC AND FLHRXS
7129	ANTENNAS
71294-08	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
7130W	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)
71310-94	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
71400005	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
71400006	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
71400007	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
71400010A	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2) SWITCHES (2 OF 2) SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
71400011A	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2) SWITCHES (2 OF 2)
71400012B	SWITCHES (2 OF 2)
71400013B	SWITCHES (2 OF 2)
71400015B	SWITCHES (2 OF 2) SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
71400016B	SWITCHES (2 OF 2)

	SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
71400017B	SWITCHES (2 OF 2)
71400031	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
71400044	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (3 OF 3)
71400073	SWITCHES (2 OF 2)
71400081	SWITCHES (2 OF 2)
71400112	SENSORS AND SWITCHES, ENGINE
71400126B	SWITCHES (2 OF 2)
71455-11	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
71500044	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS
71500045	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS
71500046	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2)
71500047	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS
71500048	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS
71500049	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS
71500050	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS
71500053	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS
71500055	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS
71500057	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS
71500063	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2)

71500094	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS
71500127C	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS
71500128B	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS
71500129C	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2)
71500338	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS
71500340	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS
71500342	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS
71500348	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2)
71500419A	SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS
71500473	SWITCHES, HANDLEBAR, LEFT - FLHRXS
71500475	SWITCHES, HANDLEBAR, RIGHT - FLHRXS
71500478	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2) SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2)
71500501	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2) SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (2 OF 2)
71517-11	SWITCHES (2 OF 2)
71517-11A	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
71522-08	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
71540-94B	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2) SWITCHES (1 OF 2)
7155	MIRRORS
71565-08	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)

71660-03A	SWITCHES (1 OF 2)
72008-05	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
72009-05	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
72010-05	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
72023-51E	BRAKE CONTROL, REAR SWITCHES (1 OF 2)
72038-71A	NACELLE AND HEADLAMP - FLHR, FLHRC AND

	FLHRXS (1 OF 2) NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
72039-71A	WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
72053-92	HANDLEBAR
72062-06	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72063-06	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
72064-06	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72065-06A	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10)

	WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72066-06A	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
72081-11	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72097-06	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
72098-06	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
72099-06	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
72106-94BK	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72110-06	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
72111-06	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™
72116-94BK	WIRING HARNESS, ON BOARD DIAGNOSTICS (OBD) JUMPER (CHINA ONLY)
72127-06	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72130-04	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72135-06	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
72145-06	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
72146-94	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72156-94	WIRING HARNESS, ON BOARD DIAGNOSTICS (OBD) JUMPER (CHINA ONLY)
72160-06	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
72161-06	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC
72166-07BK	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
72167-07BK	WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
72168-07	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3) FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI) TAIL LAMP (2 OF 2)

	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS INTERCOM CONTROL POD LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
72169-07	FRAME AND JIFFY STAND (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (5 OF 8)

WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10)
WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10)
WIRING HARNESS, MAIN, NON-ABS - FLHR (5 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8)
WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8)
WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)

	WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
72175-07BK	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72177-07BK	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ EXHAUST SYSTEM (1 OF 2)
72188-07BK	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
72189-04	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72190-94	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72194-94	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10)

	WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72195-94	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) WIRING HARNESS, ON BOARD DIAGNOSTICS (OBD) JUMPER (CHINA ONLY)
72209-11	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)

72213-94	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
72214-94	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
72222-11	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72226-11	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72227-11	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72232-96	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8)
72241-94A	HANDLEBAR
72249-94	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8)
72256-11	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10)

	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72264-94	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
72272-07	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
72283-09	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
72290-94	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)

72291-94	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8)
72294-94	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
72295-94	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8)
72296-95	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72298-95	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC

	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72299-95	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72308-97	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (9 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72330-95	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72331-95	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72343-10	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72344-10	EXHAUST SYSTEM (1 OF 2)
72345-02	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72350-11	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72356-95	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72364-06	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8)

	WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8)
72405-98BK	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8)
72412-97	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72414-07BK	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI) TAIL LAMP (2 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) INTERCOM CONTROL POD
72415-07GY	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72444-07GY	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3) FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) EXHAUST SYSTEM (1 OF 2)
72449-01	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF

	2) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
72450-01	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
72473-07	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)

	WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
72478-07BK	WIRING HARNESS, MAIN, NON-ABS - FLHR (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (5 OF 8)
72479-07BK	WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72484-08	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72485-07	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3) FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72486-08	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72488-07BK	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8)

	WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)
72489-07GY	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
72490-07GY	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
72493-07	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3) FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72494-07	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3) FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72499-07	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72511-07BK	FRAME AND JIFFY STAND (2 OF 2)
72512-07BK	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72518-01	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8)

	WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)
72519-09BK	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72527-01	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
72533-06	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8)

	WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72543-07BK	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8)
72544-07	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (6 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (6 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (6 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72557-07	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)

	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72560-07	SWITCHES, HANDLEBAR, LEFT - FLHRXS SWITCHES, HANDLEBAR, RIGHT - FLHRXS
72569-08	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (3 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (3 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (3 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (3 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (3 OF 8)
72575-11	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72589-09	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)

72594-11	SWITCHES (1 OF 2)
72606-08	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72607-08	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ WHEELS, FRONT, CAST (1 OF 2) WHEELS, REAR WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8)
72608-08	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ WHEELS, FRONT, CAST (1 OF 2) WHEELS, REAR WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8)
72609-08	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
72610-08	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
72632-10	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8)

	WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
72633-02	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8)
72639-10	WHEELS, FRONT, CAST (1 OF 2) WHEELS, REAR WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8)
72662-11	WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
72664-12A	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)
72666-12	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)

72720-07	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)
72721-07	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (1 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (4 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (4 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (4 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (4 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (4 OF 8)
72902-01BK	THROTTLE CONTROL THROTTLE CONTROL WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
72904-01BK	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS

72905-11	WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
72906-11	SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS
72907-11	TURN SIGNALS, FRONT - FLHRXS WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
72908-11	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2) TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) SWITCHES, HANDLEBAR, LEFT - EXCEPT FLHRXS SWITCHES, HANDLEBAR, LEFT - FLHRXS SWITCHES, HANDLEBAR, RIGHT - EXCEPT FLHRXS (1 OF 2) SWITCHES, HANDLEBAR, RIGHT - FLHRXS WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
72909-11	TURN SIGNALS, FRONT - FLHRXS TURN SIGNALS, FRONT - FLHRXS WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
72910-11	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2) AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2) TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS
72912-01BK	THROTTLE CONTROL WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2)
72914-01BK	WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8)
72990-01	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS THROTTLE CONTROL
72991-01	WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8)
73101-96BK	WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
73102-96BK	WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS

	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
73104-96BK	WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8)
73106-96BK	WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8)
73152-96BK	FENDERS, FRONT FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS TOUR-PAK (BOTTOM) (1 OF 2)
73152-96WE	FENDERS, FRONT LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
73153-96BK	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI)
73154-96BK	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC SWITCHES, HANDLEBAR, LEFT - FLHRXS TAIL LAMP (2 OF 2)
73156-96BK	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC SWITCHES, HANDLEBAR, RIGHT - FLHRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI) TAIL LAMP (2 OF 2)

73190-96	WIRING HARNESS, MAIN, NON-ABS - FLHR (1 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (1 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, FAIRING - FLTRU, FLTRX AND FLTRXS LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
73191-96	FENDERS, FRONT AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI) TAIL LAMP (2 OF 2) TAIL LAMP (2 OF 2) TOUR-PAK (BOTTOM) (1 OF 2) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
73213-07	FRAME AND JIFFY STAND (2 OF 2) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (2 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10)

	WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (7 OF 10) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (2 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (2 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
73254-10	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
73255-10	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS

7330	SHIFTER, GEAR
73301-04	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
73303-04	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8)
73304-04	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) BATTERY
73305-04	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8) BATTERY
73307-10	EXHAUST SYSTEM (1 OF 2)
73309-10	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
7331	MIRRORS
73314-10	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS
7340	TRANSMISSION BEARINGS AND COVERS TRANSMISSION GEARS
7352	MIRRORS
74112-98BK	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
74152-98	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8)

	WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
7415A	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
74190-98	WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, LACED
74191-98	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (8 OF 10) WIRING HARNESS, MAIN, NON-ABS - FLHR (7 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (2 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (7 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (7 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (7 OF 8)
74194-98	SENSORS AND SWITCHES, ENGINE
74196-04	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
74197-04	TAIL LAMP AND TURN SIGNALS, REAR - FLHT TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS

	TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS WIRING HARNESS, MAIN, NON-ABS - FLTRX (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (1 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (1 OF 8) WIRING HARNESS, FAIRING - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) WIRING HARNESS, CONSOLE - FLHR, FLHRC AND FLHRXS
7434	FENDERS, REAR (1 OF 2)
74402-05B	TRANSMISSION HOUSING, COVER AND OIL PAN
74408-08A	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
74700025	ALTERNATOR AND REGULATOR
7492	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
7495	FRAME AND JIFFY STAND (1 OF 2) HORN
7499	FENDERS, REAR (1 OF 2) FENDERS, REAR (1 OF 2)
75069-08D	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2)
75076-08B	FUEL PUMP - FLHR, FLHRC AND FLHRXS
75089-08	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
75205-08A	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
75229-08	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
75241-08	INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
75254-04A	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
75269-08	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS

75291-08A	FUEL PUMP - FLHR, FLHRC AND FLHRXS
7531	SEATS FENDERS, REAR (1 OF 2) GUARDS, SADDLEBAG
75322-09	FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 2) FUEL PUMP - FLHR, FLHRC AND FLHRXS
7549A	BRAKE CONTROL, REAR HORN
755	FENDERS, FRONT
7576	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
7586	TOUR-PAK (BOTTOM) (1 OF 2) SADDLEBAGS - EXCEPT FLHRC (1 OF 4)
7593	EXHAUST SYSTEM (1 OF 2)
7600	FENDERS, FRONT
76000055	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3) FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
76000075D	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
76000092	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
76000096	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2) LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
76000107A	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
76000127	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
76000160	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
76000161	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-

	PAK (2 OF 2)
76000164	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
76000165	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
76000172	TOUR-PAK (BOTTOM) (2 OF 2)
76000173	TOUR-PAK (BOTTOM) (2 OF 2)
76000174	TOUR-PAK (BOTTOM) (2 OF 2)
76000177	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
76000183	ANTENNAS
76000186	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
76000187	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
76000208	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (2 OF 2)
76000234	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
76000243	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000252	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000320	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000321	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
76000322	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
76000370A	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2

	OF 2)
76000373	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000374A	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000376BYM	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000376DH	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000398	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000409BYM	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
76000409DH	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
76000422	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000425	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000426BYM	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000426DH	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000436	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000453	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000454	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000455	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000456	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000458	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000460	FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000468	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2

	OF 2)
76000592	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000593	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000779	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
76000780	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
76000781	SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
76000783	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
76000784	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
76000785	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2)
76000789	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
76000799	ANTENNAS LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3) LOOSE PARTS (2 OF 3) LOOSE PARTS (3 OF 3)
76000944	FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 3)
7601	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2) GUARDS, SADDLEBAG
7606	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)

7624	FENDERS, FRONT
76259-86	ANTENNAS
76266-98A	INTERCOM CONTROL POD
7629	FENDERS, FRONT
76335-87	ANTENNAS
76353-00	LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2)
765	CRANKCASE
7651A	WINDSHIELD - FLHR AND FLHRC
7667	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2)
7686	SHIFTER, GEAR FENDERS, REAR (1 OF 2) GUARDS, SADDLEBAG
7687	MIRRORS
77117-10	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2) LOOSE PARTS (1 OF 3) LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3) LOOSE PARTS (2 OF 3)
77126-10	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)
77148-10	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (1 OF 2)

7716	RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™ FOOTBOARDS, OPERATOR FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2) TOUR-PAK (BOTTOM) (1 OF 2)
7744	TURN SIGNALS, FRONT - FLHRXS
7792	TRANSMISSION HOUSING, COVER AND OIL PAN BATTERY
780	SHIFTER, GEAR
7813A	WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, LACED
7825	BRAKE CONTROL, REAR
786A	PRIMARY HOUSING
787	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
7880	FENDERS, REAR (1 OF 2)
7888A	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
7889	NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2)
7900	WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2) WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2)
791A	PRIMARY HOUSING
7964	TAIL LAMP (1 OF 2) TAIL LAMP (1 OF 2)
7992	AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2) TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS WINDSHIELD - FLHR AND FLHRC
8020	WHEELS, REAR
8026K	TRANSMISSION GEARS
8041	TRANSMISSION GEARS

8042A	TRANSMISSION GEARS
8108	HORN
8126A	SADDLEBAGS - FLHRC
8135B	MIRRORS
8142	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS
8175	FAIRING, LOWERS, AIR COOLED - FLHTCU FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2)
8194	COVERS AND AIR DEFLECTORS
83936-09A	BELT, CHAIN AND SPROCKETS
84850-92	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3)
856A	SHIFTER, GEAR
882	COOLANT DISTRIBUTION - TWIN-COOLED™ COOLANT DISTRIBUTION - AIR-COOLED
8860	FOOTBOARDS AND FOOTPEGS, PASSENGER
8873	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
8885	CLUTCH
8963	TRANSMISSION BEARINGS AND COVERS
8967A	TRANSMISSION BEARINGS AND COVERS
8970A	TRANSMISSION BEARINGS AND COVERS
8972	CRANKCASE
90200411	SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
90200412	SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
90200413	SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
90200414	SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
90200415	SADDLEBAGS - EXCEPT FLHRC (2 OF 4)
90200467	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)

90200488	SADDLEBAGS - EXCEPT FLHRC (3 OF 4) LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3)
90200489	SADDLEBAGS - EXCEPT FLHRC (3 OF 4) LOOSE PARTS (1 OF 3)
90200499	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT GUARDS, SADDLEBAG
90200501	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT GUARDS, SADDLEBAG
90200504	GUARDS, SADDLEBAG
90200505	GUARDS, SADDLEBAG
90200506	GUARDS, SADDLEBAG
90200507	GUARDS, SADDLEBAG
90200519	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200520	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200521	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200522	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200543	GUARDS, SADDLEBAG
90200547	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT GUARDS, SADDLEBAG
90200549	GUARDS, SADDLEBAG
90200550	GUARDS, SADDLEBAG
90200611	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200684	SADDLEBAGS - FLHRC
90200685	SADDLEBAGS - FLHRC
90200899	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200900	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200901	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200902	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200903	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)

90200905	SADDLEBAGS - FLHRC
90200963	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200964	SADDLEBAGS - EXCEPT FLHRC (3 OF 4)
90200983DH	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983EEZ	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983EFC	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983EFF	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983EFH	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983EFW	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983EKA	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983EKG	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983EKP	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983EKR	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983ELD	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983ELE	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983ELG	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200983ELI	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984DH	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984EEZ	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984EFC	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984EFF	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984EFH	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984EFW	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984EKA	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984EKG	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984EKP	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984EKR	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984ELD	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)

90200984ELE	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984ELG	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90200984ELI	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90201295	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90201296	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90201319	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT GUARDS, SADDLEBAG
90201320	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT GUARDS, SADDLEBAG
90201540	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90201742	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90201743	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90201754DH	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT GUARDS, SADDLEBAG
90300024	SADDLEBAGS - EXCEPT FLHRC (4 OF 4)
90300030	TOUR-PAK (BOTTOM) (2 OF 2)
90300043	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (3 OF 3) INSTRUMENTS, FUEL TANK - FLHR, FLHRC AND FLHRXS NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (2 OF 2) SWITCHES (2 OF 2) TOUR-PAK (BOTTOM) (2 OF 2) SADDLEBAGS - EXCEPT FLHRC (4 OF 4) LOOSE PARTS (1 OF 3)
90300093	FUEL TANK - FLHR, FLHRC AND FLHRXS
90300096A	CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 3)
90300111	SWITCHES (2 OF 2) LOOSE PARTS (1 OF 3)
90300112	SWITCHES (2 OF 2) LOOSE PARTS (1 OF 3)
90382-98	SADDLEBAGS - FLHRC

90425-98	SADDLEBAGS - FLHRC
90439-10	SADDLEBAGS - FLHRC
90482-10	SADDLEBAGS - FLHRC
90520-07	FRAME AND JIFFY STAND (2 OF 2)
90820-93D	SHOCK ABSORBERS, REAR SADDLEBAGS - FLHRC LABELS
90821-74C	TOUR-PAK (COVER) LABELS
90844-80	TOUR-PAK (BOTTOM) (1 OF 2)
90869-85A	TOUR-PAK (COVER)
91140-09	FENDERS, REAR (2 OF 2)
91700025A	FORK, FRONT - STANDARD (2 OF 2) FORK, FRONT - LOW
91700034	SOUND SYSTEM - FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (2 OF 2) SOUND SYSTEM - FLTRU, FLTRX AND FLTRXS (2 OF 2)
91800058	INDUCTION MODULE, FUEL
91800064	ENGINE ASSEMBLY - Milwaukee-eight™ 107 ENGINE ASSEMBLY - Milwaukee-eight™ 114
91840-03B	MIRRORS
91845-03B	MIRRORS
92038-10	TOUR-PAK (BOTTOM) (1 OF 2) LOOSE PARTS (1 OF 3)
9208	FRAME AND FORK, REAR AND TOUR-PAK SUPPORT
9215	CRANKCASE CAMSHAFTS AND CAMSHAFT COVER (1 OF 2)
923	TOUR-PAK (COVER)
9231	PRIMARY HOUSING
9252A	WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, LACED WHEELS, REAR
92614-10	MIRRORS

92615-10	MIRRORS
9276B	BELT, CHAIN AND SPROCKETS WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, CAST (1 OF 2) WHEELS, FRONT, LACED WHEELS, REAR WHEELS, REAR
933	WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2) LOOSE PARTS (2 OF 3)
94000326	LOOSE PARTS (1 OF 3)
94000585	LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3) LOOSE PARTS (3 OF 3)
94000601	LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3) LOOSE PARTS (2 OF 3) LOOSE PARTS (3 OF 3)
94000634	LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3) LOOSE PARTS (2 OF 3) LOOSE PARTS (3 OF 3)
94000687	LOOSE PARTS (1 OF 3)
942	CAMSHAFTS AND CAMSHAFT COVER (1 OF 2) SENSORS AND SWITCHES, ENGINE
946	AIR CLEANER
95594-84C	WHEELS, FRONT, CAST (1 OF 2) WHEELS, REAR WHEELS, REAR
95595-84C	WHEELS, FRONT, LACED WHEELS, REAR
97011-16	LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3) LOOSE PARTS (3 OF 3)
9701A	TRANSMISSION BEARINGS AND COVERS
9819	WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTCU (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (5 OF 10)

	WIRING HARNESS, MAIN, NON-ABS - FLHR (5 OF 8) WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (5 OF 8) WIRING HARNESS, MAIN, NON-ABS - FLTRX (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (5 OF 8) WIRING HARNESS, MAIN, ABS - FLTRU (5 OF 8) BATTERY
9853	HANDLEBAR
9907	BRAKE CONTROL, REAR SWITCHES (1 OF 2)
99461-89	TOUR-PAK (BOTTOM) (1 OF 2) LOOSE PARTS (1 OF 3) LOOSE PARTS (2 OF 3)
9955	EXHAUST SYSTEM (1 OF 2)
9956	EXHAUST SYSTEM (1 OF 2)

Component Types and Introduction Dates

View interactive table

101A1 - Generic Nuts

7586	Unknown
8142	Unknown
7576	1990
7624	Unknown
7629	1990
7792	2012
8135B	Unknown
7813A	Unknown
3633	Unknown
8126A	2017
71660-03A	2018
76259-86	1986
7888A	Unknown
7900	Unknown

7825	Unknown
5210	1991
5211	Unknown
7687	2009
31694-90	1990
84850-92	1992
7992	2010
74408-08A	2008
7889	Unknown
7495	1994
10100062	2017
7499	Unknown
7492	1993
7340	Unknown
7880	Unknown
7330	Unknown
7331	Unknown
7964	Unknown
90844-80	1980
8020	2002
8108	Unknown
7744	1943
7593	1991
7549A	Unknown
10100033	2014
7601	1990

102A1 - Generic Screws

2446	Unknown
3536	Unknown

10200429	2017
2921A	2018
3983	2005
882	2000
3987	Unknown
68026-99	1999
10200414	2017
2452	Unknown
2563	2009
10200365	2015
10200141	2014
10200308	2017
10200142	2014
3622	Unknown
4741A	1994
10200147	2014
3050	Unknown
4916	Unknown
786A	Unknown
2692WB	Unknown
3655A	Unknown
3976	2004
3634	Unknown
3057	Unknown
3249	Unknown
4688	Unknown
4718A	1994
2479	Unknown
2933	Unknown

2478	2007
10200303	2017
35259-06	2006
10200373	2017
3022A	Unknown
10200400	2016
10200503	2017
43567-92	1992
10200156	2014
10200155	2014
3514	Unknown
10200154	2014
2482	Unknown
4597M	Unknown
791A	2007
942	1992
4694	2018
3561WC	Unknown
3612	2012
3275	2002
4890	Unknown
10200408A	2018
4705	2005
68452-86	1986
4132	Unknown
4740A	1994
10200120	2011
3656	Unknown
4240	Unknown

933	Unknown
3607	2009
2731W	Unknown
10200393	2017
2952A	2003
10200134	2014
3560WA	Unknown
2968	Unknown
3601	Unknown
10200133	2014
2647B	Unknown
4822A	1994
68120-00	2000
3061	Unknown
4924	Unknown
3576	2013
3594	1992
3088	Unknown
4856	Unknown
10200112	2014
2995	2018
2708A	Unknown
923	Unknown
10200205	2014
4816A	Unknown
68042-99	1999
3152	Unknown
4419	Unknown
4612	Unknown

3699D	2006
3929	2009
2724	Unknown
10200463	2017
787	Unknown
3225	Unknown
3588	1990
35244-06	2014
3901	Unknown
3563	1999
10200103	2014
3143	Unknown
10200105	2014
780	Unknown
29269-83A	1983
67721-48	1948
1775	Unknown
3910	2014
2531	Unknown
4820A	Unknown
10200546	2017
4867	Unknown
10200042	2014
8175	2004
10200223	2014
3767B	2009
946	Unknown
10200446	2017
10200442	2016

10200052	2014
3684	Unknown
4312C	Unknown
3787	Unknown
10200533	2016
10200350	2015
3676	Unknown
856A	1990
1062	Unknown
10200349	2015
10200217	2014
10200060	2014
10200061	2014
4813A	1990
10200062	2014
10200063	2014
10200569	2017
703B	Unknown
10200064	2014
10200065	2014
10200343	2017
10200059	2014
4790	Unknown
1332	2010
4194	Unknown
42858-06A	2006
3892	Unknown
4775	2000
10200257	2015

10200258	2014
10200422	2017
2445	Unknown

103A1 - Generic Washers

6019	Unknown
6026	Unknown
7415A	Unknown
11891	Unknown
56159-73	1973
7130W	Unknown
6497HW	2010
7434	1999
6220W	Unknown
6294	2010
46509-01	2001
8972	Unknown
6116	Unknown
6789	Unknown
59788-01	2001
6113	Unknown
6333	Unknown
6150W	Unknown
6054	Unknown
6109	1980
6101	2011
6594	Unknown
7129	Unknown
6072	Unknown
6590HW	Unknown

6127	Unknown
6532	2000
6036	Unknown
6421	1996
6416	Unknown
7038	1998
7041	1958
6703	1970
6702	Unknown
6235	Unknown

104A1 - Custom Nuts

7352	2010
10400034	2016
54321-85	1985
7606	1983

105A1 - Custom Screws

10500022	2014
10500017	2014
10500015	2014
10500031	2014
10500008	2014
10500036	2014
10500069	2017
10500053	2015

108A1 - Hose Clamps

10053	2010
10800023	2013
10800025A	2017
10344	Unknown

55918-08	2008
66047-05	2005
10800111	2017
10800078	2014
69563-06	2006
10340B	2015
10800109	2017
10800052	2014
9956	1972
9955	Unknown
10080	Unknown
108B1 - P Clamps	
10800028	2014
10076	2010
109A1 - Studs	
59818-09	2009
3265A	Unknown
66290-06	2006
10900005	2014
10900015A	2018
109Z1 - Kit,Stud	
10900037	2017
110B1 - Plain Bushings	
8967A	2017
11000139	2017
11519	Unknown
11000050	2014
12077	Unknown
67266-94	1994

8885	Unknown
9701A	2011
9208	Unknown

110C1 - Radial Shaft Seals

11000134	2017
11000101	2013
12074	Unknown
12052A	2003

110D1 - Rolling Element Bearings

8860	Unknown
9215	Unknown
8963	Unknown
9252A	2017
11000010	2011
9231	Unknown
24605-07	2007
8970A	2012
8042A	2018
9276B	2017

111A1 - Adhesive

73304-04	2004
72194-94	1994
9819	Unknown
72560-07	2007
72264-94	1994
58417-77	1977
9907	Unknown
72527-01	2001
72990-01	2001

72008-05	2005
74196-04	2004
72110-06	2006
111B1 - Tape	
11100066	2013
111C1 - Insulating Tape	
44854-05	2005
11100115	2014
11668	Unknown
111D1 - Isolating Tape	
11100050	2014
11100051	2014
11100057	2014
11100152	2015
11100038	2014
111E2 - Mounting Pad	
11100195	2017
111F1 - Protective Tape	
11100068	2014
116A1 - Banjo Bolts	
50674-05	2005
41750-06B	2006
41783-08	2008
11600009	2014
11600001	2012
117A1 - Coil Springs	
33085-74	1974
11700005	2014
119A1 - O-Rings	

11900010	2013
11686	Unknown
11900092	2017
11105	Unknown
11900090	2017
11145A	2007
11900103	2017
11900116	2017
11289A	Unknown
46508-01	2001
11201	Unknown
11323A	2016
11120	Unknown
11132A	2007
11293	1996
27444-00Y	2000
11900021	2014
120A1 - Pins	
16583-00A	2000
601	Unknown
50933-86A	1986
221	Unknown
16574-99A	1999
16589-99A	1999
42460-80B	1980
515	Unknown
24754-75A	1975
12000005	2014
45041-01A	2001

121A1 - Grommets

11692	Unknown
11437	Unknown
12100113	2017
12100043	2014
12100020	2014
12100018	2014
12100017	2014
57978-00	2000
11543	Unknown
11650	2010
12100007	2014
12100077	2017
59778-06	2006

121B1 - Press-Fit Plugs

59749-06	2006
12100034	2014
72097-06	2006
12100023	2014
70292-89	1989
765	1997
755	2018
90520-07	2007
12100069	2017
12100154	2019

122A1 - Retaining Rings

17945-36B	1936
10264	Unknown
35114-02	2002

65325-83A	1983
35087-99A	1999
10183	1996
10103	Unknown
11036	Unknown
61012-04A	2004
11150	1984
12200092	2014
11143	Unknown
10395	Unknown
10396	Unknown
9853	Unknown
10991A	Unknown
61213-04A	2004
11177A	1996
12200025	2014
11389	Unknown
11304	Unknown
11082A	2016
11081A	2008
60678-85	1985
10147	2018
41229-08	2008
11575	Unknown
12200144	2018
12200064	2014
11161	1984
122A2 - Retaining Clips	
12200170	2018

12200147A	2017
12200172	2018
123A1 - Sealing Washers	
41751-06A	2006
123B1 - Spring Washers	
7155	Unknown
124A1 - Spacers	
12400100	2015
12400034	2014
41900-08	2008
46515-01	2001
5837A	Unknown
12400099	2017
11599A	2012
11848	Unknown
125A1 - Tie Straps	
12500014	2017
10065	1985
12500018	2017
10039	1981
10177	1996
10006	1960
12500002	2012
126A1 - Miscellaneous Hardware	
8041	Unknown
68331-02	2002
59292-94	1994
12600073	2014
12600071	2014

12600070	2014
12600049	2014
56161-83A	1983
12600032	2014
12600031	2012
8873	1984
57638-08	2008
126B1 - Rivets Fasteners	
70291-89	1989
12600067	2014
11779	2008
12600016	2011
126B2 - Tree Fasteners	
12600197	2017
127B1 - Generic Mounting Bracket	
12700091	2017
12700090	2017
140A1 - Battery Warning Label	
15368-01A	2001
140A2 - General Warning Label	
14001799	2019
14148-86	1986
14001773	2019
90821-74C	1974
14001735	2019
14001734	2019
14001737	2019
14001739	2019
14001738	2019

14001736	2019
14151-02	2002
15385-08	2008
14001859	2019
140A3 - Other Special Warning Label	
15342-06A	2006
15370-01A	2001
14001800	2019
15346-98A	1998
90820-93D	1993
140G2 - EPA Label	
29108-08	2008
140P2 - General Label	
14001396	2018
14000827	2013
14001593	2019
141A1 - Medallion	
14100588	2015
14100587	2015
14100158	2014
14100766	2016
14100765	2016
14100764	2017
62437-11	2011
14101073	2018
14100855	2017
14100074	2014
14101019	2018
14100073	2014

14101018	2018
44341-08	2008
14100075	2014
14100076	2014
14100079	2014
14100080	2014
14100085	2014
14100083	2014
14100836	2017
14100835	2017
14101145BAGH	2019
14101145BAGI	2019
14100230	2014
14100232	2014
14100231	2014
14101144BAGI	2019
14101144BAGH	2019
62435-11	2011
14100615	2015
14100254	2014
42856-06	2006
14101013	2017
14101371	2019
14100279	2014
14100087	2014

162D1 - Engine Assembly

16200362	2019
16200365	2019
16200364	2019

162D3 - Engine Assembly Short Block

16200582	2019
16200265	2017

163A1 - Engine Isolator

16300005	2017

164A1 - Engine Mount Bracket

16400049	2017
16400005	2014
16400042	2017

164B1 - Engine Mount Bracket sub-component

7600	Unknown
7716	1990
7531	1980
7667	Unknown
7686	Unknown
16219-09	2009
8194	Unknown

164D1 - Tiebar Mount

16400041	2017

165A1 - Cylinder Head

16500508	2017
16500388	2017
16500393	2017
16500498	2017

165B1 - Cylinder Head and Base Gaskets

17369-06	2006
16500305	2017
16500326	2017
16500332	2017

167A1 - PT Assembly Miscellaneous Component

36731-91	1991

168A1 - Cylinder

16800100	2017
16800075	2017
16800095	2017
16800080	2017

168C1 - Cylinder Stud

16800063	2017

173A1 - Rocker Arm

17300055	2017
17300053	2017

173B1 - Rocker Arm Shaft

17300059A	2017

179A1 - Lifters

18538-99C	2011

179B1 - Push Rod

17900031	2017
17900030	2017

179C1 - Lifter Anti-Rotation Device

17900035	2017
17900034	2017

180A1 - Valves

18000034	2017
18000016	2017

181B1 - Valve Seals

18100044	2017

181C1 - Valve Collars

17947-36	1936

17968-99	1999
18100060	2017
18100045	2017
18100043	2017

184A1 - PT Camdrive and Valvetrain Miscellaneous Component

18400073B	2018

219Z1 - Kit,Piston

21900048	2017
21900049	2017

220A1 - Piston Ring

22000031	2014

220Z1 - Kit,Piston Ring

22000061	2017
22000060	2017

221A1 - Piston Pin

22097-99	1999
22100006	2017

239A1 - PT Lower End Miscellaneous Component

8026K	Unknown

241A1 - Flywheel

24100045A	2019
24100057A	2019

241Z1 - Kit,Flywheel

24100080	2017

244A1 - Crankcase

24400120	2017

244B1 - Crankcase Gasket

24400215	2017

244F1 - Oil Pan

24400180	2017
254A1 - Camdrive Gear	
25566-06	2006
254B1 - Camshaft	
25675-06	2006
25673-06	2006
25400190	2017
254C1 - Camshaft Sprocket	
25400103	2017
254D1 - Camshaft Support	
25400133	2017
41819-02	2002
254Z1 - Kit,Camdrive	
25400257	2017
255C1 - Camdrive Chain Tensioner	
25500013	2017
256A1 - Timer Cover	
25600078	2018
25600110	2019
257A1 - Cam Cover	
25700467	2017
25700367	2017
25700698	2018
257B1 - Clutch Cover	
25701145	2019
25700388	2015
25700904	2019
25700902	2019
25700178	2013

257E1 - Cover Gaskets

36805-06	2006
61402-08	2008
25700453	2017
25700372B	2018
25700452	2017
65324-83B	2009
67208-08	2008
35654-06	2006
25700679	2017
25700455	2017
25700425	2017
25700370	2017
71294-08	2008
25700362	2017
61109-85D	1985
11936	Unknown
42857-06B	2013
25700378	2017
25700433	2017
61192-96A	1996
11902	Unknown

257G1 - Ignition Cover

25700489	2015

257L1 - Primary Cover

25700418	2017
25701144	2019
25700650	2017
25700491	2017

257M1 - Push Rod Cover

17948-99A	2018

257N1 - Rocker-Arm / Valve Cover

25700520	2017
25700693	2018
25700691	2018
25700409	2017

257P1 - Tappet Cover

25700411	2017
25700410	2017

257S2 - Sub-Assembly,Cover

25700870	2018
25700637	2017

257Z1 - Kit,Cover/Sealing

25700746	2017
25700731	2017
25700730	2017
25700729	2017
25701000	2018
25700830	2017

258A1 - PT Covers Miscellaneous Component

25800055	2017
25800054	2017
25800057	2017
25800056	2017
25800049	2017
25800048	2017
25800110	2017
25800109	2017

266B1 - Water Pump

26600048	2017

268B1 - Cooling Fan

26800007A	2014
26800019A	2014

268B2 - Cooling Fan Guard

26800008	2014

268C1 - Radiator

26800005	2014
26800006	2014

268E1 - Radiator sub-component

26800020A	2014

268F1 - Radiator Pressure Cap

26800021	2014

268H1 - Radiator System Cover

26800092	2017
26800009	2014
26800077	2017

269A1 - Cooling Line Fitting

26900117	2017

269A2 - Coolant Line Tube

26900133	2017

269B1 - Radiator Hose

26900144	2017
26900088	2017
26900145	2017
26900115	2017
26900018	2014
26900016	2013

26900017	2013
26900114	2017
26900010	2014
26900008	2014
26900009	2014

269F1 - Radiator Overflow Tank Cap

26780-05A	2006

269G1 - Radiator Overflow Tank

26900014	2014

272B1 - Throttle Body / Intake Manifold

27200025	2017

273A1 - Intake Manifold

27300121	2017

273A2 - Intake Manifold to Cylinder Head Seal

27300087	2017

273C1 - Throttle Body/Intake Manifold sub-component

27300086	2017

273G1 - Throttle Body

27300122	2017

273K1 - Throttle Body to Manifold Seal

27300082	2017

274B1 - Fuel Rail

27400019	2017

274C1 - Fuel Injector

27400015	2017

290A1 - Airbox Baseplate

29000120	2017
29000121	2017

290D1 - Airbox Seal

29000108	2017
29000106	2017
290Z1 - Kit,Airbox	
29000301	2019
29000302	2019
29000216	2017
292A1 - Air Duct	
29200088	2019
29200041BYM	2015
29200063	2015
29200062	2015
29200061	2015
29200071	2015
29200073	2015
29200072	2015
29200075	2015
29200078	2015
29200080	2015
29200081	2015
29200039	2014
29200034	2014
29200035	2014
29200003	2014
29200041DH	2015
292B1 - Air Duct Bezel	
29200087	2019
29200007	2014
294A1 - Air Filter Element	
29400212	2017

294B1 - Breather Bolt

29465-08B	2017

294C1 - Breather Hose

29400211	2017

294F1 - Engine Breather Valve

29400210	2017
29400183	2017

299B1 - Charging Rotor Assembly

29900038	2017

299C1 - Charging Rotor

29900041	2017

299F1 - Stator Assembly

29900042A	2017

314F1 - Starter Motor

31400053	2017

314H1 - Starter Solenoid

27715-07	2007

316A1 - Ignition Coil

31600017	2017

316B1 - Spark Plug Cable

31600018B	2018
31600079	2017
31600078A	2017
31600023A	2017

316C1 - Spark Plug

31600012	2015

327A1 - Sensor

50126-08B	2018
32700050A	2018

327B1 - Chemical / Gas Sensor

32700046	2017
27809-10	2010

327C1 - Pressure Sensor

40615-08	2008

327D1 - Proximity Sensor

32700017	2014
32700015	2014
32700048	2017
74402-05B	2012

327E1 - Temperature Sensor

32700010	2014
32700066	2015
32700065	2017
32700054	2017

336A1 - Shift Linkage Rod Assembly

33600304	2019
5817	2000
33600188	2017
33600088	2017
33600091	2017

336C1 - Shift Linkage Rod End

33719-79B	1979

336D1 - Shift Pedal

33895-82E	2017

336F1 - Toepeg

34611-65A	1965

336Z1 - Kit,Shift Lever

33600243	2017

339A1 - Shift Lever

33900175	2017

339D1 - Shifter Fork

35222-06	2014
35217-06	2006
35223-06	2014
35210-06	2006
35187-06	2006

339H1 - Shifter Mechanism Components (internal)

33900172	2017
34064-00C	2000
35243-06	2014
33389-07	2014
34091-08	2008
35249-06A	2006
34987-06	2006
35186-06	2006
35081-06	2006
33409-06B	2006
35082-07	2007

347B1 - Transmission Case

34700084	2017

348C1 - Transmission Top Cover

34800025	2017
34800038	2017
34800031	2017

350A1 - Transmission Output Sprocket

35000152	2017

350E1 - Transmission Gear

35122-06A	2018
35000179	2018

350F1 - Transmission Mainshaft

35000178	2018
35467-06C	2017

350G1 - Transmission Shim / Spacer

25736-06	2006
25731-06	2006
25729-06	2006
11207A	2009
25738-06	2006
25737-06	2006
25734-06	2006

350S2 - Sub-Assembly,Transmission Mainshaft

35000198A	2018

352A1 - Engine Balancer

35200057	2018

352B1 - Engine Balancer sub-component

35200021	2017

356A1 - Transmission Countershaft

35807-06	2006
35600094	2018
35814-06	2006
35811-06	2006
35600103	2017

356B1 - Transmission Dog Ring

35204-06	2006
35126-06	2006

356C1 - Transmission Dog Ring Guide Hub

35202-06	2006
35124-06	2006
363A1 - PT Driveline Miscellaneous Component	
40901-05	2005
36300026	2018
35260-06B	2016
35241-06	2006
35242-06	2006
365A1 - Primary Chain	
40037-07	2007
365B1 - Primary Chain Tensioner	
36500075	2017
365E1 - Inner Primary Housing	
36500052	2017
367A1 - Clutch Lever	
36700171A	2018
36700133A	2018
367B1 - Clutch Lever Master Cylinder	
36700128A	2018
36700169A	2018
367D1 - Clutch Lever Master Cylinder Reservoir	
36700132	2017
36700130	2017
36700131	2017
367E1 - Clutch Lever Mount Clamp	
36700113	2015
367G1 - Clutch Lever Pivot Bolt	
36706-01K	2001
367H1 - Clutch Lever sub-component	

37904-90	1990
37909-90	1990
370A1 - Clutch Assembly	
37496-90A	1990
37000168	2017
37000169	2017
37000254A	2019
370C1 - Clutch Hub	
37000083	2013
370F1 - Clutch Pressure Plate	
37000032A	2017
370F2 - Clutch Spring Pressure Plate	
37000270A	2018
370J1 - Miscellaneous Clutch Sub-Component	
37000258	2017
37000295	2019
37000033	2013
37000034	2013
37000219	2017
37000217	2014
37000218	2014
372G1 - Clutch Hose	
37200129	2017
37200128	2017
37200146	2017
372P1 - Secondary Clutch Actuator	
37200131B	2019
372Z1 - Kit,Clutch Actuation	
37200347B	2019

37200348B	2019
37200349B	2019
37200352B	2019
400A1 - Drive-Belt	
40024-09A	2015
401A1 - Engine Sprocket	
83936-09A	2013
40100064	2017
40100041	2014
401Z1 - Kit,Engine Sprocket	
40100076	2017
409A1 - Rear Wheel	
40900026	2013
40900503	2018
40900484A	2017
41052-09	2009
40900391	2015
40900033	2013
410A1 - Body Control Module (BCM)	
41000342E	2019
41000341E	2019
41000351E	2019
410D1 - Electronic Control Module (ECM)	
41000668	2018
41000599	2019
411A3 - ABS Hydraulic Control Unit	
41100061B	2019
413A1 - Brake Caliper	
43027-08	2008

44023-08	2008
44160-00	2000

413B1 - Brake Bleeder Screw

42853-06	2006

413C1 - Brake Caliper sub-component

12102	Unknown
42851-06	2006

413D1 - Brake Pad

42867-06A	2006
41854-08	2008
41852-08B	2012

413E1 - Brake Pad Pin

42865-06B	2006
42849-08	2008

415B1 - Brake Rotor

41500146	2017
41500017	2014
41500018	2014
41809-08A	2014
41808-08A	2014
41500019	2014
41500020	2014
41810-08B	2012

416A1 - Brakes Miscellaneous Component

42860-06B	2006
42852-06A	2006
42934-08	2008
42863-06	2006
72023-51E	2012

44089-08	2008

416B1 - Brake Mounting Bracket

41600091	2014
41600078	2014
41600029A	2015
41600032	2014
41600031	2014

417A1 - Brake Master Cylinder Assembly

44551-08F	2018
44985-10D	2018
41700028A	2018

417B1 - Brake Master Cylinder

42889-06	2006
42855-06D	2018

417C1 - Brake Master Cylinder Piston Set

41700195	2014
42861-06B	2006
42932-08A	2013

417D1 - Brake Master Cylinder sub-Component

42862-06B	2010
41700367	2015
42937-08C	2018

417G1 - Front Brake Lever

42276-06A	2006

417H1 - Front Brake Master Cylinder Mount Clamp

41700321	2015
45138-08A	2008

417Z1 - Kit,Brake

42859-06B	2006

418B1 - Brake Line

41800012	2014
41800011	2014
41800314	2015
41800510	2016
41800175	2014
41800174	2014
41800544	2017
41800545	2017
41800542	2017
41800543	2017
41800546	2017
41800547	2017
41800541	2017
41800340	2015

420A1 - Wheel Rim

41445-09	2009
43085-97	1997

421A1 - Wheel Spoke with Nipple

43241-05	2005
42018-09	2009
41746-09	2009

422B1 - Wheel Sprocket

40217-09	2009

422C1 - Wheel Sprocket Compensating Cushion

40278-09	2009

423C1 - Rim Strip

43099-09	2009
43147-40	1940

423D1 - Tire Inner Tube

40592-09	2009
40558-82	1982

423G1 - Valve Stem

40999-87	1987

423H1 - Valve Stem Cap

41123-79	1979

423K1 - Wheel Weights

95594-84C	2017
42300001	2011
95595-84C	2017

424A1 - Wheels, Tires and Final Drive Miscellaneous Component

44080-08C	2012

430D1 - Front Axle

41547-07A	2007

430E1 - Rear Axle

43000002	2014

431A1 - Front Tire

43118-92A	1992
43100013	2014
43109-09A	2009
44006-09	2009

432A1 - Rear Tire

43200027	2014
43230-09	2009

433A1 - Front Wheel

40960-09	2009
43300508	2018
43300386	2015

43300027	2013
43300484	2017
43300019	2013

433B1 - Front Wheel Bearing Spacer

56163-93	1993
48489-02	2002
11843	2009
41242-08	2008
41901-08	2008
41349-07	2007

454A1 - Front Telescopic Fork

45400181	2017
45400182	2017
45400198	2017
45400197	2017
45400102	2017
45400103	2017
45400196	2018
45400104	2017
45400195	2018
45400105	2017

455A1 - Front Telescopic Fork Slider

45500111	2014
45500109	2014
45500175B	2015
45500176B	2015

455B1 - Front Telescopic Fork Spring

45500456	2017
45500396	2017

45500337	2017
45500338	2017

455C1 - Front Telescopic Fork sub-component

71310-94	1994
46514-01A	2010
45500397	2017
45500424	2017
45500398	2017
45500421	2001
46513-01	2001
45500132	2014
45500339	2017
45500118	2014
45500117	2014
45500340	2017
45500341	2017

456A1 - Fork Protector

45600003	2014
45600055	2017
45600054	2017

456C1 - Fork Lock

71540-94B	2016

457D1 - Steering Stem

45700020A	2014

457E1 - Steering Stem Bearing Insert Cup

45700009	2014

458A1 - Front Suspension and Steering Miscellaneous Component

45800023	2014
46615-06	2006

459B1 - Lower Triple Clamp

45900024	2014
45900091A	2014

470A1 - Frame

48079-09BHP	2009
47000088BHP	2017

470Z1 - Kit,Frame

58002-09A	2017

472A1 - Frame sub-component

6982	Unknown
10600007	2014
7036	Unknown

472C1 - Front Fairing Support Bracket

47200217	2015
47200278	2015
47200281	2015
47200266	2015
47200262	2015
47200261	2015
58888-98A	1998

472C2 - Fairing Lower Support Bracket

47200275	2014

472D1 - Chassis Structure Miscellaneous Component

49050-09A	2014

472D2 - Chassis Structure Mounting Bracket

68712-94A	1994
68629-05	2005
47200302A	2017
91140-09	2009

472E1 - Frame Cover

47200080	2014
47200081	2014

474C1 - Swingarm

47549-09A	2017

474E1 - Swingarm Assembly sub-component

47584-09	2009
67875-11	2011

474F1 - Swingarm Bearing Spacer

48487-02	2002

475B1 - Swingarm Pivot Shaft

47540-11	2011

490C1 - Engine Guard

49184-09A	2014

500B1 - Sidestand Bracket

50000141A	2017
50000097	2017

500C1 - Sidestand Bracket sub-component

49725-07A	2007

500D1 - Sidestand Leg

50075-07A	2011
50000083	2015

500E1 - Sidestand Leg sub-component

50015-74A	1974
50245-07	2007

505A1 - Footboard

52719-10	2010
50689-11	2011
50500143	2012

50500146	2012
50500145	2012
50613-91A	1991
51068-08	2008
50688-04	2004
50899-99A	1999
50500360	2015
50683-04	2004
50684-11	2011
51070-08	2008

505B1 - Footpeg Mount Bracket

50518-09	2009
50500332A	2016
50500462A	2016
50500334A	2016
50208-04	2004
50500460A	2016
50622-09A	2015

505C1 - Heel Guard / Pad

50606-06	2006
50614-06	2006

505D1 - Passenger Footpeg

50500876	2017
50345-04	2004
50621-06	2006

505K1 - Footpeg Wear Peg

50500339	2015
50350-04	2004

506A1 - Brake Pedal

42444-04	2004
50912-72	1972
50600067	2014
42416-06	2006
42410-04	2004
50600245	2017
50600244	2017

507A1 - Rider Interface Miscellaneous Component

54395-10	2010

520A1 - Rider Seat or Full Seat

52000174	2015
52000038	2014
52000033	2014
52000464	2019
52000122	2014
52000060	2014
52000142	2015
52320-11	2011

520Z1 - Kit,Rider Seat

52000334	2016

523B1 - Back Rest Pad

52300053	2014

523C1 - Back Rest Support Structure

52300127	2014
52300122	2014
52300121	2014
52300123	2014

524A1 - Passenger Grab Handle

52400018	2014

52400021	2014
52400054	2014
52400099	2014
52400116	2015
52400015	2014
52400017	2014
52400016	2014
524C1 - Passenger Seat sub-component	
52400067	2014
530A1 - Tour Pak	
53000124	2014
53000123	2014
530B1 - Tour Pak sub-component	
53000141A	2017
53000311	2014
53000132	2014
53000347	2014
53000346	2014
92038-10	2010
53000308	2014
53598-88A	1988
53000091	2014
53000090	2014
90869-85A	1985
53000370	2014
530C2 - Case Latch	
90382-98	1998
90425-98	1998
53000140	2014

53000137	2014
53000139	2014
53000138	2014

530E1 - Tour-Pak Luggage Rack

53665-87	1987
53000125	2014

540B1 - Rear Shock

54000113	2017
54000114	2017
54000096	2017
54000095	2017
54000094	2017
54000093	2017

540E1 - Rear Shock sub-component

54000141	2017

558A1 - Handlebar

55800099	2014
55800761	2017
55800767	2018
55800436	2016
55924-14	2014
55800734	2017
55800305	2015
55800332	2015
55800378	2015

558B1 - Handlebar Tube

55800091	2014

559D1 - Lower Handlebar Clamp

57450-14	2014

57451-14	2014
55900079	2015
55900078	2015
55900051	2014
55900052	2014

559E1 - Upper Handlebar Clamp

55900071	2015
55900050	2014

560A1 - Mirror

91840-03B	2003
56000011	2014
56000012	2014
56000015	2014
56000016	2014
92615-10	2010
92614-10	2010
91845-03B	2003

561B1 - Left Hand Grip

56667-04	2004

561E1 - Throttle Grip

56304-08	2008
56100075	2015
56248-08	2008

570A1 - Front Fairing

57000412	2015
57000508	2015
57000504	2015
57000501	2015
57000017	2014

57000383	2014
57000377	2015
57000302	2015

570C1 - Inner Fairing

57000299	2014
57000374BYM	2015
57000064DH	2014
57000175	2014
57000064BYM	2014
57000186	2014
57000065DH	2014
57000374DH	2015
57000169A	2018
57000305	2015
57000170	2014
57000172	2014
57000065BYM	2014

571A1 - Fairing Lower

57100112	2014
57100111	2014
57100114	2014
57100113	2014

571B1 - Fairing Lower sub-component

57100107	2014
57100109	2014
57100225	2014
57100103	2014
57100227	2014
57100104	2014

57100101	2014
57100208	2014
57100188	2014
57100187	2014
57100200	2014
57100172	2014
57100171	2014
57100170	2014
57100099	2014
57100098	2014
57100166	2014
57100167	2014
57100164	2014
57100165	2014
57100102A	2017
57100152	2014
57100151	2014
57100150	2014
57100108A	2017
57100148	2014
57100149	2014
57100147	2014
57100161	2014
57100162	2014
57100153	2014
57100154	2014
57100155	2014
57100256	2014
57100110A	2017

57100247	2015
572C1 - Chin Spoiler Side	
57200066	2015
57200064	2015
57200065	2015
57200063	2015
57200012	2014
57200017	2014
572D1 - Engine Shroud	
58169-09	2009
58167-09A	2017
572E1 - Side Cover	
32306-08	2008
66048-09A	2012
66250-09	2009
573A1 - Bodywork Miscellaneous Component	
57300063	2015
4706	Unknown
38722-94	1994
7651A	Unknown
573B1 - Bodywork Mounting Bracket	
59786-01	2001
574B1 - Windscreen / Windshield	
58088-94	1994
58428-94	1994
57668-10	2010
57400441	2019
58084-94	1994
57400058	2014

58193-94	1994
57400001	2014
57400003	2014
57400002	2014
57400005	2010
57400004	2014
57400309	2016
57400308	2016
57400305	2016
57400303	2015
57400302	2015
58431-94	1994
57400250	2015
58325-06	2006
58327-06	2006
57400262	2015
57400260	2015
57400191	2015
58416-77A	1977
58406-75A	1975
57400187	2015
67621-94	1994
57994-94	1994
58408-75A	1975
589A1 - Front Fender	
58900009	2014
58900032	2014
595B1 - Tailsection Center	
59739-09	2009

595D1 - Rear Fender

59500046	2014
58702-09A	2019
59768-97	1997
59174-99	1999

595S2 - Sub-Assembly,Rear Fender

59731-09A	2017
60575-10A	2017

596B1 - Fender Tip

59600003	2014
59600009	2014
59600008	2014
69615-10	2010
59600006	2014
59600011	2014
59581-05	2005
59600029	2017

603B1 - Belt / Chain Guard

60386-09	2009

608A1 - Carbon Canister

60800006	2012

608B1 - Carbon Canister Hose

27298-09A	2014
27291-09A	2014
60800026	2017
27297-09A	2014

609A1 - Fuel Miscellaneous Component

70999-09	2009
6119	2016

61112-08	2008
62229-08B	2011
75076-08B	2011
60900036	2018
75291-08A	2011
75254-04A	2004
75269-08	2008

609B1 - Fuel and Intake Mounting Bracket

70901-09	2009

610A1 - Fuel Tank

61356-08	2008
61268-08	2008

611A1 - Filler Neck Trim

75069-08D	2018

611B1 - Fuel Cap

61100099	2018
61100123	2018
61274-92	1992
61100065	2016
10334	2014
61272-92C	1992
61100120	2018

611F1 - Fuel Tank Vapor Vent Hose

27440-09A	2014
69241-08	2008

611Z1 - Kit,Fuel Filling

53919-04B	2018

612A1 - Fuel Filter

61011-04A	2004

612B1 - Fuel Level Sensor

75205-08A	2012

612B2 - Fuel Valve

61015-04A	2004
62228-08C	2016

612C1 - Fuel Line

61200022	2017

612F1 - Fuel Pump

62908-08	2008

613A1 - Trim Panel

62775-08	2008

613B1 - Horn Cover

61300626A	2017
61300523A	2017

613C1 - Intake / Fuel Tank Cover

61278-08A	2016

613D1 - Intake / Fuel Tank Cover Trim

61313-88	1988

613K1 - Airbox Cover

61300922	2017

613L1 - Airbox Cover sub-component

61300935	2019
61300934	2019
61300936	2019
61300467	2017

613M1 - Headlight Cover

61300096	2014
61300095	2014
61300098	2014

61300097	2014
614A1 - Headlight Bezel	
61400173	2015
61400198	2015
614C1 - Trim	
61400135	2014
62152-08	2008
61400077	2014
15341-08	2008
61400081	2014
61400080	2014
61400159	2014
61400057	2014
62153-08	2008
59211-74A	1974
61400063	2014
61400064	2014
62242-08	2008
53735-06	2006
62243-08	2008
53734-06	2006
62241-08	2008
61400498	2017
624A1 - Oil Pump Assembly	
62400178	2018
62400182	2018
62400206	2019
624B1 - Oil Pump Assembly sub-component	
62400052	2017

62400055	2017
26210-99	1999
62400126	2017
26400-82B	1982
624F1 - Oil Pump Seal	
62400205	2019
627A1 - Oil Cooler	
62700196	2017
627B1 - Oil Drain Plug	
62700150	2017
60328-98B	1998
627E1 - Oil Filler Plug / Dipstick	
62700136	2017
37065-06A	2017
627E2 - Sight Glass	
42854-06	2006
627F1 - Oil Filter	
63731-99A	1999
627G1 - Oil Jet	
62700117	2017
62700089	2017
627H1 - Oil Line	
62700161	2017
62372-09	2009
62700143	2017
62700144	2017
627K1 - Oil Line Fitting	
26352-95A	1995
62700146	2017

627M1 - Oil Pressure Regulator Valve

62700141	2017

628A1 - PT Lubrication and Cooling Miscellaneous Component

62800028	2017
62800013	2013
62800004	2014

649A1 - Muffler

64900236A	2019
64900235A	2019
64900816	2019
64900817	2019
64900814	2019
64900815	2019
64900238	2017
64900239	2017
64900765A	2019
64900237	2017
64900766A	2019
64900240	2017
64900770	2018
64900768	2018
64900769	2018
64900767	2018

651A1 - Muffler End-Cap / Outlet Finisher

56250-10	2010

654A1 - Exhaust Shield

62519-03	2003
65400545	2019
65400546	2019

65400547	2019
65400548	2019
65400176	2017
65400179	2017
65400177	2017
65400178	2017
65400483	2018
65400484	2018
65400485	2018
65400486	2018

655A1 - Muffler Mount

65723-85	1985
66861-09B	2019
65724-85A	2016

655B1 - Exhaust Mount Strap / Clamp

65500042	2017
65500043	2017

655C1 - Exhaust Mounting Bracket

66881-09	2009

656E1 - Header Pipe

65600176	2017
65600177	2017
65600178	2017

659A1 - Exhaust Clamp

65900015	2017
65900012	2014

659B1 - Exhaust Flange

65328-83A	2010

660A1 - Battery

66000066	2013
66010-97D	2016
66373-06	2006
660C1 - Battery Pan	
66000010A	2018
660D1 - Battery Strap	
66051-08	2008
660E1 - Ground Strap	
75322-09	2009
660F1 - Negative Battery Cable	
66000116	2017
677A1 - Headlight	
69331-02	2002
67778-60A	1960
67700199	2015
67700060	2014
69325-02	2002
67700062	2014
67716-60C	2014
68725-62A	1962
67780-60A	1960
67700105	2014
67726-08	2008
677B1 - Headlight sub-component	
46555-03B	2014
67717-01	2001
67700065	2014
67712-83B	2014
69200109	2014

677C1 - Headlight Support Bracket

67700205	2014
67700204	2014

678A1 - Taillight

68245-03	2003
68558-03	2003
68066-99A	2004
69187-03A	2003
67800847	2017
68369-03	2003
68142-04	2004
68830-99A	1999
68296-99A	2004
68140-04	2004
68370-03A	2003
67800093	2014
68440-86	1986
67800101	2014

678B1 - Taillight Housing

67800109	2014
72160-06	2006

678D1 - Turnsignal

67800103	2014
67822-88	1988
67800254A	2018
69587-07	2007
67800299	2015
68550-09	2009
69293-06	2006

68767-94	1994
67800512	2015
67800513	2015
69292-06	2006
67800302	2015
67800303	2015
67800300	2015
67800301	2015
67015-02	2002
68766-94	1994
68765-94A	1994
67800938	2017
73314-10	2010
68713-94A	1994
68997-09	2009
67800132	2014
67800484	2015
67800483	2015
67800900	2017
67800147	2012
67800906	2018
67800471	2015
68742-09	2009
67800148	2012
67800908	2018
68838-06	2006
68497-07	2007
68821-00	2000
67800708	2016

67800709	2016
68776-06	2006
67800703	2016
67800704	2016
67800485	2015
67800104	2014

678E1 - Turnsignal Lens

68973-00	2000
68506-92	1992
69378-09	2009
68559-07	2007
68505-90	1990

679B1 - Reflector

69490-07	2007
60907-09	2009
59259-90	1990
59482-00	2000
59481-00	2000
60254-07	2007
69862-07	2007
67900256	2014
69861-07	2007
59988-72A	1972
67900066	2014
67900067	2014
67900068	2014
67900065	2014

679C1 - Reflector Mount Bracket / Holder

67900120	2014

67900445	2017
679D1 - License Plate Bracket	
67900009	2012
69380-09BHP	2009
73255-10	2010
67900213A	2015
60909-09	2009
60918-10A	2015
11687	Unknown
73254-10	2010
680A1 - Decorative Light	
53789-06	2006
69377-10	2010
69353-05	2005
68414-05A	2014
53788-06	2006
68721-62	1962
73309-10	2010
68846-09	2009
68720-62	1962
680C1 - Incandescent Bulb	
68572-64B	1964
68881-01	2001
68168-89A	1989
53436-97	1997
68000056	2012
68847-09	2009
68163-84	1984
68000038	2014

68167-04	2004
52441-95	1995
680D1 - Fog Light	
68000021	2014
68000020	2014
68000022	2014
68000037	2014
68000036	2014
690A1 - Emergency Siren	
68958-07C	2010
690B1 - Emergency Siren sub-component	
69309-10	2010
690C1 - Horn	
69060-90H	2014
690D1 - Horn Bracket	
69000083	2017
692B1 - Auxiliary Power Outlet	
69200826	2014
69200170	2014
69200171	2014
692C1 - Electrical Miscellaneous Component	
72232-96	1996
72299-95	1995
69200285	2014
72062-06	2006
69200840	2017
72189-04	2004
69200172	2014
69200174	2014

69200175	2014
68253-08A	2012
6990	2011

692C2 - Electrical Mounting Bracket

69201178	2017
69201417	2017
70493-08	2008
71455-11	2011
69123-92A	1992
69200202A	2017
69201459	2016
69200203A	2016
69120-91	1991
68519-68A	1968
69200257	2014
69200258	2014
69201287	2017
69200284A	2016
69062-91A	1991
67341-04B	2004

692D1 - Fuse

69200293	2014
72330-95	1995
72345-02	2002
69200336	2014
72331-95	1995

692E1 - Fuse / Relay Block

31586-07	2007
69200194	2014

69200312	2014

692E2 - Fuse / Relay Block Cover

69201411	2017

692F1 - Wire Harness

69201548	2017
69201127A	2017
69200128	2014
69200129	2014
69200127	2014
69200124	2014
69200125	2014
69200122	2015
69200121	2014
69200130	2014
69200139	2013
69200135	2014
69201017	2015
69200136	2014
69200138	2013
69200131	2014
69200032	2014
69200294	2014
69200298	2014
69201119A	2017
69200211	2014
69202097	2019
69200752	2015
69200753	2015
69201018A	2016

69201723	2017
69201724	2017
69201121A	2017
69200031A	2019
69201120A	2017
69201124A	2017
69200311	2014
69200248	2014
69200247	2014
69201123A	2017
69200629	2015
69200178	2014
69200179	2014
69201122	2017
69201126	2017
69201125A	2017
69200224	2014
69200223	2014
69201130	2017
692G1 - Conduit / Sheathing / Sleeving	
72249-94	1994
70522-06B	2011
70554-69	1969
692G2 - Wire Guide	
69200702	2015
69200700	2015
69200701	2015
72412-97	1997
69200215	2014

72298-95	1995
692H1 - Connector	
72906-11	2011
76266-98A	2012
73152-96BK	1996
69201410	2017
69201414	2017
72632-10	2010
69201415	2017
72519-09BK	2009
69202108	2019
69202385	2019
69201400	2017
69201401	2017
69202354	2019
69200271	2014
72116-94BK	1994
69200272	2014
69201405	2017
69201406	2017
72908-11	2011
72081-11	2011
69200193	2014
69200529	2012
72905-11	2011
72063-06	2006
69200212	2014
69201397	2017
72161-06	2006

72111-06	2006
69201441	2017
69201440	2017
72127-06	2006
72664-12A	2013
72098-06	2006
72444-07GY	2007
69200256	2014
72009-05	2005
69201302	2017
72156-94	1994
69200255	2014
69200254	2014
69201395	2017
69201394	2017
69201393	2017
69201390	2017
69200306	2014
69201299	2017
69200184	2014
72064-06	2006
69200183	2014
69200305	2014
73301-04	2004
72594-11	2011
69200220	2014
69200226	2014
72518-01	2001
72533-06	2006

69200225	2014
72575-11	2011
72130-04	2004
69200337	2014
72639-10	2010
72907-11	2011
692H2 - Terminal	
72296-95	1995
72343-10	2010
69201240	2014
72256-11	2011
72910-11	2011
72364-06	2006
72227-11	2011
69200187	2014
69200186	2014
72272-07	2007
72356-95	1995
69200536	2014
72909-11	2011
5118	2011
72608-08	2008
69201168	2016
72213-94	1994
72484-08	2008
72662-11	2012
72493-07	2007
72226-11	2011
72308-97	1997

72344-10	2010
72721-07	2007
72290-94	1994
72222-11	2011
72169-07	2007
72168-07	2007
69202102	2020
72291-94	1994
69201300	2017
73307-10	2010
69201596	2017
72294-94	1994
72241-94A	1994
69200307	2014
69200185	2014
69200237	2014
69200238	2011
69200308	2014
69200221	2014
72666-12	2012
72991-01	2001
74190-98	1998
74194-98	1998
72283-09	2009
72569-08	2008

692K1 - Connector / Terminal Seal

69201416	2017
68904-00	2000
69201404	2017

69201407	2017
69201162	2016
69201163	2016
69201164	2016
73303-04	2004
72912-01BK	2001
69201396	2017
69201398	2017
72039-71A	1971
69201442	2017
72449-01	2001
69201301	2017
74197-04	2004
68905-00	2000
69201392	2017
69201391	2017
72450-01	2001

692L1 - Wire Harness sub-component

74191-98	1998
72606-08	2008
73213-07	2007
70345-84	1984
72512-07BK	2007
72488-07BK	2007
75229-08	2008
74152-98	1998
72195-94	1994
72415-07GY	2007
72099-06	2006

69200189	2014
72633-02	2002
69200188	2014
72175-07BK	2007
72902-01BK	2001
72473-07	2007
72214-94	1994
73190-96	1996
72511-07BK	2007
69200190	2014
69200191	2014
69200199	2014
72177-07BK	2007
73101-96BK	1996
73156-96BK	1996
69200295	2014
73106-96BK	1996
72904-01BK	2001
72479-07BK	2007
73152-96WE	1996
72499-07	2007
69200214	2014
69200210	2014
72145-06	2006
69200205	2014
72557-07	2007
72486-08	2008
69200201	2014
72167-07BK	2007

72166-07BK	2007
73153-96BK	1996
72478-07BK	2007
72720-07	2007
72038-71A	1971
70494-08	2008
69200631	2014
69200630	2014
72589-09	2009
69201307	2017
70681-09	2009
72106-94BK	1994
72053-92	1992
72405-98BK	1998
72066-06A	2006
73191-96	1996
72065-06A	2006
69200313	2014
72146-94	1994
72489-07GY	2007
72190-94	1994
72010-05	2005
72609-08	2008
72188-07BK	2007
72543-07BK	2007
73104-96BK	1996
73305-04	2004
72607-08	2008
72544-07	2007

72209-11	2011
73102-96BK	1996
72485-07	2007
69200222	2014
72295-94	1994
70631-08	2008
72490-07GY	2007
72494-07	2007
74112-98BK	1998
69201423	2017
73154-96BK	1996
72414-07BK	2007
72135-06	2006
72914-01BK	2001
72610-08	2008
692M1 - Electrical Component / Wire Cover	
69201286A	2018
692N1 - Engine Harness Support	
69200173	2014
709A1 - Dash Panel	
70900138	2014
70900392DH	2014
70900392BYM	2014
709B1 - Instrument Cluster or Speedometer	
70900125B	2019
70900126B	2019
70900123B	2019
70900124C	2019
70900121C	2019

70900122B	2019
70900167B	2017
70900120B	2019
70900168A	2017
70900169A	2017
70900119B	2019
70900118C	2019
70900373	2015
70900372	2015
70900374	2015

709B2 - Fuel Gauge

70900163	2014
70900164	2014
70900161	2014
70900162	2014
70900166	2014
70900165	2014
75241-08	2008

709E1 - Tank Console

61270-08	2008
70900466	2015
70900117	2014
70900744	2017
69214-08	2008
70900465A	2015

714A1 - Ignition Switch

71400011A	2016
71517-11A	2017
71400073	2012

71400081	2014
71400126B	2018
71400016B	2018
71400017B	2018
71400015B	2018
71400012B	2018
71400013B	2018
71400010A	2016
71517-11	2011

714B1 - Mechanical Switch

71565-08	2008
71522-08	2008
33926-06B	2006
71400031	2014
71400044	2014
71400005	2014
71400006	2014
71400007	2014

714C1 - Pressure Switch

71400112	2017

715A1 - Hand Control

71500045	2014
71500046	2014
71500044	2014
71500049	2014
71500047	2014
71500048	2014
71500342	2016
71500127C	2018

71500340	2016
71500128B	2018
71500129C	2018
71500419A	2018
71500348	2016
56249-10	2010
71500501	2019
71500094	2014
71500478	2019
71500063	2014
67493-08	2008
71500057	2014
71500055	2014
71500053	2014
71500050	2014
56209-10	2010
71500473	2017
71500475	2017
71500338	2016

747A1 - Voltage Regulator

74700025	2017
72350-11	2011

760B1 - Antenna

68956-07	2007
76000183	2014
76000186	2014
76000789	2019
76000799	2019
76000164	2014

76000165	2014
76353-00	2000
76000208	2014
76335-87	1987

760C2 - Audio System Speaker

76000454	2015
76000455	2015
76000453	2015
76000456	2015
76000055	2014
76000592	2015
76000593	2015
76000320	2014
76000321	2014
76000322	2014
76000096	2014
76000092	2014

760C3 - Radio Receiver

76000075D	2019
76000783	2019
76000784	2019
76000785	2019
76000781	2019
76000780	2019
76000779	2019

760C4 - Rider-Passenger Communication System

77117-10	2010
76000243	2013
77148-10	2010

77126-10	2010

760C5 - Speaker Enclosure

76000458	2015
76000460	2015
76000160	2014
76000161	2014

760C6 - Media Storage Compartment

76000234	2014
76000409DH	2014
76000376BYM	2015
76000373	2015
76000374A	2019
76000187	2013
76000376DH	2015
76000436	2015
76000422	2015
76000107A	2019
76000425	2015
76000127	2014
76000409BYM	2014
76000370A	2019
76000944	2019
76000426BYM	2015
76000426DH	2015
76000398	2015

760C8 - Satellite Radio

76000252	2014

760D1 - Infotainment Mount

76000468	2015

760D2 - Infotainment Mount sub-component

76000177	2014
76000173	2014
76000174	2014
76000172	2014

902A1 - Saddlebag

90200685	2014
90200684	2014

902B1 - Saddlebag Cover

90200411	2014
90200413	2014

902C1 - Saddlebag Inner

90200488	2014
90200489	2014

902E1 - Saddlebag Bottom

90201320	2015
90200412	2014
90200983DH	2014
90200414	2014
90200415	2014
90200519	2014
90201319	2015
90200522	2014
90200521	2014
90200520	2014
90200550	2014
90200549	2014
90200547	2014
90200543	2014

90200467	2014
90200964	2014
90200963	2014
90200611	2014
90200501	2014
90200505	2014
90200504	2014
90200899	2014
90201296	2015
90201295	2015
90200984DH	2014
90200900	2014
90200901	2014
90200499	2014
90200903	2014
90200902	2014
90200905	2014
75089-08	2008
902F1 - Saddlebag Guard	
90200506	2014
90200507	2014
902H3 - Saddlebag Support	
90201754DH	2018
902J1 - Saddlebag Latch	
90200983ELG	2019
90200983ELE	2019
90200983ELD	2019
90200983ELI	2019
90200984EFW	2018

90200984EFH	2018
90200984EFF	2018
90200984EFC	2018
90200983EFH	2018
90200983EFF	2018
90200983EFC	2018
90200983EFW	2018
90200984ELE	2019
90200983EKA	2019
90200984ELG	2019
90200984ELD	2019
90200983EKG	2019
90200984ELI	2019
90200983EKR	2019
90200983EKP	2019
90200983EEZ	2019
90200984EKG	2019
90200984EKA	2019
90200984EKP	2019
90200984EKR	2019
90200984EEZ	2019

902Z1 - Kit,Saddlebag

90201540	2017
90201743	2017
90201742	2017

903A1 - Lockset

61029-92A	1992
90300030	2014
90300024	2014

903B1 - Key or Key-set	
61081-92	1992
90300093	2014
903C1 - Key Transponder	
90300111	2017
90300112	2017
903Z1 - Kit,Lockset	
90300096A	2018
917B1 - Service Program Kit	
91700034	2014
90482-10	2010
91700025A	2014
90439-10	2010
918B1 - Hardware Kit	
91800064	2017
91800058	2017
940A1 - Owner's Kit	
94000326	2016
940A2 - Owner's Manual	
97011-16	2016
94000687	2019
94000634	2019
94000601	2019
94000585	2019
99461-89	1989

Common Service Parts

BEARINGS, SEALS & HARDWARE

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
10080	CLAMP	*COOLANT DISTRIBUTION - AIR-COOLED:* FLHR FLHTCU FLHRC FLHX FLHXS FLTRX FLTRXS FLHRXS FLHT
1062	SCREW	***PRIMARY HOUSING:*** **All Models** ***BRAKE LINES AND MODULE, REAR - ABS:*** **All Models** *FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2):* FLTRX FLTRXS FLTRU
11000101	OIL SEAL	***SHIFTER, GEAR:*** **All Models** ***TRANSMISSION BEARINGS AND COVERS:*** **All Models**
11105	O-RING	***TRANSMISSION HOUSING, COVER AND OIL PAN:*** **All Models** ***PRIMARY HOUSING:*** **All Models**
11132A	O-RING	***ROCKER ARM ASSEMBLY AND PUSHRODS:*** **All Models** ***TRANSMISSION BEARINGS AND COVERS:*** **All Models**
11143	RETAINING RING	***CLUTCH:*** **All Models**
11145A	O-RING	***ROCKER ARM ASSEMBLY AND PUSHRODS:*** **All Models**
11150	RETAINING RING	***SHIFTER, GEAR:*** **All Models**
11293	O-RING	***ROCKER ARM ASSEMBLY AND PUSHRODS:*** **All Models** ***CAMSHAFTS AND CAMSHAFT COVER (1 OF 2):*** **All Models**
11304	RING	*FOOTBOARDS AND FOOTPEGS, PASSENGER:* FLHX FLHXS FLTRX FLTRXS FLHTKL FLHRXS
11900103	O-RING	***CAMSHAFTS AND CAMSHAFT COVER (1 OF 2):*** **All Models**

PART NO.	DESCRIPTION	PART AND MODEL(S)
12052A	SEAL	***PRIMARY HOUSING:*** **All Models**
12074	SEAL	***TRANSMISSION BEARINGS AND COVERS:*** **All Models**
17369-06	GASKET SERVICE KIT	***PRIMARY HOUSING:*** **All Models**
2445	SCREW	*WINDSHIELD, FAIRING AND HEADLAMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 2):* **FLHTCU** **FLHX** **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLHXS** **FLHT** *FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3):* **FLHTCU** **FLHX** **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLHXS** **FLHT**
2446	SCREW	*LICENSE PLATE BRACKETS:* **FLHX** **FLHXS** **FLTRX** **FLTRXS** **FLHRXS** *LICENSE PLATE BRACKETS:* **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLHX** **FLTRX** **FLTRU** **FLHT**
2531	SCREW	*FENDERS, FRONT:* **FLHR** **FLHTCU** **FLHRC** **FLHTK** **FLHTK SHRINE** **FLHTKL**

PART NO.	DESCRIPTION	PART AND MODEL(S)
2563	SCREW	*INSTRUMENTS - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS:* **FLHTCU** **FLHX** **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLHXS** **FLHT** *INSTRUMENTS - FLTRU, FLTRX AND FLTRXS:* **FLTRX** **FLTRXS** **FLTRU** *WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2):* **FLTRX** **FLTRXS** **FLTRU** *FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3):* **FLHX** **FLHXS** *FAIRING, INNER - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX AND FLHXS (1 OF 3):* **FLHTCU** **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLHT** *FAIRING, INNER - FLTRU, FLTRX AND FLTRXS (1 OF 2):* **FLTRX** **FLTRXS** **FLTRU**
25700362	GASKET	***ROCKER ARM ASSEMBLY AND PUSHRODS:*** **All Models**
25700370	GASKET	***CAMSHAFTS AND CAMSHAFT COVER (2 OF 2):*** **All Models**
25700378	GASKET	***PRIMARY HOUSING:*** **All Models**
25700425	GASKET	***ROCKER ARM ASSEMBLY AND PUSHRODS:*** **All Models**
25700453	GASKET	***TRANSMISSION HOUSING, COVER AND OIL PAN:*** **All Models**

PART NO.	DESCRIPTION	PART AND MODEL(S)
25700455	GASKET	*PRIMARY HOUSING:* **FLHR** **FLHTCU** **FLHRC** **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLHX** **FLTRX** **FLTRU** **FLHT**
25700731	GASKET KIT	***ROCKER ARM ASSEMBLY AND PUSHRODS:*** **All Models** ***CAMSHAFTS AND CAMSHAFT COVER (2 OF 2):*** **All Models**
25700746	GASKET KIT	*PRIMARY HOUSING:* **FLHR** **FLHTCU** **FLHRC** **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLHX** **FLTRX** **FLTRU** **FLHT**
25700830	GASKET KIT	*PRIMARY HOUSING:* **FLHRXS** **FLHXS** **FLTRXS**
27300087	SEAL	***INDUCTION MODULE, FUEL:*** **All Models**
27444-00Y	O-RING	***STARTER MOTOR:*** **All Models**
2952A	SCREW	***SEATS:*** **All Models**
2995	SCREW	*FENDERS, REAR (1 OF 2):* **FLHX** **FLHXS** **FLTRX** **FLTRXS** **FLHRXS** *FAIRING, LOWERS, AIR COOLED - FLHTCU:* **FLHTCU**
3050	SCREW	***ALTERNATOR AND REGULATOR:*** **All Models**
3275	SCREW	***INDUCTION MODULE, FUEL:*** **All Models** ***SENSORS AND SWITCHES, ENGINE:*** **All Models**
34091-08	BEARING	***TRANSMISSION GEARS:*** **All Models**

PART NO.	DESCRIPTION	PART AND MODEL(S)
35654-06	GASKET	***TRANSMISSION BEARINGS AND COVERS:*** **All Models**
3655A	SCREW	*WHEELS, FRONT, CAST (1 OF 2):* **FLHRXS** **FLHXS** **FLTRXS** *WHEELS, FRONT, LACED:* **FLHRC** *FAIRING, LOWERS, AIR COOLED - FLHTCU:* **FLHTCU** *FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2):* **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLTRU**
3656	SCREW	*SADDLEBAGS - EXCEPT FLHRC (1 OF 4):* **FLHR** **FLHTCU** **FLHX** **FLHTK** **FLHTK SHRINE** **FLTRX** **FLHTKL** **FLHXS** **FLTRXS** **FLTRU** **FLHRXS** **FLHT**
36805-06	GASKET	***TRANSMISSION BEARINGS AND COVERS:*** **All Models**
4132	SCREW	***CLUTCH CONTROL:*** **All Models** ***BRAKE CONTROL, FRONT:*** **All Models**
41751-06A	GASKET	***CLUTCH CONTROL:*** **All Models** ***BRAKE CONTROL, FRONT:*** **All Models** *BRAKE LINES, FRONT - NON-ABS:* **FLHR** **FLHX** **FLTRX** **FLHT** ***BRAKE LINES, FRONT - ABS:*** **All Models** *BRAKE CONTROL, REAR:* **FLHR** **FLHX** **FLTRX** **FLHT** ***BRAKE CONTROL, REAR:*** **All Models** ***BRAKE LINES AND MODULE, REAR - ABS:*** **All Models**

PART NO.	DESCRIPTION	PART AND MODEL(S)
43567-92	SCREW	***WHEELS, REAR:*** **All Models**
4740A	SCREW	***CAMSHAFTS AND CAMSHAFT COVER (1 OF 2):*** **All Models**
5210	WELL NUT	*NACELLE AND HEADLAMP - FLHR, FLHRC AND FLHRXS (1 OF 2):* **FLHR** **FLHRC** **FLHRXS** *LAMPS AND SPEAKER HOUSINGS, ULTRA TOUR-PAK (1 OF 2):* **FLHTCU** **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLTRU**
59768-97	SEAT NUT KIT	***SEATS:*** **All Models**
6054	WASHER	*WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2):* **FLTRX** **FLTRXS** *LOOSE PARTS (2 OF 3):* **FLTRX** **FLTRXS**
60678-85	RETAINING RING	***PRIMARY HOUSING:*** **All Models**
65324-83B	GASKET	***EXHAUST SYSTEM (1 OF 2):*** **All Models**
65325-83A	RETAINING RING	***EXHAUST SYSTEM (1 OF 2):*** **All Models**
6702	WASHER	***SHIFTER, GEAR:*** **All Models** ***FRAME AND JIFFY STAND (1 OF 2):*** **All Models**
7041	LOCKWASHER	***FRAME AND JIFFY STAND (1 OF 2):*** **All Models** *AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2):* **FLHTCU** **FLHTK** **FLHTK SHRINE** **FLHTKL** ***EXHAUST SYSTEM (1 OF 2):*** **All Models**

PART NO.	DESCRIPTION	PART AND MODEL(S)
7586	JAMNUT	*TOUR-PAK (BOTTOM) (1 OF 2):* **FLHTCU** **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLTRU** *SADDLEBAGS - EXCEPT FLHRC (1 OF 4):* **FLHR** **FLHTCU** **FLHX** **FLHTK** **FLHTK SHRINE** **FLTRX** **FLHTKL** **FLHXS** **FLTRXS** **FLTRU** **FLHRXS** **FLHT**
7593	NUT	***EXHAUST SYSTEM (1 OF 2):* All Models**
7600	NUT	*FENDERS, FRONT:* **FLHR** **FLHTCU** **FLHRC** **FLHTK** **FLHTK SHRINE** **FLHTKL**
7716	LOCKNUT	*RADIATOR, COOLANT HOSES AND BOTTLE - TWIN-COOLED™:* **FLHTK** **FLHTK SHRINE** **FLTRU** **FLHTKL** ***FOOTBOARDS, OPERATOR:* All Models** *FAIRING, LOWERS, AIR COOLED - FLHTCU:* **FLHTCU** *FAIRING, LOWERS, TWIN-COOLED™ - FLHTK, FLHTKL AND FLTRU (1 OF 2):* **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLTRU** *TOUR-PAK (BOTTOM) (1 OF 2):* **FLHTCU** **FLHTK** **FLHTK SHRINE** **FLHTKL** **FLTRU**
786A	BOLT	***PRIMARY HOUSING:* All Models**
856A	SCREW	***SHIFTER, GEAR:* All Models**

PART NO.	DESCRIPTION	PART AND MODEL(S)
933	SCREW	*WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2):* **FLTRX** **FLTRXS** *LOOSE PARTS (2 OF 3):* **FLTRX** **FLTRXS**
9955	CLAMP	***EXHAUST SYSTEM (1 OF 2):* All Models**

BRAKING & SUSPENSION

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
41852-08B	PAD AND PIN KIT	***BRAKE CALIPER, REAR:* All Models**
41854-08	PAD AND PIN KIT	***BRAKE CALIPER, FRONT:* All Models**
46514-01A	OIL SEAL	*FORK, FRONT - STANDARD (1 OF 2):* **FLHR** **FLHTCU** **FLHRC** **FLHX** **FLHTK** **FLHTK SHRINE** **FLTRX** **FLHXS** **FLTRXS** **FLTRU** **FLHRXS** **FLHT** *FORK, FRONT - LOW:* **FLHTKL**
46615-06	PACKING SEAL	*FORK, FRONT - STANDARD (1 OF 2):* **FLHR** **FLHTCU** **FLHRC** **FLHX** **FLHTK** **FLHTK SHRINE** **FLTRX** **FLHXS** **FLTRXS** **FLTRU** **FLHRXS** **FLHT** *FORK, FRONT - LOW:* **FLHTKL**

CHASSIS & COMPONENTS

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
49725-07A	SPRING	***FRAME AND JIFFY STAND (1 OF 2):*** **All Models**
50245-07	BUMPER	***FRAME AND JIFFY STAND (1 OF 2):*** **All Models**

DECORATIVE & TRIM

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
61274-92	FUEL FILLER CAP	*CONSOLE, FUEL TANK - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (2 OF 3):* **FLHTCU** **FLHX** **FLHTK** **FLHTK SHRINE** **FLHXS** **FLTRXS** **FLHTKL** **FLTRX** **FLTRU** **FLHT**

ELECTRICAL

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
70345-84	RETAINER	*HANDLEBAR:* **FLHR** **FLHRC**
72023-51E	KIT SWITCH	***BRAKE CONTROL, REAR:*** **All Models** ***SWITCHES (1 OF 2):*** **All Models**

PART NO.	DESCRIPTION	PART AND MODEL(S)
72330-95	FUSE	*WIRING HARNESS, MAIN, NON-ABS - FLHT, FLHX (8 OF 8):* **FLHX** **FLHT** *WIRING HARNESS, MAIN, ABS - FLHT, FLHX, FLHXS (8 OF 8):* **FLHX** **FLHXS** **FLHT** *WIRING HARNESS, MAIN, ABS - FLHTCU (8 OF 8):* **FLHTCU** *WIRING HARNESS, MAIN, ABS - FLHTK AND FLHTKL (10 OF 10):* **FLHTK** **FLHTK SHRINE** **FLHTKL** *WIRING HARNESS, MAIN, NON-ABS - FLHR (8 OF 8):* **FLHR** *WIRING HARNESS, MAIN, ABS - FLHR, FLHRC AND FLHRXS (8 OF 8):* **FLHR** **FLHRC** **FLHRXS** *WIRING HARNESS, MAIN, NON-ABS - FLTRX (8 OF 8):* **FLTRX** *WIRING HARNESS, MAIN, ABS - FLTRX AND FLTRXS (8 OF 8):* **FLTRX** **FLTRXS** *WIRING HARNESS, MAIN, ABS - FLTRU (8 OF 8):* **FLTRU**

ENGINE, TRANSMISSION & PRIMARY

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
18538-99C	HYDRAULIC LIFTER	***ROCKER ARM ASSEMBLY AND PUSHRODS:*** **All Models**
29400183	BREATHER ASSEMBLY	***ROCKER ARM ASSEMBLY AND PUSHRODS:*** **All Models**
29400210	BREATHER ASSEMBLY	***ROCKER ARM ASSEMBLY AND PUSHRODS:*** **All Models**
33600091	SHAFT	***SHIFTER, GEAR:*** **All Models**
37000258	CLUTCH DISKS KIT	***CLUTCH:*** **All Models**
37909-90	RING	***CLUTCH:*** **All Models**

FOOT CONTROLS

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
34611-65A	TOE SHIFTER PEG KIT	***SHIFTER, GEAR:*** **All Models**

INTAKE, EXHAUST & FUEL MGMT

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
61011-04A	FUEL FILTER KIT	*FUEL PUMP - FLHT, FLHTCU, FLHTK, FLHTKL, FLHX, FLHXS, FLTRU, FLTRX AND FLTRXS (1 OF 2):* **FLHTCU** **FLHX** **FLHTK** **FLHTK SHRINE** **FLHXS** **FLTRXS** **FLHTKL** **FLTRX** **FLTRU** **FLHT** *FUEL PUMP - FLHR, FLHRC AND FLHRXS:* **FLHR** **FLHRC** **FLHRXS**
65900012	CLAMP	***EXHAUST SYSTEM (2 OF 2):*** **All Models**
65900015	CLAMP	***EXHAUST SYSTEM (2 OF 2):*** **All Models**

LIGHTING

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
68000056	BULB	*AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC:* **FLHR** **FLHRC**

PART NO.	DESCRIPTION	PART AND MODEL(S)
68168-89A	BULB	*AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC:* **FLHR** *AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (1 OF 2):* **FLHTCU** **FLHTK** **FLHTK SHRINE** **FLHTKL** *TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS:* **FLHX** **FLHT** *WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2):* **FLTRX** **FLTRU** *TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS:* **FLHX** **FLHXS** **FLTRX** **FLTRXS** **FLHRXS**
68572-64B	BULB	*TAIL LAMP AND TURN SIGNALS, REAR - FLHT:* **FLHT** *TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS:* **FLHX** **FLHXS** **FLTRX** **FLTRXS** **FLHRXS** *TAIL LAMP AND TURN SIGNALS, REAR - FLHR, FLHRC:* **FLHR**

PART NO.	DESCRIPTION	PART AND MODEL(S)
68973-00	LENS	*AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHTCU, FLHTK AND FLHTKL (2 OF 2):* **FLHTCU** **FLHTK** **FLHTK SHRINE** **FLHTKL** *TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS:* **FLHX** **FLHT** *TURN SIGNALS, FRONT - FLHT, FLHX AND FLHXS:* **FLHXS** *TURN SIGNALS, FRONT - FLHRXS:* **FLHRXS** *WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2):* **FLTRX** **FLTRU** *WINDSHIELD, FAIRING AND HEADLAMP - FLTRU, FLTRX AND FLTRXS (1 OF 2):* **FLTRXS** *TAIL LAMP AND TURN SIGNALS, REAR - FLHT:* **FLHT** *TAIL LAMP AND TURN SIGNALS, REAR - FLHRXS, FLHX, FLHXS, FLTRX, FLTRXS:* **FLHX** **FLHXS** **FLTRX** **FLTRXS** **FLHRXS** *TAIL LAMP AND TURN SIGNALS, REAR - FLHTK, FLHTKL, FLTRU (HDI):* **FLHTK** **FLHTKL** **FLTRU**

MAINTENANCE & TOOLS

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
63731-99A	OIL FILTER	***CRANKCASE:* All Models**
66373-06	BATTERY	***SWITCHES (1 OF 2):* All Models**

SECURITY & STORAGE

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
90300111	REMOTE CONTROL FOB	***SWITCHES (2 OF 2):* All Models** ***LOOSE PARTS (1 OF 3):* All Models**

TIRES

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
40558-82	INNER TUBE	*WHEELS, FRONT, LACED:* FLHRC
40999-87	VALVE STEM	*WHEELS, FRONT, CAST (1 OF 2):* FLHR FLHTCU FLHX FLHTK FLHTK SHRINE FLHTKL FLHXS FLTRX FLTRXS FLTRU FLHRXS FLHT *WHEELS, REAR:* FLHR FLHTCU FLHX FLHTK FLHTK SHRINE FLHXS FLTRX FLTRXS FLTRU FLHRXS FLHT
43109-09A	TIRE	*WHEELS, FRONT, CAST (1 OF 2):* FLHR FLHTCU FLHTK FLHTK SHRINE FLHTKL FLTRU FLHT
43118-92A	TIRE	*WHEELS, FRONT, LACED:* FLHRC
43147-40	RIM STRIP	*WHEELS, FRONT, LACED:* FLHRC

PART NO.	DESCRIPTION	PART AND MODEL(S)
43200027	TIRE	*WHEELS, REAR:* FLHR FLHTCU FLHX FLHTK FLHTK SHRINE FLTRX FLTRU FLHT

WINDSHIELDS & AIR DEFLECTORS

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
67621-94	BUSHING	*AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLHR AND FLHRC:* FLHR FLHRC *WINDSHIELD - FLHR AND FLHRC:* FLHR FLHRC