ROYAL ENFIELD OWNER'S MANUAL

BS IV

ABS | 500 X THUNDERBIRD | THUNDERBIRD 500

FOREWORD

We congratulate you on your choice of the legendary Royal Enfield motorcycle and welcome you to the exciting world of motorcycling. The Thunderbird 500, the ultimate highway cruiser now comes with a solid 500cc engine, a bigger 20 litre tank, ergonomic seating and a powerful projector headlamp. This manual will help you to operate your motorcycle the right way and guide you to maintain it meticulously. We have also provided tips on safe riding and on minor adjustments for the care of your motorcycle. Please avail the four free & five paid services at the nearest Authorised Service Center, at the appropriate time to maintain your motorcycle in top riding condition. Log on to the exciting world of Royal Enfield on www.royalenfield.com to get to know more about the company, its products and exciting news from time to time. We request you to carefully read the terms and conditions of warranty and other useful information given in this manual before starting to use your Thunderbird 500.

NOTICE

All information in this manual is based on the latest product information available at the time of publication. Due to continuous improvements, there may be discrepancies between the information in this manual and your motorcycle. Royal Enfield reserves the right to make production changes at any time without prior notice and without incurring any obligation to make the same or similar changes to motorcycles previously built or sold.

All images shown are for reference to explain and need not to be exactly the same on the model you own. Technical specifications are subject to change without prior notice.

"© Copyright 2019 Royal Enfield (A unit of Eicher Motors Ltd.). All Rights Reserved. No part of this manual shall be copied, distributed or otherwise dealt without the express permission in writing of Royal Enfield".

NOTE: BS IV
This motorcycle meets Emission Norms - Bharat (Trem) Stage - IV

Contact Us:
Royal Enfield Support : 1800-2100-007
Email : support@royalenfield.com
Twitter : @RoyalEnfieldSupport
Web : www.royalenfield.com

Applicable for Stone Black Colour / Matt Paint Finish

Disclaimer

Following precautions are to be taken, to ensure longer paint life of your motorcycle.

1. Do not polish your motorcycle as it increases gloss.
2. Wash only with plain water.
3. Scratches or marks cannot be removed or touched up.

NOTE: Warranty is not applicable for Stone Black Colour / Matt paint finish due to uniqueness of the paint.

Part No. RAM00046/B / Qty. 500 / July '19

CONTENTS

Personal and Motorcycle Information	4
Technical Specifications	5
Recommended Lubricants	8
Safety Definitions	9
Motorcycle Identification Numbers	10
Location of Key Parts	11
Operation of Controls	14
Pre-Operational Checks	23
Safe & Happy Riding	24
Running in Period	25
Warning Indication & Safety Systems	26
Starting	31
Gear Shifting, Riding & Stopping	32
Parking	33
Periodical Maintenance Chart	34
Tools & First Aid kit	38
Wheel Removal & Assembly	39
Minor Maintenance Tips	43
Long Trip Precautions	55
Washing Procedure	56
Storage Precautions	57
Trouble Shooting	58
Warranty Terms & Conditions	60
Emission Warranty	62
EVAP	65
Environment Care	67
Service Coupons	68
Paid Service & Maintenance Record	87
Regional & Area Offices	89
Authorised Dealer Address	90
Notes	129

PERSONAL & MOTORCYCLE INFORMATION

Name					
Door No./Street					
Locality					
City		State		Pin	
Contact Nos.	Res: Off: Mobile :			Email :	
Engine No.				Battery No.	
Frame No.				Battery make	
Reg. No.				Licence No.	
Date of Sale				Valid till dt.	
Model				Key No. :	
Tyre make				Colour	
Sold by				Dealer Code	

Motorcycle Installation Form (MIF) No.	

TECHNICAL SPECIFICATIONS

ENGINE

Engine Type	Single Cylinder 4 Stroke, Spark Ignition, Air cooled, Fuel Injection
Bore	84mm
Stroke	90mm
Swept volume	499cc
Compression ratio .	8.5:1
Max Power	27.2 bhp @ 5250 rpm
Max Torque	41.3 Nm @ 4000 rpm
Idle RPM	1100±200
Starting	Kick Start / E-Start
Air filter element	Paper element
Lubrication	Wet sump, Forced Lubrication
Engine oil capacity	2.75 litres (First Fill only) 2.30 to 2.50 litres (subsequent refills)
Engine oil grade	SAE 15W 50 API SL Grade & Above JASO MA2 Semi Synthetic
Fuel Supply	Electronic Fuel Injection
Cooling	Natural air flow

IGNITION SYSTEM

Ignition system	Digital Electronic Ignition
Spark plug Electrode gap	0.80 to 0.90 mm
Spark plug	WQR8DC (Bosch)

TRANSMISSION

Clutch	Wet multiplate (7 plates)
Primary drive	Duplex chain
Primary ratio	2.15 : 1
Gear box	Constant Mesh, 5 Speed
Gear Ratio	1st 3.06:1 2nd 2.01:1 3rd 1.52:1 4th 1.21:1 5th 1:1
Final drive	18 Teeth (Sprocket)
Final Ratio	2.11:1
Drive Chain links	102 links

TECHNICAL SPECIFICATIONS

CHASSIS

Frame	Single Down Tube, Using engine as stressed member.
Suspension	
Front	Telescopic, 41mm forks, 130mm travel
Rear	Twin gas charged shock absorbers with 5-step adjustable preload, 80mm travel
Brakes	Hydraulic Disc Brakes Front & Rear with ABS System
Front:	280 mm dia disc with twin piston caliper
Rear:	240 mm dia disc with single piston & floating caliper
Tyre size	
Front	90 / 90 - 19" - 52 P
(Thunderbird X)	90 / 90 - 19" - 52 P TUBELESS
Rear	120 / 80 - 18" - 62 P
(Thunderbird X)	120 / 80 - 18" - 62 P TUBELESS
Tyre Pressure	
Solo	
Front	20 psi/1.41 kg/cm^2
Rear	30 psi/2.11 kg/cm^2
With Pillion	
Front	22 psi/1.55 kg/cm^2
Rear	32 psi/2.25 kg/cm^2
Tyre Non Skid Depth	(Thunderbird X)
Front	5.0mm
Rear	6.8mm
Steering lock	In built
Fuel tank capacity ..	20 litres approx. *
Low fuel warning ...	Last bar blink system 5.5 ± 0.50 litres approx.
Dead stock of Petrol (unusable fuel)	0.5 litre approx.

* The above values are approximate and the actual fuel filling capacity will vary from the values mentioned.

ELECTRICALS

Generation	Alternator
System : E-Start	12V - DC

TECHNICAL SPECIFICATIONS

Battery : E-Start	12V - 12 Ah MF
Head lamp	Projection type, Main Beam - 12V, H7 55W Dipped beam - 12V, H7 55W
Position indicator	LED, 12V X 1 No.
Brake/Tail lamp	LED lamp with position light guides
Hi beam indicator .	LED, 12V X 1 No.
Neutral indicator	12V - 1.12W X 1 No
Turn signal indicator	LED, 12V X 2 Nos.
Turn signal /	12V, R10W X 4 Nos.
Horn	12V, 2.5 Amp (Max.)
Starter Motor	12V, 0.90 KW
Instrument Cluster ..	Digital cluster with LCD panel
Malfunction ..... Indicator Lamp (MIL)	LED, 12V X 1 No.
ABS Indicator	LED, 12V * 1 No

- Values / Dimensions given above are for your guidance only.
- In view of continuous improvements being done on our products, the specifications are likely to change without prior notice.

WARNING

Using bulbs / other electrical gadgets other than specified rating may lead to over loading / erratic behaviour / premature failure of electrical system.

Modifications on the motorcycle which are not approved by Royal Enfield may not only disqualify for warranty, but also affects performance of the motorcycle.

DIMENSIONS

Length	2060 mm
(Thunderbird X)	2040 mm
Width	790 mm (Without Mirrors)
(Thunderbird X)	830 mm (Without Mirrors)
Height	1205 mm (Without Mirrors)
(Thunderbird X)	1140 mm (Without Mirrors)
Wheel base	1350 mm
Ground clearance.....	135 mm
Saddle Height	775 mm

WEIGHTS

Kerb weight (90% fuel&oil)	199 Kgs.
Max. Pay load	166 Kgs.

RECOMMENDED LUBRICANTS

Engine Oil	
Grade	SAE 15W 50 API SL Grade & Above JASO MA2 Semi Synthetic
Capacity	2.75 Ltrs. (First Fill only) 2.30 to 2.50 Ltrs. (during oil & filter element replacement in periodical maintenance)

Front Fork Oil	
Grade	Royal Enfield Front Fork Oil (or Gabriel Fork Oil 2w 35)
Capacity	430±3 ml/leg

Brake Fluid	
Grade	DOT 4
Capacity	Fr. 60 ml Rr. 100 ml

DO NOT Mix DOT 4 & other brake fluid together.

CAUTION

Use of Wrong grade oil will reduce the life of the moving parts and seriously affect performance

NOTE

Recommendation subject to change without notice.

ISO 14001 Operation Control Process

As per the guidelines in the ISO 14001 Environmental Management System, customers are advised to carry out timely replacement of Engine, Front Fork and Brake oils, ONLY through a Royal Enfield Authorised Dealer / Service Center for the safe disposal of the used oils to prevent Environmental pollution.

In case the oils are replaced privately, it is advised to ensure the old/ removed oils are collected carefully and reached to a certified disposal agency, nearest to you to safely disposing the oils.

Similarly, hazardous wastes such as old/discarded Batteries, Tyres, Tubes, Cables, Gaskets, Oil filters etc. should also be disposed off carefully and properly only through a certified disposal agency.

SAFETY DEFINITIONS

The information given under the titles : Warning, Caution and Note are for your safety and for the care and safety to your motorcycle and others. Please read these carefully and if disregarded may result in injury to yourself or others and damages to the motorcycle.

WARNING

Indicates a potentially hazardous situation. Disregarding this message may result in injury to rider or other persons.

CAUTION

This message if disregarded may result in damage to the motorcycle.

NOTE

Indicates important and useful messages for clearer understanding.

All Images shown in subsequent pages are for reference to explain and need not to be exactly the same on the model you own.

MOTORCYCLE IDENTIFICATION NUMBERS

FRAME NUMBER

Punched on steering head tube right side.




ENGINE NUMBER

Punched on crankcase left top side.




LOCATION OF KEY PARTS

THUNDERBIRD

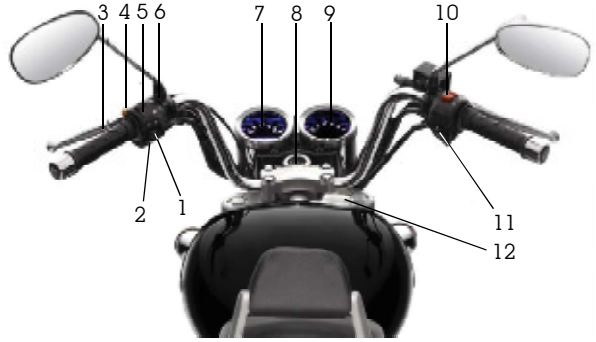

THUNDERBIRD X

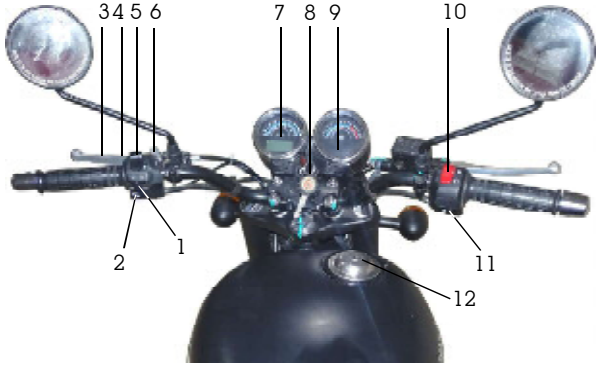

1. Turn Signal Switch	5. Head Lamp Dip Switch	9. Malfunction / Low Fuel Indicator
2. Horn Button	6. Manual Bistarter / Choke	10. Engine Kill Switch
3. Clutch Lever	7. Speedometer	11. E-Start Switch
4. Day Flash Switch	8. Ignition Switch	12. Fuel Tank Cap

LOCATION OF KEY PARTS

THUNDERBIRD




THUNDERBIRD X




1. Right Trafficator Rear	4. Starter Motor
2. Right Trafficator Front	5. Air Filter Box (Side Panel)
3. Brake Pedal	6. Utility Box (Tool Kit)

LOCATION OF KEY PARTS

THUNDERBIRD

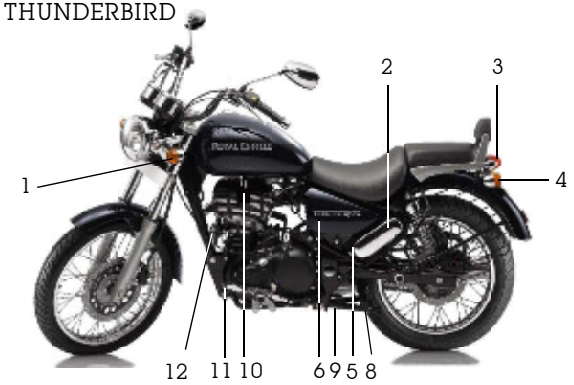

THUNDERBIRD X

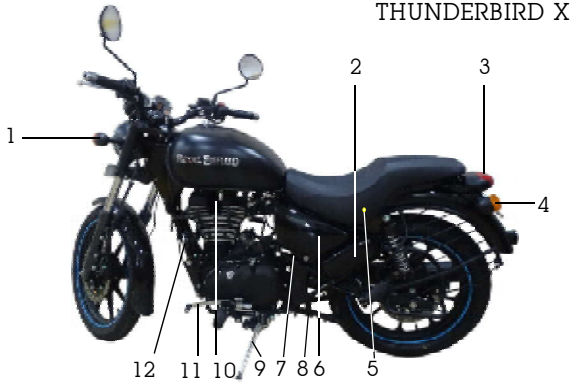

1. Left Trafficator Front	4. Left Trafficator Rear	7. ABS Module	10. Spark Plug
2. Utility Box (Fuse Carrier)	5. Canister	8. Center stand	11. Gear Change Pedal
3. Tail Lamp	6. Battery Cover	9. Side Stand	12. Horn

OPERATION OF CONTROLS

STEERING LOCK



- Turn the handle bar to extreme left or right position.
- Push the key inside in "OFF" position, press and further turn to anticlockwise direction to lock the steering system.
- Push the key in steering lock Position, and turn clockwise direction to unlock the steering.

SIDE PANEL LEFT / BATTERY COVER



- Turn anti clockwise to open
- Pull the side panel outside for opening the same.

SIDE PANEL RIGHT



- Unscrew the indicated screw and then pull the side panel for opening the same.

IGNITION SWITCH




OFF ON

FUEL TANK CAP



- Turn key clockwise to open.
- Press cap to lock with key in position.

FUEL TANK

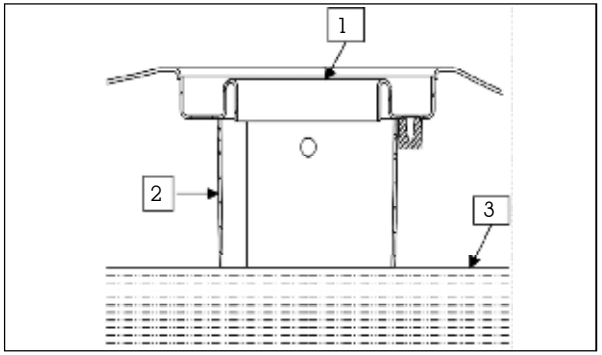

1. Fuel Tank Mouth
2. Splash Arrestor
3. Maximum Fuel Level

WARNING

Do not overfill the fuel tank. Fill upto maximum fuel level & stop filling when the fuel reaches the bottom of Splash Arrestor. Failure to do so will lead to canister damage Or can cause fuel spill out of fuel tank.

Petrol is highly explosive. Please ensure there are no open flames or sparks nearby while refueling and fill fuel tank only in a well ventilated area.

Please ensure petrol does not spill on painted surfaces. Wipe immediately incase fuel spills over as otherwise it will leave a permanent stain on the painted surfaces.

NOTE

- Key is common for ignition, petrol tank cap, steering lock, battery cover and tool boxes.
- Key can be removed only in locked position from fuel tank, Filter box, Electrical boxes locks in "OFF" position from Ignition switch.
- Turn handle bar to extreme left, before attempting to lock steering.

CAUTION

- Turn off ignition switch when engine is not in running condition. Failure to do so will discharge the battery due to continuous headlamp ON.


ENGINE STOP SWITCH

Engine OFF Engine ON



E-START SWITCH

Depress & hold till engine starts

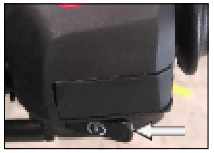

HORN

Press



DIMMER SWITCH

High beam Low beam



DAY FLASH

Press for Head Light Flash



TURN SIGNAL SWITCH

⇦ Left turn signal ON

⇧ OFF (Push to off)

⇨ Right turn signal ON



MANUAL BI STARTER (CHOKE)

Apply choke in cold start condition while starting the Motorcycle



CAUTION

- Choke should be used only to start engine in cold climates (less than 20^{0}C) or first time in the morning. Riding with the Choke "ON" will result in Engine Misfiring, Erratic behaviour, High fuel consumption, and increased Emission values.

OPERATION OF CONTROLS


SIDE DECOR

- Removing Left or Right side decor 4 mm allen key is used.
- The allen key 4mm was placed below the seat lock hook at the right side of the Battery.



RIDER & PILLION SEAT CABLE LOCK

- There are 2 cable hooks, Black & Yellow on right side of the battery (below the hook, Index mark "R" - Rider & "P"-Pillion).
- For TBX single cable hook provided.

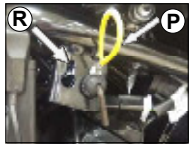


DIGITAL INSTRUMENT CLUSTER



1. Speedometer	Turn Signal Indicator Left
2. r/min. (Tacho) Meter	High Beam Indicator
3. Alpha-Numeric Display Unit	Turn Signal Indicator Right
4. Select Button	Low Fuel Indicator
5. Set Button	Neutral Indicator
	Low Battery Indicator
	ABS Tell Tale
	MIL Tell Tale

OPERATION OF CONTROLS

INSTRUMENT CLUSTER DISPLAY PATTERN

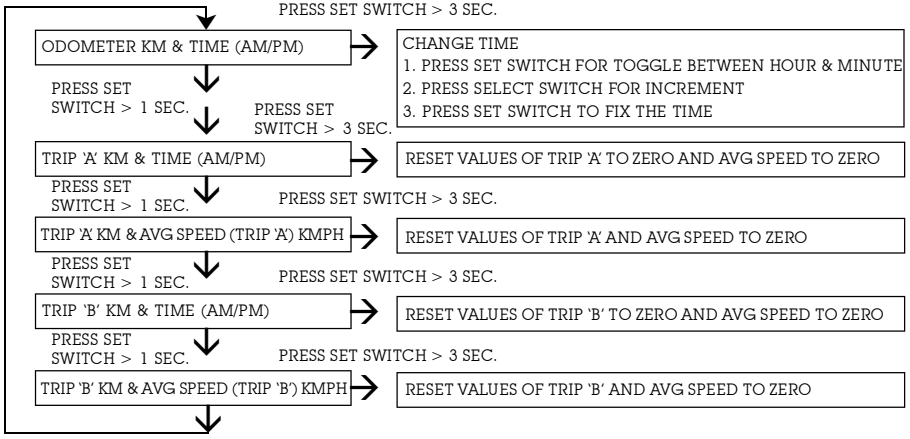


OPERATION OF CONTROLS

ALPHA-NUMERIC DISPLAY UNIT

This unit in the speedometer consists of

1. Odometer
2. Trip A /AVG speed of Trip A
3. Trip B /AVG speed of Trip B
4. Clock
5. Fuel level indicator
6. Service Reminder

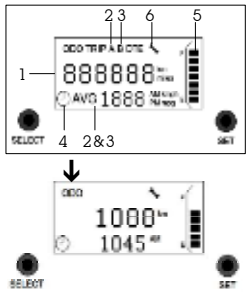

ODOMETER MODE

Odometer mode is a initial mode. It displays odometer and time.

NOTE

Once you turn "ON" the ignition key, whatever the last selection mode will be displayed. If the current display mode is "TRIP A", you just turn off the ignition key.

Once you turn the ignition key the display mode remaining same.

TRIP METER MODE


A brief push (less than one second) on the "SELECT" button switches the display from odometer to Trip meter (TRIP A)

TRIP METER AVG SPEED MODE

Again press the "SELECT" button switches the display from "TRIP A" to "TRIP A AVG".

Again press the "SELECT" button switches the display from "TRIP A AVG" to "TRIP B".

Again press the "SELECT" button switches the display from "TRIP B" to "TRIP B AVG".

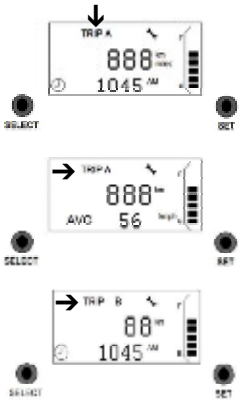

NOTE

After running of One kilometer only AVG TRIP A/B Speed will be displayed.

RESET TRIP METER

1. Change TRIP A/B as a current mode.
2. Press the "SET" button (more than 3 Seconds).
3. Automatically the display will be zero.

CLOCK

The clock indicates the Hours/ Minutes and AM/PM.



RESET CLOCK

1. Change Odometer/as a current mode.
2. Press the "SET" button (more than 3 Seconds).
3. The Hours will be blinking, and press the "SELECT" button to change the Hours.
4. Again press the "SET" button (more than 3 seconds)
5. The Minutes will be blinking, then press the "SELECT" button to change the Minutes

ABS MIL : Will be continuously 'ON' during initial check up (until or after vehicle running for a particular distance/speed) and will turn 'OFF' if system is ok, then will light up again in case of any ABS system malfunction.

NOTE

Once you press the "SELECT" button the Hours/Minutes will increase in ascending order only, it not decrease. The Hour/ Minutes blinks less than 1 minute, within the time limit you have to reset the clock otherwise it will come out from the reset mode.

FUEL LEVEL INDICATOR



The fuel level indicator indicates the level of fuel in the fuel tank.

The display bars of the fuel meter disappears towards the Empty (E) if the fuel level decreases.

When the last bar blink starts(Fuel capacity is less than 5.5 liters refuel as soon as possible). Low fuel indicator will glow continuously. Indication will turn off as soon as the last bar blink stops.

WARNING

When all the segments of the fuel level indicator blinks, indication will glow continuously in this case please contact nearest dealer to check the fuel level indication system.

NOTE

If the last bar of the fuel meter is blinking continuously after fueling, visit the Royal Enfield authorised dealer check the electrical system.

BATTERY LOW VOLTAGE INDICATOR

Low battery indicator will remain ON continuously when the ignition switch is ON and when Engine is not running .



Indication will switch OFF as soon as engine is started. If engine is ON and if battery voltage is below 12 V indicator will glow continuously.

SERVICE REMINDER

The service reminder indicates that if your motorcycle is due for service.



The service reminder symbol will start blinking Kilometers ranges as shown below:

Service Due	Kilometer
1	450
2	2900
3	5900
4	8900

WARNING

Do not change the setting while riding, It may cause loss of control leading to an accident.

NOTE

During this Service Reminder Blink you are advice to visit a Royal Enfield Authorised Dealer / Service Center for availing respective Free/Paid services.

PRE OPERATIONAL CHECKS

A careful check of the following must be carried out every time before riding and specially after long periods of storage to determine if any additional maintenance is necessary.

1. Adequate fuel in the tank.
2. Tyres for correct pressure, abrasions or cuts.
3. Rear chain for proper tension and sufficient lubrication.
4. Brakes, steering and throttle for proper responsiveness.
5. Cable for fraying or crimping and free operation.
6. Engine oil level.
7. Wheel spokes for proper tightness and no breakage.
8. Headlamp, tail lamp, brake lamp and indicator lamps for proper functioning.
9. Smooth operation and free play in front and rear brake levers.
10. Brake fluid level is above the "MIN" mark in the master cylinder.



FRONT BRAKE



REAR BRAKE

WARNING

For your personal welfare and safety, all the points mentioned above should be performed periodically. Failure to do so may affect safe operation, damage your motorcycle and could result in an accident causing serious injury.

SAFE & HAPPY RIDING

RIDING DRESS

- A proper riding apparel
- Proper Riding Boots
- Soft Leather Gloves
- Goggles or spectacles
- An ISI Certified helmet. (Affix light reflecting strips of stickers on the front and rear of the helmet for good visibility at night).

NOTE

A light coloured shirt enables greater visibility to other road users especially during nights.

CAUTION

Loose clothing may get caught on moving parts of the motorcycle.

SITTING POSTURE

Correct sitting posture is a must for stable and safe riding

- Sit Straight with your shoulders completely relaxed.
- Keep your elbows close to your body.
- Hold the handle grip close to its inner end.
- Slightly grip the fuel tank with the knees.
- Keep your toes in "straight ahead" direction.
- Before turning, look extensively in the rear view mirror, without turning your head.

BRAKING

- Use both front and rear brakes simultaneously for maximum braking efficiency.
- While riding on wet or bad road conditions use brakes cautiously.

WARNING

Applying any one of the brakes suddenly may cause the motorcycle to skid.

RUNNING IN PERIOD

The Royal Enfield Motorcycle as you would be experiencing, is capable of consistent high speeds. However as with any new motorcycle, a "RUNNING-IN" procedure is essential to help in proper "Bedding-In" of the various moving parts in your motorcycle and to achieve optimum performance subsequently.

1. During the first 2000 Kms of run, do not exceed the speed limits as shown in the table below.
2. Do not exceed maximum specified pay load.
3. Warm up the engine for a few minutes at idling speed to allow engine oil to lubricate all the moving parts in the engine before riding the motorcycle.
4. Avoid full throttle operation and do not ride at constant throttle continuously. Vary the speed by 10% while riding.
5. Avoid sudden accelerations and racing starts.

Motorcycle Speed / Gear	First 500 kms	501 - 2000 kms
1	15 KMPH	20 KMPH
2	25 KMPH	30 KMPH
3	30 KMPH	40 KMPH
4	45 KMPH	55 KMPH
5	60 KMPH	70 KMPH

WARNING INDICATIONS & SAFETY SYSTEMS


YOUR MOTORCYCLE IS FITTED WITH THE FOLLOWING WARNING INDICATIONS AND SAFETY SYSTEMS:

1. LOW FUEL INDICATION

The low fuel indication will glow if the fuel level in the fuel tank is approximately 5.5 litres.



2. ENGINE MALFUNCTION INDICATOR LAMP

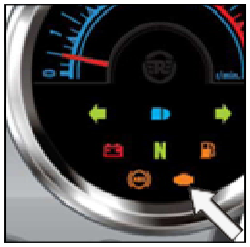


A Malfunctioning Indicator Lamp (MIL) is provided in the small meter.

When both the Ignition & Engine kill switch is "ON" and after vehicle is started, the MIL will glow for few seconds and switch OFF, this indicates that all the functions of Electronic fuel injection (EFI) system is functioning normally.

In the event of any malfunction in the EFI System the MIL will glow continuously. It is recommended to take the motorcycle to a nearest Royal Enfield Authorized service station for a detailed inspection and correction of the EFI system.

3. ANTI-LOCK BRAKING SYSTEM (ABS)

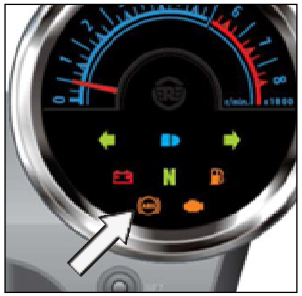

Anti-Lock Braking System (ABS) will help prevent the brakes from locking the wheels, during sudden application of the brakes at high speeds. This will help the rider to have better traction and control over the motorcycle and prevent the motorcycle from skidding which can cause a accident.

In the event of sudden and hard application of the brakes by the rider, the sensors in the braking system will signal the ABS moderator to momentarily and continously reduce the hydraulic pressure and thereby prevent the brakes from locking the wheels while reducing the speed of the vehicle. This will help the rider to control the motorcycle.

An ABS indicator lamp is provided in the console (as shown in adjacent image) to warn the rider in the event of any malfunction of the ABS.

When the ignition and kill switch are switched 'ON', the ABS sign light up and remain 'ON' till the motorcycle attains a speed of 5 Kmph (3MPH) and switch 'OFF'. This indicates the ABS is working properly. In the event the lamp does not switch 'OFF' and remains continously 'ON' at higher speeds, it is recommended not to drive the motorcycle and get the brake system inspected and corrected through a nearest authorized Royal Enfield Distributor. Failure to do so can result in a serious injuries and loss of life.

CAUTION : (ABS)

ABS is a safety feature to help prevent locking of wheels during sudden application of brakes. It is by no means a substitute for good riding practices and anticipatory braking.

Please ride carefully and apply brakes cautiously, especially while cornering. ABS cannot estimate the "weight shifts" and momentum of the motorcycle while negotiating a corner and therefore prevent skidding due to loss of traction.

Please anticipate the stopping distance required for the speed of travel and apply brakes well in advance so as to bring the motorcycle to a safe stop.

Please apply both brakes to stop - front brake momentarily earlier, followed by rear brake, to have better traction and control of the motorcycle

Always ensure that you ride well within the legal speed limits

Failure to adhere to the above can cause an accident resulting in serious injuries and loss of life.

DO'S & DON'T'S : (ABS)

DO'S	DON'TS
■ While starting the engine do check the ABS indicator comes ON and switches OFF when the vehicle speed exceeds 5 km/h (3.1 mph).	■ **DO NOT RELEASE** the brake lever/pedal when pulsations are felt during hard application of the brakes in an emergency situation. The pulsations only indicate that the ABS is activated.
■ Please check the brake fluid at MAX level in the front and rear brake master cylinders and there is no leak in the brakes systems	
■ Apply both the brakes simultaneously for better efficiency while braking	■ DO NOT APPLY only the front OR rear brake as it can lead to inefficient braking.
■ In the event of the ABS indicator remaining continuously ON please take the motorcycle to a nearest authorized Royal Enfield service station to inspect the brakes system control of the vehicle.	

4. ROLL OVER SENSOR

In the event of motorcycle falling over on eitherof its sides with the engine running and the gears engaged the Roll over sensor will "disable" both the ignition and fuel systems and switch 'OFF' the engine. This is to prevent any damage to the motorcycle and its rider. To reset the Roll over sensor and reactivate the ignition and fuel systems.

- Ensure the motorcycle is made upright and is on its center stand.
- Ensure gears are in correct neutral and the neutral lamp is glowing in the instrument console.
- Switch OFF both ignition & stop switches, wait for a few seconds and switch ON the Ignition and stop switch again, to start the engine.

STARTING

- Ensure Gear is in Neutral position and the Neutral lamp is glowing in the speedometer. To shift into neutral, move the motorcycle back and forth gently, while simultaneously shifting the gear.



CAUTION

Do not attempt to shift gears without moving the motorcycle back and forth as it will damage the gears mechanism.

- Use choke (Manual Bi Starter) if required in cold climatic conditions (below 20^{0}C)



- Switch ON Ignition and the Stop Switch to "RUN" Position.



USING THE KICK START LEVER


- Slowly Crank Engine with the Kickstarter lever till a resistance is felt in the lever. Slightly crank slowly and further till the compression eases over.
- Release Kickstarter lever to enable it to come to its top resting position.
- Apply a powerful swinging Kick on the lever to start the engine. (It may be necessary to open the throttle, very slightly, when starting on choke/first time in the morning.
- Release Choke if applied and allow Engine to run at idling speed for a few minutes.

USING ELECTRIC START

- Depress and Hold the Clutch Lever.



- Press Starter Button and hold till Engine starts. **Do not release the button before Engine starts.**
- Do not press the starter button more than 5 sec. After three successive cranking, wait for 15 to 20 sec battery to recover.

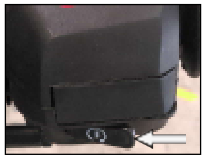




- Warm up engine for 2 minutes - till idling is consistent/stable

GEAR SHIFT PATTERN
1 — N — 2 — 3 — 4 — 5

- Press clutch lever towards the hand grip.
- Press gear pedal with toe towards down to engage 1st gear.
- Gently open throttle and release clutch simultaneously. If clutch is released suddenly, the engine may stall and cause a jerky start.

CAUTION

The clutch must be fully disengaged before attempting a gear shift. Failure to fully disengage the clutch may cause a jerky start OR stalling the engine besides causing damage to transmission parts.

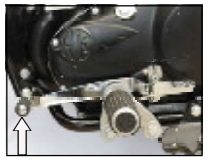

- Press the gear pedal upwards with toe to engage 2nd and gear.
- Follow the same procedure for 3rd, 4th and 5th gear.

NOTE

Always start motorcycle with gear in neutral position.


Always move the motorcycle in first gear position only.

When engine speed decreases or while climbing a gradient or running at a reduced speed, shift to the appropriate lower gear to prevent the engine from stalling or straining to pull.

PARKING


PARKING MOTORCYCLE ON CENTER STAND

- Select a firm, flat surface.
- Hold handle bar straight.
- Lower center stand, such that, both the legs of the stand are resting on firm ground.
- Apply pressure on the fulcrum lever on the center stand and pull motorcycle backward.

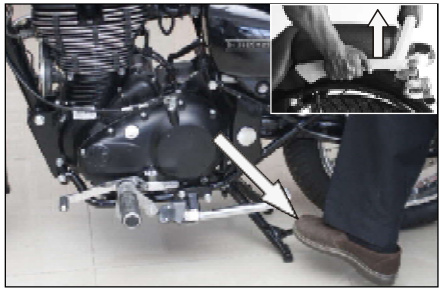

PARKING MOTORCYCLE ON SIDE STAND

- Select a firm, flat surface.
- Extend side stand. Tilt the motorcycle to the left, till it is supported firmly.

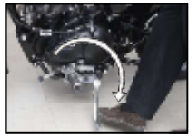

CAUTION

When Side stand is in extended position.

a) Engine will start if vehicle is in neutral, but will cut-off (ignition and fuel) when gear is engaged.

b) Engine will not start if gear is engaged already.

WARNING

Ensure both the stands are retracted fully before riding the motorcycle.

Please exercise extreme care while parking and ensure it is parked firmly to avoid the motorcycle from falling over and causing injury to you or to others and damage to the motorcycle parts.

PERIODICAL MAINTENANCE

The maintenance schedule detailed here will help you maintain your Thunderbird 500 Motorcycle meticulously and to get a long trouble free service. The schedule provided herein is based upon average riding conditions and indicates the KMS at which regular inspections, adjustments, replacements and lubrications are to be carried out. The frequency of the maintenance must be shortened depending upon the severity of the driving condition or if the motorcycle is used in a very dusty environment. Contact the nearest Royal Enfield Authorised Dealer / Service Center for expert advice and to carry out the required maintenance.

Sl. No.	DESCRIPTION	FREE SERVICE whichever is earlier				PAID SERVICE						
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50
	Months	1.5	6	12	18	24	30	36	42	48	54	60
1	Engine Oil	R	I	R	I	R	I	R	I	R	I	R
		Check level at every 1000 kms or earlier and Top up as required										
2	Engine oil filter element	R		R		R		R		R		R
3	Engine sump filter (oil retainer)	C		C		C		C		C		C
4	Spark plug	C&A	C&A	C&A	R	C&A	C&A	R	C&A	C&A	R	C&A
5	Magnetic drain plug under gear box and secondary drain Plug under crankshaft in crankcase right	C		C		C		C		C		C
6	HT leads for crack / damage	I	I	I	I	I	I	I	I	I	I	I
7	Accelerator Cable free play	Adjust every 5000 kms or earlier as required										

PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE whichever is earlier				PAID SERVICE						
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50
	Months	1.5	6	12	18	24	30	36	42	48	54	60
8	Rubber hose, Air filter to carburetor	I	I	I	I	I	I	I	I	R	I	I
9	Rubber hose, Inlet manifold / Adaptor	I	I	I	I	I	I	I	I	R	I	I
10	Evaporative Emission Equipment rubber hoses	I	I	I	I	I	I	I	I	R	I	I
11	Air filter paper element	C	C	R	C	R	C	R	C	R	C	R
		Clean / replace more frequently if operated in dusty condition										
12	Clutch Cable / lever free play	Adjust every 1000 kms or earlier as required										
13	PAV pipes & hose clip	I	I	I	I	I	I	I	I	R	I	I
14	Rear brake pedal pivot	L	L	L	L	L	L	L	L	L	L	L
15	Battery terminals (apply petroleum jelly)	C	C	C	C	C	C	C	C	C	C	C
16	Earth wire eyelet contact	I	I	I	I	I	I	I	I	I	I	I
17	Front Fork oil / Leak	I	I	I	I	R	I	I	I	R	I	I
18	Rear Wheel Drive Chain	I&A	Clean, Lubricate every 1000 Kms / Clean, Lubricate & Adjust every 5000 Kms or earlier as required									

PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE whichever is earlier				PAID SERVICE						
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50
	Months	1.5	6	12	18	24	30	36	42	48	54	60
19	Steering ball races play	I&A	Inspect, Adjust & if required lubricate for every 5000 km or earlier as required. Replace if necessary									
20	Spokes tightness / Wheel rim run out front & rear	I	I	I	I	I	I	I	I	I	I	I
21	Swing Arm pivot bush & spacer	I	Inspect & If required lubricate for every 5000 km or earlier as required. Replace if necessary									
22	Rear wheel cush rubbers	I	I	I	I	R	I	I	I	R	I	I
23	Tyre wear pattern (Front & Rear)	I	I	I	I	I	I	I	I	I	I	I
24	Disc Brake oil level check (Front & Rear)	I	I	I	I	R	I	I	I	R	I	I
25	Pivot-Side stand, Center stand, Pillion foot rest	L	L	L	L	L	L	L	L	L	L	L
26	Throttle Body	Carburetor Throttle body cleaner Every 5000 Kms/ 6 Months or earlier as required										
27	Fuel Hose & Clip	I	I	I	I	I	I	I	I	R	I	I
28	Front & Rear brake hose & Banjo Bolt	I	I	I	I	I	I	I	I	I	I	I
29	Hand levers & kick starter lever pivot	Lubricate every 1000 Kms or earlier as required										

PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE whichever is earlier				PAID SERVICE						
	Kms (x 1000)	0.5	5	10	15	20	25	30	35	40	45	50
	Months	1.5	6	12	18	24	30	36	42	48	54	60
30	Clutch cable	I&A	I&A	I&A	I&A	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R
31	Accelarator cable	I&A	I&A	I&A	I&A	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R	I/A/R
32	Starter motor & Starter relay connections	I	I	I	I	I	I	I	I	I	I	I
33	Rear brake pedal free play	Adjust every 1000 Kms or earlier as required										
34	Brake Pads - Front & Rear	I	I	I	I	I	I	I	I	I	I	I
35	Side stand switch operation	I	I	I	I	I	I	I	I	I	I	I

I : Inspect (Clean, Adjust, Lubricate or Replace if necessary)

A : Adjust C : Clean L : Lubricate R : Replace

I/A/R: Inspect/Adjust/Replace if necessary

NOTE

Check, Adjust & Lubricate frequently when riding in unusually wet, muddy, dusty roads and rainy season.

NOTE

For Maintenance after 50,000 Kms, Please repeat the same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.


TOOLS & FIRST AID KIT

The tool kit is located in the left side Electrical box of the motorcycle.



S.No.	Description	Qty.
1.	Tool bag	1
2.	Screw driver O6 X 160	1
3.	Tommy bar	1
4.	Box spanner 21 X 24	1
5.	Tool-Spark plug	1
6.	Double end spanner 14 X 15	1
7.	Double end spanner 10 X 12	1
8.	Allen Key 4 mm	1

A first aid kit is provided with the motorcyle for any emergency requirements.

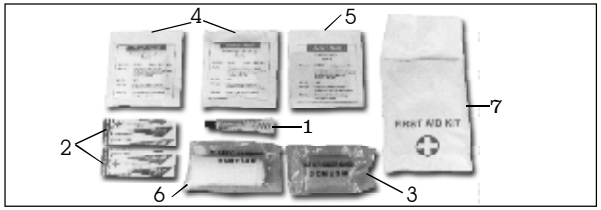

S.No.	Description	Qty.
1.	Antiseptic cream 5 gms	1
2.	Wash proof plaster 1.9 cm x 7.2 cm	2
3.	Gauze bandage 5 cm x 2 cm	1
4.	Sterilized Gauze Swab 5 cm x 5 cm	2
5.	Sterilized elastic plaster 7 cm x 6 cm	1
6.	Elastic Gauze bandage 8 cm x 1 mtr.	1
7.	First aid kit pouch	1

* Please familiarise yourself with the minor maintenance of the motorcycle before attempting to carry out the same.

WHEEL REMOVAL / ASSEMBLY

FRONT WHEEL REMOVAL

- Support front end of engine suitably such that the front wheel is free off the ground
- Loosen pinch bolt on right fork end with 6 mm Allen key.
- Hold spindle on right side and remove spindle nut and washer from left side.
- Support wheel and pull out spindle from right side.
- Remove wheel along with wheel speed sensor and spacer.
- Remove speedo sensor.










CAUTION

Do not press the front brake lever when wheel is removed as this will result in the brake pads coming too far out of the brake caliper.

- Place a 4 mm thick wooden piece or cardboard sheet between the brake pads to avoid pads activation in the event the front brake lever is accidently pressed.

WHEEL REMOVAL / ASSEMBLY

FRONT WHEEL REASSEMBLY

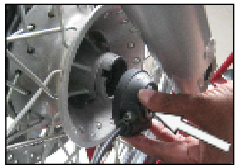

- Remove the wooden / cardboard spacer placed between the brake pads
- Locate wheel speed sensor lugs on the hub slot carefully.
- Position wheel along with wheel speed sensor and spacer on left side between the front fork legs, ensuring the brake disc is located between the brake pads.



- Insert wheel spindle from right fork end.
- Position wheel speed sensor such that it is parallel to ground.



- Hold spindle on right side, locate washer and nut on spindle on left side and tighten firmly.
- Tighten pinch bolt on right fork end.
- Rotate wheel and check for smooth rotation and proper working of speedometer.
- Press brake lever and check front brake for efficiency.


WHEEL REMOVAL / ASSEMBLY

REAR WHEEL REMOVAL

- Place the motorcycle on center stand on a firm and flat surface.
- Note the alignment index marks in the both side of swing arm.
- Remove wheel spindle from left side as shown.
- Remove the brake hose pipe from the swing arm clips.
- Remove the caliper assembly with bracket by pulling out from the swing arm slot.
- Place the wooden piece/card board sheet in between the brake pads.
- Remove the left side spacer from rear wheel hub.
- Tilt motorcycle to right side and slide out rear wheel.









REAR WHEEL REASSEMBLY

- Ensure the four Cush rubbers are in position inside the rear wheel hub.
- Tilt motorcycle to right side and insert the wheel assembly between the swing arms.
- Position the rear wheel with cush rubber on the rear chain sprocket.
- Fix the left side spacer in rear wheel hub.
- Remove the wooden piece / card board sheet in between the brake pads.
- Insert the caliper assembly with bracket by matching the slots given in the caliper and swing arm.










NOTE

Ensure the brake disc is located in between the brake pads.

- Align the caliper bracket, wheel and swing arm holes all are in one line.
- Insert and tap the rear wheel axle gently from left side.

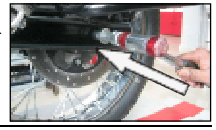


CAUTION

Do not force the spindle into the wheel as the threads may get damaged. Tap it through the wheel gently.

- Note the alignment index marks in the both side of swing arm.



- Fix the brake hose pipe in swing arm clips properly.

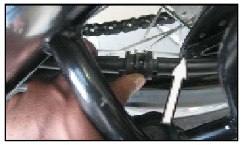

CAUTION

Please check the brake hose pipe routing from Reservoir to Master cylinder, Master cylinder to Rear wheel caliper.

There should not be any twist or pinch in routing which may affect braking performance.

WARNING

Ensure the motorcycle does not come off center stand while assembling / disassembling the wheel assembly. Failure to adhere could result in damage or serious injury.

MINOR MAINTENANCE TIPS

The following simple maintenance activities will help in maintaining your motorcycle. However for an elaborate maintenance, we recommend you to get in touch with a Royal Enfield Authorised Dealer / Service Center.

CONTROL CABLES

Lubricate after water washing motorcycle or if used during rainy conditions.

HAND LEVER PIVOTS

Wipe the area free of dirt / grease.

Apply a few drops of oil on the pivots.



CENTER / SIDE STAND PIVOTS

Apply a few drops of oil on the pivots after cleaning the area of dirt.



DRIVE CHAIN

Clean the drive chain carefully. Apply chain lubricant while simultaneously rotating the rear wheel. Wipe off the excess lubricant.

OIL LEVEL INSPECTION



- Place motorcycle on its center stand on a firm surface.
- Warm up engine for a few minutes & switch off before checking oil level.
- The level is correct if the oil level is in the middle of the oil level window.
- Top up only with recommended Engine oil

CAUTION


Use of wrong grade or spurious oil can seriously affect motorcycle performance & damage to moving parts.

MINOR MAINTENANCE TIPS

SPARK PLUG

CLEANING AND ADJUSTING PLUG GAP

- Remove the spark plug cap from the spark plug.
- Remove spark plug using the plug spanner and tommy bar.
- Clean the insulator tip and electrodes of the plug carefully.
- Check and set the electrode gap between 0.80 to 0.90 mm.

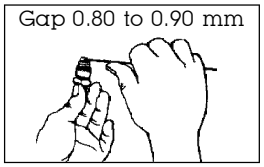

- Refit the spark plug on the cylinder head and refit the spark plug cap on the spark plug.

INSPECTION OF TYRES AND WHEELS

- Inspect the tyres periodically for tread wear, cracks and cuts.

Minimum tread depth :	
Front tyre : 1mm	Rear tyre : 2 mm

- Check and remove stone, splinters, nails or other particles embedded in the tyre treads.
- Periodically inspect wheels for spokes breakage and wheel rim run out.
- Check proper seating of the tyre beading on the rim whenever the tyre is reassembled.
- Use only recommended tyres & tubes, inflated to correct air pressure.

	Front	Rear
Solo	1.41 kg/cm^2 (20 PSI)	2.11 kg/cm^2 (30 PSI)
With Pillion	1.55 kg/cm^2 (22 PSI)	2.25 kg/cm^2 (32 PSI)

BRAKE FLUID



FRONT BRAKE



REAR BRAKE

Check if oil is below 'MIN' level. To top Up, remove cover and diaphragm, then top up with DOT 4 as specified.


CAUTION

Brake fluid is highly corrosive and can cause damage to painted parts. Please ensure that brake fluid does not spill on any part of the motorcycle. In the event of a spill, please clean the area immediately with a soft cloth (preferably a wet cloth) to avoid damage.


DO NOT Mix DOT 4 & other brake fluid together.

ADJUSTMENTS - CLUTCH LEVER FREE PLAY

Clutch Lever (free play 2 - 3 mm)

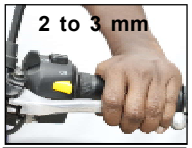

- Loosen the cable outer lock nut (A).
- Turn the Nut (B) Clockwise to reduce the play or Anticlockwise to increase the free play.
- Check free play 2 to 3 mm at Clutch lever pivot on handle bar end.
- Tighten lock nut (A) after adjustment is done.

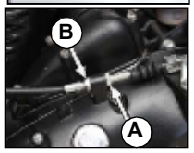

REAR BRAKE LIGHT SWITCH ADJUSTMENTS

- The brake light glows once you press the brake pedal. If brake light is not glowing, check the brake light switch wire connection, bent/broken switch spring and connection with brake pedal.


If above are o.k., then do the adjustments as mentioned below:



- Tighten / loosen the adjusting nut on the brake light switch such that the brake lamp comes on when the pedal is depressed by 25 mm.


DRIVE CHAIN TENSION (Free Play 25-30mm)

- Place motorcycle on its center stand on a firm & flat surface.
- Measure the drive chain free play on the top run of the chain.
- The recommended free play is 25 to 30 mm.

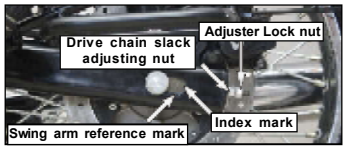

To adjust the free play:

- Loosen rear wheel spindle nut.
- Loosen rear sprocket stub axle nut.
- Loosen lock nuts of the chain adjuster on both ends of the swing arm.
- Tighten / loosen the adjuster nut on right swing arm end, to reduce / increase free play.
- Rotate wheel slowly and check chain free play at the top run to be between 25 - 30 mm.

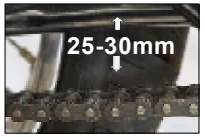

- Note the matching index marks on right swing arm and chain adjuster and tighten / loosen adjuster nut on left swing arm side, to ensure the marks on both sides are at the same position.
- Tighten the lock nuts against the adjuster nuts, taking care not to disturb the adjuster nut settings.
- Tighten rear sprocket stub axle nut and wheel spindle nut to a torque of 7 Kg m.

MINOR MAINTENANCE TIPS

WARNING

Chain slackness beyond 30mm will lead to chain slippage.

Maintain drive chain slackness within the specified limits at every 1000 kms interval.

Please Check the front and rear wheels are correctly aligned, after the chain adjustment.

BATTERY & MAINTENANCE




- The Motorcycle is provided with 12V - 12 AH battery.
- The battery must be periodically checked for
  - Cleanliness and corrosion free terminals.

NOTE

The poor contact or loose fitment of Battery terminals may cause ECU failure.

REMOVAL OF BATTERY FROM THE MOTORCYCLE



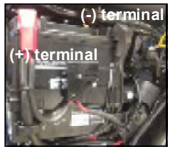

- Unlock (turn the key clockwise) and remove the Left side panel.
- Disconnect both the terminal wires (negative first and positive next respectively)
- Remove the battery carrier bracket by loosening the two screws
- Take out the battery.

WARNING

Always disconnect the negative (-) battery cable first and then the positive (+) cable while removing the battery connections. If the positive (+ve) battery cable should contact terminal with the negative (-ve) cable installed, the resulting sparks may cause a battery explosion which could result in serious injury.

WARNING

Battery terminals and internals contain lead and lead components, known to cause cancer and birth defects or other reproductive harm. Always wear approved protective face shield, rubberized gloves, and protective clothing when working with batteries. KEEP BATTERIES AND ACID OUT OF REACH OF CHILDREN.

NOTE

1. Usage of frequency for motorcycle is very important for battery to be in good performance condition. If the motorcycle is being used very rarely or sparingly and the terminals are not disconnected the battery is bound to lose its charge and result in a dead battery.
2. Your Battery is a maintenance free type and can be permanently damaged if the cap strip is removed.

REASSEMBLY OF BATTERY ON MOTORCYCLE

- Position the battery in the battery carrier.
- Ensure Ignition switch and engine stop switch are in OFF position.



- Connect the positive terminal (Red wire) first
- Connect the negative terminal (Black wire) next.

- Smear the terminals with petroleum jelly. (Do not use grease in the battery terminals).
- Place the terminal boot / cap properly.
- Refit the carrier bracket.
- Refit left side panel & lock it.

NOTE

Clean the wire terminals free of corrosion and keep the terminals coated with petroleum jelly. It is not necessary to check the battery electrolyte level or add distilled water as the battery is a maintenance free (Sealed type).

CAUTION

Keep the +ve and -ve cables firmly conneted to the respective battery terminals. Failure to do so may result in damage to the motorcycle electrical system.

CHANGING ELECTRICAL COMPONENTS

HEADLAMP BULB REPLACEMENT




- Motorcycle is provided with high and low beam
- Remove the head lamp holding 2 nos. side screws.
- Detach the bottom lug from the head lamp housing body.
- Remove the rubber grommet (upper for High beam/another for Low beam) from the reflector assembly.
- Disconnect High beam wire connector (Blue and Black wires)
- Gently press the bulb holding U clip from the both the sides downward and release it from reflector slot as shown.

- Pull out the fused bulb.



NOTE

Never touch the bulb with your fingers. Finger prints will etch the glass and decrease bulb life.

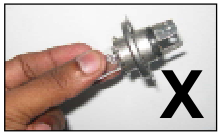

Always hold the bulb with paper or clean dry cloth during handling.

Don't disturb the vent cap provided in the inner body mould.


TAIL LAMP BULB

This model is equipped with LED tail lamp. If tail lamp is not working, you may replace sealed tail light unit.

Contact Royal Enfield Authorised Service center / ASC to replace it.



TRAFFICATOR BULB REPLACEMENT

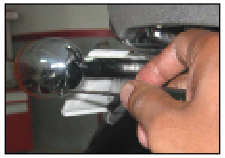

- Remove the screw from the trafficator housing back side.
- Remove outer lens.
- Remove the fused bulb by pushing and turning in anticlockwise direction.
- Position the new bulb inside the holder, ensuring that the pins in the bulb, match with slots in the holder
- Push the bulb and turn clockwise direction to lock the bulb in the holder.
- Refit the trafficator cover with reflector and tighten the screw.


NOTE

Do not over tighten the screw, otherwise the lens may break. Make sure the Ignition switch is in OFF position when replacing the bulbs and electrical items.

BRAKE PAD WEAR


- Brake pad wear depends upon the severity of usage, the type of riding and road condition.

Front Brake

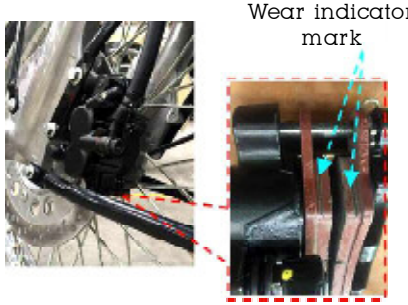


Check the wear indicator mark on each pad. if either pad is worn to the wear indicator mark. replace both pads as set. Visit royal enfield dealer for this service.

Rear Brake

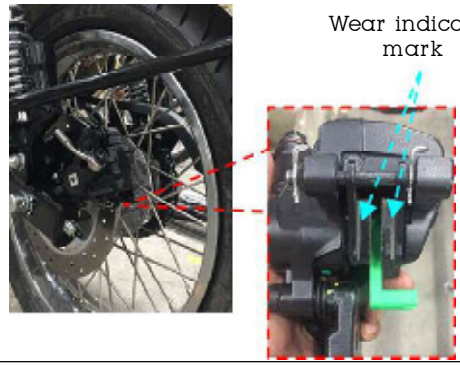


Check the wear indicator mark on each pad. if either pad is worn to the wear indicator mark. replace both pads as set. Visit royal enfield dealer for this service.

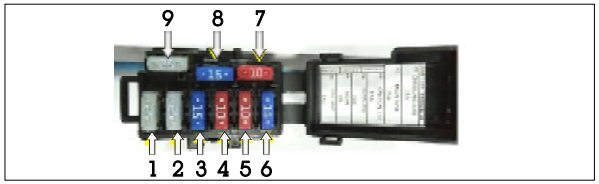

BLADE FUSE USAGE LIST - REGULAR TB 500


Fuse ID No.	Colour	Rating	Remarks
1	White	25 A	Charging Fuse
2	White	25 A	Main Fuse
3	Blue	15 A	Ignition Fuse-EFI
4	Red	10 A	Signalling Fuse
5	Red	10 A	Horn Fuse
6	Blue	15 A	Lighting Fuse (Head Lamp)
7	Red	10 A	Spare Fuse
8	Blue	15 A	Spare Fuse
9	White	25 A	Spare Fuse

RELAY STARTER - FUSE COMMON FOR BOTH 350 & 500CC - REGULAR MODELS

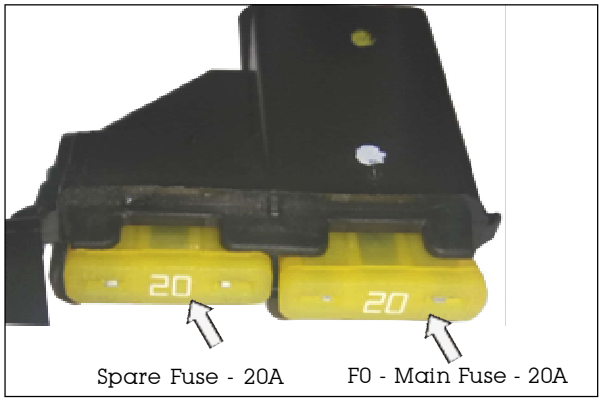

Spare Fuse - 20A F0 - Main Fuse - 20A

RELAY STARTER - FUSE BOX - TBX

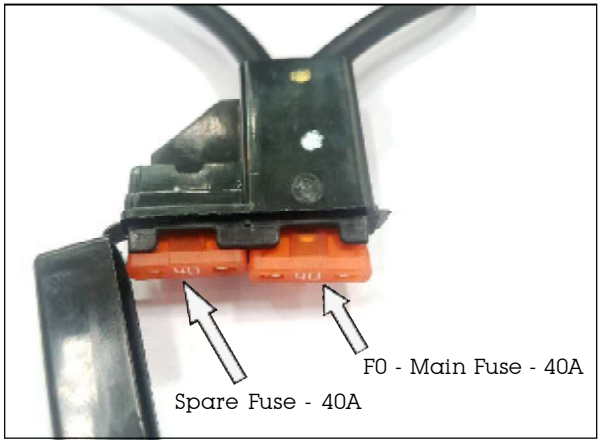

WARNING


Electronic Control Unit (ECU) may fail due to loose electrical connections, loose battery terminals etc. Hence, it is very important to keep all the Electrical connections intact.

WARNING

Please get the electrical system of your Motorcycle checked thoroughly and get the faults corrected immediately after experiencing any fuse failure. Not doing this can result in to repeated fuse failures.

Usage of fuses other than specified rating will damage the complete electrical system.

HARNESS MAIN CABLE FUSE BOX - TBX

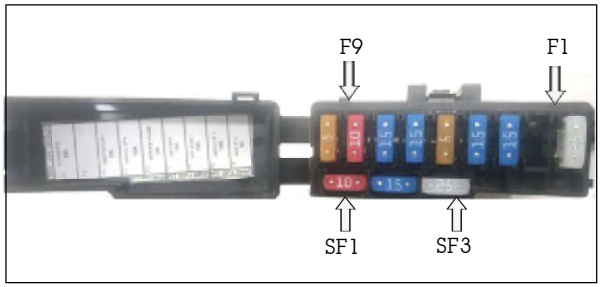

Fuse ID	Descrption	Rating
F1	CHARGING FUSE	25A
F2	Open	
F3	IGNITION EFI	15A
F4	SIGNALLING FUSE	15A
F5	SPARE FUSE	5A
F6	LIGHTING FUSE	15A
F7	ABS MAIN 1	15A
F8	ABS MAIN 2	10A
F9	ABS ECU	5A
SF1	SPARE FUSE	10A
SF2	SPARE FUSE	15A
SF3	SPARE FUSE	25A

LONG TRIP PRECAUTIONS

Checks prior to the commencement of long journey

- Service the motorcycle at a Royal Enfield Dealer / Authorised Service Center.
- Ensure sufficient quantity of petrol in the fuel tank for the journey planned.
- Check and correct tyre pressure if necessary.

Checks after every 1500 kms of run

- Any loose fasteners.
- Condition of the tyres.
- Correct oil level in engine.
- Working of all lights and horn.
- Proper drive chain tension.

Items to be carried

- Tool kit
- First aid kit.
- Bulbs for headlight, trafficator light and Mini blade fuse (25, 15, 10 & 5 Amps).
- Accelerator and Clutch cable.
- Rear chain master link lock assembly.
- Insulation tape.
- Spark plug, Spark plug cap, Fuel hose.
- Spare tubes

WASHING PROCEDURE

PRECAUTIONS

- Wash motorcycle when the engine is cold.
- Cover the silencer, tail pipe, horn and control switches with suitable plastic bags and tie it firmly to prevent water entry.
- Remove ignition key and seal key hole using adhesive tape.
- Do not remove right side cover (panel) while washing to avoid water entry into air filter box assy.
- Brush engine area with a solvent to remove dirt or grease.
- Use low pressure jet of water to clean.
- Never spray water with great force on head lamp, Meter/ cluster unit, flasher lights, front and rear wheel hubs, electrical connections and wires, control cables, EFI components, spark plug, battery air filter cover etc.
- Do not apply any corrosive solvent on painted surfaces or rubber parts.
- Use luke warm water and mild detergent on the painted components to remove dirt, etc.
- Rinse motorcycle thoroughly with plain water to remove the detergent.
- If possible, use compressed air and blow off water particles from the obscure areas of the motorcycle, electrical connections etc.
- Once the motorcycle has been ridden in salty conditions or near coastal areas it is recommended to wash your motorcycle with cold water. Please do not use warm water for washing as it may damage the motorcycle due to chemical reaction with the salt. After washing process once the motorcycle is completely dry it is recommended to apply anti corrosion spray on all the metal and chrome plated areas to protect the parts from corrosion.
- It is recommended not to apply the anti-corrosion spray on the brake discs.

AFTER WASHING

- Ensure, the motorcycle is thoroughly dry by wiping with a clean soft absorbent cloth or chamois leather.
- Remove all plastic bags and adhesive tapes.
- Lubricate control cables, pivots for footrest, side stand, center stand, brake and gear shifter linkages, rear chain etc. with lube oil.
- Polish the painted **(except Stone Black Colour / Matt paint finish)** and plated surfaces using polishing wax.
- Start engine and allow to run at idling speed for a few minutes to warm up engine.
- Drive the motorcycle slowly, applying both brakes intermittently to dry up the water in the brake pads.

STORAGE PRECAUTIONS

Incase your Motorcycle is not going to be used for a month or more, the following precautions should be taken.

- Get the motorcycle service through a Royal Enfield Authorised Dealer / Service Center.
- Drain fuel tank and fuel line.
- Keep the fuel tap in closed position and spray engine oil inside the fuel tank to prevent rusting.
- Remove spark plug. Pour in about 25ml of clean engine oil through spark plug hole. Close the hole and crank engine several times and refit spark plug.
- Clean rear chain thoroughly and apply a thin film of lub oil.
- Remove battery from the motorcycle. Clean the terminals free of corrosion and apply petroleum jelly to terminals.
- If the motorcycle is not used for a month or longer, It is advised to disconnect battery terminals and remove the battery. Before refitting the battery in the motorcycle, check the battery voltage is within specification, if not, recharge it from authorized service workshop / battery dealer.
- Store the battery in a cool, dry and well ventilated place.
- Cover the silencer with plastic bags to prevent moisture entry. Set the motorcycle on its center stand.
- Apply anti rust solutions on all plated parts. Take care not to apply this solution on rubber or painted parts.
- Store motorcycle in a clean covered area free - of moisture and dust.
- For re use after storage, it is preferable to get the motorcycle prepared through a Royal Enfield Authorised Dealer / Service Center to ensure the motorcycle is restored to its peak operating conditions.

TROUBLE SHOOTING

We have listed below a few basic checks in case your motorcycle is not functioning. If in case the problem is not rectified after these checks, it is necessary to get the motorcycle checked by a Royal Enfield Authorised Dealer / Service Center to rectify the problem and to ensure trouble free performance.

Symptom	Observations	Check for / Remedy
Engine Does not start	1. Ignition/Engine stop switch is in "OFF" position	Switch "ON" Ignition / Engine stop switch
	2. Very low / No fuel in the fuel tank.	Check Fuel level / fuel meter and fill fuel
	3. Lights / horn very dim	Weak/Discharged battery. Replace Battery
	4. Electricals not working	1. Battery completely dead. Replace battery 2. Fuse Blown. Replace appropriate fuse. Note: If fuse blows again, contact Authorised Service Center.
	5. Engine Cranking but not starting	Spark plug Cap/wire disconnected. Reconnect.
	6. MIL glowing continuously	Contact Authorised Service Center
Engine Starts BUT shuts off immediately	Engine shuts off as soon as throttle is closed.	Idling RPM set too low / setting disturbed. Contact Authorised Service Center for resetting the Idling RPM.

TROUBLE SHOOTING

Symptom	Observations	Check for / Remedy
Engine Misfires & Runs Erratically / Stops	Motorcycle driven in Low gear / High RPM Crowded places for long time.	Excessive Engine temperature. Switch OFF Engine and allow to cool down.
Poor Pickup	1. Engine RPM raises improportionately to motorcycle speed	Clutch is Slipping. Check for sticky clutch/ clutch not having any free play.
	2. Rear Chain excessively loose causing chain to slip on Sprocket.	Adjust Rear chain to correct tension.
ABS (Anti lock Braking system)	ABS lamp continuously ON.	Take the vehicle to service center for diagnosis

WARRANTY TERMS & CONDITIONS

Royal Enfield Motorcycles are manufactured by following best Quality practices in respect of the material and workmanship.

Royal Enfield (RE) warrants its motorcycle to be free from manufacturing and material defect under normal use subject to following conditions.

1. RE will replace or repair defective part(s) at their Dealerships and Authorised Service Center, free of charge within a period of 2 years / 30,000 kms from the date of sale, whichever is earlier.
2. In order to avail warranty benefits by second or subsequent owner, the second/subsequent owner should inform the nearest Royal Enfield Service Center about the purchase of the bike and shall fill in the requisite details in the form as requested by Royal Enfield.
3. The warranty shall be applicable only if all the 4 free services & 5 paid services are availed in the respective period/kilometer ranges as per the schedule in the owner's manual from RE Authorised Dealer / Service Center.
4. During the warranty period, RE's obligations shall be limited to repairing/replacing part(s) of the motorcycle for free, only if the part(s), on examination is deemed to have a manufacturing defect. Defective part(s) which have been replaced will become the sole property of RE.
5. Cost of oil, oil filter and fuel are chargeable to the customer.
6. Claims on proprietary items like tyres, tubes, spark plug, battery etc. should be taken up with the respective manufacturer or their authorised agents in the area directly by the customer. RE shall not be liable in any manner to replace them through their dealers. RE will, however, provide assistance in preferring such claims on the respective manufacturer.
7. Warranty shall not apply to:
   (a) Normal ageing, deterioration or rusting of plated parts, paints coat, rubber parts, soft items, glass items, plastic parts etc.

(b) Components like fuel filter, oil filter, Air filter paper element, control cables, brake shoes / brake pads, clutch plates, drive chain & sprocket kit, Steering ball races, Electrical equipment, wiring harness etc., which are subjected to normal wear and tear.

(c) Failures occurred due to use of non recommended grade lubricants, fuel or improper level.

(d) Damages due to use of non-genuine parts, lack of proper maintenance, incorrect riding habits.

(e) Parts damaged due to accidents, collision, abuse etc.

(f) Irregularities not recognised as affecting the quality or function of the motorcycle such as slight vibration, oil leakage, discoloration of exhaust bent pipe/silencer/soft or hard shockabsorber etc.

(g) Defects arising from fitment of unauthorised or additional electrical loads.

(h) Motorcycle serviced or repaired at unauthorised service centers.

(i) Motorcycle used for competitions / racing / Stage Rallying etc.

(j) Electrical component like bulbs, fuses etc. and electronic components failure including ECU due to repairs by arc welding.

(k) Motorcycle found with tampering / drilling / welding mark on any part of the Frame.

(l) Normal maintenance operations like adjustment of brakes, cleaning fuel system, engine tune-up and other such adjustments.

(m) Oxidization of buffed/painted/powder coated items etc.

8. RE reserves the right to finally decide on all warranty claims.

9. RE reserves the right to make changes in design of the motorcycle without any obligation to install these changes on previously supplied motorcycles.

EMISSION WARRANTY

In compliance with the provisions of Rule 115(2) of the Central Motor Vehicles Rules, 1989, Royal Enfield certifies that the following warranty is applicable to those components liable to affect the emission of the gaseous pollutants in its range of motorcycles, in normal use to which it may be subjected to.

This emission warranty comes into force from 01st July 2001 and is valid for a period of 30,000 Kms. or 36 months, whichever occurs earlier, from the date of sale to the first customer and is in addition to and parallel to the warranty policy, conditions and obligations laid down in the Owner's Manual.

Royal Enfield further warranty that if on examination by its Authorised Dealer / Service Center, the motorcycle fail to meet the specified emission standards, then the Authorised Dealer / Service Center shall take necessary corrective measures and shall at its sole discretion, repair or replace free of charge such components of the emission control system to meet the required emission standards.

The method/s of examination to determine the warranty conditions of the emission warranty related components will be at the sole discretion of Royal Enfield and / or our Authorised Dealer / Service Center and results of such examination will be final and binding. If on examination the warranty conditions of the part/s is/are not established, Royal enfield will have the right to charge all, or part of the cost of such examination to the customer in addition to the cost of the components.

In case of acceptance of the component/s under Emission warranty, Royal Enfield will replace free of charge, the component/s as required. However, the consumables like fuel, lubricants, solvents, etc shall be chargeable to the customer as per actuals.

In case any of the components covered under emission warranty or the associated parts, are not independently replaceable. Royal Enfield will have the sole discretion to replace either the entire assembly or parts of the assembly, through suitable repairs.

Royal Enfield reserves the right to carry out necessary consequential repairs to the motorcycle or replace any part, in addition to the repair or replacement of the components covered under emission warranty, to establish compliance to in-use emission standards. Such repairs / replacements will be chargeable to the customer.

All parts removed for replacement under warranty will become the property of Royal Enfield.

Royal Enfield will not be responsible for the cost of transportation of the motorcycle to the nearest Authorised Dealer / Service Center OR for any loss due to non availability of the motorcycle during the period of examination and repairs by Royal Enfield and / or their Authorised Dealer / Service Center.

EMISSION WARRANTY

Royal Enfield will not be responsible for any penalties that may be charged by statuatory authorities on account of failure to comply with the in-use emission standards.

That cost/s incurred to check emission of the motorcycle will have to be borne by the customer.

Emission warranty will be applicable irrespective of the change of ownership of the motorcycle provided all the conditions as laid down in this document are met from the date of original sale of the motorcycle.

THE WARRANTY SHALL APPLY IF THE CUSTOMER

- Observes all the important instructions and any other precautions listed in the owner's manual.
- Under all circumstances uses lubricants and fuel as recommended by Royal Enfield.
- Regularly obtains and carries out maintenance in accordance with Royal Enfield guidelines and enters the details in the Log book.
- Immediately approaches the nearest Authorised Dealer / Service Center upon discovery of failure to comply with the IN-USE emission standard inspite of having maintained and used the motorcycle in accordance with the instructions in the owner's manual and having carried out such repairs and adjustments as may be required with a view to establish such compliance.
- Produces the 'Pollution Under Control' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate or pursuant upon being directed by an officer as referred to in sub rule (2) of rule 116 of the Central Motor Motorcycles Rules (CMVR).
- Produces the owner's manual and Log book for verification details.
- Produces receipts covering maintenance of the motorcycle is specified in the owner's manual from the date of original purchase of the motorcycle.
- Produces valid certificate of Insurance and R T O Registration Certificate (R.C. Book).

THE EMISSION WARRANTY SHALL NOT APPLY IF

- A valid "Pollution under control" certificate is not produced.
- The motorcycle is not serviced by Authorised Dealer/ Service Center as per the service schedule described in the maintenance chart.
- The motorcycle has been subjected to abnormal use, abuse, neglect and improper maintenance or has met with an accident.

EMISSION WARRANTY

- Replacement parts not specified and approved by Royal Enfield have been used.
- The motorcycle, or parts thereof, has been altered, tampered with or modified or replaced in an unauthorised manner.
- The odometer is not functioning or the odometer and / or its reading has been changed / tampered with, so that the actual distance covered cannot be readily determined.
- The motorcycle has been used for competitions, races, and rallies or for the purpose of establishing records.
- On examination by Royal Enfield or its Authorised Dealer / Service Center, if the motorcycle shows that any of the conditions stipulated in the Owner's manual with regard to use and maintenance have been violated.
- The motorcycle has been run on adulterated / leaded fuel or lubricant other than those specified by Royal Enfield in the Owner's manual or any other document given to the customer at the time of sale of the motorcycle.
- The emission related components are tampered with.
- All service and parts related bills and vouchers incurred during the tenure of the emission warranty is not produced.
- All maintenance activities carried out on the motorcycle during the tenure of the emission warranty is not entered in the log book.

TIPS TO BE ON THE RIGHT SIDE OF LAW

- Always get your motorcycle checked to meet the emission regulations through and authorised emission checking center.
- Always carry a valid 'Pollution Under Control' certificate with you at all times during the validity of the emission warranty (30,000 Kms / 3 years from the date of first sale)

TIPS TO REDUCE POLLUTION

- Ensure that the periodical maintenance is carried out as stipulated in the owner's manual through a Royal Enfield Authorised Dealer / Service Center.
- Use only Unleaded petrol (> 87 octane) from reputed fuel pumps.
- Ensure the fuel used is not adulterated.
- Use correct spark plug as recommended in the owner's manual.
- Use lubricants as per recommendations given on grade / brand in the owner's manual.

EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY

The following warranty applies to the evaporative emission control system.

Royal Enfield Motors warrants the first owner and each subsequent owner, that this motorcycle is designed and built so as to conform, at the time of sale, with applicable regulations specified by the evaporative emission control system related parts fitted to this motorcycle are free from defects in materials and workmanship which may cause this motorcycle not to meet applicable regulations period of 24 Months from the date of first use of the motorcycle.

The Warranty period shall begin either on the date the motorcycle is delivered to the first retail purchaser OR from the first date the motorcycle is used as a demonstrator OR as a display and/or trial motorcycle.

THE FOLLOWING ARE NOT COVERED BY THE EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY:

1. Failures which may arise as a result of misuse, alterations, accidents OR non performance of routine maintenance, as specified in the Owner's Manual.
2. Replacing OR removing OR modifying any portion of the EVAPORATIVE EMISSION CONTROL SYSTEM (consisting of Fuel tank, fuel tank cap, Canister, purge valve, throttle body, vapor hoses, fuel hoses and hose connectors) with parts not certified to be genuine.

3. Loss of time, inconvenience, loss of motorcycle use or any other consequential loss or damages.
4. Any motorcycle in which the Odometer has been tampered with, OR the Speedo cable has been disconnected for any reason OR is broken and not replaced immediately, due to which the exact distance covered cannot be determined.
5. Normal ageing of parts such as fuel hoses, vapor hoses, gaskets & rubber components.

RECOMMENDATIONS FOR REQUIRED MAINTENANCE:

IT IS RECOMMENDED THAT THE ROUTINE MAINTENANCE OF THE MOTORCYCLE BE CARRIED OUT AT SPECIFIED INTERVALS AND ANY MAINTENANCE TO THE EVAPORATIVE EMISSION CONTROL SYSTEMS SHOULD BE PERFORMED ONLY BY AN AUTHORISED ROYAL ENFIELD SERVICE DEALER AND USING ONLY GENUINE ROYAL ENFIELD SPARE PARTS.

ENVIRONMENT CARE

BE AN ENVIRONMENTALLY CONSCIOUS RIDER

Swachh Bharat is Sachh Bharat. Being a Royal Enfield rider help the nation and the future generation for a cleaner environment

Engine oil, oil filter, petrol, Battery, tyres, tubes, electrical & electronic parts replaced on your vehicle are to be disposed off in a proper way without polluting the environment. When your vehicle is attended in a Royal Enfield workshop our dealers do take care of that aspect. If you are getting it attended elsewhere please ensure that items are segregated and kept in a suitable container or bag without allowing them to get into soil, water or sewerage line, drains, water bodies like lake, canal, river. Sea etc. We strongly recommend that they are disposed off, in accordance to the applicable law, through Pollution Control Board approved agencies in the locality.

CLEANING OR WASHING YOUR ROYAL ENFIELD

Please ensure that the effluents are not discharged into the environment. Please promote dry washing which helps the nation to conserve water too.

This note does not constitute legal advice; please contact your local authorities or your nearest Royal Enfield Service Centre for further guidance.

SERVICE COUPONS

It is our endeavour to provide excellent service to your Royal Enfield Motorcycle at all times. Towards this we provide initial 4 free services & 5 paid services at specific intervals.

Please avail these services at the specified time, in any of the Royal Enfield Authorised Dealer / Service Center nearest to you and as a token of satisfactory service, kindly return the service coupons duly filled in and signed, to the service outlet.

Availing all the services in the specified time is a prerequisite to warranty consideration.

The cost of fuel, oil, oil filter element, grease and consumables used during services is chargeable to the customer.

Please ensure the details of the periodic service is filled in the manual for future reference.

1ST FREE SERVICE

1st Free Service

500 Kms
or
45±8 days
whichever is earlier from the date of sale

Enter the Details in Free Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

500 KMS or 45±8 DAYS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name : Dealer Code : ☐☐☐☐

Address :

Frame No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Engine No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Motorcycle Installation Form No. ☐☐☐☐☐☐☐☐☐☐

ODO Reading : ☐☐☐☐☐☐☐☐

Sold by (Dealer's Name & Address)

Regn. No: ☐☐☐☐☐☐☐☐☐☐

Sale Date: ☐☐☐☐☐☐☐☐

Serviced Date: ☐☐☐☐☐☐☐☐

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : ..... Date : ☐☐☐☐☐☐☐☐

Contact Phone / Mobile No.: ☐☐☐☐☐☐☐☐☐☐

1ST FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Inspect & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Wheel rim front & rear	Check spokes tightness / run out
8	Front fork	Inspect for oil leakage
9	Air filter element	Clean
10	Spark plugs (2 Nos.)	Check, clean & adjust gap
11	H.T. Leads	Inspect for cracks
13	Carburetor	Clean, Inspect & tune
14	Fuel Pipe	Inspect for cracks
15	Rubber hose, Air filter to Carburetor	Inspect for cracks
16	Rubber hose, Inlet manifold	Inspect for cracks
17	Rubber hose, Evaporative Emission Equipment	Inspect for Cracks
18	Accelerator, Carburetor / TPS cable	Check & adjust play
19	Clutch cable / Lever free play	Adjust play
20	Engine oil sump strainer, magnetic drain plug	Clean
21	Engine oil	Replace
22	Engine oil filter paper element	Replace
	O-Rings used at strainer & oil filter element Copper washer used at magnetic drain plug, Flywheel chamber drain screw	
23	Hand levers & kick starter pivot	Lubricate
24	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
25	Steering free play	Inspect
26	Tyres front & rear	Check wear pattern

CUSTOMER COPY

Job Card No:

Date :

Odo Reading :

Name of Dealer/
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

2ND FREE SERVICE

2nd Free Service

5000 Kms
or
6 Months
whichever is earlier from the date of sale

Enter the Details in Free Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

5000 KMS or 6 MONTHS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name : Dealer Code : ☐☐☐☐

Address :

Frame No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Engine No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Motorcycle Installation Form No. ☐☐☐☐☐☐☐☐☐☐☐

ODO Reading : ☐☐☐☐☐☐☐☐

Sold by (Dealer's Name & Address)

Regn. No: ☐☐☐☐☐☐☐☐☐☐

Sale Date: ☐☐☐☐☐☐☐☐

Serviced Date: ☐☐☐☐☐☐☐☐

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : ..... Date : ☐☐☐☐☐☐☐☐

Contact Phone / Mobile No.: ☐☐☐☐☐☐☐☐☐☐

2ND FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Tyres front & rear	Check wear pattern
8	Front fork	Inspect for oil leakage
9	Air filter element	Clean
10	Spark plugs (2 Nos.)	Check, clean & adjust gap
11	H.T. Leads	Inspect for cracks
12	Front & Rear brake hose & Banjo Bolt	Inspect
13	Fuel Pipe	Inspect for cracks
14	Rubber hose, Air filter to Carburetor	Inspect for cracks
15	Rubber hose, Inlet manifold	Inspect for cracks
16	Rubber hose, Evaporative Emission Equipment	Inspect for Cracks
17	Accelerator, Carburetor / TPS cable	Check & adjust play
18	Clutch cable / Lever free play	Adjust play
19	Engine oil	Check level & top-up
20	Hand levers & kick starter pivot	Lubricate
21	Carburetor	Clean, Inspect & tune
22	Steering free play	Check & Adjust
23	Tyres front & rear	Check wear pattern
24	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate

CUSTOMER COPY

Job Card No:

Date :

Odo Reading :

Name of Dealer/
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

3RD FREE SERVICE

3rd Free Service

10000 Kms
or
1 Year
whichever is earlier from the date of sale

Enter the Details in Free Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

10000 KMS or 1 YEAR WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name : Dealer Code : ☐☐☐☐

Address :

Frame No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Engine No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Motorcycle Installation Form No. ☐☐☐☐☐☐☐☐☐☐☐

ODO Reading : ☐☐☐☐☐☐☐☐

Sold by (Dealer's Name & Address)

Regn. No: ☐☐☐☐☐☐☐☐☐☐

Sale Date: ☐☐☐☐☐☐☐☐

Serviced Date: ☐☐☐☐☐☐☐☐

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : ..... Date : ☐☐☐☐☐☐☐☐

Contact Phone / Mobile No.: ☐☐☐☐☐☐☐☐☐☐

3RD FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Wheel rim front & rear	Check spokes tightness / run out
8	Tyres front & rear	Check wear pattern
9	Air filter element	Replace
10	Spark plugs (2 Nos.)	Check, clean & adjust gap
11	H.T. Leads	Inspect for cracks
12	Fuel Pipe	Inspect for cracks
13	Rubber hose, Air filter to Carburetor	Inspect for cracks
14	Rubber hose, Inlet manifold	Inspect for cracks
15	Rubber hose, Evaporative Emission Equipment	Inspect for Cracks
16	Accelerator, Carburetor / TPS cable	Check & adjust play
17	Clutch cable / Lever free play	Adjust play
18	Engine oil sump strainer, magnetic drain plug	Clean
19	Engine oil & oil filter paper element O-Rings used at strainer & oil filter element Copper washer used at magnetic drain plug, Flywheel chamber drain screw	Replace
20	Swing arm spacer & pivot bush	Lubricate
21	Hand levers & kick starter pivot	Lubricate
22	Carburetor *	Clean, Inspect & tune
23	Steering System	Check, Lub. steering balls & adj. play
24	Front fork	Inspect for oil leakage
25	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate

*Recommended - Carb Cleaner / Carblick or Fuel line Clearner Spary (Wurth or ITW Chemin)

CUSTOMER COPY

Job Card No:

Date :

Odo Reading :

Name of Dealer/
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

4TH FREE SERVICE

4th Free Service

15000 Kms
or
1½ Years
whichever is earlier from the date of sale

Enter the Details in Free Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

15000 KMS or 1½ YEARS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name : Dealer Code : ☐☐☐☐

Address :

Frame No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Engine No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Motorcycle Installation Form No. ☐☐☐☐☐☐☐☐☐☐

ODO Reading : ☐☐☐☐☐☐☐☐

Sold by (Dealer's Name & Address)

Regn. No: ☐☐☐☐☐☐☐☐☐☐

Sale Date: ☐☐☐☐☐☐☐☐

Serviced Date: ☐☐☐☐☐☐☐☐

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : ..... Date : ☐☐☐☐☐☐☐☐

Contact Phone / Mobile No.: ☐☐☐☐☐☐☐☐☐☐

4TH FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Front & Rear brake hose & Banjo Bolt	Inspect
8	Front fork	Inspect
9	Air filter element	Clean
10	Spark plugs (2 Nos.)	Replace
11	H.T. Leads	Inspect for cracks
12	Carburetor	Clean, Inspect & tune
13	Fuel Pipe	Inspect
14	Rubber hose, Air filter to Carburetor	Inspect for cracks
15	Rubber hose, Inlet manifold	Inspect for cracks
16	Rubber hose, Evaporative Emission Equipment	Inspect for Cracks
17	Accelerator, Carburetor / TPS cable	Check & adjust play
18	Clutch cable / Lever free play	Adjust play
19	Engine oil	Check & top-up
20	Hand levers & kick starter pivot	Lubricate
21	Steering system	Check & adjust play
22	Tyres front & rear	Check wear pattern
23	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate

CUSTOMER COPY

Job Card No:

Date :

Odo Reading :

Name of Dealer/
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

5TH PAID SERVICE

5th Paid Service

20,000 Kms
or
2 Years
whichever is earlier from the date of sale

Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

20,000 KMS or 2 YEARS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name : Dealer Code : ☐☐☐☐

Address :

Frame No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Engine No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Motorcycle Installation Form No. ☐☐☐☐☐☐☐☐☐☐☐

ODO Reading : ☐☐☐☐☐☐☐☐

Sold by (Dealer's Name & Address)

Regn. No: ☐☐☐☐☐☐☐☐☐☐

Sale Date: ☐☐☐☐☐☐☐☐

Serviced Date: ☐☐☐☐☐☐☐☐

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : ..... Date : ☐☐☐☐☐☐☐☐

Contact Phone / Mobile No.: ☐☐☐☐☐☐☐☐☐☐

5TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Replace
7	Wheel rim front & rear	Check spokes tightness / run out
8	Tyres front & rear	Check wear pattern
9	Front fork	Replace
10	Air filter element	Replace
11	Spark plugs (2 Nos.)	Check, clean & adjust gap
12	H.T. Leads	Inspect for cracks
13	Fuel Pipe	Inspect for cracks
14	Accelerator, Carburetor / TPS cable	Check & adjust play
15	Rubber hose, Air filter to Carburetor	Inspect for cracks
16	Rubber hose, Inlet manifold	Inspect for cracks
17	Rubber hose, Evaporative Emission Equipment	Inspect for cracks
18	Clutch cable / Lever free play	Adjust play
19	Engine oil sump strainer, magnetic drain plug	Clean
20	Engine oil & oil filter paper element O-Rings used at strainer & oil filter element Copper washer used at magnetic drain plug, Flywheel chamber drain screw	Replace
21	Hand levers & kick starter pivot	Lubricate
22	Steering System	Check, Lub. steering balls & adj. play
23	Swing arm spacer & pivot bush	Lubricate
24	Rear wheel cush drive rubbers	Replace
25	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
26	Earth wire eyelet Contact (Below Flasher unit)	Inspect
27	Carburetor	Clean, Inspect & tune

CUSTOMER COPY

Job Card No:

Date :

Odo Reading :

Name of Dealer/
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

6TH PAID SERVICE

6th Paid Service

25,000 Kms
or
2½ Years
whichever is earlier from the date of sale

Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

25,000 KMS or 2½ YEARS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name : Dealer Code : ☐☐☐☐

Address :

Frame No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Engine No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Motorcycle Installation Form No. ☐☐☐☐☐☐☐☐☐☐☐

ODO Reading : ☐☐☐☐☐☐☐☐

Sold by (Dealer's Name & Address)

Regn. No: ☐☐☐☐☐☐☐☐☐☐

Sale Date: ☐☐☐☐☐☐☐☐

Serviced Date: ☐☐☐☐☐☐☐☐

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : ..... Date : ☐☐☐☐☐☐☐☐

Contact Phone / Mobile No.: ☐☐☐☐☐☐☐☐☐☐

6TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Batery Electrolyte	Check level & top-up if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot	Lubricate
6	Rear brake	Check & Adjust
7	Front & rear brake	Inspect
8	Tyres front & rear	Check wear pattern
9	Air filter element	Clean
10	Spark plugs (2 Nos)	Check & Adjust
11	H.T. Leads	Inspect for cracks
12	Carburetor	Clean, Inspect & tune
13	Rubber hose, Air filter to carburetor	Inspect for cracks
14	Rubber hose, inlet manifold	Inspect for cracks
15	Rubber hose, Evaporative Emission Equipment	Inspect for cracks
16	Accelerator, Carburetor / TPS cable	Check & adjust play
17	Clutch cable / Lever free play	Adjust play
18	Engine oil	Check level & top-up
19	Hand levers & kick starter pivot	Lubricate
20	Front fork	Inspect for oil leakage
21	Steering free play	Check & Adjust
22	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate

CUSTOMER COPY

Job Card No:

Date :

Odo Reading :

Name of Dealer/
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

7TH PAID SERVICE

7th Paid Service

30,000 Kms
or
3 Years
whichever is earlier from the date of sale

Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

30,000 KMS or 3 YEARS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name : Dealer Code : ☐☐☐☐

Address :

Frame No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Engine No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Motorcycle Installation Form No. ☐☐☐☐☐☐☐☐☐☐☐

ODO Reading : ☐☐☐☐☐☐☐☐

Sold by (Dealer's Name & Address)

Regn. No: ☐☐☐☐☐☐☐☐☐☐

Sale Date: ☐☐☐☐☐☐☐☐

Serviced Date: ☐☐☐☐☐☐☐☐

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : ..... Date : ☐☐☐☐☐☐☐☐

Contact Phone / Mobile No.: ☐☐☐☐☐☐☐☐☐☐

7TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Wheel rim front & rear	Check spokes tightness / run out
8	Tyres front & rear	Check wear pattern
9	Front fork	Inspect
10	Air filter element	Replace
11	Spark plugs (2 Nos.)	Replace
12	H.T. Leads	Inspect for cracks
13	Fuel Pipe	Inspect for cracks
14	Accelerator, Carburetor / TPS cable	Check & adjust play
15	Rubber hose, Air filter to Carburetor	Inspect for cracks
16	Rubber hose, Inlet manifold	Inspect for cracks
17	Rubber hose, Evaporative Emission Equipment	Inspect for cracks
18	Clutch cable / Lever free play	Adjust play
19	Engine oil sump strainer, magnetic drain plug	Clean
20	Engine oil & oil filter paper element O-Rings used at strainer & oil filter element Copper washer used at magnetic drain plug, Flywheel chamber drain screw	Replace
21	Hand levers & kick starter pivot	Lubricate
22	Steering System	Check, Lub. steering balls & adj. play
23	Swing arm spacer & pivot bush	Lubricate
24	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
25	Carburetor	Clean, Inspect & tune

CUSTOMER COPY

Job Card No:

Date :

Odo Reading :

Name of Dealer/
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

8TH PAID SERVICE

8th Paid Service

35,000 Kms
or
3½ Years
whichever is earlier from the date of sale

Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

35,000 KMS or 3½ YEARS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name : Dealer Code : ☐☐☐☐

Address :

Frame No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Engine No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Motorcycle Installation Form No. ☐☐☐☐☐☐☐☐☐☐☐

ODO Reading : ☐☐☐☐☐☐☐☐

Sold by (Dealer's Name & Address)

Regn. No: ☐☐☐☐☐☐☐☐☐☐

Sale Date: ☐☐☐☐☐☐☐☐

Serviced Date: ☐☐☐☐☐☐☐☐

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : ..... Date : ☐☐☐☐☐☐☐☐

Contact Phone / Mobile No.: ☐☐☐☐☐☐☐☐☐☐

8TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Wheel rim front & rear	Check spokes tightness / run out
8	Tyres front & rear	Check wear pattern
9	Front fork	Inspect
10	Air filter element	Clean
11	Spark plugs (2 Nos.)	Check, clean & adjust gap
12	H.T. Leads	Inspect for cracks
13	Fuel Pipe	Inspect for cracks
14	Accelerator, Carburetor / TPS cable	Check & adjust play
15	Rubber hose, Air filter to Carburetor	Inspect for cracks
16	Rubber hose, Inlet manifold	Inspect for cracks
17	Rubber hose, Evaporative Emission Equipment	Inspect for Cracks
18	Clutch cable / Lever free play	Adjust play
19	Engine oil sump strainer, magnetic drain plug	Clean
20	Engine oil & oil filter paper element O-Rings used at strainer & oil filter element Copper washer used at magnetic drain plug, Flywheel chamber drain screw	Inspect
21	Hand levers & kick starter pivot	Lubricate
22	Steering System	Check, Lub. steering balls & adj. play
23	Swing arm spacer & pivot bush	Lubricate
24	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
25	Carburetor	Clean, Inspect & tune

CUSTOMER COPY

Job Card No:

Date :

Odo Reading :

Name of Dealer/
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

9TH PAID SERVICE

9th Paid Service

40,000 Kms
or
4 Years
whichever is earlier from the date of sale

Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

40,000 KMS or 4 YEARS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name : Dealer Code : ☐☐☐☐

Address :

Frame No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Engine No: ☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐☐

Motorcycle Installation Form No. ☐☐☐☐☐☐☐☐☐☐☐

ODO Reading : ☐☐☐☐☐☐☐☐

Sold by (Dealer's Name & Address)

Regn. No: ☐☐☐☐☐☐☐☐☐☐

Sale Date: ☐☐☐☐☐☐☐☐

Serviced Date: ☐☐☐☐☐☐☐☐

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : ..... Date : ☐☐☐☐☐☐☐☐

Contact Phone / Mobile No.: ☐☐☐☐☐☐☐☐☐☐

9TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Replace
7	Wheel rim front & rear	Check spokes tightness / run out
8	Tyres front & rear	Check wear pattern
9	Front fork	Replace fork oil
10	Air filter element	Replace
11	Spark plugs (2 Nos.)	Check, clean & adjust gap
12	H.T. Leads	Inspect for cracks
13	Fuel Pipe	Replace
14	Accelerator, Carburetor / TPS cable	Check & adjust play
15	Rubber hose, Air filter to Carburetor	Replace
16	Rubber hose, Inlet manifold	Replace
17	Rubber hose, Evaporative Emission Equipment	Replace
18	Clutch cable / Lever free play	Adjust play
19	Engine oil sump strainer, magnetic drain plug	Clean
20	Engine oil & oil filter paper element O-Rings used at strainer & oil filter element Copper washer used at magnetic drain plug, Flywheel chamber drain screw	Replace
21	Hand levers & kick starter pivot	Lubricate
22	Steering System	Check, Lub. steering balls & adj. play
23	Swing arm spacer & pivot bush	Lubricate
24	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
25	Carburetor	Clean, Inspect & tune
26	Rear wheel drive cush rubbers	Replace

CUSTOMER COPY

Job Card No:

Date :

Odo Reading :

Name of Dealer/
ASC with Code:

.....

.....

ASC / Dealer's
Stamp & Signature

PAID SERVICE / MAINTENANCE RECORD

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
1.					
2.					
3.					
4.					
5.					
6.					
7.					
8.					

PAID SERVICE / MAINTENANCE RECORD

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
9.					
10.					
11.					
12.					
13.					
14.					
15.					
16.					

REGIONAL & AREA OFFICES

R1 : Chandigarh, H.P, J&K, Punjab

Royal Enfield
SCO, No. 5,
1st Floor, Sector-11 ,
PANCHKULA (Haryana)
Pin Code - 134 112.
Tel: 0172-5011255, 5011251

R2 : Delhi, Haryana, NCR & Rajasthan

Royal Enfield
C/o EICHER ENGG.COMPONENTS
Plot No. 7, HSIDC Industrial Area,
Sector 18,
Palam Gurgaon Road,
GURGAON (Haryana) - 122 015.
Tel: 0124-4278138, 4278139
Fax: 4382148

Royal Enfield
G-5, 6, 7, Gitanjali Towers,
Ajmer Road,
JAIPUR - 302 006.
Tel: 0141-4106747, 4034748
Fax: 0141-4106748

R3 : Uttarkhand & Uttar Pradesh

Royal Enfield
UGF 15-19, Landmark Arcade,
2 Badshah Nagar Crossing,
Faizabad Road,
LUCKNOW – 226 006.
Tel: 0522-6566675
Fax: 4005973

R4 : Gujarat & Madhya Pradesh

Royal Enfield
103, Safal Prelude, Opp.
Parsavanath Esquire Cross Road,
Corporate Road, Prahlad Nagar,
Off. S.G. Highway,
AHMEDABAD - 380 015.
Tel: 098-25113168
Fax: 079-40024461

R5 : Bihar, Chattisgarh & Jharkhand

Royal Enfield
3rd Floor, Maple Plaza,
Gate No. 2 , Ashok Nagar,
RANCHI (Jharkhand) - 834 002.
Tel : 0651-2245262

R6 : Orissa & West Bengal

Royal Enfield
Shrachi Tower,
3rd Floor,
686 Anandapur,
KOLKATA - 700 707.
Tel: 033-40060206 / 0209

Royal Enfield
A Unit of Eicher Motors Ltd.
407, 4th Floor,
Nirmala Plaza,
Forest Park,
BHUBANESWAR - 751 009.
Tel: 0674–6540206

R7 : Arunachal Pradesh, Assam Manipur, Meghalaya, Mizoram, Nagaland & Tirupura

Royal Enfield
Astha Plaza,
4th Floor (M4-2), G S Road,
Opposite Deorah College, Ulubari,
GUWAHATI - 781 00 .
Mob: +91 8135846461

R8 : Goa & Maharashtra

Royal Enfield
Plot No.16, Sector -1,
Sion Panvel Highway,
Nerul,
NAVI MUMBAI - 400 706.
Tel: 022-27700395, 27700501

Royal Enfield
203, 204 Sneha Ganga,
Near Vega Centre,
Shankar Seth Road,
Swargate,
PUNE - 411 037.
Tel: 020-40028090
Fax: 24447174

R9 : A.P. & Telangana

Royal Enfield
(A Unit of Eicher Motors Ltd)
No: 8-3-166/B to F,
Erragadda Main Road,
Beside Gokul Theatre,
Erragadda,
HYDERABAD - 500 018.
Tel: 7093190003

R10 : Karnataka

Royal Enfield
Door No. 2067/1, 2068/2,
East End "A" Main
9th Block, Jayanagar,
BANGALORE - 560 069.
Tel: 080-22440588, 41753277,
41536488

R11 : Tamilnadu & Andaman

Royal Enfield
Plot No. 350 to 354,
2nd Floor, 4th Link Street,
Nehru Nagar Industrial Area,
Kottivakkam,
(OMR-IT Highway),
CHENNAI - 600 096.
Tel:044-42070661, 24540828

R12 : Kerala & Lakshadweep

Royal Enfield
25/85A, Opp. to IOC Pump,
Koonamthai, Edappally Post,
KOCHI - 682 024.
Tel: 0484-6494990, 6494991
Fax: 2543616

AUTHORISED DEALERS

ANDHRA PRADESH
Anantapur-Rudram pet By - Pass THUMP & THREADS AUTOMOTIVES +91 7013781892; 9100403966
Chittoor - Opposite Indian Oil Petrol Pump Sri Sai Motors +91 9100622208; 8571230244
Chittoor-Renigunta Road Sri Sai Motors +91 9100644419; 9100644418
Chittoor-Tirupathi Road Sri Sai Motors +91 9100622205 +91 8572245057

ANDHRA PRADESH
Cuddapah-Mydukur Road Garisa Automotives +91 7661848444
East Godavari - Edarapalli Road Shri Jayalakshmi Automobiles +91 7396534114; 9247089555
Gudur - Beside Eenadu Office Rishi Motors +91 8977714477; 8978179977; 8977727799
Guntur-Auto Nagar Jubilant Avenues Pvt.Ltd +91 8143008506; 8507
Guntur- Ring Road Jubilant Avenues Pvt.Ltd +91 8886669815

ANDHRA PRADESH
Guntur - NGO Colony Anu Auto Agency +91 9100774714 086472-21787
Guntur-Opp Pemmasani Theratre Shakthi Motors +91 8333021555; 8644221555, 08644-223555
Kadappa - Chinna Chowk Anjana Bikes +91 9010389998; +91 7095388955
Kakinada - Jagannayakpur Shri Jayalakshmi Automobiles +91 9505826795; +91 7416443555

ANDHRA PRADESH
Krishna - Gandhi nagar Tapasya Motors +91 9908503833; +91 9154166664
Kurnool - Behind RTC Bus Stand Sandhya Automotives +91 7799159977; 9381896143; 9904039868
Kurnool - Opp Harsha Hospital Dheeru Motors +91 9133065553 +91 9553006239
Kurnool-Revenue Ward-I Sandhya Automotives +91 8512231777 +91 9381920250

ANDHRA PRADESH
Nellore - KS Reddy Shopping Complex Rishi Motors +91 8977727798; 9502802244, 8977714477
Pamarru Road TAPASYA MOTORS +91 6302646969 +91 6302660867
Power Pet- West Godavari Classic Automotive +91 8897045812 +91 8812234582
Prakasam-Kotla Bazaar Lekhana Automotives +91 8885002113 +91 8886331777
Prakasam - NH 5 Lekhana Automotives +91 8885002113 8885002114; 8885002113

AUTHORISED DEALERS

ANDHRA PRADESH
Prakasam - South Bypass Road Lekhana Automotives +91 8885009199 +91 8885002114
Rajamahendravaram- Stadium Road Sri Ram Automobiles +91 9246665513 +91 8832474844
Srikakulam-Kasibugga Circle Lakshmi Automobiles +91 8985723344 +91 8985823344
Srikakulam-Palasa Lakshmi Automobiles +91 9032664497; 8121929235

ANDHRA PRADESH
Tadipatri - Anantapur Dheeru Motors +91 7995551299 +91 7993358681
Tanuku - Undi Road Varma Automotives +91 7095812666 +91 7095812888
Vijayawada - Beside Swarna Hotel Pravallika Motors +91 9030699555 +91 9121949555
Vijayawada - Mosque Street Mahalakshmi Motors +91 8886422559
Vijayawada- Mylurai Centre Mahalakshmi Motors +91 9581922559 +91 6303424323

ANDHRA PRADESH
Vijayawada - Star Complex - Auto Nagar Pravallika Motors +91 9030699555 +91 7207559555
Vishakapatnam - Anakapalli Road Singam Automobiles +91 9110341281 +91 9640355304
Vishakhapatnam - Gajuwaka Cidanta Motors +91 8912576007 0891-6502008
Vishakhapatnam - Marripallem Saran Motors +91 8885947222 +91 8885847222

ANDHRA PRADESH
Vishakhapatnam - HB Colony Road Royal Enfield Company Stores +91 8143606073 0891-2768887; 2768886
Visakhapatnam - Opposite Visakha Dairy Singam Automobiles +91 8897333875 +91 8924225563
Vishakhapatnam - Tuni Sri Ram Automobiles +91 9966738924
Vizianagaram- Aadharsh Nagar Layout Lakshmi Ganapathi Automobiles +91 7382323344; +91 9381468221

ANDHRA PRADESH
West Godavari -NH 16 Varma Automotives +91 8367781116 +91 8367781119
West Godavari - Aswarao Peta Road Classic Automotive +91 8464946622; 8821223332, 08812-234582
ARUNACHAL PRADESH
Naharlagun - Itanagar Bucho Royal Enfield +91 9774988350 0360-2350103
ASSAM
Baihata Chariali-Kamrup S.S.Automobiles +91 9706610625 03621 286036

AUTHORISED DEALERS

ASSAM
Barpeta - Near Manas Gas Agency GS Auto +91 9531232387 +91 8472987341
Bapujinagar. Opp-Bharat Petroleum Goalpara Riders INN +91 9706643717
Bongaigaon - Chapaguri Road SWASTIK AUTOMOBILES +91 7086030374
Darrang-Bhebarghat DARRANG RIDERS +91 8638172937 +91 9365202103
Dibrugarh-Tekela Chiring Rider's +91 7636019684

ASSAM
Dhubri - GTB Road Dynamic Motors +91 9707779334 +91 8720917915
Duliajan-Kamalabari Road FREE RIDE MOTORS +91 7002864702; 03742802589
Golaghat - GF Road SINGH RIDE +91 7002414358 +91 8472985037
Guwahati - Maligaon Chirag Enfield +91 8136051810 +91 7035125288
Jorhat - JPD Unit Achharsingh Royal +91 9707522666 +91 9207041076

ASSAM
Kamrup - Opposite HP Petrol Pump Shahila Expositions Pvt Ltd +91 9706077793; 9854043095; 9054023455
Kamrup - Sarusajai, NH 37, Garalia SARAIGHAT RIDERS +91 7086064264 +91 7086035995
Karbi Anglong Dimapur Road Eshan Motors +91 7896169017
Kohima-North Hill Arcade KK Motors +91 9077355332 +91 6909145859

ASSAM
Kokrajhar - Opposite Indian Oil Petrol Pump GS Riders +91 6900309152
Nagaon -Khutikatia Bajrang Motors +91 9127021893; 8403057563; 9127021891
Nagaon - Karbi Anglong Balaji Motor +91 9127806618
Nalbari - Farida Manzil Rouchand Automobile +91 9854532144; 9365531160
North Lakhimpur - N R L Petrol Depot Rishi Riders +91 8721949969 +91 9954391219

ASSAM
Ramnagar - Station Road Dhemaji SANJOY ENTERPRISE +91 7002608708; 7086188171
Sivasagar - B N Hazarika Road Funshine Getaways PVT. LTD. +91 9127067178 +91 9127067190
Sonitpur - Opposite Gotanga Nursery G.M Associate +91 8011105756 +91 9706471764
Sonitpur - Tezpur Road SUNMAH MOTORS PVT LTD +91 9127069444 +91 9127069251

AUTHORISED DEALERS

ASSAM
Tinsukia - AT Road SD Royal +91 9101253415
BIHAR
Araria - NH 57 YASHRAJ MOTORS +91 9470054154 +91 9431886577
Aurangabad - Near Over Bridge Yodha Automobiles Pvt. Ltd +91 7283001748 +91 9199317474
Begusarai - KDM Estate Mayamanu Motors Pvt. Ltd +91 7280046824
Bhagalpur - Naya Bazar Chowk Sri Ram Moto Corp +91 9472890189 +91 8986966553

BIHAR
Bhojpur - Near Bharat Petrolpump Om Wheels +91 8229803216 +91 8229803217
Buxar - Near kaali mandir Shiv Prabha Automobiles +91 7360053453 +91 6204755537
Darbhanga-Mahant Nagar Surya Automobile +91 9472077777 +91 8877609999
Darbhanga-Samastipur Road SYV Motors +91 7739561277
East Champaran - Lakshmipur ACE MOTORS +91 9934291734 +91 7992268617

BIHAR
Gaya - Near Chandauti Crossing Kusum Motors +91 8271020543
Gopalganj - Next to M/S Highway Services Riders cafe +91 9060524444
Kidar-Mahant Nagar Katihar Jaiguru Motors Pvt Ltd +91 9771495103 +91 7280054008
Kishanganj-Paschimpally Road S.B Motors +91 7281885544
Madhepura, Narsingh Complex Chandra Darbaar Motors Private Limited +91 6476222010

BIHAR
Madhubani - Sahuwa Shagun Auto Sales +91 9123115406 +91 9709052000
Mohania - Dist Kaimur Swastika Motors +91 9852336291 +91 8809564040
Motihari - Chhota Bariyarpur Raj Motors +91 9471005185
Muzaffarpur - Maripur Gautam Motors +91 7091592902 +91 9102990034
Muzaffarpur-Manikpur Gautam Motors - UNIT-2 +91 7707014824

BIHAR
Muzaffarpur-Zero Mile Kumar Automobiles +91 7283000386 +91 7280920950
Nalanda - Opposite Pawapuri Petrol Pump PNN Automobiles +91 9809744666 +91 9709844666
Nawada-Kendua R.N. Automobiles +91 9728324339 +91 6201401146
Patna-Patliputra Colony Ambey Motors +91 9102999131 +91 7366069330
Patna-Saguna More Siddhi Vinayak Automobiles +91 8092981877 +91 8406001069

AUTHORISED DEALERS

BIHAR
Patna - Zero Mile Sukhmani Motors Pvt. Ltd. +91 9709761441 +91 7360011212
Purnea - Beluri Link Motors +91 9182034654 +91 8298911115
Puraniganj - Munger Vidya Automobiles +91 6201940529 +91 9065746303
Saharsa - Tiwari Tola 7 Hills Automobiles +91 8877080667 06478-227007
Samastipur-Mohanpur Road Aditya Motors +91 8406803305 +91 8406803325

BIHAR
Saran - Opposite M&M Two Wheelers Supriyam Automobiles +91 9128739999 +91 8873539999
Rohtas - Dwarkapuri Vintage Auto Corp +91 8540858433
Siwan -Chhapra Road Sri R.L. Automobile Pvt. Ltd. +91 7482063886, 8969457386, 06154-247686
Sitamarhi -Dumra Road Nili Automobiles +91 9771459577 +91 7283007814
Vaishali-Opposite Jail Gate Ambika Bhawani Automobiles +91 7280068837 +91 7280068838

BIHAR
West Champaran - Sant Kabir Road Mishra Automobiles +91 7280046824 +91 9934646988
CHANDIGARH
Chandigarh - Sector 32 D Garg Autos +91 9501569388; 8146360388
CHATTISGARH
Bhilai -Near Tata Motors AAN Automotive 0788 4032227
Bilaspur -Vyapar Vihar main Road Blue Sapphire Motors +91 7752407778 07752-407778

CHATTISGARH
Champa -Janjgir Neeraj Royal +91 8109299092 +91 9303617182
Dhamtari -Raipur Dhamtari Highway Shri Ram Automobiles +91 7089025555 +91 7722233755
Jagdalpur -Geedam Road Kambo Motors +91 7692850003 +91 7782291025
Korba - T P Nagar Kailash Automobiles +91 9826709907
Narsinghpur- Itwara Bazaar Kandeli Kailash Motors +91 9755218270 +91 7792233153

CHATTISGARH
Neemuch Galaxy Motors +91 8889997360 +91 9644002077
Raigarh - Chhatamuda Priyanka motors +91 7389910835; 7389910836, 6261808631
Raipur- G E Road Besant Motors +91 9993608000 +91 7714911800
Raipur- Lodhi Para Chowk Indian Motors 0771-4221500; 4221400
Raipur-Tatibandh 6th Gear +91 8109106666 0771-4070666

AUTHORISED DEALERS

CHATTISGARH

Rajnandgaon - Opposite Kakad Auto
Shubh Auto
+91 9144291000

Surguja - Near Central school
Dev Automobiles
+91 9826813417
+91 9644344437

GOA

Goa - Bardez
Royal Enfield Garage Cafe Goa
+91 9823139488
+91 9370918155

Goa - Panaji
Auto Guides
+91 9168611669
+91 9689578406

GOA

North Goa - Khadpaband Gardens
Saini Motors
+91 8589051616
+91 8322974554

South Goa - Sukhamani Enclave
Saini Motors
+91 7767006138
+91 8232740345

GUJARAT

Ahmedabad- Akashat Complex Basement
Karnavati Bikes Pvt Ltd.
+91 9825061120;
9016442200; 9099031961

Ahmedabad- Ghodasar
Sarabhai Automotives
+91 9737724400
079-25812531; 25812530

GUJARAT

Ahmedabad - Naranpura
Karnavati Bikes
+91 9825061120;
9016442200; 9099031295

Ahmedabad - Naroda
Krishna Wheels
+91 9925333446;
7574839084, 079- 29703055

Ahmedabad - Opp.Visat Petrol Pump
Sarabhai Prowheels
+91 9081800299;
7927502565

Ahmedabad- Prarthana Complex
Sarabhai Motors
+91 7926635101
079 26635105

Anand - GIDC
Royal Ridentity Pvt Ltd.
+91 9898484500
02692-233788; 233022

GUJARAT

Banaskantha - Maheshwari Colony
Parklane Auto
+91 9925001944;
+91 9925001486

Bharuch-Near Shital Circle
Vraj Auto
+91 9824125050
02642-226969

Bhavnagar - Vithalwadi
Gujarat Auto Centre
+91 8734925463;
8401438386, 0278-2512648

Bhavnagar - Paliyad Road
Old Soul Motorcycles
+91 9909077775;
+91 9099300013

Bhuj-Naredi Ratatlav Road
PM Autolink
+91 9925235279
02832 231279

GUJARAT

Gandhinagar - Near Vayu Sena Circle
Aanal Auto Agency
+91 8980001123;
8980011637; 7923262020

Gandhi Nagar - Near NC Desai Petrol Pump
Aanal Auto Agency
+91 8980021164;
8980021163; 8980021161

Godhra-Yogeshwar Complex
Concord Auto
+91 9512036277;
9512036271, 02672-265523

Jamnagar-Gujarat
New Chandra Motorcycle Agency
+91 9824233499;
0288-2570500

AUTHORISED DEALERS

GUJARAT
Junagadh - Rajkot Junagadh Highway Shree Aashapura Enterprise +91 7046008488 0285 2660111
Junagadh -Near Veraval Bypass Junction Anjaney Motors +91 9512779994; 0287 6249990
Kachchh-Near Rambaugh Hospital N.P. Auto Agencies +91 9426140290; 9033040290; 9825724716
Mehsana Parklane Auto Pvt Ltd +91 9925004538; +91 9925001464

GUJARAT
Navsari - Near Satyasai Seva Trust School PSG Motors +91 9924755570; 7283859061; 9924755590
Porbandar - Birla Road Kailash Motors +91 9726435355; 8980099990; 02862-243842
Rajkot - Kalawad Road Dev Motors +91 8401799998 0281 - 2563077
Rajkot - Near Gondhiya Estate Aditya Moto Gujarat Pvt. Ltd. +91 9099092728; 9099092595, 0281 - 2371077

GUJARAT
Rajkot-Opposite Sky Mall Dev Auto +91 9879888303; 9712345028; 9054265554
Sabarkantha-Aravalli RAJVEE MOTORS +91 7069340008; 7069033725; 7069340005
Sabarkantha-Beside ONGC Colony Old Gate Vraj Auto +91 9924192255; 02646233955
Sabarkantha-Opposite Reliance petrol Pump Rajvee Auto +91 8238411177; 7069033724; 02772 228811

GUJARAT
Surat - Beside Chetanya Tower Munjani Motors +91 7436000300; 9979213356; 7436000400
Surat - Opposite Hotel Golden PSG Motors +91 9924755549; +91 7283859063
Surat- Bhatha Icchapur Road JSN Motors +91 8401600411 0261-2740023
Surat - Sarthana Varacha Purav Automobiles +91 9979860916; 9925154965; 9979841547 0261 2453793

GUJARAT
Surat-Surat Dhulia Highway, Tapi P.S.G Motors +91 9924755546; 7283859064; 9924755547
Surendranagar - Wadhwan Kothariya Road Old Soul Motorcycles +91 9909007000; +91 9099400013
Vadodara- Opposite Gada Circle Amba Motors +91 9510910991; 7984665845, 0265 - 2540991
Vadodara - Old Padra Road RSA Automotives +91 9714677112 0265 2355040

AUTHORISED DEALERS

GUJARAT
Vapi - Opp Baba Sitaram Temple Gate Royal Thumpers +91 9879565274; +91 8962010072

HARYANA
Ambala - Ambala Chandigarh Highway Royal Motors +91 9468476100; 0171 2544795
Ambala cantt- Rai Market Royal Motors +91 9034210005 0171-4017100
Bhiwani Sheoran Automobiles +91 7056762216 01664-252216
Dabwali Road- Sirsa Gulzar Motors Agencies +91 8814011148; +91 8708453044
Faridabad-Mathura Road Heighten Automotive Pvt Ltd +91 9873305544 0129 4080046
Fatehabad SDB Automobiles +91 9728942227; 7988568181, 01667-221786
Hissar Malik Automobiles +91 9996272888 1662-276103
Jind Gill Automobiles +91 7027002582; +91 9416830333
JHAJJAR JMD Automobiles +91 8199885579; +91 8199885568
Kaithal Road - Near HDFC Bank Raghav Automobiles +91 8199947003; +91 8199968050
Kaithal Road - Old By Pass Road Raghav Automobiles +91 8199947003; +91 8199947002
Karnal Monga Motors +91 8222070788 0184 2261810
Kurukshetra-Loharu Road Charkhi Dadri Motors +91 8708375326
Kurukshetra NEXGEN MOTORCYCLING +91 9254022259
Mahendragarh - Nizampur Road Royal Jindal Auto Pvt Ltd +91 8901452000, 0128 2255355
Panipat - Grand Trunk Road Monga Automobiles +91 9354140006 0180-4000393
Pehowa Nexgen Motorcycling +91 9254022290; 8901229656
Rewari Premium Automation Pvt Ltd +91 8689091000 01274-251000
Rohtak Badhwar & Co. +91 8059880030; 8059880020, 01262-271131
Sirsa Gulzar Motor Agencies +91 9996789365 01666-221367; 230459
Sonipat - Rohtak Road Heydaan Motors +91 9034444466
Sonipat Heydaan Motors +91 9728900200 0130-2233004

AUTHORISED DEALERS

HARYANA
Tohana SDB AUTOMOBILES +91 9728942229; 0169 2220230
Yamuna Nagar Falcon Automobiles +91 9315431300 0173 2230333
HIMACHAL PRADESH
Baddi Simran Automobiles +91 8999200016; +91 9816059877
Chamba Champavati Autos +91 9988005308; 9821377307, 9736118001
Dharamshala Him Enfield +91 9816083838 +91 8894389090

HIMACHAL PRADESH
Hamirpur - Dugha Parkash Royal Automobiles +91 9988005308; 9418945283, 01972-258483
Kangra Snowline Autos +91 9816075428; +91 8352803131
Kullu-Behind Dps School Heaven On Earth Automobiles +91 9459778896; 7590965818, 9459300881
Mandi Shivam Automobiles +91 9988005308; 9816130436; 9818176300
Paonta Sahib - Sirmour R.S. Enterprises +91 9650494609; 9418932854, 01704-223687

HIMACHAL PRADESH
Shamlaich - Solan Tapan Industries +91 7807500272 01792-227990
Solan - Shogi Tapan Industries +91 9650494609; 7807400172, 01792-227990
UNA-Lalsingi Sharma Automobiles +91 9888280660; 7807169205; 9418445554 09218-446755
JAMMU & KASHMIR
Baramula ZMR Automobiles +91 7006952694; 7051532873; 2874

JAMMU & KASHMIR
Digiana Camp (ASP) Sumeet Motors +91 9622873835; 9419236396, 0191-2431058
Doda R.A.Enfield Unit - II +91 7051536478; +91 7051536477
Jammu - Janipur road Reliance Motors +91 9797373185; 9622584099, 0191-2575251
Jammu-B Sainik colony Xtream Motors +91 7006340294; +91 9070467459
Jammu-National Highway-1A Mountbird Wheels +91 7051533407; +91 7780865347

JAMMU & KASHMIR
Kathua Lovish Automobiles +91 9796810666; 9682506722; 8716030546
Kathua -Swankha More Lovish Motor +91 9796810666; +91 7298484840
Leh(ASP) Venture Third Pole +91 9797470555; +91 9999227196
Srinagar CAFE BIKE INN +91 9149531027; +91 7780978887
Srinagar PCS Automobiles +91 9797470011; 7780999289, 0194-2472781

AUTHORISED DEALERS

JAMMU & KASHMIR

Udhampur
R A Enfield
+91 9055505003;
9622608106, 01992-250008

JHARKHAND

Bokaro-ITI More
G.R.Motors
+91 8092043677

Deoghar - Sarwan Road
Roy Brothers
+91 6202109344;
+91 6202114640

Dhanbad - Jharia Road
Arti Automobiles
+91 9031084004;
+91 9031084003

Dhanbad - Kolakushma
Thunder Motors Private Limited
+91 7762053003

JHARKHAND

Dumka - Bhagalpur Road
Majestic Autobikes Pvt Ltd.
+91 7282006633;
+91 6434231002

Giridih -Whitty Bazar
Shree Sanmati Enterprises
+91 7283006015;
+91 9534140200

Godda - Bhadhiya
Kaushalya Motors
+91 7360007885;
+91 7360007886

Hazaribag - NH 33
Riders Point
+91 9031005518
+91 8051666444

Jamshedpur - Bajrang Nagar NH 33
Cruiser India
+91 8210209301;
+91 6205355710

JHARKHAND

Jamshedpur - East Singhbhum
NDG Motors Pvt Ltd
+91 8863996222;
+91 6576578555

Koderma - Near Hanuman Mandir
Vinayak Bikes
+91 8092542004;
+91 8092422001

Palamau - Ranchi Road
Arjun Automobiles
+91 7549092702
+91 7631774433

Ramgarh
Anjaney Automobiles Pvt. Ltd.
+91 9031000430

Ranchi - Harmu Road
Raghuram Autocare
+91 9905110006;
+91 9798211608

JHARKHAND

Ranchi - Kokar
Sri Nivas Automobiles
+91 7763801822;
+91 6512542789

Ranchi-Near Hill tank, West Circle
Marvel Autobikes
+91 9065519086;
+91 6512547449

KARNATAKA

Bagalkot - Mudhol
Mudhol Motors
+91 9980738900,
+91 9980738900

Bagalkot - Navanagar
Bagalkot Motors
+91 9673596344;
+91 8453333181

Bangalore
Bommasandra Motors
+91 8970392555;
+91 8748982555

KARNATAKA

Bangalore - Banaswadi
CVS Motors
+91 8637416781;
+91 7406440400

Bangalore - Banasankari
H S R Services - RAJ
+91 9739000350;
+91 7829777916

Bangalore - BTM 2nd stage-Service
Royal Enfield Company Store-Service
+91 9916012313;
9343555583; 8040905108

Bangalore - B Narayanpura
Sai Ram Autocraft
+91 7022288663;
9108518827, 080-64909090

AUTHORISED DEALERS

KARNATAKA
Bangalore- Chunchaghatta Rd H.S.R. Services +91 7829777916; 7829000350; 9980762849, 080-22133119
Bangalore - Dasarahalli Sri Sadguru Sai Motors +91 9164729444; 8151899998; 9066023999
Bangalore - Electronic City-Singsandra Electronic City Motors +91 7026613080; 7026613079, 8494942929
Bangalore - Hoskote Main Road Teknik Motors +91 9535959343; 8029716641

KARNATAKA
Bangalore - Hebbala CVS Motors +91 9986755550; +91 9986755554
Bangalore - Kengeri Accelerate Motors +91 7022049623; +91 8028606969
Bangalore-100 Feet Road Teknik Motors +91 9379446663; 8025284788; 7411011065
Bangalore - Koramangala Koramangala Motors +91 8970872555; +91 7026604492
Bangalore - Magdi road H.S.R. Services +91 8892016888 080-23156617

KARNATAKA
Bangalore - Nagarbhavi S.R Motors +91 9071340000, +91 9071713307
Bangalore - Nelamangala Sri Sadguru Sai Motors +91 9164764222; +91 8151899998
Bangalore - Raja Rajeshwari Nagar Accelerate Motors +91 7022049623 080-28606969
Bangalore-Sadaramangala Village Whitefield Motors +91 9606492011; 8028416464; 9108990863
Bangalore-Sarjapur Road Teknik Motorcycles +91 8050784709; 8904000300; 8904000700

KARNATAKA
Bangalore - Sankey Road CVS Motors +91 9886500042; +91 7406999080
Bangalore-Sudhamanagar H S R Services SDN +91 9108121314 080-22133119
Bangalore (ASP) - HRBR Layout Sri Manjunatha Bullet Garage +91 9036111121; 8041614914; 9341220151
Bangalore - Yelahanka Acclaim Motors Pvt Ltd +91 9632881144; 9632881188, 9663550055

KARNATAKA
Belgaum- Shivaji Circle Shri Munishwar Motors Pvt. Ltd. +91 9844633382; +91 7090112224
Belgavi - Kolhapur Circle Shri Munishwar Motors Pvt. Ltd. +91 9036844398; +91 8314213059
Bellary - Dam Road Sanjeevini motors +91 8073899213; +91 7996955585
Bellary - Raghavendra Colony Sanjeevini Motors +91 7795777677; 7353777768; 9591557149

AUTHORISED DEALERS

KARNATAKA
Bidar - Basavanagar Bhavani Motors +91 9535515649; +91 9019142142
Chikkamangalore Chikkamangalore Motors +91 9591557149; +91 8262220236
Chitradurga Jilu Bikes +91 9886153148 +91 9148574111
Dakshina Kannada- Behind Kallega Temple Frontline Automobiles +91 8884314488; +91 8197685999
Davangere-Nittuvalli Road Royal Automobiles +91 8710096355; +91 8197426036

KARNATAKA
Gadag - Hubli Road Gadag Motors +91 9513001495
Gulbarga - Near Banashankari Hospital Mukunda Wheels Pvt. Ltd. +91 9663663189; +91 9945249305
Hassan - Thanniruhalla Shree Subrahmanya Motors +91 9742217172; +91 8172256452
Hospet Road Sri Maruthi Auto Motors +91 8884314488; 9148971805, 08384-226777
Hubli - Airport Road Salimath Engineers Services +91 8362232043; 9480296644, 0836-3241160

KARNATAKA
Hubli - Kusugal Road - Keshwapur Klasik Motors +91 9738806151; 7760735557, 0836-2288224
Hunsur-Mysore Aadith motors +91 9686182228; +91 7899000385
Karwar - Habbuwada Karwar Motors +91 7625078394; +91 8382222321
Kodagu-Kushalnagar Abhyudhay Motor Services Pvt. Ltd. +91 8861289920; +91 9538841403

KARNATAKA
Kolar Jagadamba Automobiles +91 9066377086; +91 8152226629
Lingasur Road - Raichur Chukki Motors +91 8884314488; +91 9742291418
Mandya - Karnataka Ind Estate Ruby Maratt Motorcycles +91 9108953401; +91 9739735552
Mangalore-Eyyadi Indust. Estate Frontline Automobiles +91 8861006477; 8861006478, 0824-2211401

KARNATAKA
Mangalore-Vishal Arcade Building Veenu Motors +91 9108487051; +91 9108487060
Mysore (ASP) Kuvempu Nagar Abhyudhay Motor Services Pvt. Ltd. +91 9008881333 0821-2462066; 2462067
Mysore - Near Sayaji Rao Road Abhyudhay Motor Services Pvt. Ltd. +91 9844260162; +91 9538841404
Mysore - Vijayanagar 1st Stage Aadith Motors +91 9686182228; +91 9686712221

AUTHORISED DEALERS

KARNATAKA
Raichur-Gangavathi Road Chukki Motors +91 8951430957; +91 9108471999
Ramnagar - Next to RBL Bank, Uttara Layout Ramnagar Motors +91 9845852384; +91 8027271099
Shimoga - Shankar Mutt Road Apollo Enterprises +91 9008138662; 8182403456, +91 41187404
Sindagi - Solapur Chittudurga Highway Rohan Motors +91 9986168363; +91 9513358363

KARNATAKA
Tumkur - Kasaba Hobli Road Bhagavati Motors +91 9742273566; +91 7026401166
Udupi - Ambalpady, Moodanidamburu Brahmi Motors +91 9164889161; 9164209161, 0820-2527590

KERALA
Alleppey Rider's Motors +91 8281057747 0477-2255030
Calicut - Francis Road Blue Mountain Autos +91 8286046565; +91 9895201667

KERALA
Calicut - Kunnamangalam Blue Mountain Autos +91 7558909000; +91 7510999990
Calicut - Mankavu Luha Automotives +91 7025105333; +91 7025102888
Calicut - Puthiyagandi SS Motors +91 9567863115 0495-2390770
Cochin - Edapally Royal Enfield Company Store +91 7025233912
Cochin - Vyttila Kaizen Motors +91 7559800073 0484-2307072; 4047072

KERALA
Ernakulam - Angamali Sanjo Motors +91 8592009992; +91 9809709999
Ernakulam - Nangelipady Sanjo Motors +91 860684999
Ernakulam - Rajaji Junction Chittoor Road St. Mary's Motors +91 9961732888; +91 8891000691
Ernakulam - Thaikkattukara Sanjo Motors +91 7034939999; 0484-2630322
Idukki - Kottayam Road Veliyathu Motors +91 8086097709

KERALA
Idukki - Vengallore Veliyathu Motors +91 8943200090; +91 8086097711
Kanhangad-GVHSS Road-South junction South West Motorcorp India Pvt Ltd +91 7594090909; +91 7593828222
Kannur - Chirakkal Vibrant Automotive +91 8111990068; 8111990044; 8111990076
Kannur - Thottada SS Motors +91 8547670272 0497-2837666

AUTHORISED DEALERS

KERALA
Kannur-Near Town Hall Circle Sharpline Automotive LLP +91 7511199944; +91 7511199934
Kasargod - Chemnad South West Motorcorp India Pvt Ltd +91 8594060606; +91 7593893914
Kayamkulam - Edasseril Junction Roverz Motors +91 9072584050; +91 9072584046
Kollam - Chandanathope Unnoonny Motors +91 9567776146; 0474 2714787

KERALA
Kollam - Bishop Jerome Nagar Marikar (Motors) Ltd. +91 9947031120; 8590988442, 0474-2732474
Kollam- Kottappuram Unnoonny Motors +91 9567966444; +91 8606969009
Kollam - Madanada Unnoonny Motors +91 9567776142; 8606969029, 0474-2764567
Kollam-Puthiyakavu Roverz Motors +91 9072633811; +91 9207722220
Kottayam - Manapurath Building Javeens Motoring Pvt Ltd +91 9446397200; 0481-2566997

KERALA
Kottayam - Mutholy Junction Javeens Motoring Pvt Ltd +91 9961839369; 0482-2206111
Kozhikode - Vadakara Grace Motors +91 7034774444
Kozhikode-NH 17, Kollam KMS AUTOMOTIVES +91 8943990660; 8943009009; 0496 - 2631009
Kuriachira - Chiyyaram village Tags Bikez +91 7594953333; +91 7594959999
Malappuram - Kodathippadi Barak Enterprises LLP +91 7511188013; 6235241000

KERALA
Malappuram - Tanur Road ABC Motors +91 9447879400; 0494-2433277
Malappuram-Palathara Barak Enterprises LLP +91 8606951026; +91 9061001188
Malappuram - Payyanangadi ABC Motors +91 9846148000 0494-2422277
Malappuram - Valluvambaram ABC Motors +91 9447805300; +91 9745407300
Mavelikkara - Karazhama Roverz Motors - MVK +91 7511184045; +91 7511115522

KERALA
Muvattupuzha-Vazhappilly Veliyathu Motors +91 8086097728; +91 8086094444
Mele Pattambi-Palakkad Intrepid Works +91 8606933014
Methala-Thrissur Pinnacle Motor Works Pvt Ltd +91 9539882222; +91 9072575721
Ottapunna - Alappuzha Ramanattu Motor Corp +91 9072655300; 0478-2816555
Palakkad - Marutha Road Intrepid Works +91 8606933001; +91 8606933008

AUTHORISED DEALERS

KERALA
Palakkad - Second Mile Kallekad PVR Wheels +91 7902866672; +91 7902866669
Pathanamthitta - Santosh Junction Marikar Motors Ltd. +91 8606145007 0468-2223412
Peringanad - Pathanamthitta Yamuna Agencies +91 9072623503; +91 9072623506
Perinthalmanna ABC Motors +91 9750000000; 9447158400; 9447718200

KERALA
Parempaadam - Thrissur Motorad Works +91 7510411220; +91 7902211600
Taliparamba-Chiravakku Nr National Highway Vibrant Automotive TPBA +91 8111995500; +91 8111991131
Thrissur - Anjur Pinnacle Motor Works Pvt Ltd +91 8111995132; 0487-2975188
Trivandrum - Fayaz Building Concept Bikes +91 9048990172; +91 9048990693

KERALA
Thrissur - Karunanakaran Nambiar Road Marikar (Motors) Ltd +91 8606863336 0487-2339307
Trivandrum-Near Reliance Petrol Pump Concept Bikes +91 9048990150; +91 9048990646
Trivandrum-Pappala Concept Bikes +91 9048990409; 0470 -2670047
Thiruvananthapuram - Pappanamcode Sivaji Motors +91 7736066716; +91 7736207777

KERALA
Thiruvalla - Perumthuruthi St. Mary's Motors +91 9061519333; +91 9526260400
Thrissur-Puzhakal Padam Pinnacle Motor Works Pvt. Ltd. +91 8594006006; +91 8111994010
Trivandrum - Tanvila Marikar (Motors) Ltd +91 8590988445 0471-2334621
Trivandrum - Vetturoad - Kazha kuttam Concept Bikes +91 9673993304 +91 9048990718
Wayanad - Chungam Tempest Automotive SBY +91 8111999351; +91 8547861000

KERALA
Wayanad- Horizon Tower Tempest Automotive +91 8111999352; +91 8111999355
MADHYA PRADESH
Betul-Kalapatha Shree Sai Automobiles +91 8839021947; 7141232451
Bhopal - Main Railway Station Road Choudhari Tractor Agency +91 7869209584 0755 - 2735762
Bhopal - Padmanabh Nagar Ananya Auto +91 7389930805 0755-4249299

AUTHORISED DEALERS

MADHYA PRADESH
Chattarpur - Sagar Road Classic Wheelz +91 9644700706; +91 9644700704
Chhindwara - PG Collage Road Rahul Royal Motors +91 8889999603 07162-245255
Chhindwara Vaishnavi Autoriders +91 7067721900
Damoh Kuber Automobiles +91 9425095911
Dewas R R Motorcycles +91 7272402070 +91 8269270709

MADHYA PRADESH
Dhar - Near St Theresa School Aaryashree motors +91 9589156027; +91 7292400900
Gwalior-Shivpuri Link Road Somya Motors Pvt. Ltd +91 7773000124; +91 7773000127
Gwalior-New Saket Nagar Big Boyz Motorcycles +919165829992; +91 7514926099
Harda Sant Singaji Motors +91 9111110189

MADHYA PRADESH
Indore-Annapurna Road Jagdish Motors +91 9522309069; +91 9522309072
Indore - Nehru Market Krishna Motor Agency +91 7314237509 0731-4237509
Indore - Sayaji Club road RR Automotive +91 8878660100
Hoshangabad - Kheda Jaggi & Sons Super Automotive LLP +91 9340344487 07572-230230
Jabalpur Royal Thumpers +91 8962010072 0761-4925133

MADHYA PRADESH
Jabalpur Royal Thumpers Unit II +91 8982208686; +91 7614924133
Jabalpur Varun Motorcorp India LLP +91 7024144421
Katni Royal Thumpers A Division of Superior Automobiles Pvt Ltd. +91 8223001286 07622-226474
Khandwa Binwani Motors +91 9425909302 +91 7332244222
Khargone-Bistan Road Prabhu Motors +91 9340901615; +91 9179920202

MADHYA PRADESH
Ratlam-Mitra Niwas Road Galaxy Motors +91 8889997392; +91 9644002076
Sagar - Bhagwanganj Royal Cruisers Pvt Ltd +91 8225003194; +91 8225003195
Sagar Road - REWA Ashish Motors +91 9522240078; +91 7662490122
Satna - Panna Khajuraho Road Manish Motors +91 9179694840 07672-251607

AUTHORISED DEALERS

MADHYA PRADESH
Sehore-Sekdakhedi Choudhari Tractor Agency +91 7999184979; +91 7562401016
Shahdol - Opposite Christian Hospital Gupta Automotive +91 8602296300 0765 2231967
Ujjain - Nanakheda Avis Auto +91 9424025067 0734-2520007
Vidisha - NH 86 Adventure Bike +91 9300168329 0759-2408222

MAHARASHTRA
Ahmednagar Newaskar Automobiles +91 8928800800; 8087500900, 0241-2470800
Akola - MIDC Agrawal Motors +91 7768003305 0724-2258259
Amravati - Opposite Saturna Bus Stop Bhans Automotive +91 8237288224 0721-2510636
Aurangabad-Bansilal Nagar S.K.Y.S Automobile +91 9028059252 0240-2350652
Aurangabad-Chikalthana Cherry Corporation +91 9446120702; 9225315024, 0240-6630125

MAHARASHTRA
Aurangabad-Pandharpur Godavari Royal Enfield +91 9028069555; +91 9146068555
Beed - Shivaji Nagar Shiva Motors +91 9765924477
Buldhana-Khamgaon Road Samyak Automotive +91 8788849336; +91 9922900038
Chandrapur - Beside Wadgaon Police Chowki Dinesh Motors +91 8550991151; 9082111383, 7755979799
Chandrapur-Dhanora Road Dinesh Motors +91 7391880007; 7774031424; 7755979733

MAHARASHTRA
Chiplun-Karad Chiplun Highway A K Autoriders +91 8669686804; 2355256057
Dhule - Awadhan Surbhi Motors +91 8124848822 +91 7057010237
Gondia - Goregaon Road Ved Automobiles +91 7030907024; +91 7182231144
Jalgaon-Ayodhya Nagar, Usha Motors +91 7767006658; +91 9370822828
Jalgaon - Near Godavari Engineering College Usha Motors +91 7768009992; 9168690406, 0257-2271666

MAHARASHTRA
Jalna - Amrai Madhu Motors +91 7249638764; +91 9421470987
Kolhapur - Near Dharmnagar Motor India +91 9075029077 02312 521289
Kolhapur-Sankeshwar Road Yashashri Motors +91 9527094848 0232 7225088
Latur - Ausa Road Prisha Motors +91 7769973177
Latur - Udgir Sairaj Wheel +91 8421373999 02385-254417

AUTHORISED DEALERS

MAHARASHTRA
Malegaon - Kanchan Vehicle Complex Shaurya Motors +91 2332623040 02554-661128
Mumbai - Borivali East Voyage Motors +91 7045034302; +91 8424050855
Mumbai - Chembur Motokraft Automobiles +91 9819791510; 2225200518
Mumbai - Kurla W Synergy Auto Inc. Phoenix +918828820001; 8286046565
Mumbai - Kusum Villa Ishna Wheels +91 9619547462

MAHARASHTRA
Mumbai - Kantilal Maganlal Estate Soniya Motors Pvt. Ltd +91 7710937759
Mumbai - Opp Shastri Nagar Ishna Wheels +91 9619547462
Mumbai - Opposite Trauma Hospital Voyage Motors +91 9146871003; 022 28328280
Mumbai - Opp. Yogi Tower Unison Automobiles +91 8655414040 022 28124400
Mumbai - Pitamber Lane P. R. Emterprises +91 9833063914; 022 62370093

MAHARASHTRA
Mumbai - Sai Nagar, kandivali (w) Voyage Motors +91 9146871013; 022 -28087882
Mumbai - Sakinaka Synergy Auto Inc +91 8828820002; +91 8286046565, 022-28590085; 28590086
Mumbai - Shivram Seth Amrutwar Road First Mumbai Store LLP +91 9152007363; 022-24917777
Mumbai (ASP) Sion Panvel Highway Ram Motorcycles +91 9323025335 022-27700396

MAHARASHTRA
Mumbai - Thane - Belapur Road, Soniya Motors Pvt. Ltd +91 8291842109; +91 7710937759
Mumbai-Thane - Opp-Telephone Exchange Pooja Motors +91 9594091669 0251-2470600
Mumbai-Thane - Opp-Maruti Showroom Pooja Motors +91 8104909325; +91 9833890507
Mumbai - Thane SV Road Soniya Motors Pvt. Ltd +91 9768777696; +91 7710937759

MAHARASHTRA
Mumbai - Virar SP Wheels +91 7420026685; +91 9370918152
Nandurbar - Dhule Road Dinesh Wheels +91 9673298999; +91 9823104476
Nagpur Behind Immamwada Police Station Paragon Traders +91 7276356401; +91 7276599069
Nagpur - Kamptee Road Ved Motors +91 7030907017 0712-2652222
Nagpur-Opp Mata mandir Shri Krishna Automobiles +91 9561607151

AUTHORISED DEALERS

MAHARASHTRA
Nagpur-Wardhaman Nagar Shri Krishna Automobiles +91 7387325554; 7410061121, 0712-3191202
Nasik - New Bombay Agra Road Ostwal Auto +91 7720099945 0253-2592717
Nasik - Satpur Moharir Auto Pvt. Ltd. +91 7447447007 0253-6630000
North Goa -Bardez Royal Enfield Service Centre +91 9607938750; +91 9370918156

MAHARASHTRA
Osmanabad - Near Central Bank Hatlai Auto +91 9834972085; +91 9763138888
Parbhani - Jintur Road Chandrallama Automotive +91 7767918999; 9763300021; 9763300022 02452-242299
Pune - Behind Giant Cycles Brahma Motors +91 7888002052; +91 7888098383
Pune - Behind Max Neuro Hospital Dhone Automobiles +91 7028045686; +91 7028045684

MAHARASHTRA
Pune - Fathima Nagar Platinum Auto +91 7755932584; 7030911281, 7755932579
Pune (ASP) - Hingne Khurd Sadguru Service Station +91 8308048854; +91 9011078854
Pune - Market Yard Road Dhone Automobiles +91 8600400898; 2024265002
Pune - Narayangaon Kings Royal Riders +91 9075009831 0213-2243342
Pune - Near Sadhana Sahakari Bank Jay Motors +91 8669630091; +91 7020118088

MAHARASHTRA
Pune - Near Kanak Hotel Dhone Automobiles +91 7028978074; 7028978073; 8600400898 020-24273335
Pune - Next To Lexicon School Chopada Motors LLP +91 9172202401; 7219365256; 9172202401
Pune - Next To Hyundai Showroom Hridaan Motors +91 8669995207; +91 7720099622
Pune - Old Pune Mumbai Highway Brahma Motors +91 7888002031; +91 7276309977

MAHARASHTRA
Pune - Opp. Manoharnagar Gate Kings Auto Riders +91 9146054611; +91 7720025451
Pune - Opp Suryadatta College Siddh Auto +91 9673156622; +91 9834491631
Pune - Pavitra Building Kings Auto Riders +91 9146054611; +91 8696900842
Pune - Shriram Heights Siddh Auto +91 7249645494; 0211 3252050

AUTHORISED DEALERS

MAHARASHTRA
Pune Solapur Highway - Indapur Sahyadri Auto +91 7387111109; +91 7387111125
Pune - Telco Road Hridaan Motors +91 7720062111; +91 7720062110
Pune - Wakad Opp. Orittel Hotel Kings Auto Riders +91 9146054611; +91 7720025458
Purna road-Nanded Nandi Motors +91 8975943376; +91 9284526982
Ratnagiri - MIDC Mirjole A K Autoriders +91 9822133300

MAHARASHTRA
Raigarh(mh) - Chendhre SK Autoriders +91 9146198305 02141-223030
Sangamner-Near Panchayat Samiti Newaskar Automobiles +91 8446700200
Sangli - Chandanwadi, Miraj Hare Madhav Motors LLP +91 9604533332; 8806705170
Sangli - Sangli Madhavnagar Road Abhay Motors +91 7219748881; 0233-2623041
Satara - Khandobanagar Nand Enterprises Karad +91 9637622706 02164-241771

MAHARASHTRA
Satara- Opp. to Nimbkar Seeds Adved Motors +91 7888015003; 7888015005
Satara - Satara Koregaon Road Nand Enterprises - Satara +91 7030915141 02164-242772; 2162246255
Sindhudurg - Gudhipur SWASTIK MOTORS +91 9773878009; 9673878009
Solapur - Bale Chowk, Pune Highway Chavan Motors +91 7720069988; 8805568000, 0217-2352424

MAHARASHTRA
Solapur - Latur Road Chavan Motors +91 7720069988; 8805568000
Solapur - Near City Hospital Mondhe Motors +91 8237466443; 2172735084; 9423591471
Solapur - Jamdar Road Jay Motors +91 9881885544; 8983300800
Solapur - Pune Road Mondhe Motors +91 7028060002; 8793000073, 9423591472
Tararani Chowk - Kolhapur Motor India +91 9822551777

MAHARASHTRA
Thane - Bhiwandi S.R.MOTORS +91 7208249149; 7506044995
Thane - Near GCC Club Unison Automobiles +91 9821115964; 7506555040, 022-28456620
Thane - Kalyan Ambernath Road S R Motors (A Unit of Riya Motors Pvt. Ltd) +91 9324283834 0251-2700044
Thane Gita Udhyog Nagar SP Wheels +91 8446011103; 7420026687
Thane - MIDC Tarapur SONITH MOTORS +91 7066032696; 8291101575

AUTHORISED DEALERS

MAHARASHTRA
Yavatmal - Darwha Road Aaditya Riders Pvt Ltd +91 8379914333 +91 9158632833
MANIPUR
Imphal West - Singjamei Sanamahhi Motors +91 8259061597; 7085011401
Kakchingndo - Thoubal Kakching Motors +91 8837238120; 9366056182
Tipaimukh Road - Churachandpur PAUL'S MOTORCYCLES +91 7085256617; 7629010170

MIZORAM
Aizawal Lawma Enfield +91 8794386109 0389-2333726
Chanmari-III-Opposite faith Hospital, Alpha Riders +91 7005800904; 9612332684
NAGALAND
Dimapur Uniglobe Enterprises +91 8794748906; 8794748905, 0386-2225903
Kohima - New Secreteriat Road KK Motors +91 6909145859

New Delhi & NCR
Delhi - Dwarka Cruiser Motors Pvt Ltd +91 8459223833
Delhi - GT Karnal Road Kay's Auto +91 7838302323 011-28877011
Delhi - Kailash colony, Okhla Indust. Area South Delhi Motorcycles +91 9560088256 011-46121558
Delhi - Kanjhawala Road Soni Automobiles +91 9910477162
Delhi - Mahipalpur Extension Kay Tee Automobiles +91 9910884777 011-40452477

New Delhi & NCR
Delhi - Paratparganj Asco Motors +91 9953030780 011-2214888
Delhi - Roshanpura Outer Delhi Motorcycles +91 9540941610; 9540151107
Delhi - Rama Road, Kirti Nagar Lamba Enterprises Pvt Ltd. +91 9250919993
Delhi - Village Samalka Kapashera Outer Delhi Motorcycles +91 9540941601; 011 40244382
Delhi - Rithala Village North Delhi Motorcycles +91 8130495936 011-27054738

New Delhi & NCR
Delhi - Shahadra Amar Autos +91 9990092800 011-43595322
Delhi - Naraina Centrum Motorcycles LLP +91 9821898940; 011-45627888
Delhi - Tilaknagar Lamba Enterprises Pvt Ltd. +91 9250919989 011- 42138246
Delhi - Phase-2, Okhla Indust. Area South Delhi Motorcycles +91 9560088256
Delhi (ASP) M.G. Auto Sales +91 9810237417; 9212337417

AUTHORISED DEALERS

New Delhi & NCR
East Delhi - South Ganesh Nagar Amar Autos +91 9899173700; 8448988947
New Delhi Company Store Saket New Delhi +91 7533006563; 8800227951; 011-42575017
New Delhi (ASP) Balaji Motors +91 9350102768 011 23364241
New Delhi - Libaspur GT Karnal Road BNT Motors Pvt Ltd +91 9717391900; 8287540000

New Delhi & NCR
New Delhi - Nangloi Soni Automobile +91 9667991433; 011-40114704
North Delhi - Mayapuri ind area Ess Aar Motors +91 9212505072 011 45065636
North Delhi - Ignou Road Ess Aar Motors +91 8745012373; 9355100512
North Delhi - Opp. Jhandewalan Mata Mandir Ess Aar Motors AC +91 8750888863; 8750888861

New Delhi & NCR
Northwest Delhi-Wazirpur Industrial Area United Automobiles +91 7290037111; 011 - 40392485
Southwest Delhi-Mayapuri Industrial Phase 2 Sunshine Automobiles +91 9167640122; 8130288284
NCR - NIT Faridabad Sohan Auto World +91 9811535853 0129-4029352
NCR Gurgaon - Mehrauli Road Manzil Motors Pvt. Ltd. +91 8448186211 0124 4231683

New Delhi & NCR
NCR Gurgaon - Old Delhi Road Aman Automobiles +91 9811247041; 9811247048, 0124 4232562
NCR Gurgaon - Sheetala Mata road Brawn Automobiles +91 9999240509 0124 4251481
ORISSA
Angul - Turang Green Treet Automotive (P) Ltd +91 9124200009 +91 8249467198
Bargarh - Haldipali Shree Shyamji Bike Point +91 9439482033 +91 7381053255

ORISSA
Mayurbhanj-Janardanpur Legend Automotive +91 9178024417; 9040078001
Bhadrakh Jyotshna Automobiles +91 7852940689
Berhampur Vaishnavi Automobiles +91 8118058820; 7682833574
Bhubaneshwar - KIIT Road, Sishu Vihar Gugnani Automobiles +91 9776160313; 9040510010
Bhubaneshwar - NH 5 - Patrapada Trupti Autoworld +91 8480613910 0674-2470148

AUTHORISED DEALERS

ORISSA
Bhawanipatana Shyamkrishna Mart pvt ltd +91 9437845001; 8480454792
Cuttack - Arunday Nagar Anmol Motors +91 9853805091; 8596988122
Cuttack - Phulnakhra Khimji Automobiles LLP +91 9937022588; 7735286061
Dhenkanal - Station Bazar Shivay Motors +91 7978329039; 6762228585
Jajpur Road Birendra Motors +91 8763734599; 9078886305

ORISSA
Jeypore Golden Motors +91 7684941468; 6854242186
Keonjhar Sai Automobile +91 9437054807; 9114611733, 9437004711
Odisha-Balangi Loyal Automobiles +91 9438284438
Odisha-Nayagarh RAHUL AUTOMOBILES +91 9658327668
Odisha - Near Jyothi Hospital Favour Ride +91 9583396524; 90400557156

ORISSA
Odisha-Khorda Royal Automobiles +91 7606000454; 7606000453
Puri Odisha - VIP Road PGS Motors +91 7440004430; 6752255004
Rourkela The Agents & Distributors +91 9238111010
Sambhalpur Sreyasri Motors +91 9040015359; 8339012626
PONDICHERRY
Pondy-Karuvadikuppam Rooster Automobiles +91 7540040517 0413-2355336, 2355330

PONDICHERRY
Karaikal-Kamarajar Salai Rooster Automobiles 04368-228800, 8489155655, 7639001047
Mudaliarpet - Ansari Duraisamy Nagar Rooster Automobiles +91 7639001093; 7639002019, 0413 - 2355330
PUNJAB
Abohar Aman Auto Zone +91 9988767900
Amritsar Aaray Motors +91 9517777404; 9517777402
Amritsar - Opp: Guru Harkrishan Public School Jaycee Motors Corporation +91 9888968616 +91 9780020875

PUNJAB
Barnala Megan Autos +91 9878120088; 9878120077
Batala Moon Autos +91 9888968616; 9872655955
Bhatinda-Goniana Road Ajay Autos +91 7696582460; 9988678145
Bhatinda - Mansa Road Krishna Automobiles +91 8725086111; 8427713060
Kapurthala - Tanda Road S.S.Motors +91 9814399532; 7526866622

AUTHORISED DEALERS

PUNJAB
Hoshiarpur - Chandigarh Road Mahilpur Motors +91 9888280660; 9915125033; 9915182446
Fatehgarh Sahib - Sirhind Road Morinda Motorcycle Centre +91 9650494609; 9815467373; 9815660557
Faridkot Baba Farid Automobiles +91 9780247048; 8288837048, 01639-251343
Fazilka Aman Auto Zone +91 9988700765; 6283599573

PUNJAB
Ferozepur Royal Hut +91 9463771900; 9501601284
Ferozepur- NH - 54, Amritsar Royal Hut Unit - II +91 7087799707; 8728080663
Gurdaspur Ajit Motors +91 9888968616; 9781369204, 7888738523
Hoshiarpur Lagwal Automobiles +91 9256514321; 7696197579
Jalandhar - GT Road Fateh Autos +91 9462802828; 8725001277

PUNJAB
Jalandar-G.T.Road - Near BSF Chowk Navyug Motors +91 9462802828; 9875938123, 0181 - 2223966
Jalandhar - Kapurthala Road Fateh Motors +91 8725001278; 9530907183
Kapurthala Innovative Automobiles +91 9462802828; 8196900736; 9357254736
Kharar - Near KFC Manmohan Motors +91 8999200016; 9988317366, 0160 5034822

PUNJAB
Khasra no - 361, Amritsar Jaycee Motors Corporation - Unit II +91 9888968616; 9780020875; 9780020942
Ludhiana - G.T Road Kishori Automobiles +91 9780624283; 9914330903
Ludhiana - Dholewal - GT Road Sant Motors +91 8872496020 0161-2542307
Ludhiana - Basti Jodhewal Ashtavarkra Auto Pvt. Ltd +91 8725092030; 7665010100; 8725092401

PUNJAB
Ludhiana - Gurudev Nagar - Ferozpur Road Barnala Automobiles (Jagroan) +91 9780014995 0161-2424114
Mansa - Sirsa Road Ganpati Motors +91 7009442352; 9779550668, 01652-236899
Moga - Dunneke Bikram Sales Corporation +91 9855914072 , 7529081509, 9914488007
Mukherian Lagwal Motors +91 9988048699; +91 8437917782
Muktsar Deep Autos +91 8427626855; 9855794932, 9914155055

AUTHORISED DEALERS

PUNJAB
Nabha Partap Automobiles +91 7665010100; 7087990522, 9872605400
Nakodar (ASP) Bhagwati Automobiles +91 9462802828; 9357242788, 9988714870
Nangal Nangal Motors +91 9888280660; 9478609760, 01887-229160
Nawanshahar - SVS Nagar HS Enterprises +91 9417654888; 9462802828; 6239096599
Pathankot Cashmir Sales Corporation +91 9988005308 0186-2220148

PUNJAB
Patiala-Chandigarh Road Gurukirpa Motors-Unit II +91 9875940007
Patiala - Rajpura Road Sukhdev Automobiles +91 7888671389; 9592781778, 0175-2305721
Patiala - Sirhind Road Gurukirpa Motors +91 9650494609; 7087752225; 9779222225
Phagwara Khalsa Automobiles +91 9462802828; 9041477770
Ropar Garcha Automobiles +91 9888280660; 9464700267, 01881-228137

PUNJAB
Sangrur Verma Automobiles +91 9569866078 01672-223273
Sangrur-Sajida Colony Om Automobiles +91 9872802403; 8054944713; 8054944719
Sultanpur Lodhi Dalbir Motors +91 9462802828; 9878955621; 9814679432 +91 8528568566
Tanda Sandeep Automobiles +91 9888280660; 7340963586; 9914554304 01886-502398
Taran Taran Chabbra Auto Agency +91 9888968616; 8264647656

PUNJAB
Zirakhpur Garg Auto zone +91 8427656388; 8999200016
RAJASTHAN
Ajmer - Ghooghra Jogbala Motors Pvt Ltd. +91 8829813113 0145-2787999
Ajmer- Vaishali Nagar Ajmer Motorcycles +91 7412029114 0145 2972500
Alwar -Tijara Road R.S. Motors +91 8696900842; 9119167272
Banswara Veer Autolinks +91 9116670138 02962-254135

RAJASTHAN
Barmer Devrath Motors Pvt. Ltd +91 7230077802 02982-223381
Bharatpur Khusali Motors +91 7230094310
Bhilwara Soni Automobile +91 8829974706; 9001297666
Bikaner Bikaner Bikes Pvt Ltd +91 9772657449 +91 8875012345
Bundi Ramdutt Automobiles Pvt Ltd +91 7597212390; 7472444803

AUTHORISED DEALERS

RAJASTHAN
Chittorgarh Manglam Motocorp +91 8505059900 01472-297018
Churu-Sainik Basti Churu Balaji Motors Pvt Ltd +91 9649807777 01562-253777
Dausa Ashirwad motors +91 8560079781; 1427223925
Dholpur - Tor Ka Pura Digvendra Motors Pvt. Ltd. +91 8000534229
Dungarpur MANGLAM MOTORS +91 7427826333

RAJASTHAN
Ganganagar - Near Teen Puli National Motors +91 9414211956 0154-2444200
Hanumangarh Udai Motors +91 9828129060; 9772780001, 01552-226266
Jaipur-Sodala - Giitanjali Towers Company Store Jaipur +91 8939991369 0141 4106747
Jaipur - Govind Marg Rajesh Motors (Raj.) Pvt Ltd. +91 9414061714; 0141 3027696
Jaipur - Mansarover Aditi Motors +91 9887289552; 8290596440

RAJASTHAN
Jaipur - Tonk Road Aditi Motors +91 9828605711 +91 8875096035
Jaipur (ASP) - Sudershan Pura JMS & Co +91 7239902225; 9460345047
Jalor Achal Gavri Motors +91 7231919196 +91 7231919198
Jhalrapatan (Jhalawar) Smart Choice Automotive +91 9772167555; 9875720318
Jhunjhunu Balaji Motors +91 7733022411 01592-231061

RAJASTHAN
Jodhpur- Opp. New Power House Modern Motor Bikes +91 7222011197
Kota Mundra Motors Pvt. Ltd. +91 9887178680; 9887278680
Kota Urs Automobiles pvt ltd +91 8739995500
Kotputli Shree Motors +91 9116011113; 7413860860
Nagaur D.D.Autotech +91 9828943737 01582-243006

RAJASTHAN
Pali Road Sumerpur VRS Motors LLP +91 7412080385
Phalodi-Adarsh Nagar Shree Rajpurohit Automobiles +91 9001562000; 7728821912, 0291-2755550
Sawai Madhopur Vachi Motors Private Limited +91 6376167131; 7462233933
Sikar - Jaipur Road Apoorva Motors +91 9982787183; 9667237183; 8827188893
Udaipur Voyage Motors +91 9799144460; 7340069355, 0294-2467465

AUTHORISED DEALERS

RAJASTHAN
Udaipur - Shobhagpura Circle The KPM Motors LLP +91 9116124507
TAMILNADU
Anna Nagar - 11th Main Road Rudraa Motors +91 44 2628 8888 / +91 7550226014, 7550226013
Arumbakkam - Chennai Rudraa Motors +91 7550226016 044 - 26214444
Chennai - Ambattur Classic Motorcycles +91 9445512022 044 - 42180206

TAMILNADU
Chrompet - Thiruneermalai Road The Legend Motors +91 8606377788 044 - 22412005
Chennai - Ekkattuthangal Sreehitha Auto Zone +91 9591073735; 9043011094, 044-65906590
Chennai - Ganesh Nagar Sri Velavan Motors Pvt Ltd +91 7099705000 044 - 24761903
Chennai - Mount Poonamallee Road Aravinduja Motors Private Limited +91 9176638781 044-45554888

TAMILNADU
Chennai - Kelambakkam Vardhan Automobiles +91 9962950004; +91 9092604448
Chennai - Mylai Balaji Nagar Sri Venkateswara Bike Zone +91 8754000180 ; 8681863330; 8124848822
Chennai - Kottivakkam OMR Royal Enfield Company store +91 9686266228; 8939844508
Chennai - Purasaiwalkam I Speed Motors +91 9094633712; 9940662785, 044 45588047

TAMILNADU
Coimbatore - Near Tidel Park, Peelamedu Royal Enfield Company Store +91 8110013259; 8754341777; 8754342777
Coimbatore-Sathyamangalam Eagle Motor +91 9789666572; 9789666748
Coimbatore-Singanallur BullMenn Motors +91 9514555510; 7092300000, 9514555513
Coimbatore - Near Old Court M R Motors +91 8098566119; 7639111431

TAMILNADU
Coimbatore - Palakkad Road Bharat Motors +91 8754336600; 9715722600; 4259234150
Coimbatore Palani Main Rd Bharat Motors +91 9715122600
Coimbatore Palladam Road Bikerz +91 7502387000; 7502687000, 0421-4252523
Thiruvallur - GNT Road AKG Motors +91 9597082579; 9597082578

AUTHORISED DEALERS

TAMILNADU
Chennai - Thirumullaivoyal Dino Motorcycles +91 9962495557; 8939998650
Cuddalore - Imperial Road Rooster Automobiles +91 7639001046; 7639001031
Cuddalore Near Neyveli Arch Abi Motors +91 9384104001; 9384104044
Dharmapuri-Nallanahalli S.M.Motors +91 9994852482 04342-288123

TAMILNADU
Dindigul - Dhadi Kombu Road Rajendra Automobiles +91 8508678333; 7824929857, 8098666567
Dindigul - Sivagiripatti A.R. Motors +91 6381807292; 7824929847
Erode - Pushpa Nagar Senthil Murugan Auto Aencies +91 8220048567; 8098666567
Erode - Sathy Main Road Erode Motors +91 7402835044; 8883650000
Erode - Vellalapalayam Eagle Motor +91 9443313965; 9443312976

TAMILNADU
Hosur - Krishnagiri Bye Pass Road Sri Saravana Motors +91 9543813032; 8220013432, 04344-297730
Hosur (ASP) - Seetharam Medu Sri Manjunatha Bullet Garage +91 9894955499 +91 7867064409
Kanchipuram - Vellai Gate Jet Blaze Motors +91 7604880076; 9629032223
Kanyakumari- Opposite District Club Chandra Motors +91 9443339140 04652-221010

TAMILNADU
Karur -Near Andavar Chemicals Murugan Motors +91 9500955950; 9543255950
Kovilpatti - Ettyapuram Road Charles Motors - KVP +91 7338737501; 9944723062, 04632-225822
Krishnagiri Sree Maruthi Motor & Auto Service +91 9159566615; 9159566613, 0434-3233512
Madurai - KK Nagar Madras Motors +91 9976755111 0452-2585686

TAMILNADU
Madurai - Nethaji Nagar Classic Motors +91 9524099444; 9994906185
Madurai - PP Chavadi Classic Motors +91 9629023344 0452- 2387877
Madurai - Scot Road G.G. Motors +91 8012688444 0452-2342007
Marthandam ROYAL PHOENIX MOTORS PVT LTD +91 8012409555
Medavakkam - Opp to Ulavar Sandai Sri Venkateswara Bike Zone +91 8754000182; 7338834120

AUTHORISED DEALERS

TAMILNADU
Mettupalayam - Near Bogaiyan Layout M.R. Motors +91 +91 7639111431
Nagapattinam-Pechavadi A.V. Motors 04364252177
Namakkal-Katchery Street Royal Annanmar +91 8883580877; 8883178777
Namakkal - Salem Road Royal Annanmar +91 8883150077; 04286-277557
Ooty - Thalayathimund M R Motors +91 7094999294
Pedhikuppam Village Gummidipoondi AKG Motors +91 9087886653; 044 -27928063

TAMILNADU
Perambalur - Venkatesapuram V.P Motors +91 9159394114 7373799687; 7373799686
Portblair-Dollygunj Nikhil Motors +91 9474205035
Pudhukottai Sri Maruti Motors +91 7094450431; 04322 - 267877
Ramanathapuram - Madurai Main Road Murugan Motors +91 9578207000; 04567-227000
Salem - Four Roads Chamundi Enfield +91 8098611999; 9626146261

TAMILNADU
Salem-Seelanaickenpatti MSV Motor +91 9566661316; 9566669990
Salem - Udayarpalaym K.R.K Bikes +91 9498427031; 9498427006
Sevoor- Vellore Main Rd -Thiruvannamalai Akan Agency +91 9043261535; 9751059933, 7845330209
Sivakasi - Thiruthangal Leo Motors +91 7397772779; 04562-230669
Sivagangai - 120 Feet Road Nehaa Motors +91 9865055228; 04565 -225008

TAMILNADU
Thanjavur - Muthupillai Mandapam A.V. Motors +91 8406803306 0435-2412587
Thanjavur - Naaveeth Complex JAF Associates +91 7867019836; 7867019837, 04362-254786
Theni - Gudalur Main RD Coral Moto Hub 4554271334; 271335
Theni - Sukkuvadanpatty Coral Moto Hub +91 9698933000 04546 - 253337
Thiruvannamalai-Kanchi Main Road AKAN Agency +91 9843033861

TAMILNADU
Thiruvottiyur-New Washermenpet DCS MOTORS PRIVATE LIMITED +91 7338871723; 044 - 25911105
Thiruvarur - KTR Estate Shri Balaji Motors +91 7397768020; 04366 - 251704
Thoothukudi-Ettayapuram Rd Charles Motors +91 7867015250; 7867015251, 0461-2321636
Tirunelveli - Opposite to Irt Polytechnic DG Motors +91 8973846699; 4622970031

AUTHORISED DEALERS

TAMILNADU
Tirunelveli - Sivanthi Nagar RK Motors +91 8300099309; 8300099310; 04633-280043
Tirupattur-Vaniyambadi Main Road AVS Agencies +91 7010662783; 9944300176
Tiruppur - Dharapuram Senthur Motors +91 9442502011; 04258-225345
Tirupur - Periyar Colony RIDERZ +91 8098201774; 0421-4961313

TAMILNADU
Trichy - Magilambu Salai Oxina Motors +91 7402718512 0431-4217793
Vengathur - Manaval Nagar Gap Motors +91 7200341320 044 - 27641989
Vellore - Viruthampet Sri Kalikambal Autos +91 9566874010; 9047752205
Villupuram Rooster Automobiles 04146-222280 , 7639001008; 8489144744
Villupuram - Near Balamurgan Hospital Garuda Automobiles +91 8489144944

TAMILNADU
Virudhunagar-Chinna-moopanpatti Village Siva Motors +91 9655466688; 04562-266688
TELANGANA
HYDERABAD & SECUNDARABAD
Adilabad-Mavala Ashwik Motors +91 8732297999; 8297988776
Ghatkesar-Shiva Reddy Guda Main road C K Riders +91 9704511755
Hyderabad - Jubilee hills VVC Automobiles +91 7842883883; 9100087535

TELANGANA
Hyderabad - Bahadurpura VVC Automobiles +91 9100087536; 7337555542
Hyderabad-Bowenpally SVR Motors and Engineering 040-40116336
Hyderabad - Gachibowli Road Go Green Motors India Pvt. Ltd +91 8019235111; 9640737222
Hyderabad-Karmanghat Taurus Motors KMGT +91 7997828787; 040 29887368
Hyderabad-Madhura Ngr Colony Orange International 040 40215215

TELANGANA
Hyderabad - Miyapur Main Road Headway Motors +91 9959935151; 9618394567
Hyderabad - Moosarambagh Road Dark Matter Motorcycles +91 8886678930; 8886676041
Hyderabad-Nagole Road - Near RTA Office Royal Engineers +91 9959331755; 7093991755
Hyderabad - Near Narjuna Model School Headway Motors +91 9100085774 +91 9100085775

AUTHORISED DEALERS

TELANGANA
Hyderabad-Near Telugu Academy Jayasree Automotives +91 9603928555 +91 9010369555
Hyderabad-Yashoda Hospital Road Jayasree Automotives +91 7093612612; 7680999505
Hyderabad-Prasanth Nagar,Vanasthalipuram Taurus Motors +91 8125828787 040-29804755
Hyderabad-Sanath nagar Royal Enfield Brand store 040 23701235; 040 23702255

TELANGANA
Hyderabad-Zafferguda, Mehidipatnam Venkataramana Automobiles Pvt Ltd +91 9100087527
Karimnagar - Bye pass road Quality Motors +91 9966173000; 9030313913, 0878-6509993
Khammam - Mamatha Hospital Road Royal Automotives +91 9963886789 +91 8297536789
Khammam - House No 4/12 Royal Automotives +91 8297616789

TELANGANA
Khammam- Sathupally Hemanth Automotives +91 7288797222
Mahabub Nagar - Yenugonda Harshithh Automotives +91 7660022334
Mahabubnagar road - Mahabub Nagar Harshithh Automotives-NGKL +91 9642555328; 7995555328
Mancherial J V Aryan Motors +91 8179356458 +91 8297388775
Mancherial Road, Divya Nagar Ashwik Motors - Nirmal +91 8297388776; 8297988778

TELANGANA
Medak - Hyderabad road Anil Motors +91 9339345999; 9339567999
Medak-Ramachandrapuram, BHEL Go Green Motors India Pvt. Ltd +91 8712126633; 7207294242
Nalgonda Sri Lakshmi Pavan Automotives +91 8886677962; 8886677965
Nalgonda - Survey No 288 Vijayalakshmi Automotives 8886677969

TELANGANA
Nalgonda- VVC Complex Vijayalakshmi Automotives +91 8885966687 +91 7288999935
Nizamabad KY Motors +91 8885198222; 8462236882, 08462-236882
Secundarabad-Begumpet Kayjee Engineers +91 9246113133 040-27907444
Secundrabad- Keesara, Nagaram Village Orange International +91 9348093481 +91 9177501501

AUTHORISED DEALERS

TELANGANA

Secundrabad - Near Trimulgherry Signal
SVR Motors
+91 9133322925; 040 48554541

Warrangal-Hanamkonda
Quality Automobiles
+91 9030775252
+91 7661850444

Warangal
SV Motors
+91 8702433888; 9395144955

TRIPURA

Agartala - Tatipara
XED Motorcycles
+91 8794220162; 8837431879

Agartala-West Tripura
PNR Automobiles Pvt. Ltd
+91 9774174618; 7005700174

UTTARAKHAND

Almora
Kumaon Motors
+91 7249929233; 9411319601

Dehradun - Ballupur Chowk
Ahuja Enterprises
+91 9927532535
0135-2710377

Dehradun - 6-B, Niranjanpur
Allied Auto Agencies
+91 7088909955; 7088909988, 8006908908

Dehradun- Rajpur Road
Allied Auto Agencies
+91 7900888999

Haridwar-Jwalapur
Prem Auto Enterprises
+91 9927994477
01334-250242

UTTARAKHAND

Haldwani, Nanital
Suri Sales (P) Limited
+91 9359108047; 7351007963

Kashipur - Near city stadium
Batra Enterprises
+91 9927309718; 9100536026, 05947-277207

NCR - Ghaziabad - Nehru Nagar
Rawal Automobiles Pvt Ltd
+91 9211921227
0120-4986443

Pauri Garhwal
Choudhary Automobiles
+91 9634274988
01346-250555

Roorkee-Haridwar Road
Goswami Automobiles
+91 8273524848; 7060306069

UTTARAKHAND

Rishikesh-Sarvha Nagar
Ranjeet Motorcycles
+91 8755333113; 8273941313

Rudrapur-Brar nagar, rampur road
Brar Motors
+91 7055900098
05944-2473127

Udham Singh Nagar - Sitarganj Road
Chaudhary Automobiles
+91 7452954444; 9027276202

UTTAR PRADESH

Akbarpur-Ambedkarnagar, Faizabad Road
Saurabh Automobiles
+91 7317004022; 9936100215

UTTAR PRADESH

AGRA - NH 2, Sikandra
Agra Royals
+91 7055312114; 7055312110

Agra - Opp.DIG Residence Baluganj
Shambhavi Automotive Engineers
+91 8057400022, 8057400055

Agra-Trans Yamuna Colony
Mangal Motors Private Limited
+91 9105900111

Aligarh - Nr Banna Devi Police station
Maindola Royal Enfield
+91 7618144044, 9319155055

AUTHORISED DEALERS

UTTAR PRADESH
Aligarh-Ramghat Road Kodia Auto Sales +91 7055520172; 7055520180
Allahabad - Bai Ka Bagh Vrindavan Automotive +91 7860383786; 7860861786
Allahabad - Near Kamla Nehru Hospital Jay Pee Motors +91 8299731711 0532-6061003
Amroha - Delhi Moradabad Road ADVIKA AUTOMOBILES +91 7055204444
Azamgarh - MAU Road, Sidhari Amit Motors +91 9532049985

UTTAR PRADESH
Badaun-Near FCI godown Omkar Motors +91 8477803704; 9520330305
Baghpat-Near Signet Automobiles Pitambra Automobiles +91 8077660919; 7302973259
Balrampur Titu Automobiles +91 9540223120; 8318718119
Ballia-Opp-Nagaji School Parmarth Automobiles +91 7800378233; 9616960808
Banda - Tindwari Road Sohum Riders +91 7704090000; 7571006173

UTTAR PRADESH
Bansi Road - Sidharth Nagar Shiva Motors +91 9670222122; 9670222123
Barabanki; Nawabganj 225001 G.R & Company +91 7233002401; 8174000978
Bareilly-Nainital road Suri Sales (P) Limited +91 9359108047; 7351007963
Bariely - Pilibhit Bypass Rd AJS RIDERS PVT LTD +91 9762100010
Basti - Didoha pachpediya road New India Merchant +91 9838078667 554 - 2281483

UTTAR PRADESH
Bhadohi-Old Haddi mill Bhadohi Wheels +91 9598778888
Bareilly - Shahjahanpur R. K Autozone +91 7703009919; 7703009918, 8175049916
Bijnor-Landmark Hyundai showroom Chaudhary Motors +91 7703001082; 9761042302; 8958994499
Bulandshahar-State Bank Colony Santosh Enterprises +91 9219404045; 7900785515, 05732-231326
Chandauli - Uttar Pradesh Shri Sai Automobiles +91 7311178055

UTTAR PRADESH
Deoria - Barhaj Road Supreem Motors +91 7703001099; 7703001082
Etah - GT Road, Asroli K.S.Royals +91 7055215231; 7055215232
Etawah - Ram leela Road V P Motors +91 9568013106; 9568013109, 9568013105
Faizabad - Wazeerganj Chawla Riders +91 9628770002 0527-8265078
Fatehpur- Near DM Awas K S Auto Sales +91 8574675809 05180-221223

AUTHORISED DEALERS

UTTAR PRADESH
Farrukhabad - Ghatiyaghat Road Ankur Auto Agencies +91 7678874000 6393143517
Firozabad - NH-2, Nagla Bhau Emerald Automobiles +91 7251010888 +91 7251020777
Ghazipur- Bansi Bazar Shri Sai Chandra Automobiles +91 7571006174; 7571006173
Ghaziabad-Loni ROYAL TAJ AGENCY +91 9871045697
Ghaziabad-Near Mohan Nagar Flyover Sangam Autos +91 9311051177; 0120 2807331

UTTAR PRADESH
Ghaziabad-Patel Nagar II Shiva Riders +91 8448693811; 0120 4503203
Gonda Style N Passion +91 7311173067; 9919713001
Gorakhpur - Mughalpur, Chargawa MAK Bikes LLP +91 9793909000; 7081000899, 5512505500
Gorakhpur - Taramandal Shiv Motors (A Unit of Pardeshi Zigwheels Pvt. Ltd.) +91 7706900014; 9794241149
Hathras - Agra Road Manglam Royal +91 8395000563

UTTAR PRADESH
Hardoi Raj Royals +91 7081000521
Jaunpur- Azamgarh Rd Aditya Motors +91 9816258702; 7266051755
Jhansi - Near SBI Triveni Enterprises +91 8419099995, 7607779147
Jalaun-Rath Road Singh Royal +91 7522000553 , 9453021416
Kanpur-Khalasi Line Sareen Motors LLP +91 7705905138; 8303907907

UTTAR PRADESH
Kanpur- W-1/52, Saket Nagar S.S Automobiles +91 7705006411; 7705006413
Kanpur- Near Govt Degree College Kamla Motors +91 7617666291
Kannauj -Akbarpur-Sarayghah Sampuranta Automobiles +91 9648250883
Hapur - Tyagi Market Anmol Automobiles +91 7217480005
Kushinagar - Kasya Road, Chhawni Cantech Automobiles +91 7705803753; 7705803760

UTTAR PRADESH
Lakhimpur Kheri Shree Vinayak Motors +91 7071187827; 9169911999
Lucknow Company Store Lucknow +91 9636060111; 9044035044
Lucknow (ASP)- Near Goel Hospital Amafh Bullet Centre +91 7080811662 0522-4955003
Lucknow - 5A - Adarsh Nagar Shreya Auto World Pvt. Ltd. +91 7081109005 0522-4037677
Lucknow - A 1/1 Sec F Jankipuram Royal Motor works +91 7607777385

AUTHORISED DEALERS

UTTAR PRADESH
Lucknow - (Hardoi road) Lucknow Diesels & Electricals +91 9044290442; 7232902010
Lucknow-Krishna Vihar colony M/s Shreya Auto World +91 8917705000; 0522 - 2442101
Lucknow Road - Near Banjari Moad Rudra Motors +91 7232900637; 7232900675
Lucknow - Near Syndicate Bank Sardhana AYAN AUTO LLP +91 8126000697; 01237 236139

UTTAR PRADESH
Maharajganj-Chauparia Pharenda Road RK Motors +91 8574692821; 7706974520
Mainpuri - Bhawat Chauraha Rway Station Road GANESH MOTORS +91 9997899848; 9997899847
Mathura - NH-2, Nr. Jaiguru Dev Temple Aryaman Enterprises +91 8392912229; 8392916228
MAU-Batwal, Nr Eicher Tractors Chandra Motors +91 7310266900

UTTAR PRADESH
Meerut - West Rithani, Delhi Road Nutech motors +91 7088714714; 7300960333
Meerut - 8, Shri Krishna Tower Moto Riders +91 8476900096 0121-4006001
Mirzapur - Nr. Binani College Vindhya Auto Sales +91 7310160009
Moradabad - Near pak vada Akanksha Autozone Pvt Ltd. +91 7247800097; 6399991102

UTTAR PRADESH
Muzaffarnagar-Panipal Road AJ Automobiles +91 9105099001; 9105099004
Muzaffar Nagar - Roorkee Road Harivansh Auto Agency +91 9917421427; 9219440446
Nazibabad- Kotwali road Agarwal Tractor & Parts +91 7895417179 01341-230252
Noida-Gautam Budh Nagar Shree Mahadev Agency +91 9310047588; 0120 4324662

UTTAR PRADESH
Noida - Opposite Fortune Hyundai Shree ji Automobiles +91 8448497600; 0120 4381777
Noida - Hosiery Complex Solitaire Automotive +91 9599195031; 0120 4547929
Pilibhit - Bisalpur Road Shankhdhar Automobiles +91 7535877888
Pratapgarh-Near Angels School Shaurya Enterprises +91 9918601127
Raebareli - Civil Line Sushma Motors +91 8953005001; 8090139778

AUTHORISED DEALERS

UTTAR PRADESH
Rampur - Nainital Road Akanksha Autozone P. Ltd +91 7900600076; 6399991104
Saharanpur- Hanuman Road Sachdeva Enterprises +91 9045544778
Sitapur- Dhanipur Lucknow Road Raj Automobile +91 9076555726; 9450398371
Sultanpur - Kasba KNIT Asia Royal Motors +91 9170017590 05362-227777
Unnao-Awas Vikas Colony Raj Auto World +91 7080903706; 7080903702

UTTAR PRADESH
Varanasi- Chandpur Industrial Area Khurana Automobiles +91 9956462863 0542-2373246
Varanasi-Maqbool Alam road, Nr DIG colony One Place Automobiles Pvt. Ltd. +91 7753888536 +91 7706871051
Varanasi - Mauza Shivdaspur Varushka Automobiles +91 7572008103; 7572000655
Varanasi-Shakti Nagar Highway Vishwanath Enterprises +91 7317582582

WEST BENGAL
Barasat-24 Parganas The Country Motors +91 9903722883; 8272944511; 9903722883
Bardhaman - G T Road SG Automobiles +91 9434723500; 9800940009
Bardhaman-Punjabi More SG Automobiles- Unit I +91 8609178409; 9733212991
Bankura - Keranibandh R D Automobiles +91 9733522265
Bardhaman - Raghunathpur Tejgunj Sri Ram Automobiles +91 9800004533

WEST BENGAL
Dankuni-Hooghly Universal Traders +91 9883069797, 9831018699
Darjeeling-Burdwan Road Legendry Motors Pvt. Ltd. +91 9775430000
Dihimedanmolla-24 Parganas Austin Distributors Pvt. Ltd +91 7980995510, 9073684402
Durgapur R.H.Automobiles Pvt. Ltd. +91 9748402629, 8336935892
Hatthuba - North 24 Parganas The Country Motors Habra +91 9830426397

WEST BENGAL
Howrah - Andul Apollon Motors LLP +91 9903800200; 9163253000
Kolkata - AGC Bose Road Austin Distributors Pvt. Ltd 033-65552077; 46013101
Kolkata - Nowa para Kolkata Bike Zone +91 9674029373 033-40082380
Kolkata - Beck Bagan Row Shah Distributors (Auto Division) +91 9051244044, 9830477788
Kolkata - Shakespeare Sarani East India Agro Indus. Pvt. Ltd +91 9874977006 033-23293137

AUTHORISED DEALERS

WEST BENGAL
Malda - Station Road Speed Wheels +91 9735586333, 6295027567
Murshidabad-NH 34 Maxwheel Motors +91 9233330208; 9233330216, 03482-224844
North 24 Parganas-Nilgunge Road Bishnu Oil Company +919874839911; 9073487770
Purulia High way-Purulia Devi Motors +91 7365000580; 6295900922
Purba Medinipur Shivani Automobiles +91 7477787028; 7477787030

WEST BENGAL
Purba Medinipur-Ratnali Suhana Global Private Limited +91 7479035053
Raiganj Kalyani Solvex Pvt. Ltd. +91 9083292066
Siliguri - Matigara Riders Corner +91 9083260131; 7319042570
Siliguri - 2nd Mile Sevoke Road Siliguri Distributors +91 9832047670; 8016904935
Suri - Birbhum Birbhum Riders +91 7477714484; 9800145000

WEST BENGAL
Taki Road - North 24 Parganas The Country Motors +91 8617540380; 8697339136
West Bengal - Nadia Royal Automobile +91 8629961089
West Midnapore Sri Sai Auto mart +91 7047678599

PARTS STOCKIST DISTRIBUTOR

Andhra Pradesh

Vijayawada
Cyber Automobiles Pvt. Ltd
+91 9959615806

Assam

Guwahati
Chirag Enfield
+91 8136051810
0361 2670293

Guwahati
Pawan Automobiles
+91 9864045473

Jorhat
Achharsingh Royal
+91 9707522666

BIHAR

Biharshariff
PNN Automobile
+91 9135620008

Chapra
Supriyam Automobiles
+91 9128739999
06152-242999

Patna
Moto Spares Pvt.Ltd
+91 9097577727

CHANDIGARH

Chandigarh
Manchanda Autos
+91 9915047010;
9988994000
0172-2630263

CHATTISGARH

Raipur
Nagorao Auto Engg Works Pvt. Ltd.
+91 9165878692

GOA

Mapusa
Shauna Auto Agencies
+91 8326520712

Margoa
Saini Motors
+91 8308808290
0832-2740343; 2740345

GUJARAT

Ahmedabad
Shreeji Auto Traders
+91 9173170931;
9724722282

JamNagar
New Chandra Motor Cycle House
+91 9824211699

HARYANA

Ambala
Royal Motors
0171-2545795

Bhiwani
Sheoran Automobiles
+91 7056732216
01664-252216

JAMMU & KASHMIR

Jammu
Yahoo Technocra
+91 9419191241

JHARKHAND

Hazaribagh
Riders Point
+91 9234343422

Jamshedpur
Royal Auto Syndicate
72502-22283

Ranchi
Sri Nivas Automobiles
+91 7763801824

Zittau
Arjun Automobiles
+91 7282820788
+91 8935849216

KARNATAKA

Bangalore
Cyber Automobiles Pvt. Ltd
+91 9448473078

Bangalore
Fixwheel Motors
+91 9845949127

Kolar
Jagadamba Automobiles
+91 9972522111
+91 9066983741

KERALA

Aluva
Marikar Motors Ltd
+81 9894744880

Calicut
Luha Automotives
+91 7025106888
0495-2333533

Ernakulam
JR & Sons
+91 9447063679

Kochi
Bhavani Auto Distributors
+91 8086078173

PARTS STOCKIST DISTRIBUTOR

Trivandrum
Subha Auto Wares
+91 9446562640

MADHYA PRADESH

Indore
Royal Ventures
+91 9589541950

Jabalpur
Bhawani Automobiles
094243-05880

MAHARASHTRA

Aurangabad
Vinod Agency
+91 9823336611

Mumbai
Rajkamal Auto & Scooter Spares
+91 9833985931

Mumbai
Ram Motor Cycle Co.
+91 9920748891
022-27700394

Nagpur
Siddarth Spares
+91 9373195554

Pune
Planet Spares
+91 9371005335

Pune
Shree Spares
+91 9822377709

New Delhi
Kinematics Mktg (P) Ltd.
+91 9654787802
011-41545025

ORRISA

Bhubaneshwar
Orissa Marketing Services
+91 9437033935

Cuttack
Bullet Plus
+91 9437037590

PUNJAB

Amritsar
Gee Ess Enterprise
+91 9878930900

Ludhiana
Amrik Singh & Co.
+91 9915069033

RAJASTHAN

Jaipur-Indra Bazar
Shubham Agencies
+91 9680465973

Jaipur-Transport Nagar
Shubham Agencies
+91 9414067766

TAMILNADU

Chennai
Cyber Auto Parts
+91 7358768669

Chennai
Popular Motors Cycle Company
+91 9698444568
044-43435365; 43435364

Erode
Senthilmurugan Auto Parts
+91 9894756567

Madurai
Senthilmurugan Auto Parts
+91 9500786567

TELANGANA

Hyderabad
Cyber Automobiles Pvt. Ltd
+91 7702143186

UTTAR PRADESH

Ghaziabad
Indian Automobiles
+91 9999916346;
9899288337

Kanpur
Sareen Motors
+91 9389629505

Lucknow-Kaiserbagh
Moped House Pvt.Ltd
+91 7408555502
0522-4108704

Lucknow-Transport Nagar
Moped House Pvt.Ltd
+91 9696202669;
8795444497

Lucknow
Varma Auto Sales
+91 9335207393

UTTARAKHAND

Dehradun
Anamika Enterprises
+91 9897615836

WEST BENGAL

Kolkata
Auto Marketing Agencies
+91 9830325490
033-22360642; 22360643

Siliguri
Goyal Royal Spares
+91 9434063334

NOTES

NOTES

NOTES

NOTES



ROYAL ENFIELD

Part No. RAM00046/B

ROYALENFIELD.COM